

ASSEMBLY INSTRUCTION

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

"DO NOT OVERTIGHT ANY HARDWARE"


WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.

TABLE OF CONTENTS


HARDWARES LIST	PAGE 2 - 3
PARTS LIST	PAGE 3 - 4
PARTS' LOCATION	PAGE 5
ASSEMBLY STEPS	PAGE 6 - 18
ASSEMBLY COMPLETED	PAGE 18

ASSEMBLY TOOLS REQUIRED

1. Screwdriver (not provide)







Skip the power trip this time.

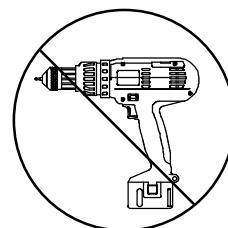

ASSEMBLY INSTRUCTION

HARDWARES LIST

ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		32 PCS
B	MINIFIX CAM BOLT		32 PCS
C	WOOD DOWEL (M8 x 25MM)		24 PCS
D	WOOD DOWEL (M6 x 25MM)		16 PCS
E	TRUSS M-SCREW (20MM)		4 PCS
F	HANDLE		2 PCS
G	LEFT DRAWER SLIDE		2 PCS
H	RIGHT DRAWER SLIDE		2 PCS
I	CSK SCREW (M3 x 10mm)		16 PCS






MORE HARDWARES DETAIL IN NEXT PAGE...

ASSEMBLY INSTRUCTION

HARDWARES LIST








ITEM	DESCRIPTION	DRAWING	QTY
J	JCBC-W (M6 x 45MM)		8 PCS
K	M4 ALLEN KEY (65MM)		1 PC

PARTS LIST

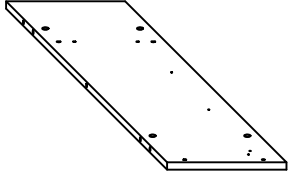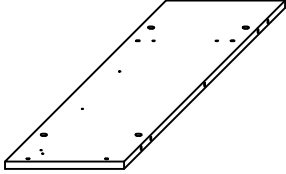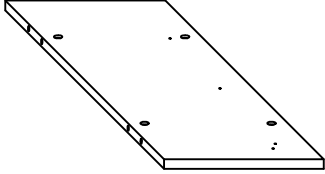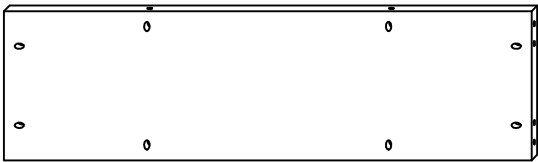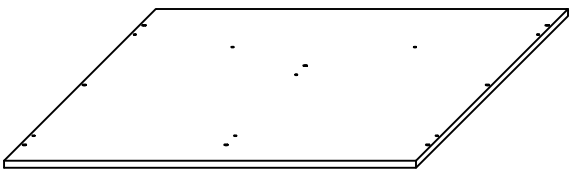ITEM	DESCRIPTION	DRAWING	QTY
1	TOP PANEL		1 PC
2	LEFT PANEL		1 PC
3	RIGHT PANEL		1 PC
4	CENTRE PANEL		1 PC
5	CENTRE BACK PANEL		1 PC
6	BOTTOM PANEL		1 PC

ASSEMBLY INSTRUCTION


PARTS LIST

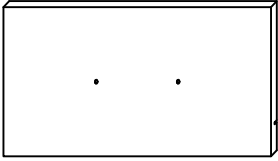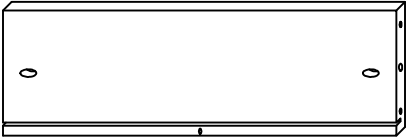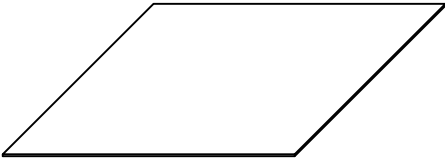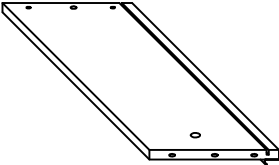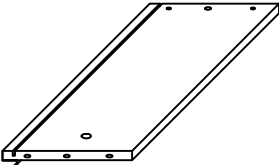ITEM	DESCRIPTION	DRAWING	QTY
7	DRAWER HEAD		2 PCS
8	DRAWER BACK PANEL		2 PCS
9	DRAWER BOTTOM PANEL		2 PCS
10	SUPPORT LEG (i)		2 PCS
11	SUPPORT LEG (ii)		2 PCS
19	DRAWER LEFT PANEL		2 PCS
20	DRAWER RIGHT PANEL		2 PCS
21	DRAWER BOTTOM SUPPORT RAIL		2 PCS


ASSEMBLY INSTRUCTION

PARTS ' LOCATION

COFFEE TABLE x 1 PC

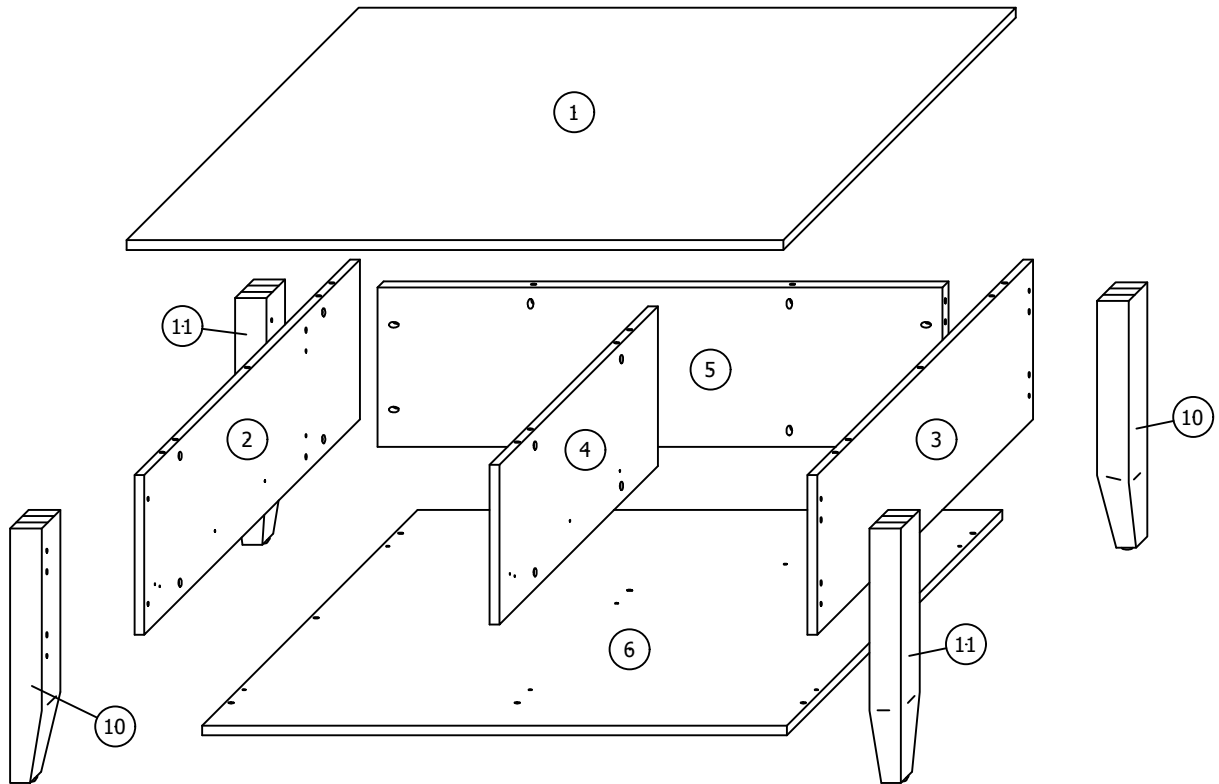

DRAWER x 2 PCS


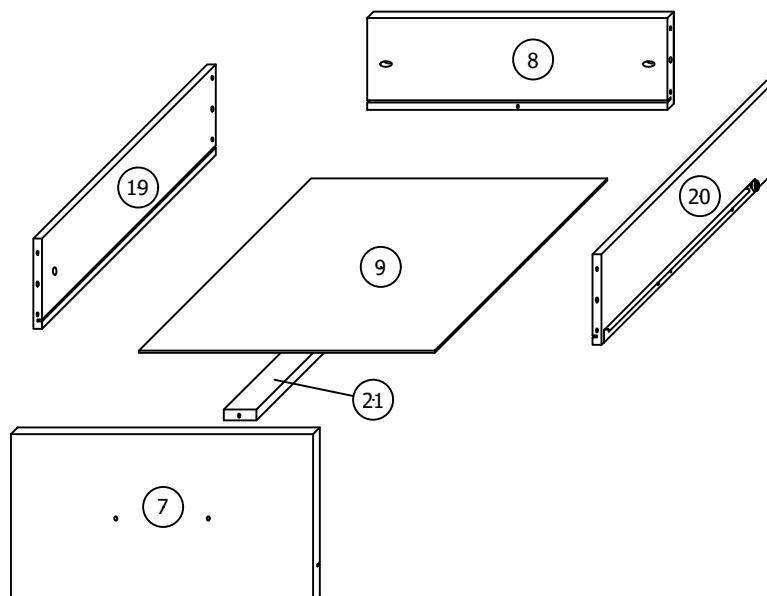


ASSEMBLY INSTRUCTION


ASSEMBLY STEPS

STEP 1

Fix the 1 piece (G) to the (2) by using 4 pieces (I). Then insert 4 pieces (A) and 2 pieces (B),(C) as shown.

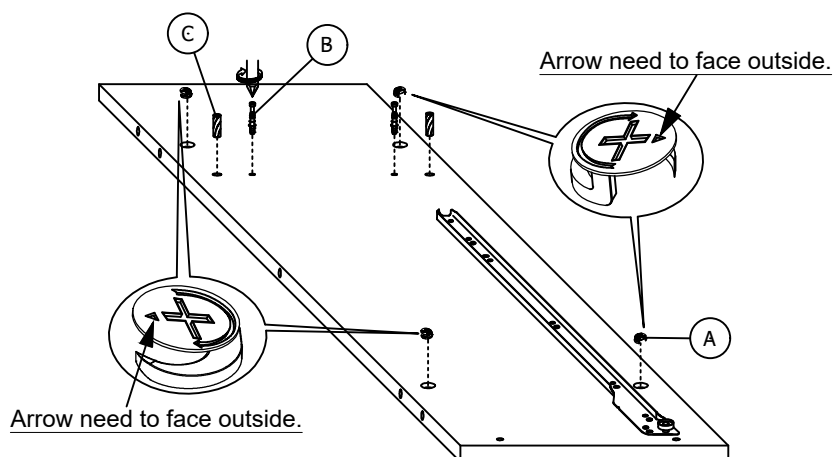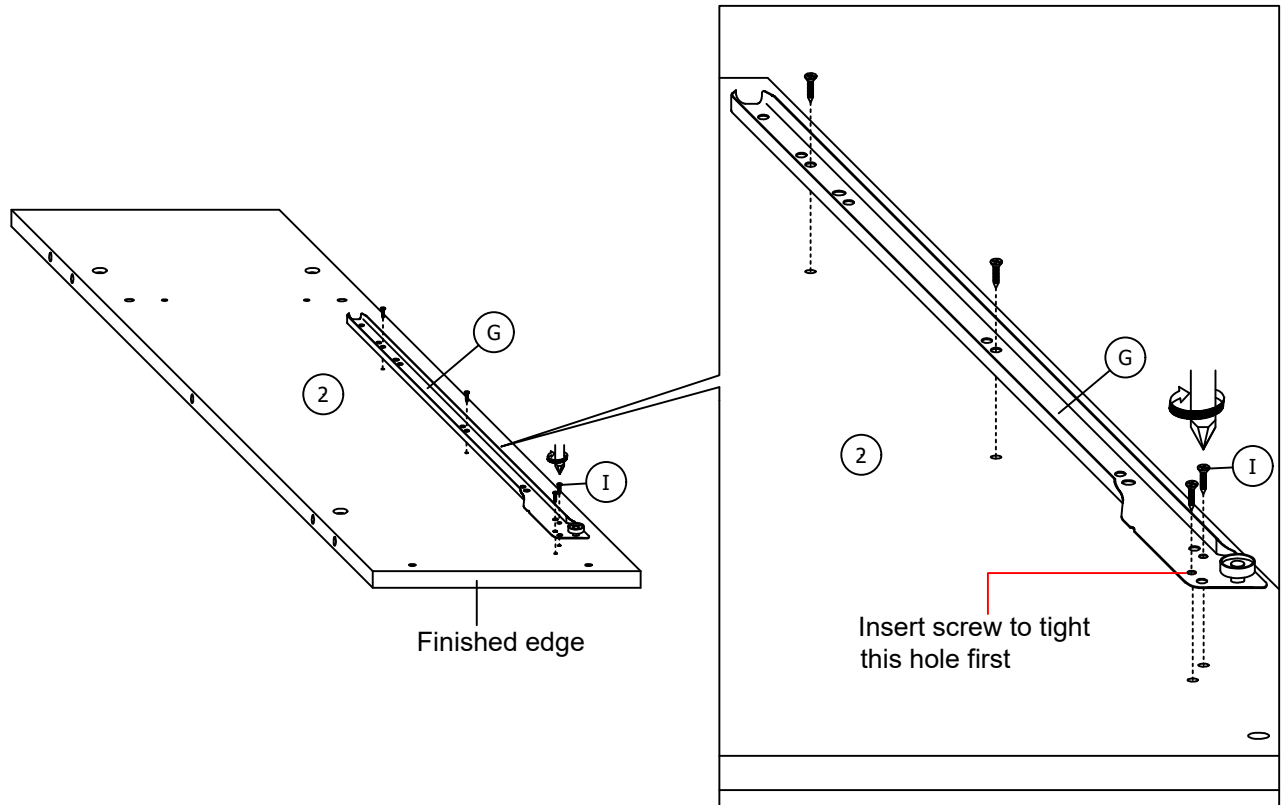




Assembled looks

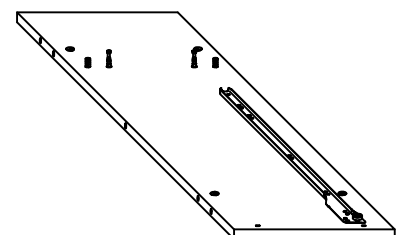


ASSEMBLY INSTRUCTION

STEP 2

Fix the 1 piece (H) to the (3) by using 4 pieces (I). Then insert 4 pieces (A) and 2 pieces (B),(C) as shown.

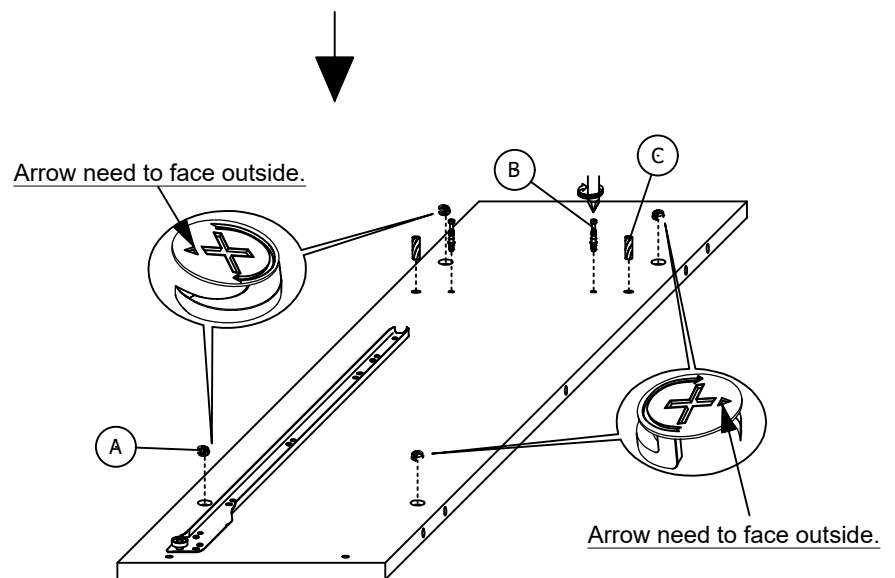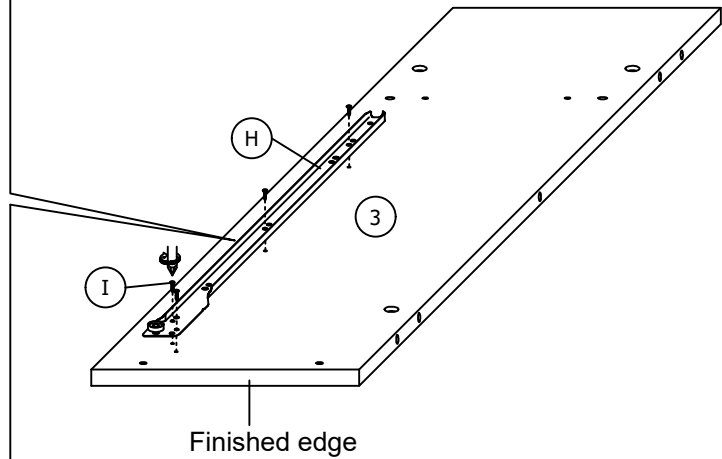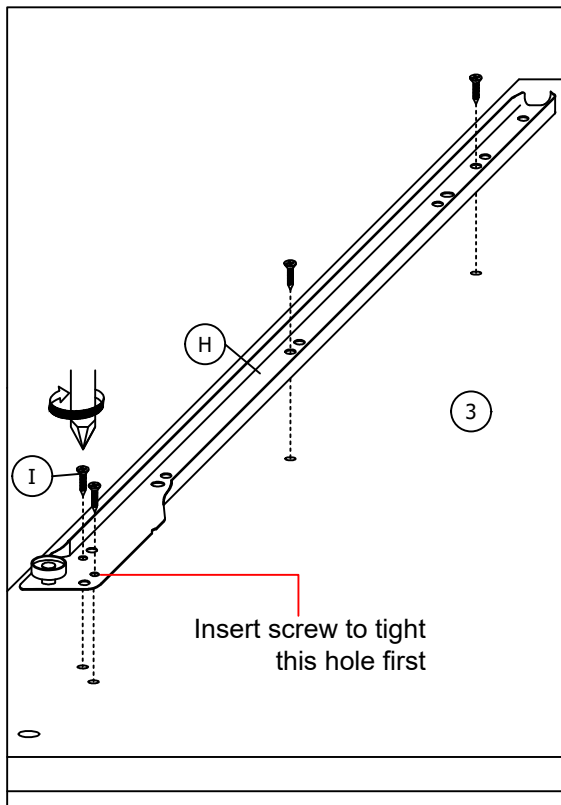



Assembled looks

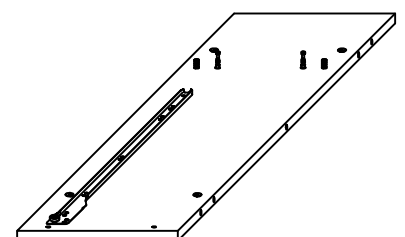

ASSEMBLY INSTRUCTION

STEP 3


Fix the remaining 1 piece (H) to the left side of (4) by using 4 pieces (I). Another 1 piece (G) to the right side by using 4 pieces (I) as shown.

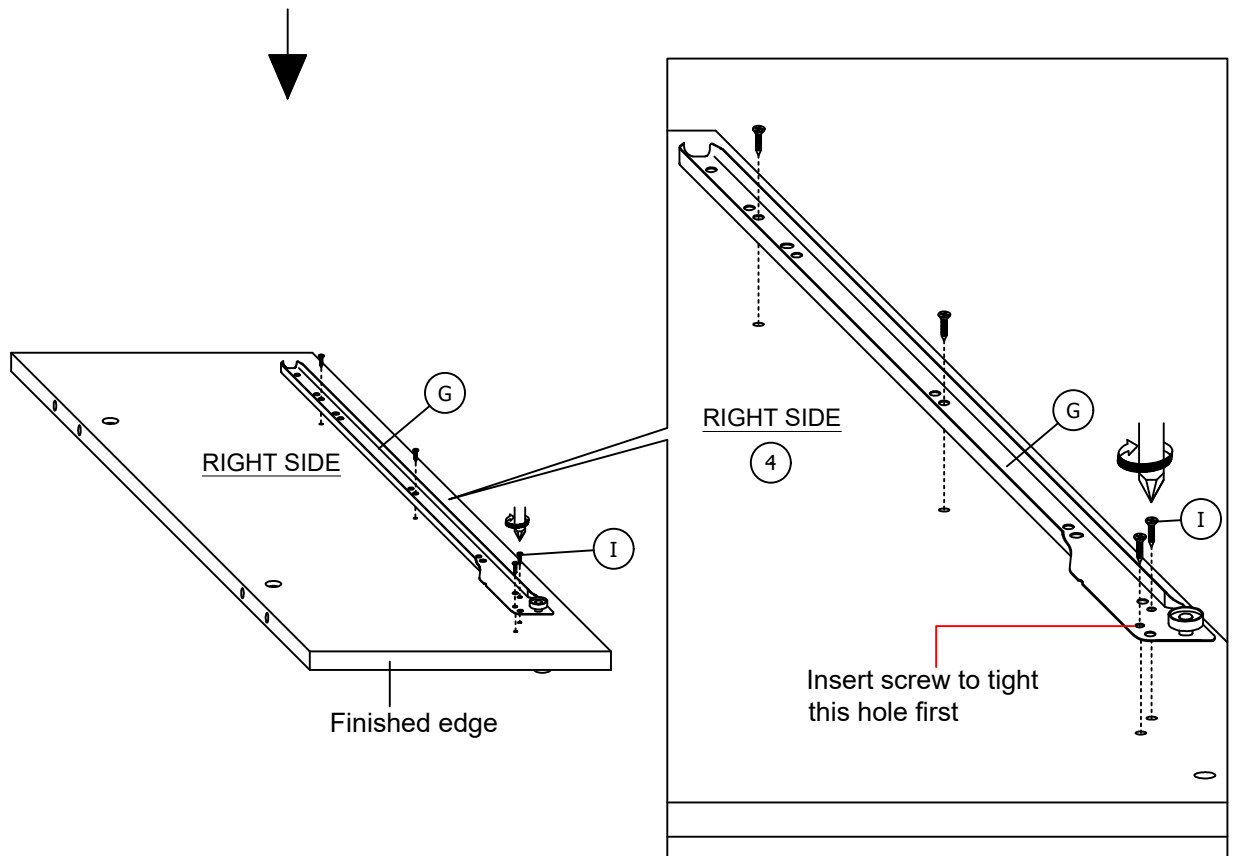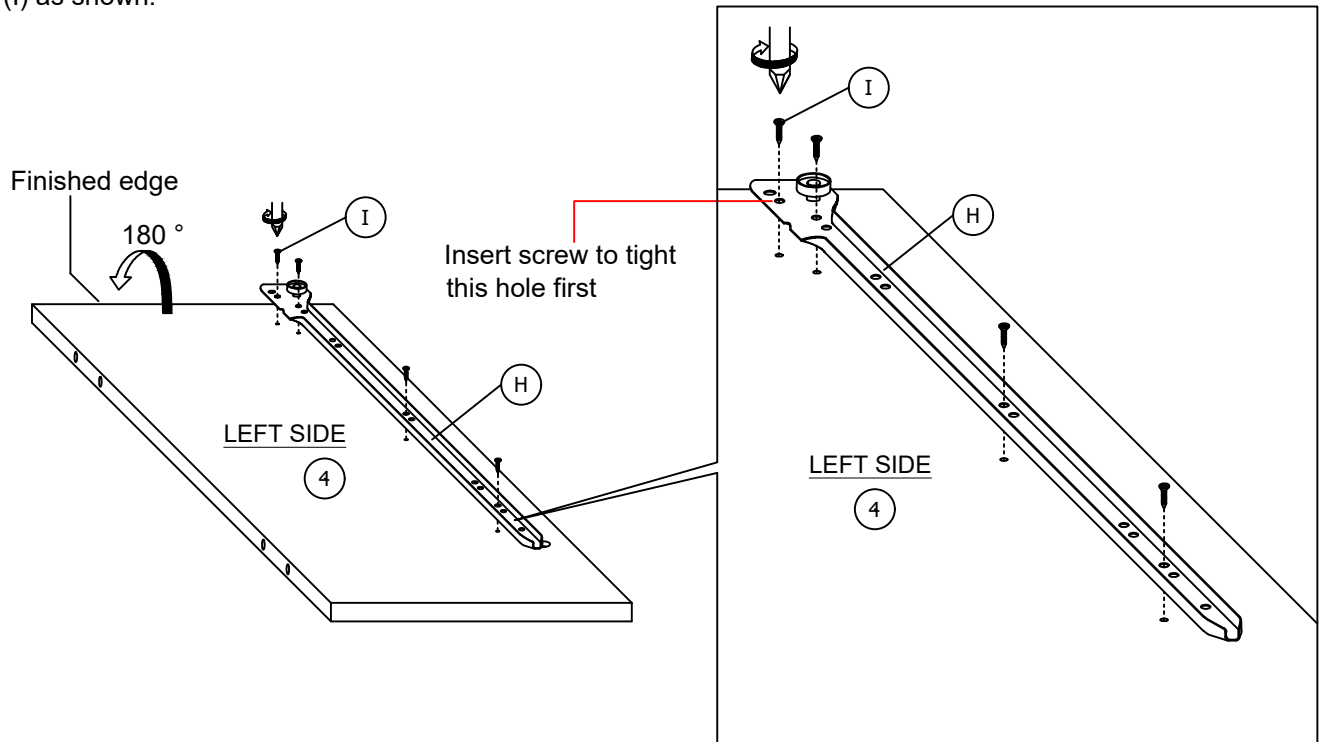


ASSEMBLY INSTRUCTION

STEP 4

Insert 4 pieces (A) to the (4) as shown.

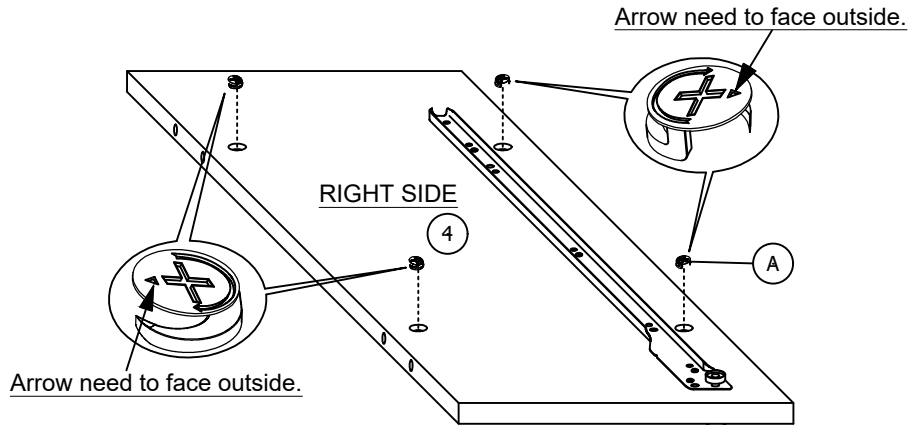


Assembled looks

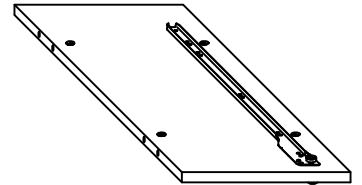


STEP 5

Insert 8 pieces (B),(C) to the (6) as shown.

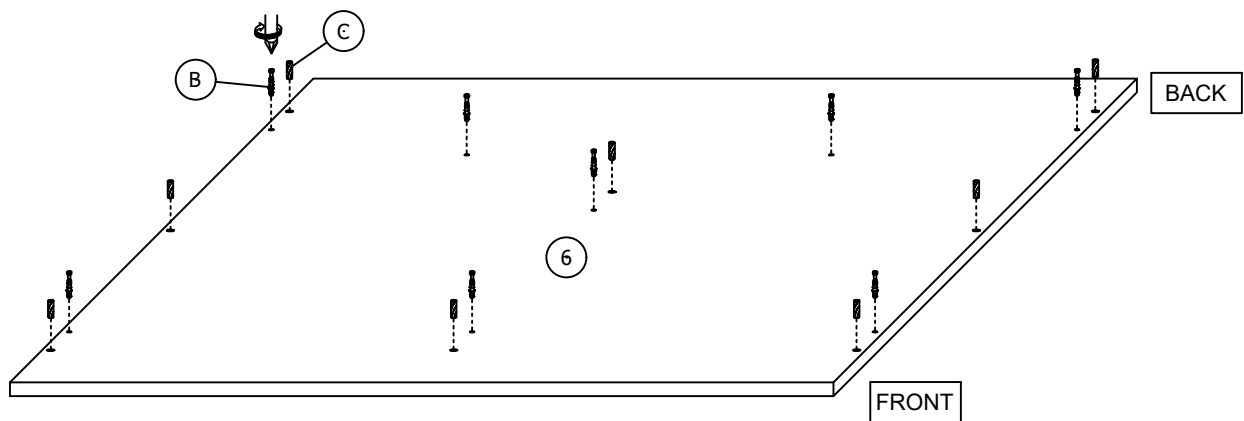


Assembled looks

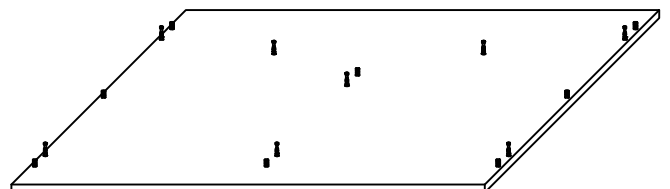


ASSEMBLY INSTRUCTION

STEP 6

Insert 8 pieces (B),(C) to the (1) as shown.

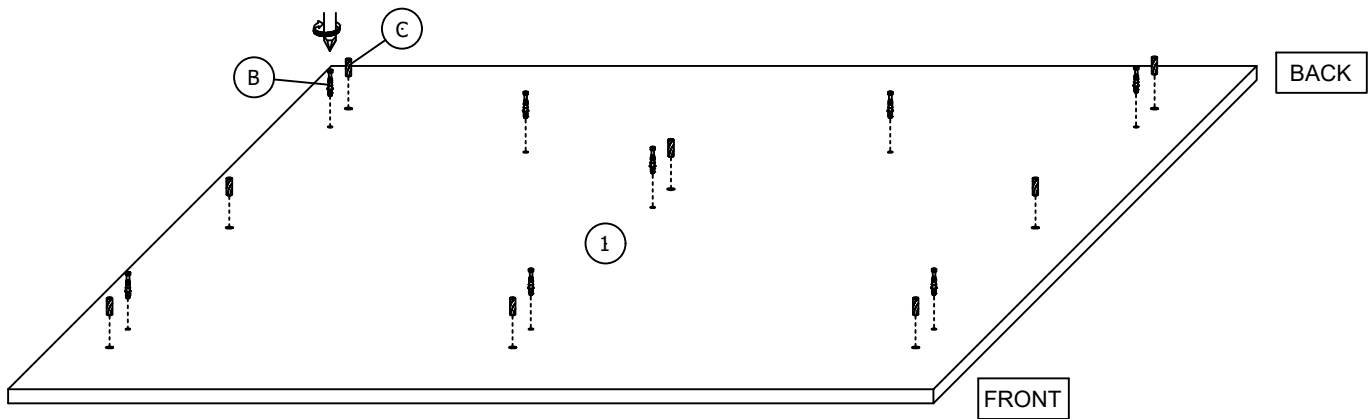


Assembled looks

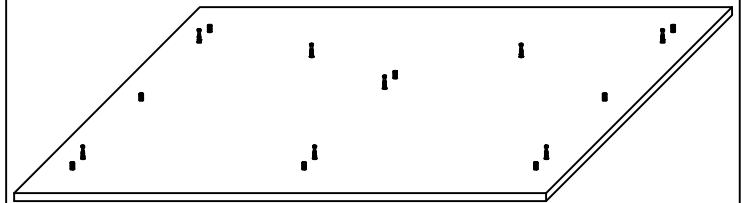


STEP 7

Insert 8 pieces (A) to the (5) as shown.

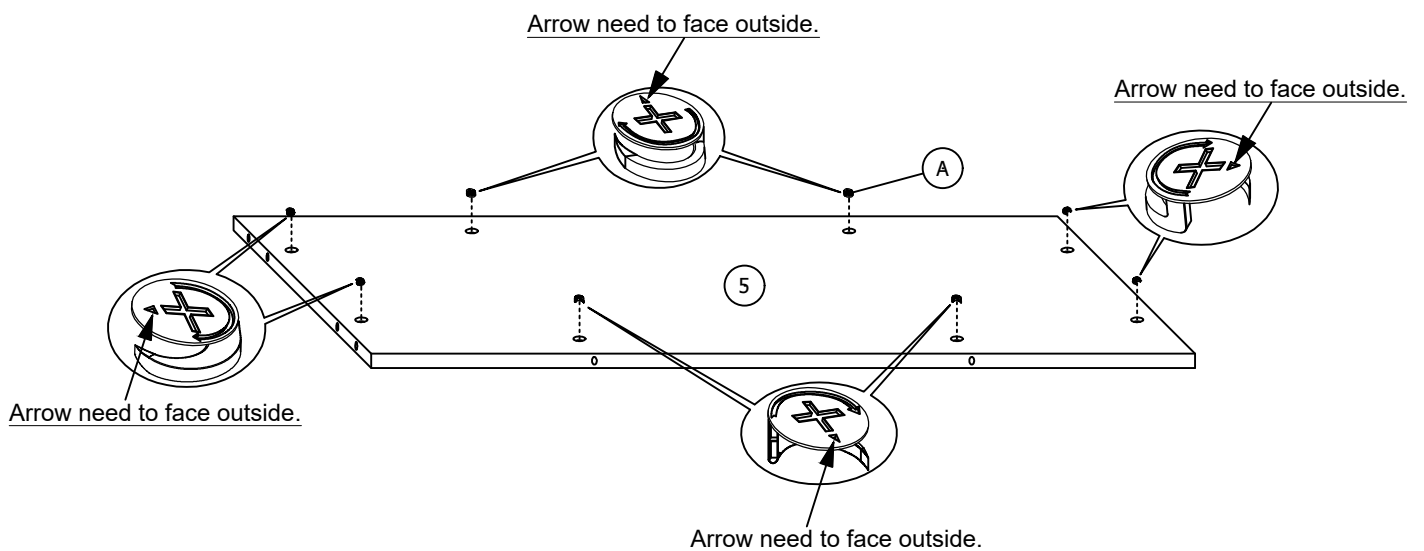


Assembled looks



ASSEMBLY INSTRUCTION


STEP 8

Combine the (2),(3) to the (5) then tighten the 4 pieces (A)-(pre insert in previous step) as shown.

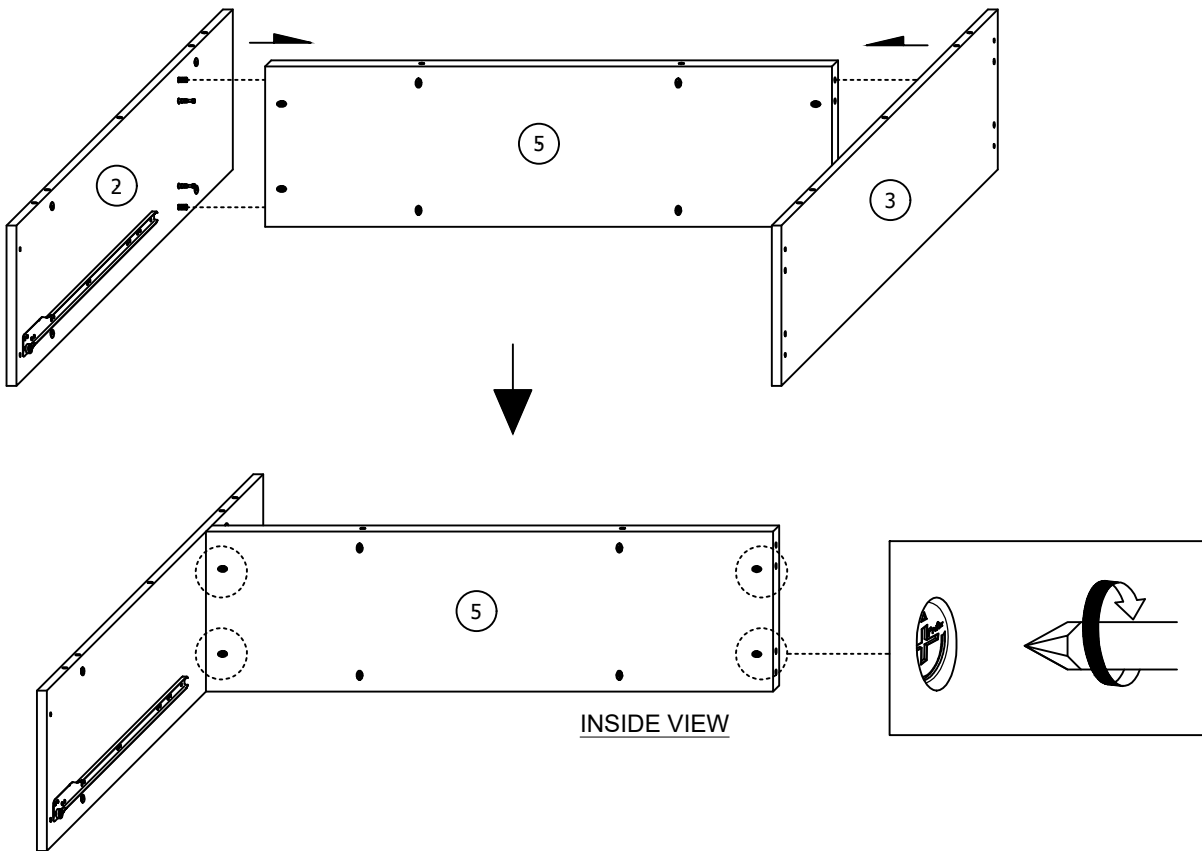

STEP 9


Combine the (2),(3),(4),(5) to the (6) then tighten the 8 pieces (A)-(pre insert in step 1,2,4 and 7) as shown.

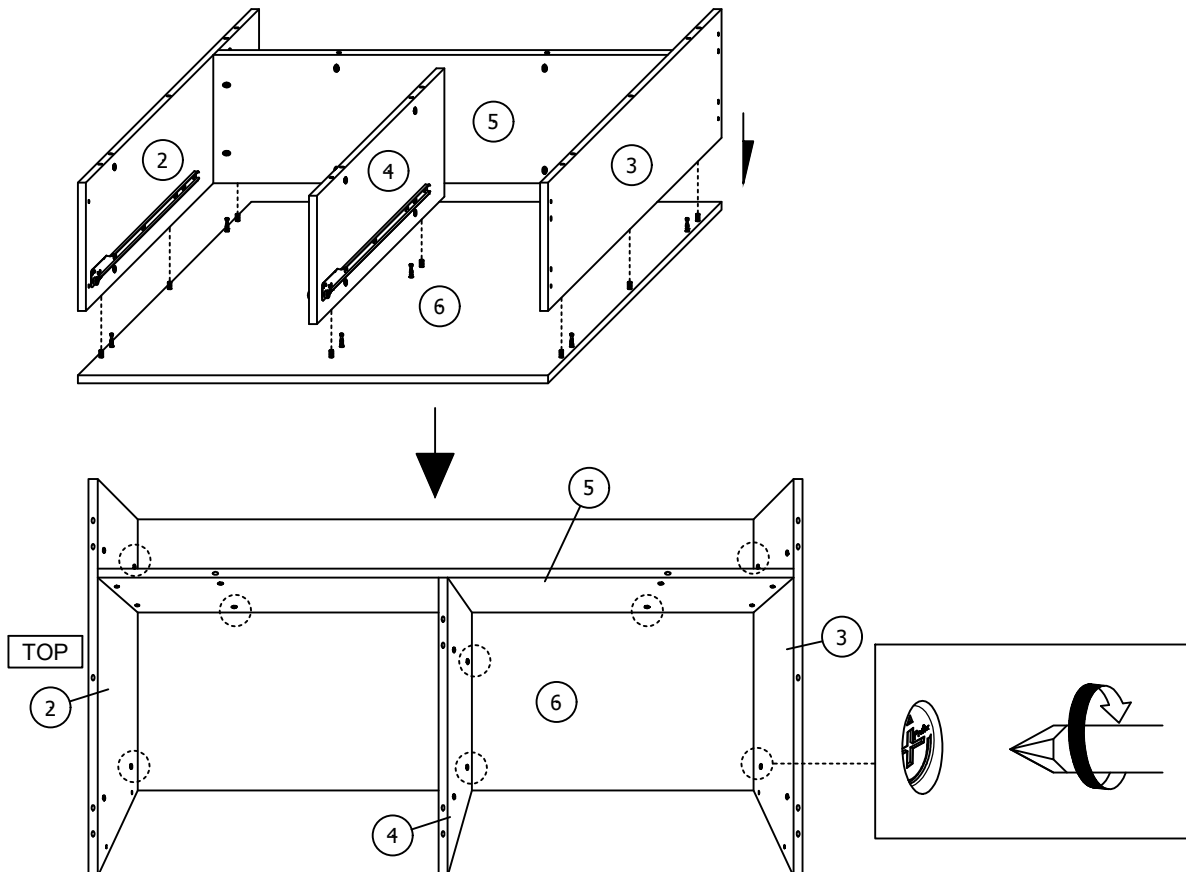

ASSEMBLY INSTRUCTION


STEP 10

Combine the (1) to the (2),(3),(4),(5) then tighten the remaining 8 pieces (A)-(pre insert in step 1,2,4 and 7) as shown.

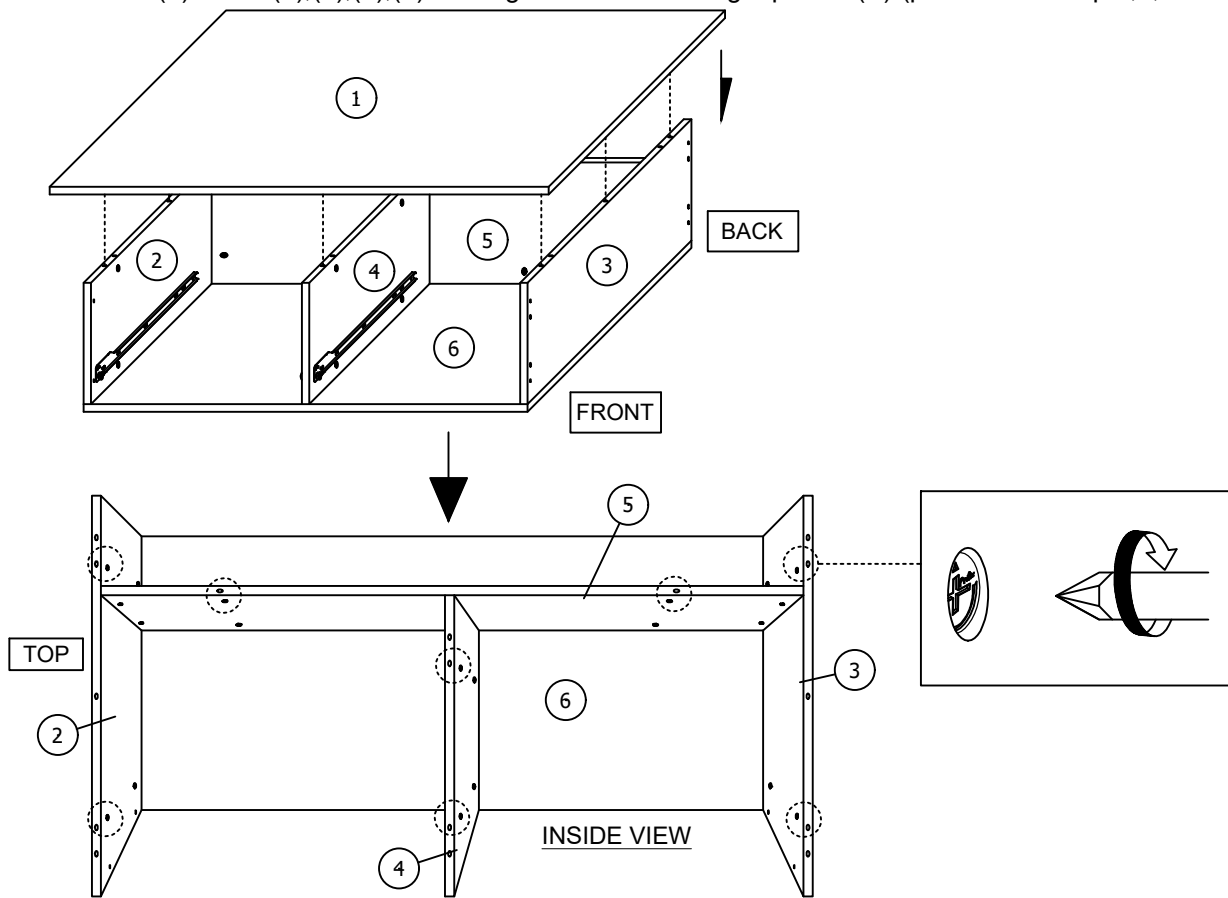

STEP 11


Insert the 8 pieces (C),(J) to combine (10),(11) to the (2),(3)as shown.

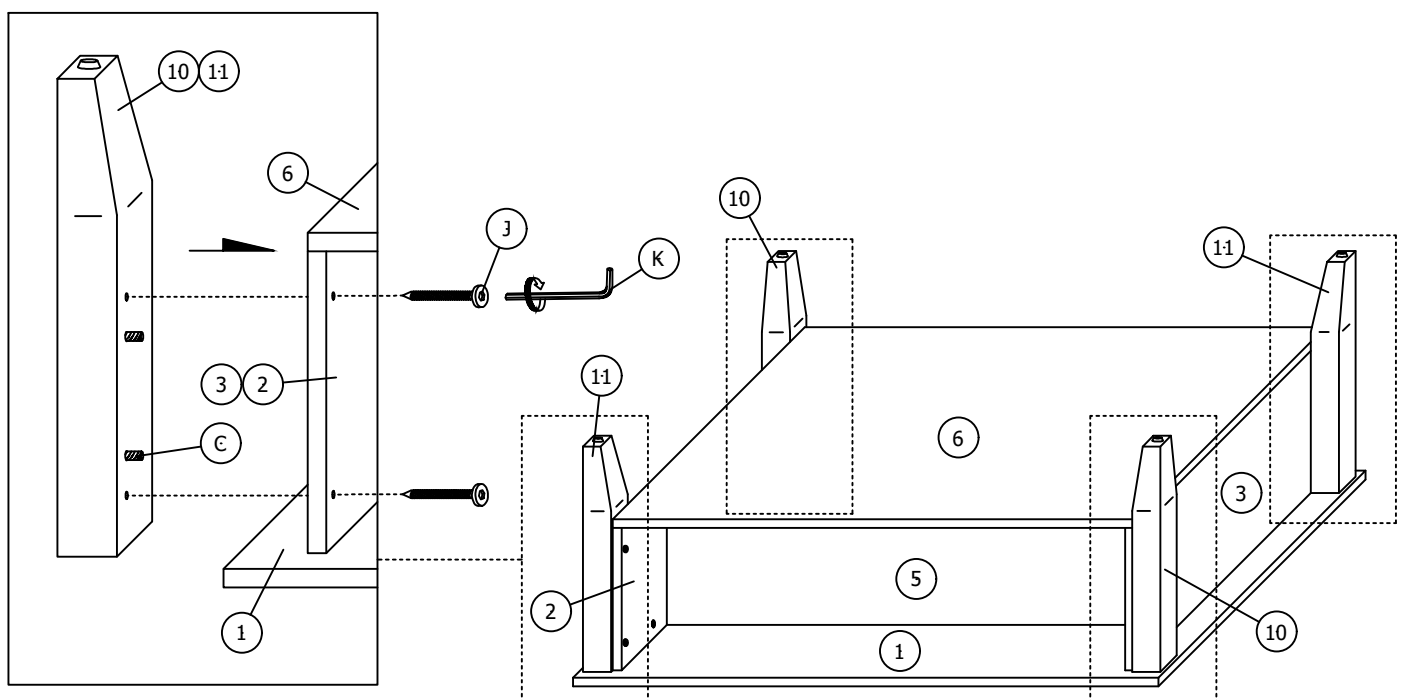


ASSEMBLY INSTRUCTION

STEP 12

Insert 3 pieces (B) to the (7) as shown. This step needs to be **done twice**.

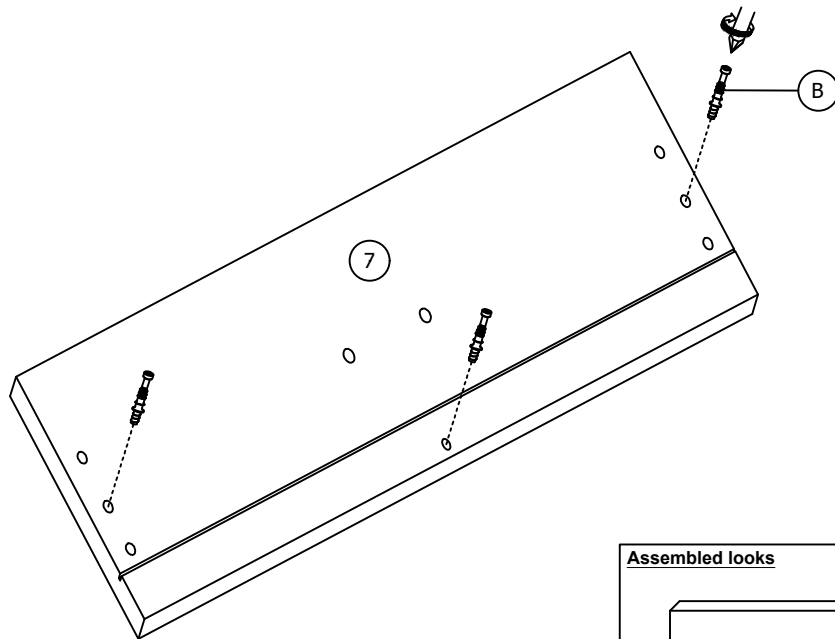


Assembled looks

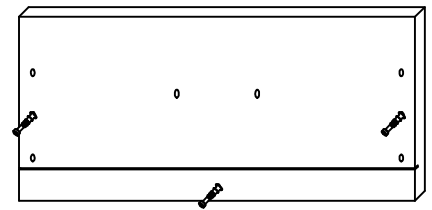


STEP 13

Insert 1 piece (A), (B) and 2 pieces (D) to (19) as shown. This step needs to be **done twice**.

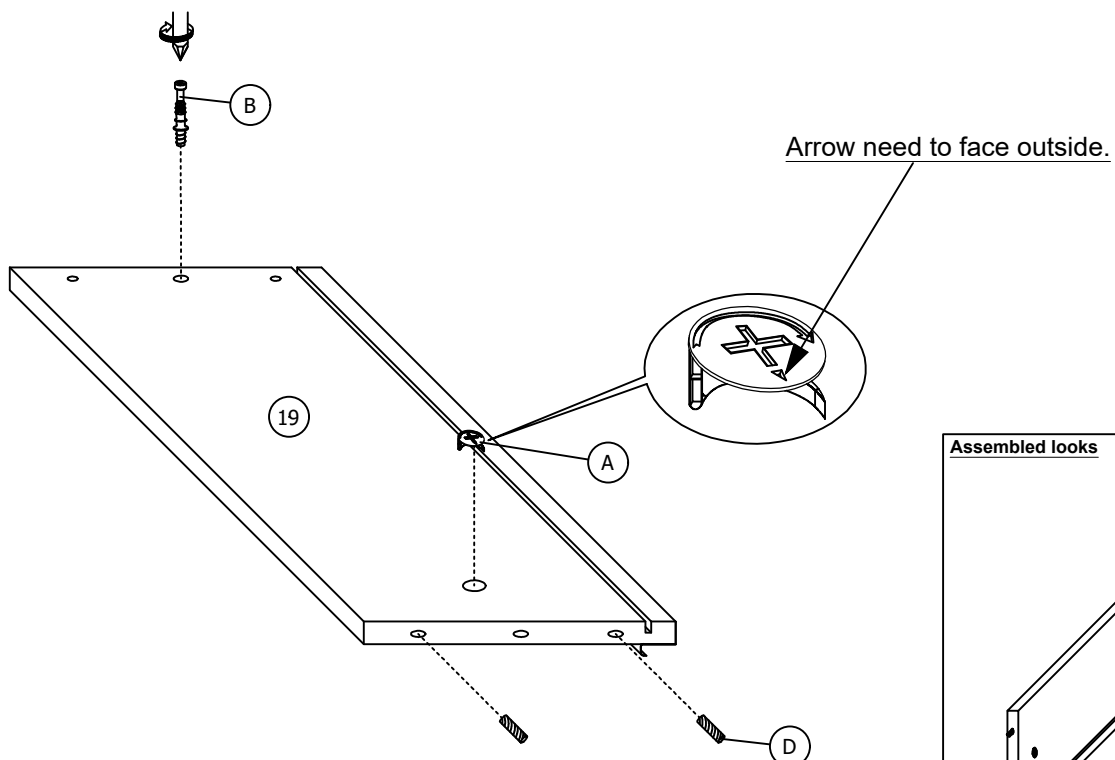


Assembled looks

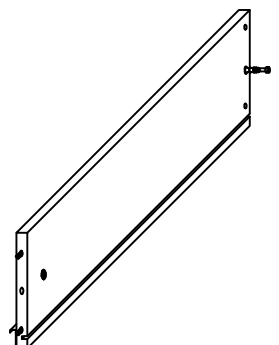

ASSEMBLY INSTRUCTION


STEP 14

Insert 1 piece (A),(B) and 2 pieces (D) to (20) as shown. This step needs to be **done twice**.

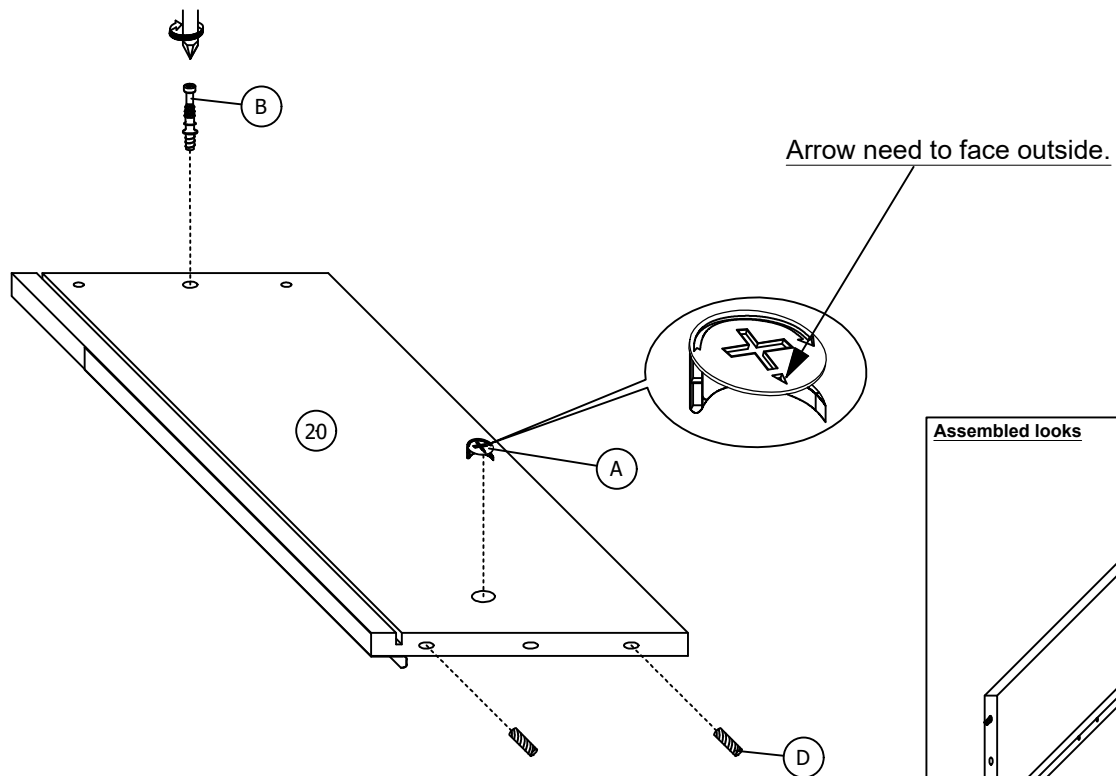

STEP 15

Insert 2 pieces (A) , 1 piece (B) and 4 pieces (D) to (8) as shown. This step needs to be **done twice**.

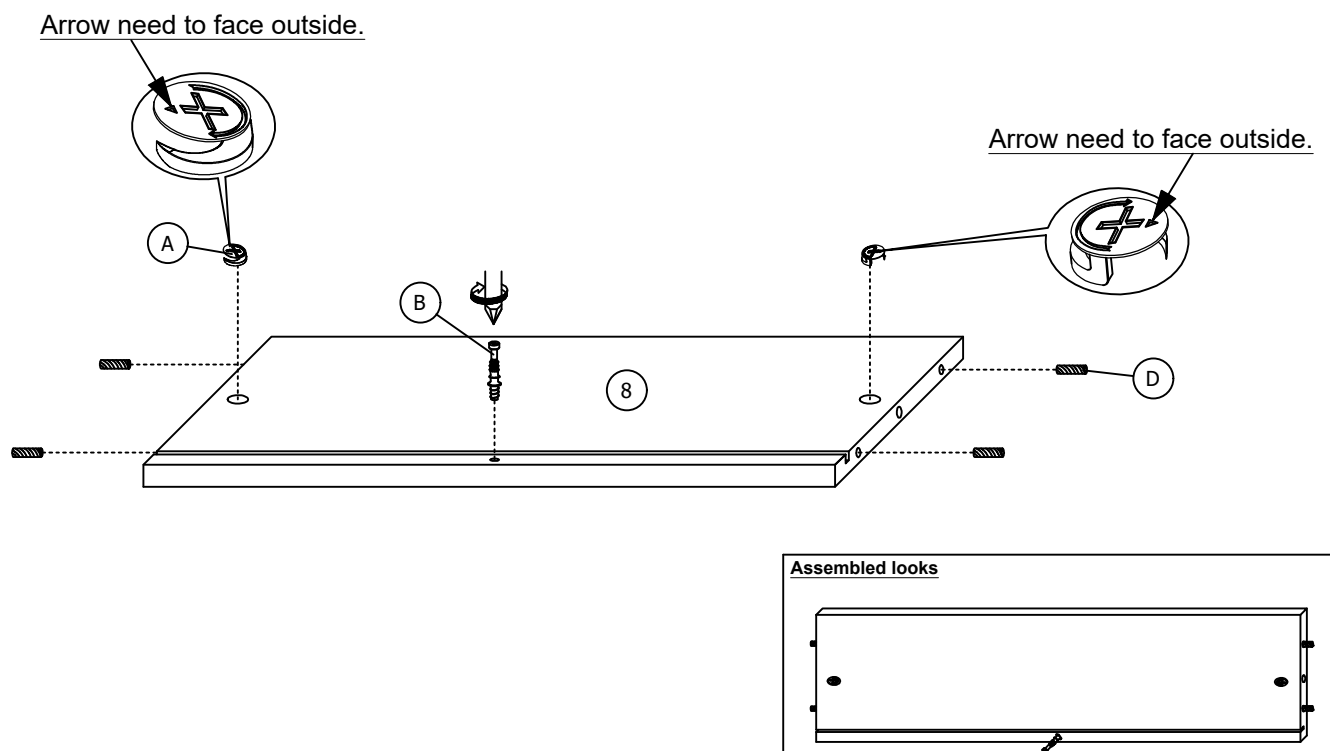


ASSEMBLY INSTRUCTION

STEP 16

Insert 2 pieces (A) to (21) as shown. This step needs to be **done twice**.


Arrow need to face outside.



Arrow need to face outside.






Assembled looks



STEP 17


Combine the (19) and (20) to the (8). Then tighten the 2 pieces (A)-(pre-insert in step 15) as shown. This step needs to be **done twice**.

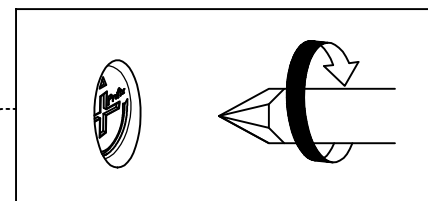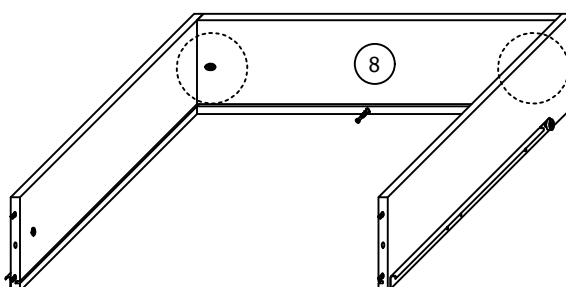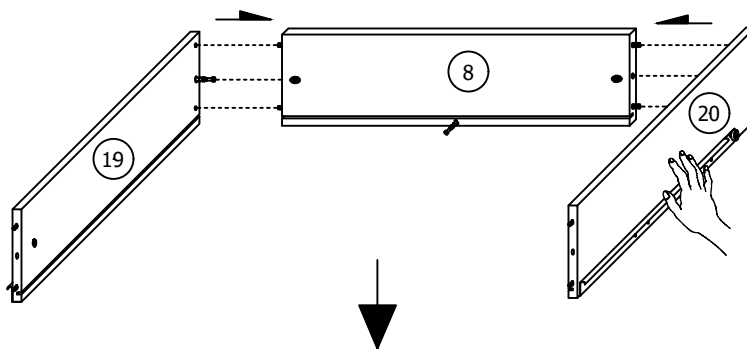

ASSEMBLY INSTRUCTION


STEP 18

Put the (9) into the gap of (19),(20) and (8) as shown. This step needs to be **done twice**.

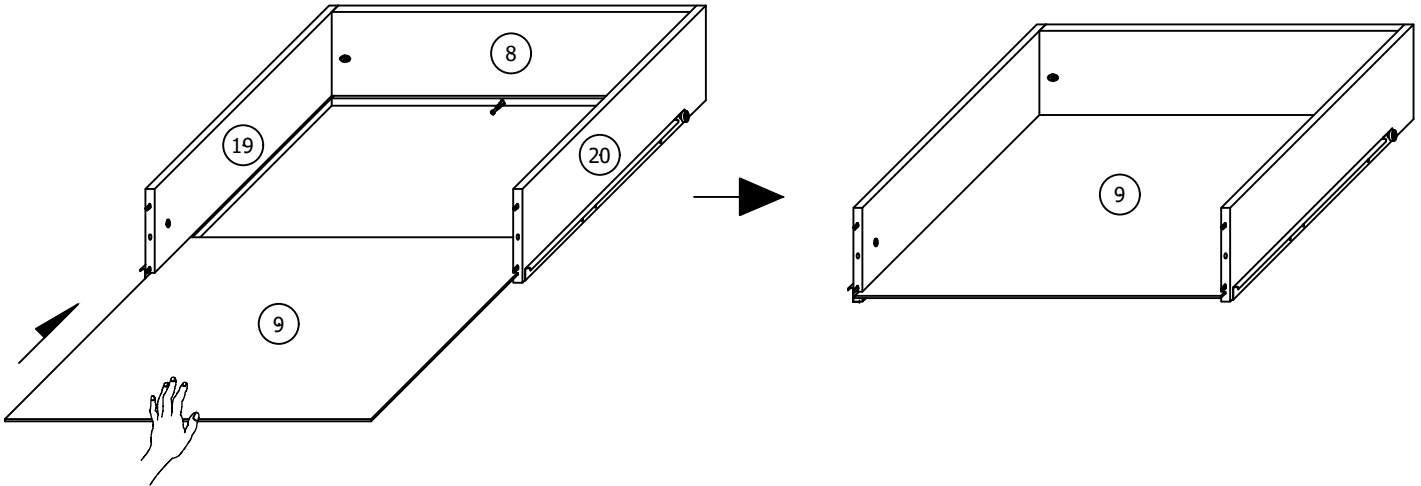

STEP 19


Combine the (21) to the (8) then tighten the 1 piece (A)-(pre-insert in step 16) as shown. This step needs to be **done twice**.

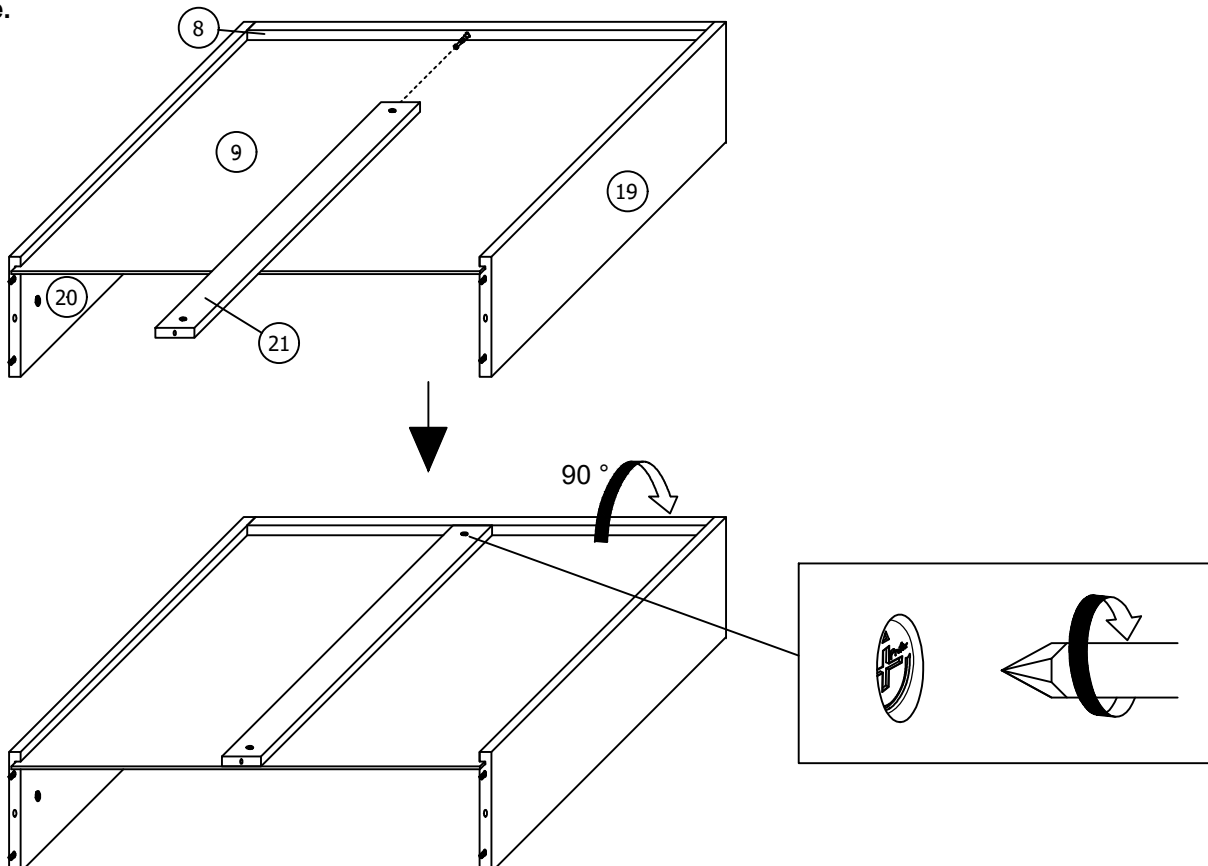

ASSEMBLY INSTRUCTION


STEP 20

Combine the (7) to the drawer frame. Then tighten the 3 pieces (A)-(pre-insert in step 13,14 and 16) as shown. This step needs to be **done twice**.

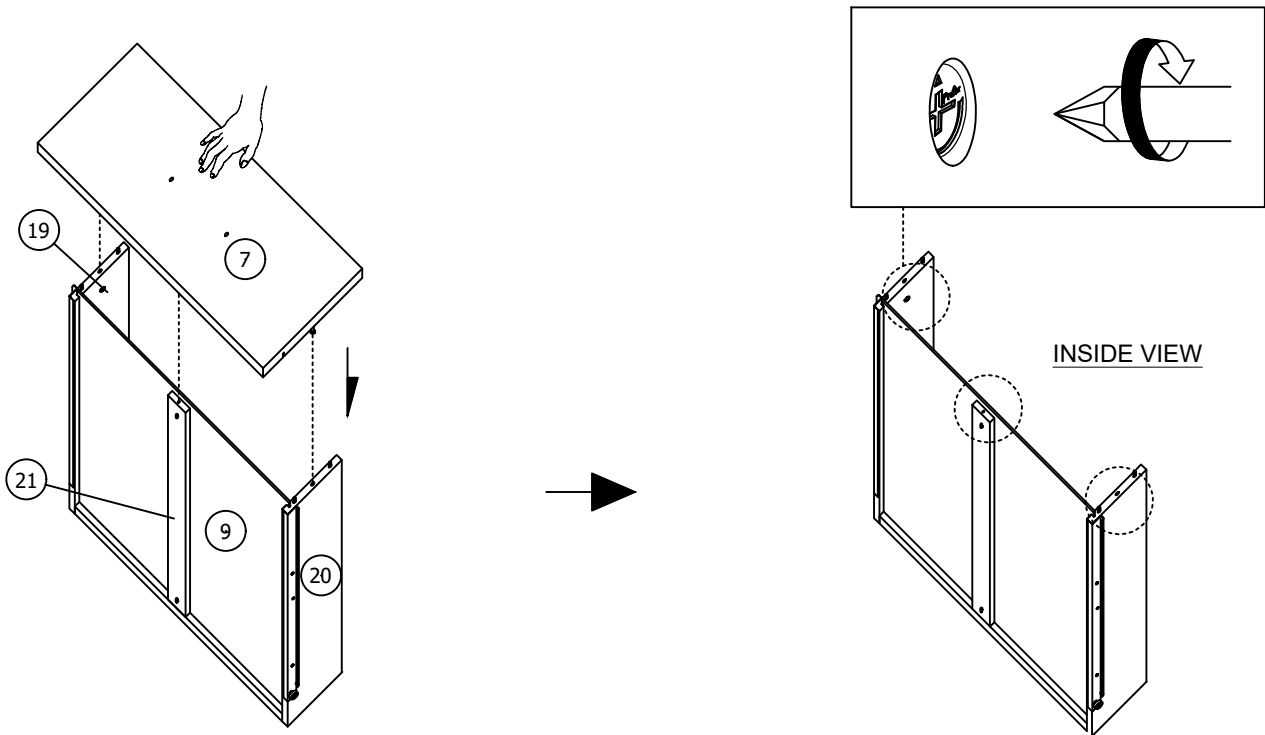

STEP 21


Insert 2 pieces (E) fix the (F) as shown. This step needs to be **done twice**.

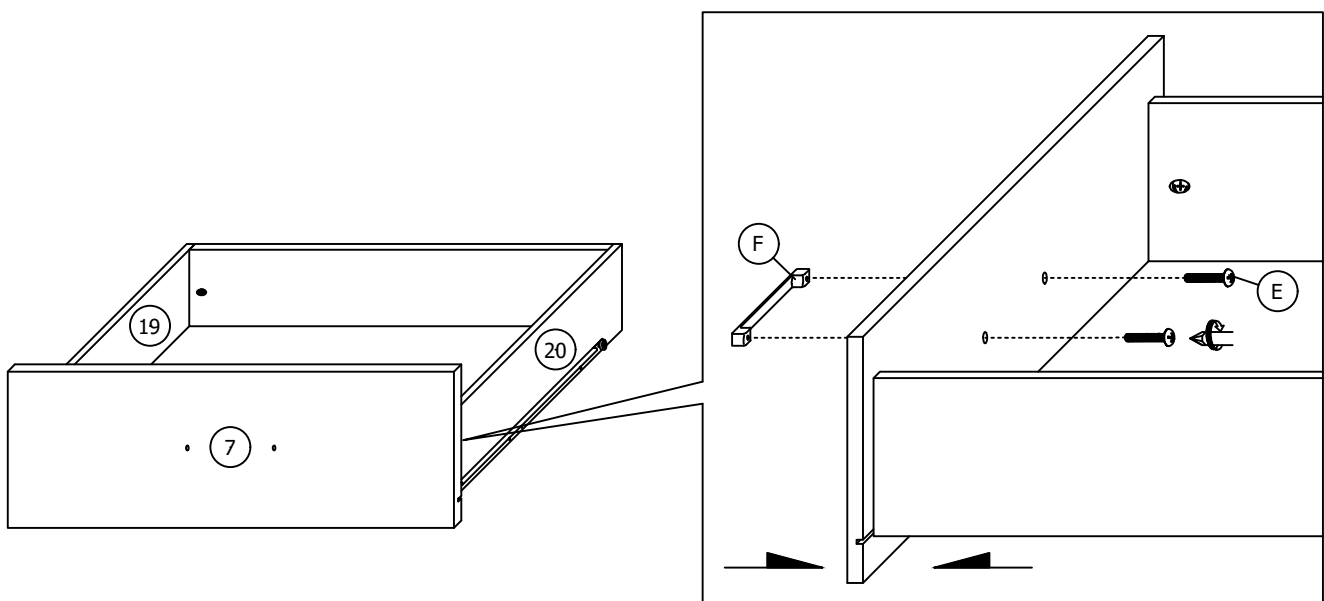


ASSEMBLY INSTRUCTION

STEP 22

Align the position then push the 2 pieces drawer to inside exactly by your hand as shown.

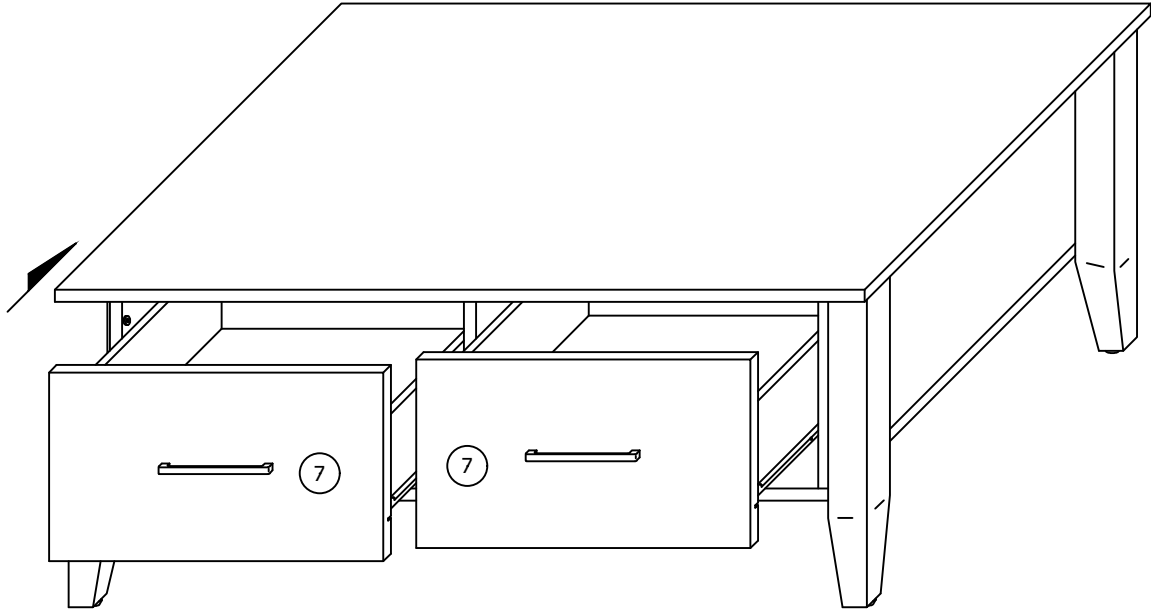

STEP 23

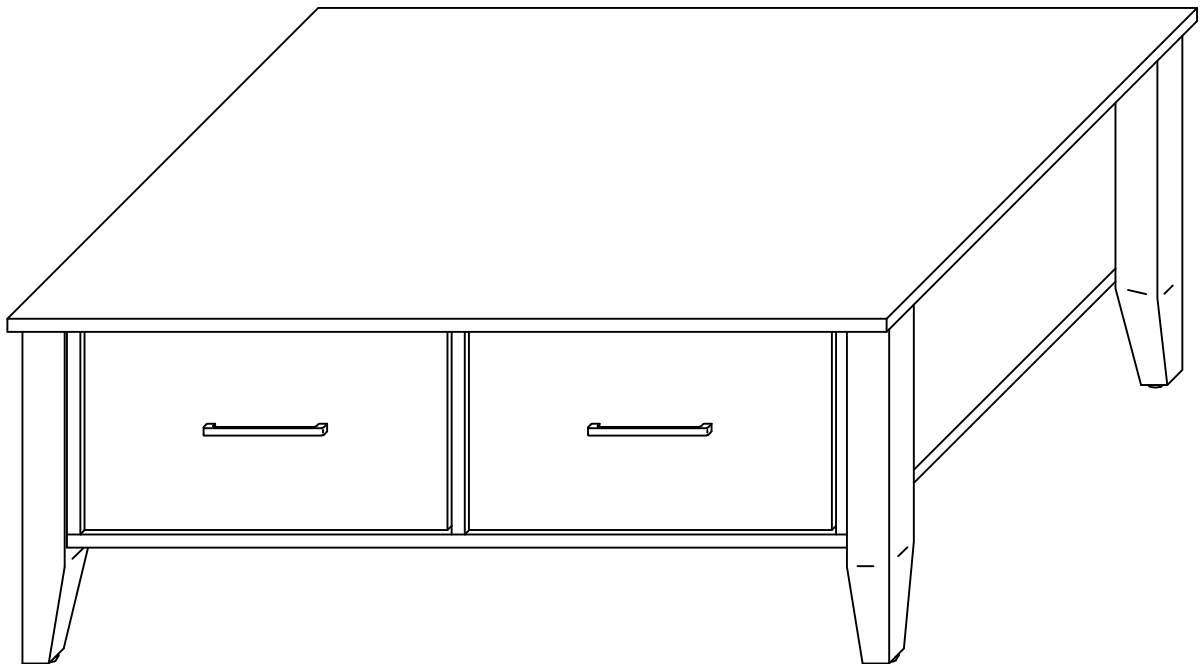

ASSEMBLY COMPLETED