















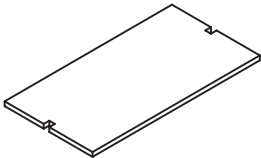












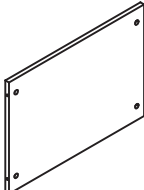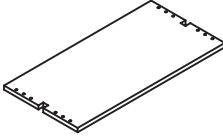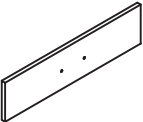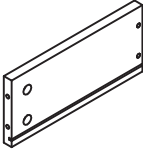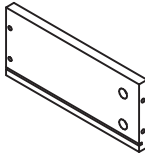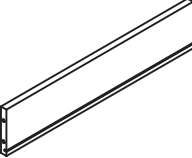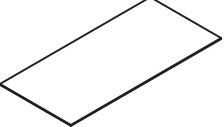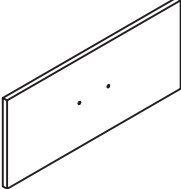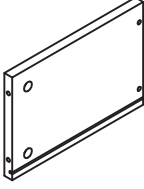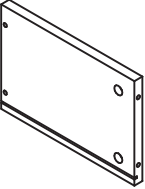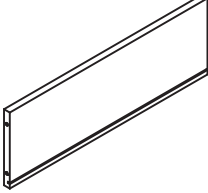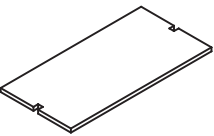

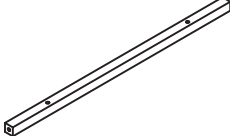







Assembling Instruction

Attention: Do not tighten the screws until all of them are in right positions

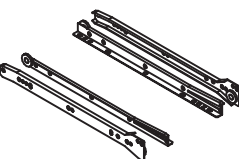
1  x1	2  x1	3  x1	4  x1	5  x1
6  x1	7  x1	8  x1	9  x1	10  x1
11  x1	12  x2	13  x1	14  x1	15  x1
16  x1	17  x3	18  x2	19  x2	20  x1
21  x1	22  x2	A  x28	B  x28	C  M6X40 x2
D  M6X30 x2	E  M6X12 x26	F  M4X40 x3	G  M4X35 x8	H  M4X20 x4
J  M4X14 x16	K  x2	L  x2	M  x3	N  M8X30 x8
				

1

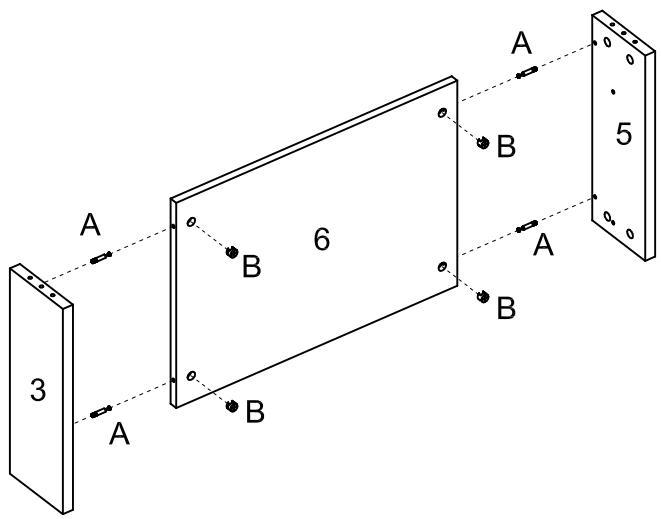


A	X4
B	X4

2

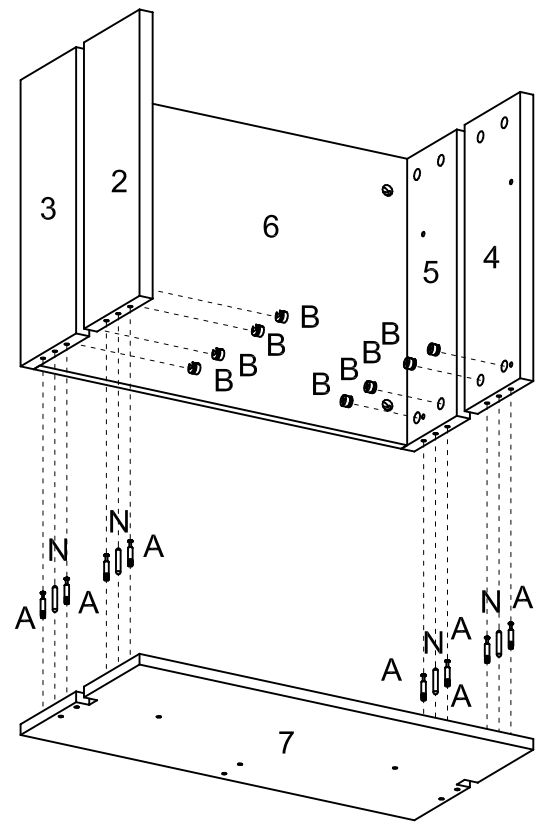


A	X8
B	X8
N	X4

3

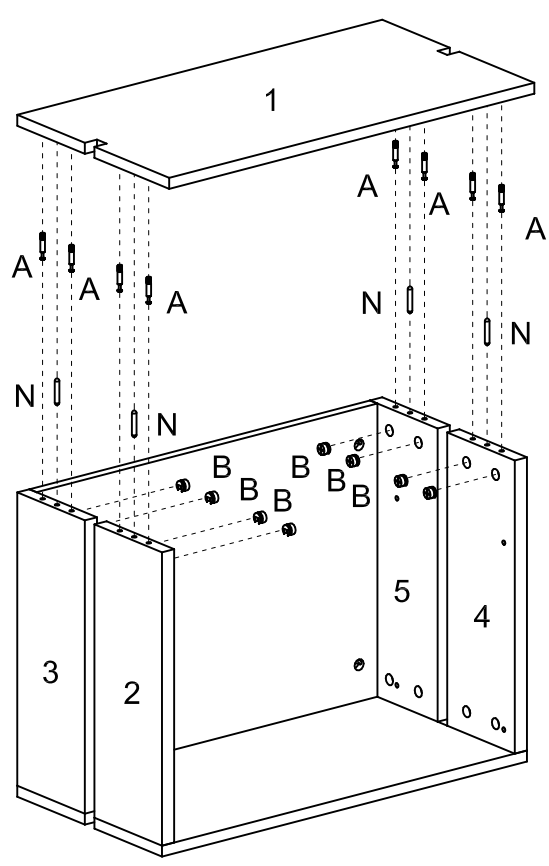


A	X8
B	X8
N	X4

4

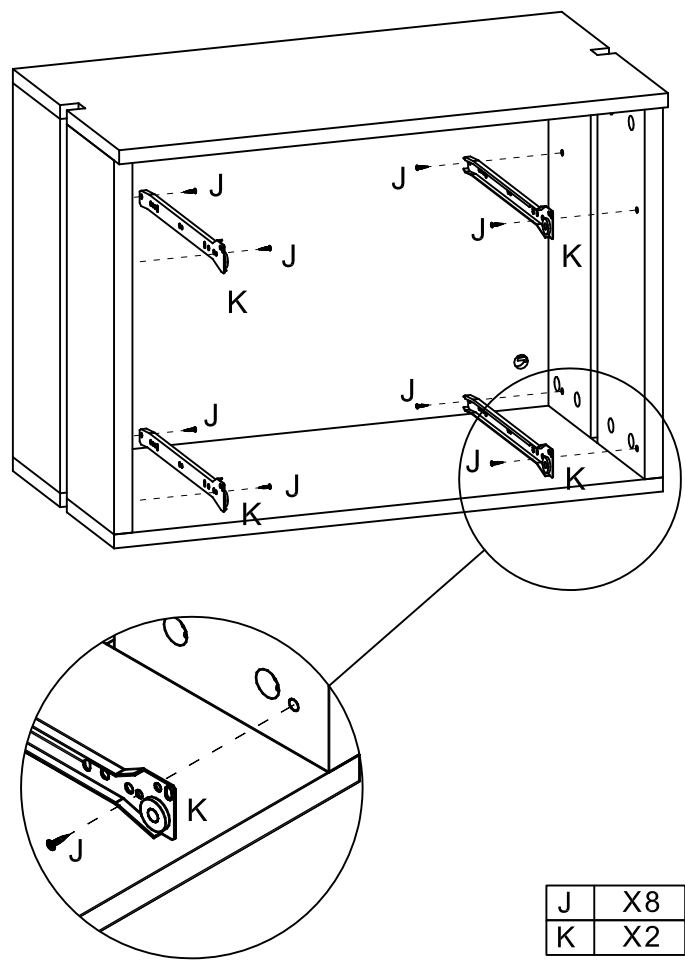


J	X8
K	X2

5

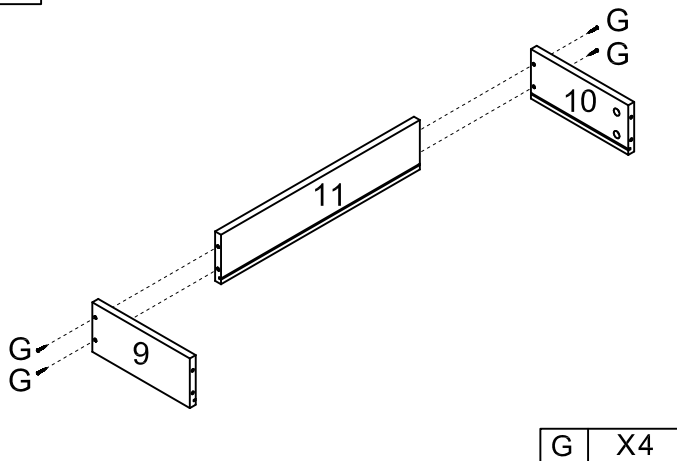


G	X4
---	----

6

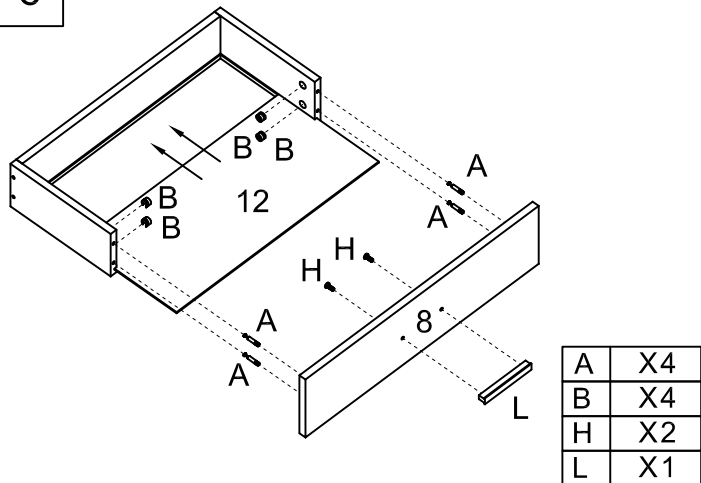


A	X4
B	X4
H	X2
L	X1

7

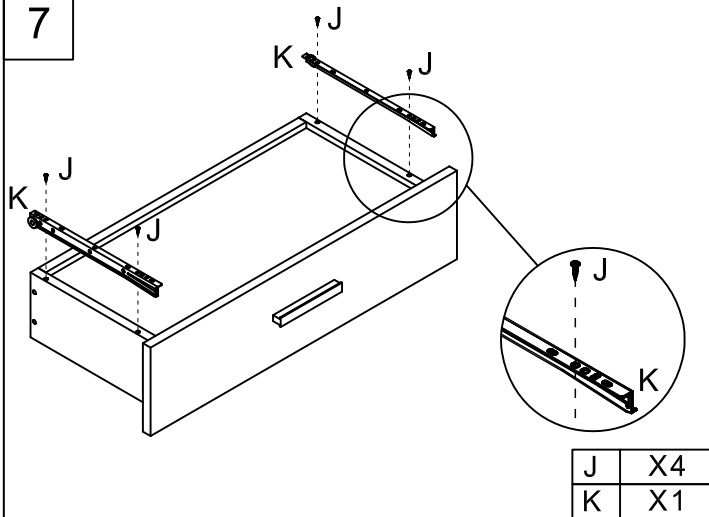


J	X4
K	X1

8

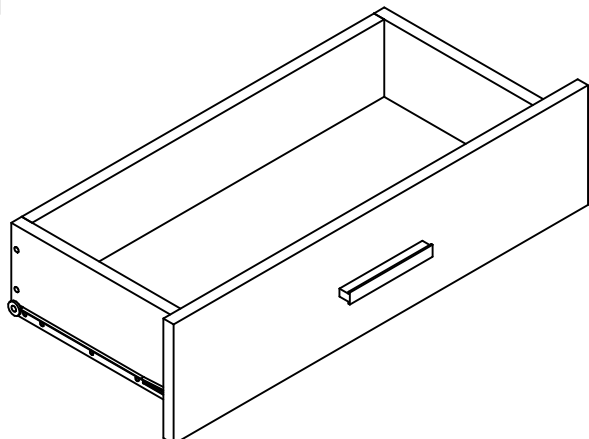


9

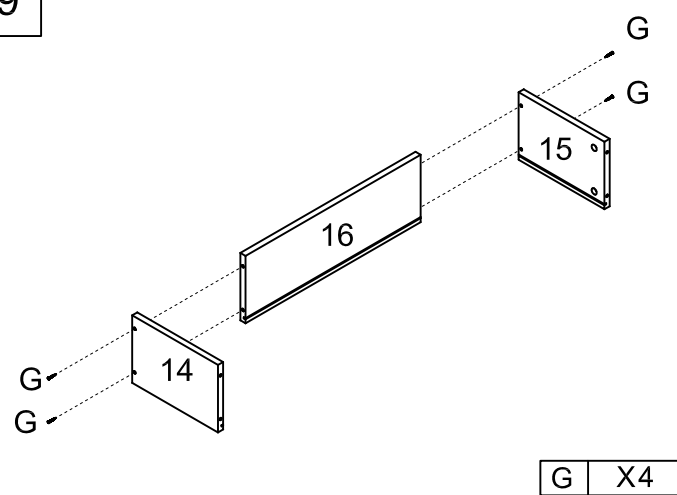


G	X4
---	----

10

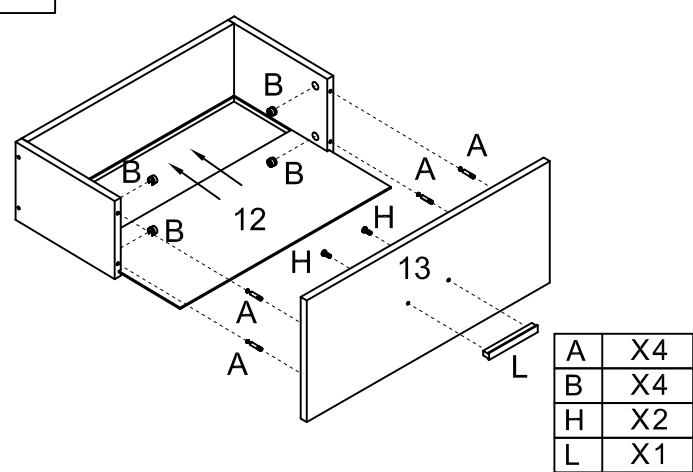


A	X4
B	X4
H	X2
L	X1

11

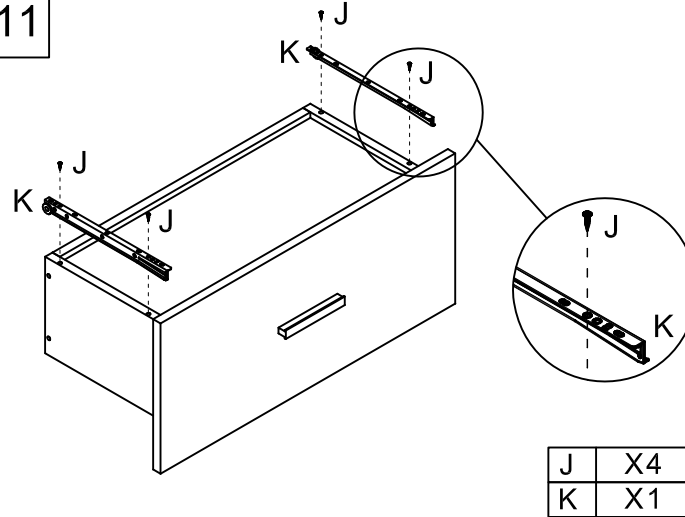


J	X4
K	X1

12

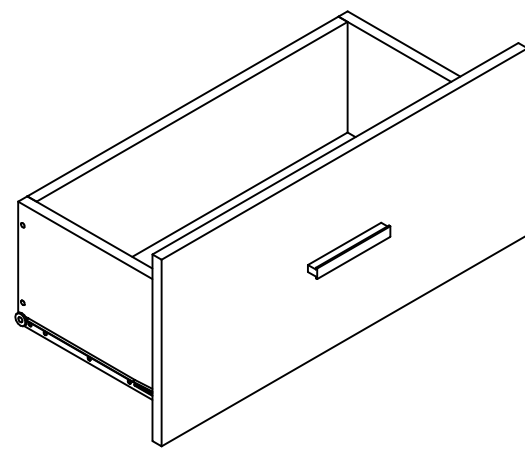


13

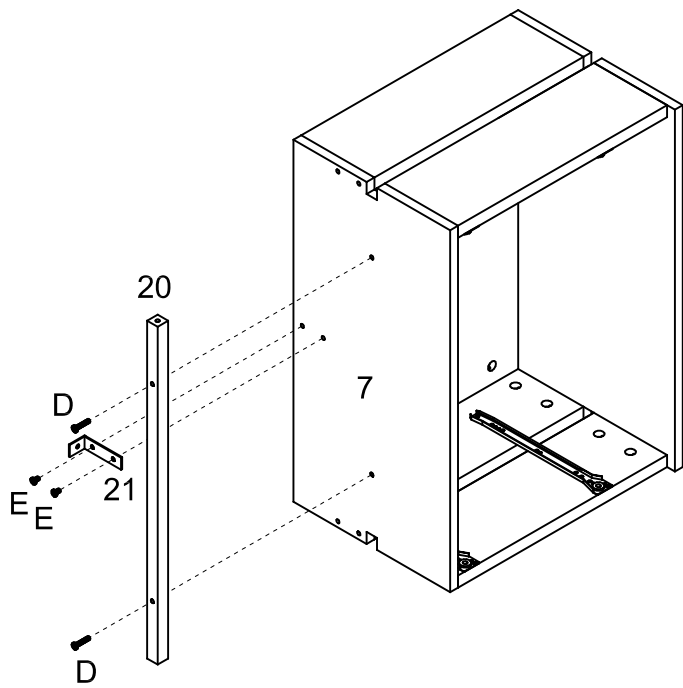


D	X2
E	X2

14

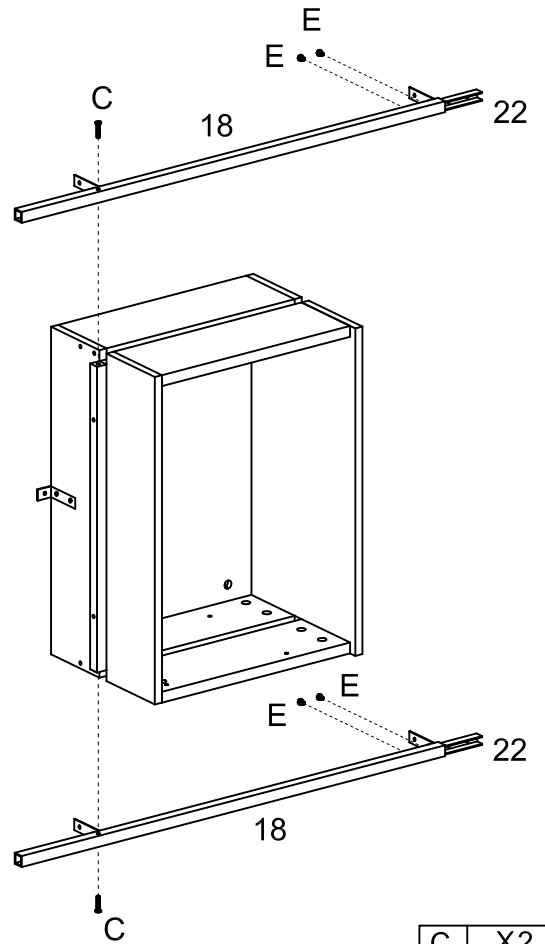


C	X2
E	X4

15

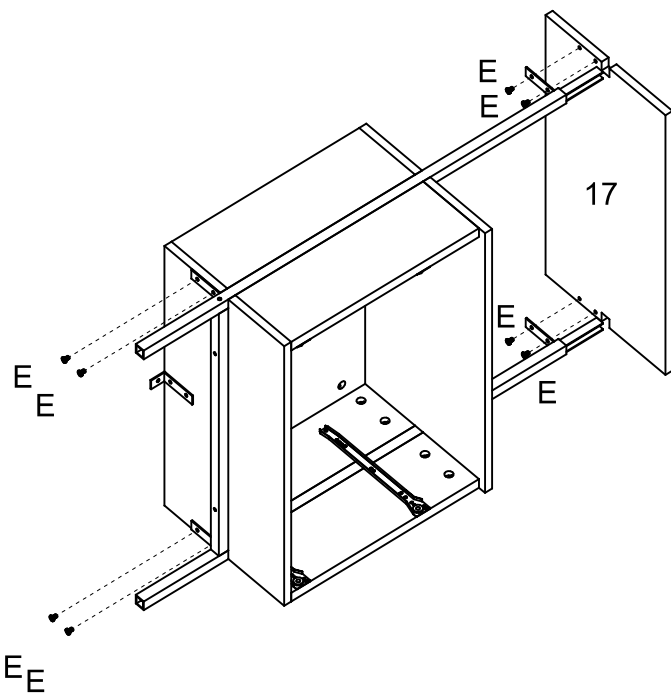


E	X8
---	----

16

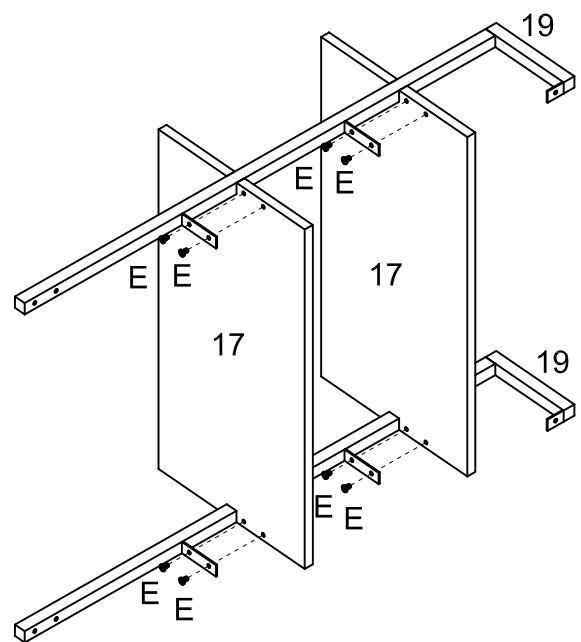


E	X8
---	----

17

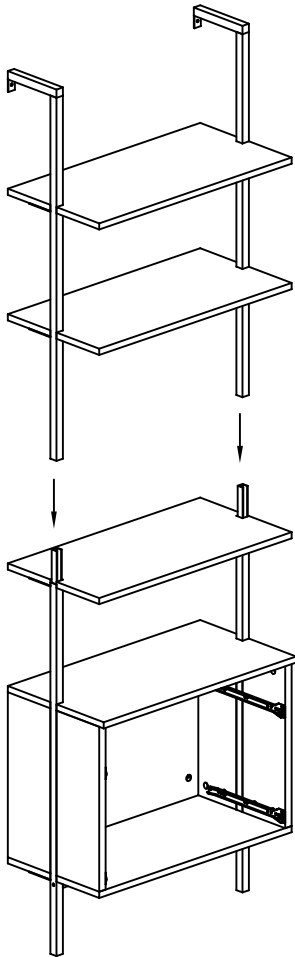


18

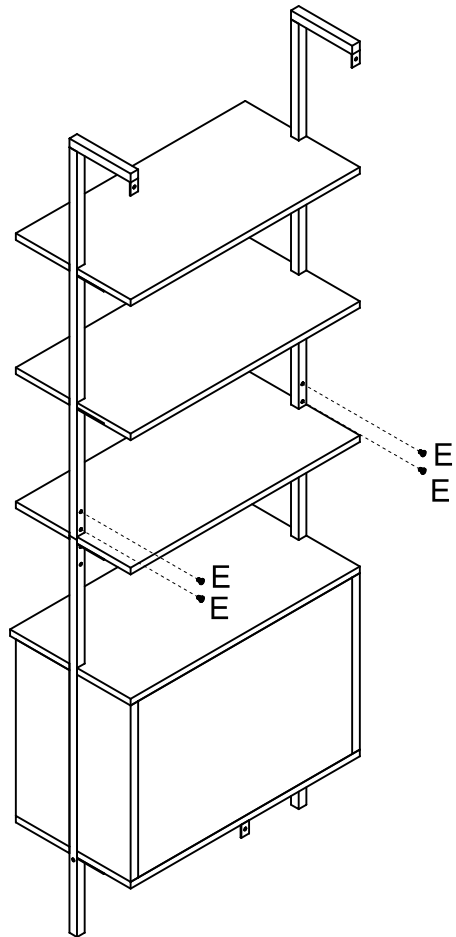


E X4


19

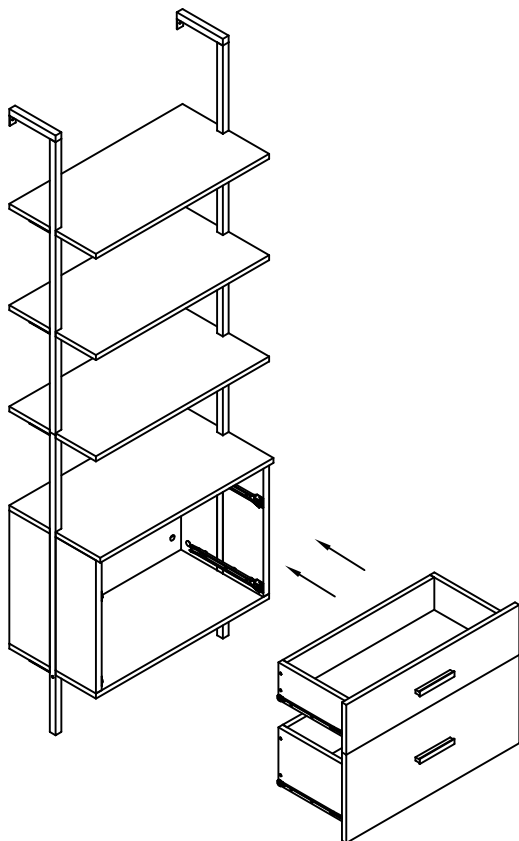


20

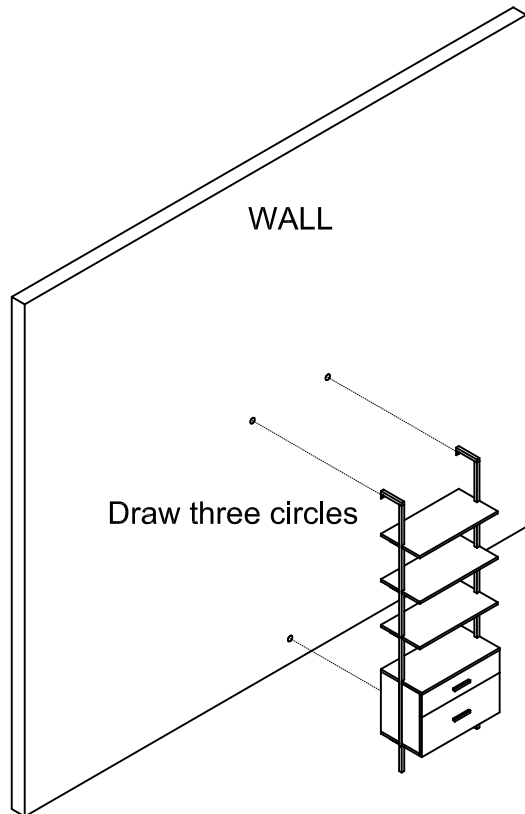

21

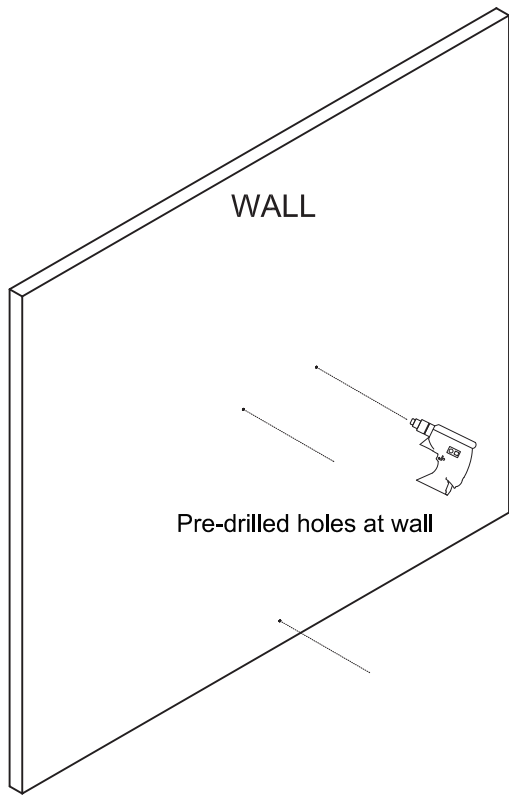


22

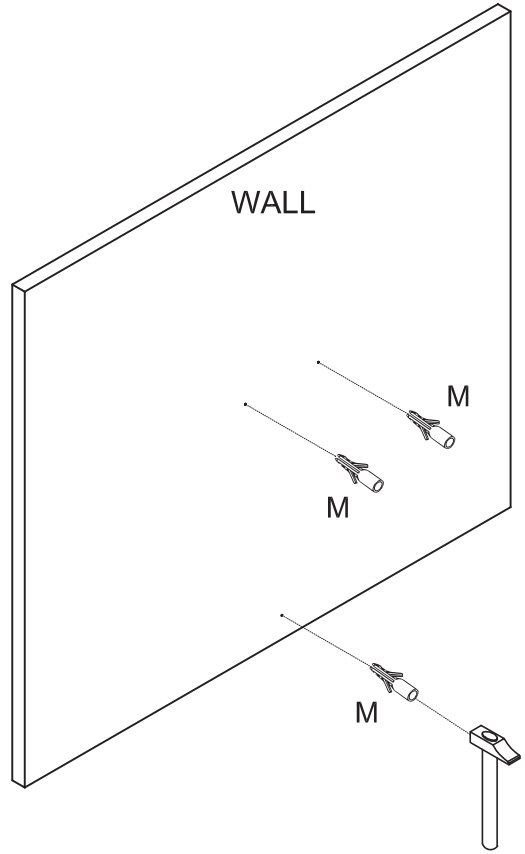

M X3

23

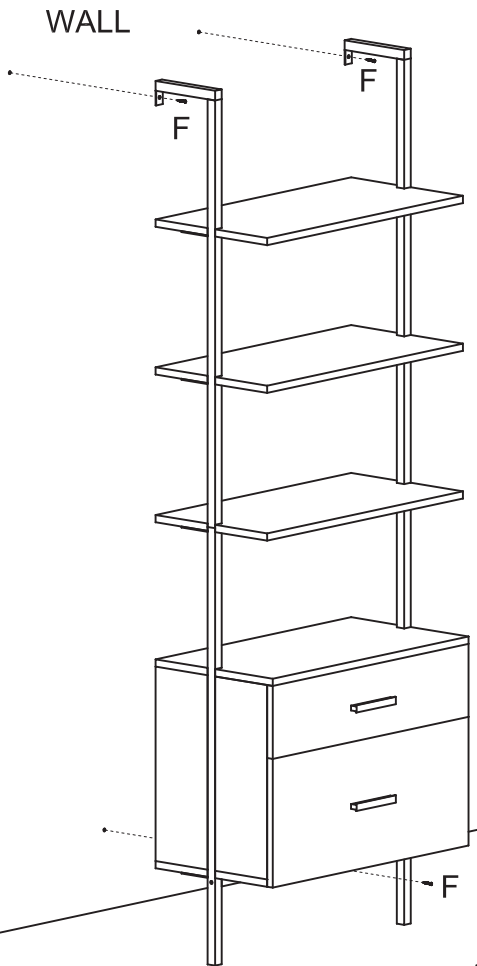

F X3

