

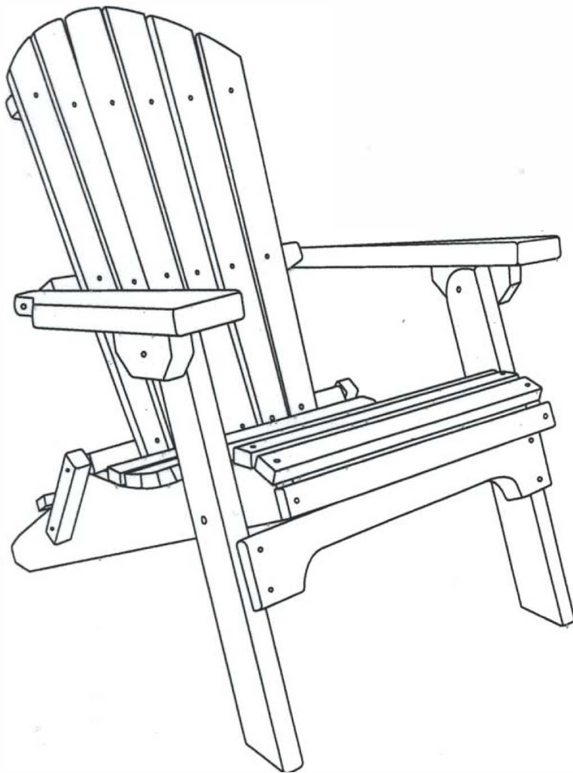



Folding Adirondack Chair


Assembly Instructions

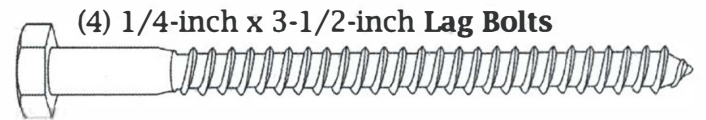

Parts List



(26) 1/4-inch Washers

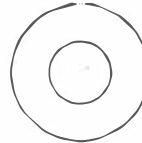


(6) 1/4-inch Locking Nuts



* Tools required: 7/16-inch wrench, hammer, #2 square driver bit

1. Armrest to Front Leg Assembly

Select proper armrest. (Straight edge goes towards seat)
Insert a machine bolt through seat-side hole of front leg near rounded end. Place one washer on bolt before attaching leg to block beneath armrest. A second washer is placed on the bolt before a locking nut. Repeat on other side.

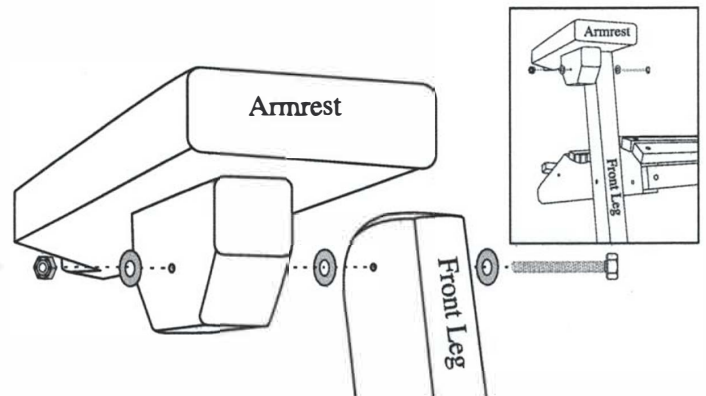

2. Front Leg to Seat Assembly

Insert a machine bolt through outside center hole of front leg. Place one washer on bolt before attaching leg to front hole of seat assembly. A second washer is placed on the bolt before a locking nut. Repeat on other side.

