















Estimated Assembly Time: 30 Mins

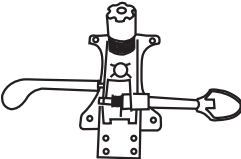
Assembly instructions

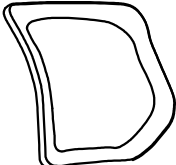PARTS


① X 1	A.M6*25 X 4
	
② X 1	B.M8*25 X 4
	
③ X 1	C.M8*30 X 4
	
④ X 1	D.X 4
	
⑤ X 1	E.X 1
	
⑥ X 1	F.X 5
	
	G.X 2
	
	H.X 2
	

NOTICE:
 EVERY 6 MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.


STEP 1

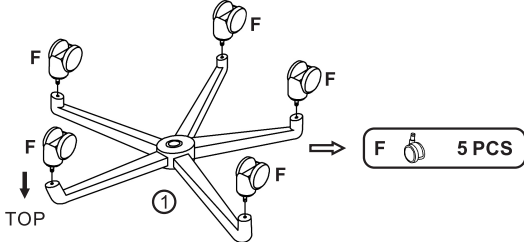


STEP 2

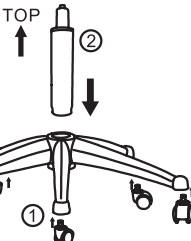


STEP 3

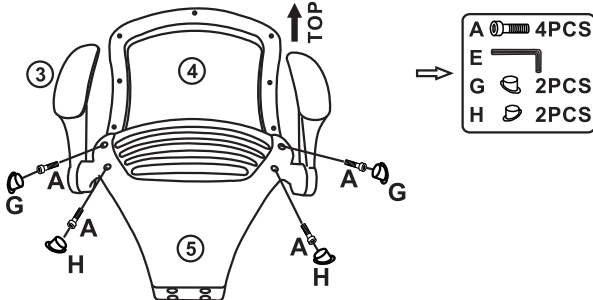

STEP 4

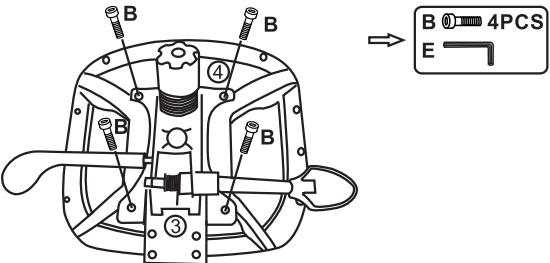

STEP 5

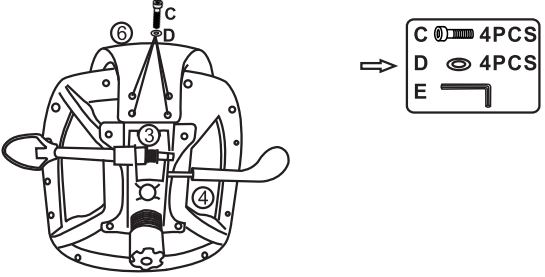

STEP 6

