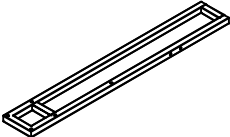


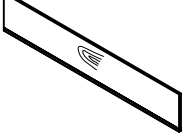
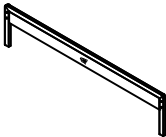
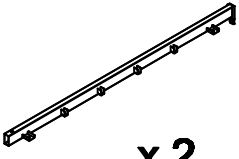
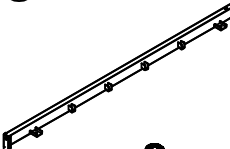













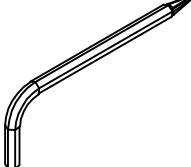
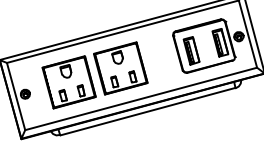


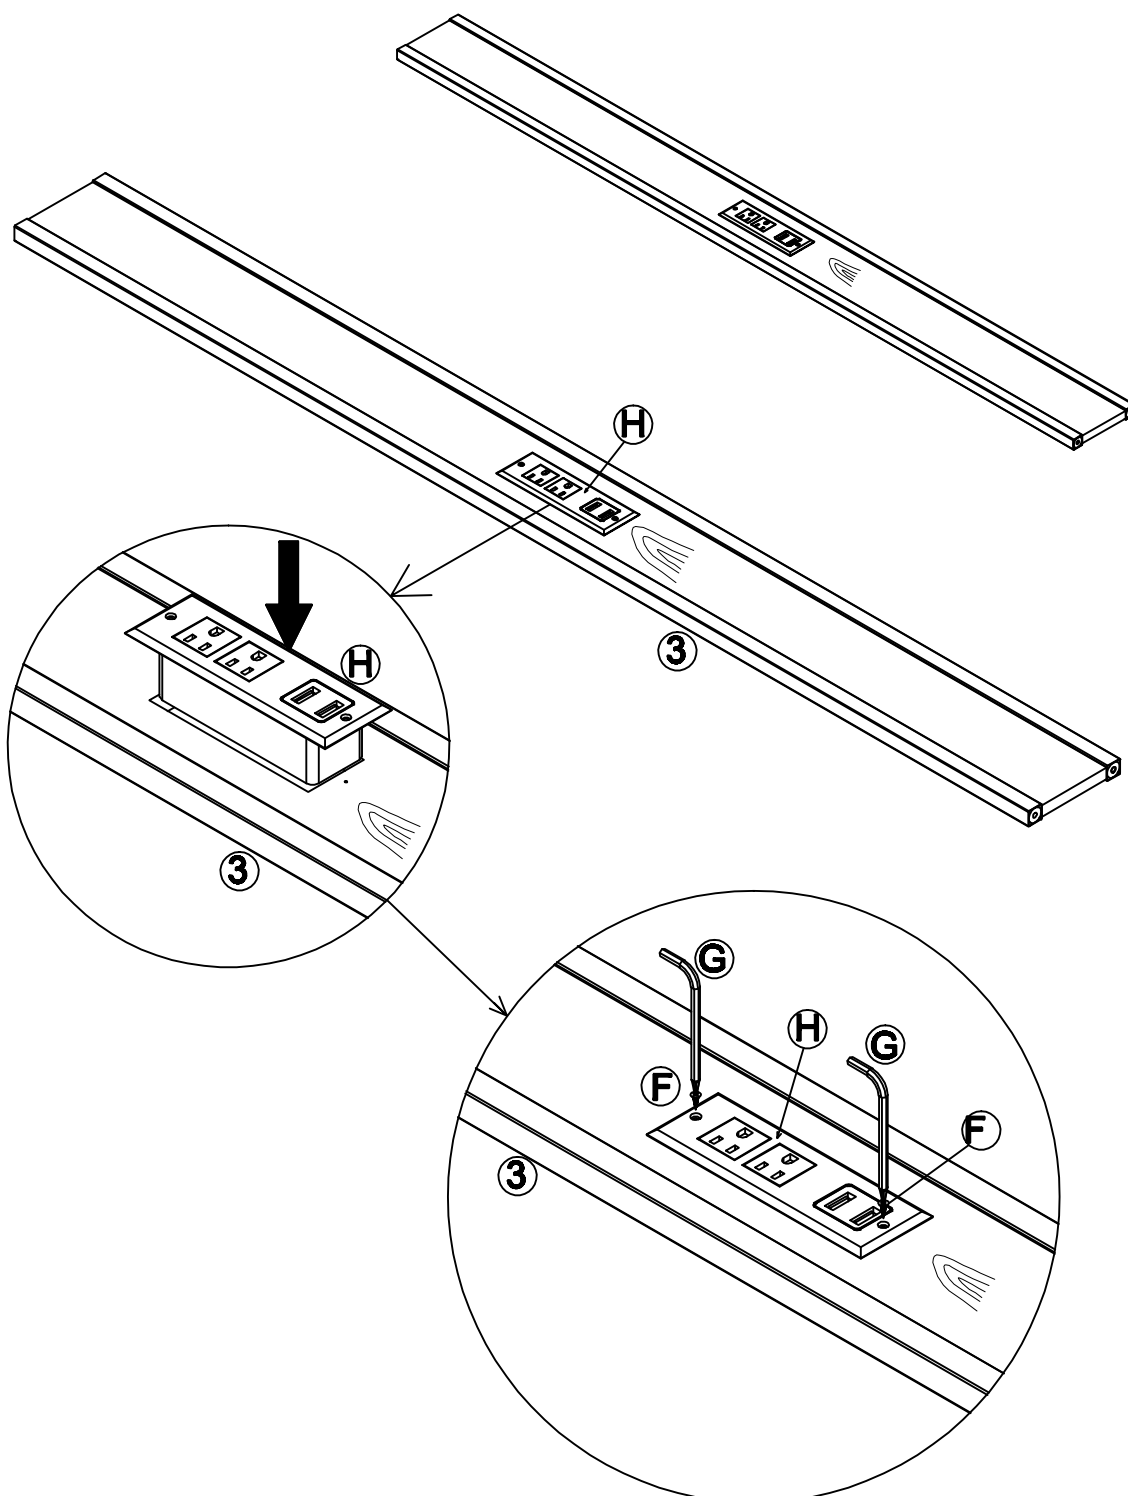


Please don't tighten the screws completely
and go back later for a final tightening of all the
screws after pieces are aligned with each other.



①  x 2	②  x 1	③  x 1	④  x 1	⑤  x 1	⑥  x 2
⑦  x 2	⑧  x 2	⑨  x 4	⑩  x 1	⑪  x 2	⑫  x 1
⑬  x 2	⑭  x 8				
A  M6 x 12 mm x4		B  M6 x 25 mm x8		C  M6 x 35 mm x18	
D  M6 x 50 mm x6		E  M8 x 35 mm x8		F  Ø3x10mm x2	
G  4 # x1		H  x 1			

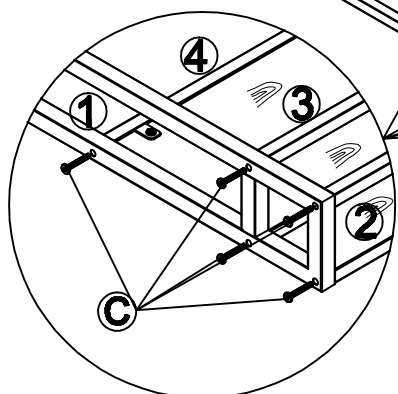
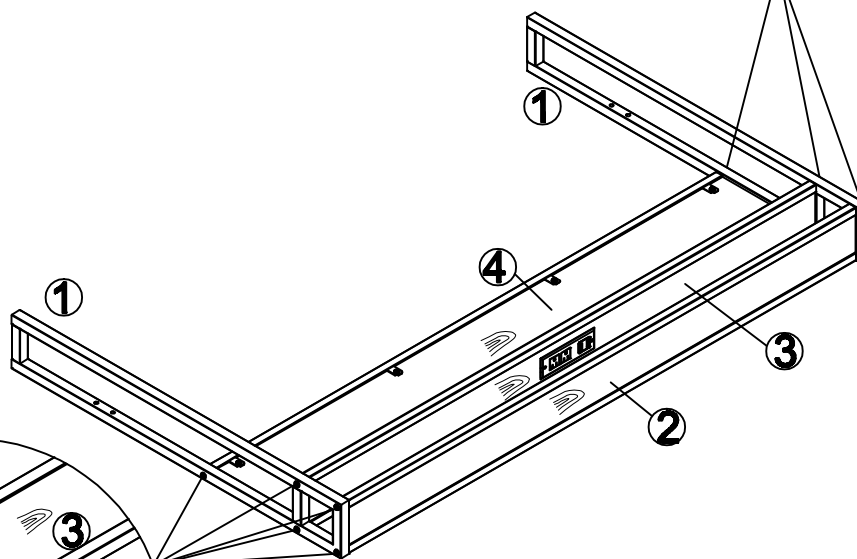
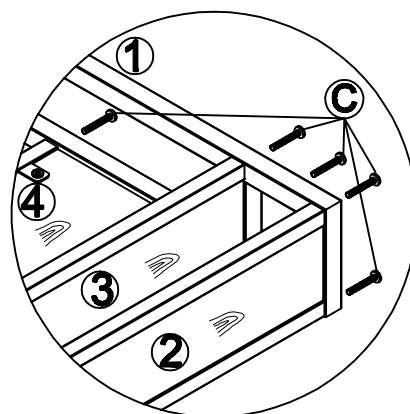
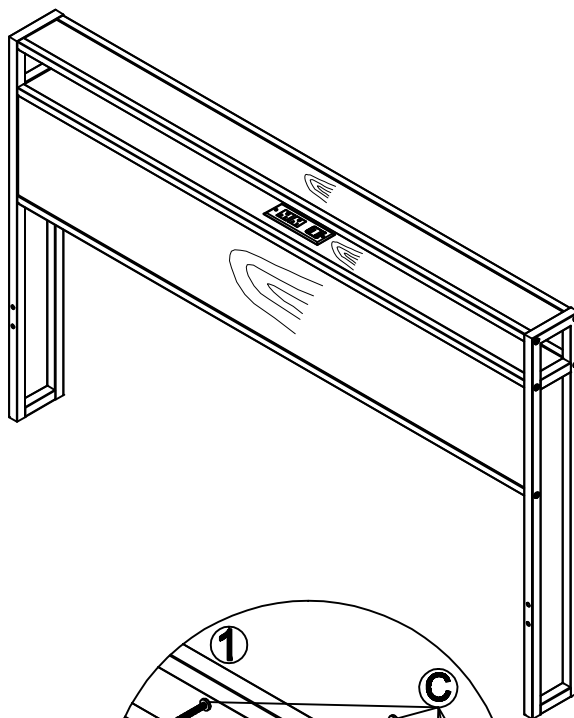
Step 1

F		Ø3x10mm	2pcs
G		4 #	1pcs





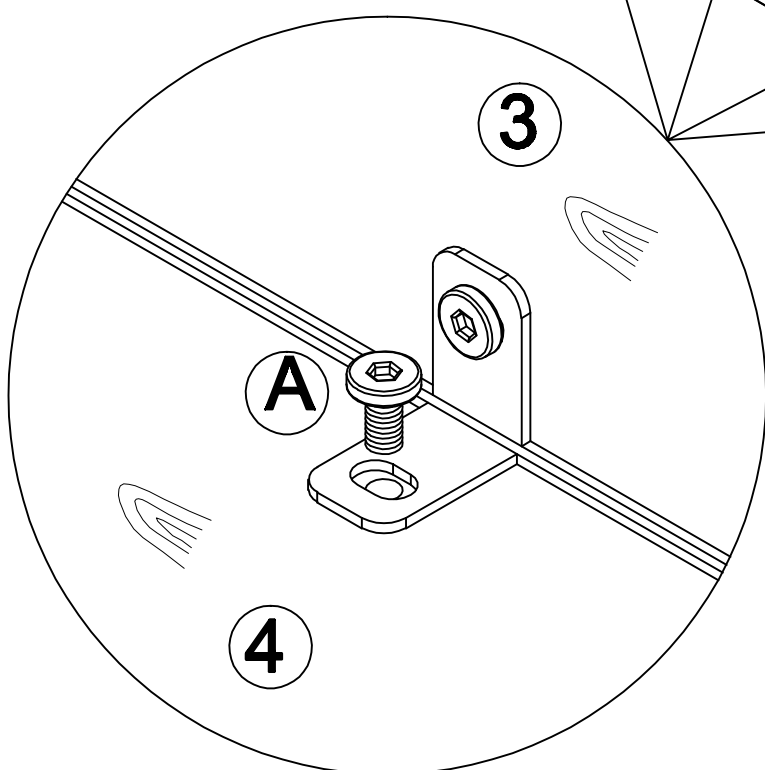
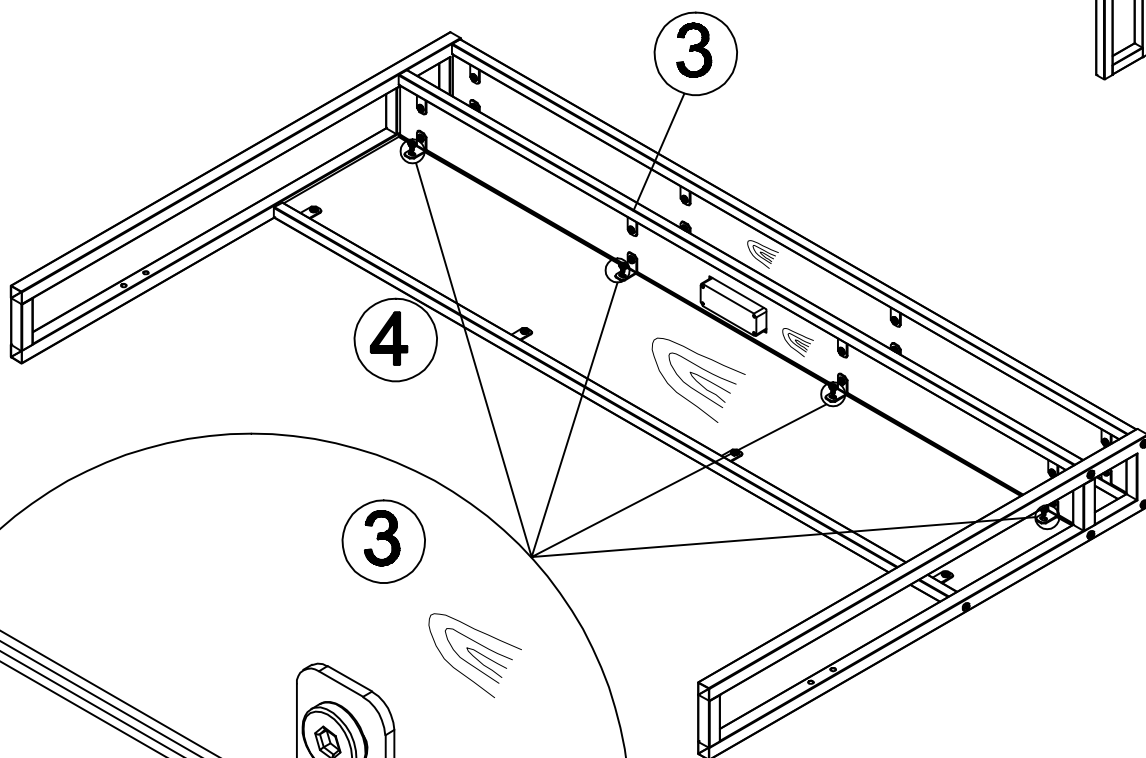
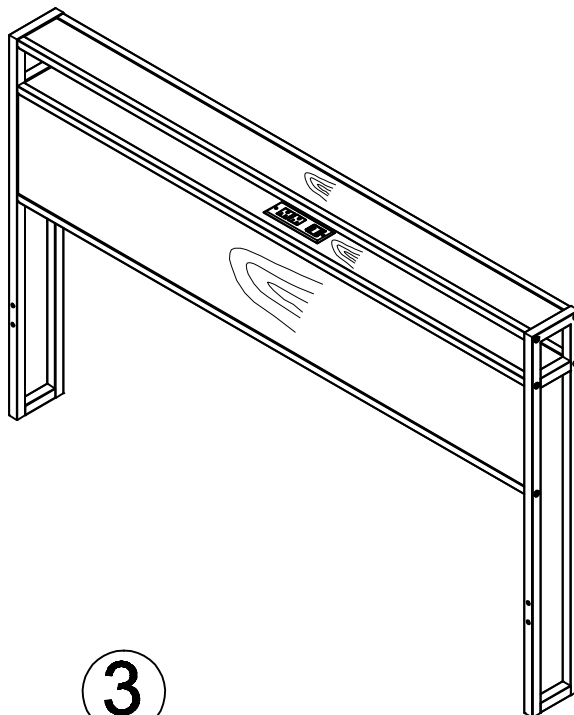
Step 2

C		M6 x 35	10pcs
G		4 #	1pcs






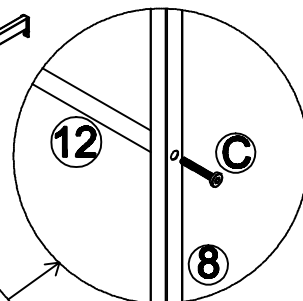
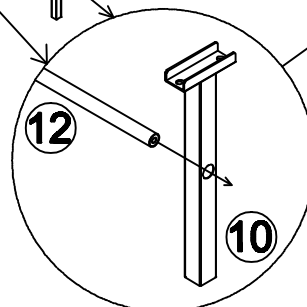
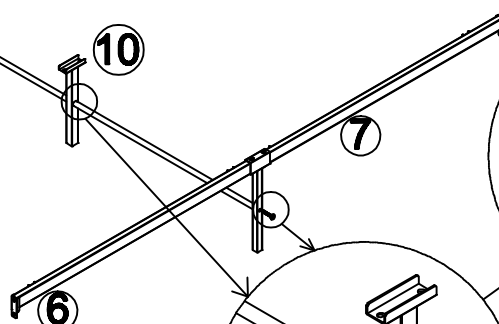
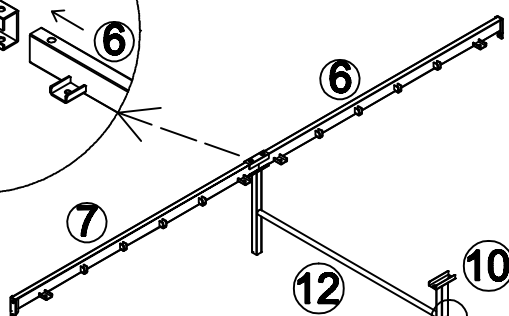
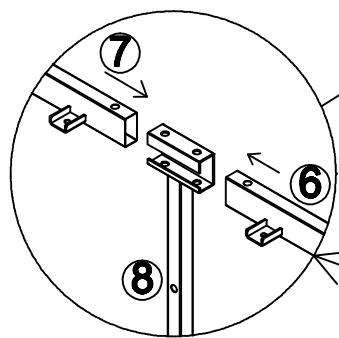
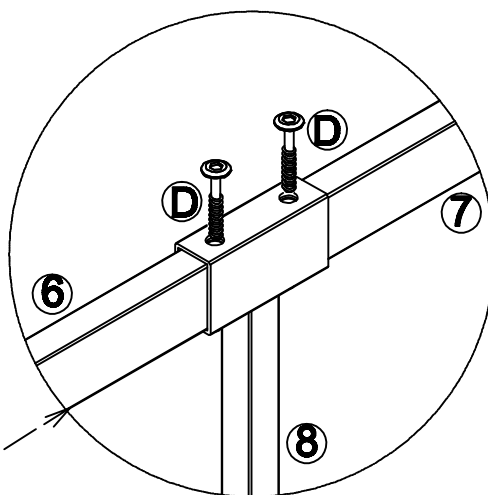
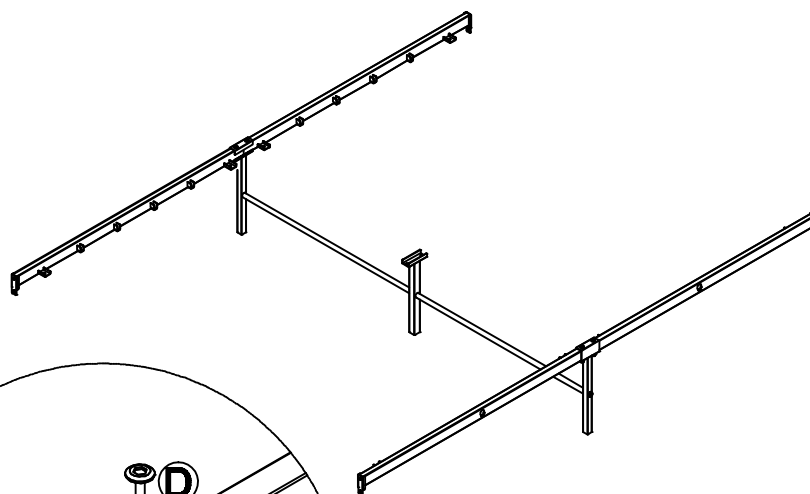
Step 3

A		M6 x 12	4pcs
G		4 #	1pcs





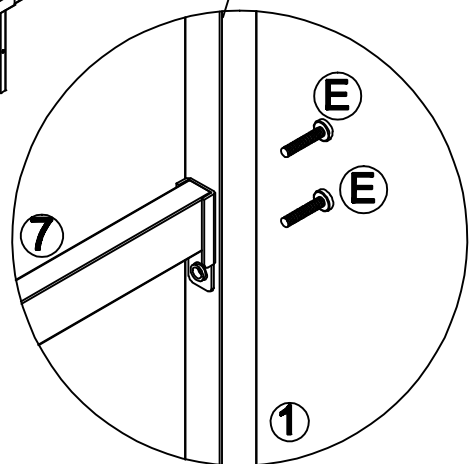
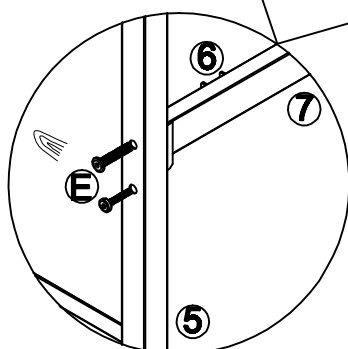
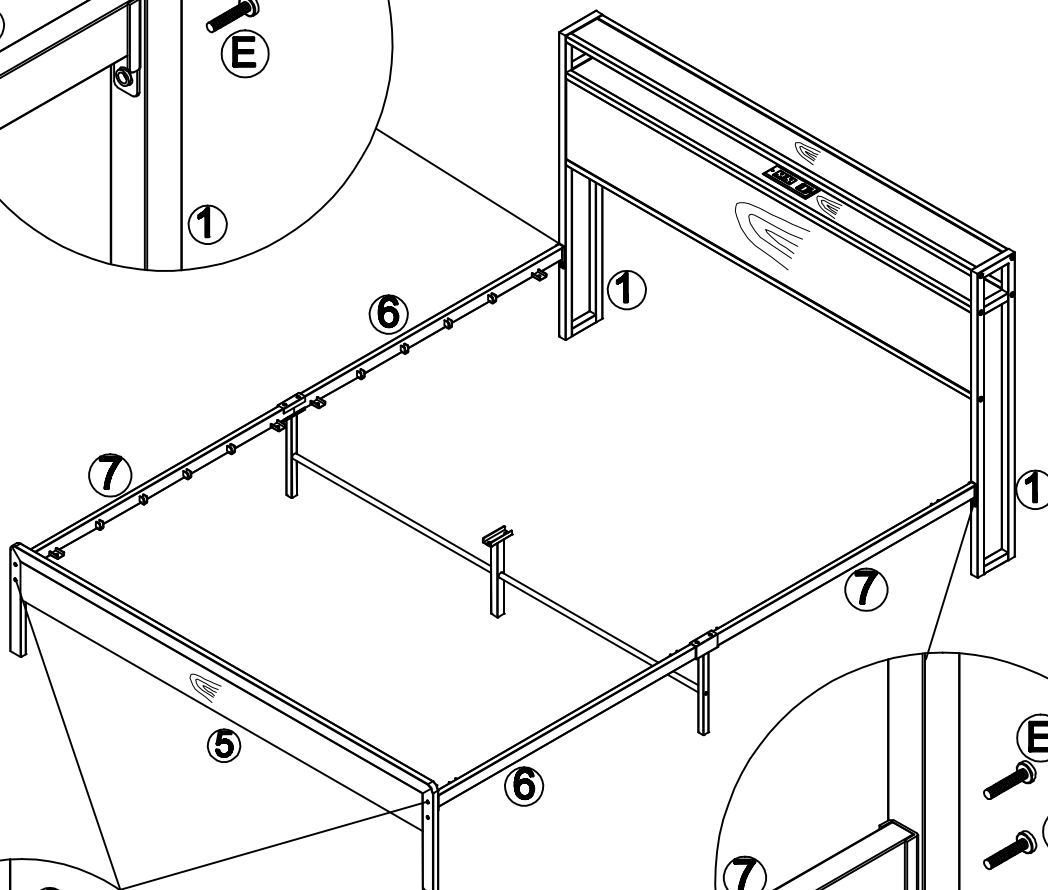
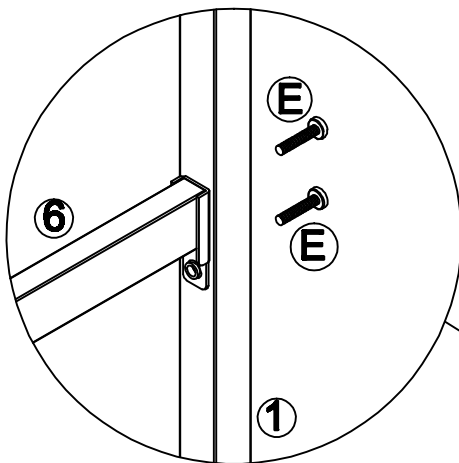
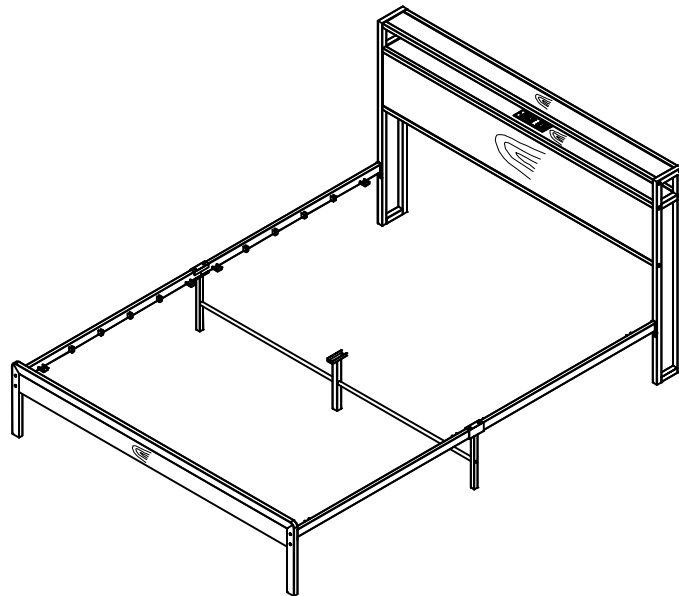
Step 4

C		M6 x 35	2pcs
D		M6 x 50	4pcs
G		4#	1pcs





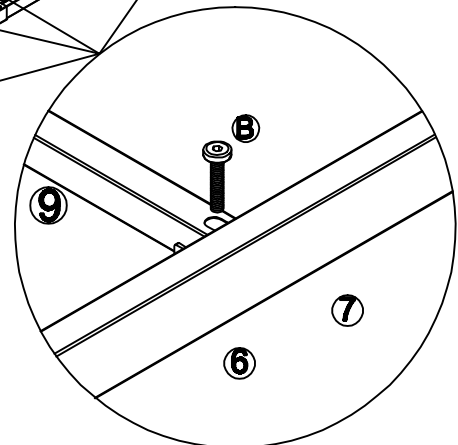
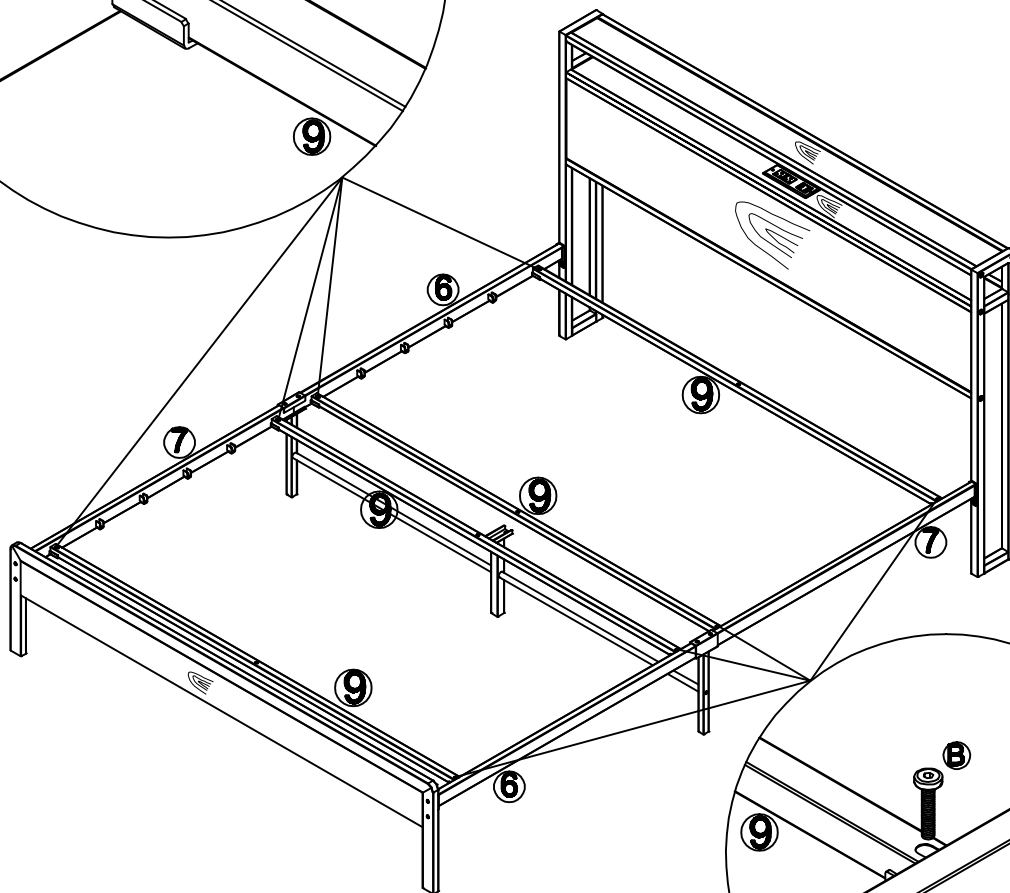
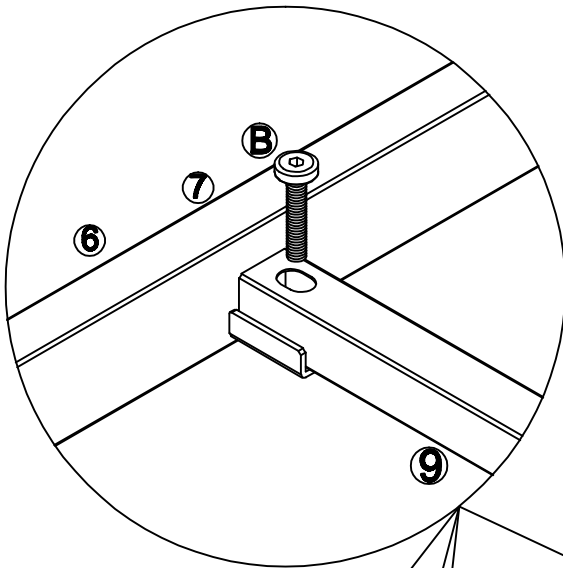
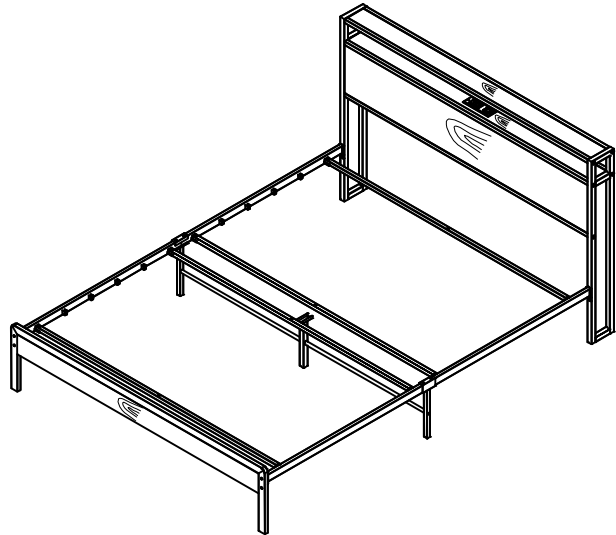
Step 5

E		M8 x 35	8pcs
G		4#	1pcs






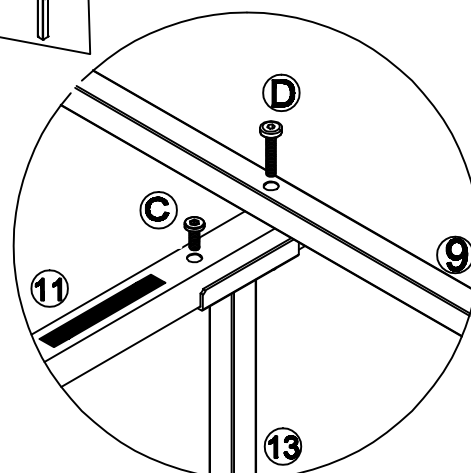
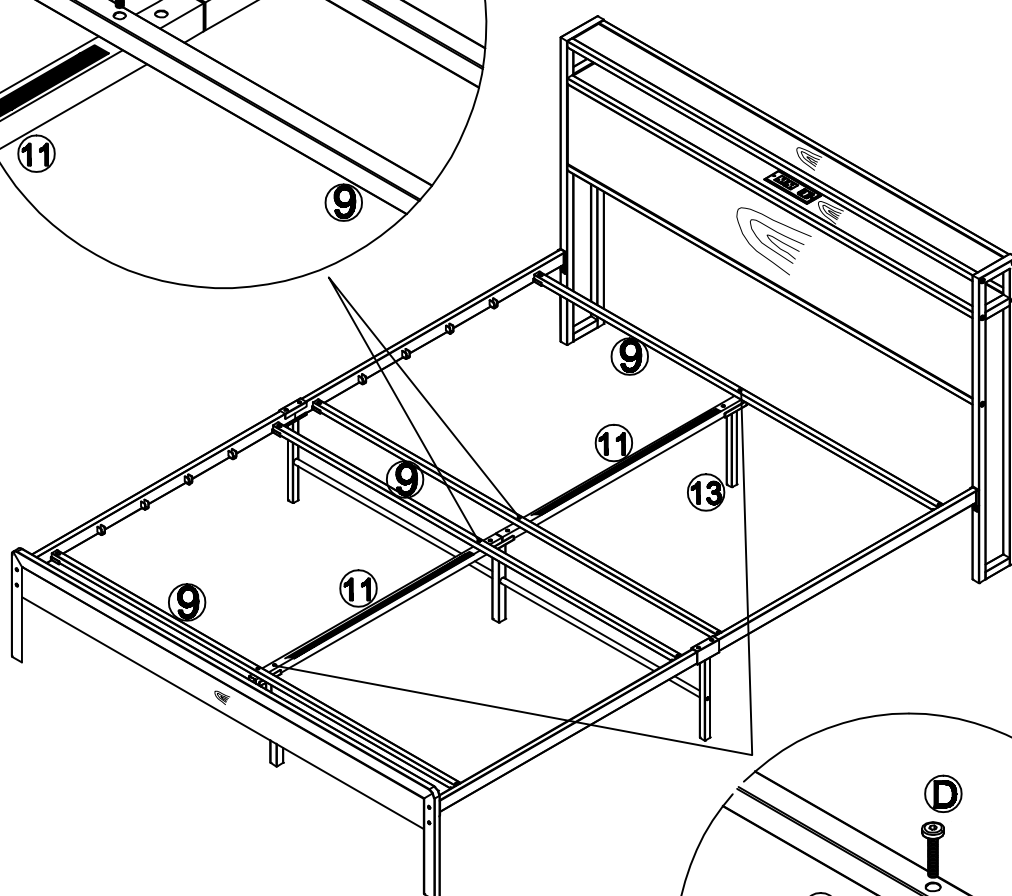
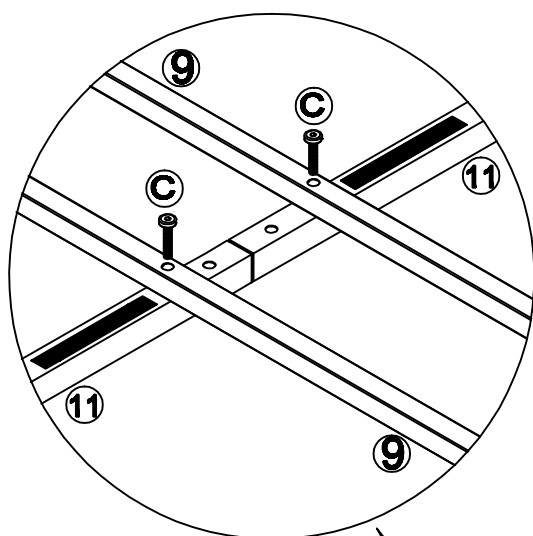
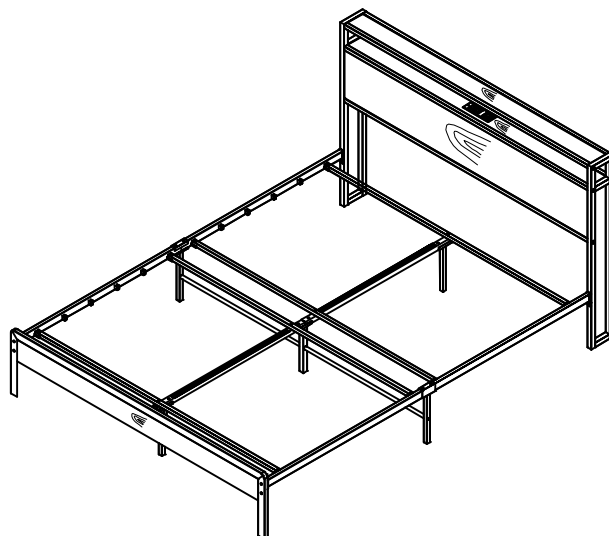
Step 6

B		M6 x 25	8pcs
G		4 #	1pcs





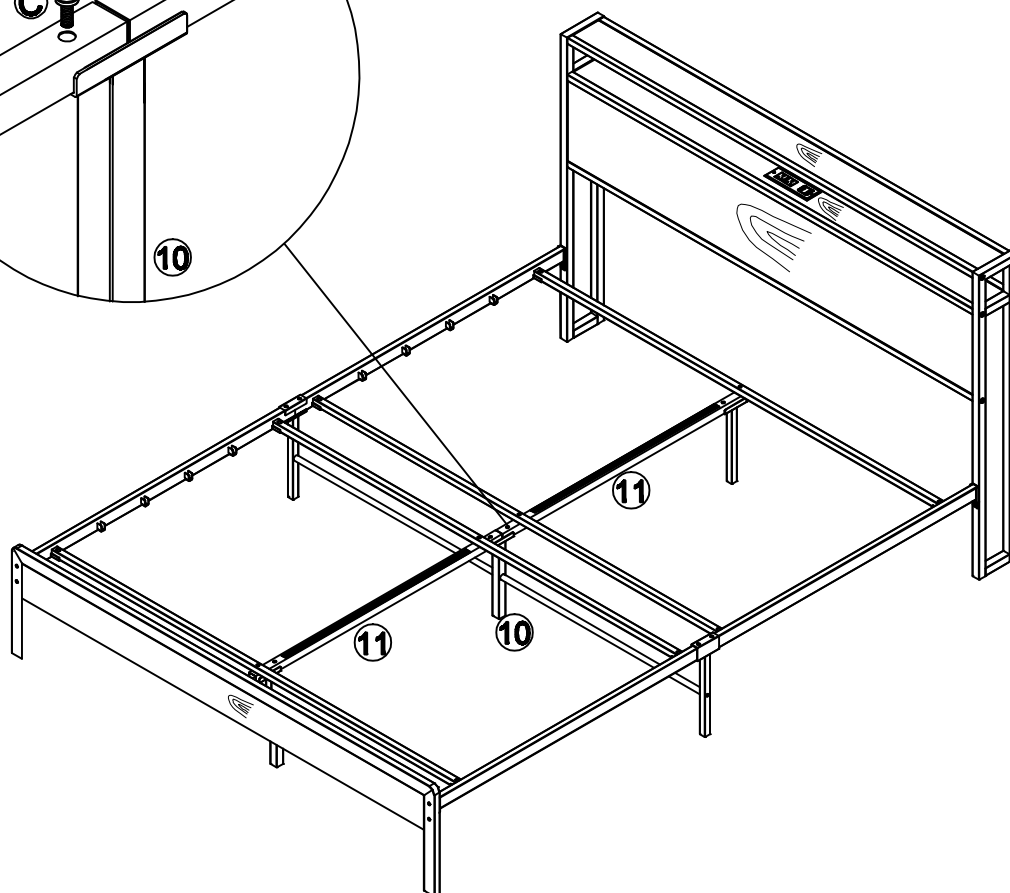
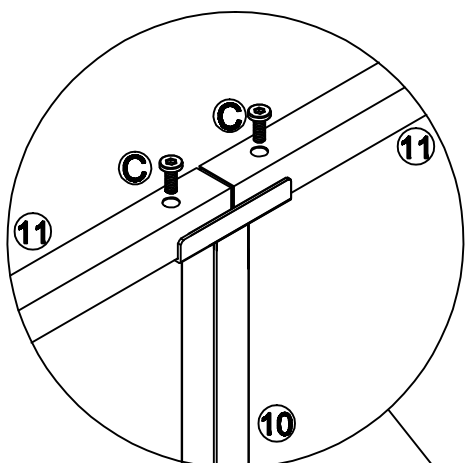
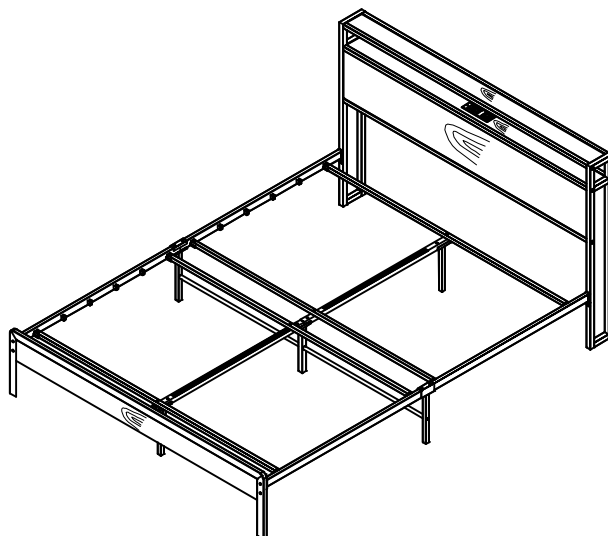
Step 7

C		M6 x 35	4pcs
D		M6 x 50	2pcs
G		4 #	1pcs



Step 8

C		M6 x 35	2pcs
G		4 #	1pcs



Step 9

