


Shoe Cabinet

Assembly Instruction

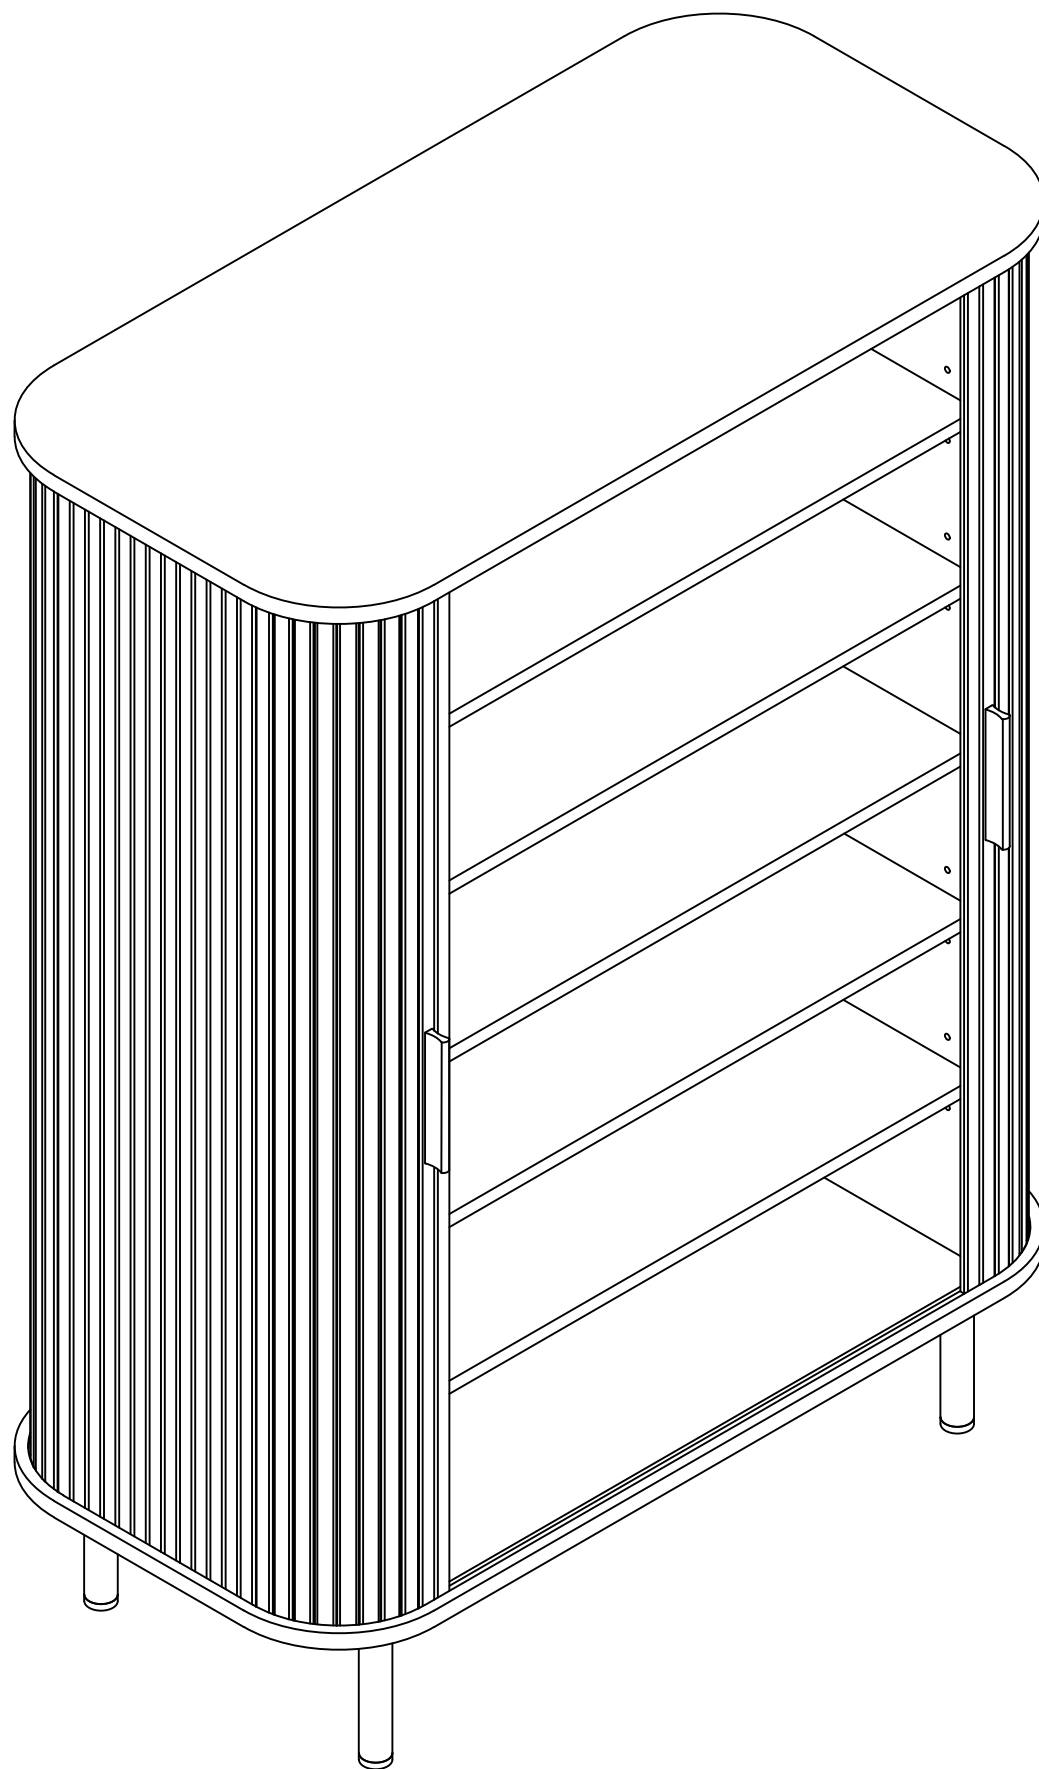

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.


PRECAUTIONS

1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product is relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. This product requires two people to install.
6. If you have any questions during installation, please contact the customer service in time.











*PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.

*IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.










Parts List

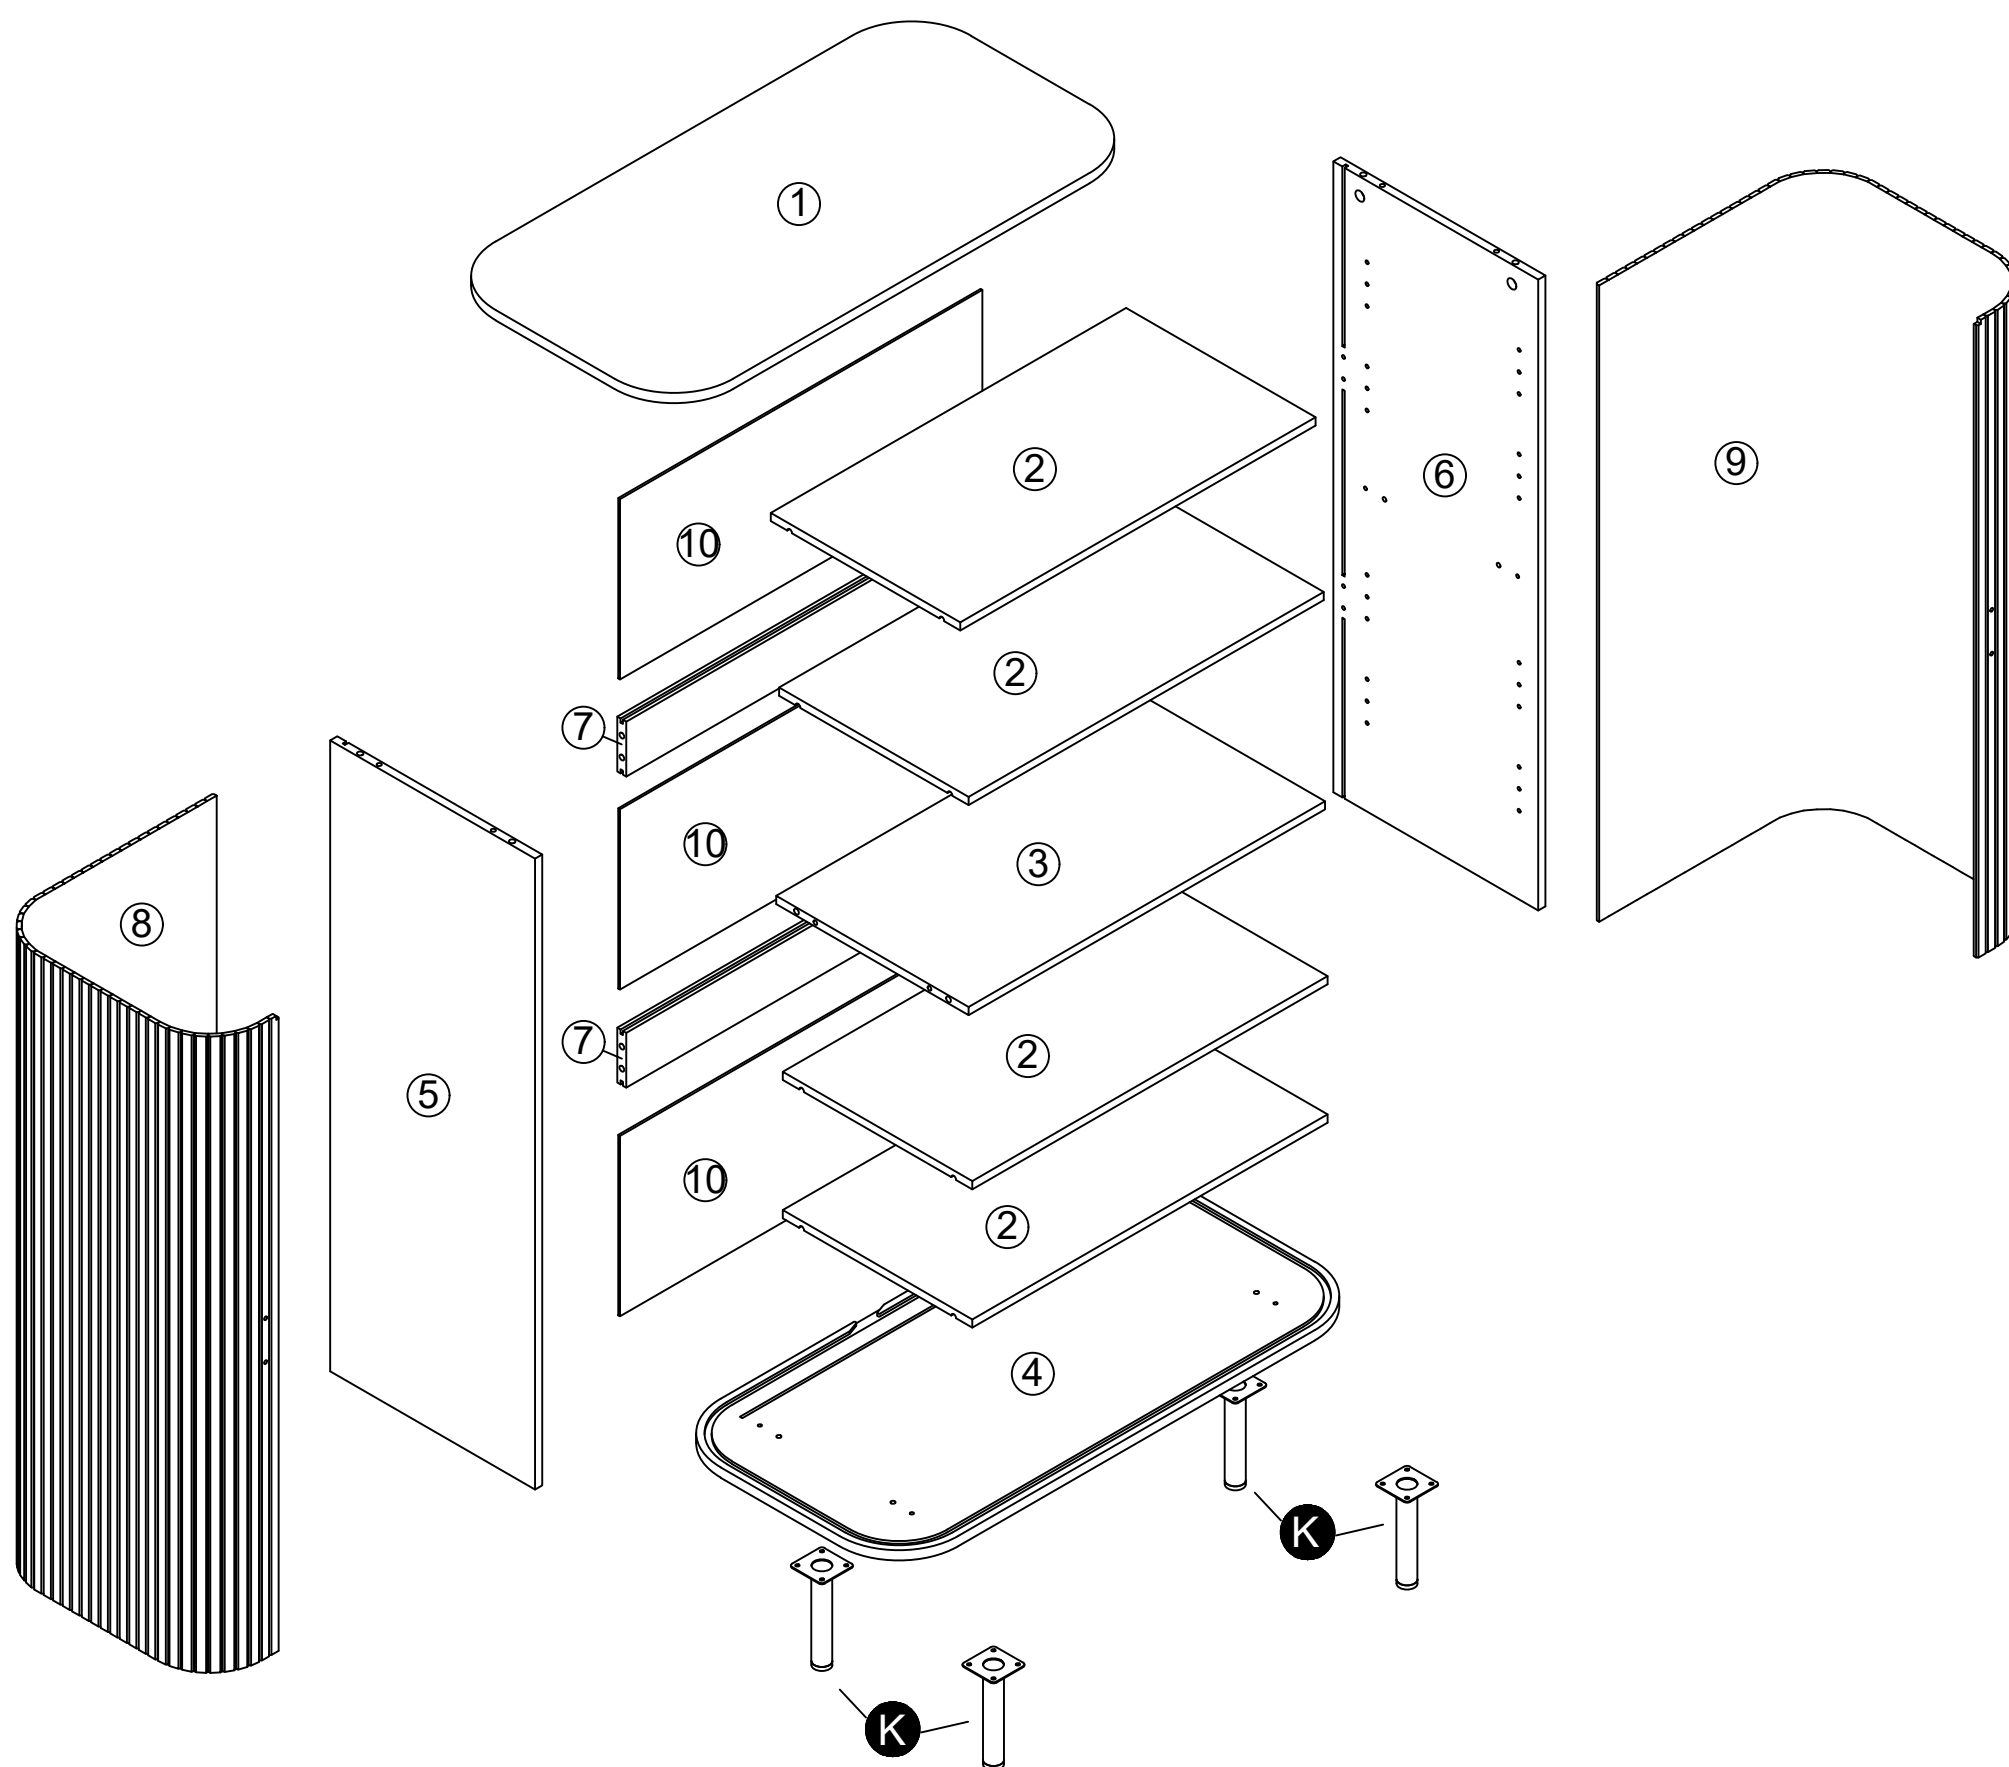


Parts List

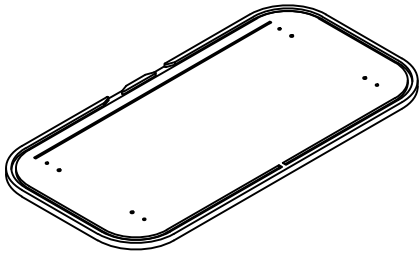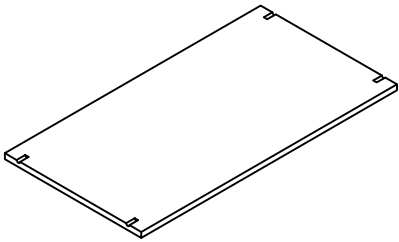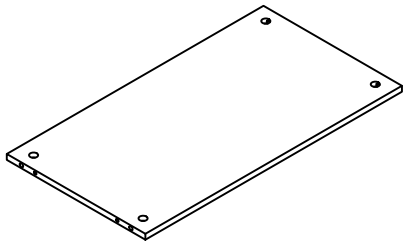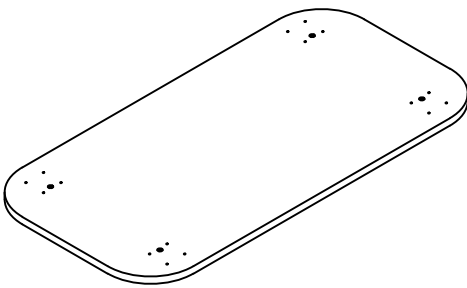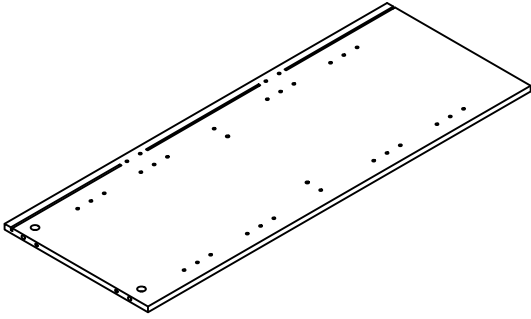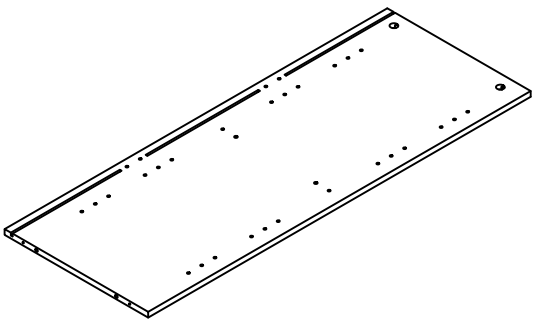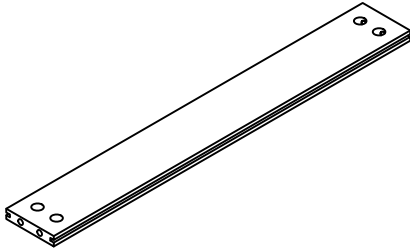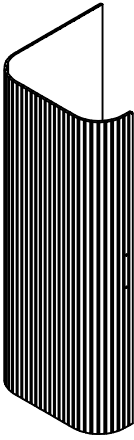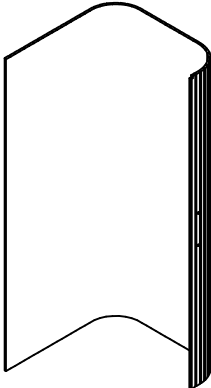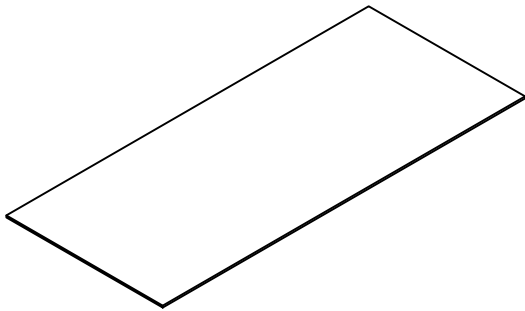①  X1	②  X4	③  X1
④  X1	⑤  X1	⑥  X1
⑦  X2	⑧  X1	⑨  X1
⑩  X3		





Hardware List

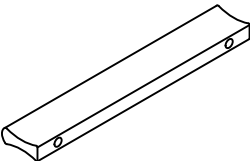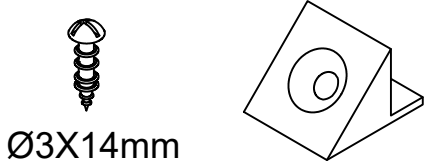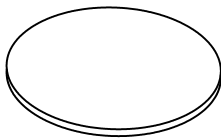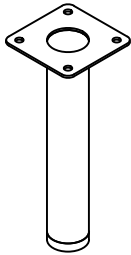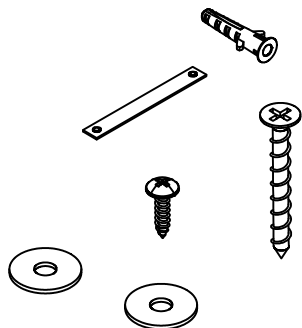A  Ø15X9.5mm X16	B  Ø6.5X35mm X16	C  Ø6X30mm X12
D  Ø4X35mm X4	E  Ø4X14mm X16	F  Ø4X9mm X4
G  106X16X8mm X2	H  Ø5X25mm X16	I  Ø3X14mm X12set
J  Ø21 X8	K  55X55X145(Ø25)mm X4	L  X2set

STEP1



B X12

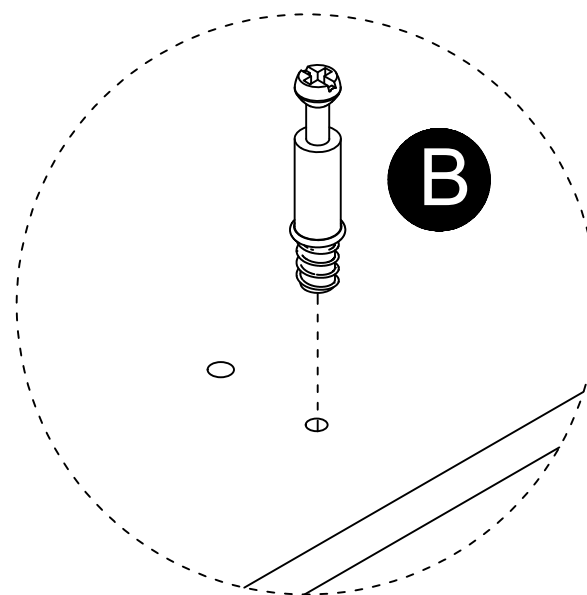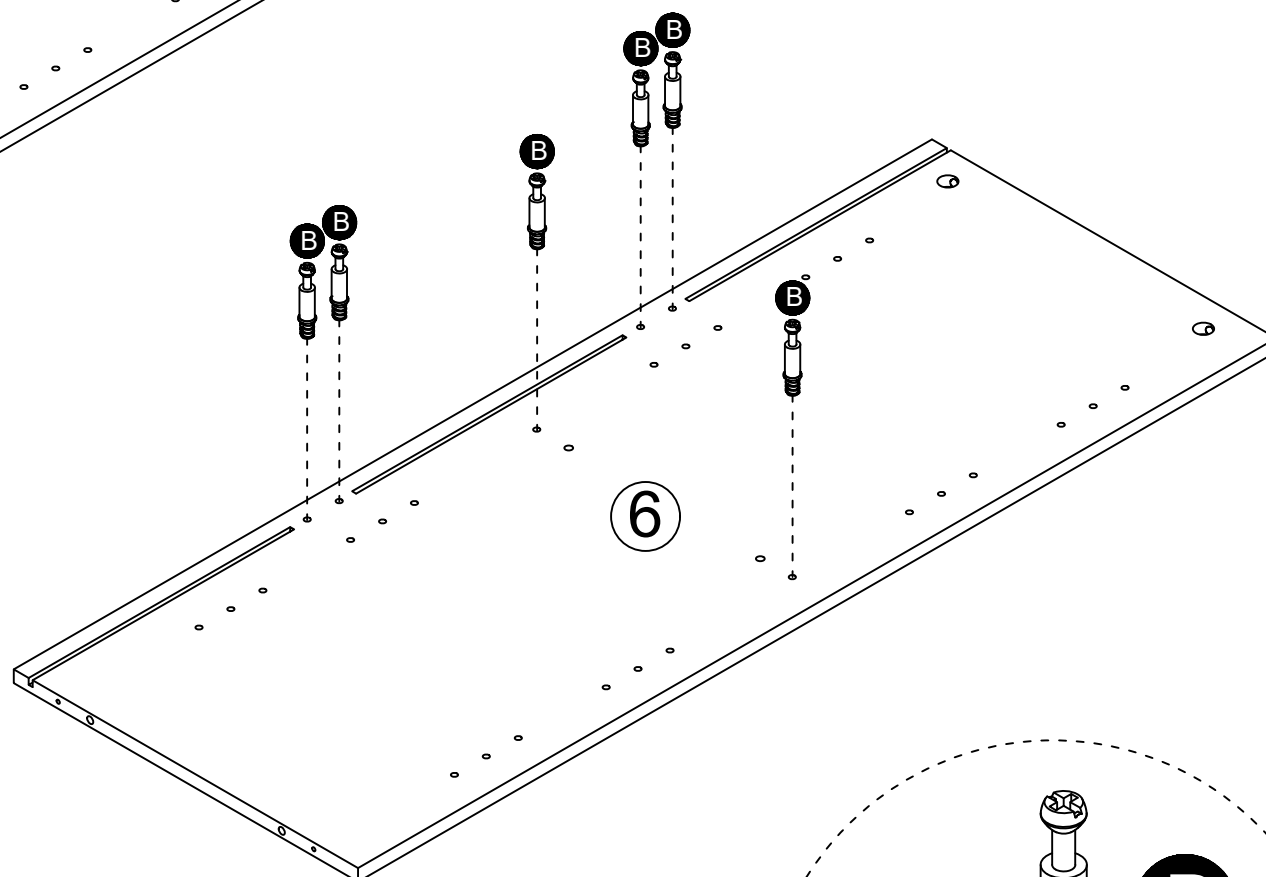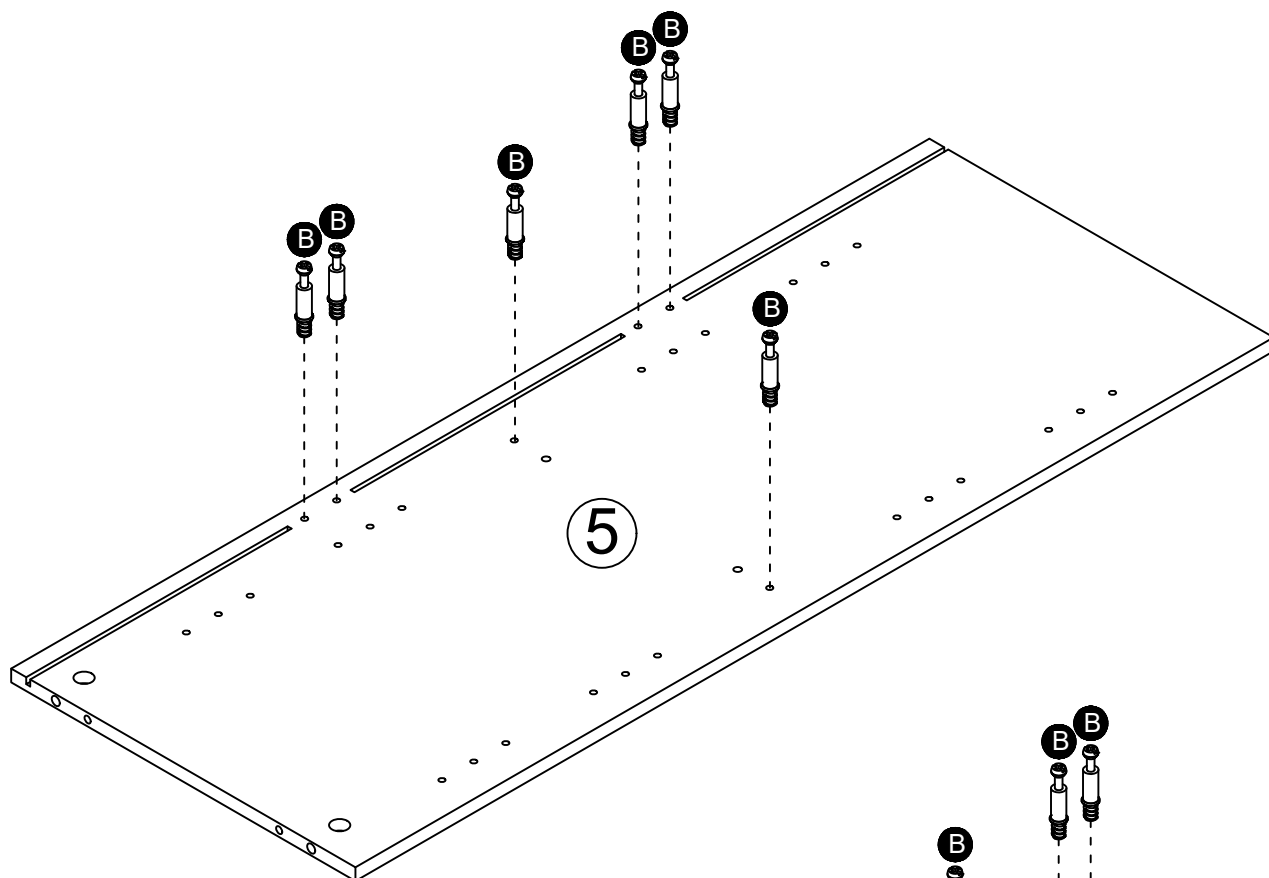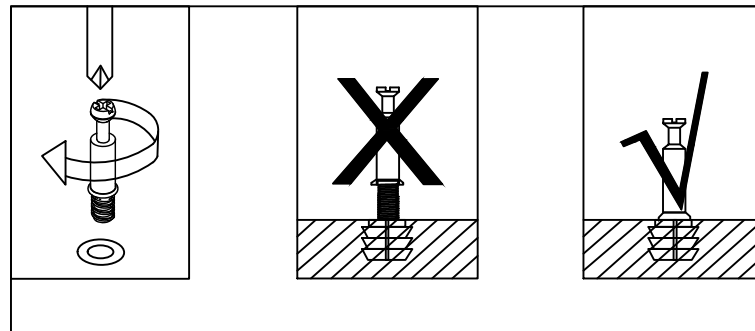



STEP 2




A X6



C X2

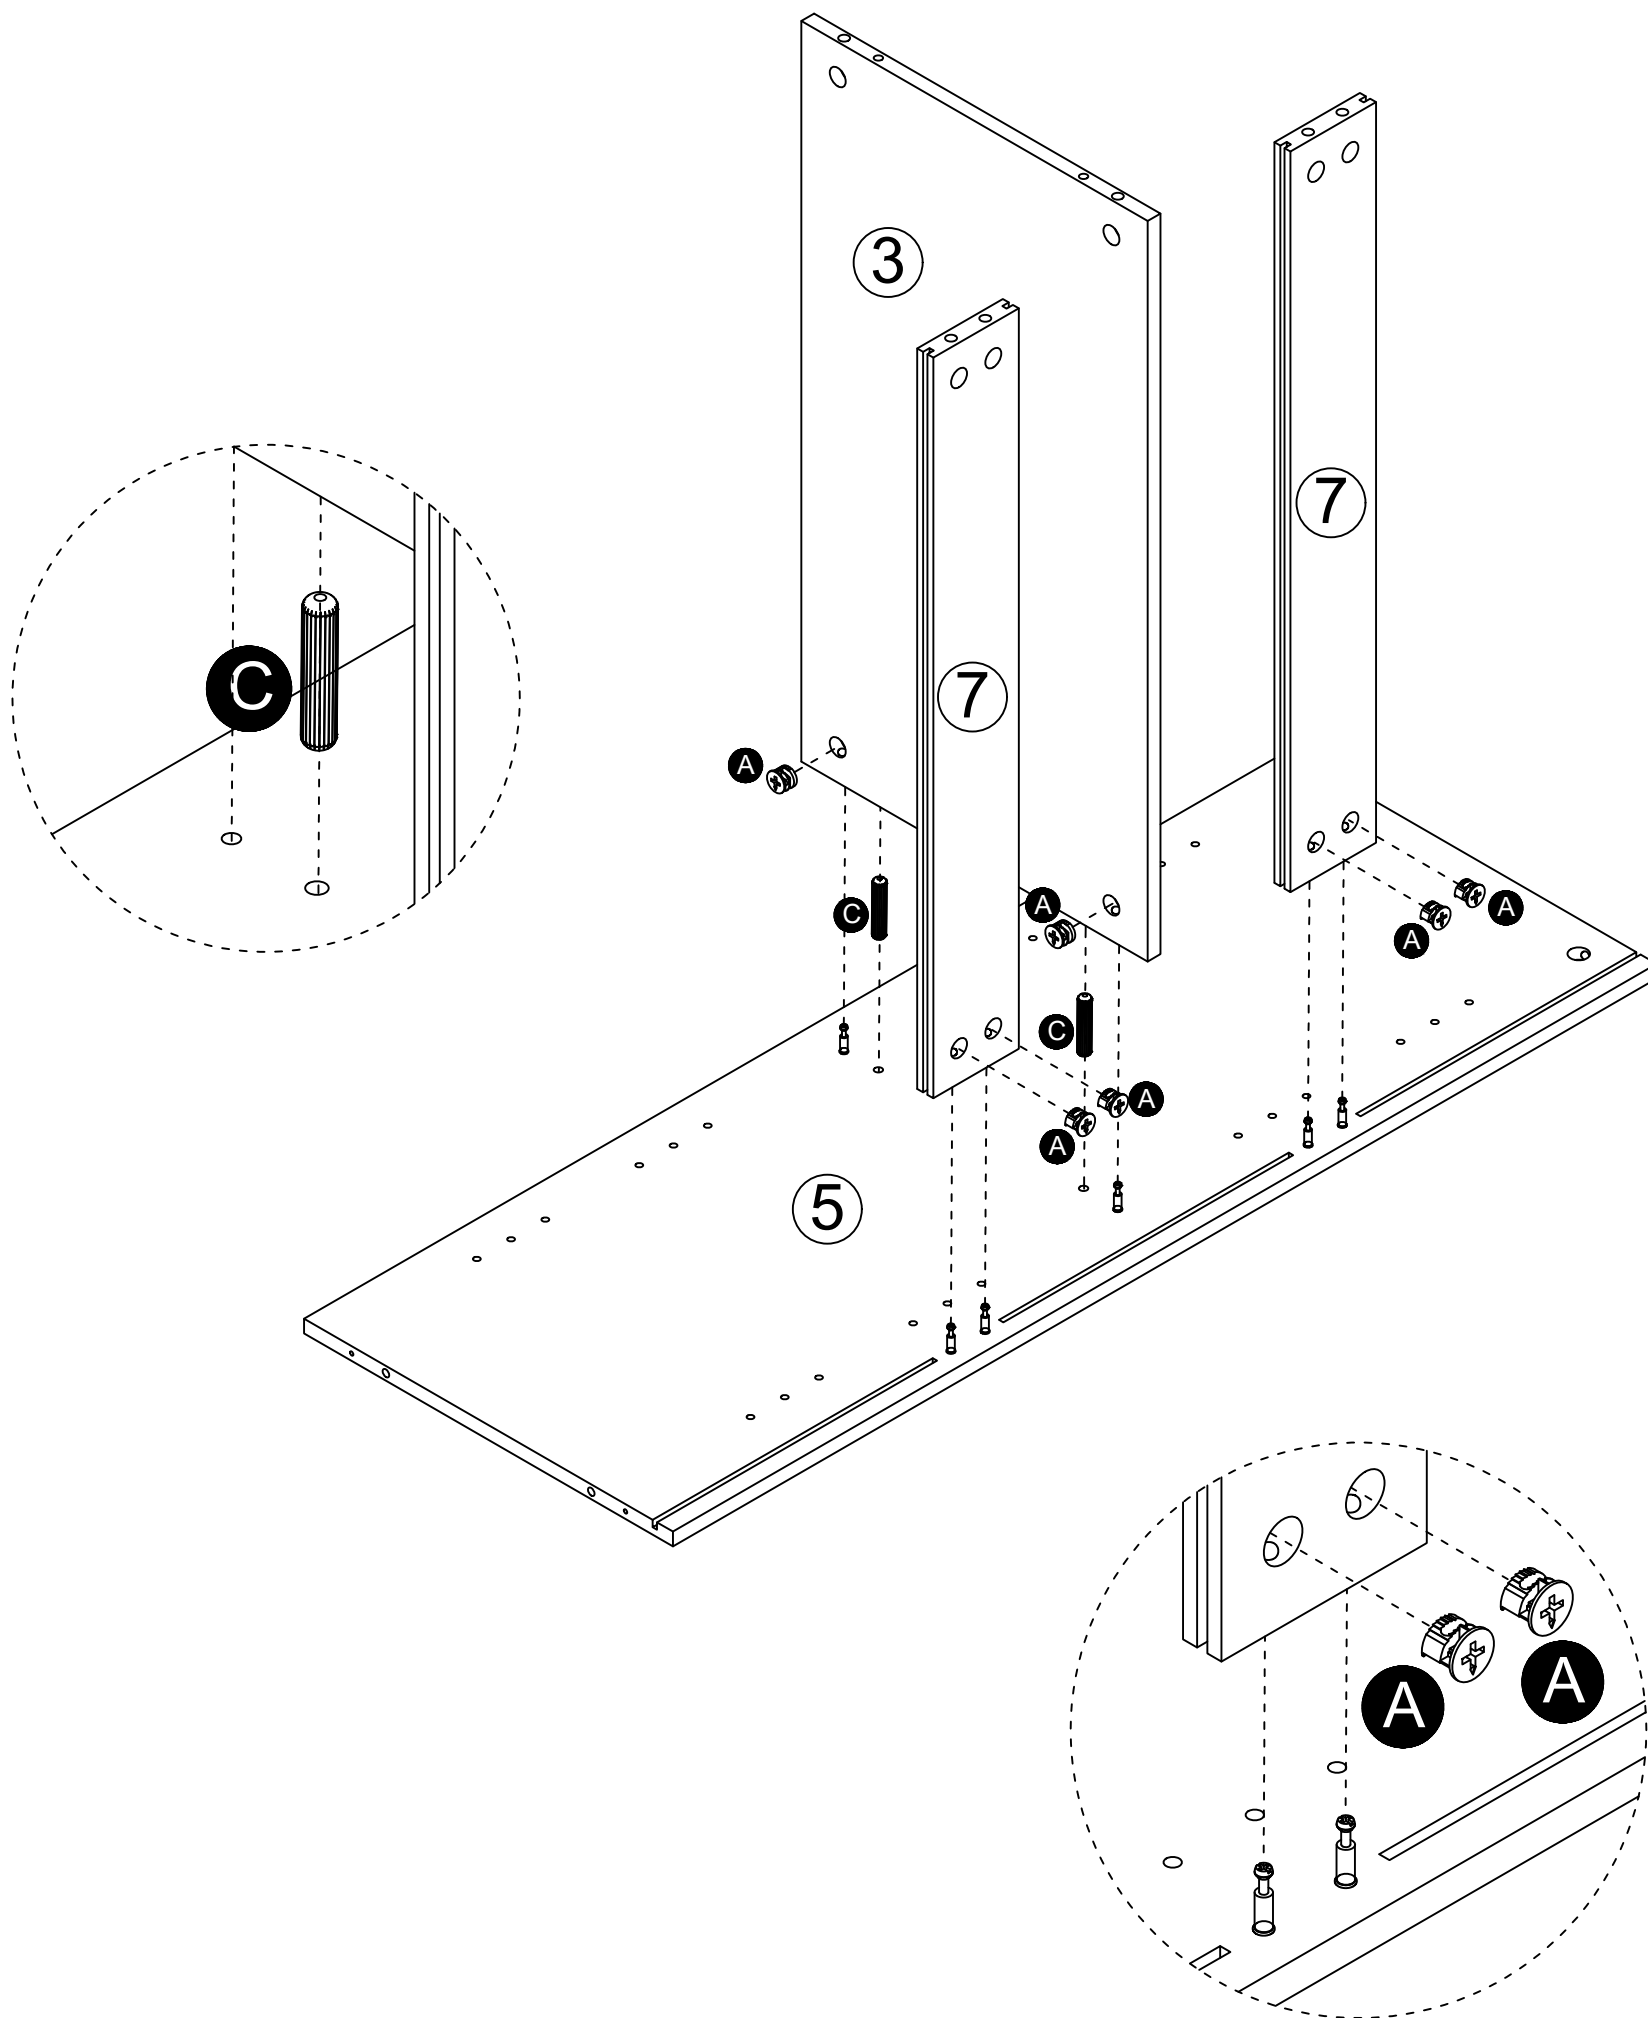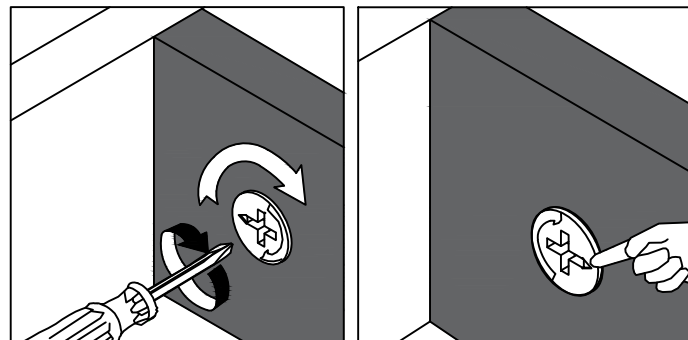

STEP3

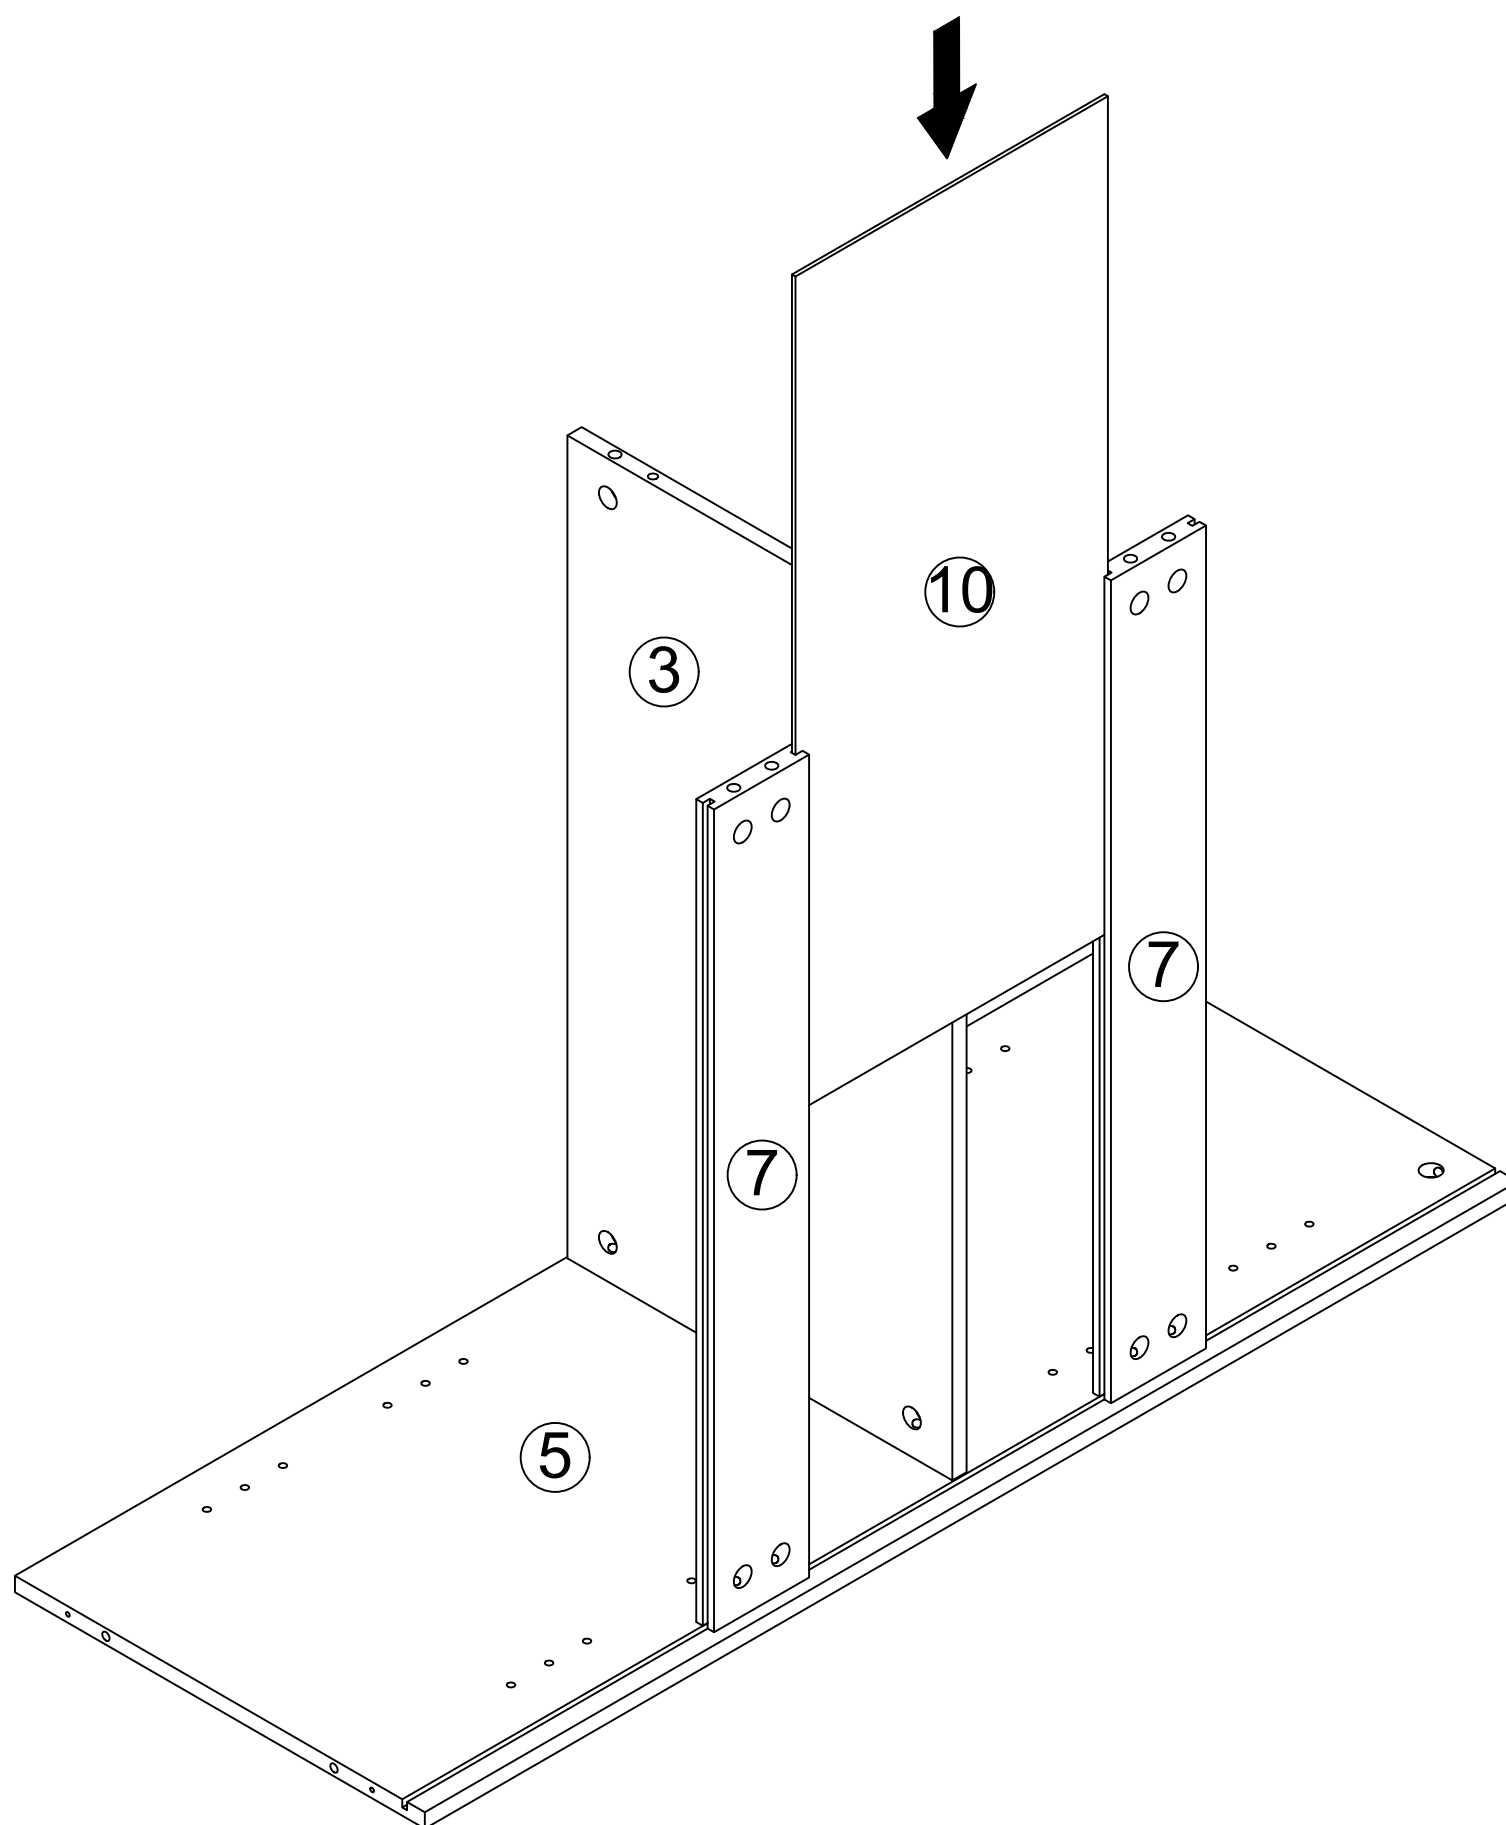



STEP4




A X6











C X2

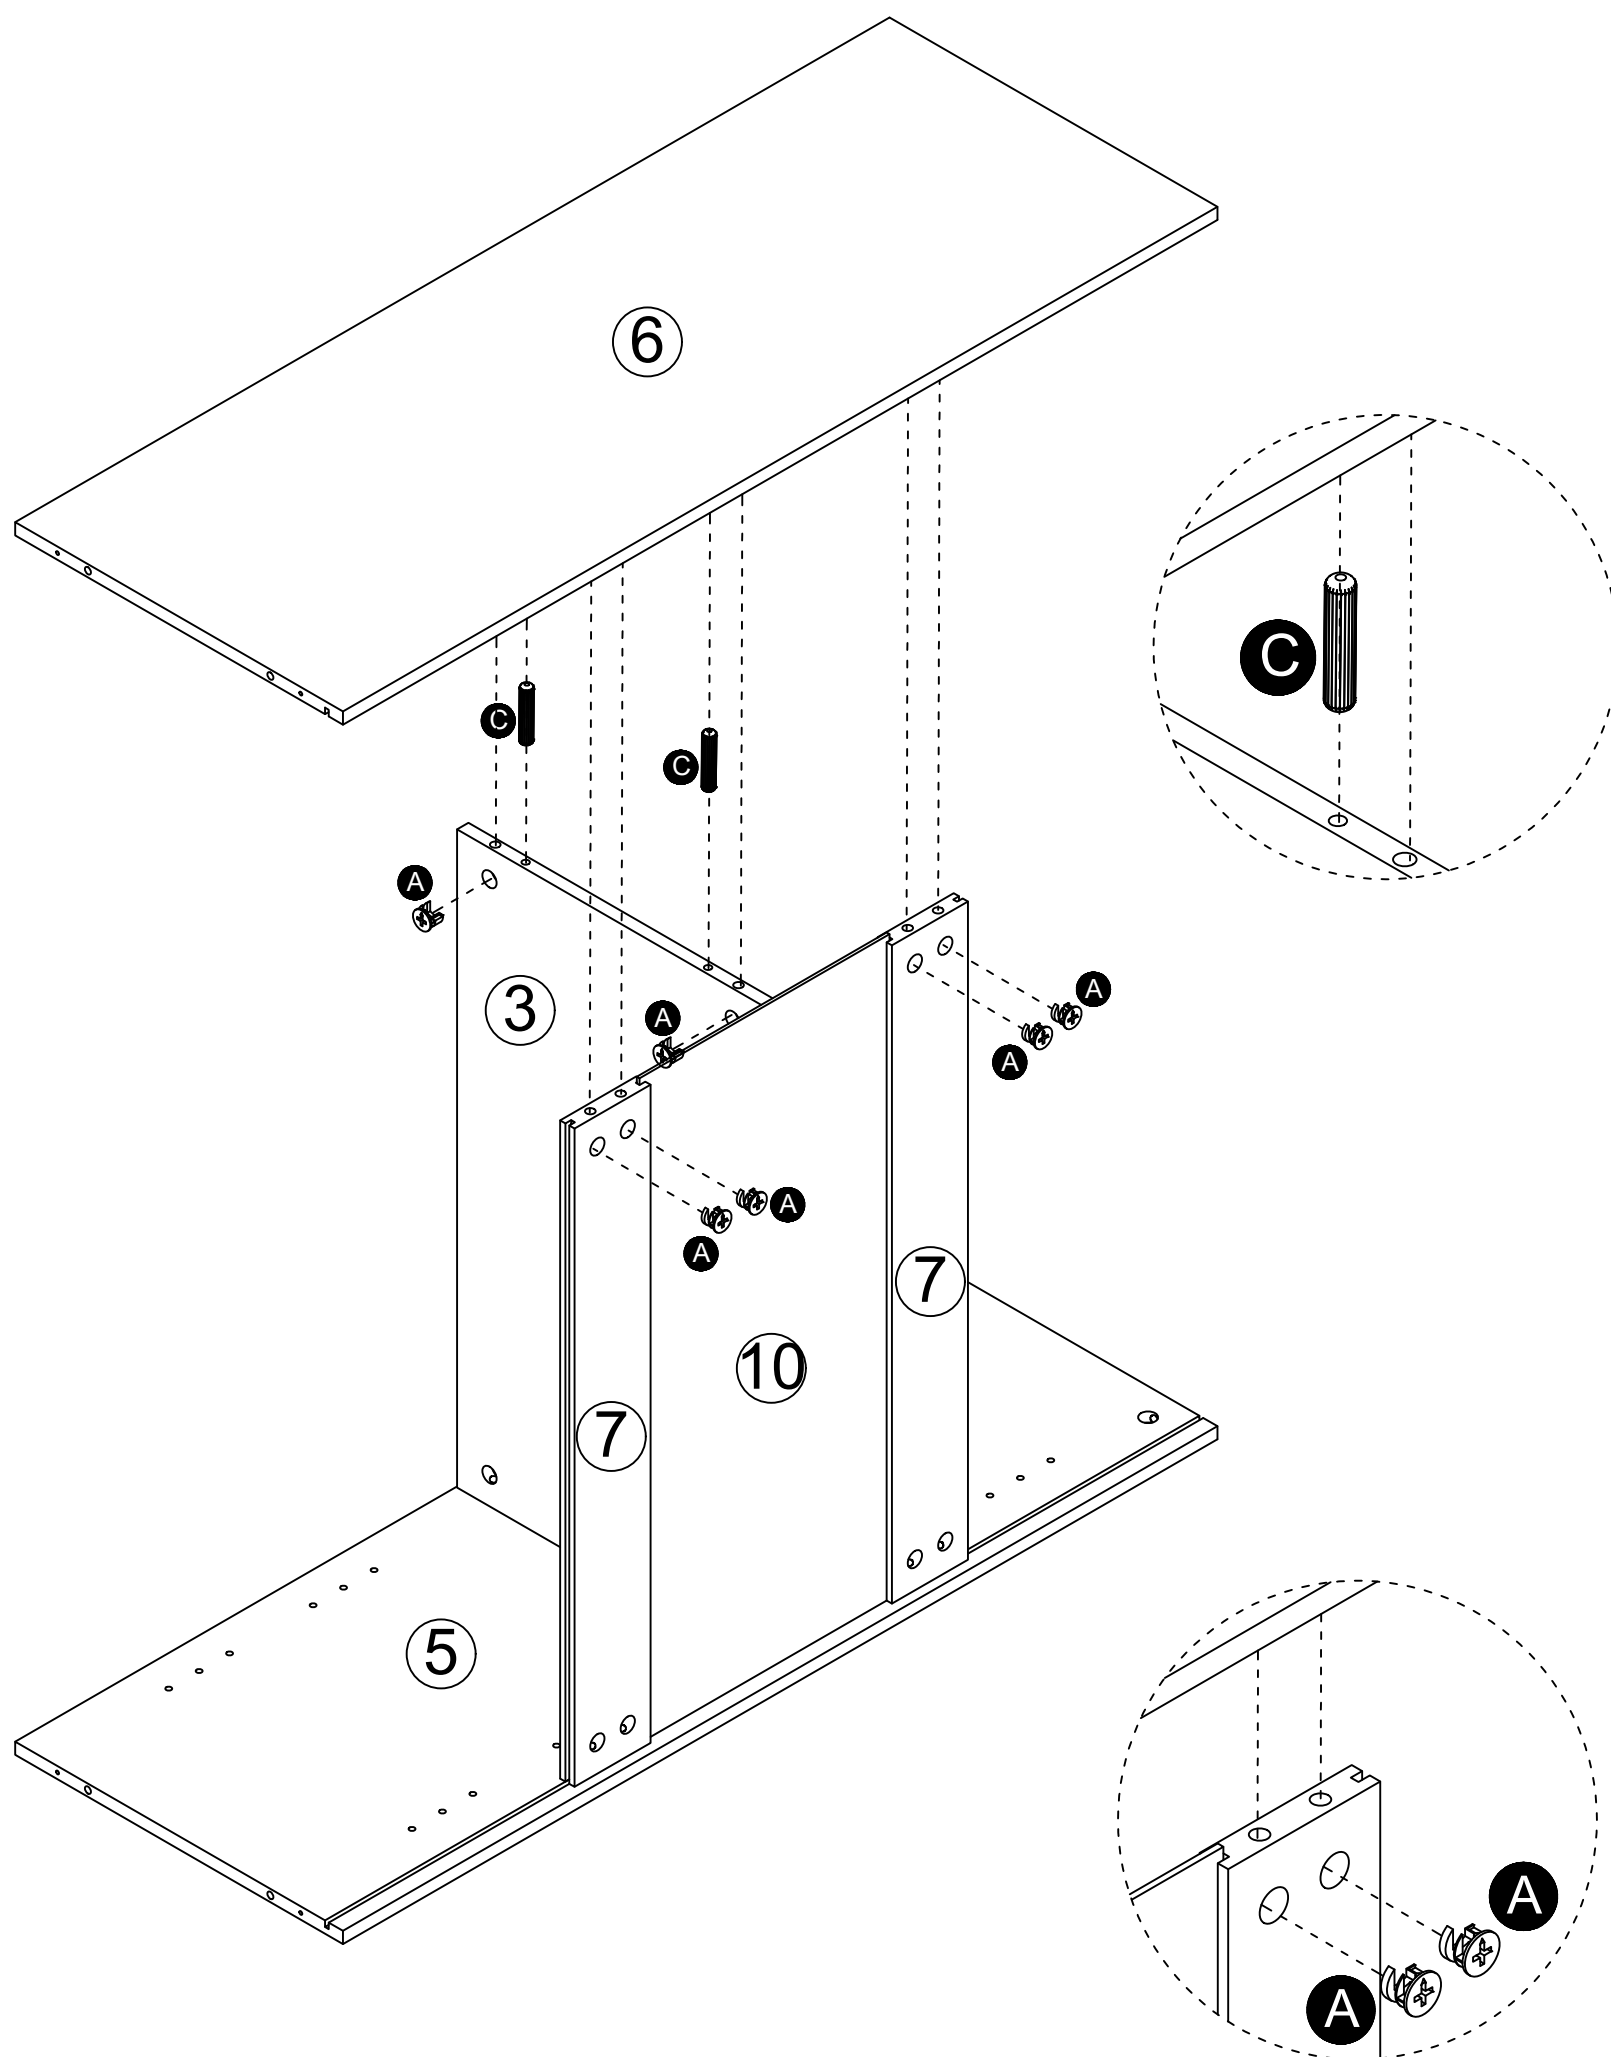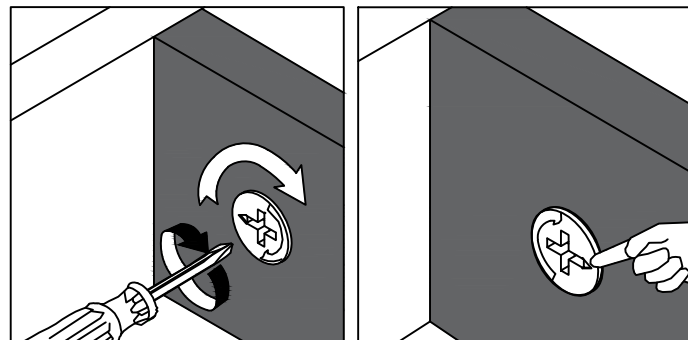





STEP5

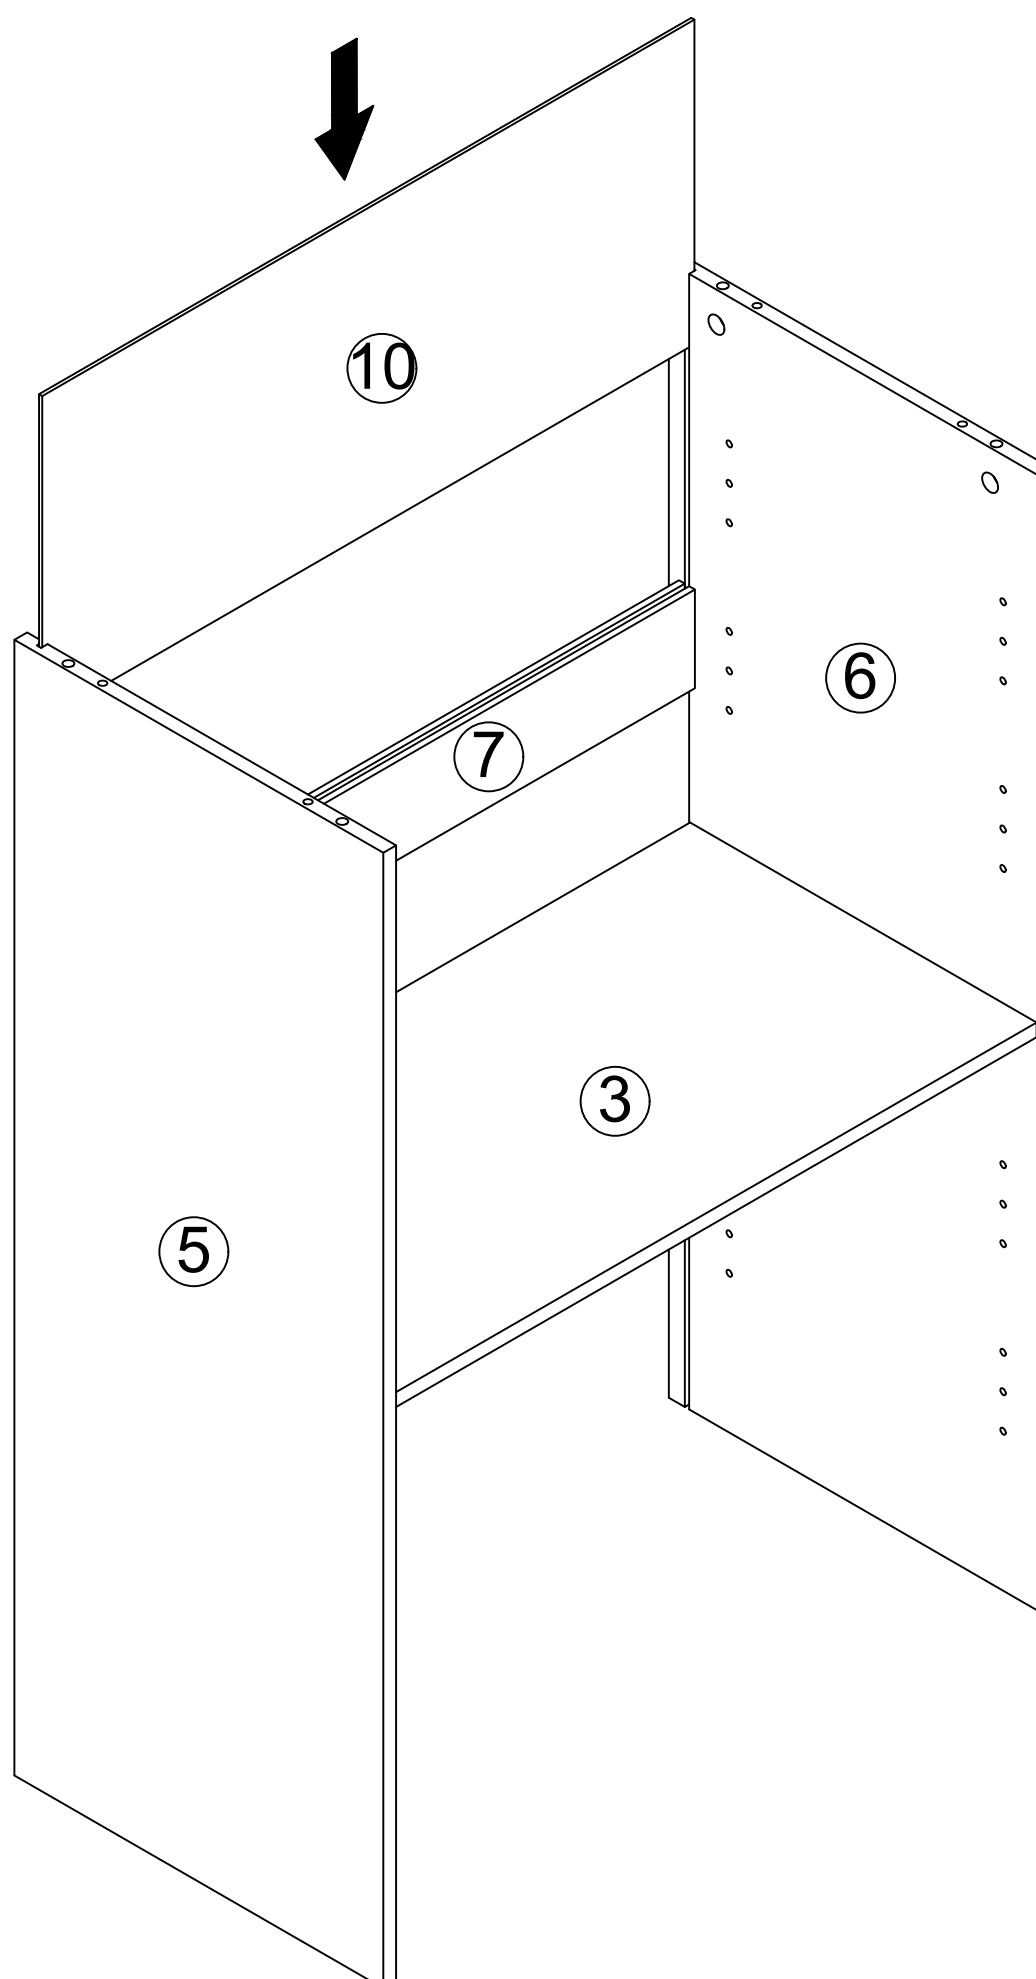


STEP 6

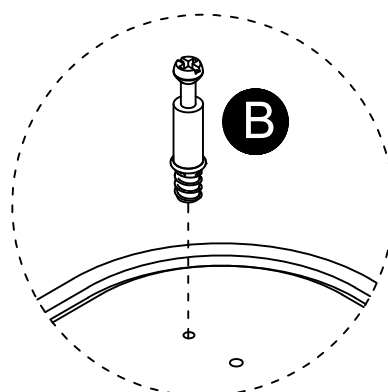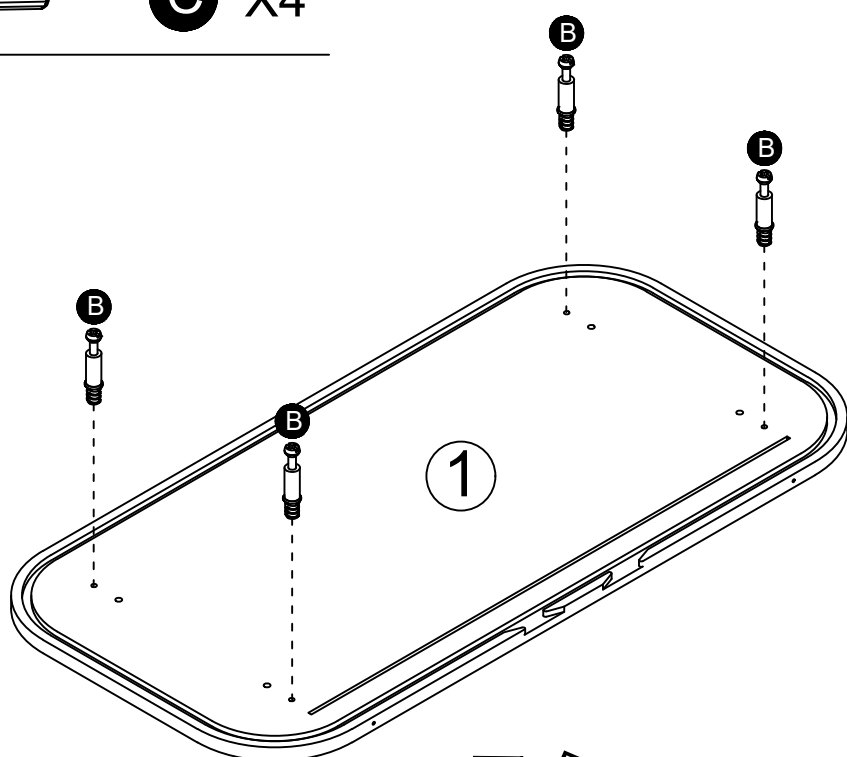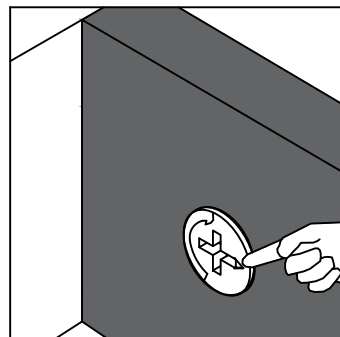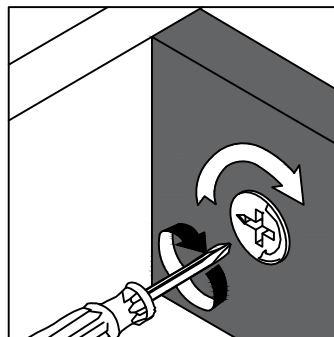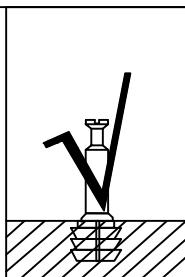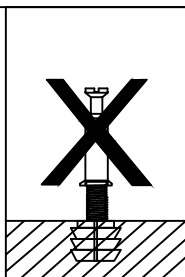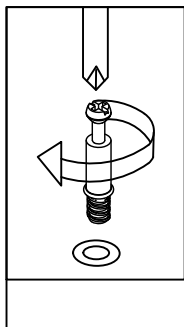**A** X4**B** X4**C** X4

The groove is
on the back.

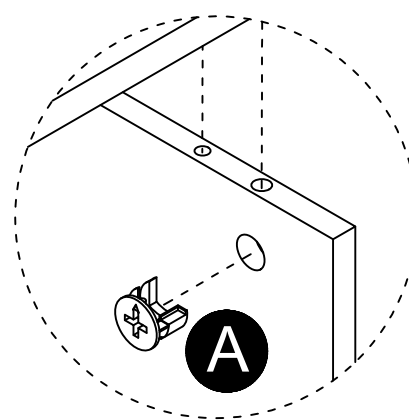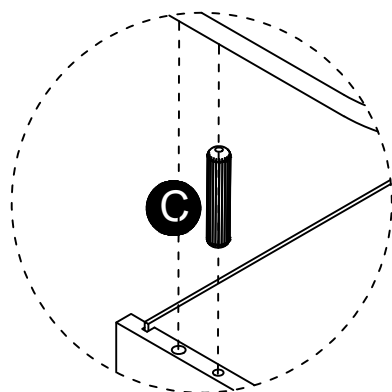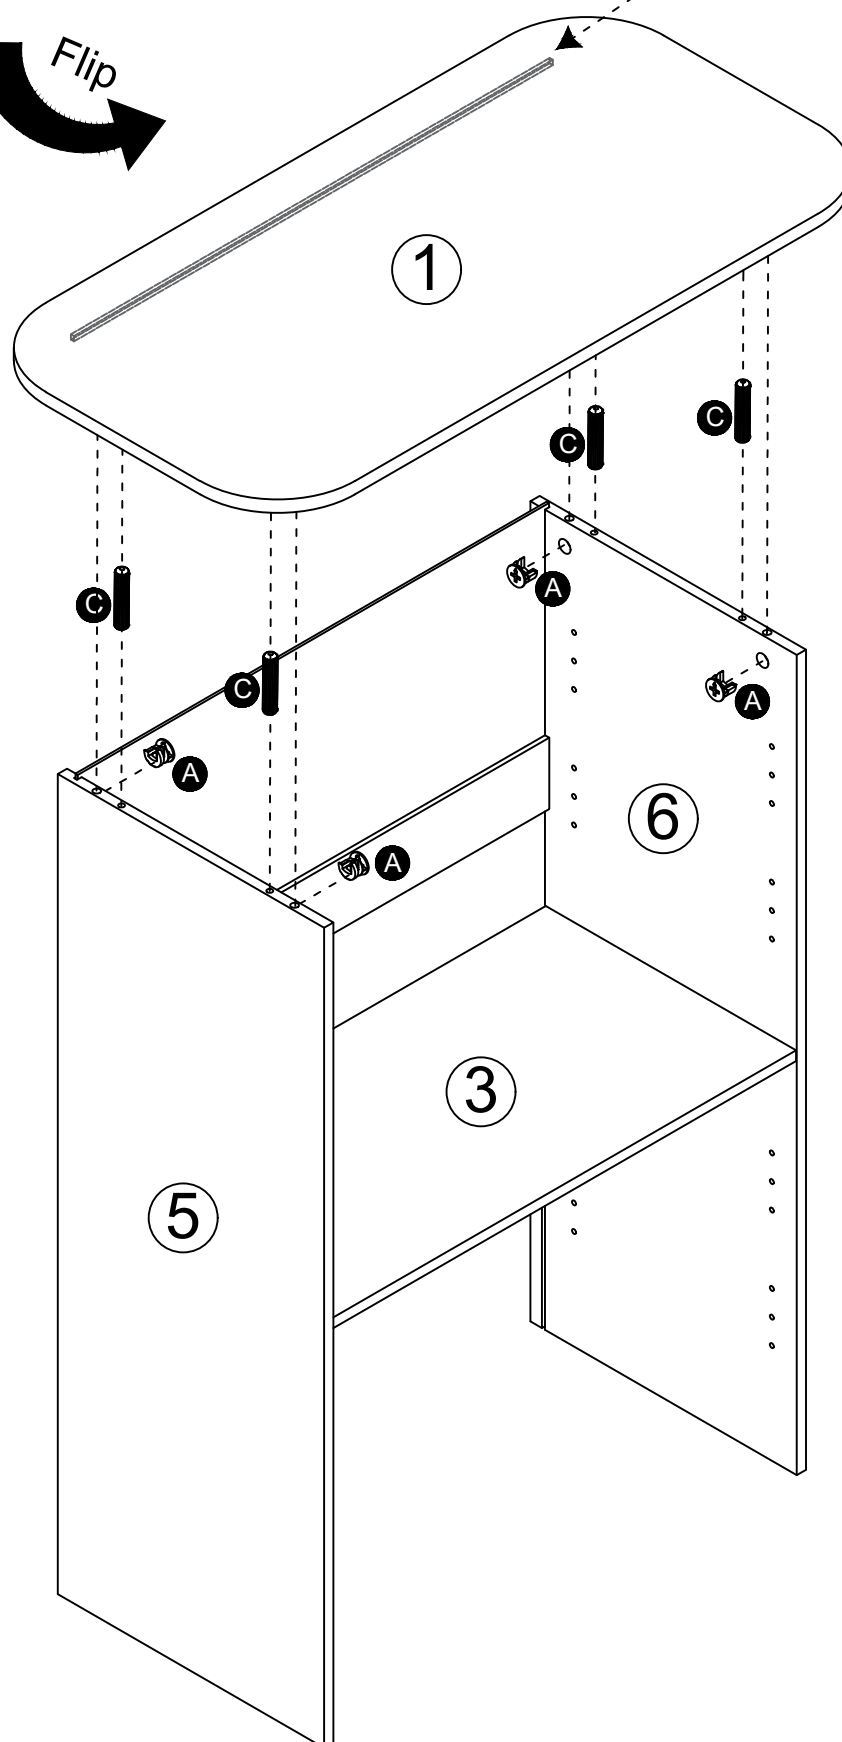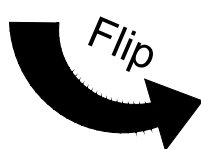


STEP 7

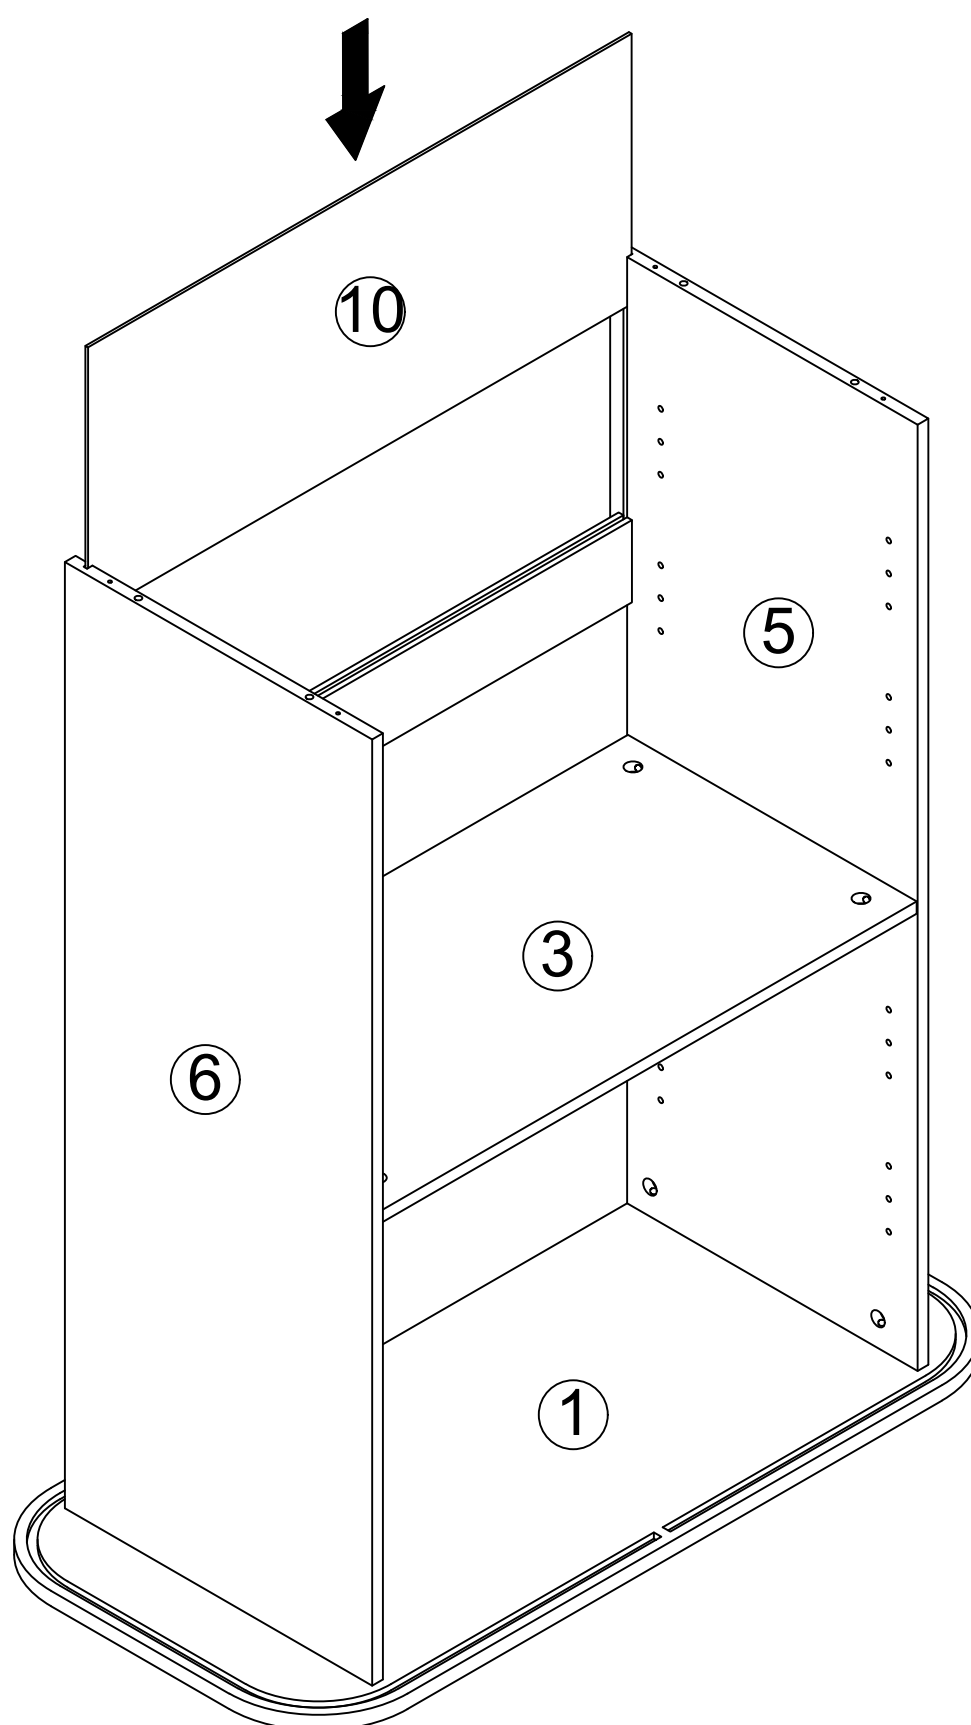

STEP 8






C X4






D X4

The groove is
on the back.

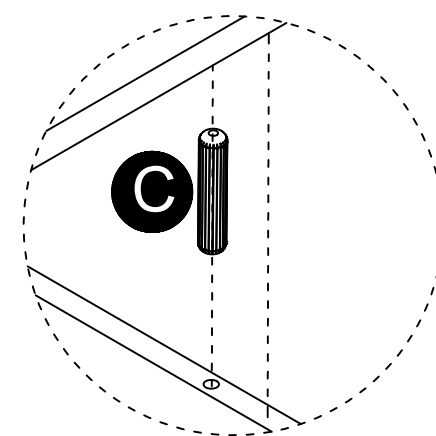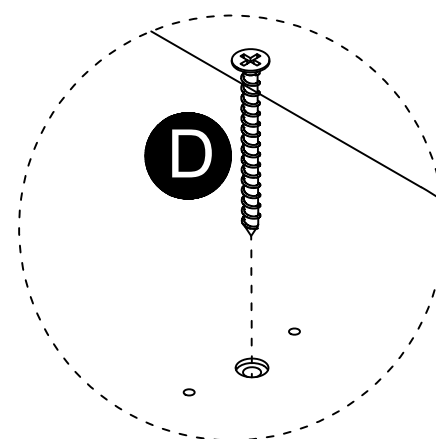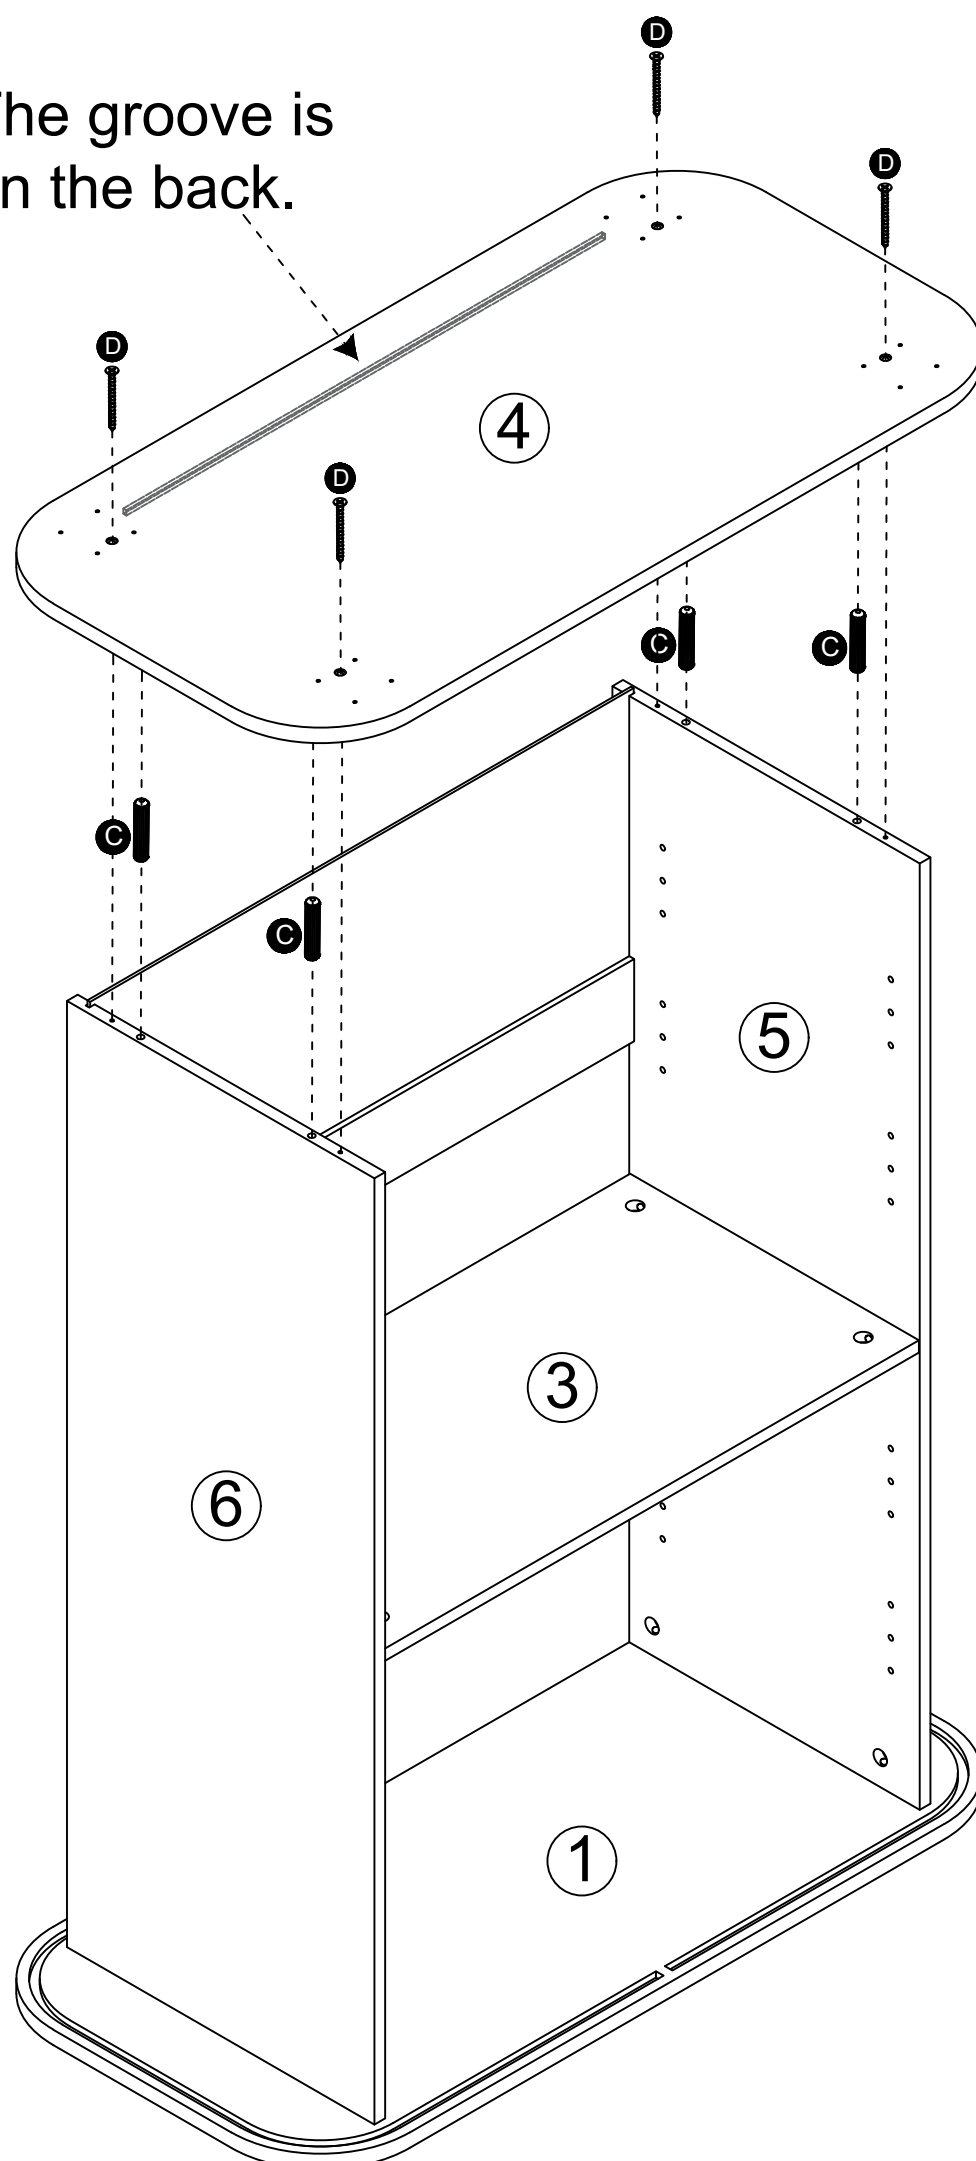


STEP9



-  **E** X16
-  **K** X4

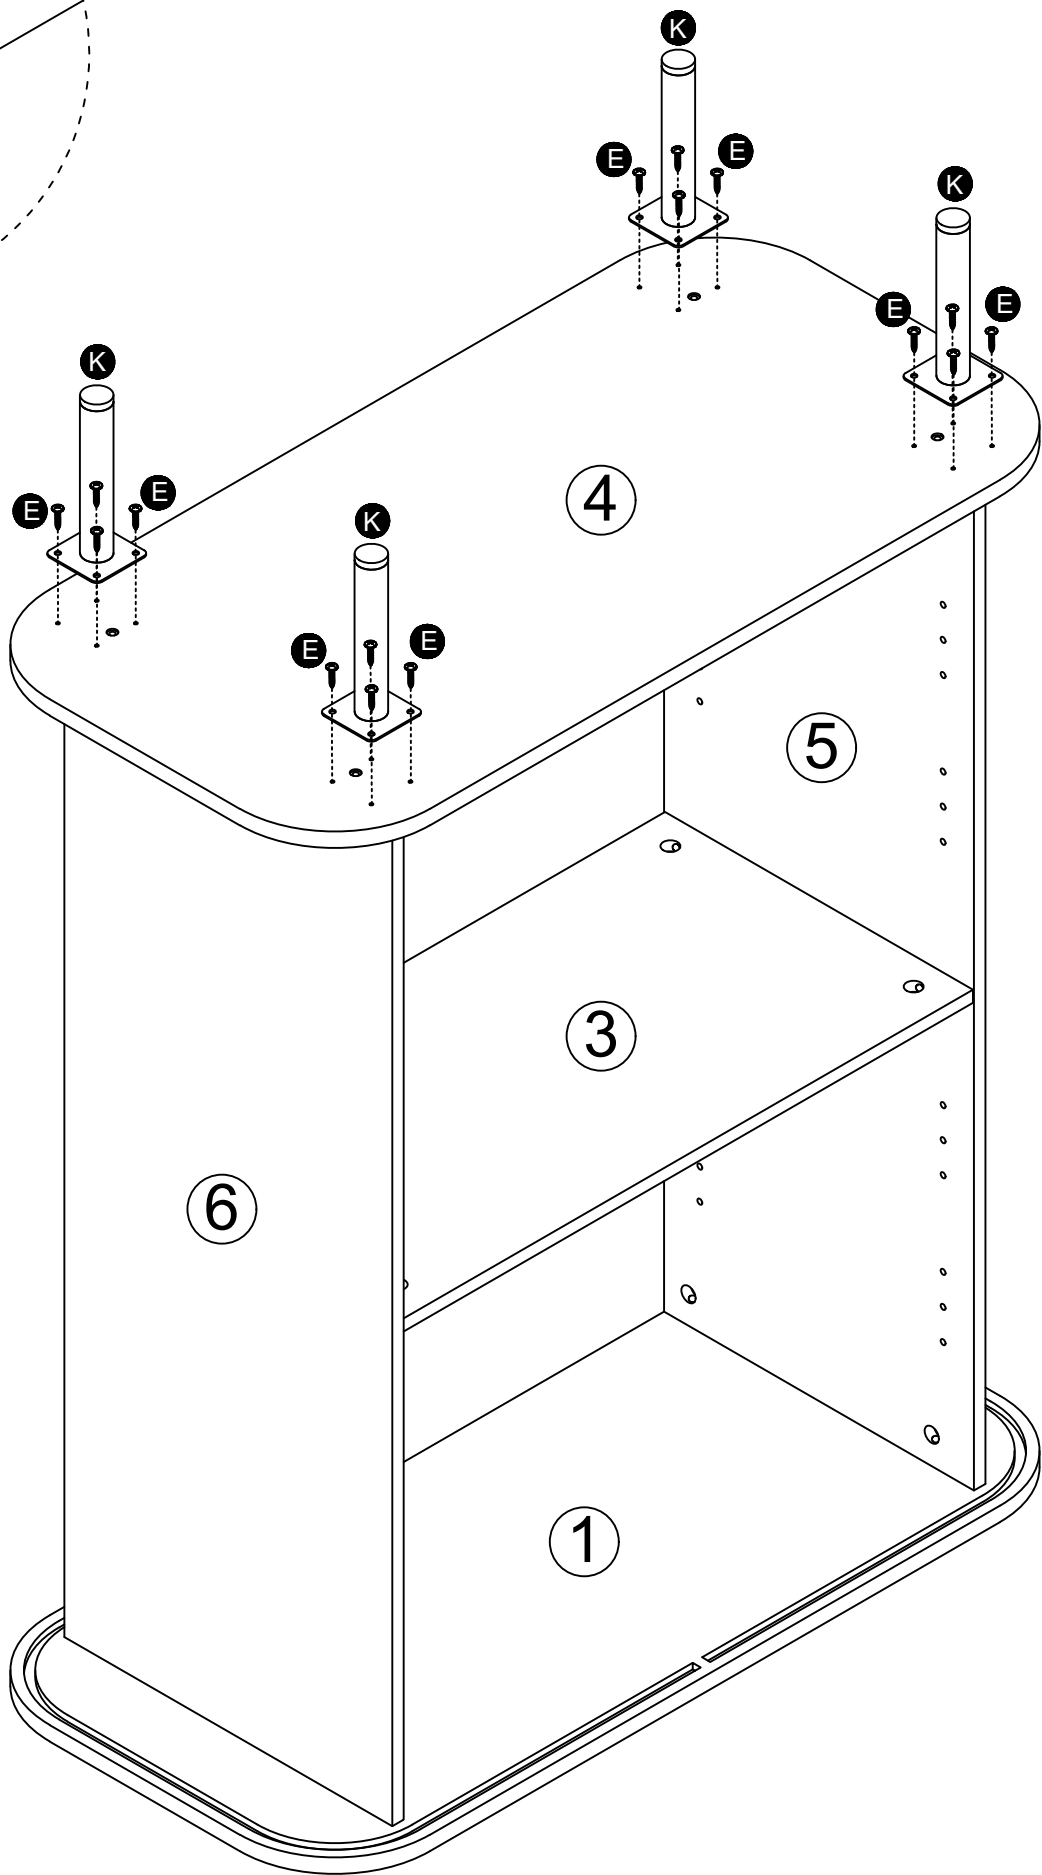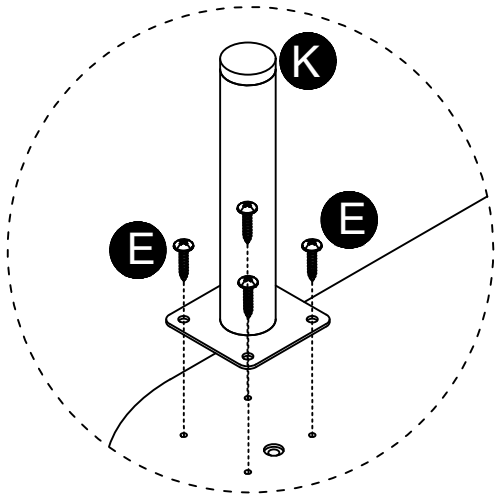

STEP10




H X16

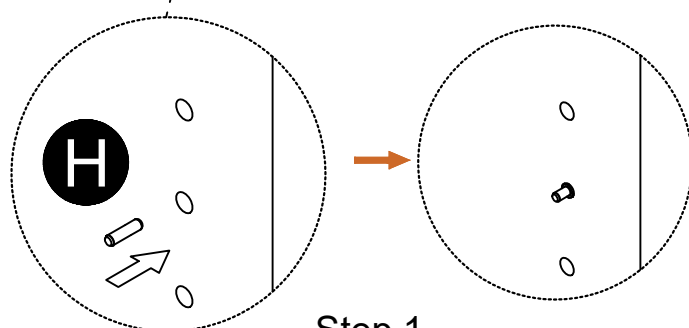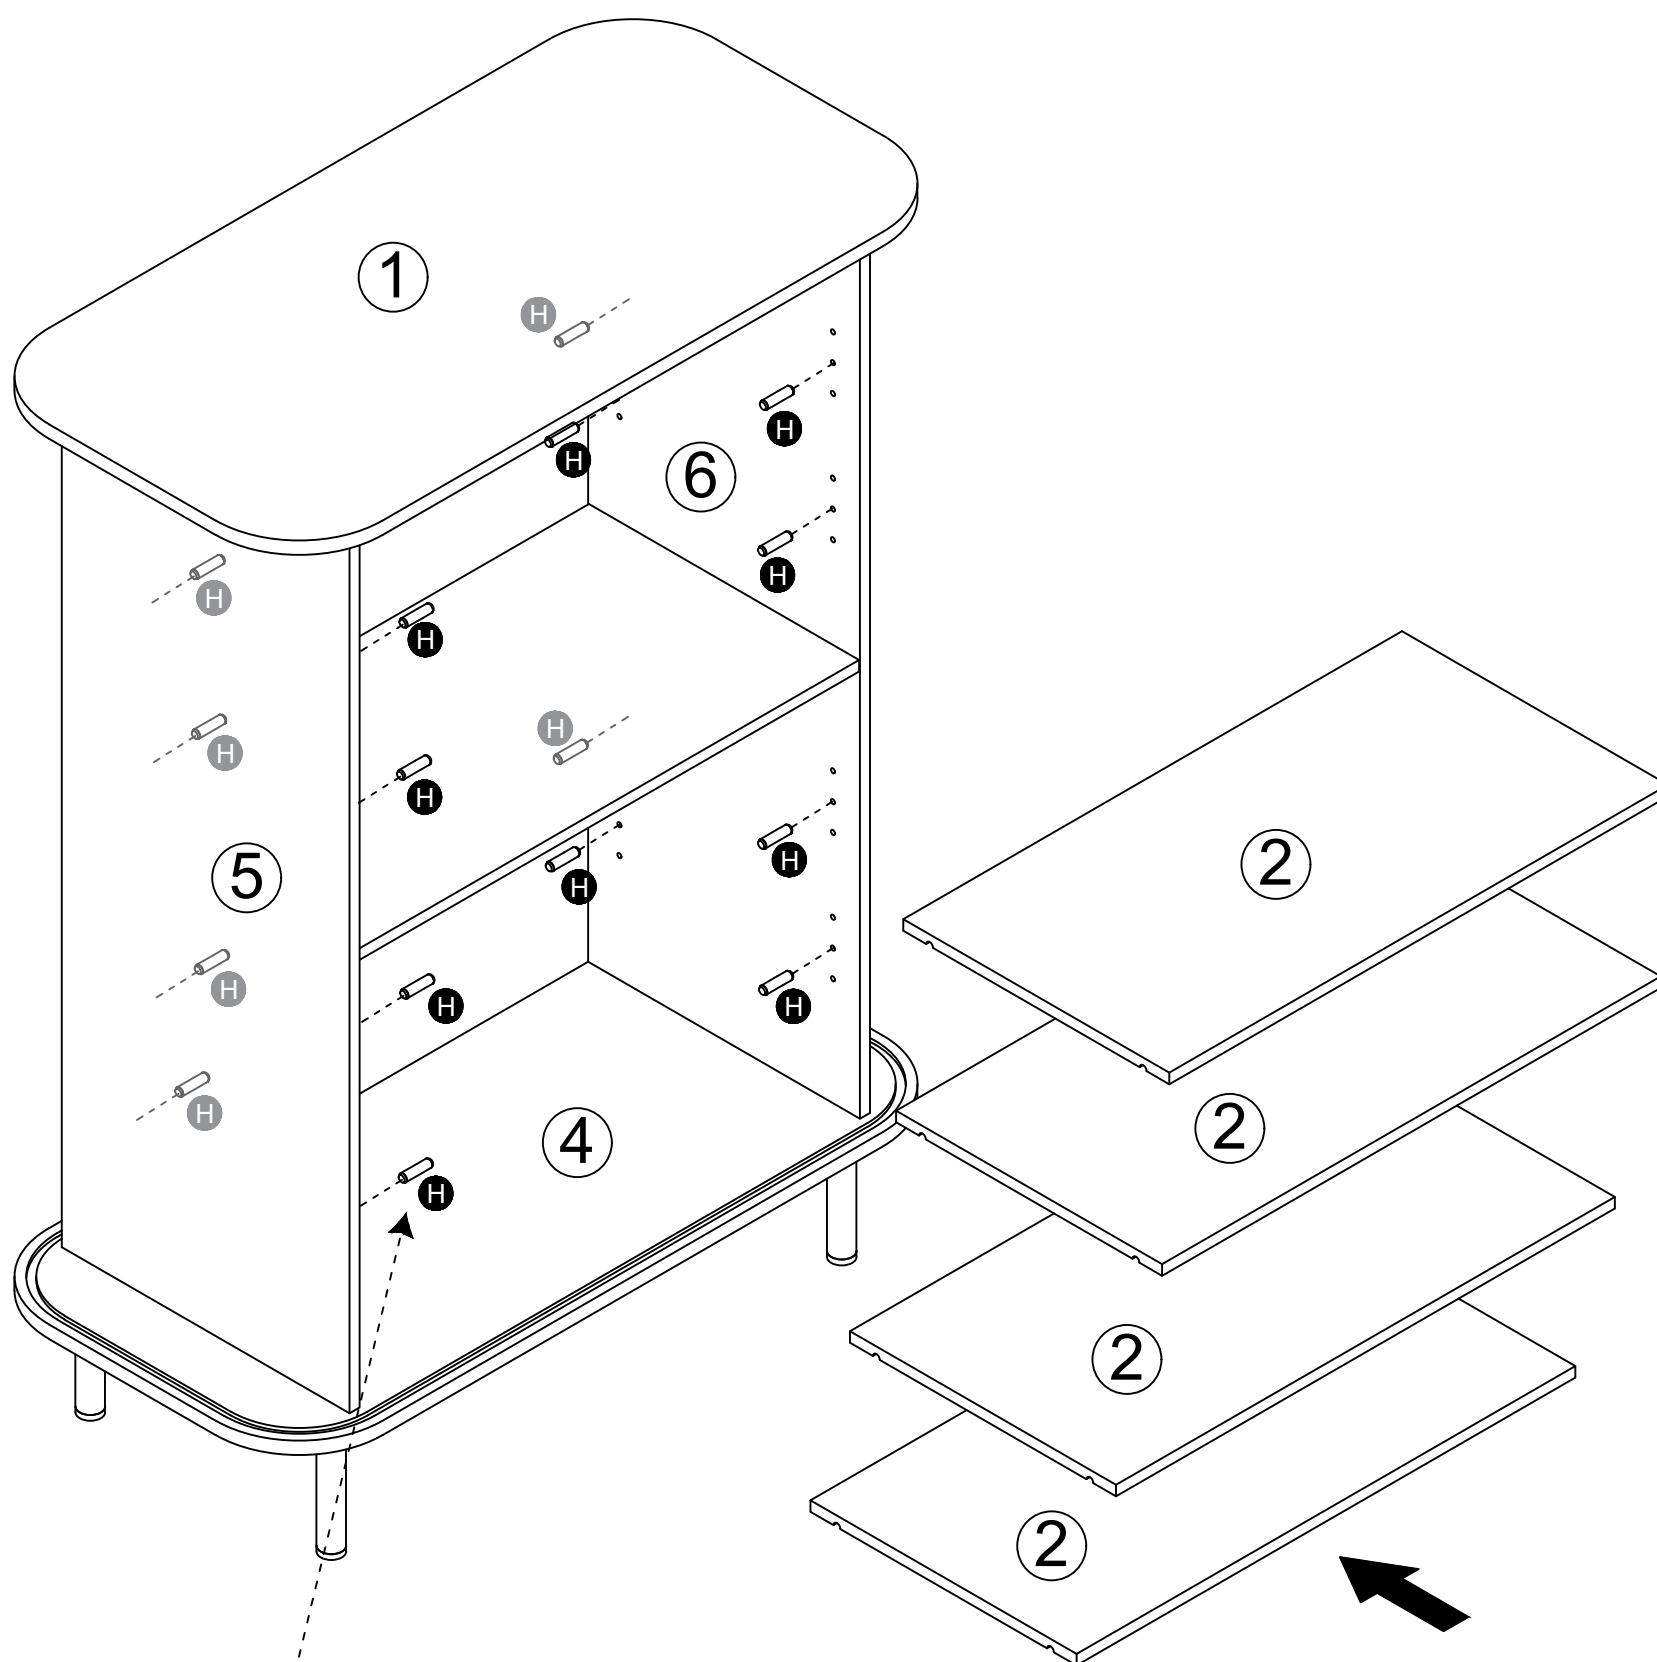

Step 1


Select the desired height
and put it in

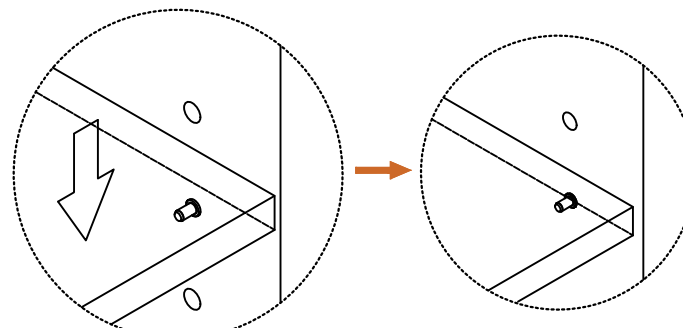


Step 2


Aim the board gaps down


STEP11

- **I** X12
- **L** X2

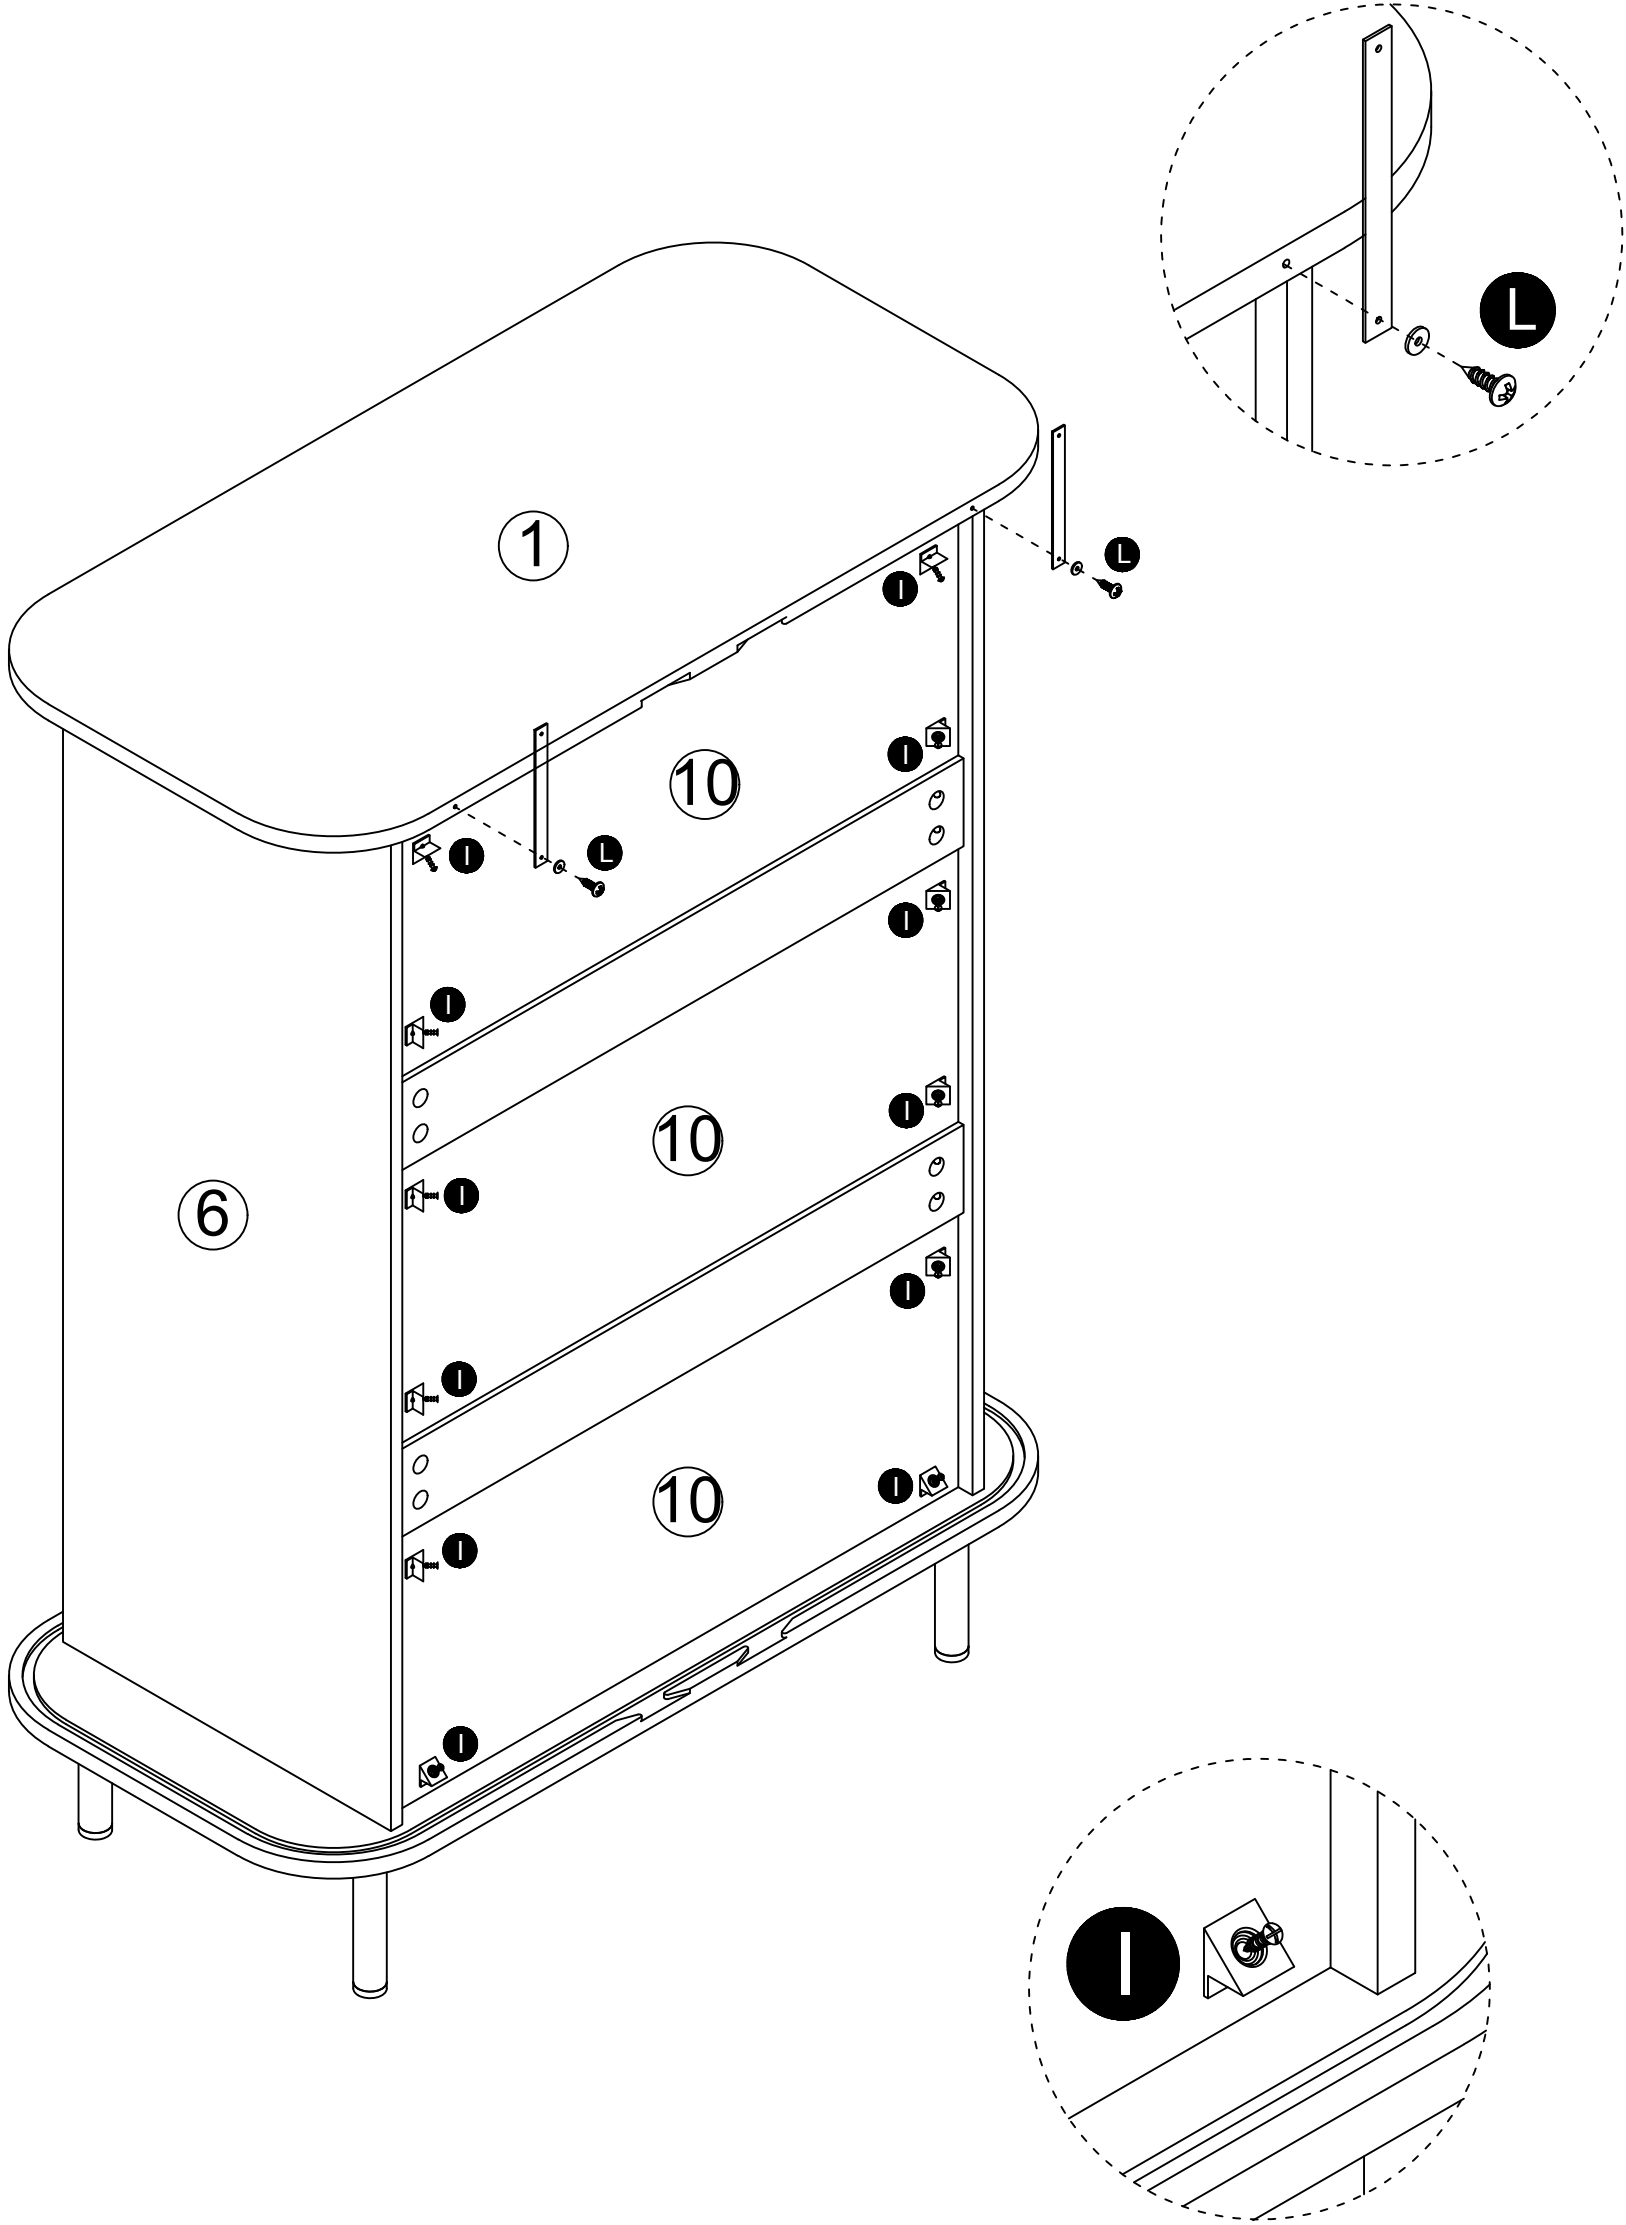


STEP12


- **F** X4
- **G** X2

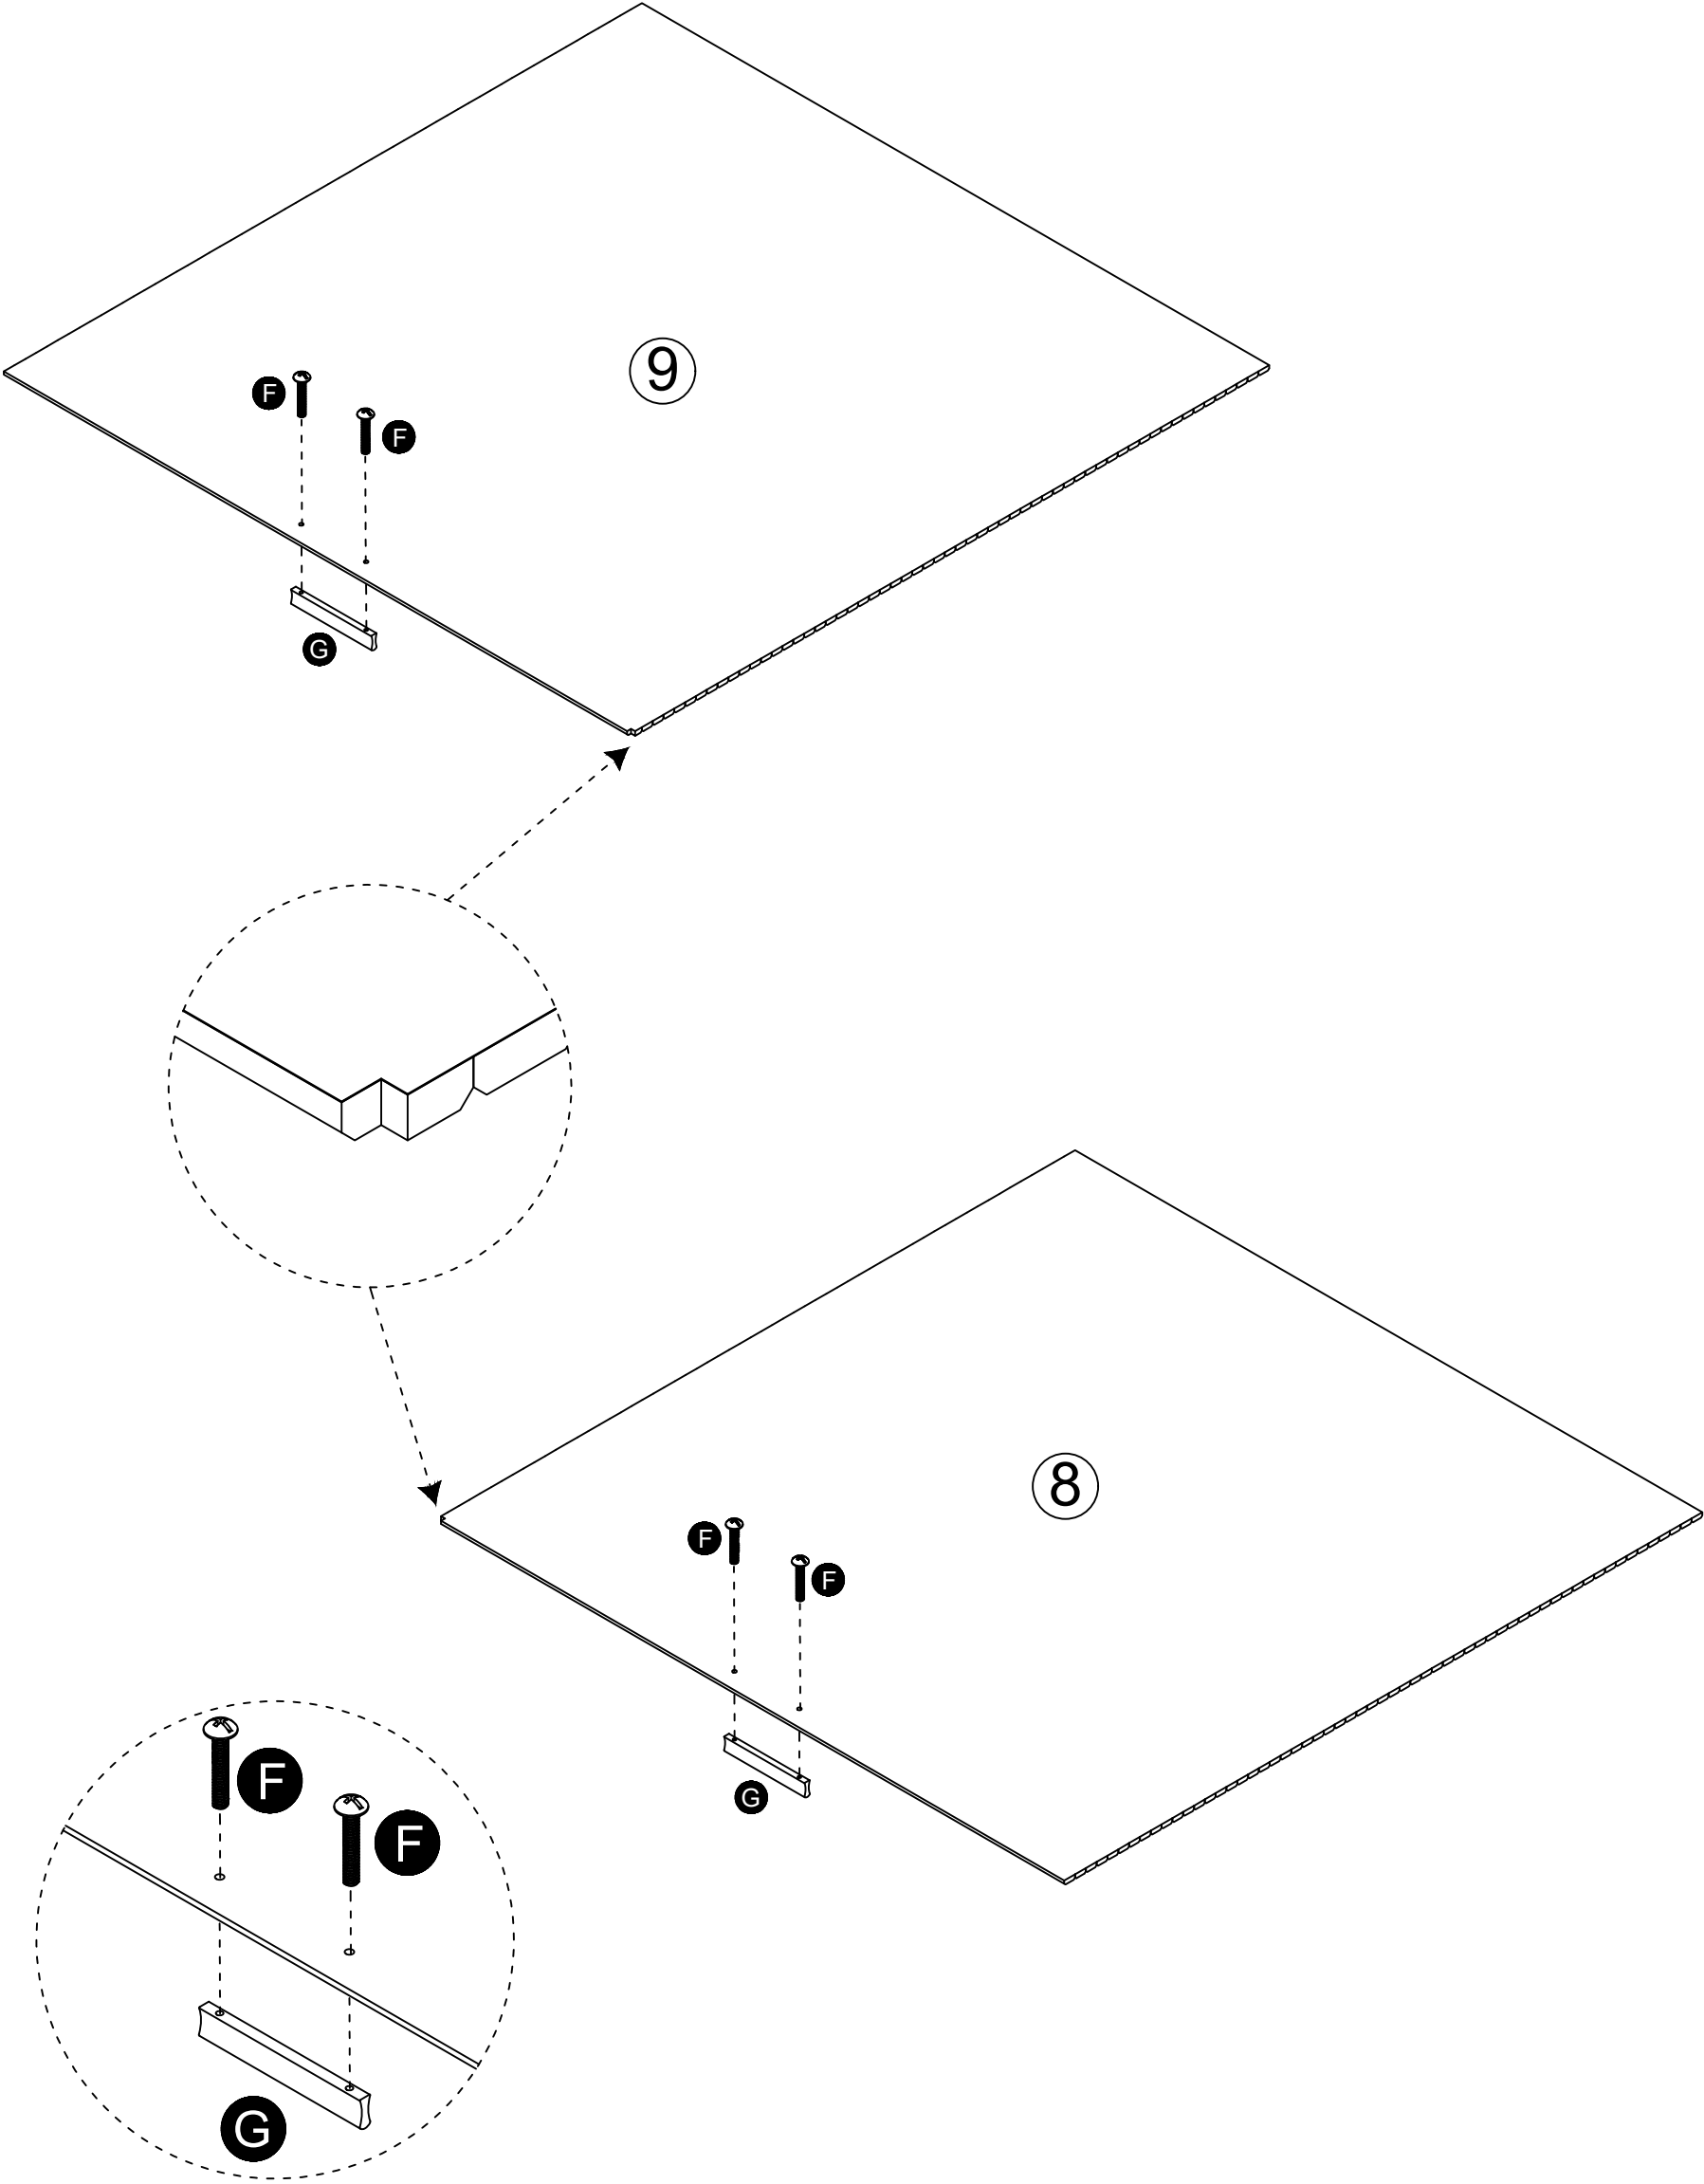


STEP13

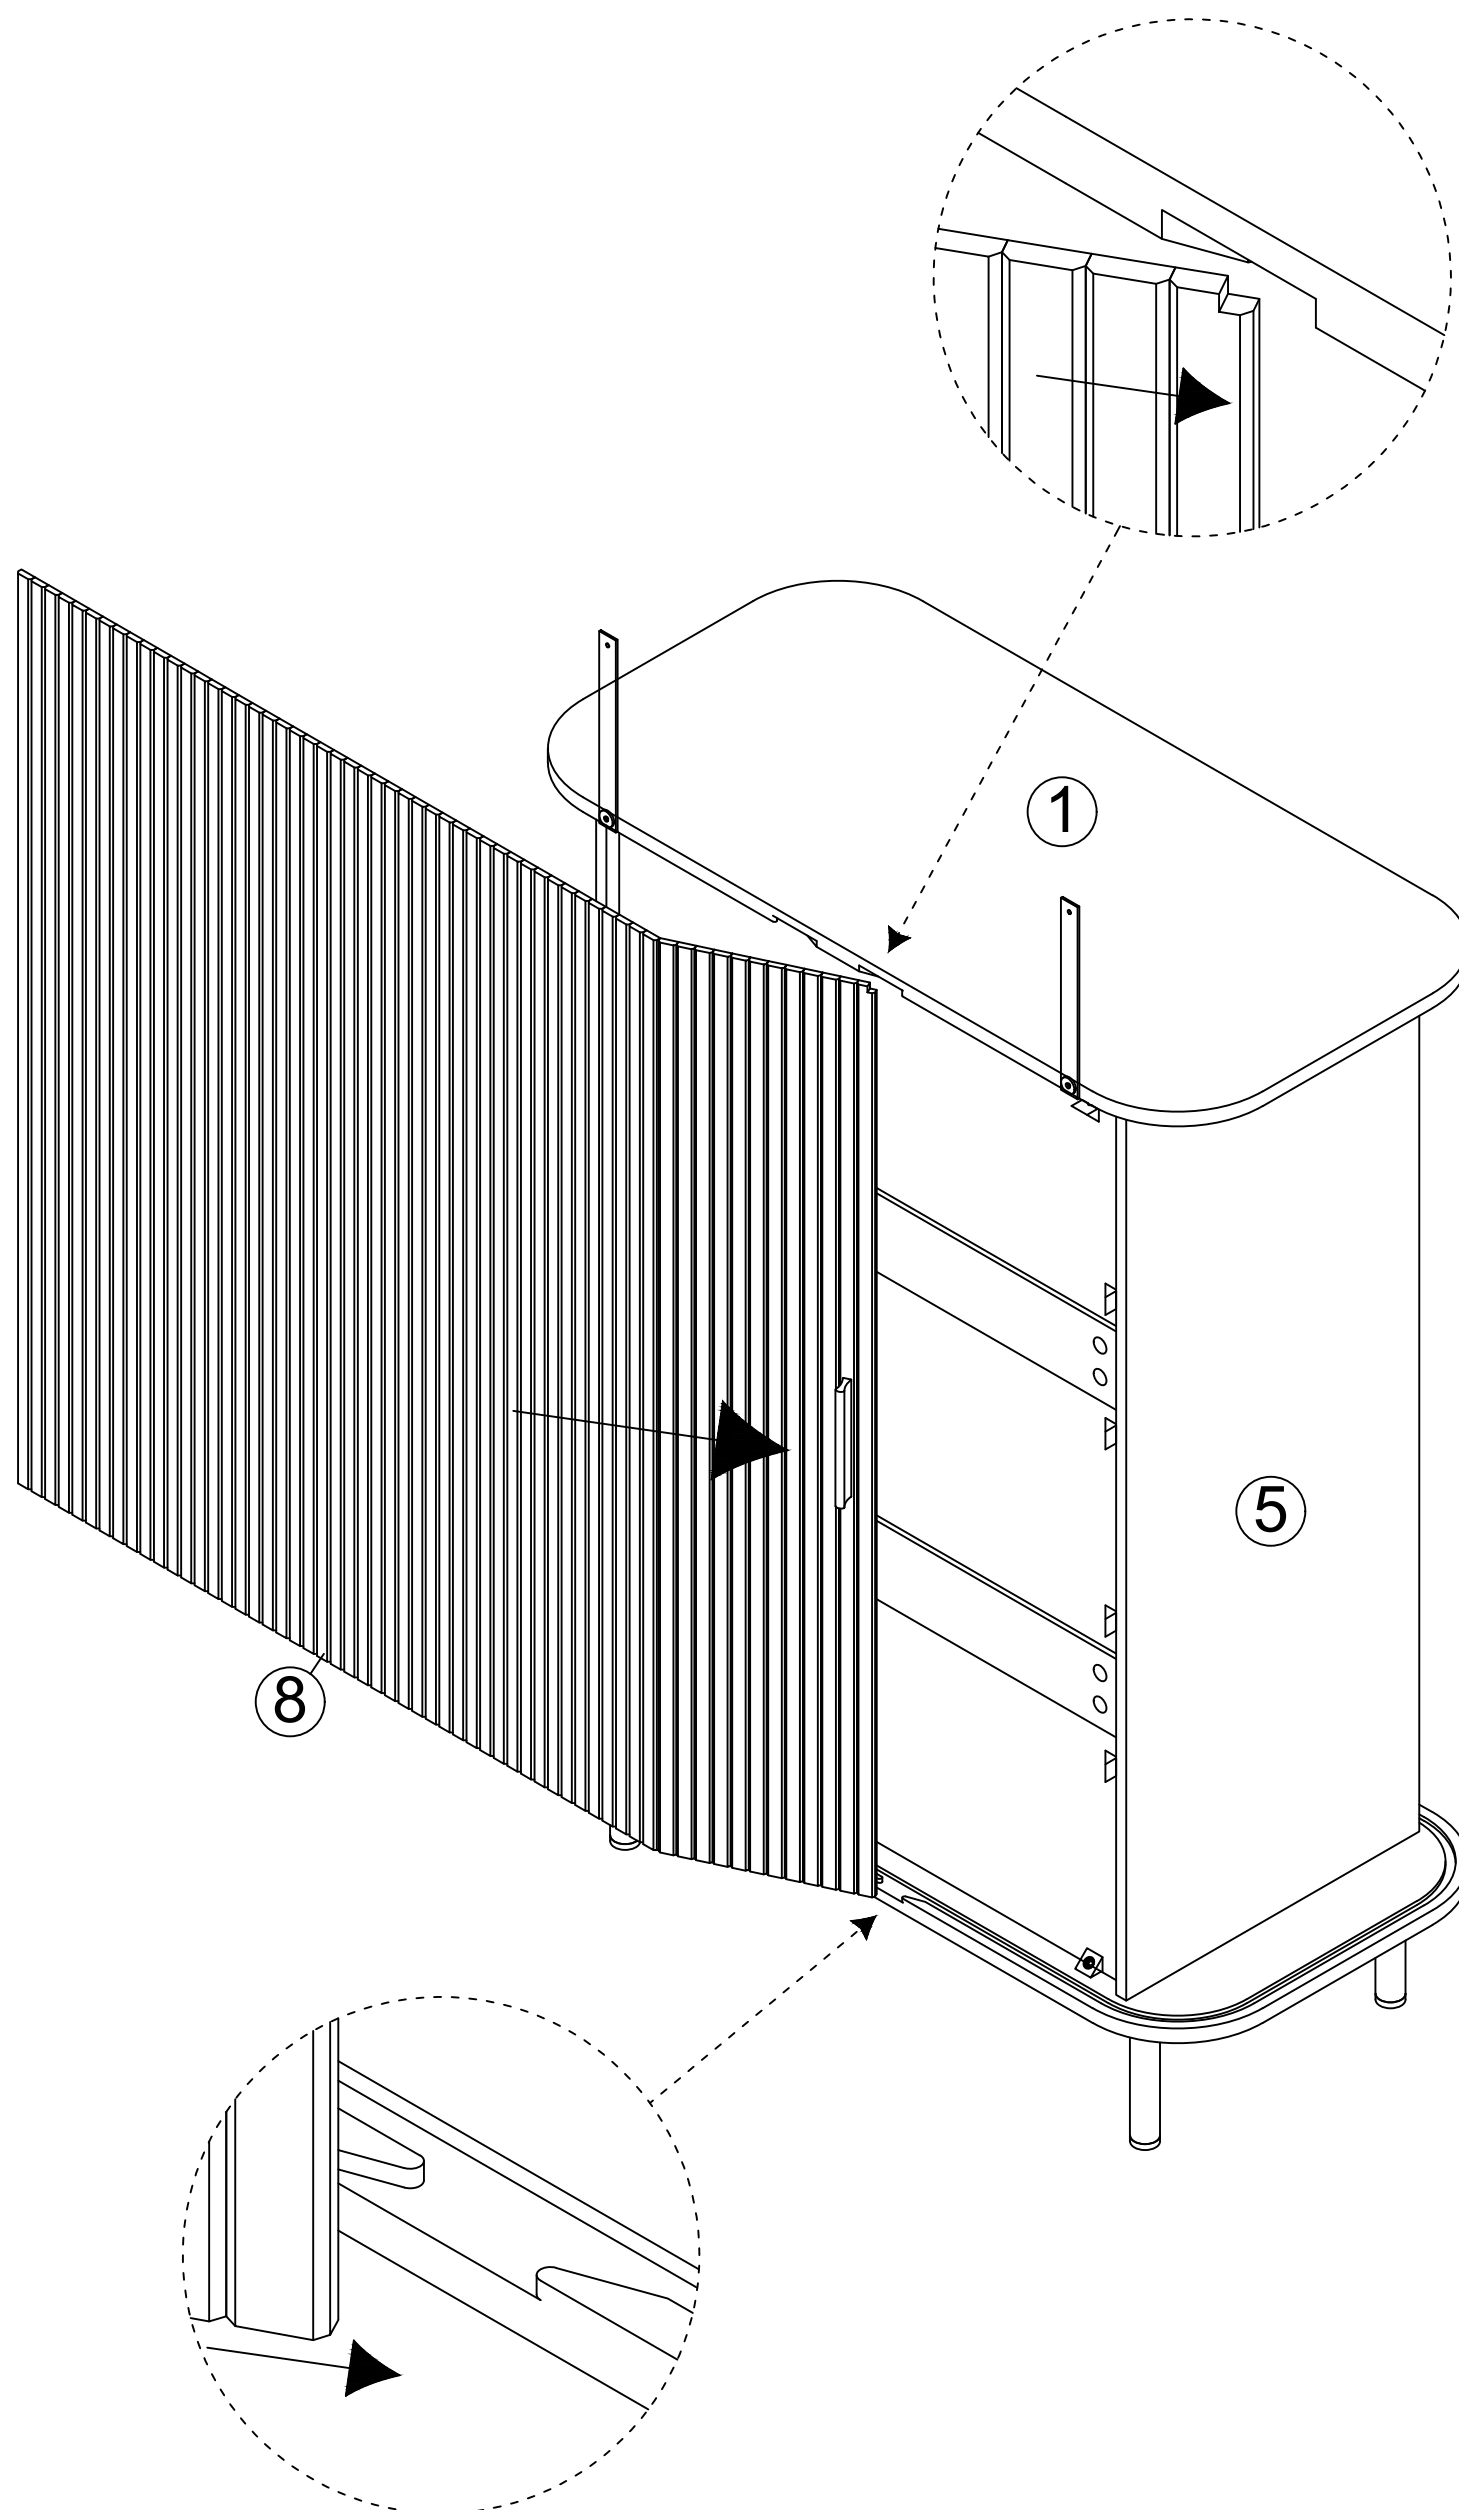


STEP14

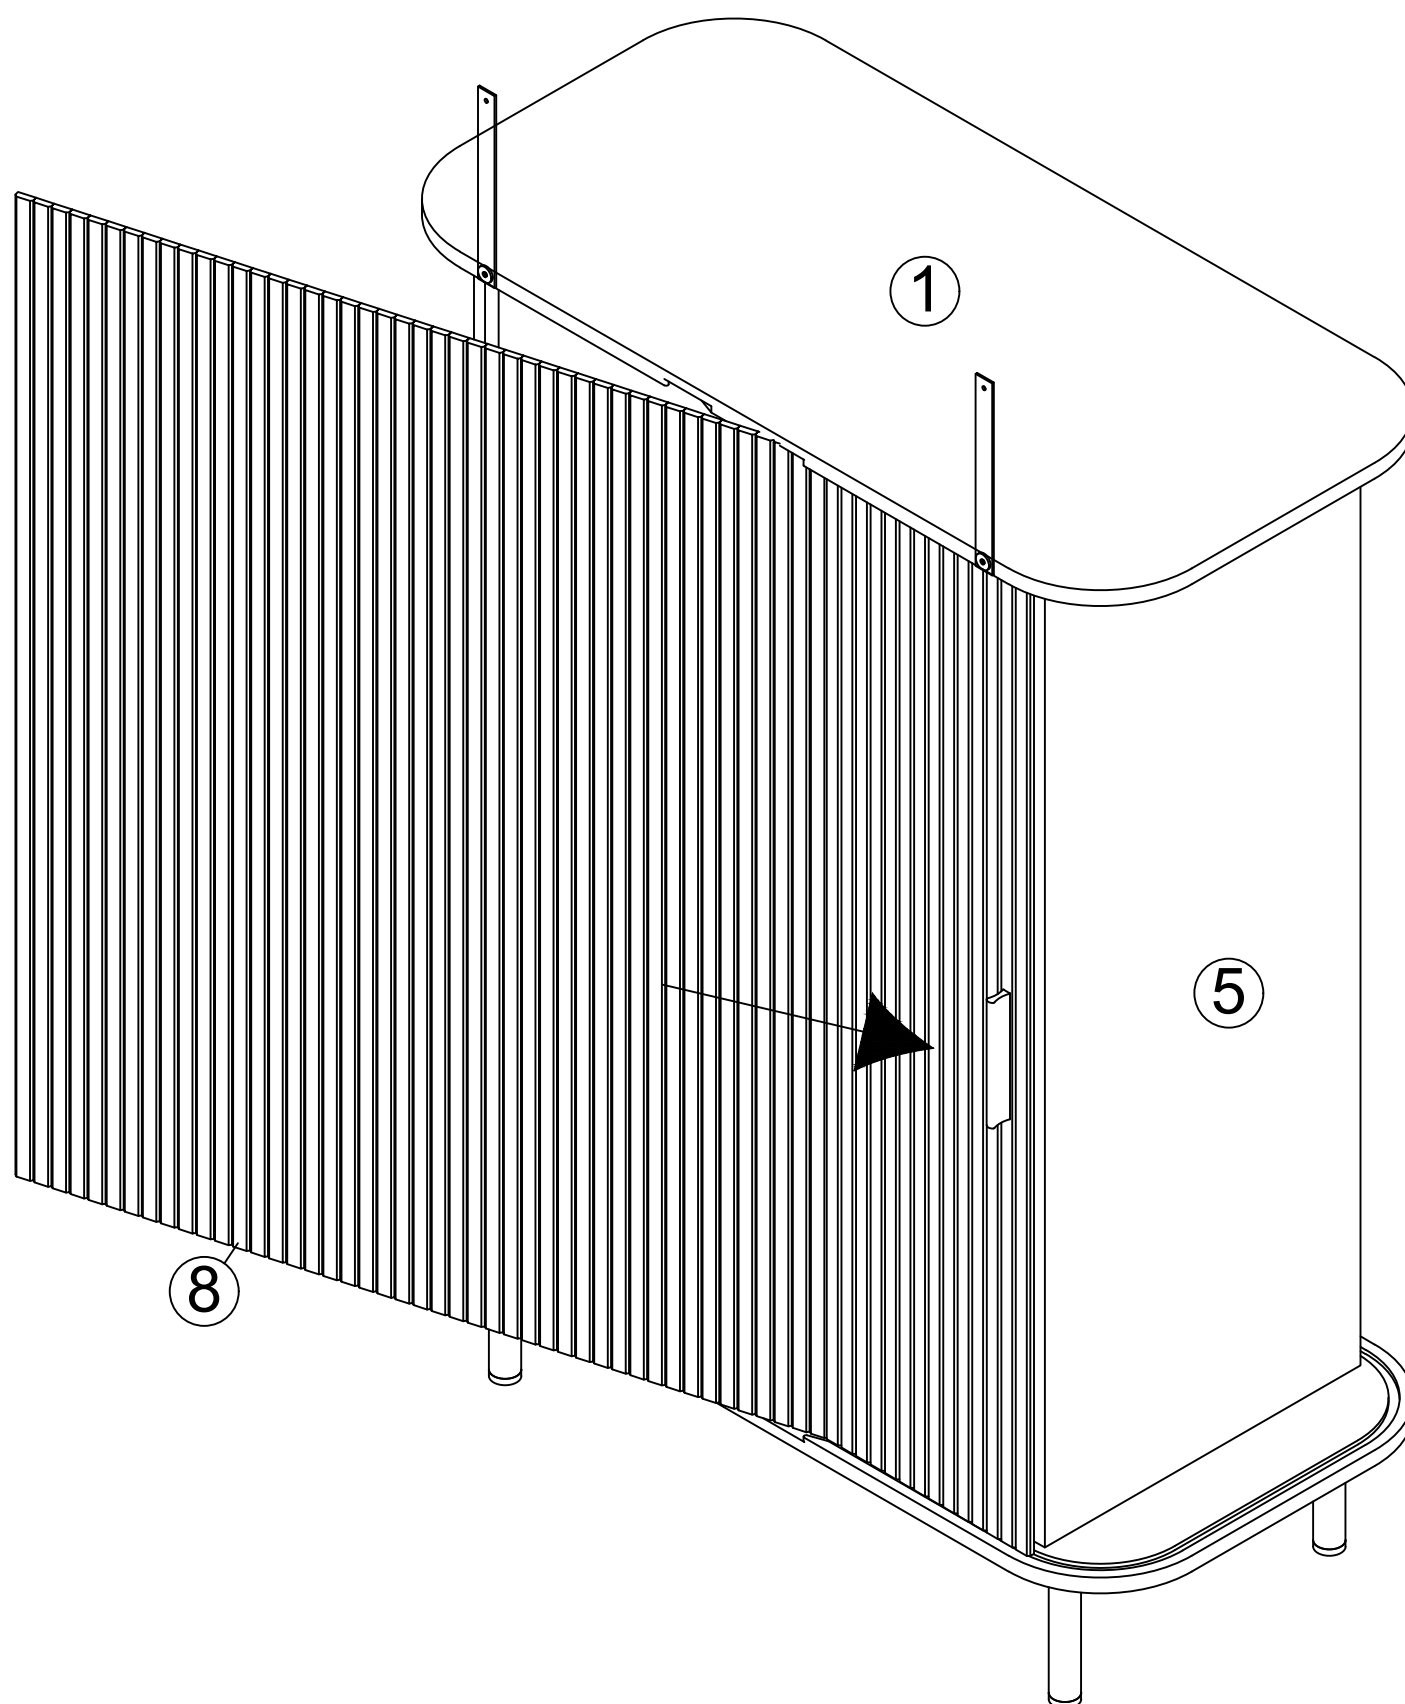


STEP15

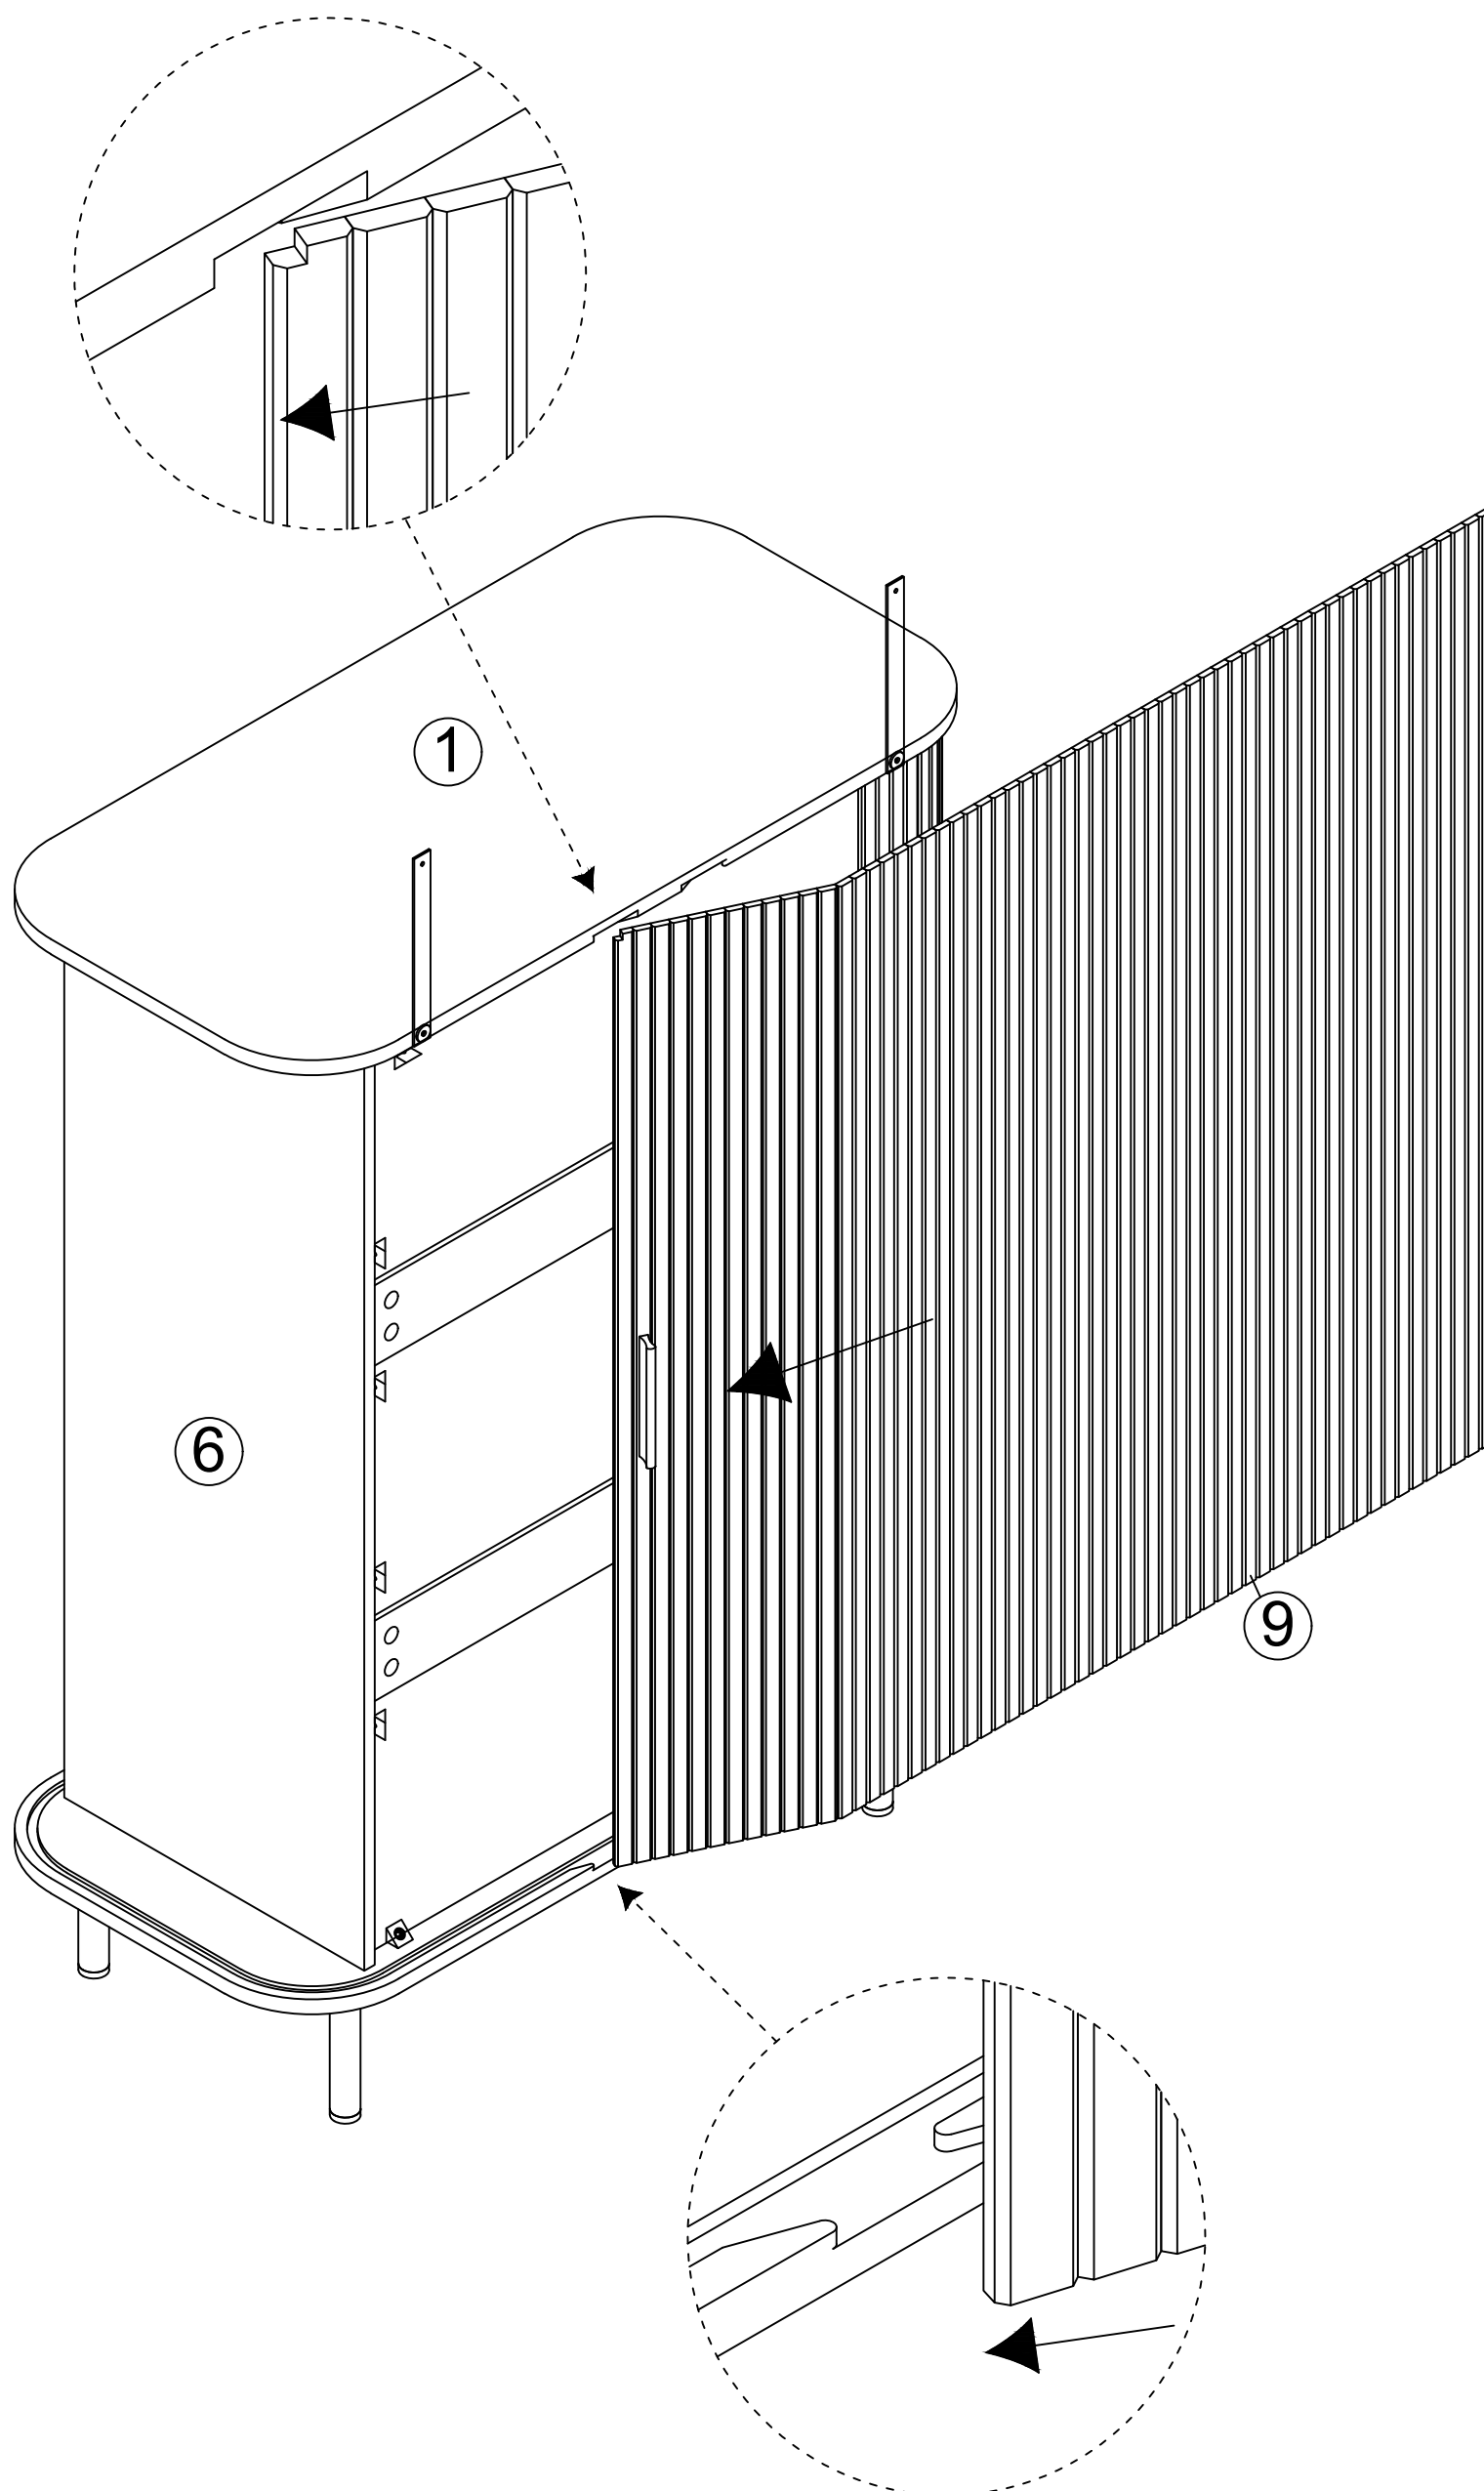

STEP16

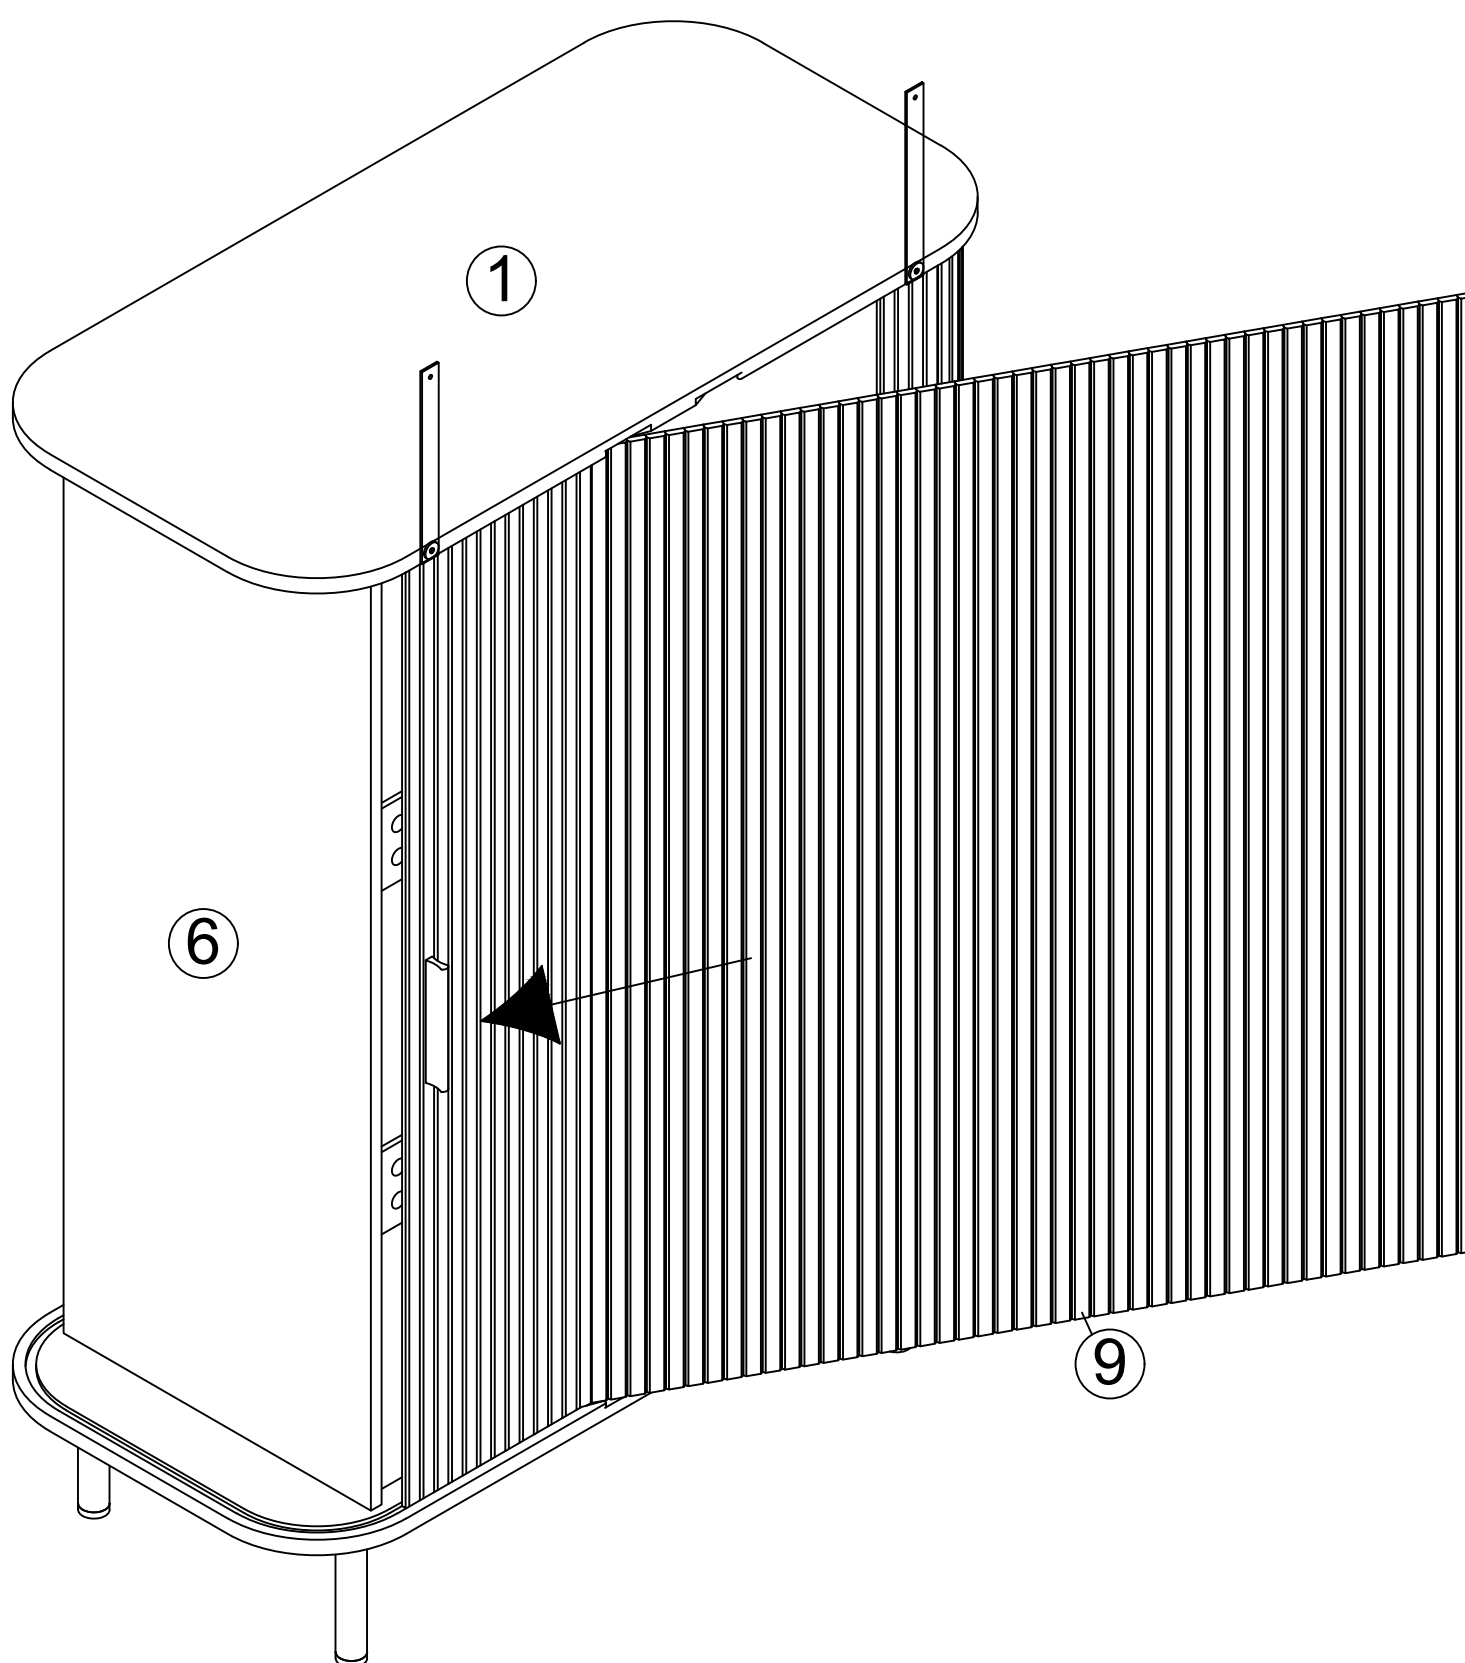


STEP17




L X2


Install the tipping restraint hardware

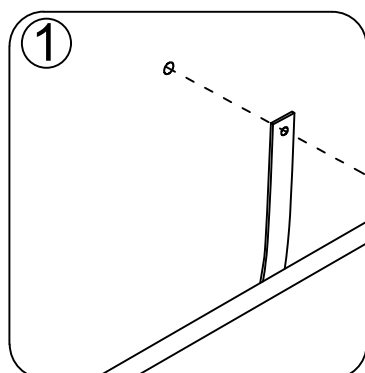


1. make mark on the wall

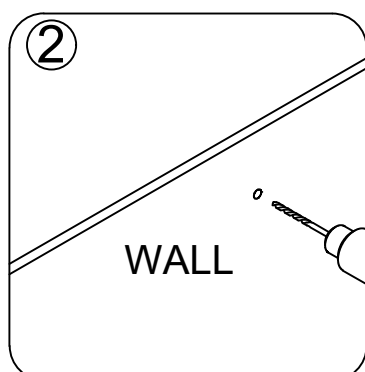


2. drill two Ø6 holes on the wall

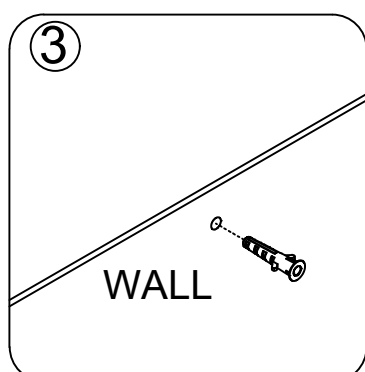

3. put two anchors in the holes

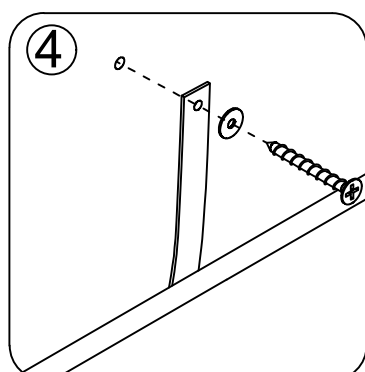

4. fix the device on the wall by the long screws

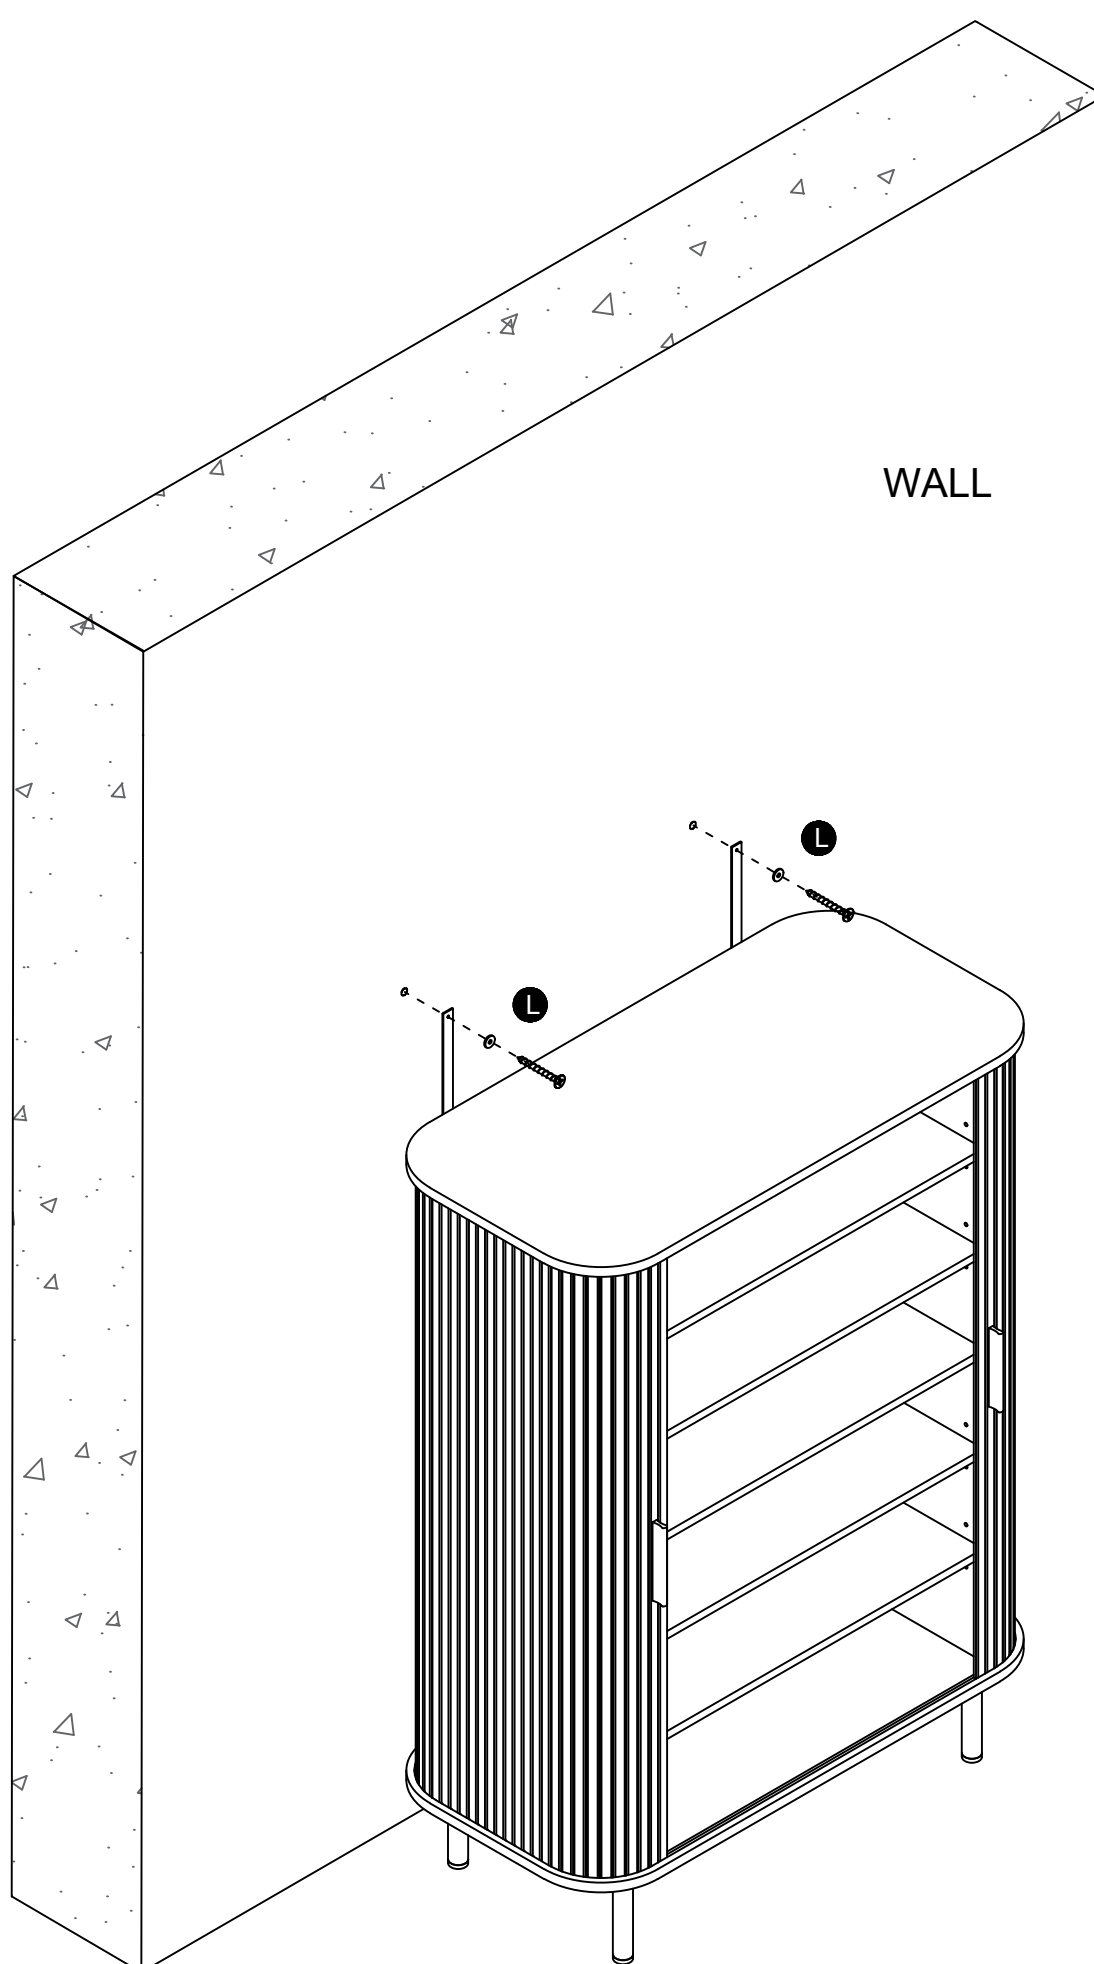

STEP18



J

X8

