

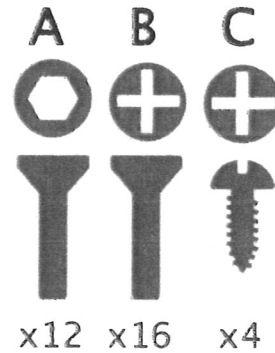


Assembly Instructions

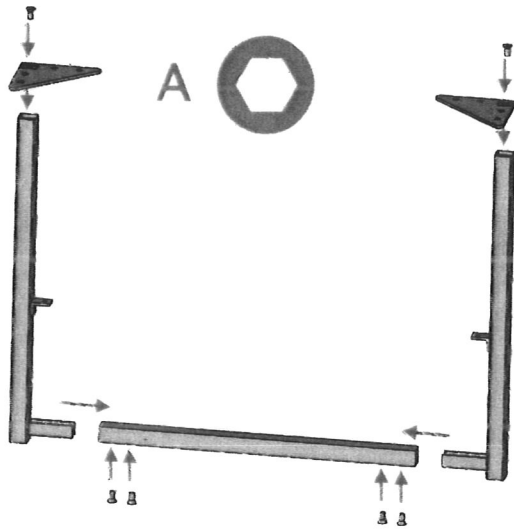


Tools required: 3mm Allen key
Phillips Screwdriver

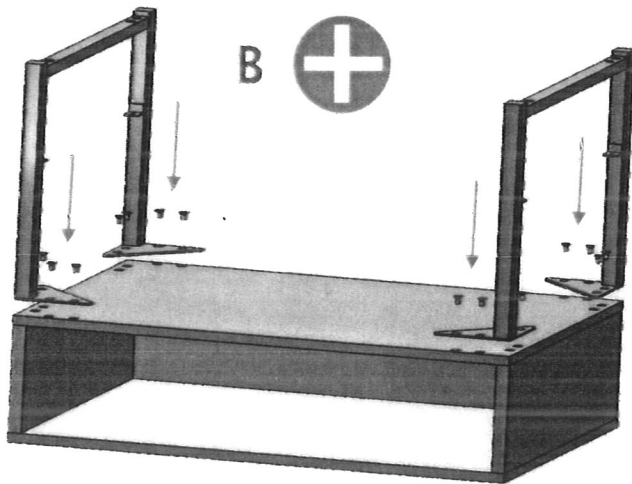

Step 1: Using the Allen key bolts (A) included in the box, secure the two triangular plates to the two L-shaped legs.

Step 2: Insert the L-shaped legs into the horizontal bar and secure using two Allen bolts (A) per side.

Step 3: Secure the legs to the underside of the locker using four Phillips head bolts (B) per corner.

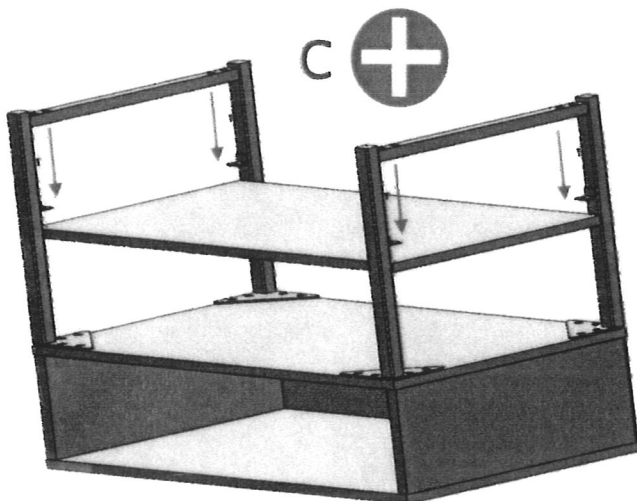

Step 4 (optional): If the locker is supplied with the optional shelf, attach it to the brackets on the legs using the self-tapping screws (C).