
HKDM075

Assembly Manual

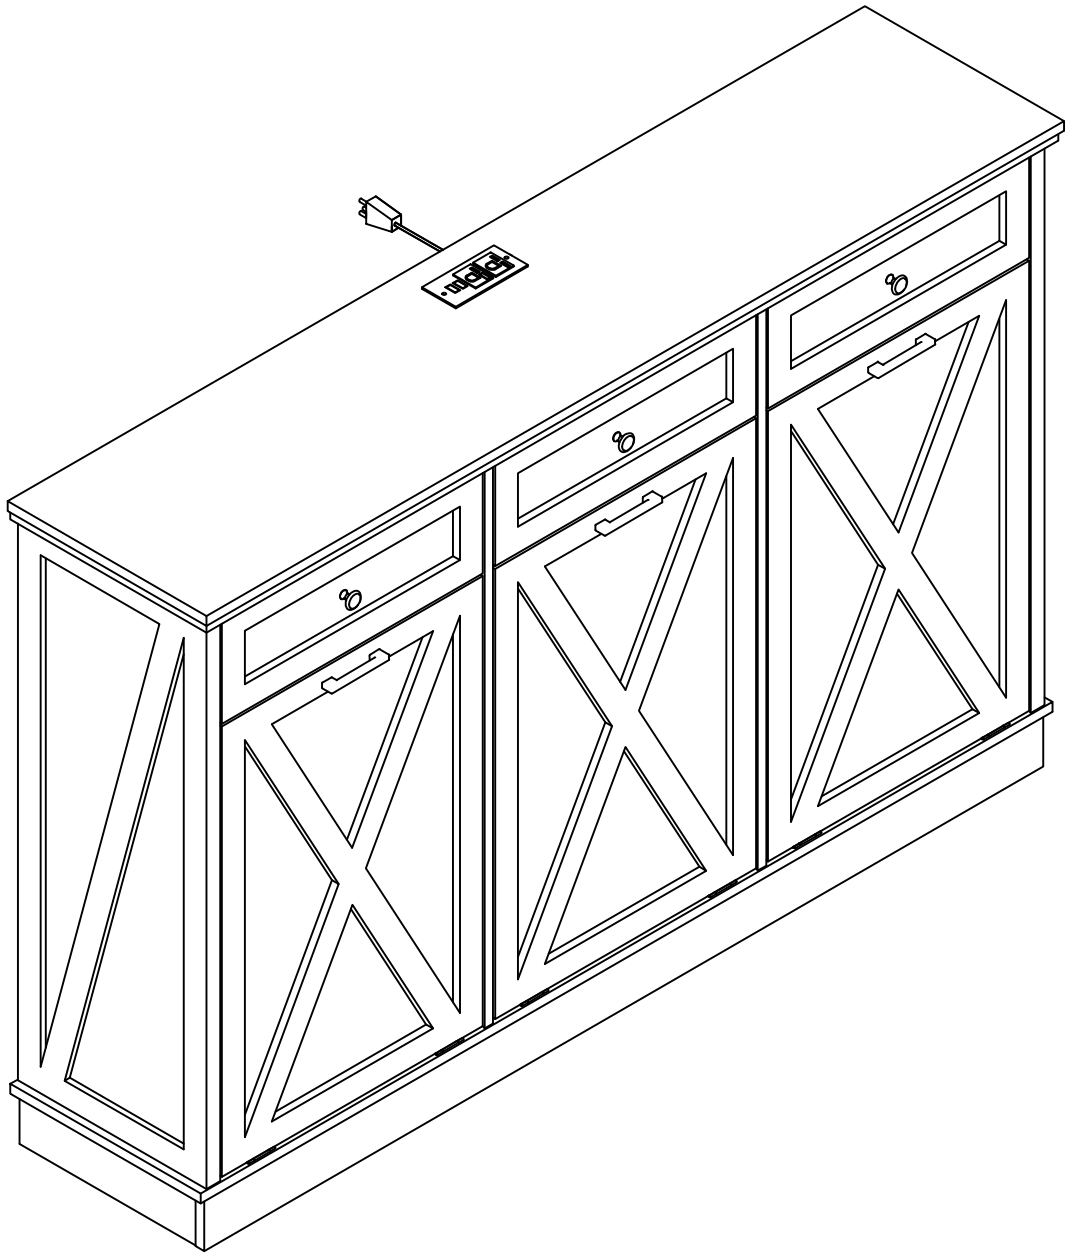



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.






SAFETY TIPS:

Static charge may cause duston foam- clean with a dry ordamp cloth.
Small foam strands may bepresent - handle gently and dispose of properly.
Do not burn or incinerate.
Check local recyclingguidelines.



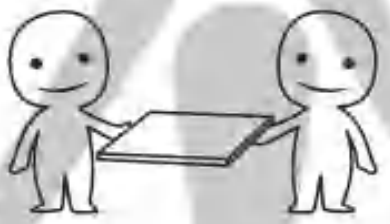

AVOID SCRATCHES!

In order to avoid scratching this furnu ture should be assembled on a soft la yer-could be a rug.

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the install ation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks ft er assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.
Please use proper tools for assembly.Using an electricscrewdriver can accelerate the assemol y speedbut pleasedo not overtighten the sorews.

Peel off the film before use!


Board Identification

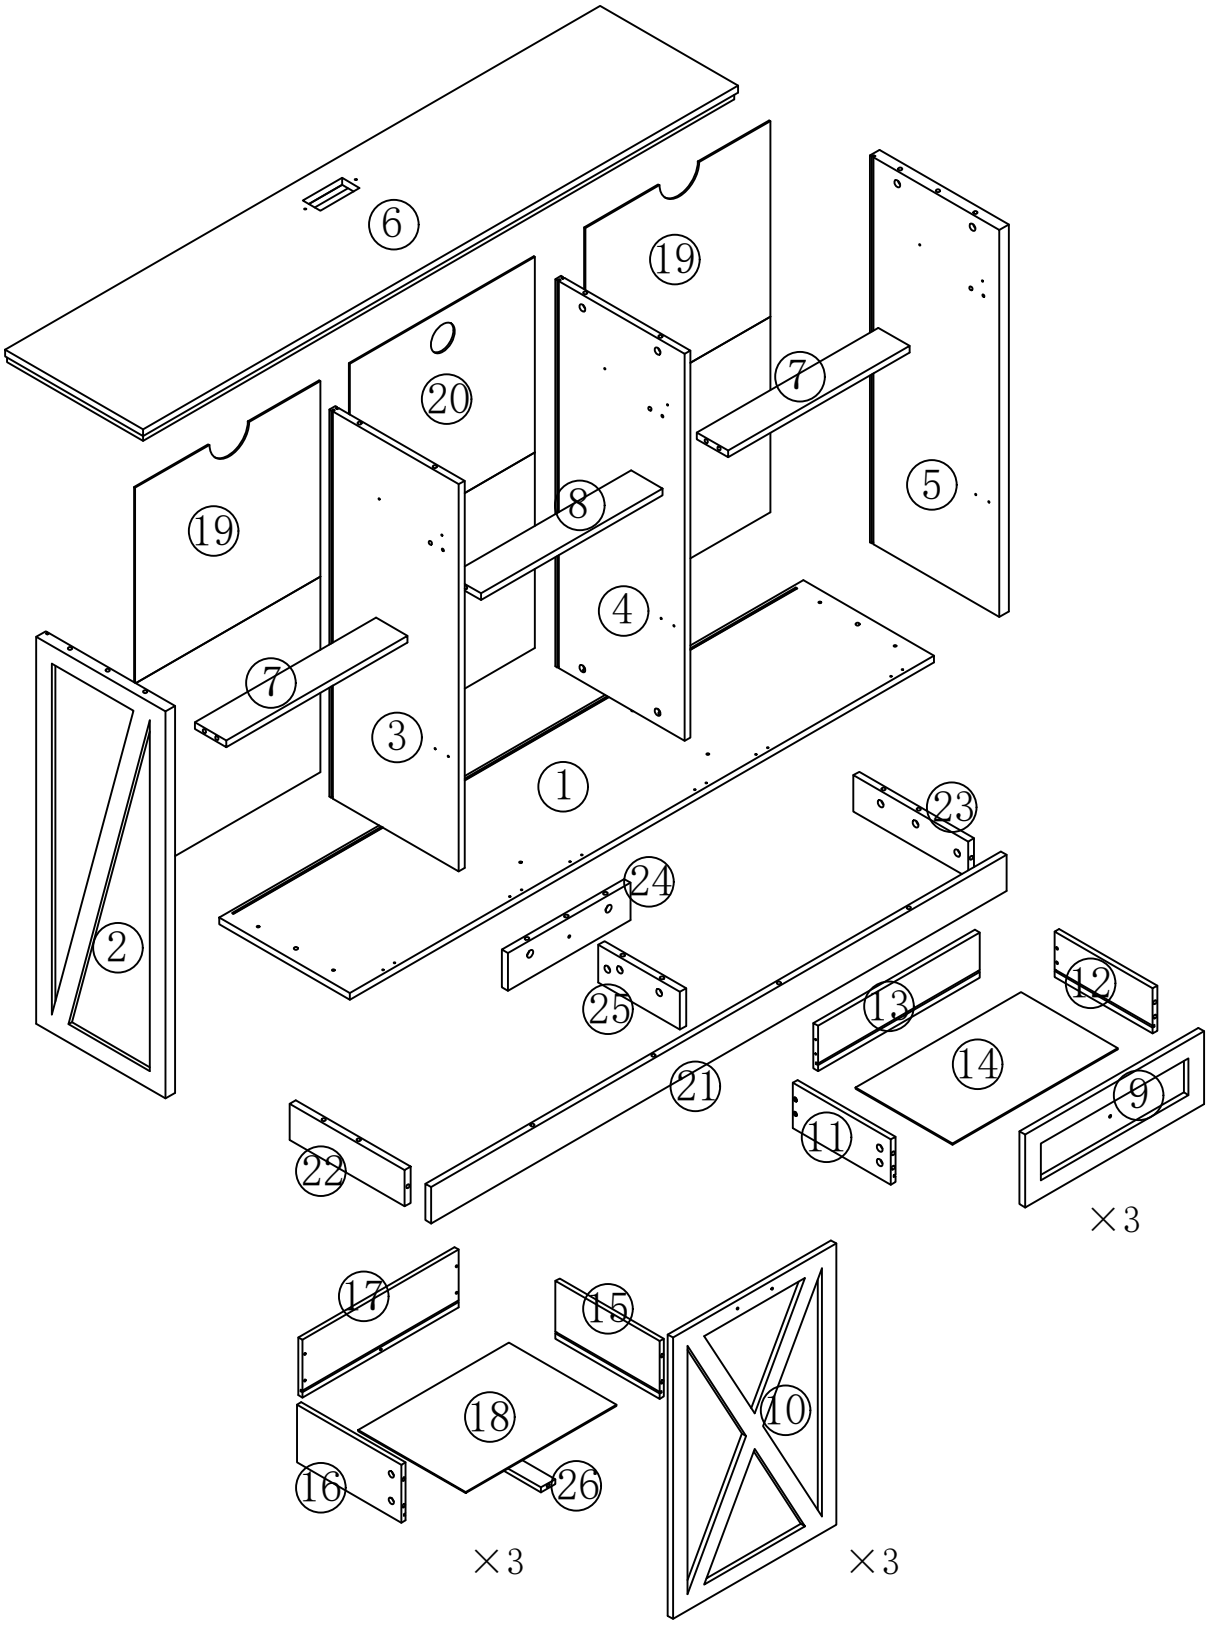


PARTSLIST

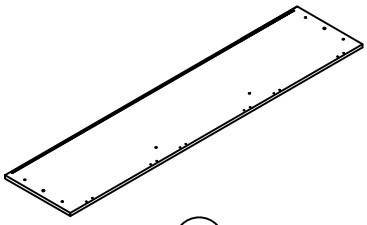


① ×1

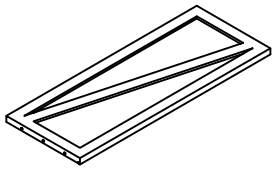


② ×1

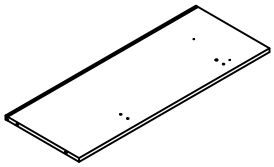


③ ×1

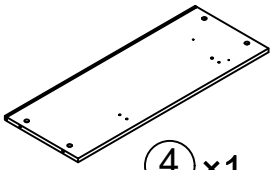


④ ×1

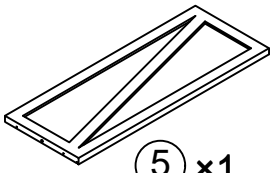


⑤ ×1

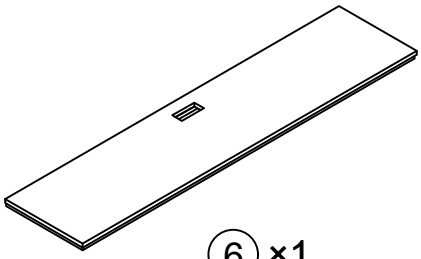


⑥ ×1




⑦ ×2




⑧ ×1




⑨ ×3

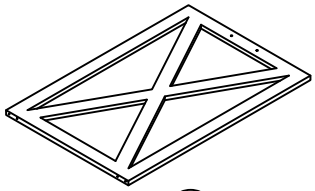


⑩ ×3




⑪ ×3




⑫ ×3




⑬ ×3




⑭ ×3




⑮ ×3



⑯ ×3




⑰ ×3




⑱ ×3


PARTSLIST

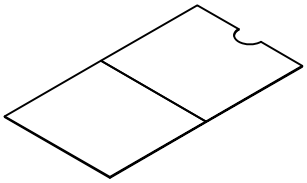


⑲×2

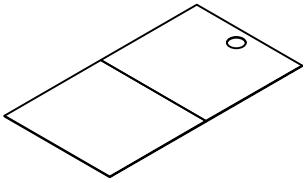


⑳×1

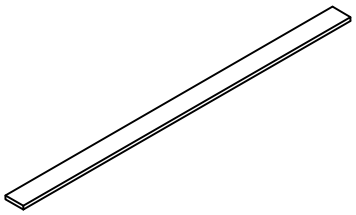


㉑×1




㉒×1




㉓×1




㉔×1




㉕×1







㉖×3

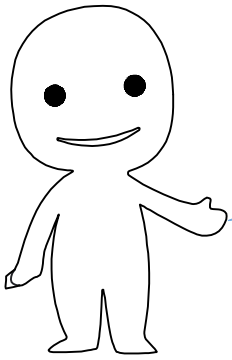




Please prepare the following tools

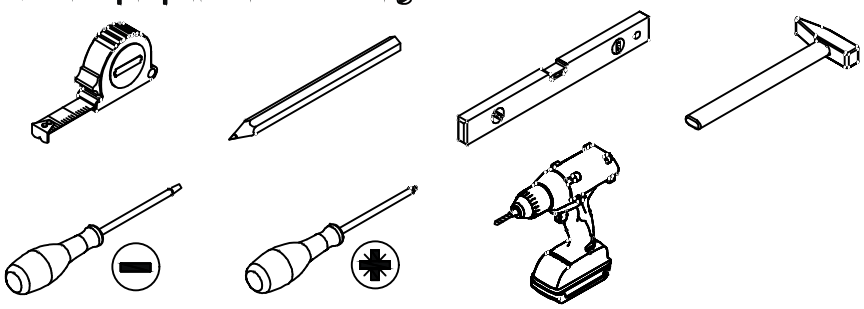

A x58	B x58	C x13	D x48
			
ϕ5*35mm	ϕ15*9mm	ϕ6*30mm	3*12mm

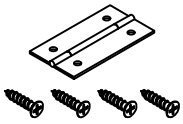F x31	G x3	H x3	I x6
			
4*40mm			


J x3	K x3	L x58	M x4
			

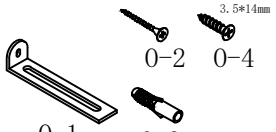
N x1	O x2	CL x3	CR x3
			
		L=250mm	L=250mm


DL x3	DR x3
	
L=250mm	L=250mm


1

A X 37	I X 12	I X 6	O X 2	
Ø5 x 35 mm	Ø3 x 14 mm			

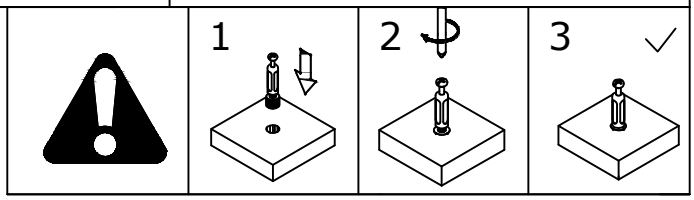


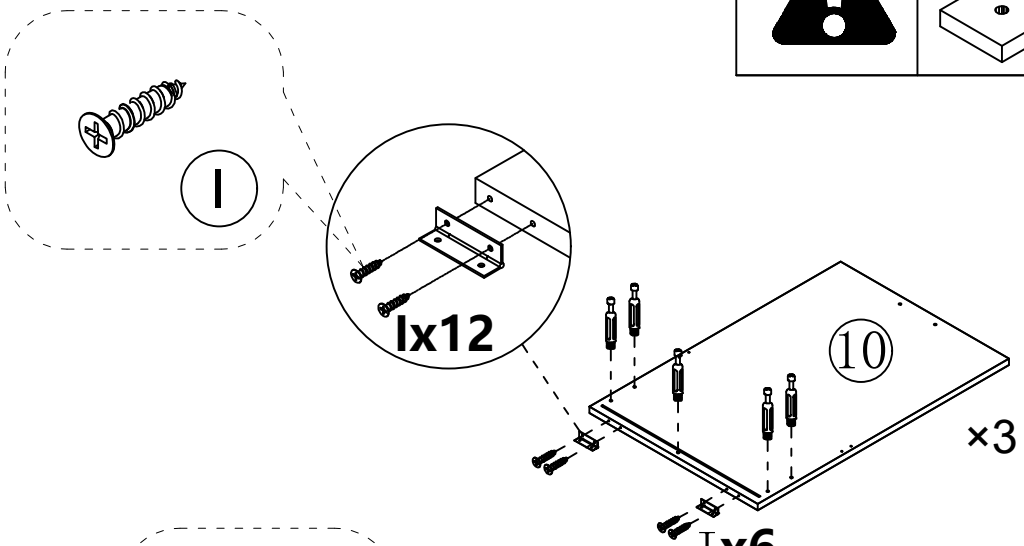

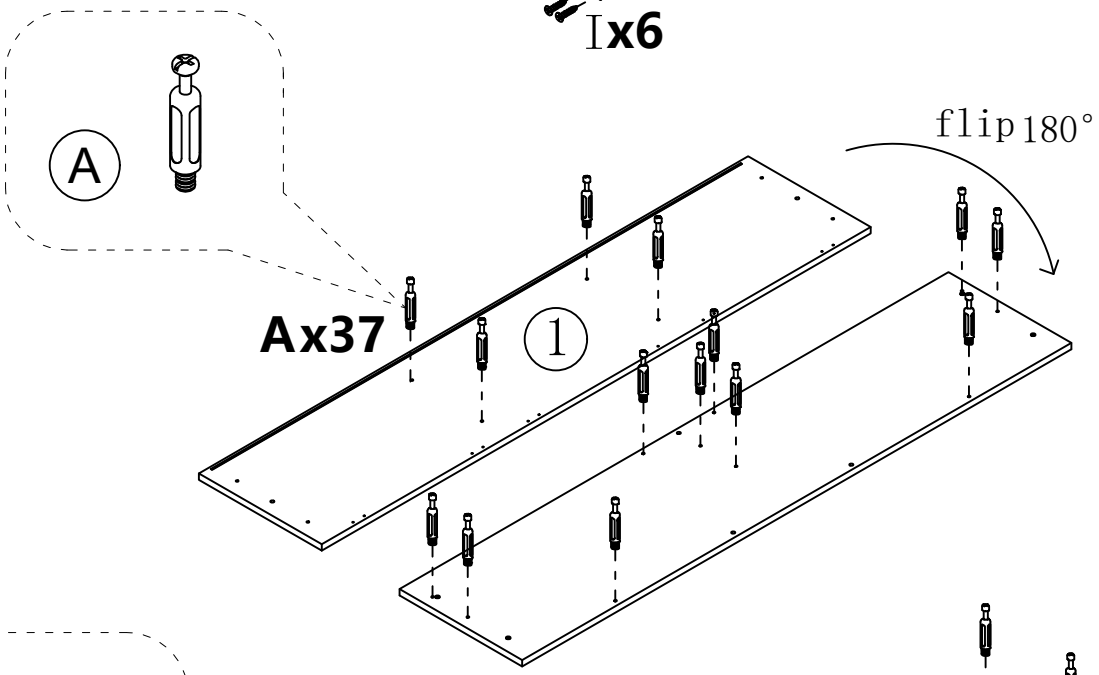


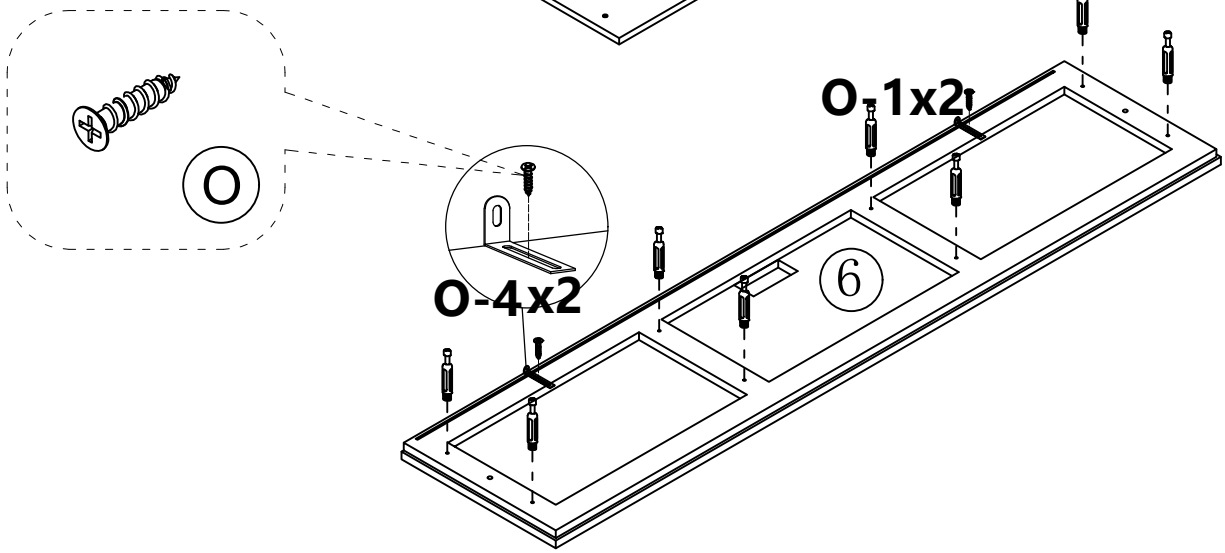



2

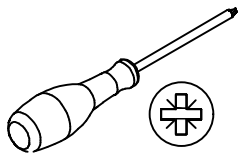
D x 6	CLx 3	
		
Ø3 x 12mm	L=250mm	

When installing the right-side sliding rail, please install the corresponding side rail according to the hole positions shown in the diagram, and note that the rollers should be positioned at the lower part.

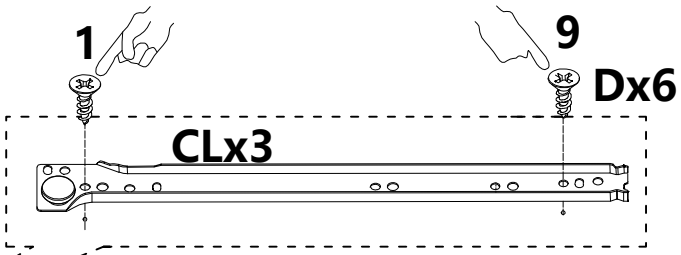


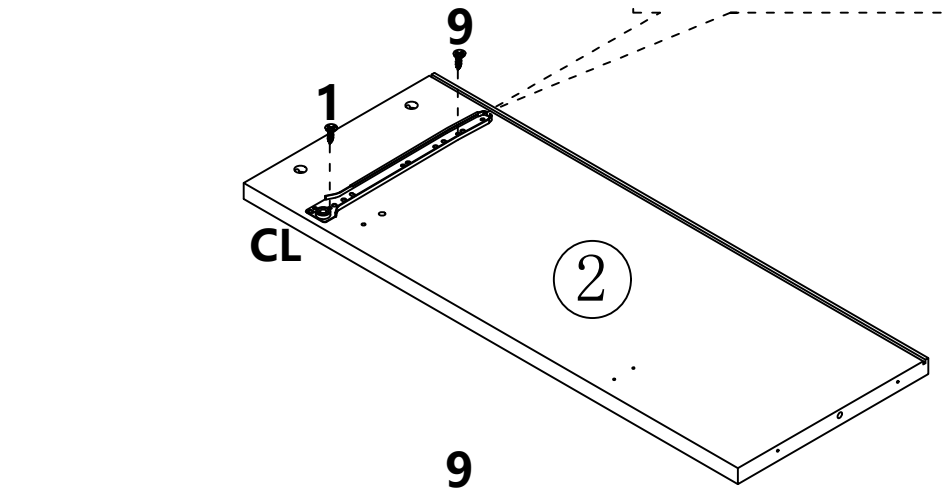

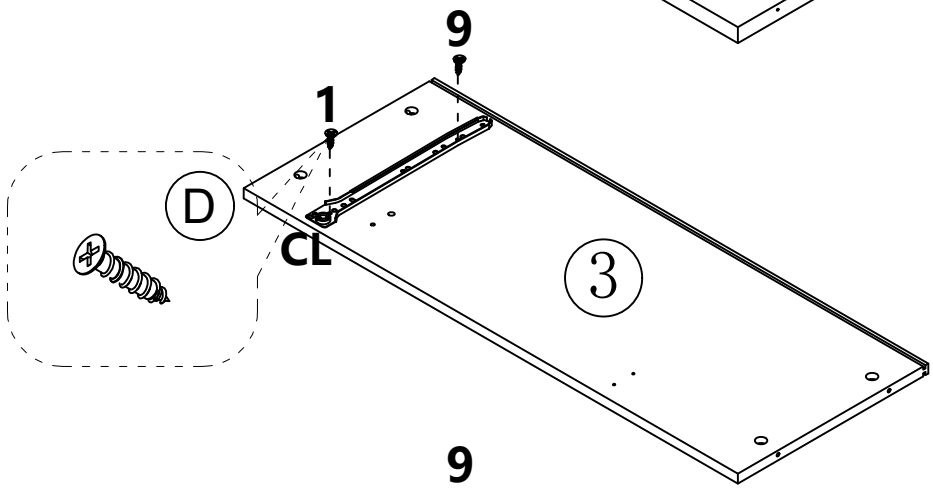


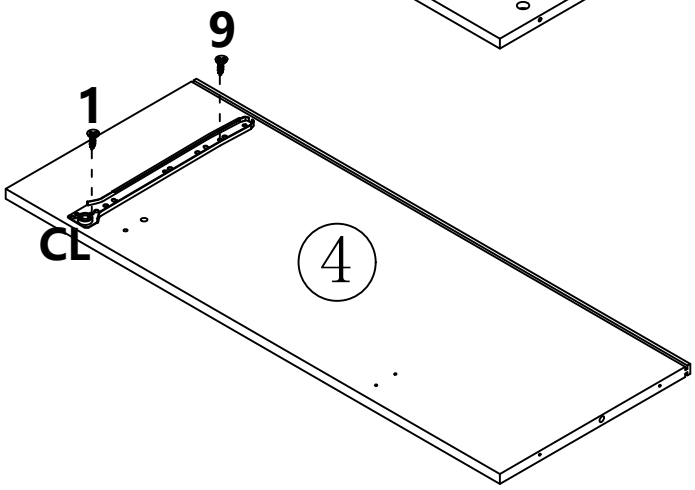



3

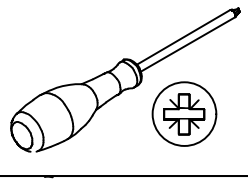
D x 6	CR x 3	
		
Ø3 x 12 mm	L=250mm	

When installing the left-side sliding rail, please install the corresponding side rail according to the hole positions shown in the diagram, and note that the rollers should be positioned at the lower part.

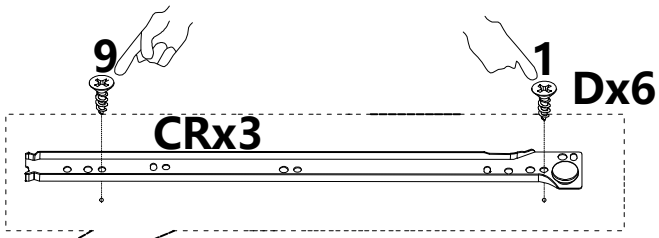


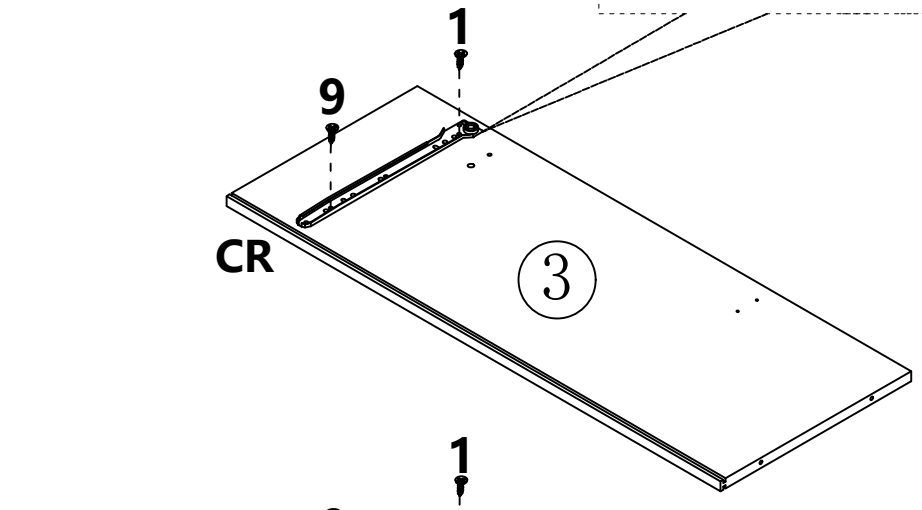


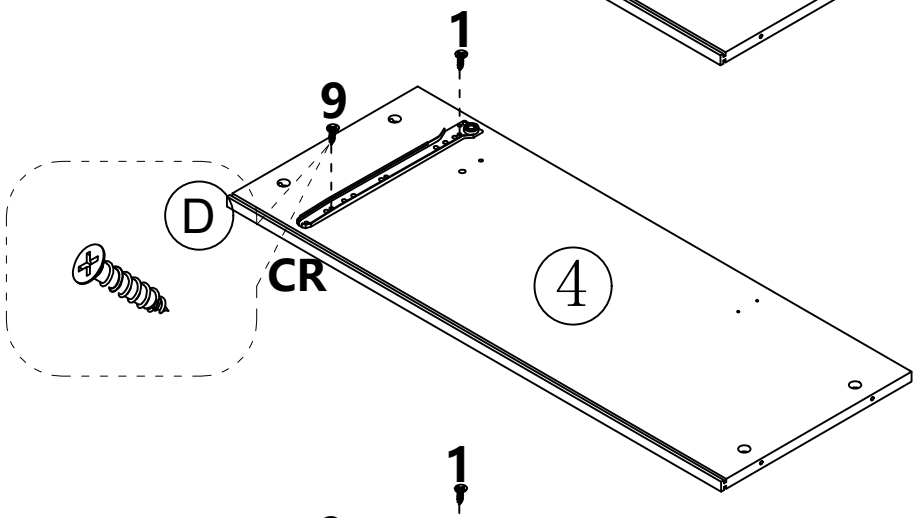

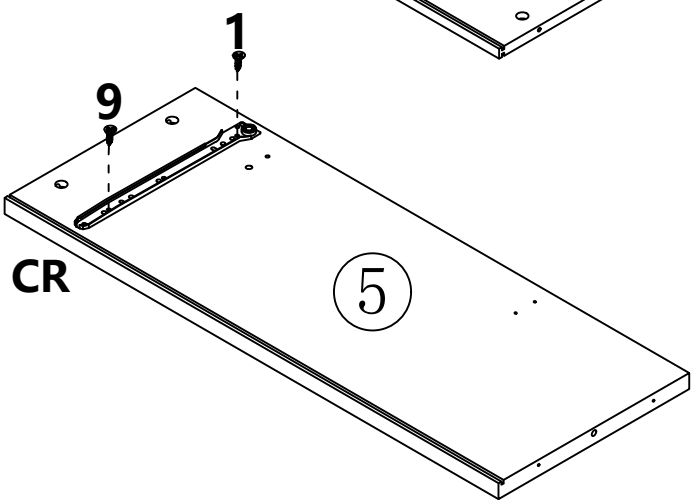


4

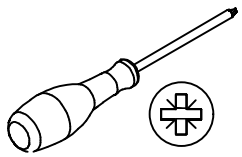
D x 12	J x 3	K x 3	
 Ø3 x 12 mm			

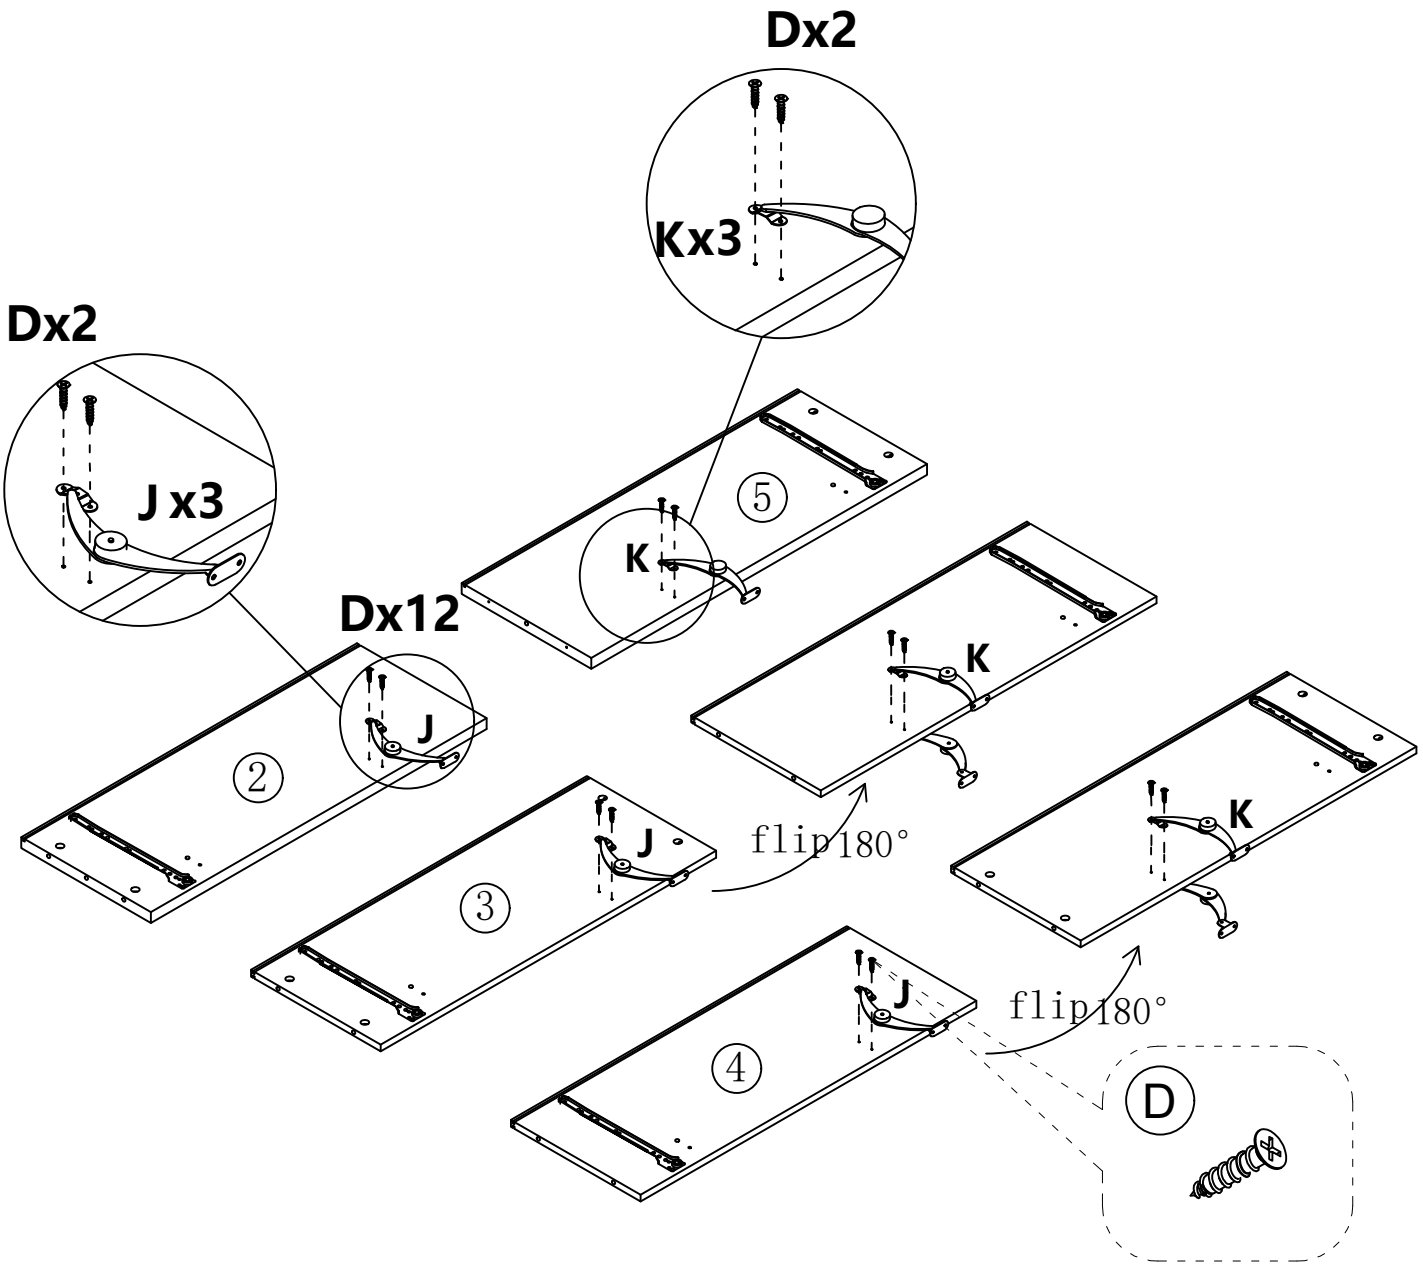

5


A X 2	B x 2	C X 2	
Ø5 x 35 mm	Ø15*9 mm	Ø6 x 30 mm	

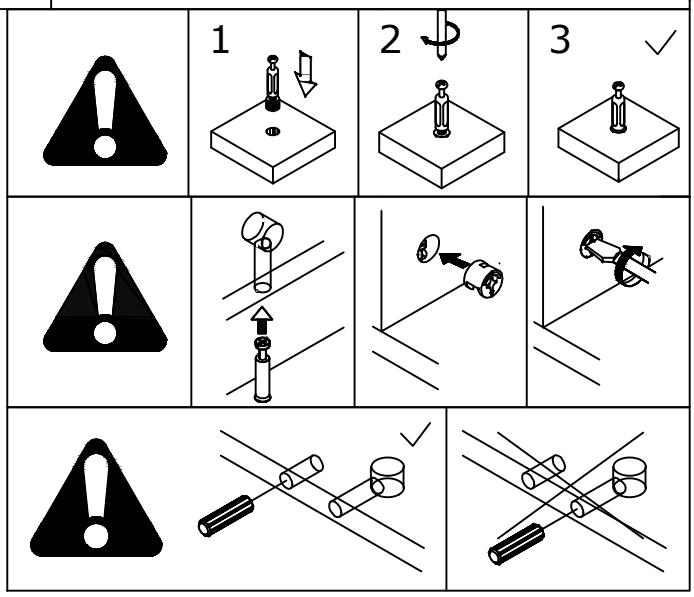


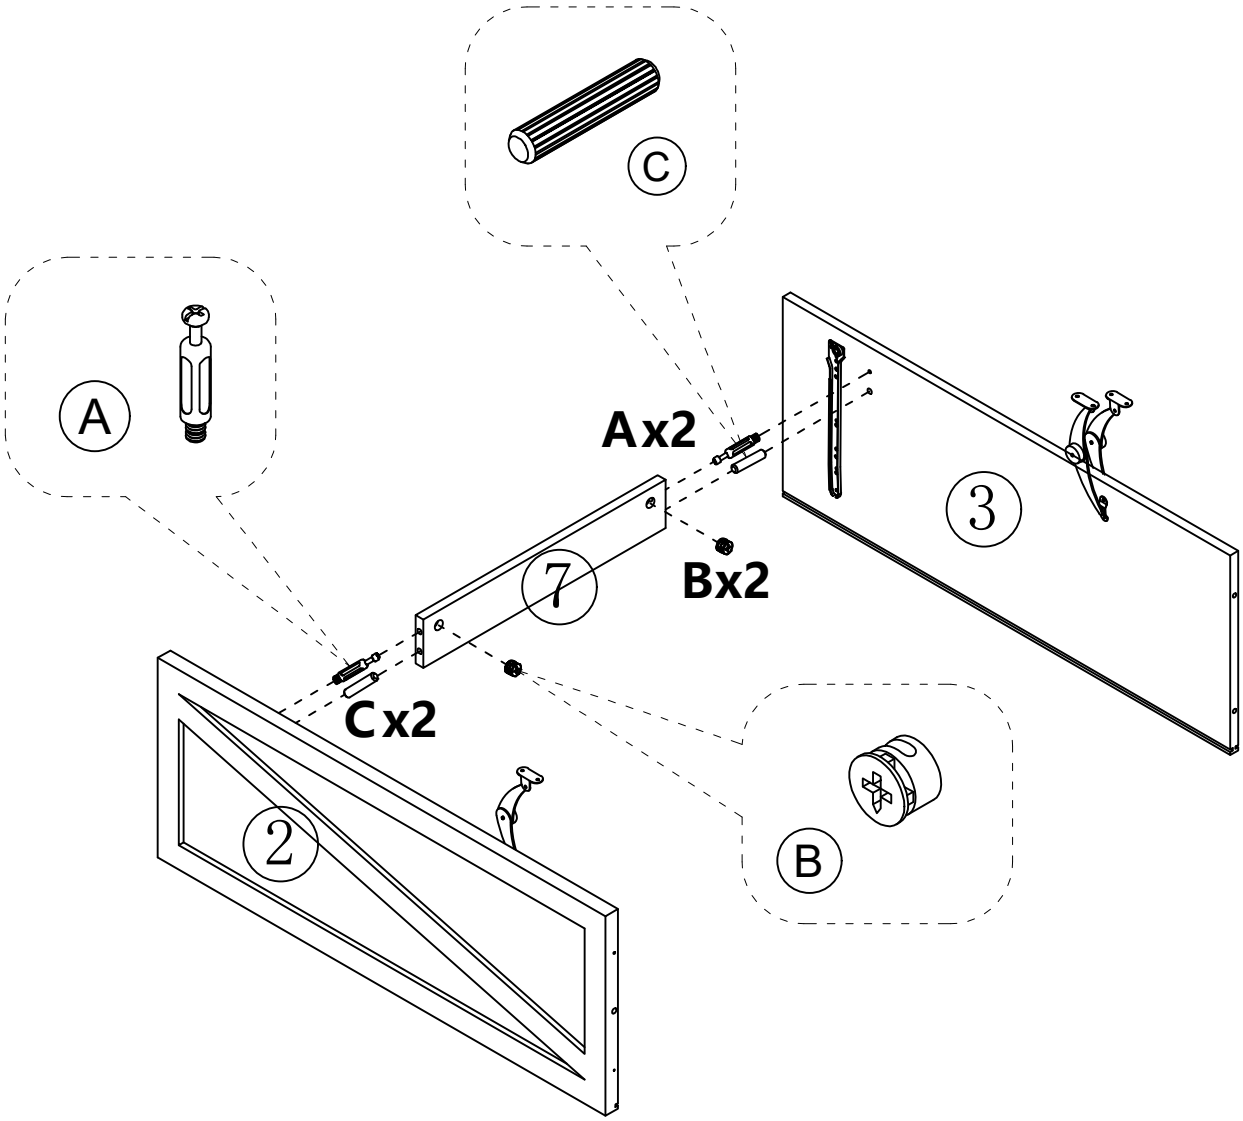

6


A X 2	B x 2	C X 2	
Ø5 x 35 mm	Ø15*9 mm	Ø6 x 30 mm	

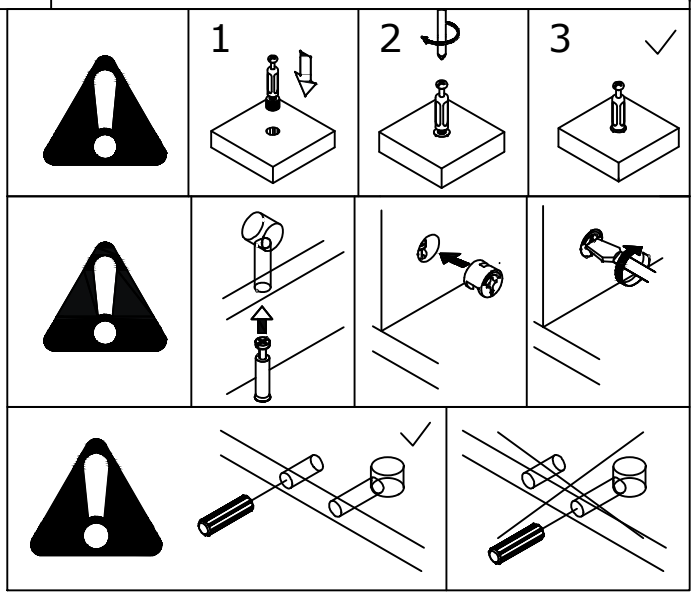


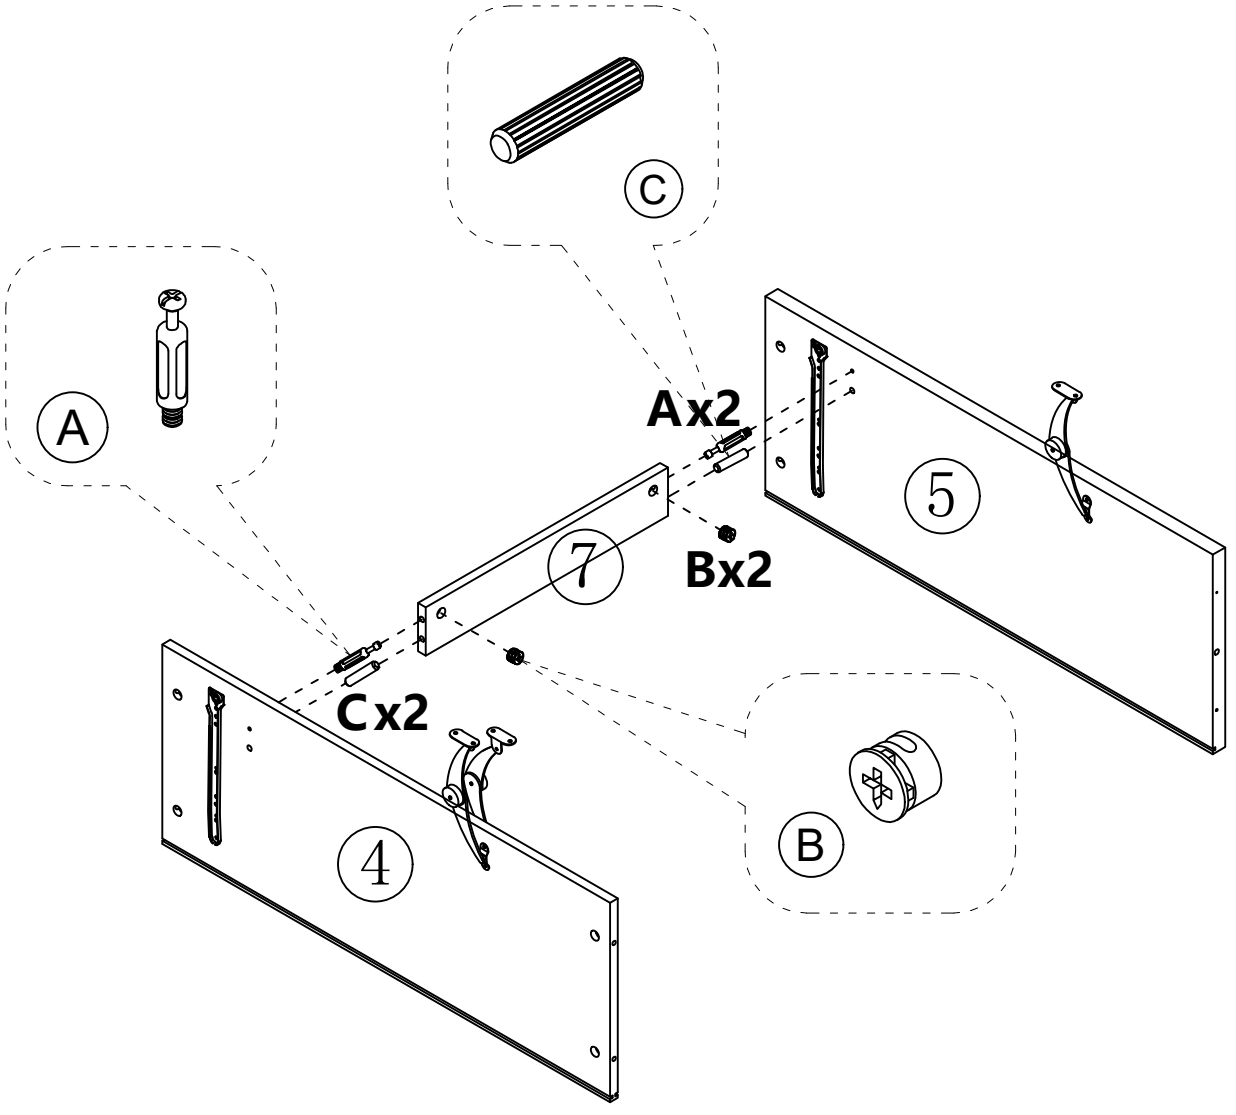

7


A X 2	B x 2	C X 2	
Ø5 x 35 mm	Ø15*9 mm	Ø6 x 30 mm	

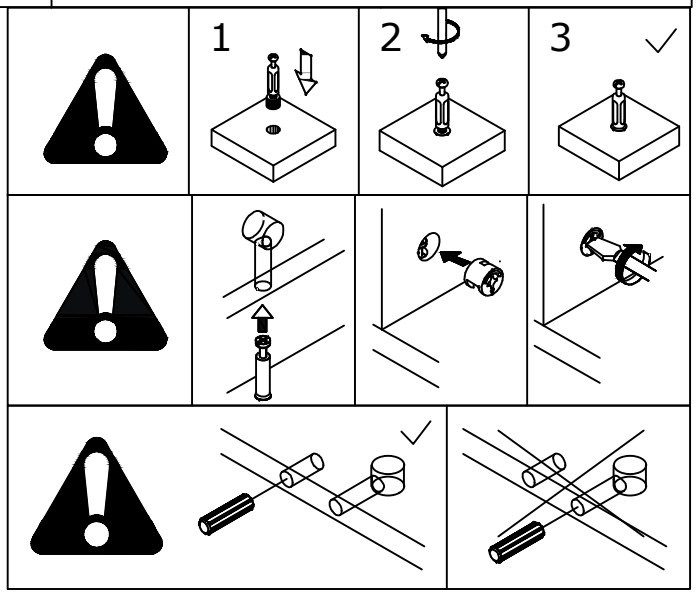


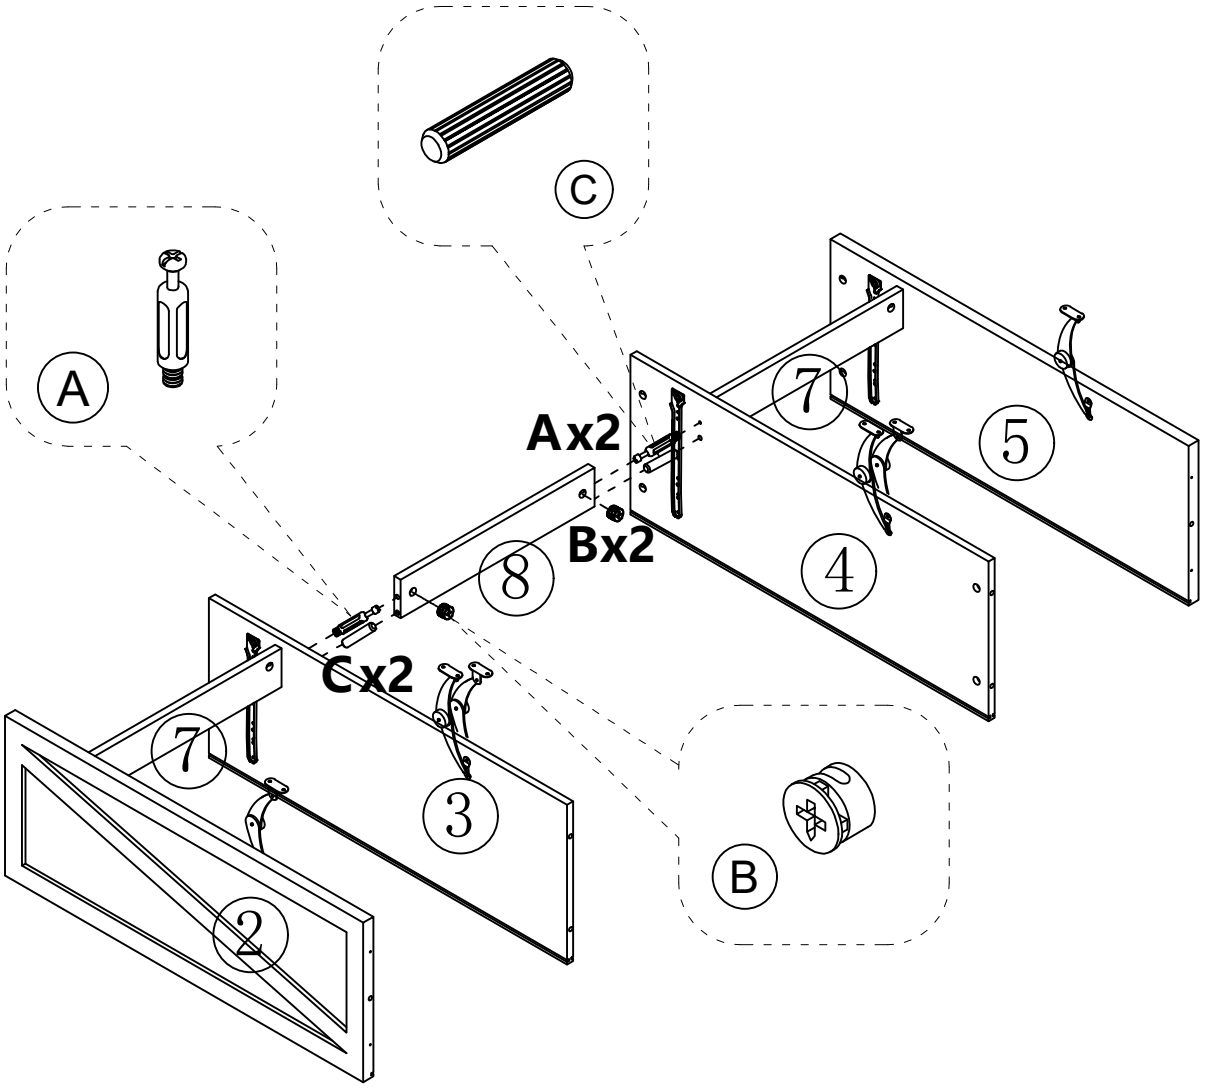



8


B x 4	C X 2	F X 4	
Ø15*9 mm	Ø6 x 30 mm	4*40mm	

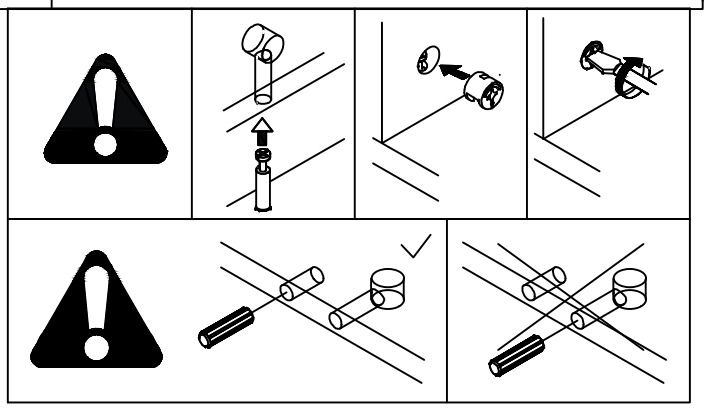


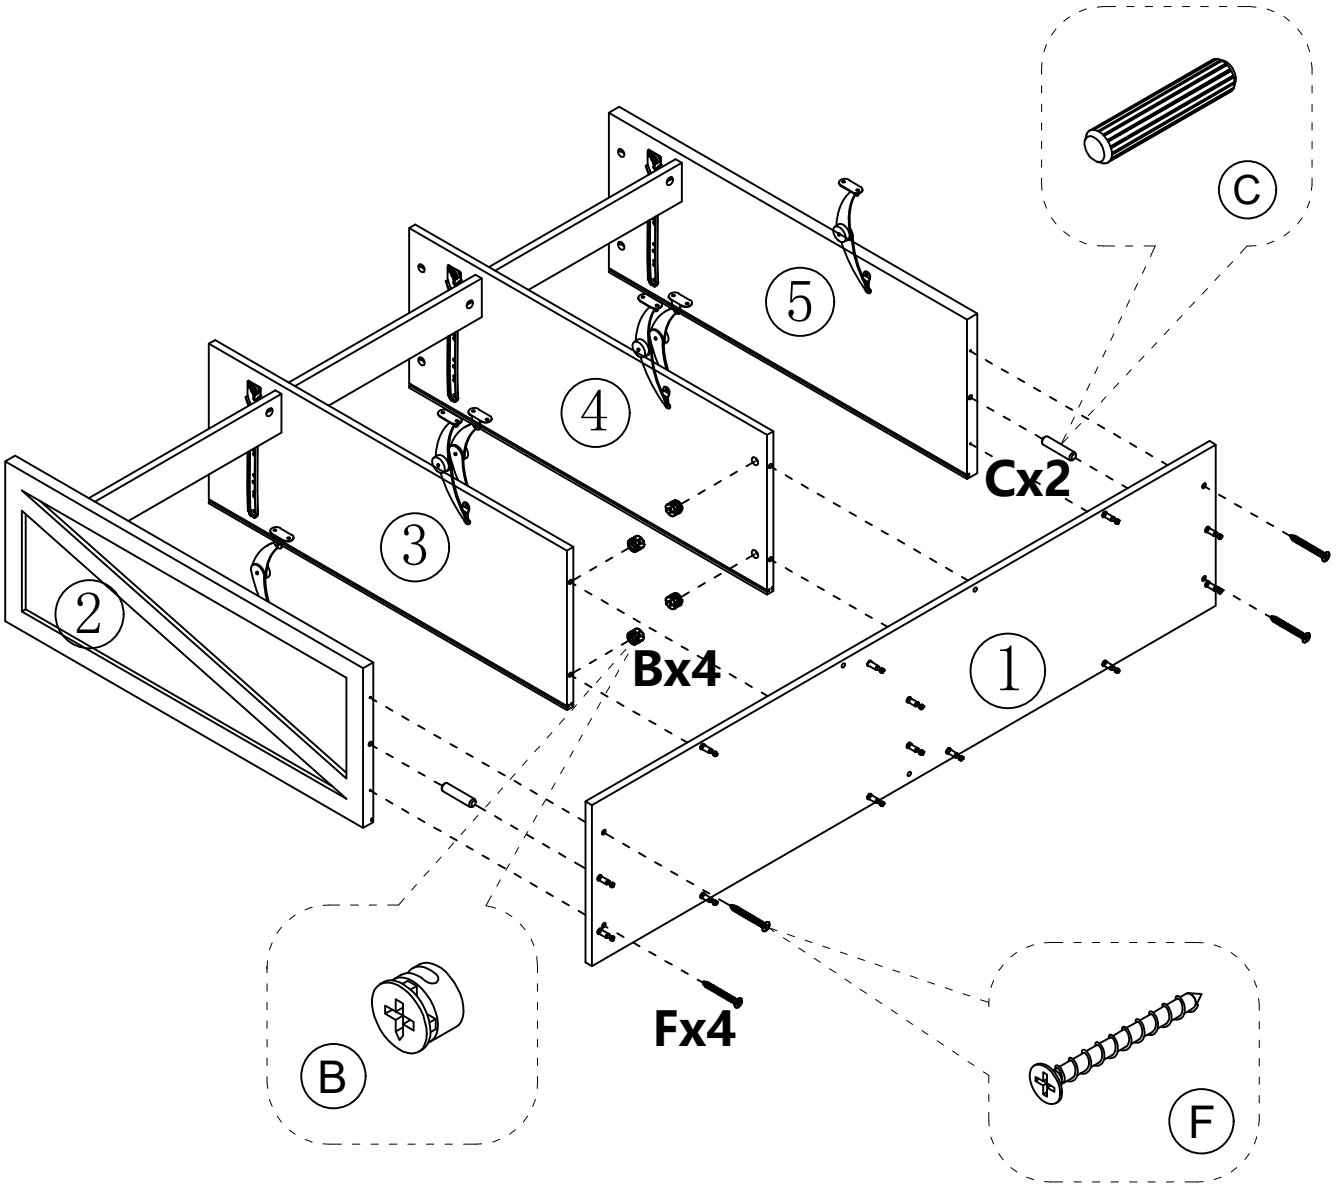


9

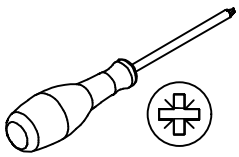
A X 3	B x 3	
 Ø5 x 35 mm	 Ø15*9 mm	

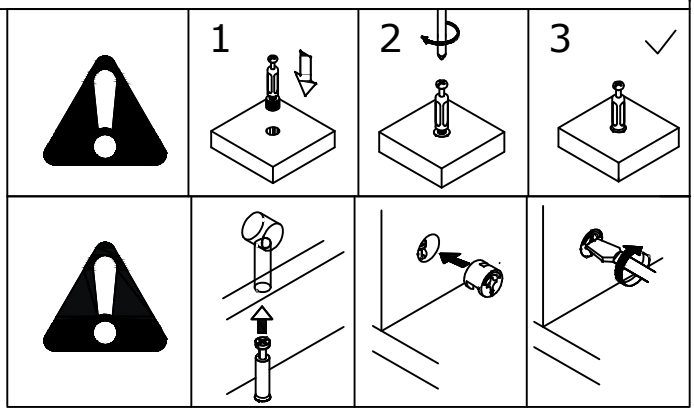


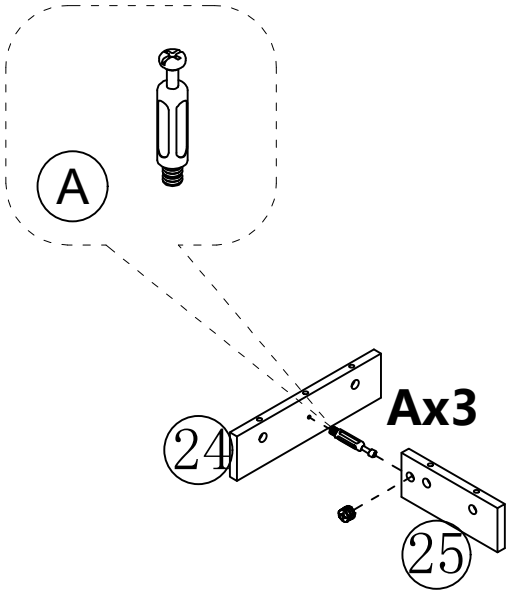


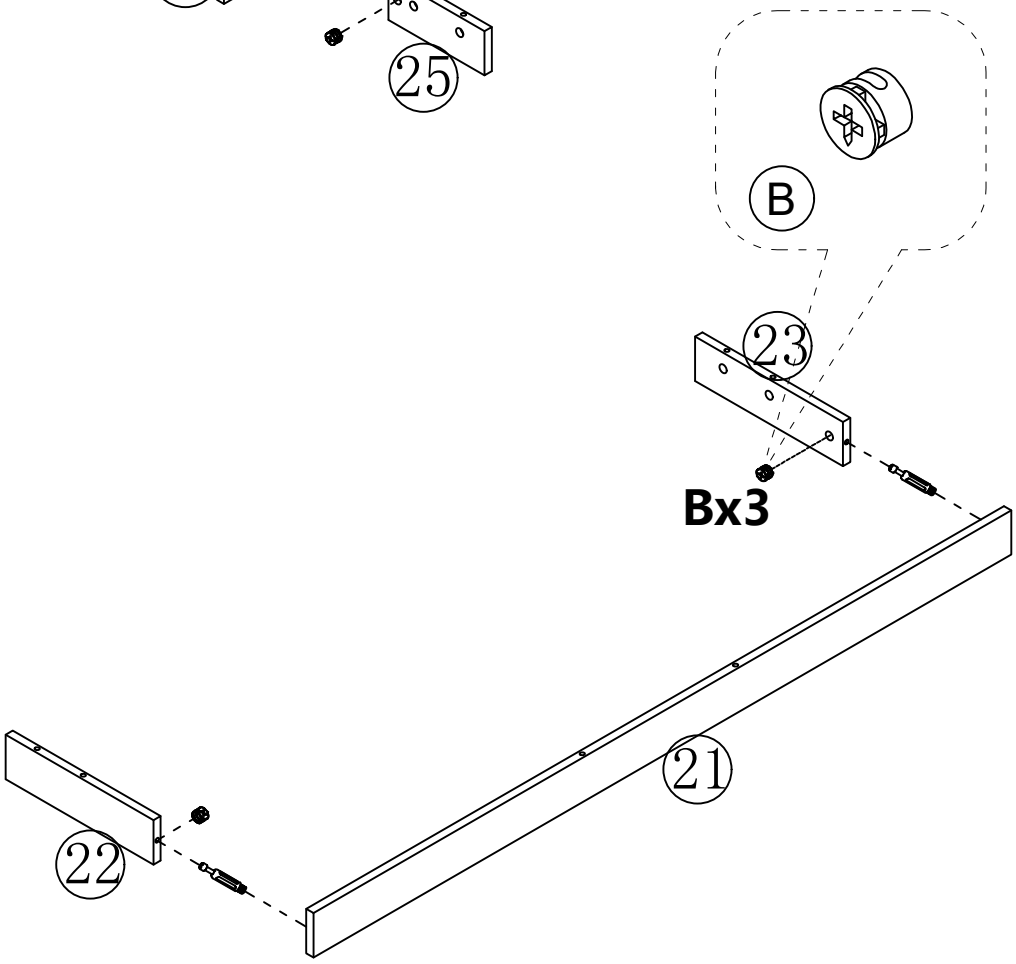

10

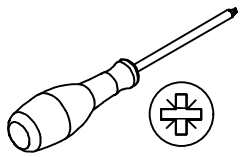B x 10	C X 3	
		
Ø15*9 mm	Ø6 x 30 mm	

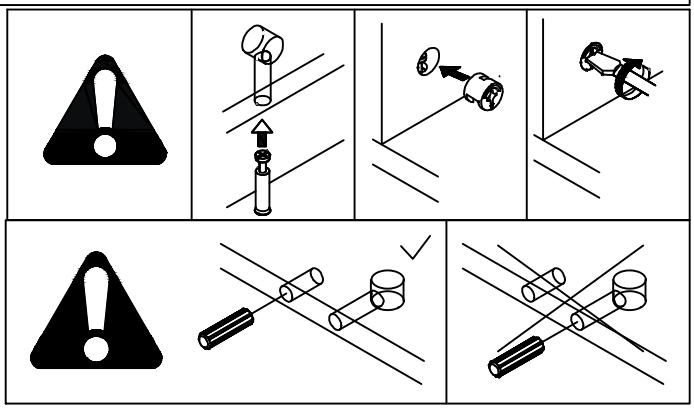

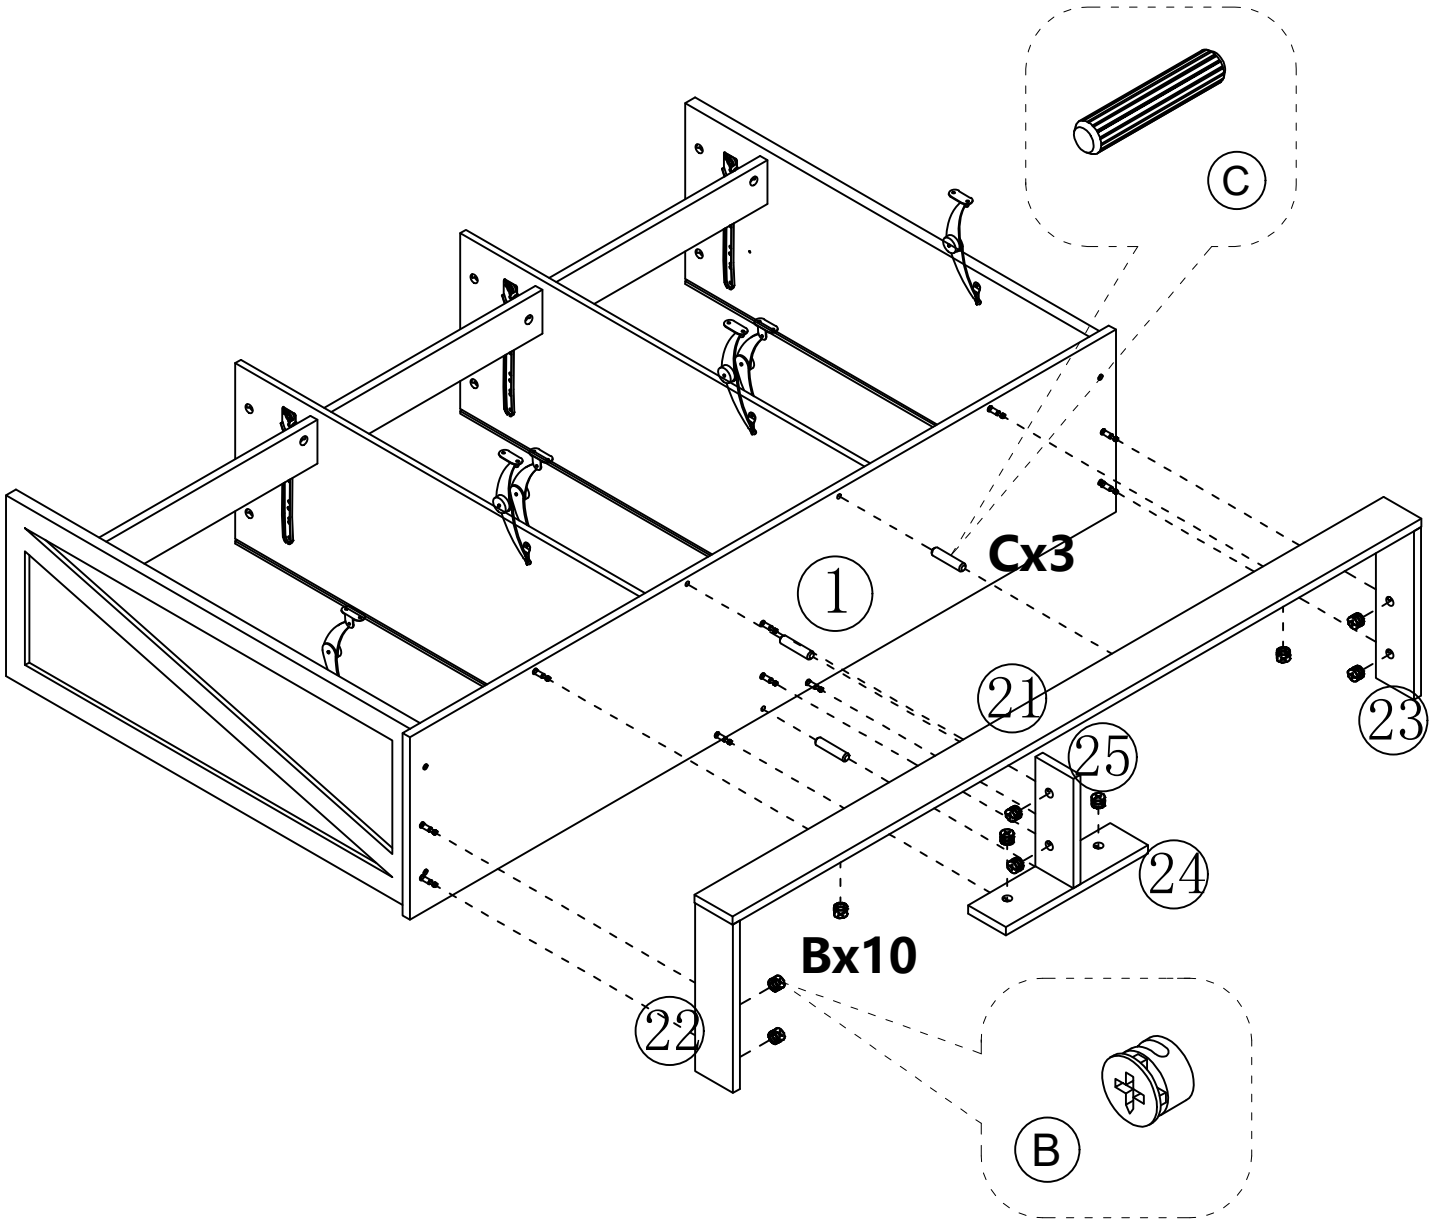



11

F X 15





4*40mm

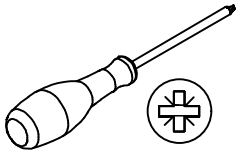

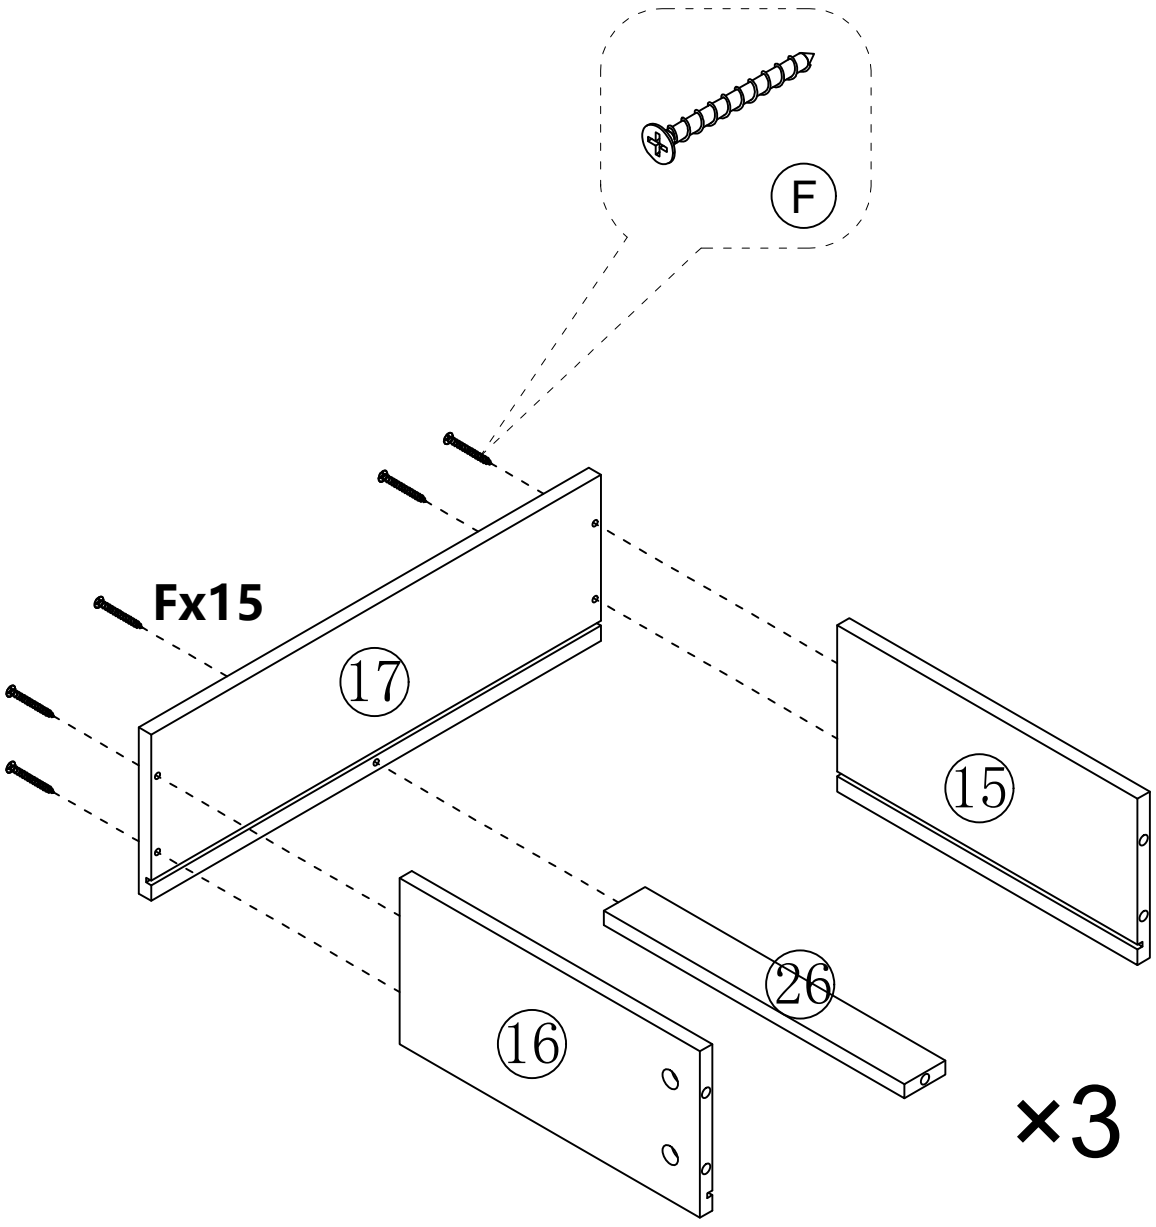



12

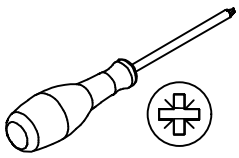


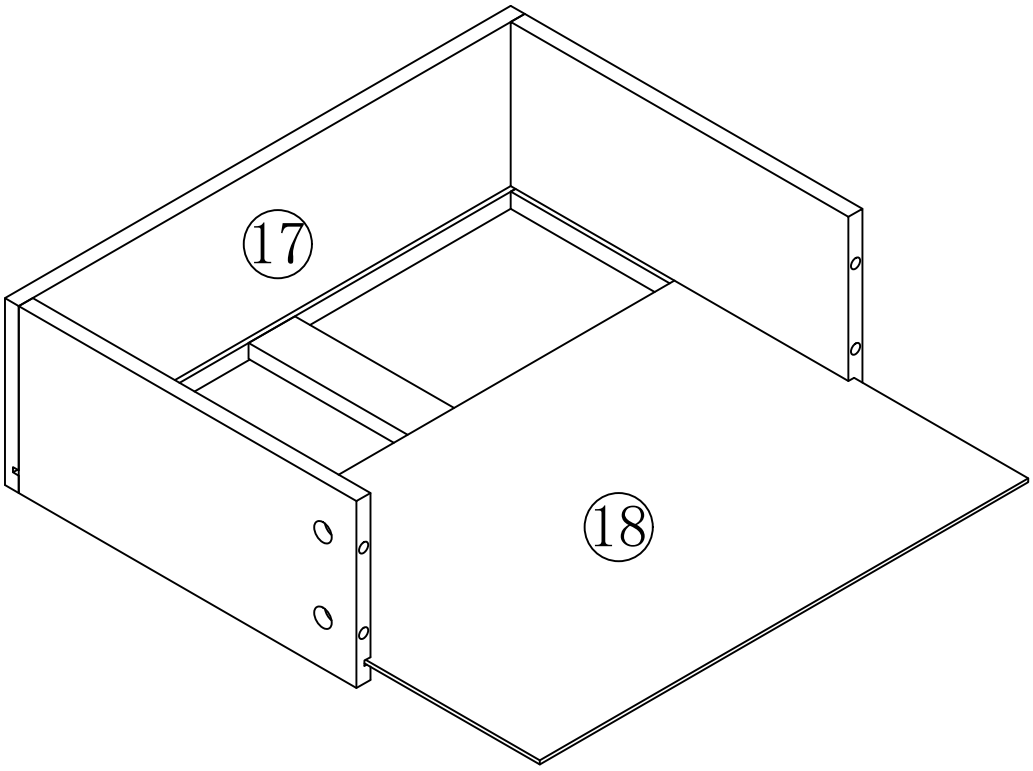



×3

13

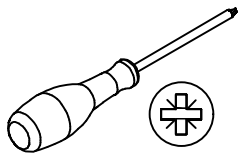B x 15	G x 3	
 Ø15*9 mm		

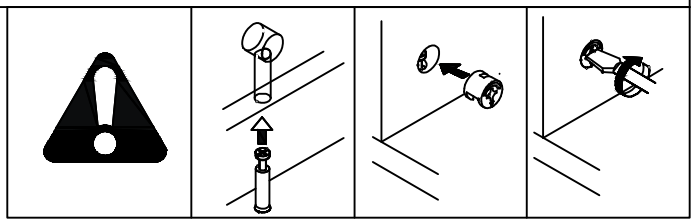


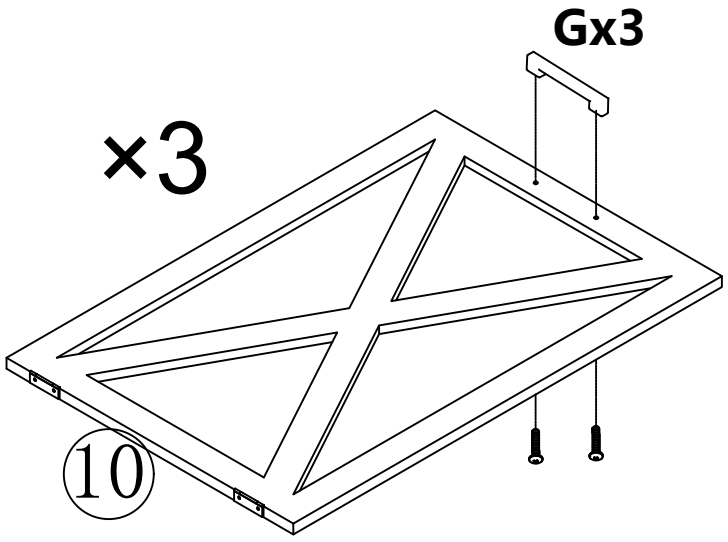

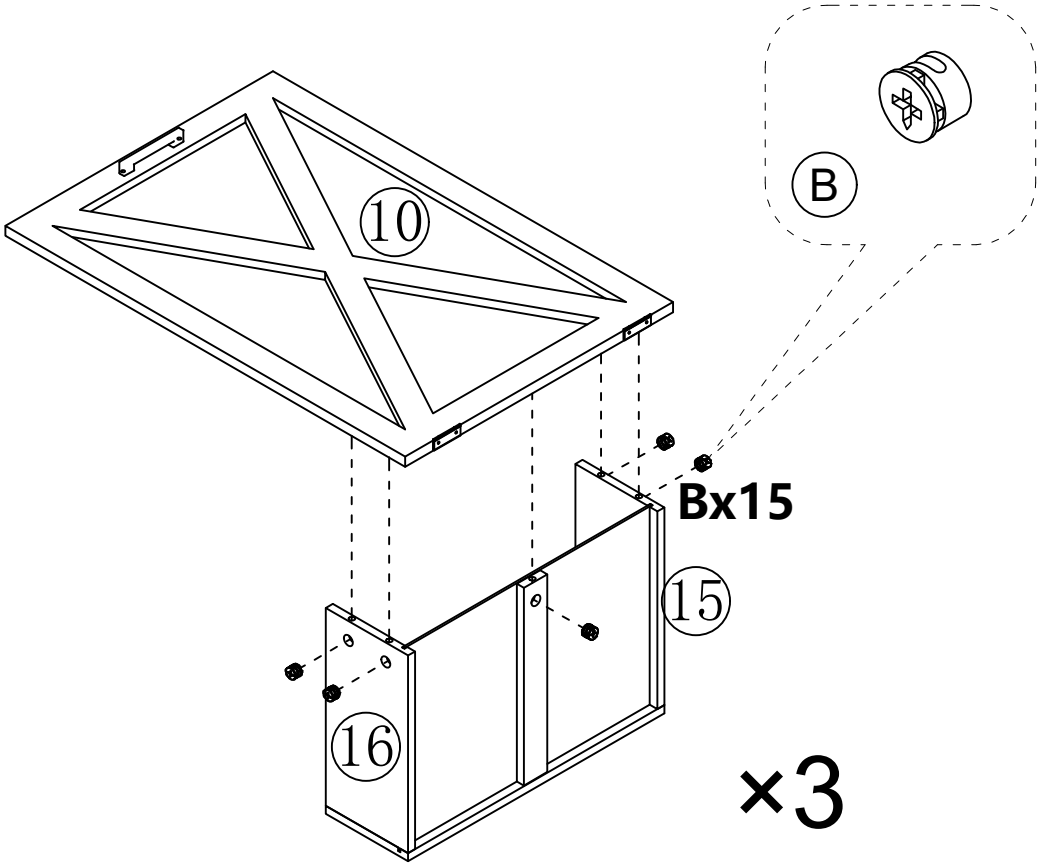

14

I x 12	

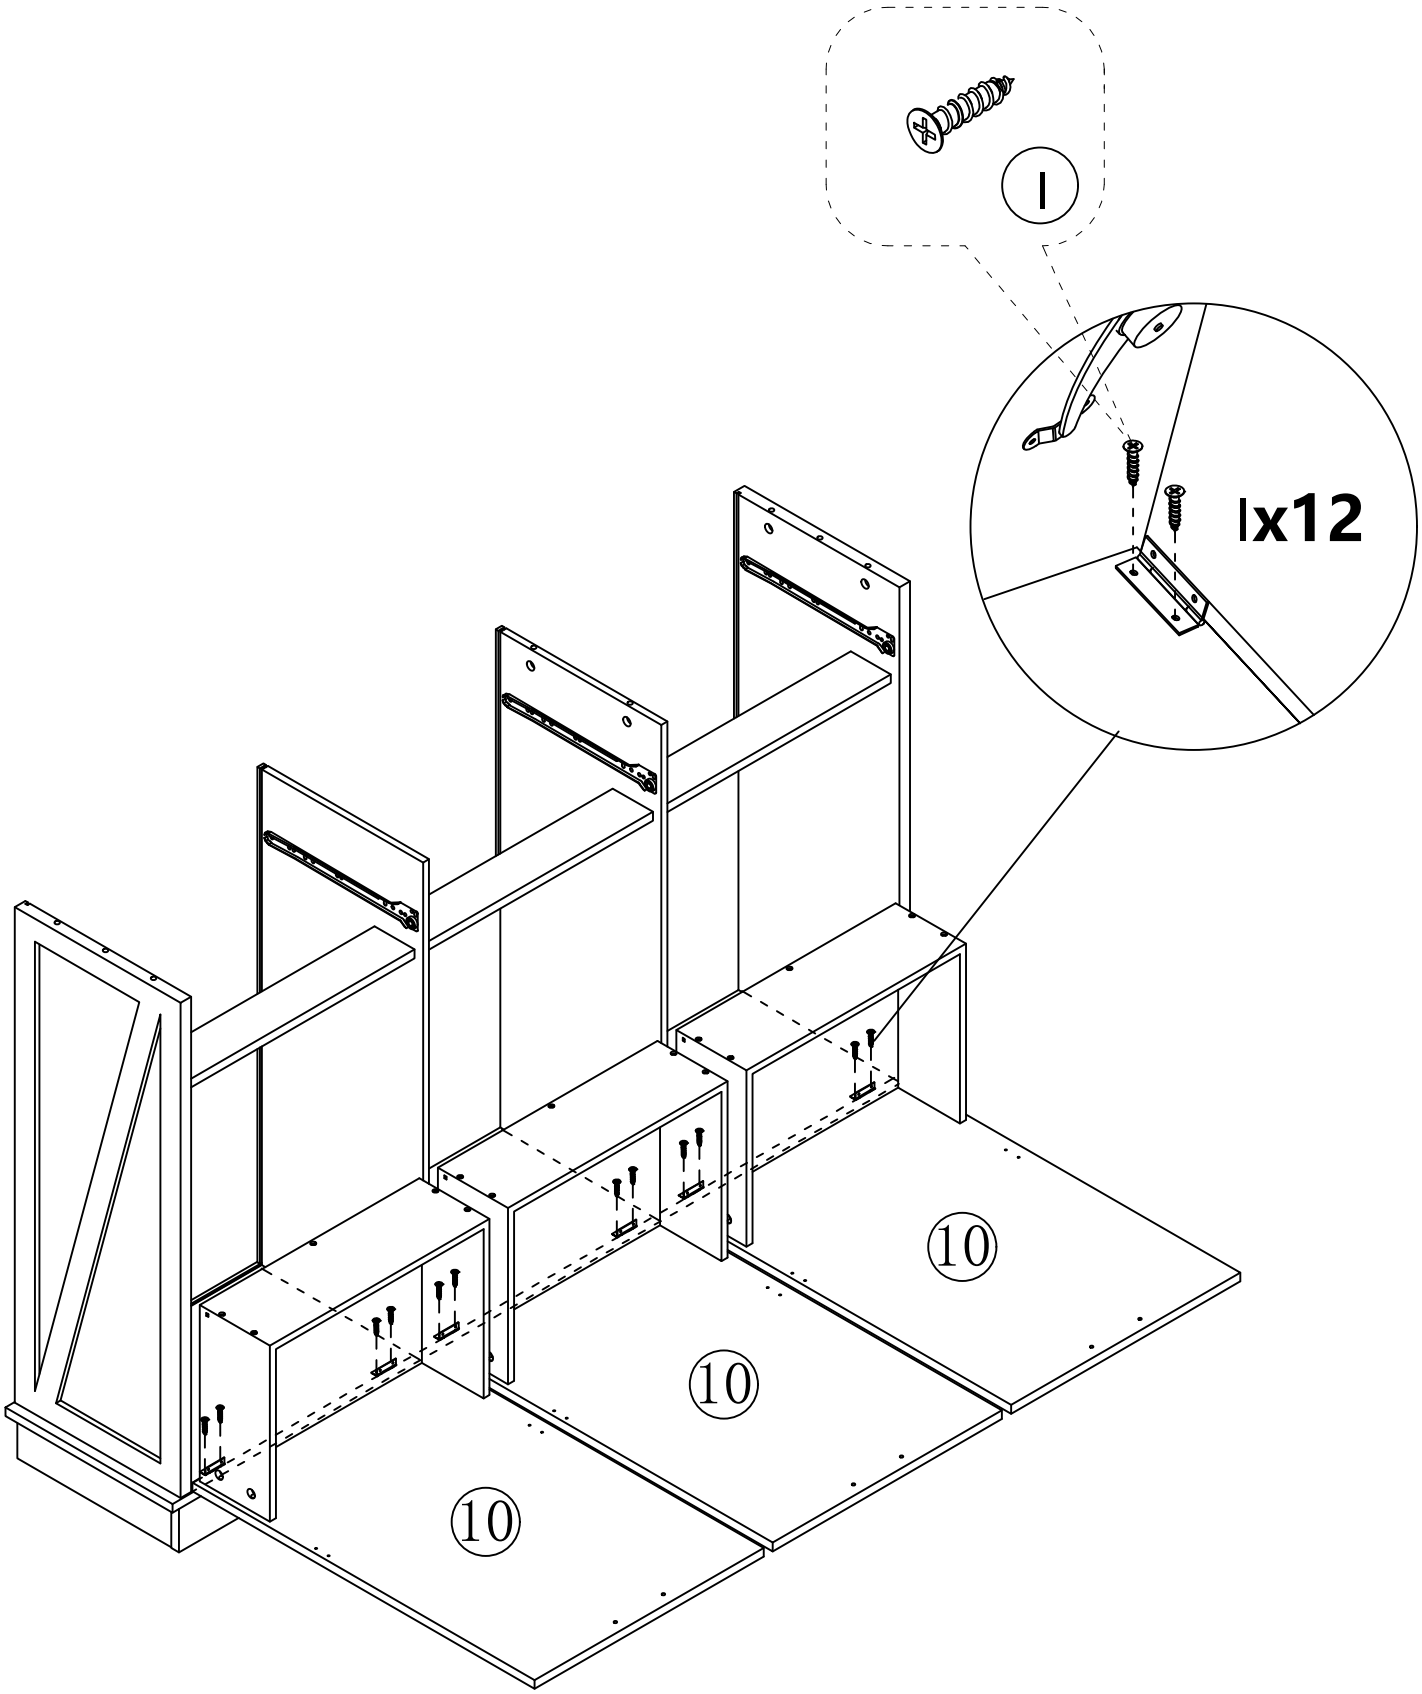



15

D x 12





Ø3 x 12 mm

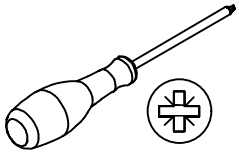

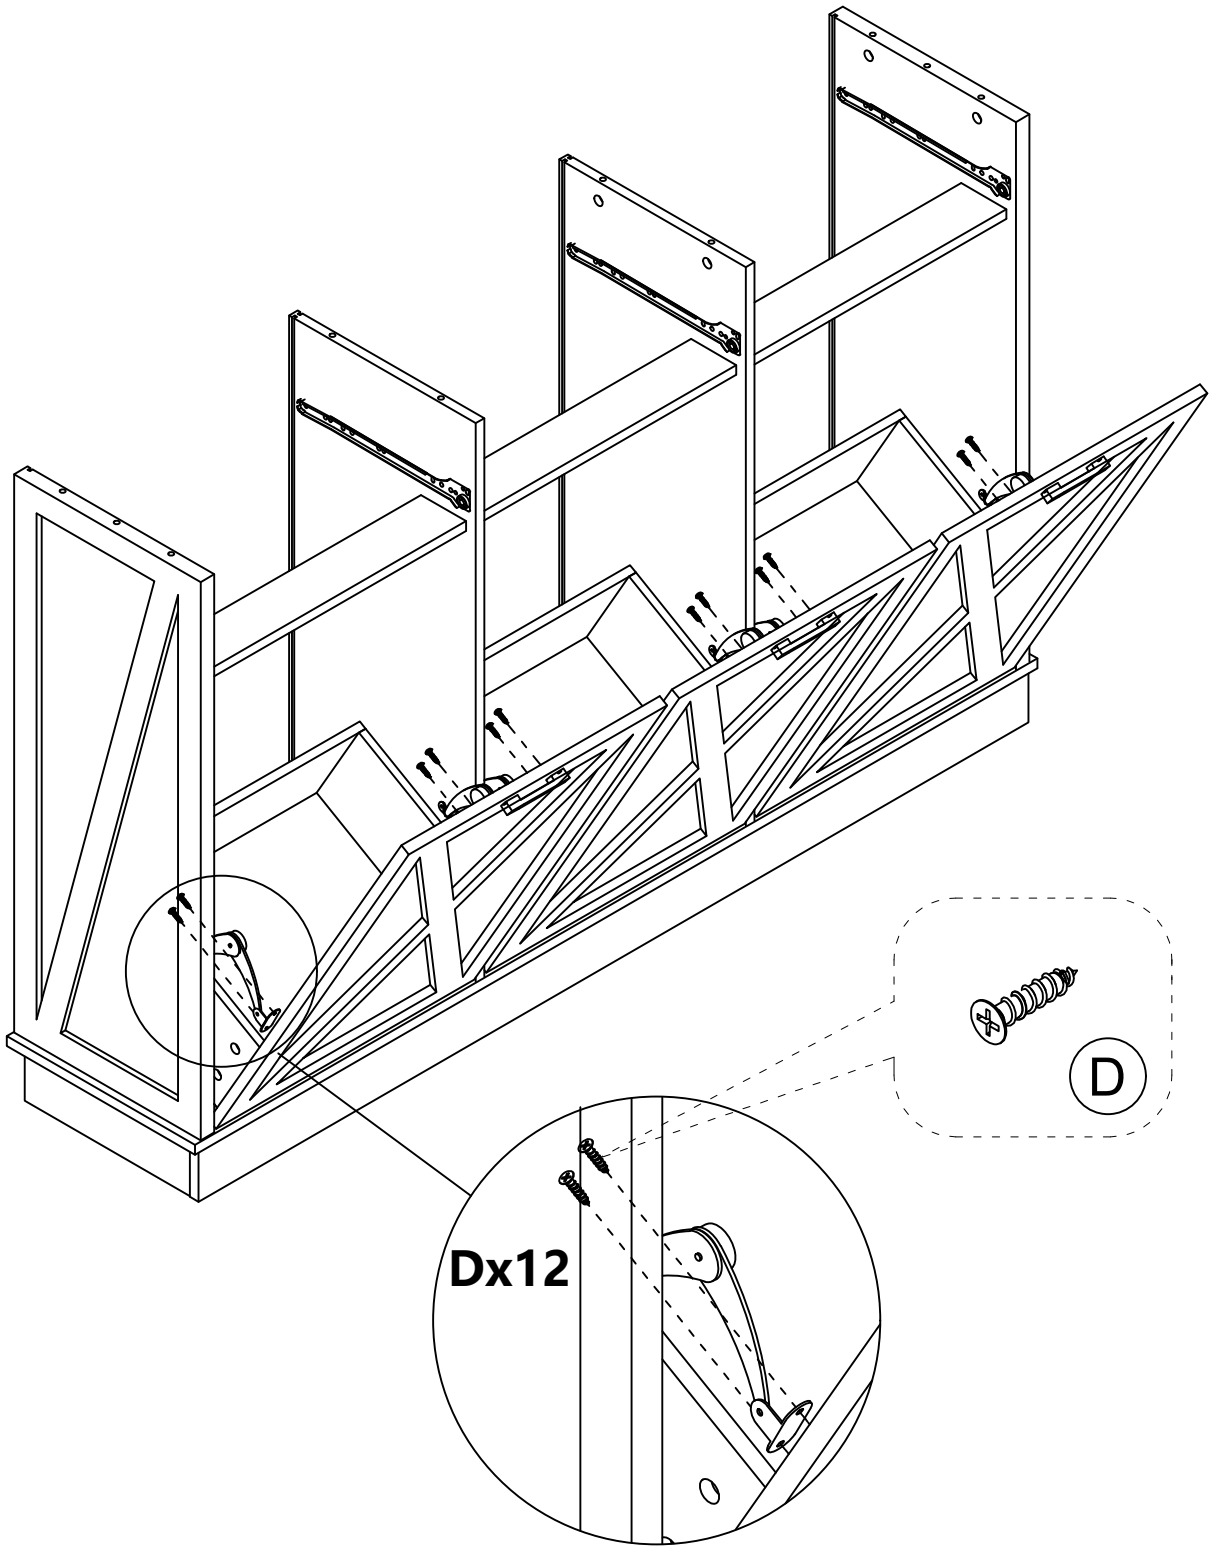


16

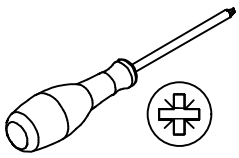


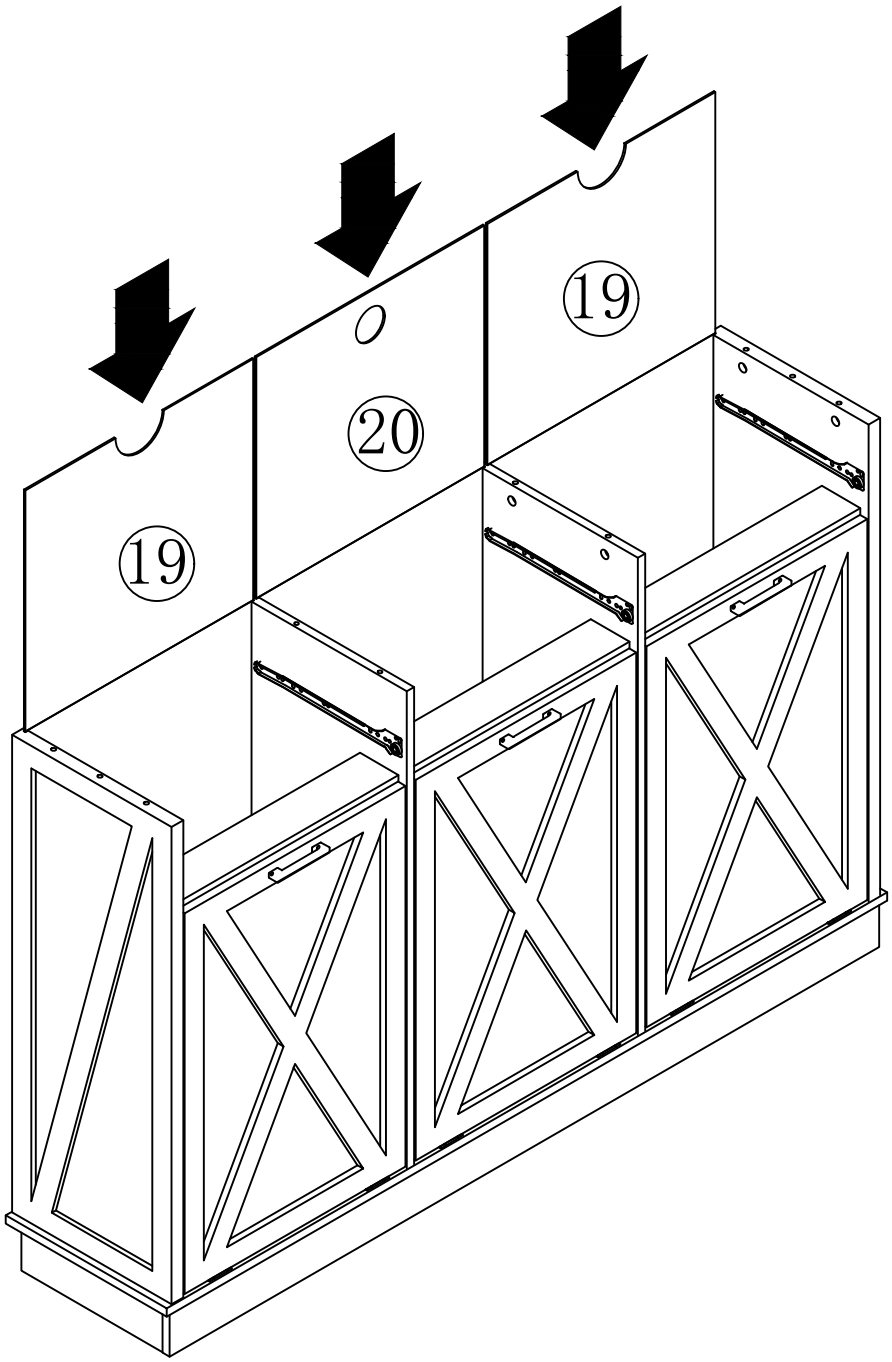

17

B x 8	C X 2	N x 1		
Ø15*9 mm	Ø6 x 30 mm			

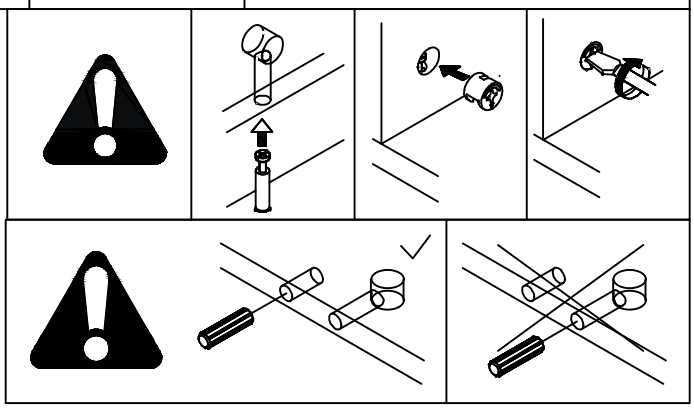

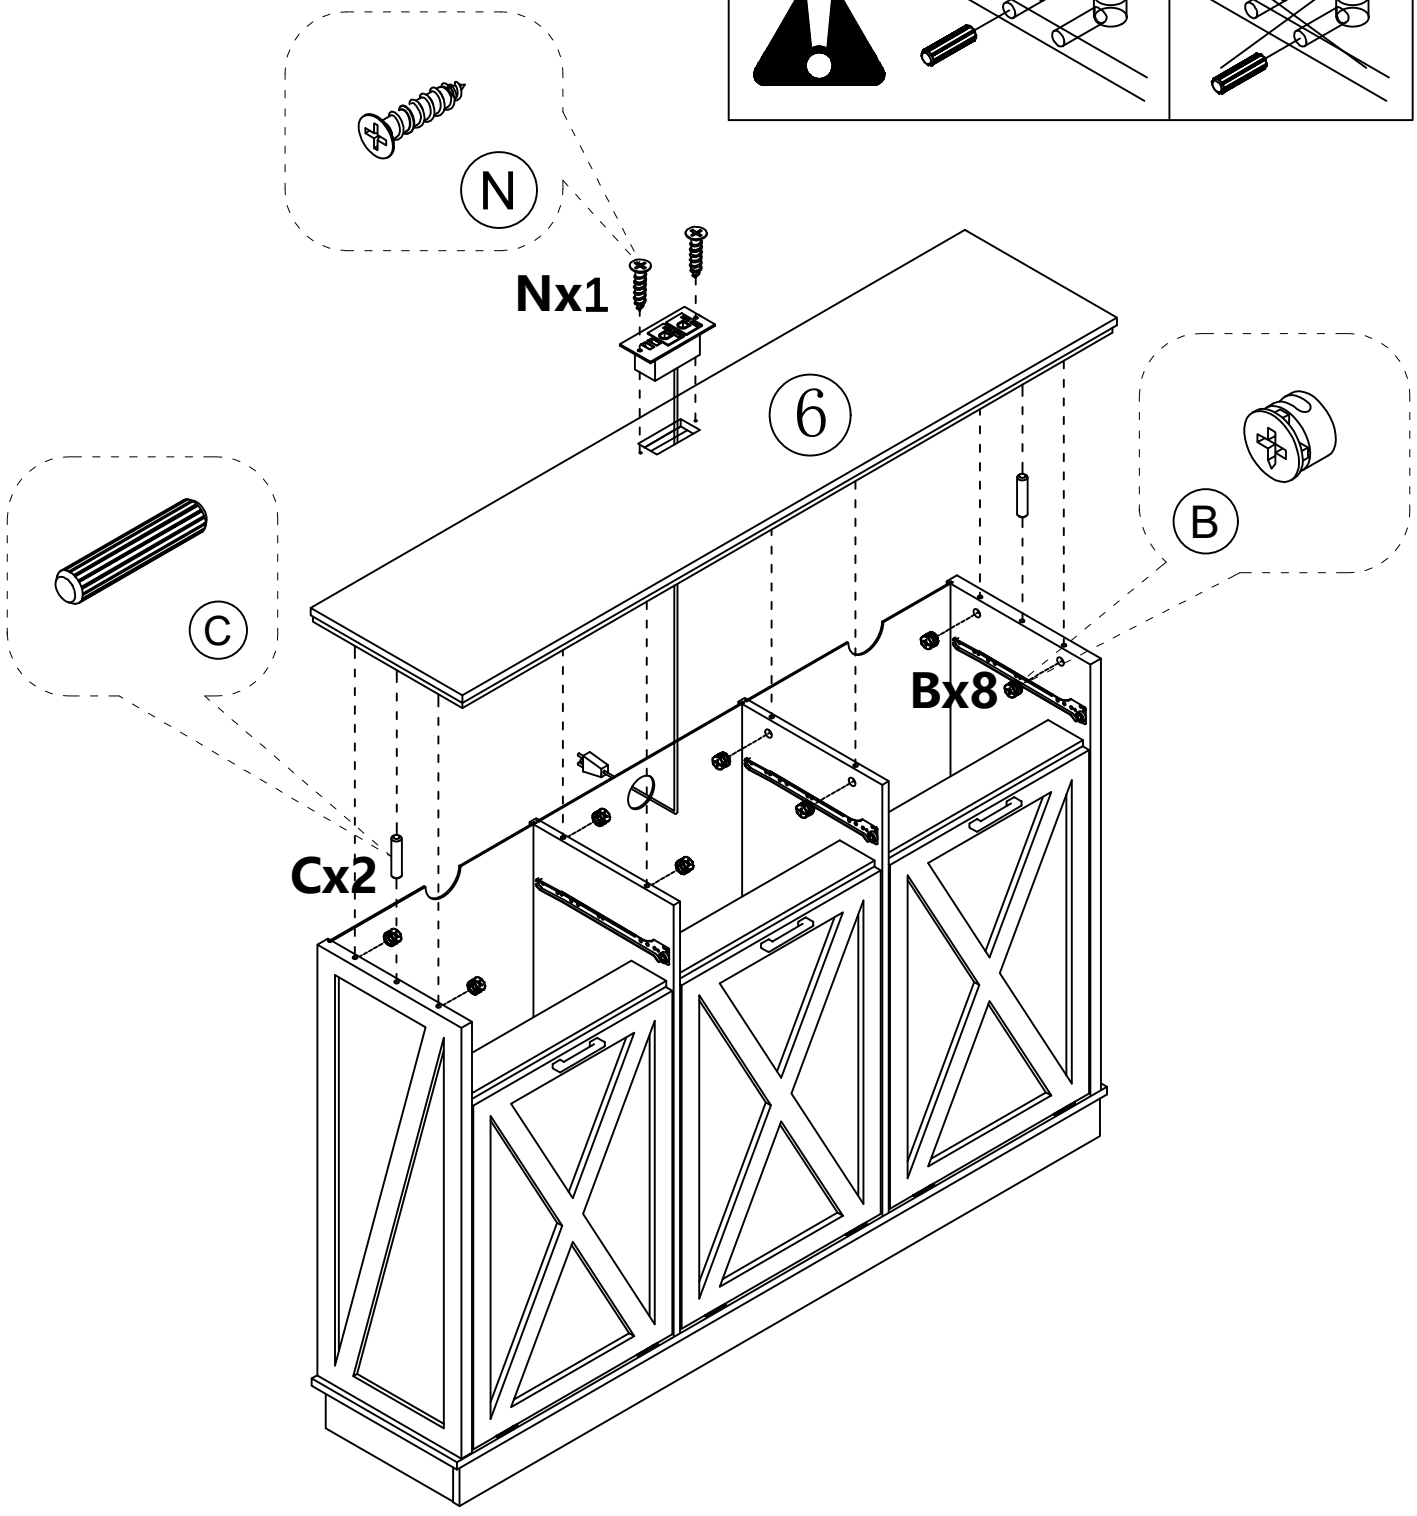



18

F X 12





4*40mm

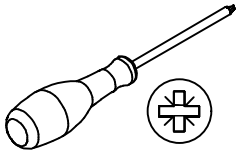

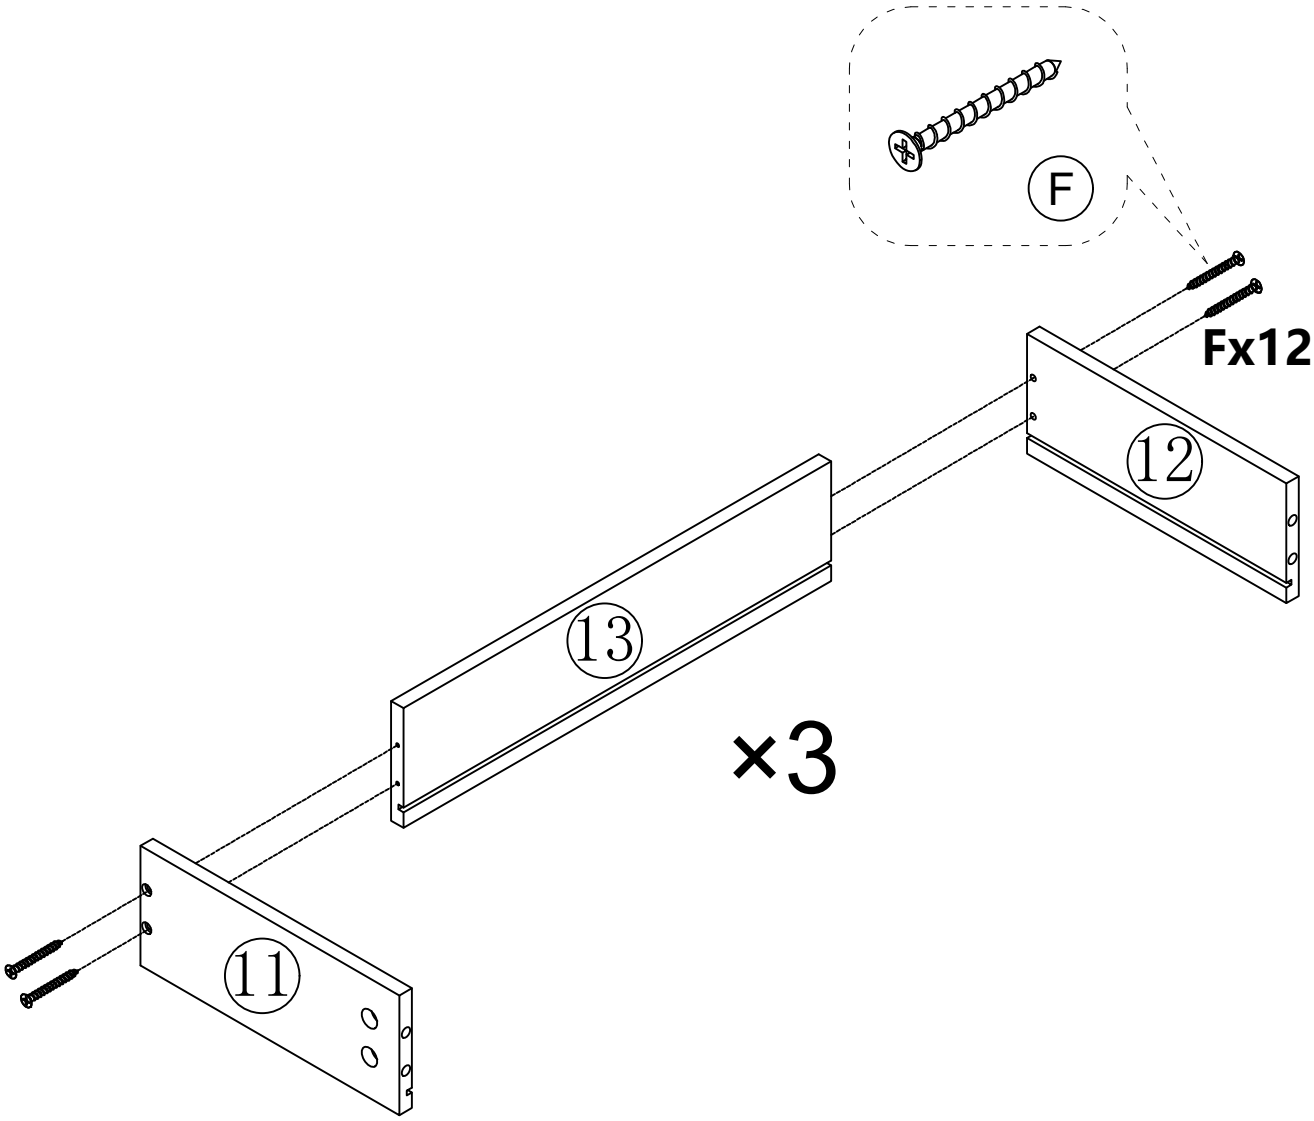



19

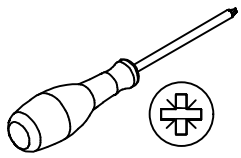


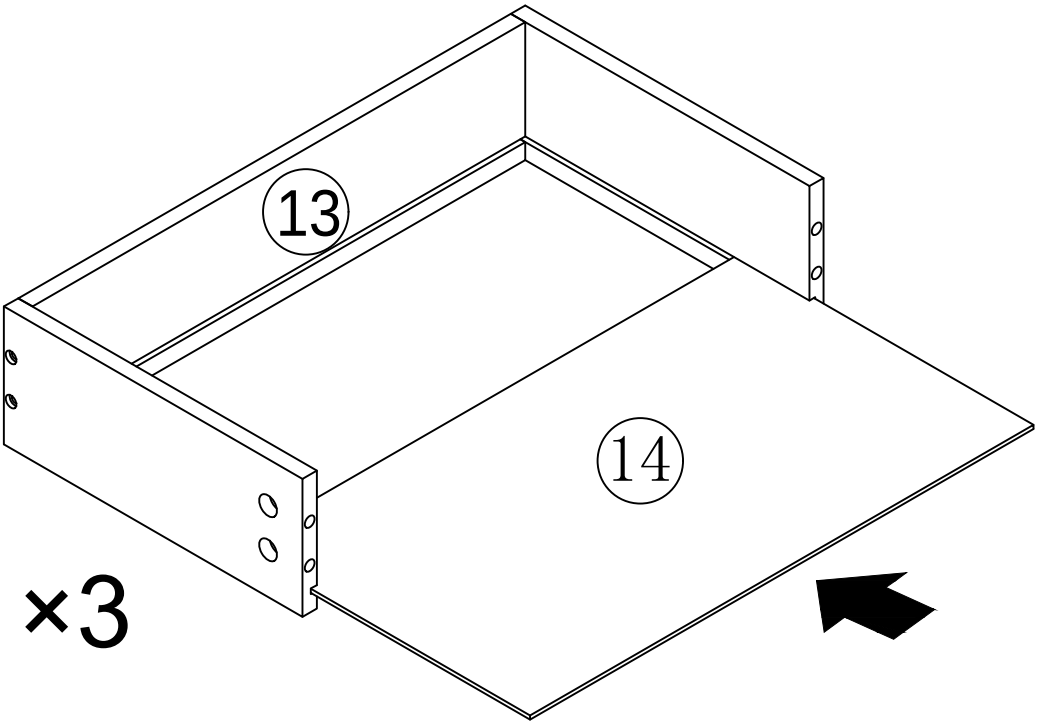


20

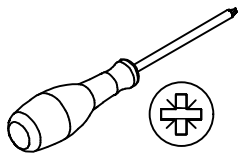
A X 12	B x 12	H x 3	
			
∅5 x 35 mm	∅15*9 mm	4*18mm	

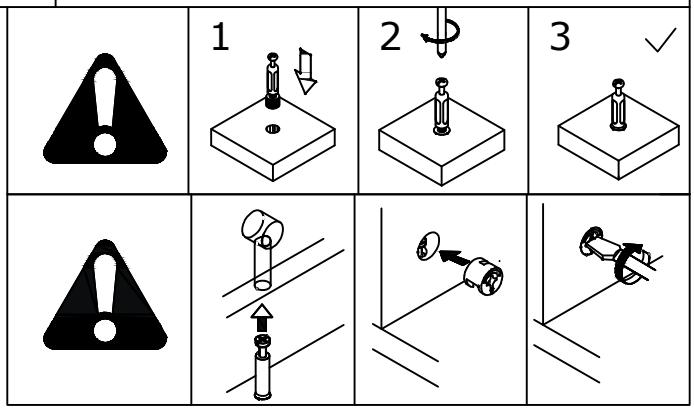


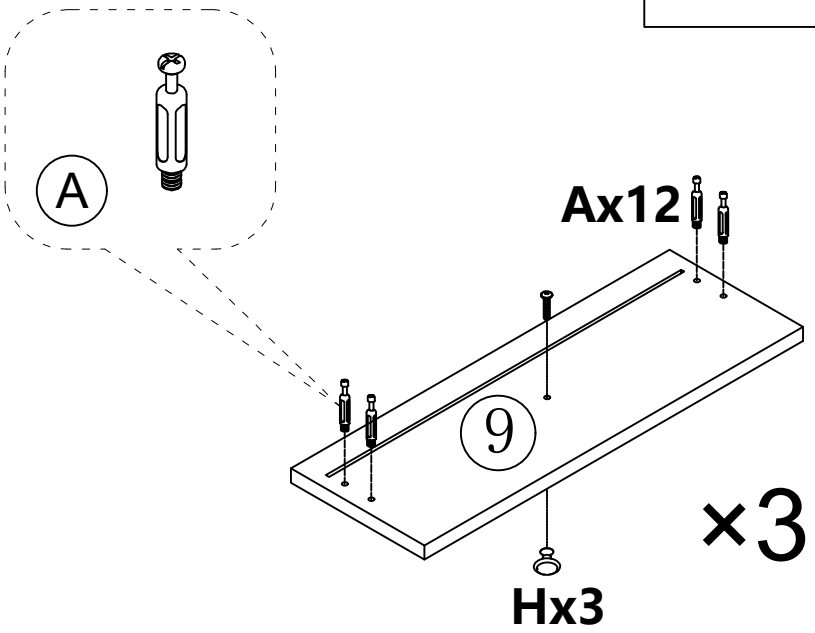

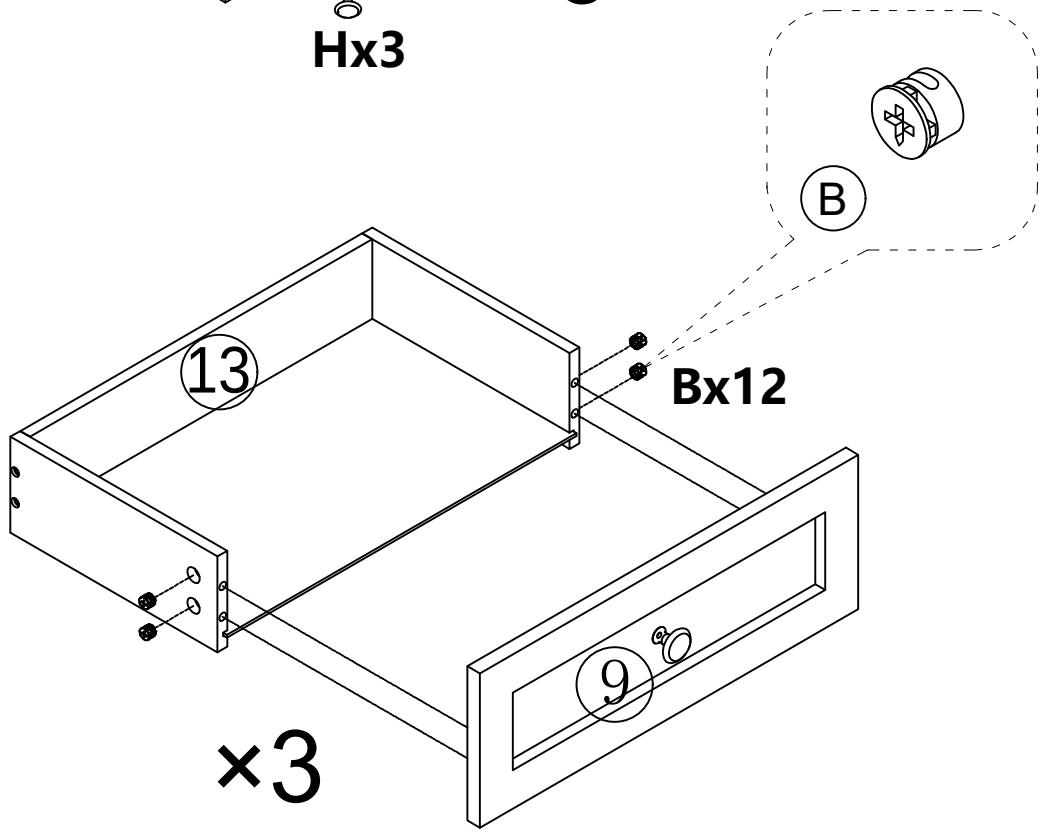



21

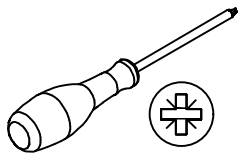D x 12	DL x 3	DR x 3	
			
Ø3 x 12 mm	L=250mm	L=250mm	


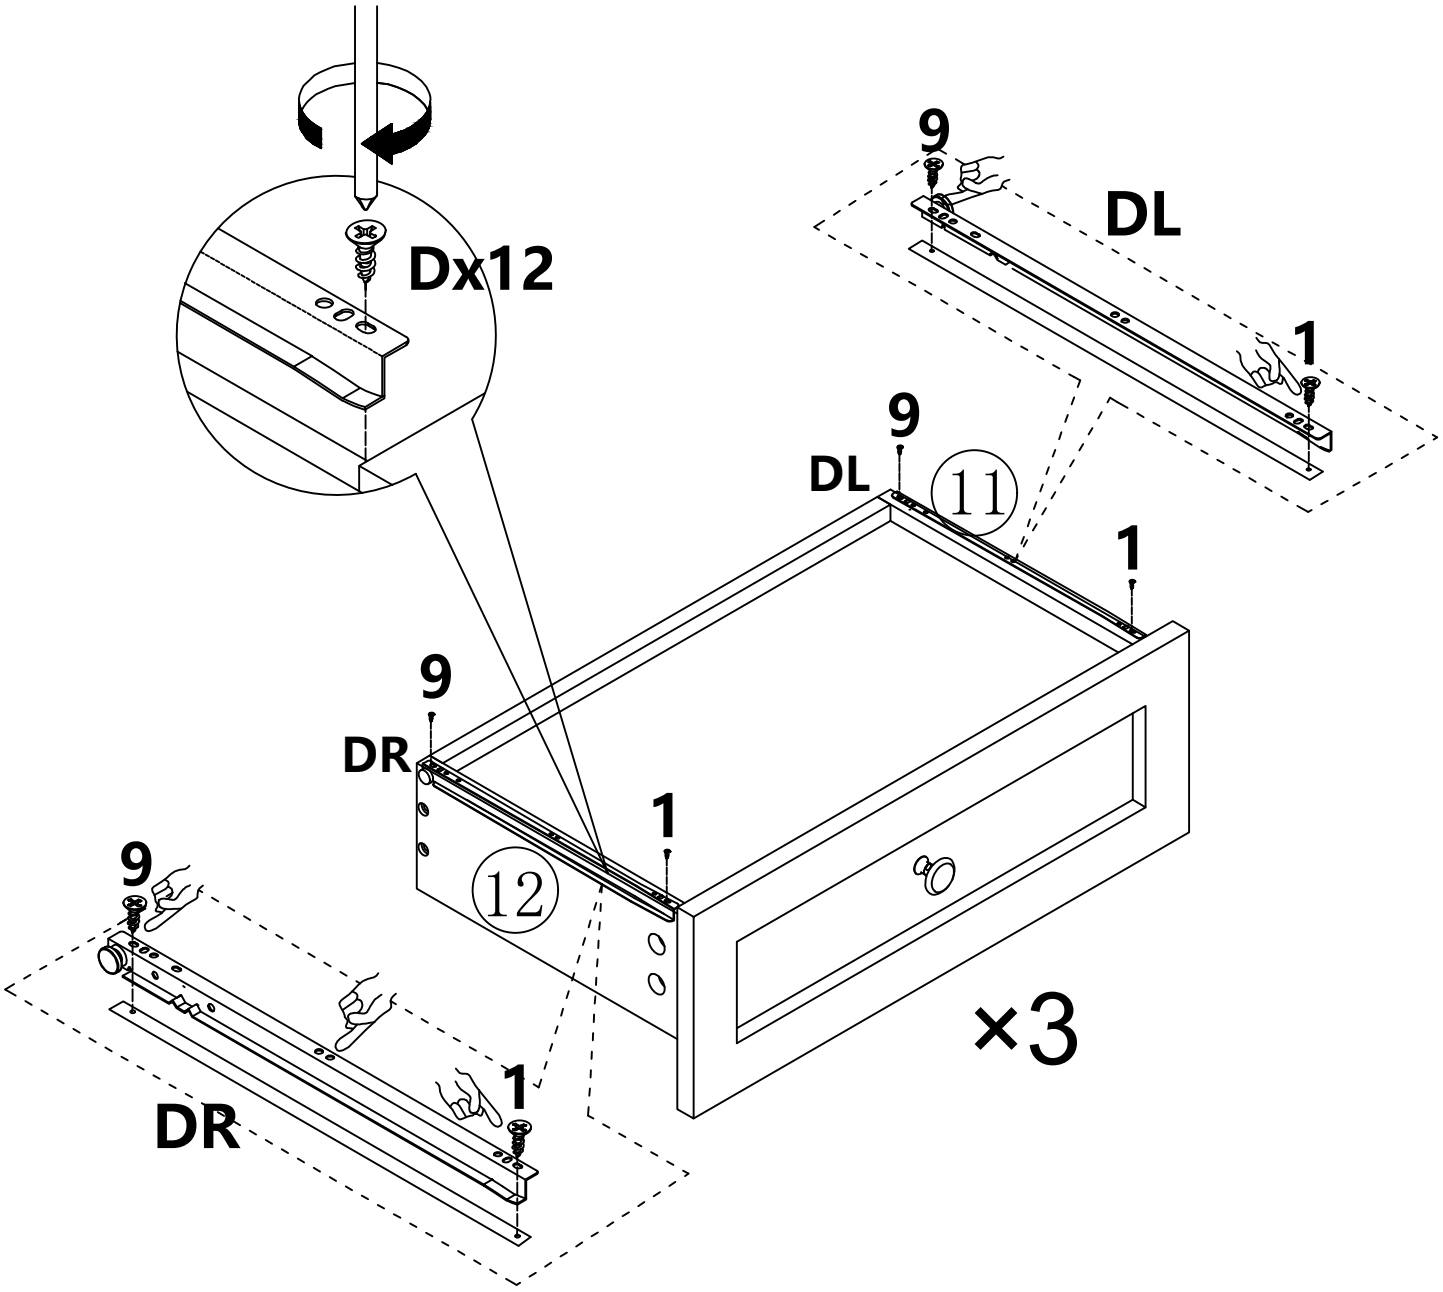



22

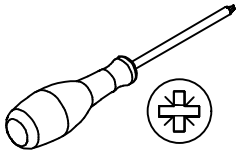


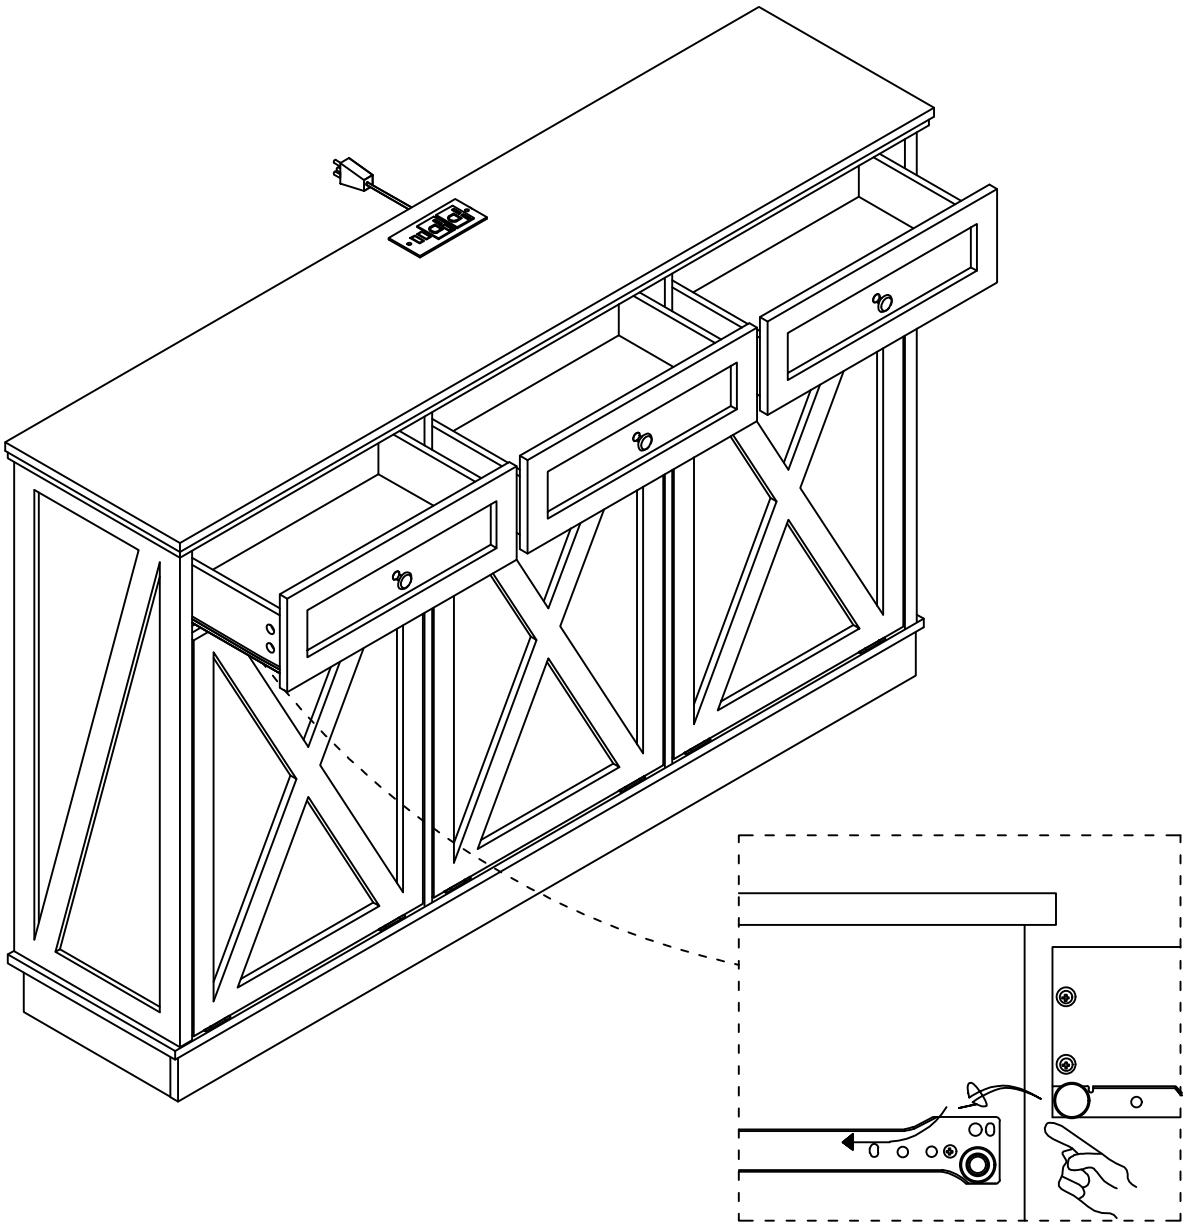


23

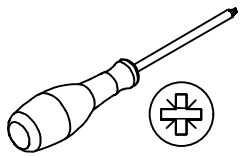M x 4	M x 4	
 Ø3 x 14 mm		

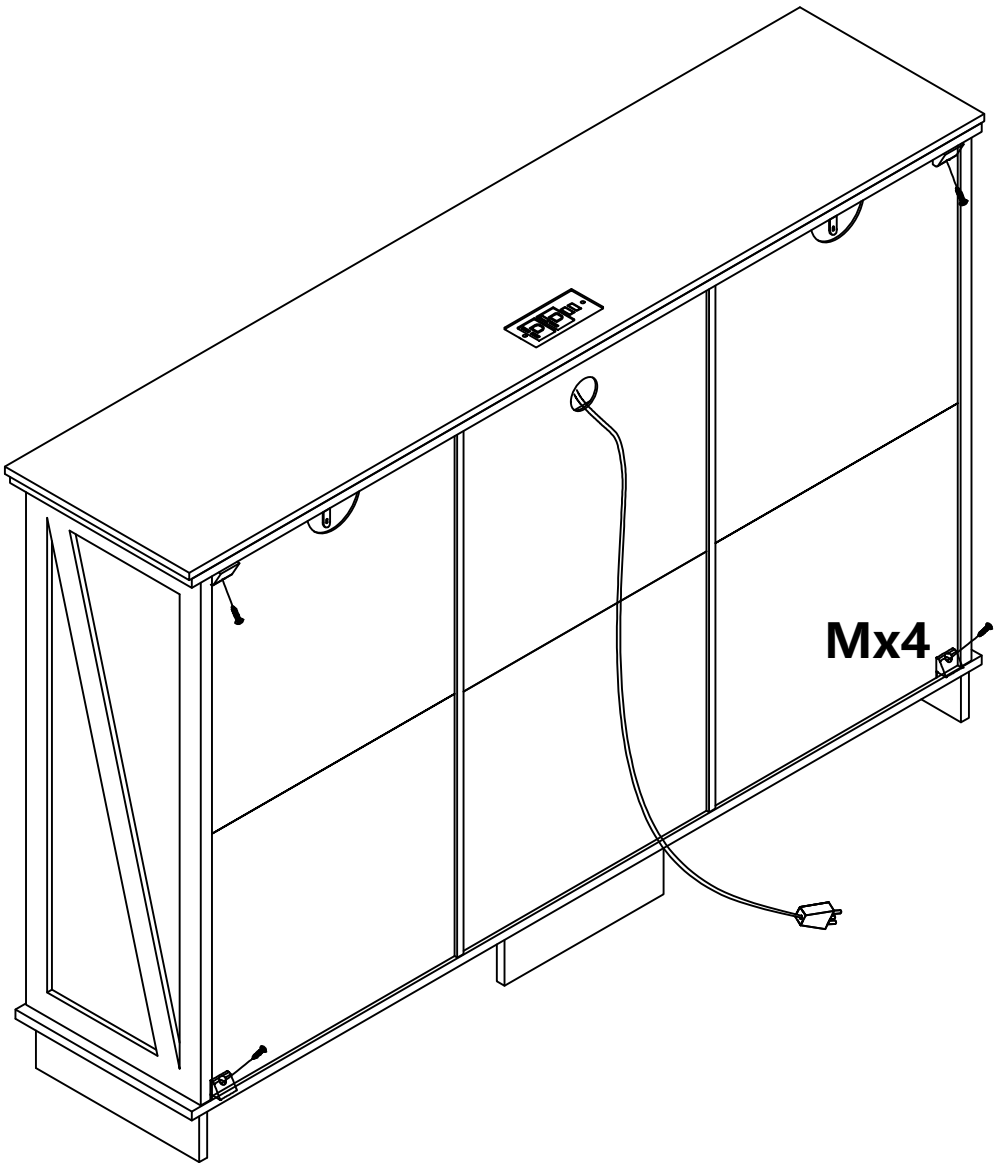


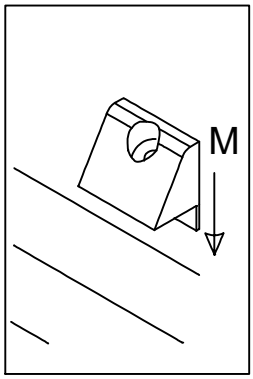


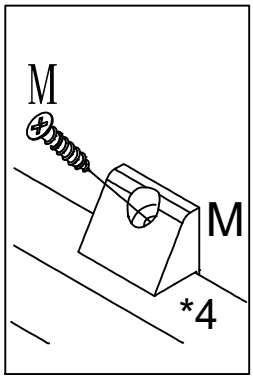



24

L x 58

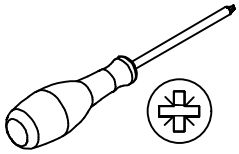

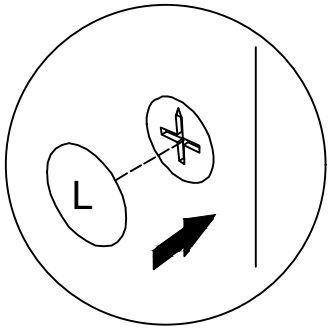


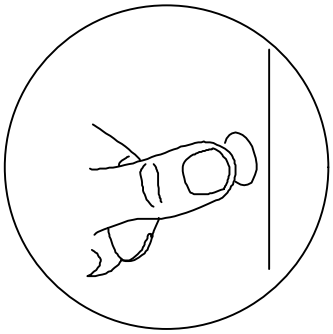


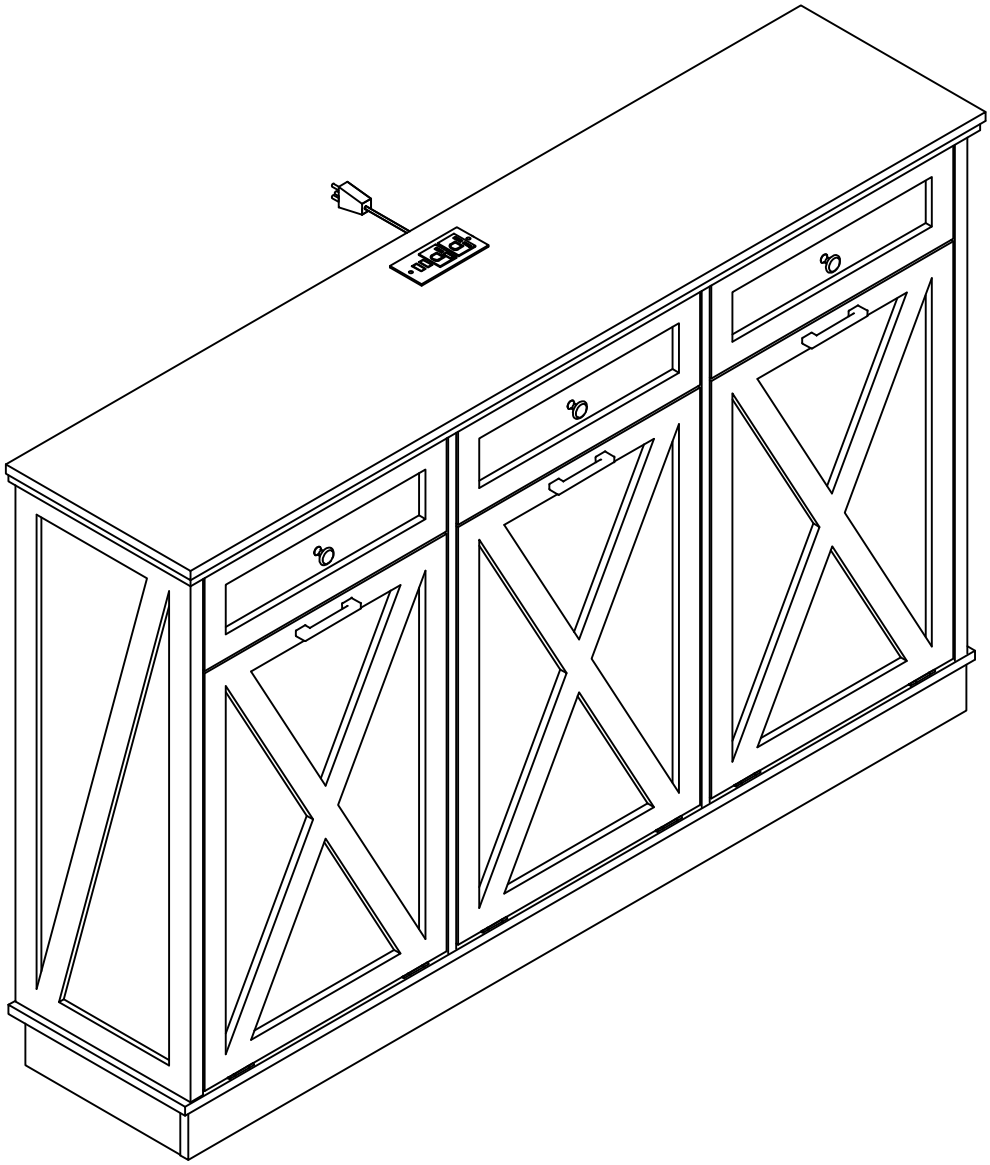

25




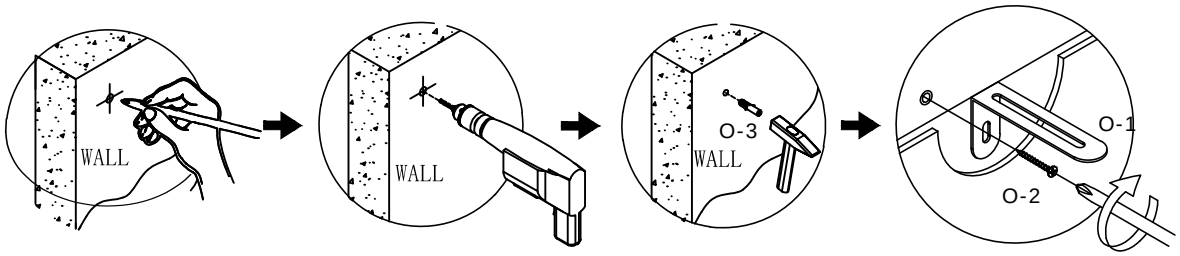

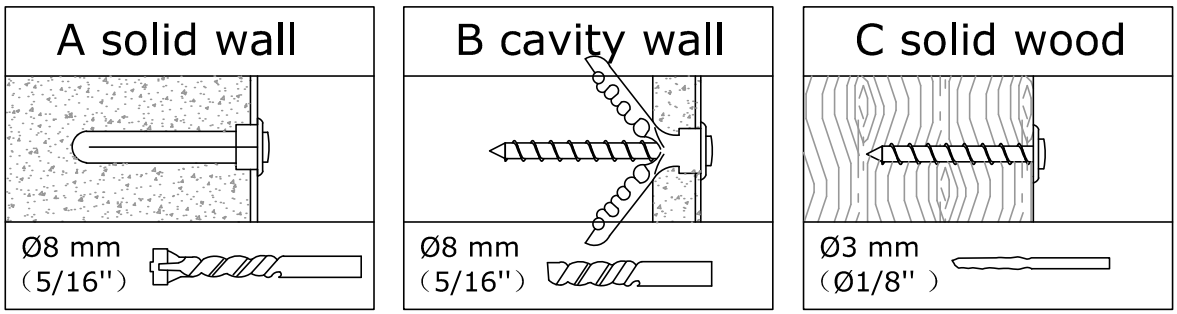

⚠ Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

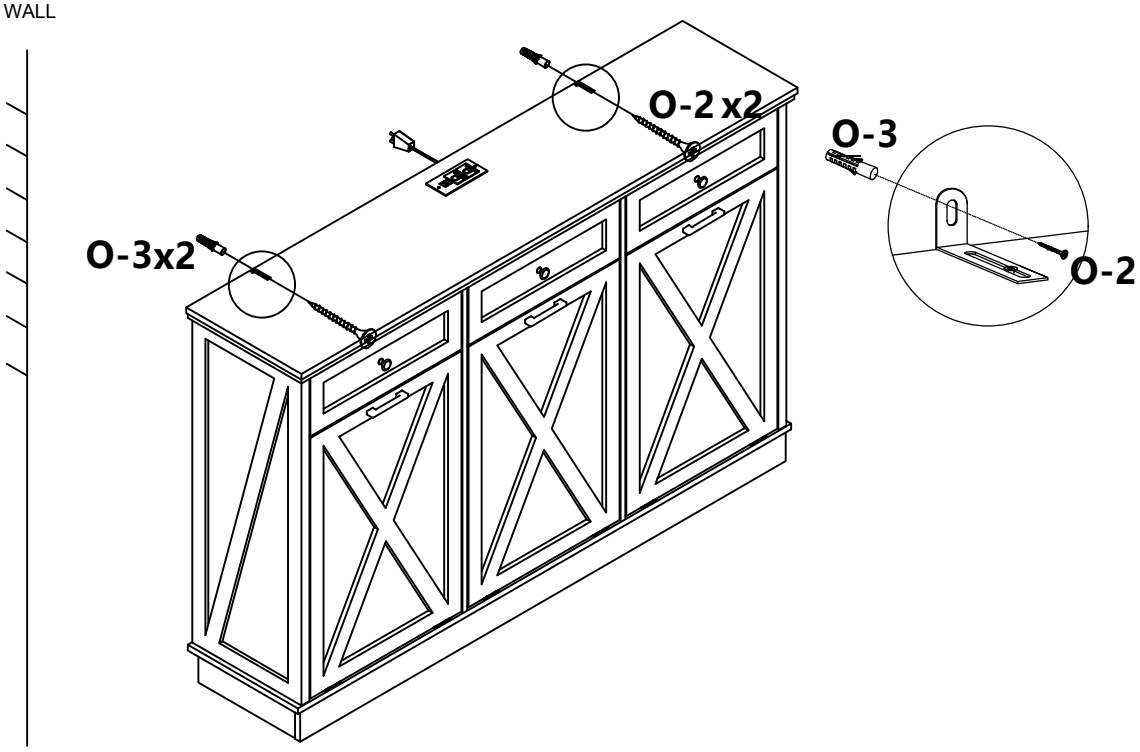

For any issues, please contact:aftersale-wzjj@outlook.com