




- 1** Screw the feet on the headboard and footboard




- 3** Put the side rails on the headboard and screw it up all fixture and fitting will be in position do the same with the footboard

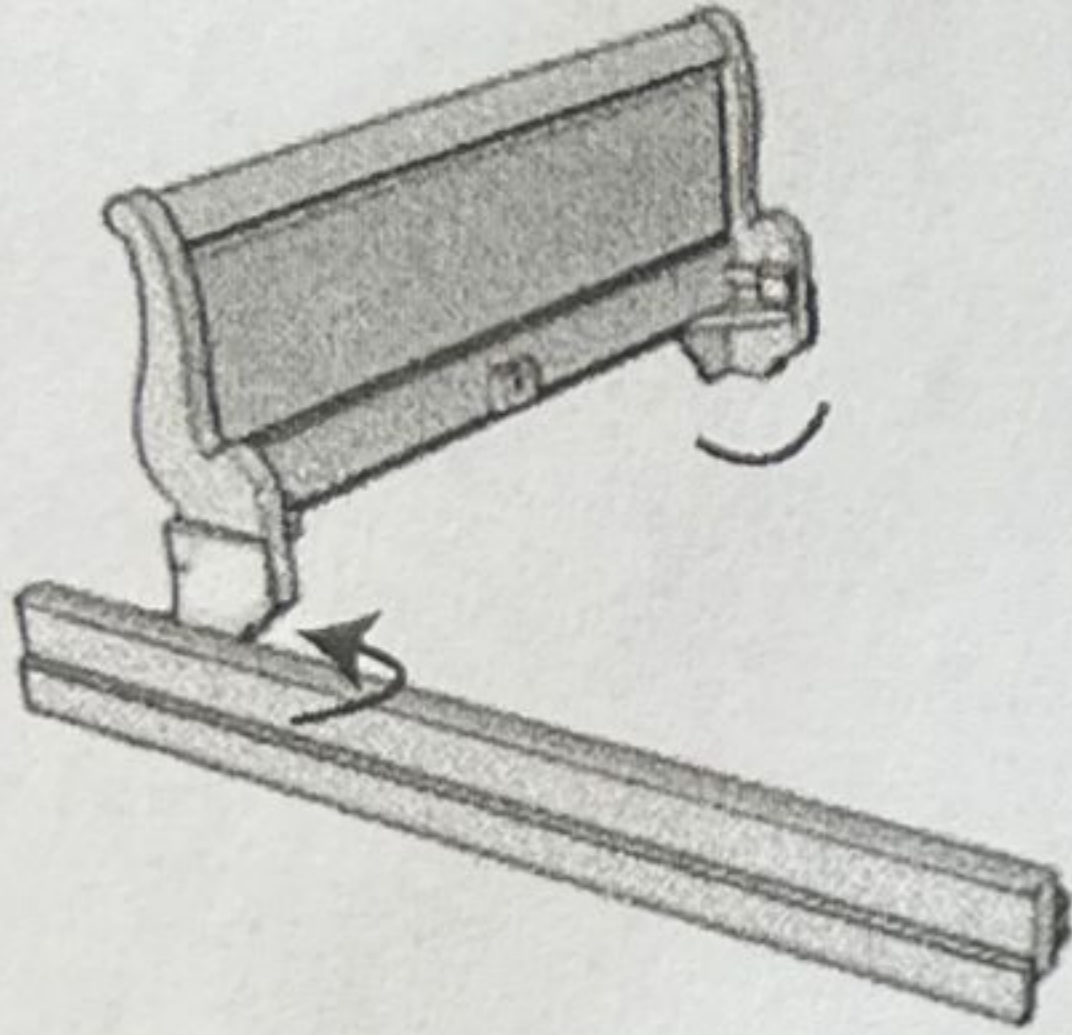

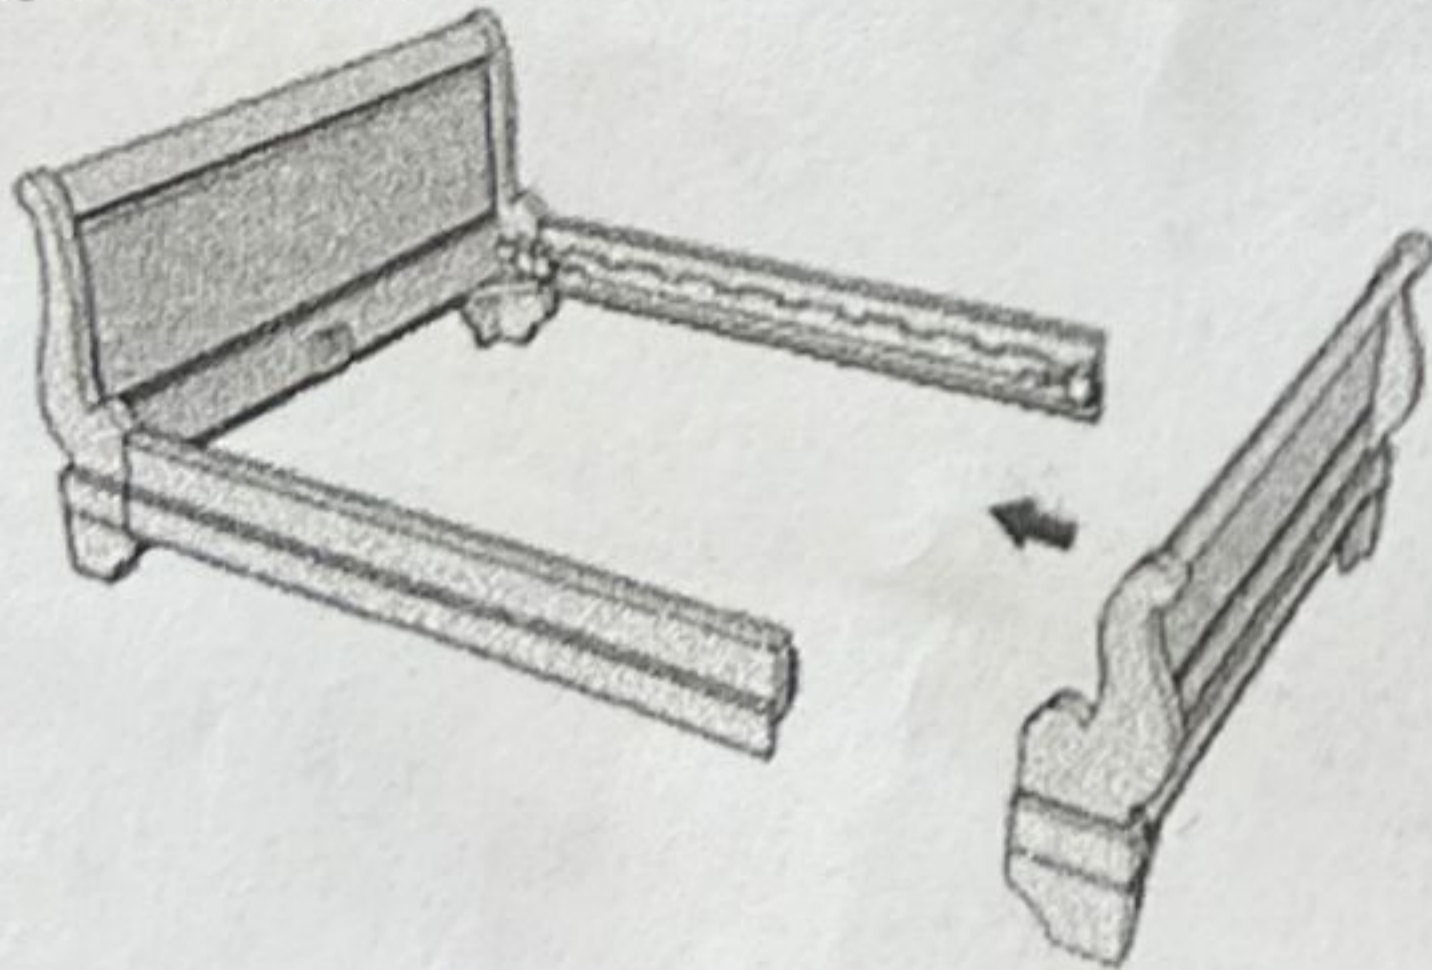

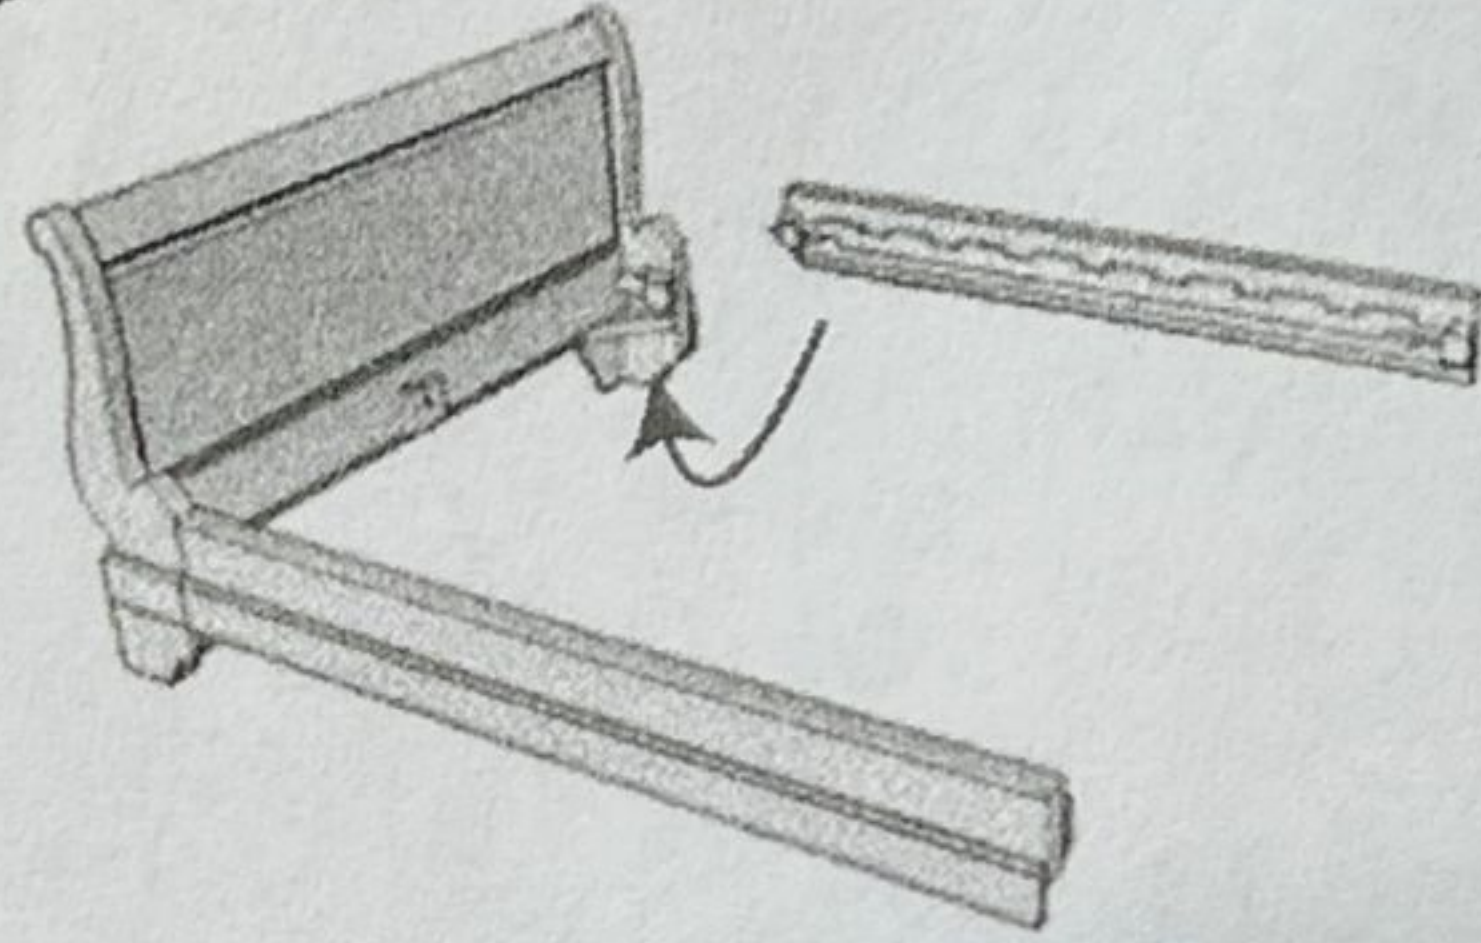


- 2** For support lean the headboard against a wall

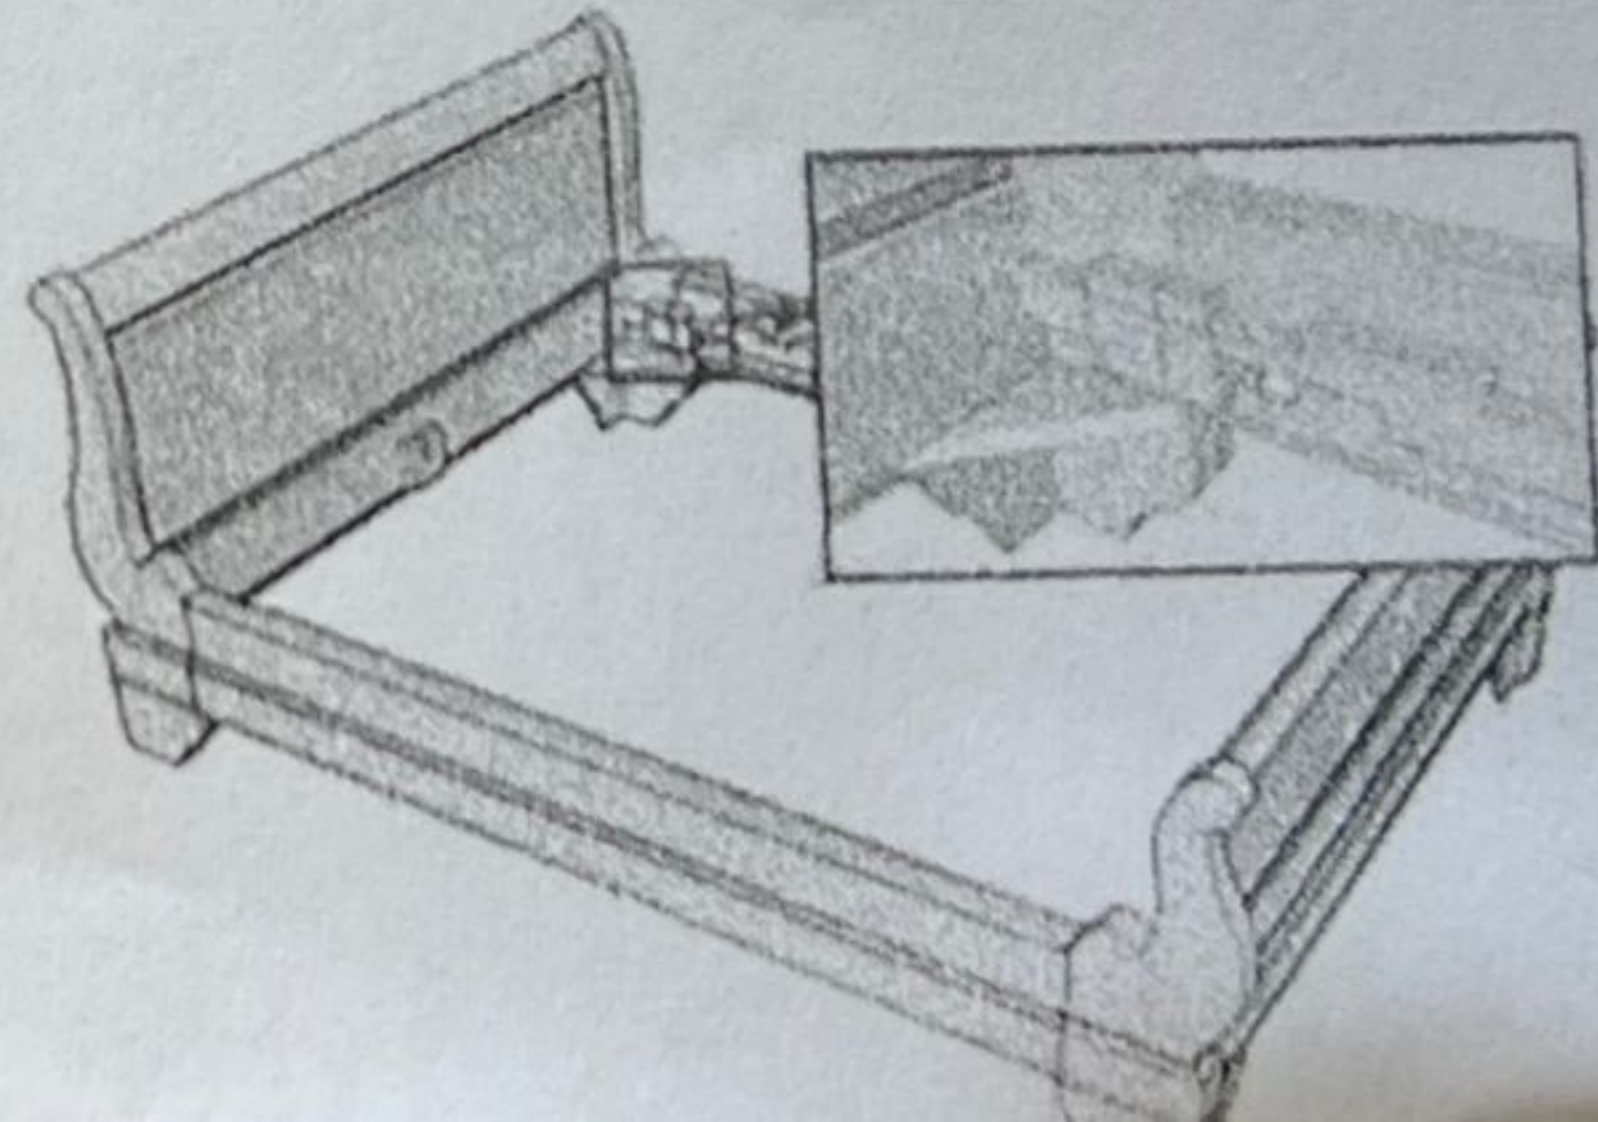

- 4** Tighten up bolts to headboard and footboard



Step 6:







B	Spring Washer for M8 bolts		4 pcs	D	Allen Key for M8 bolts		1 pc
C	Flat Washer for M8 bolts		4 pcs	E	Bolts (M8x20mm)		4 pcs
				R	Metal Connection Plate		2 pcs


i) Carefully open the frame.

ii) To top of slat frame, fit two connection plates (R). Using four sets of bolts (E), spring washers (B) & flat washers (C), screw into the threaded inserts on top of the frame.


iii) Push x2 Mattress Stoppers (10) into metal frame, they should go all the way through the upper & lower metal sections.

Step 7:

B	Spring Washer for M8 bolts		6 pcs	S	Flanged M8 lock-nuts for gas-lift piston		10 pcs
C	Flat Washer for M8 bolts		12 pcs	T	Spanner for flanged M8 lock-nuts		1 pc
D	Allen Key for M8 bolts		1 pc	U	Bolts (M8x45mm)		6 pcs

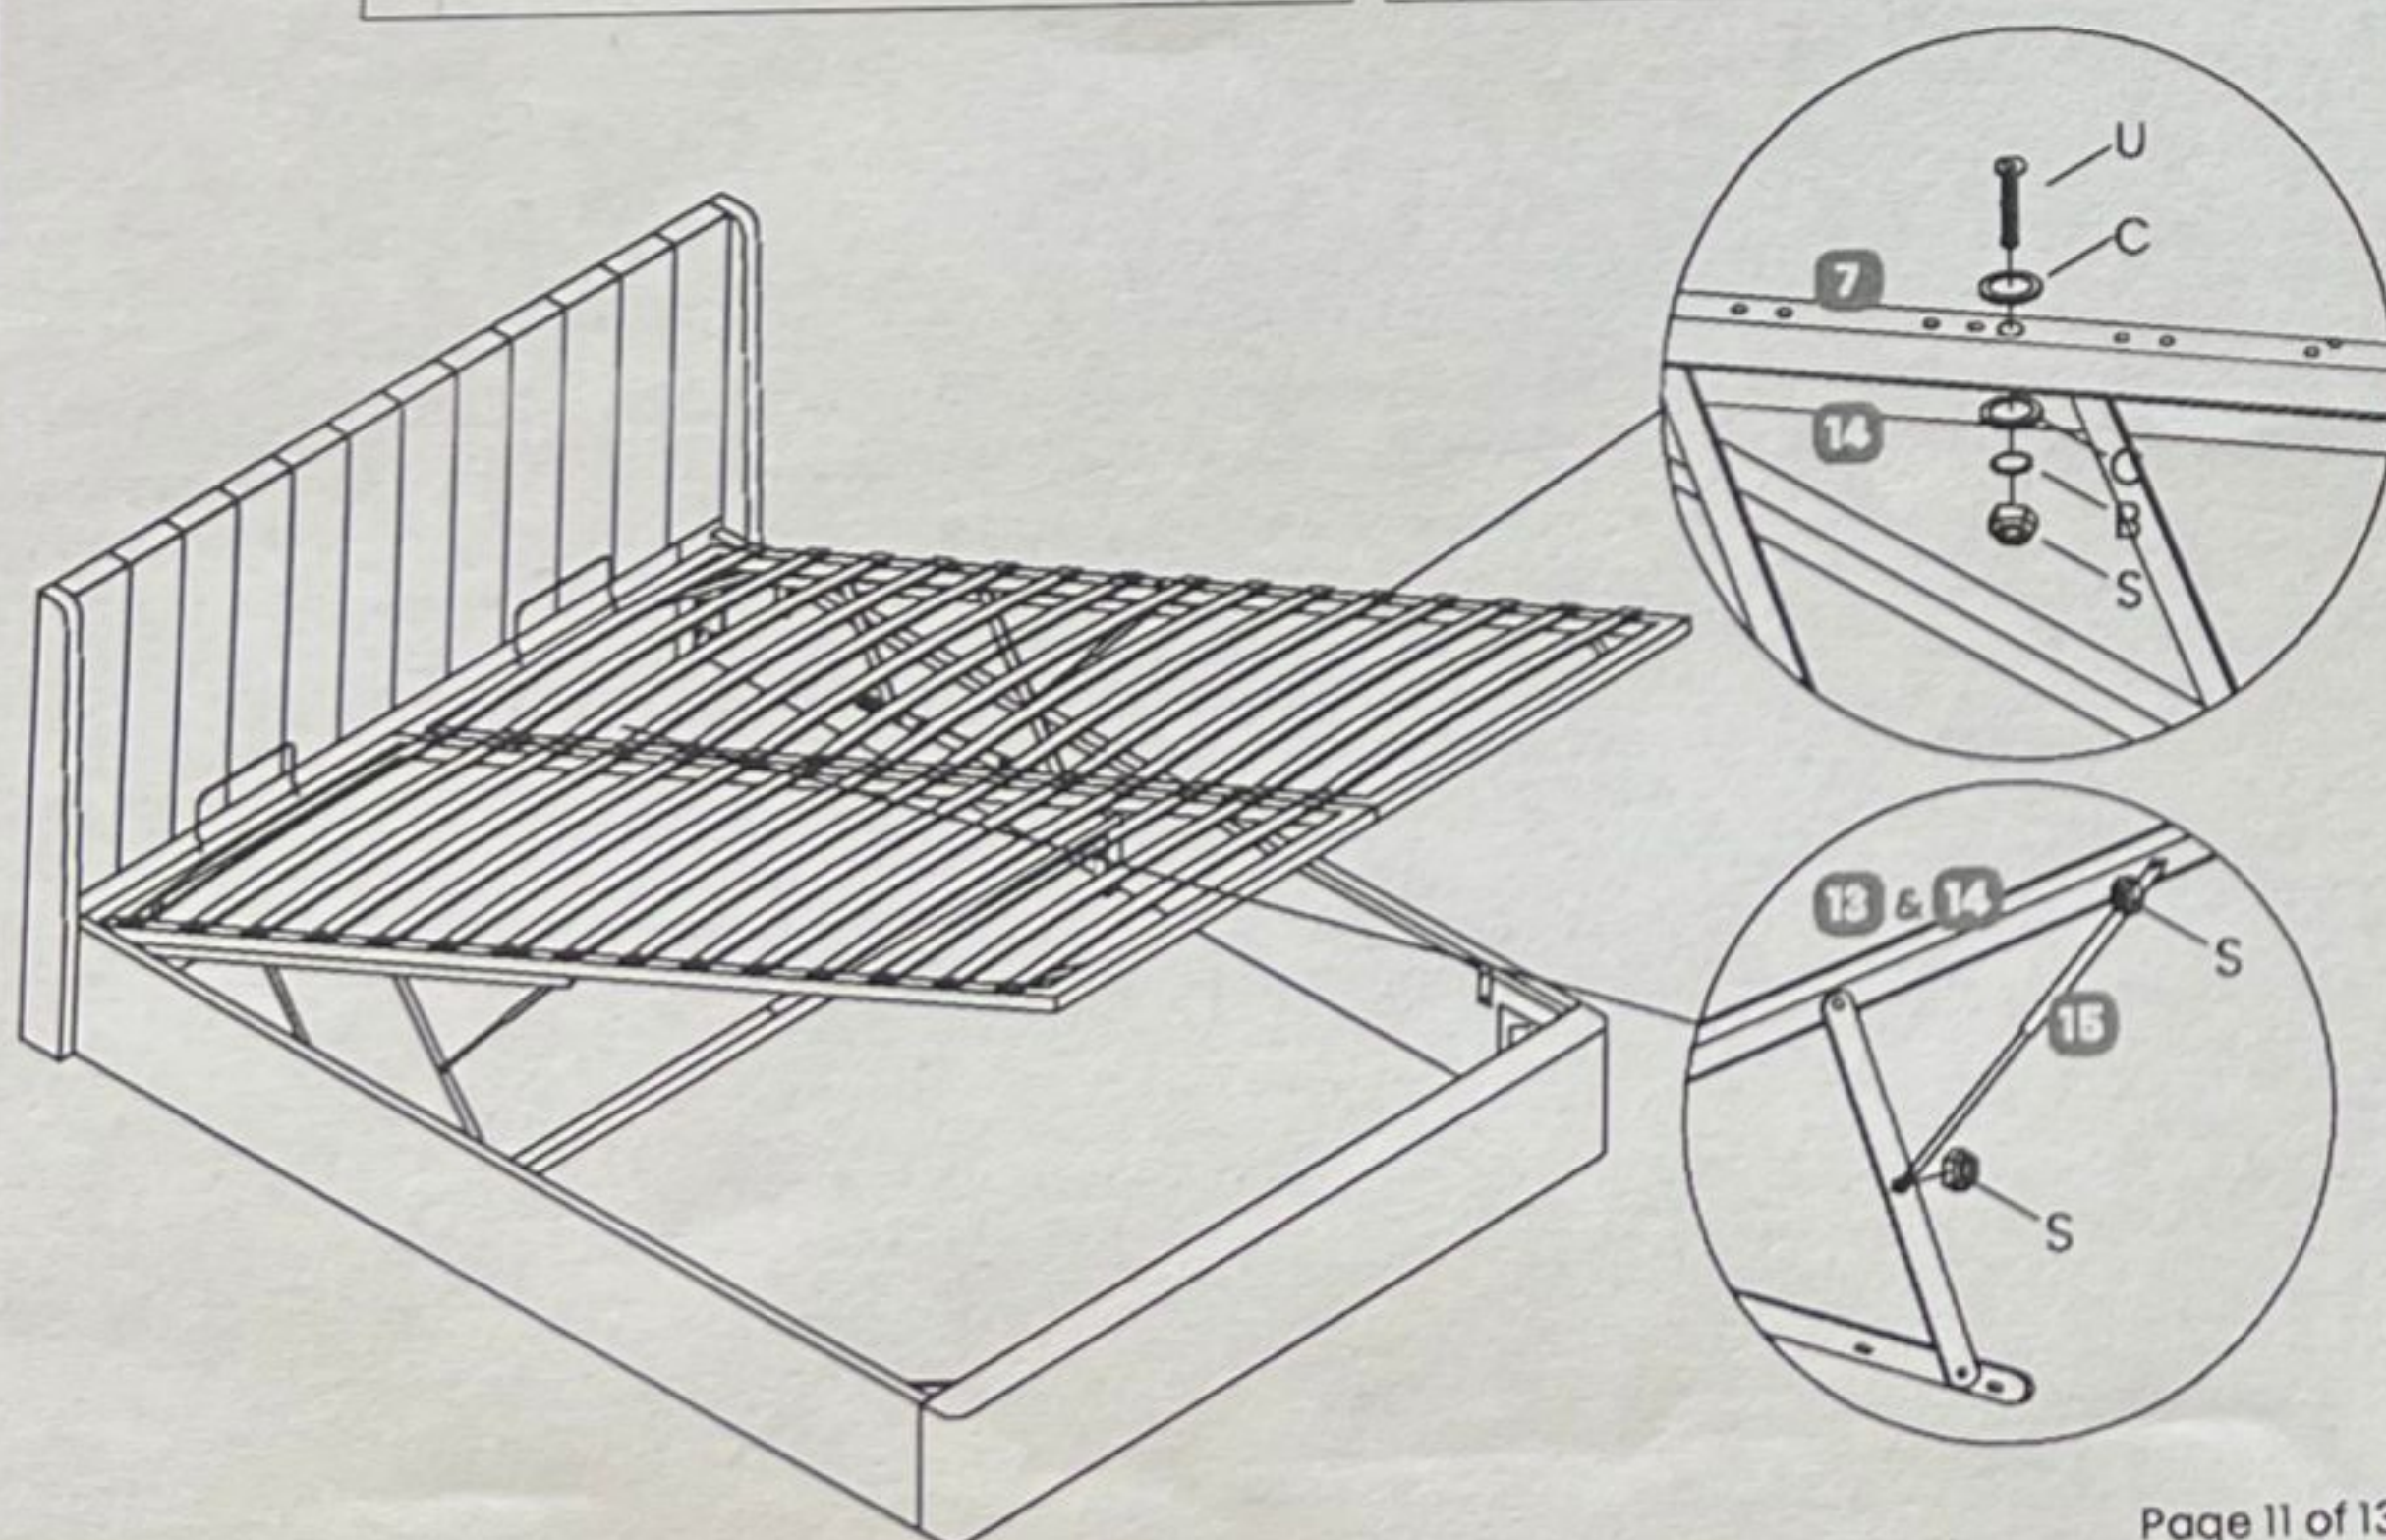


Step 8:

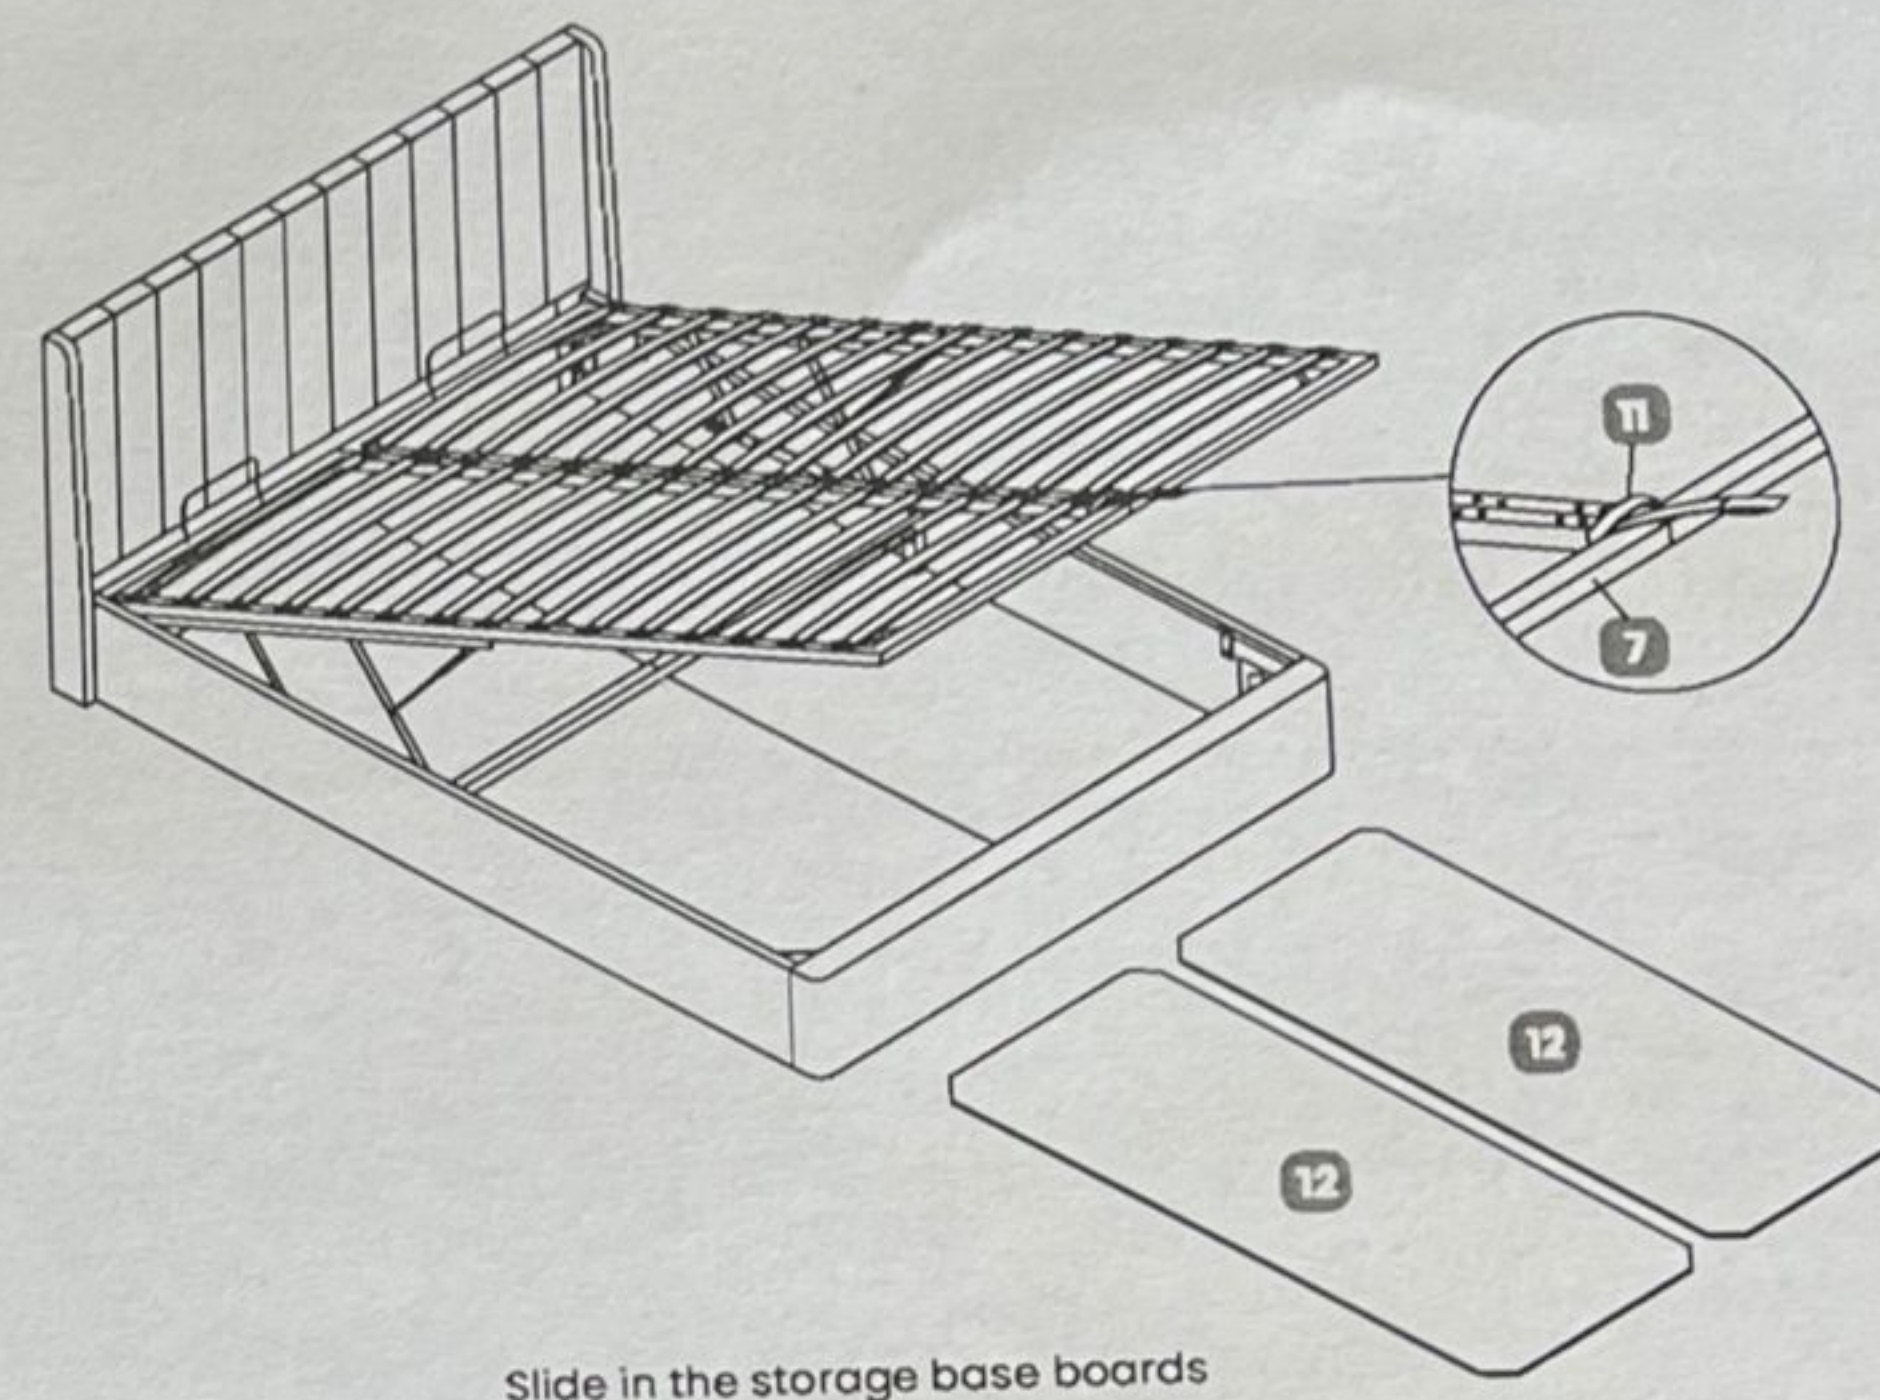

Slide in the storage base boards

Step 9:

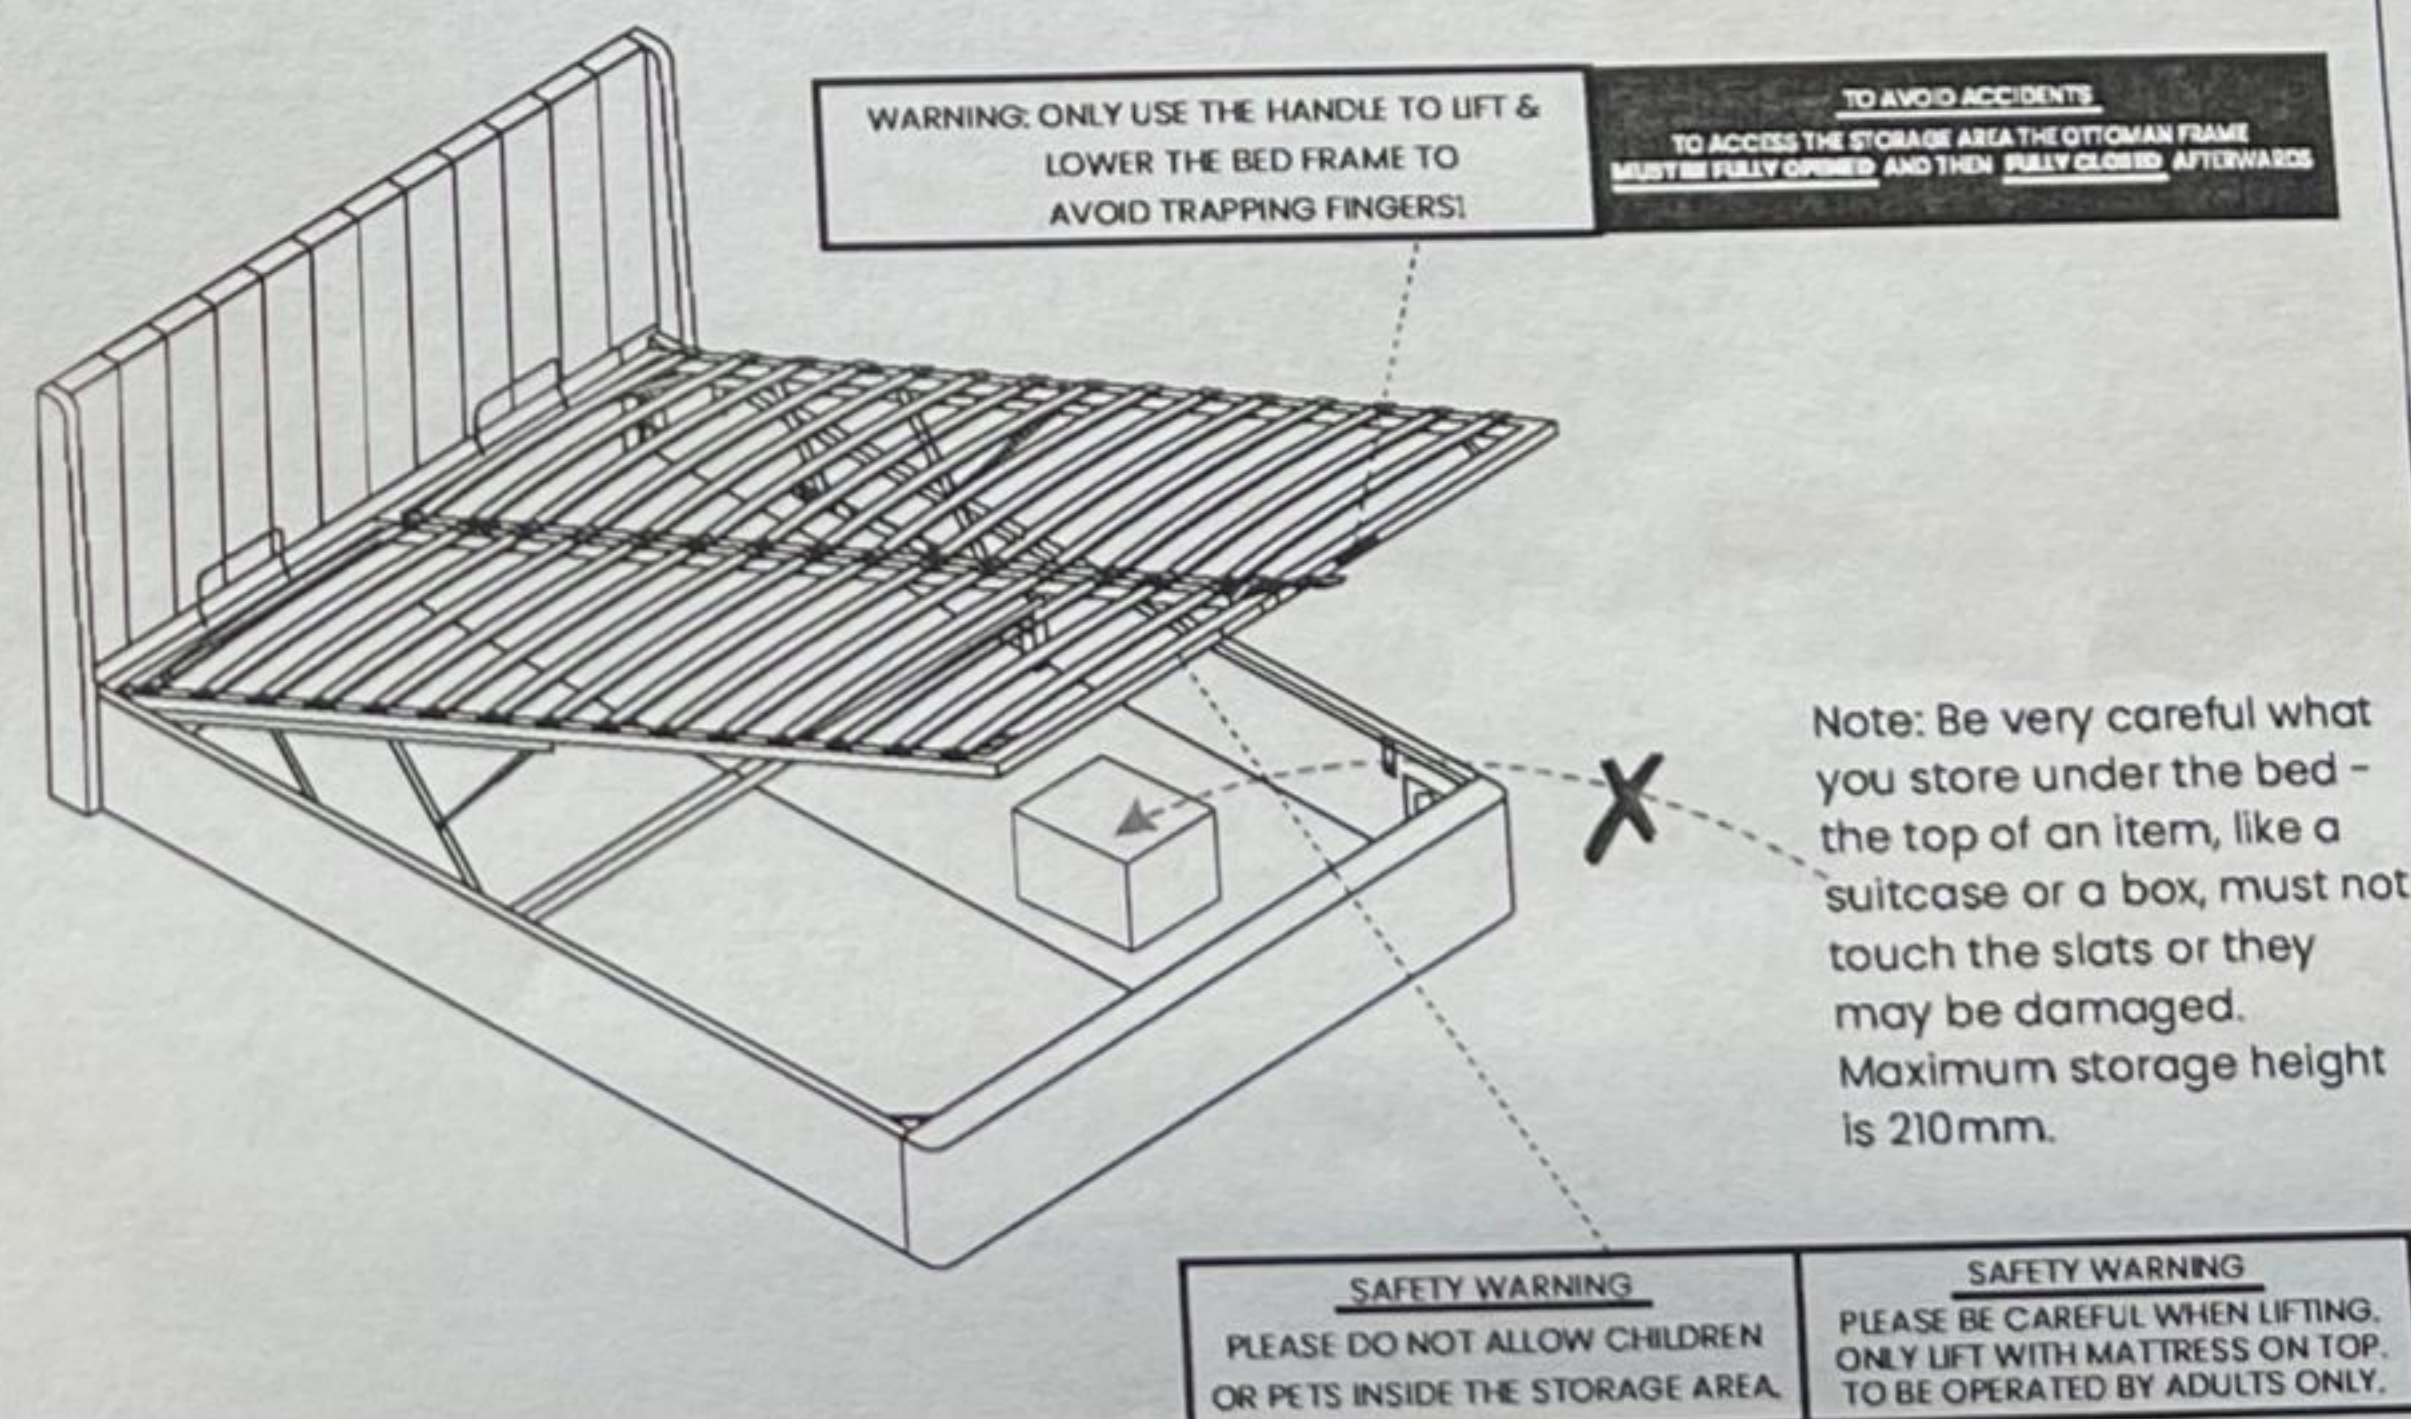

WARNING: ONLY USE THE HANDLE TO LIFT & LOWER THE BED FRAME TO AVOID TRAPPING FINGERS!

TO AVOID ACCIDENTS TO ACCESS THE STORAGE AREA THE OTTOMAN FRAME MUST BE FULLY OPENED AND THEN FULLY CLOSED AFTERWARDS

Note: Be very careful what you store under the bed - the top of an item, like a suitcase or a box, must not touch the slats or they may be damaged. Maximum storage height is 210mm.

SAFETY WARNING PLEASE DO NOT ALLOW CHILDREN OR PETS INSIDE THE STORAGE AREA.

SAFETY WARNING PLEASE BE CAREFUL WHEN LIFTING. ONLY LIFT WITH MATTRESS ON TOP. TO BE OPERATED BY ADULTS ONLY.