


INSTALLATION INSTRUCTIONS

12x18 ft Storage Shed

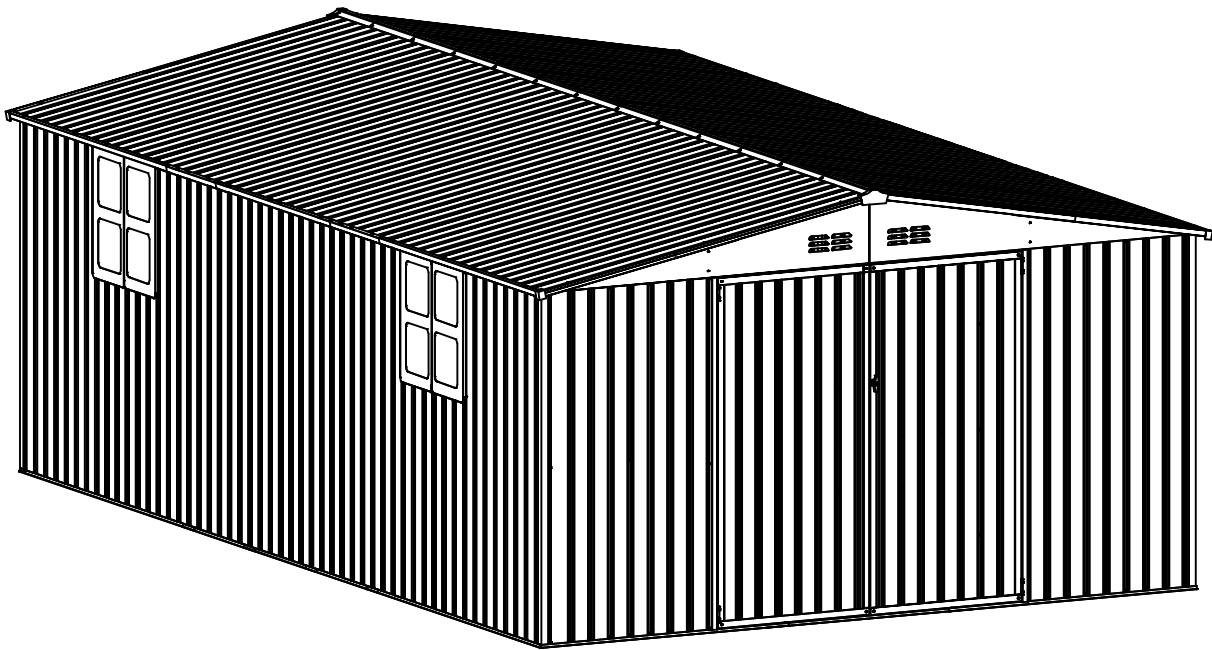


VIWATCustomerService@gmail.com

After opening the package, if you notice a slight deformation in the wall panels, there's no need for concern. Our material is flexible and can be manually bent back into place.

Recommended to wear gloves to avoid scratches.

Please read the instructions COMPLETELY before assembly.

REQUIRED TOOLS

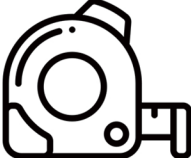Tools			
	Gloves	Table	Ladder
			
	Power drill	Screw drive	Tape Measure

ASSEMBLY TIPS

1. Clear a working area to allow access on all four sides. A raised work surface will make assembly easier. It is easier to install the wall panel on the table.
2. All parts are identified, so when working through the instructions page by page, the diagrams show where each part is positioned.
3. Before starting, to avoid any accidental injury, we recommend the use of gloves to protect your hands.
4. Please keep children away from your construction site.
5. Most assembly can be completed by one person, but assistance may be needed when you reach the erection stage.
6. Please note: Some local government authorities have rules & regulations on shed installation, and you may need approval to erect this shed.


ASSEMBLY STEPS

1. Unpack all components from the carton and lay them out beside your work area. Check parts against the parts list.
2. Work through the assembly instructions page by page.
3. Once assembly is completed, place the shed in position and fix the anchor to the ground.
4. Clean up all metal pieces and screws.



F1218parts list(A)

PART	NO.	QTY.
	W5-D	27
	W5-CD	4
	K1014-6L	4
	K1014-6R	4
	F1218-6MM	4



F1218parts list(D)






PART	NO.	QTY.
	TCH	4

F1218parts list(B)



PART	NO.	QTY.
	W5-D	4
	F1218-7L	2
	F1218-7M	22
	F1218-7R	2
	W5-KDA	2
	W4-HL	1
	W4-HR	1
	W5-G	2
	W3-G	2





F1218parts list(c)

PART	NO.	QTY.
	F1218-1L	2
	K1012-1M	2
	F1218-1R	2
	K1014-2L	2
	K1014-2M	4
	K1014-2R	2
	F1218-2MM	2
	F1218-3L	3
	F1218-3M	3
	F1218-3R	3
	K1014-4L	2
	K1014-4M	4
	K1014-4R	2
	F1218-4MM	2
	F1218-5L	2
	F1218-5R	2


PART	NO.	QTY.
	F1612-15	4
	F1612-16	2
	F1612-17	4
	F1612-18	8
	F1612-19	4
	UAJ	2
	DAK	2
	DLAK	1
	DRAK	1
	DDAK	4
	DXF8	4
	DXF9	2
	C3	4
	K1012-11	4
	TCH3	2
	TCH5	2

F1218parts list(c)


	K1218-11L	2
	F1218-11M	4
	F1218-11MM	2
	K1218-11R	2
	F1218-12L	1
	F1218-12R	1
	F1612-6M	8
	K1012-8	8
	K1014-9L	2
	F1218-9M	4
	K1014-9M	2
	K1014-9R	2
	F1612-10L	1
	F1612-10M	11
	F1218-10R	1
	F1612-14	4

	TCH6	2
	TCH7	2
	GC	4
	GE	2
	T-F	4
	DC	2
	C2	8
	DJ	4
	F1	1084
	F2	108
	F4	4
	V2	298
	GL	1
	SL	154
	M20	1
	ST	2


Shed top panels

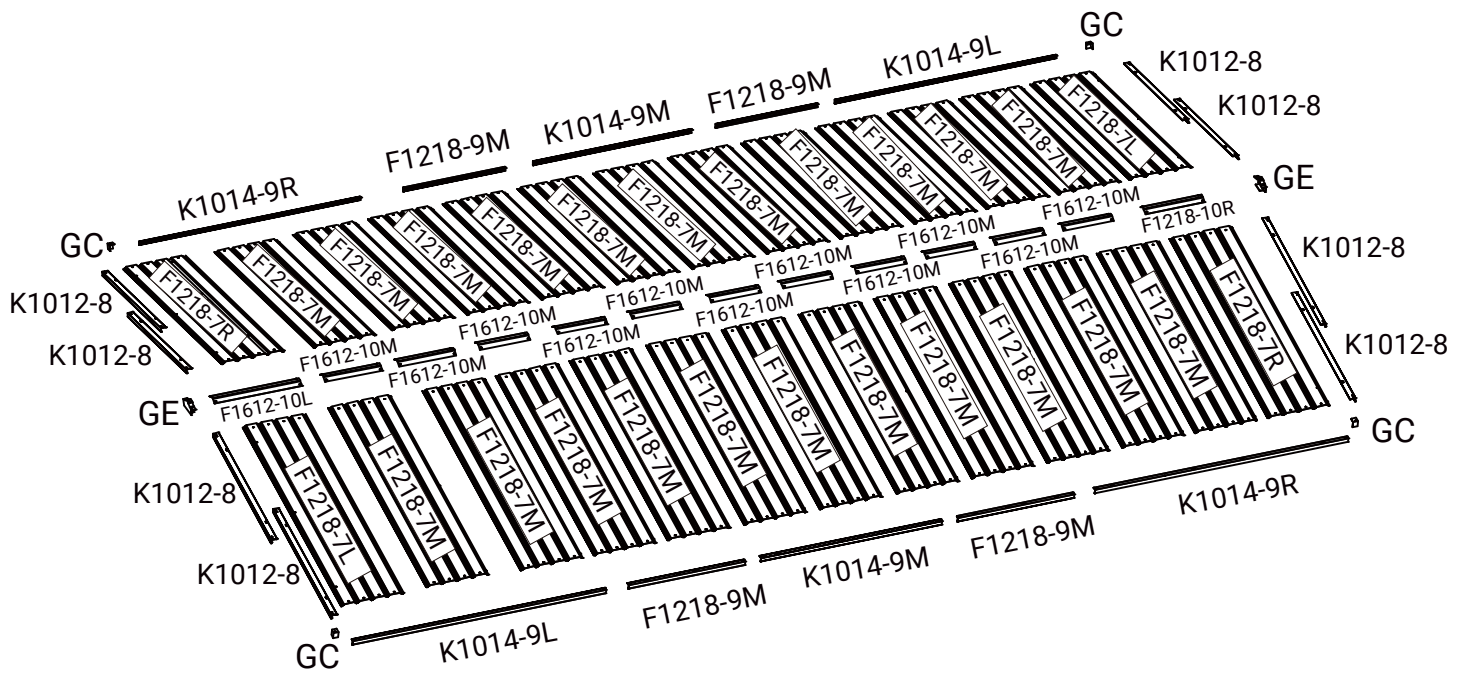


Shed top frame

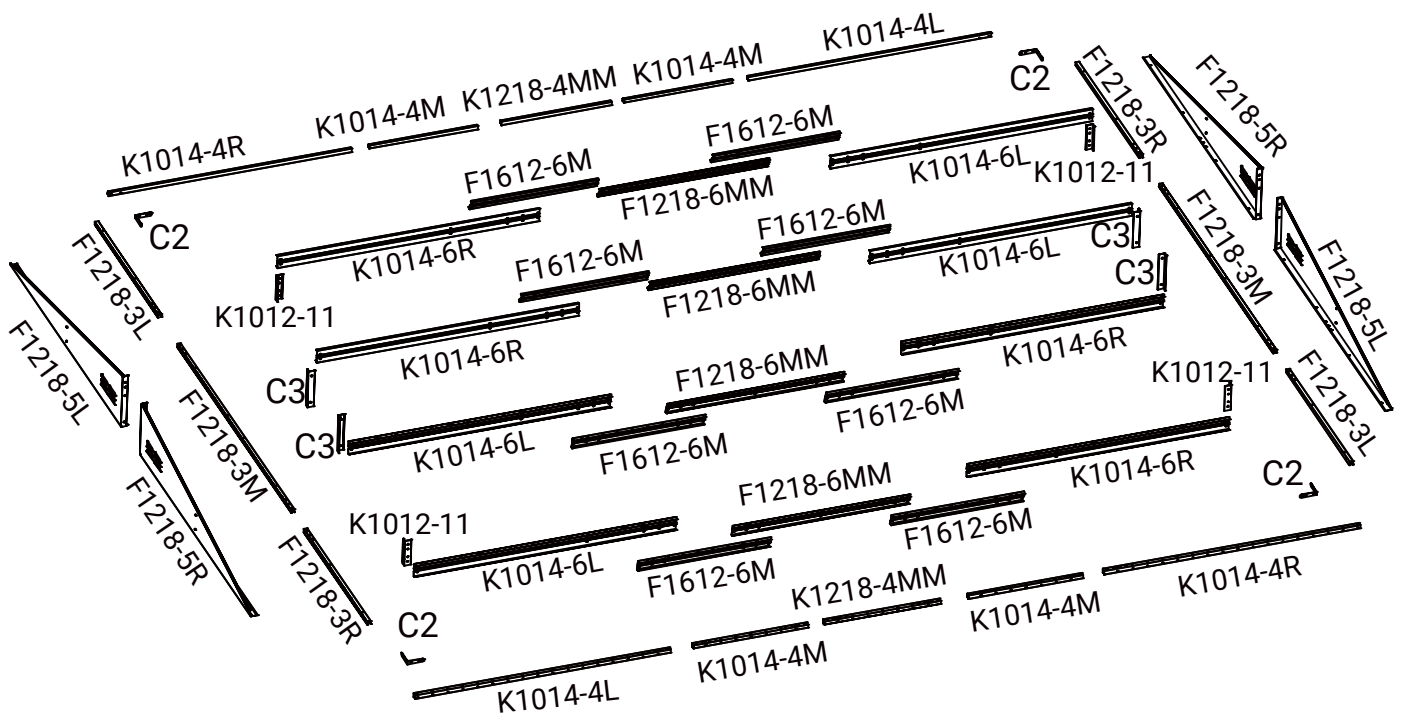



Door and Shed base

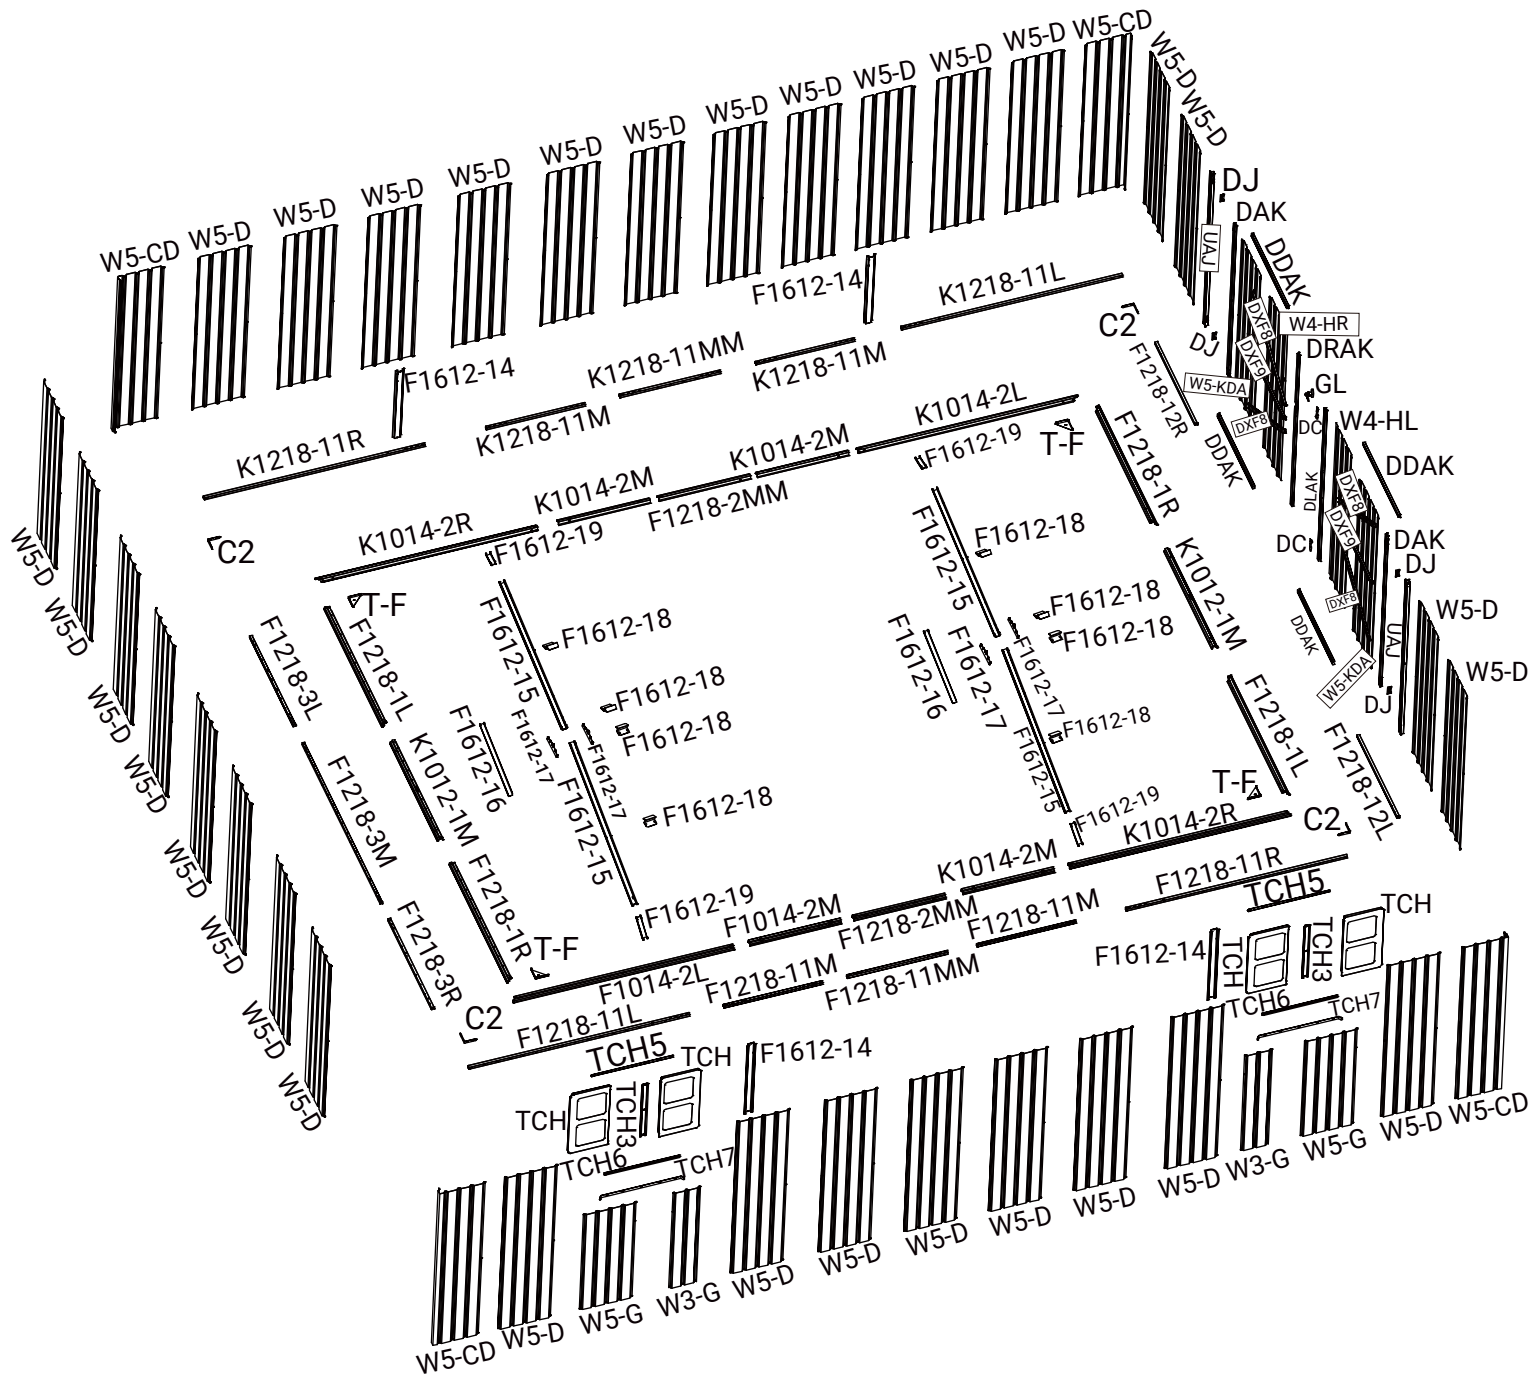

Sort By Splicing


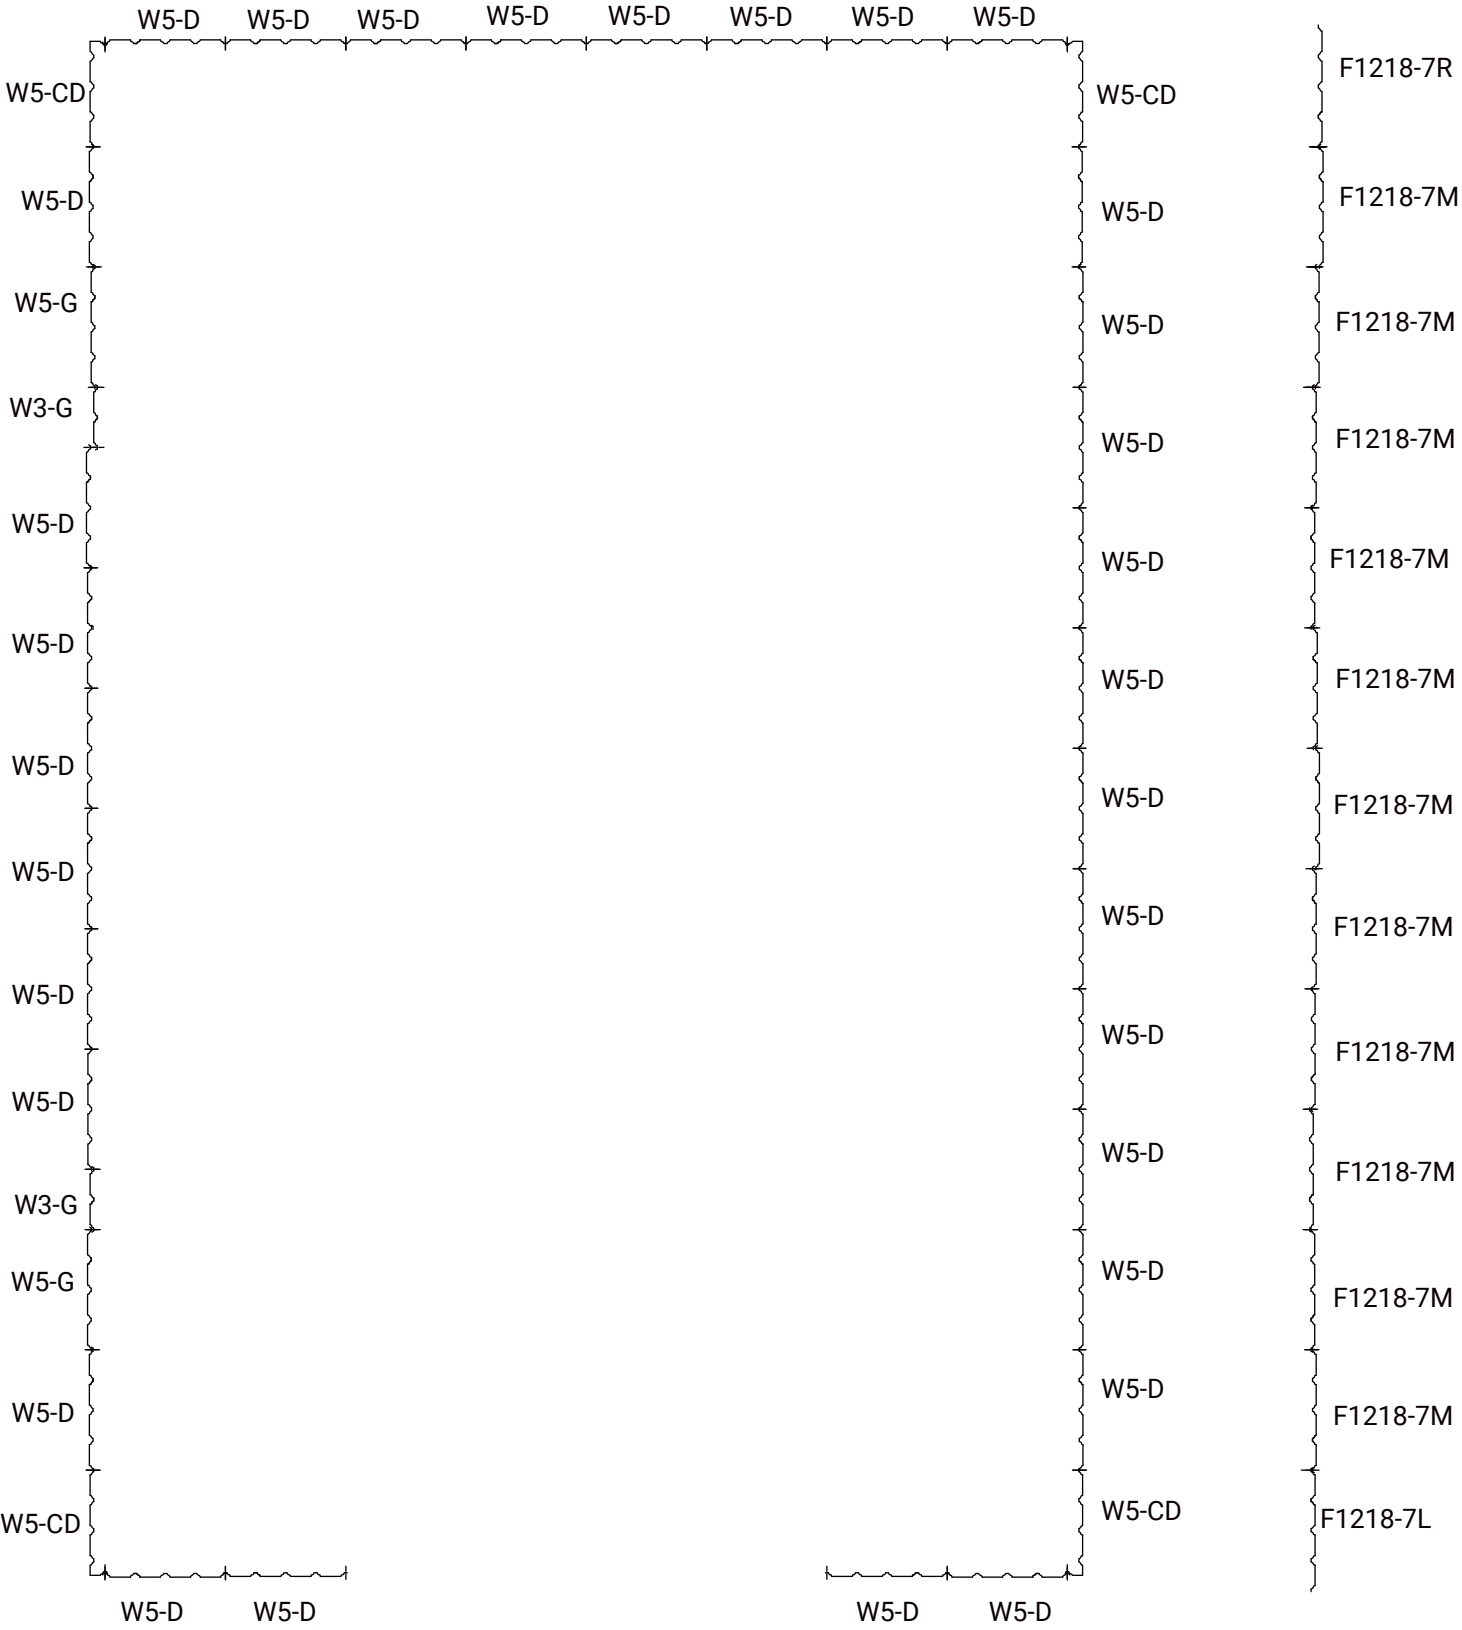


STEP 1

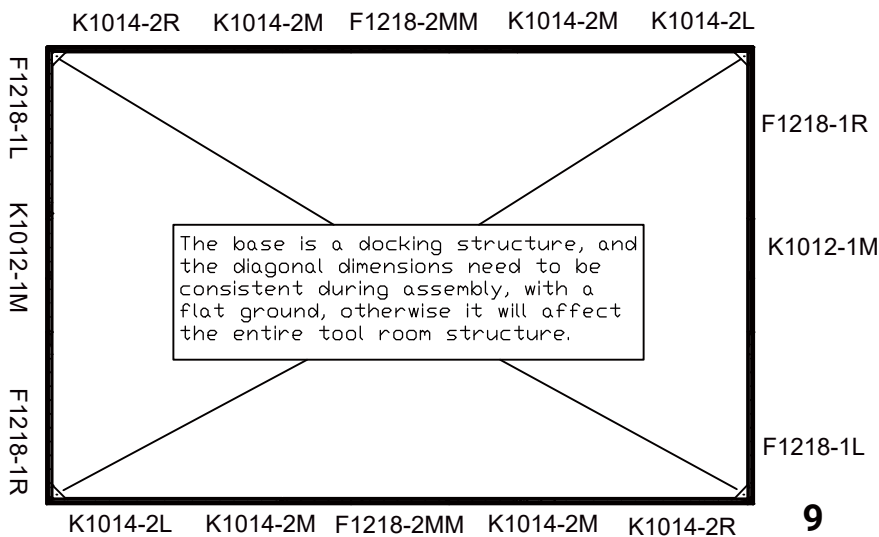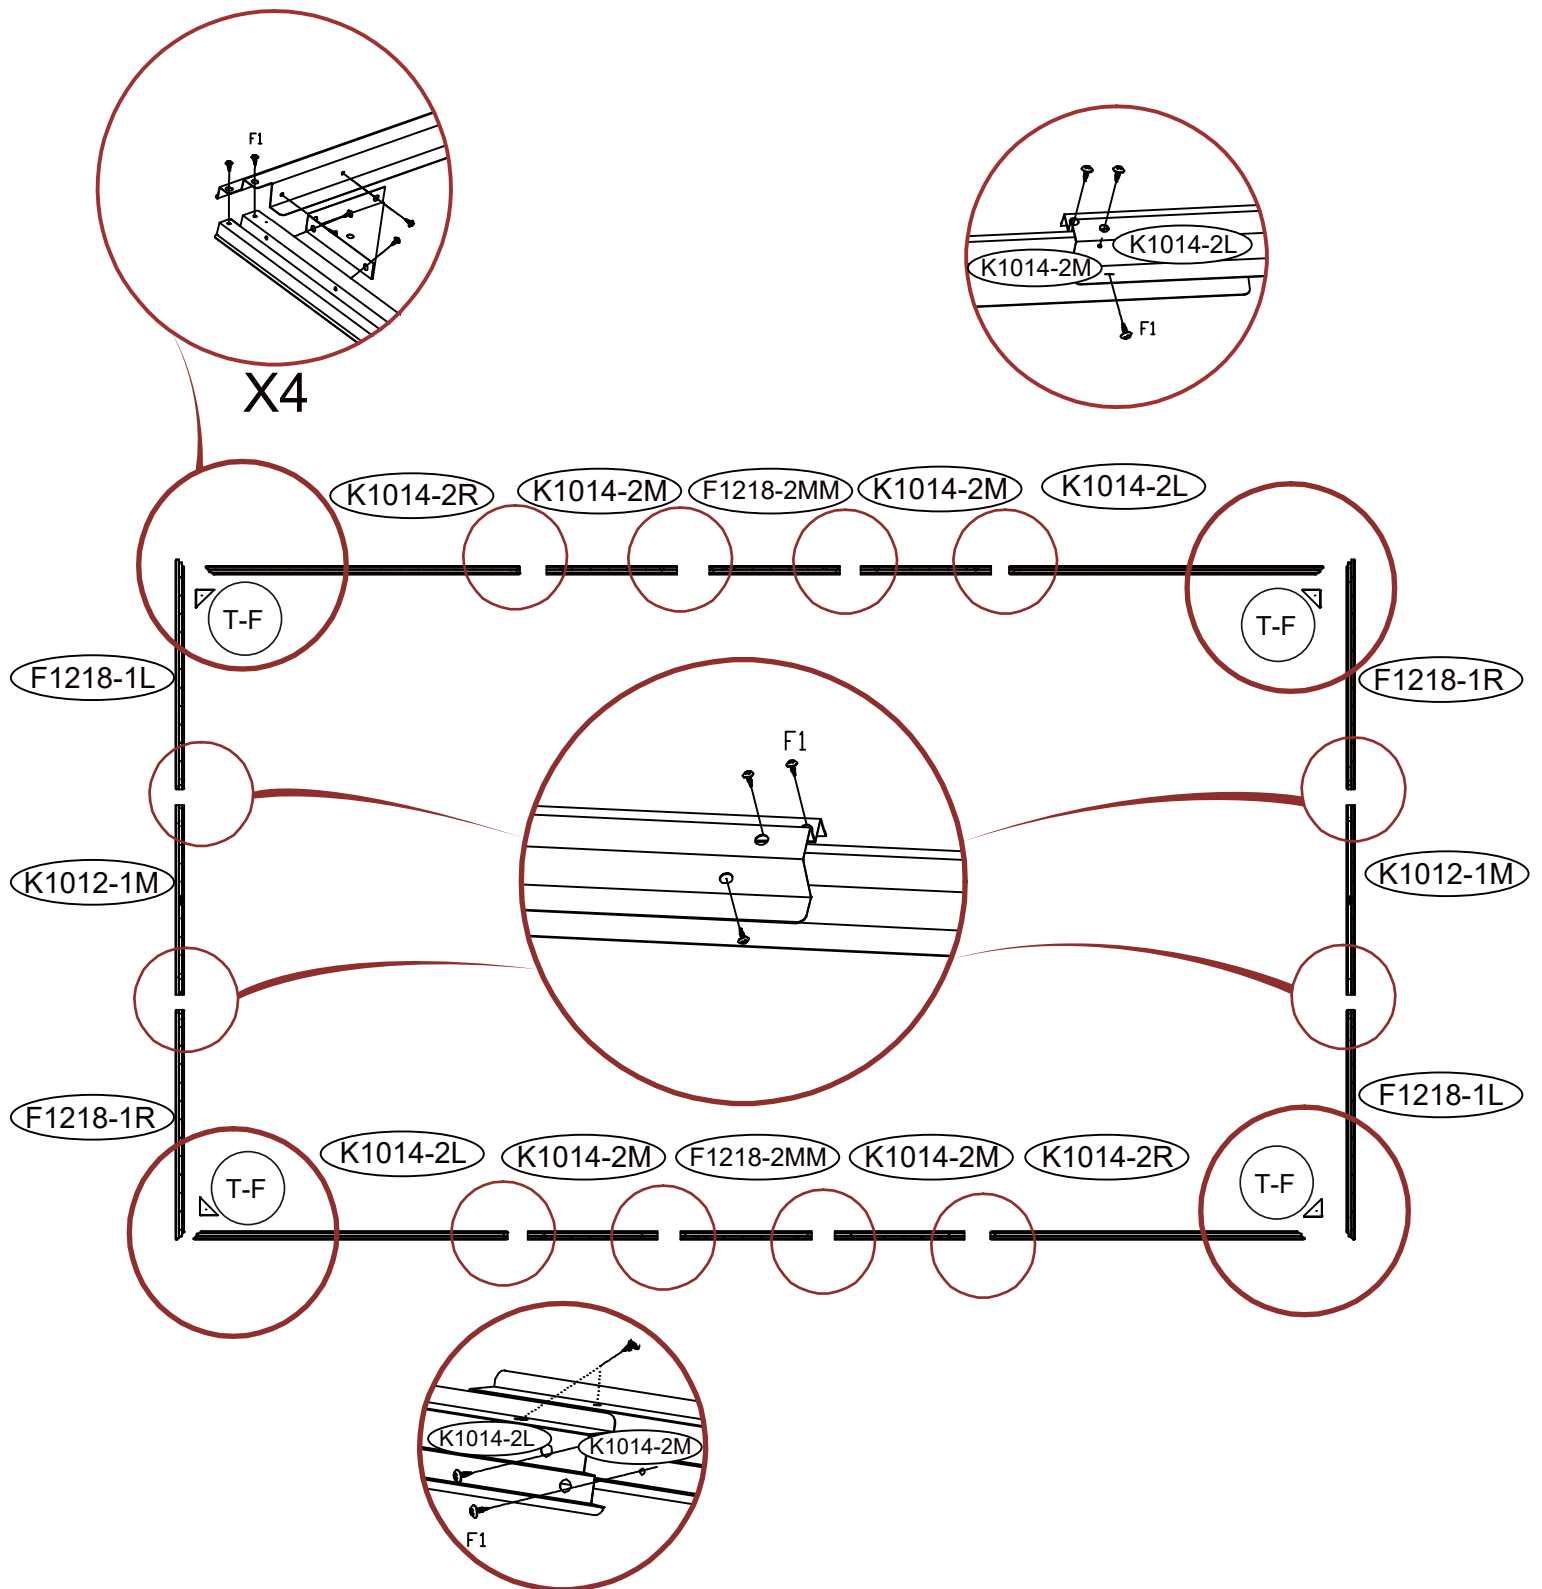


	F1	60
--	----	----

STEP 2


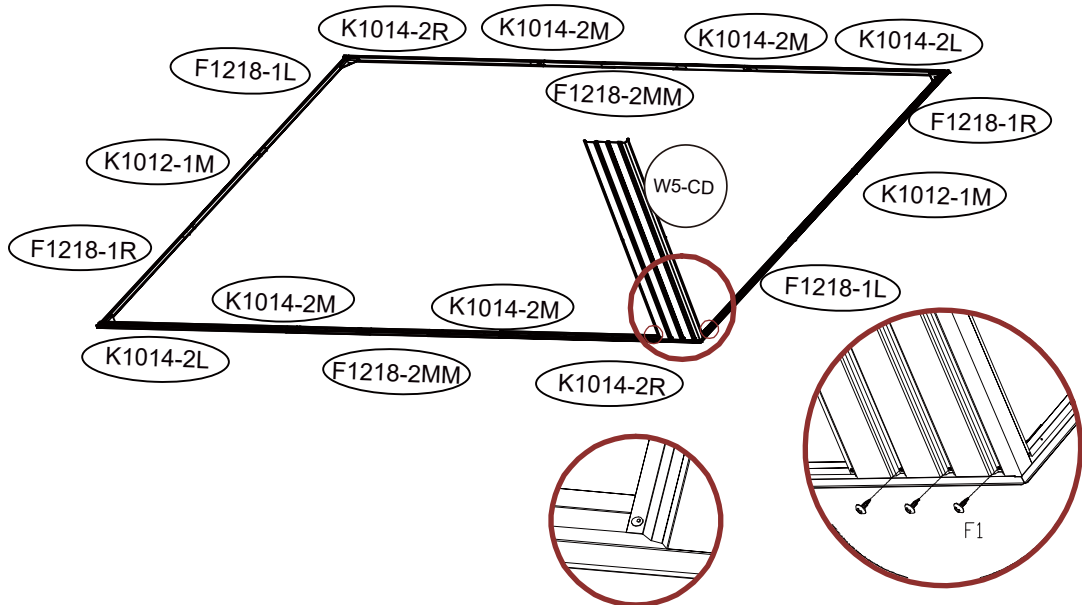
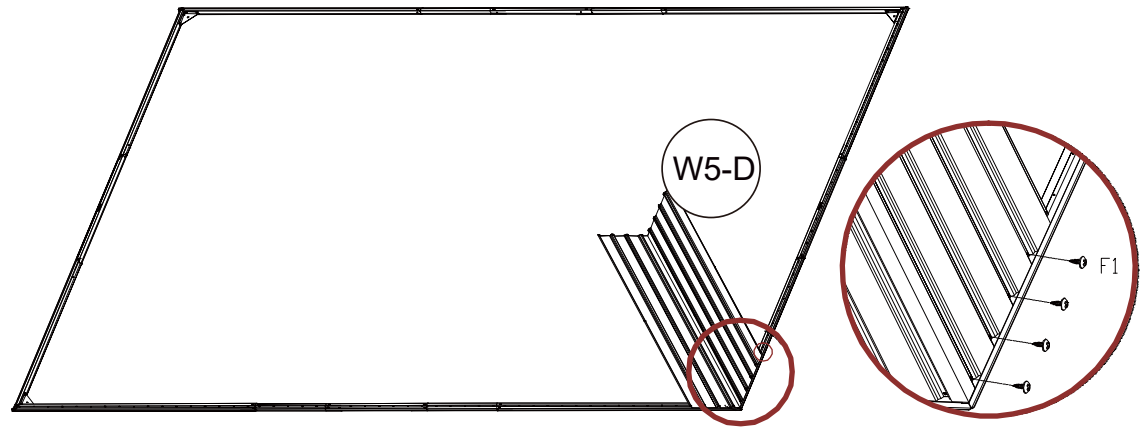




Do not add screws that indicated with an X in diagram These need to be left undone.

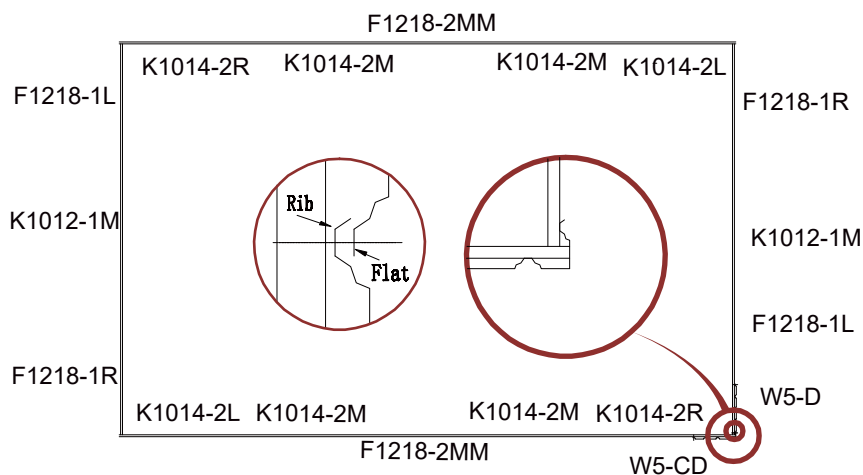

	F1	7
---	----	---


STEP 3

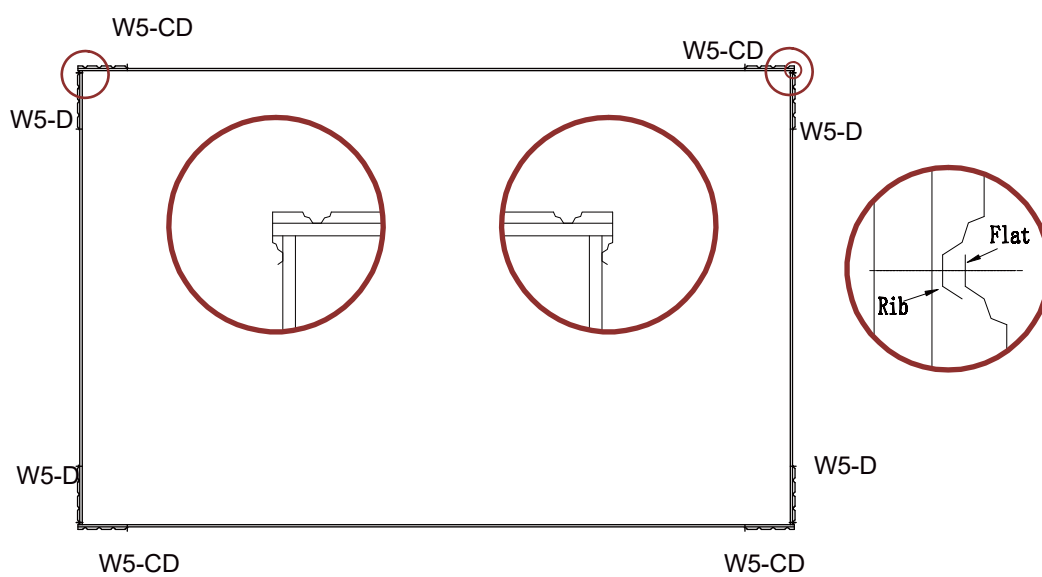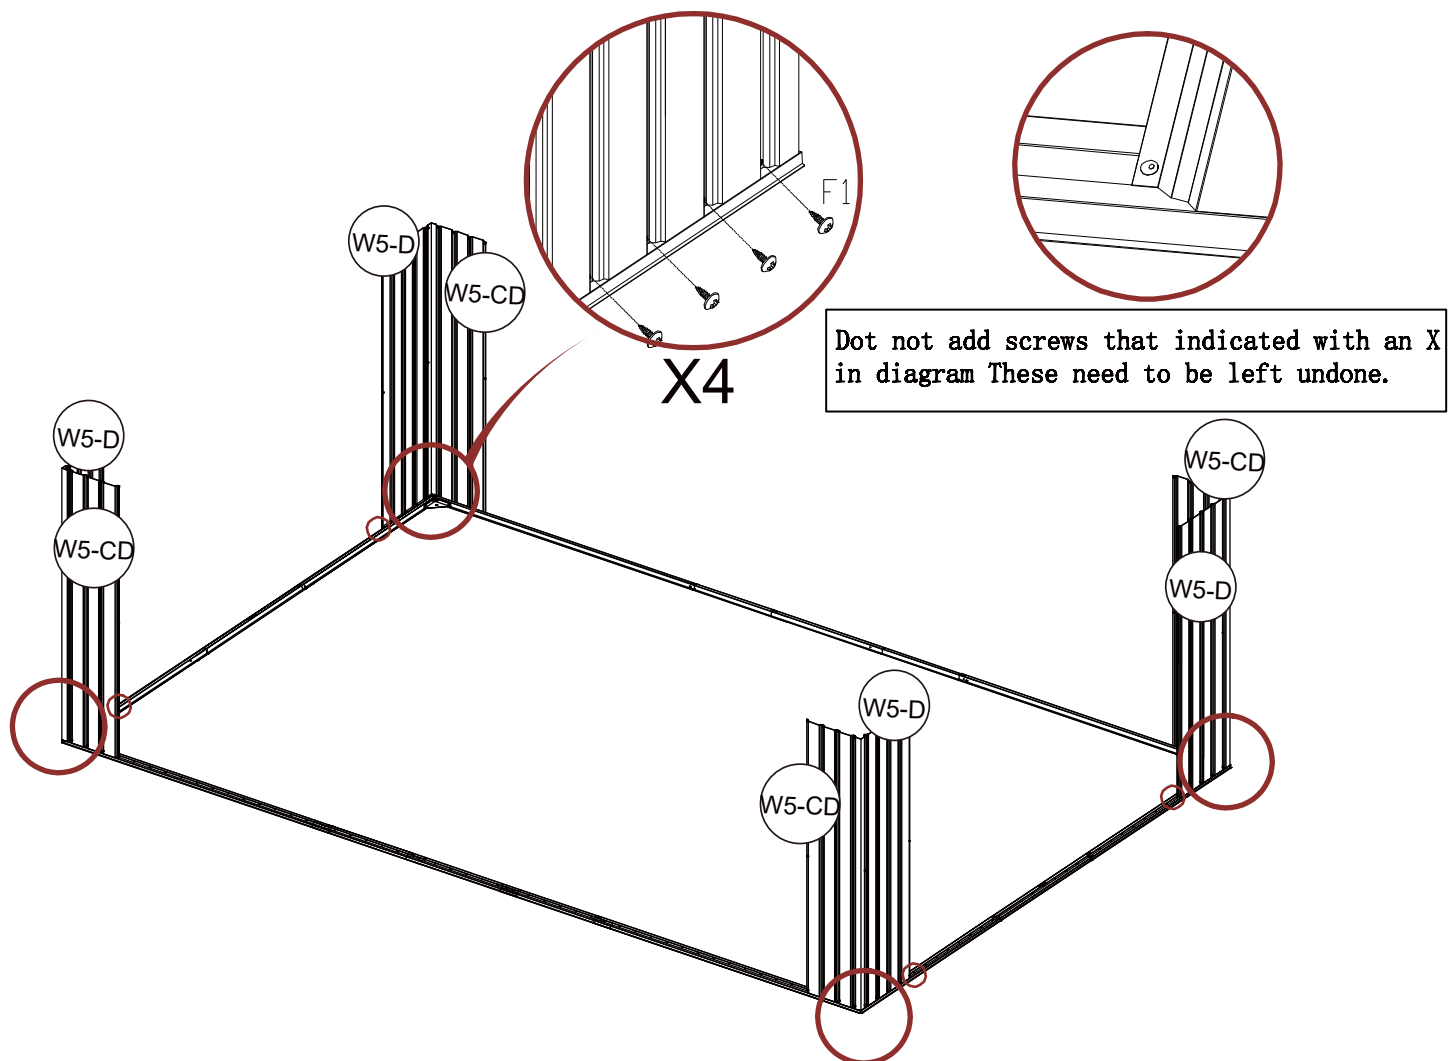

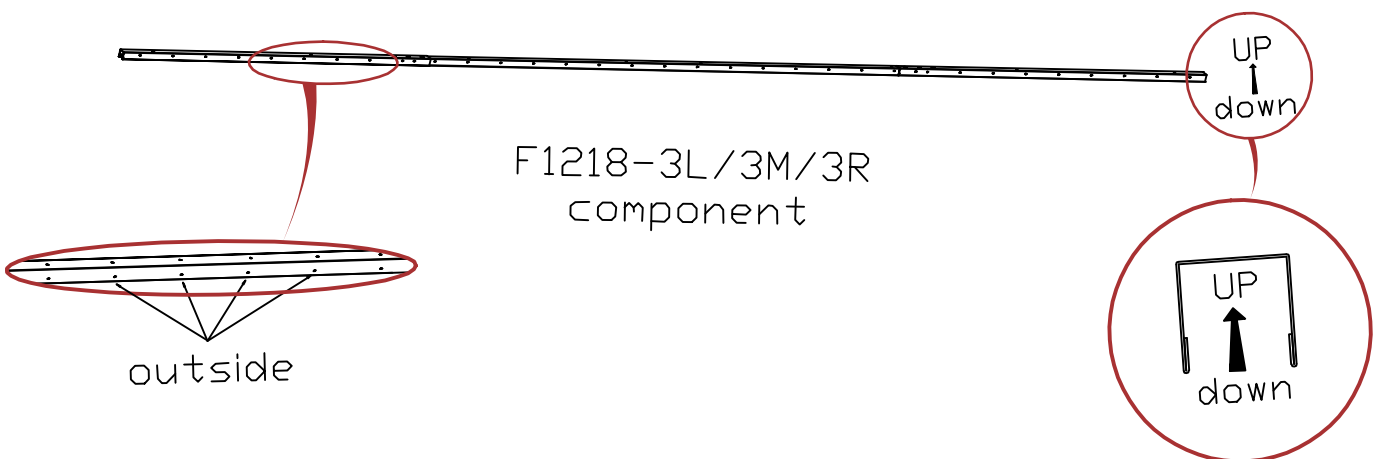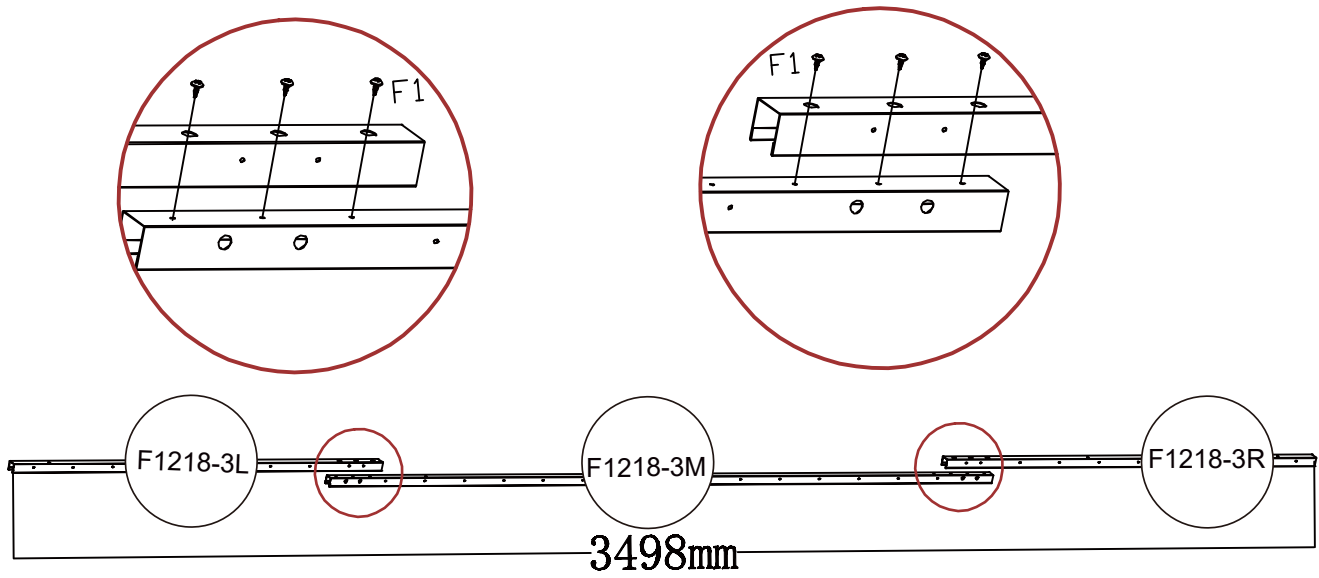


	F1	18
---	----	----


STEP 5

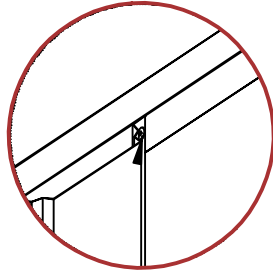


Do not add screws that indicated with an X in diagram These need to be left undone.

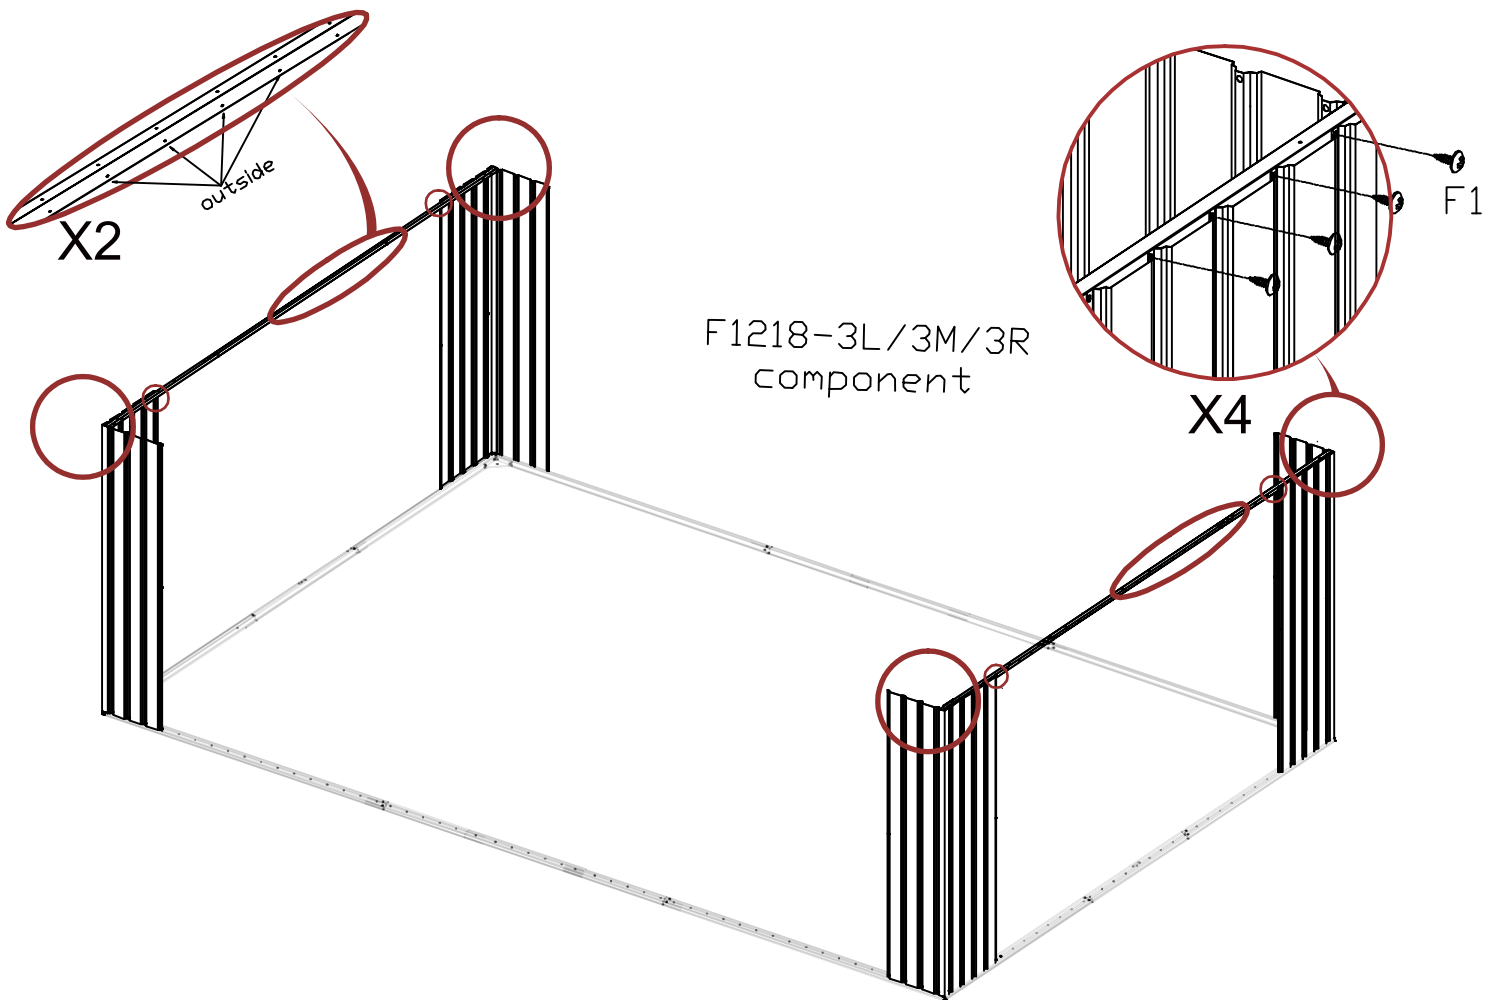

	F1	16
---	----	----


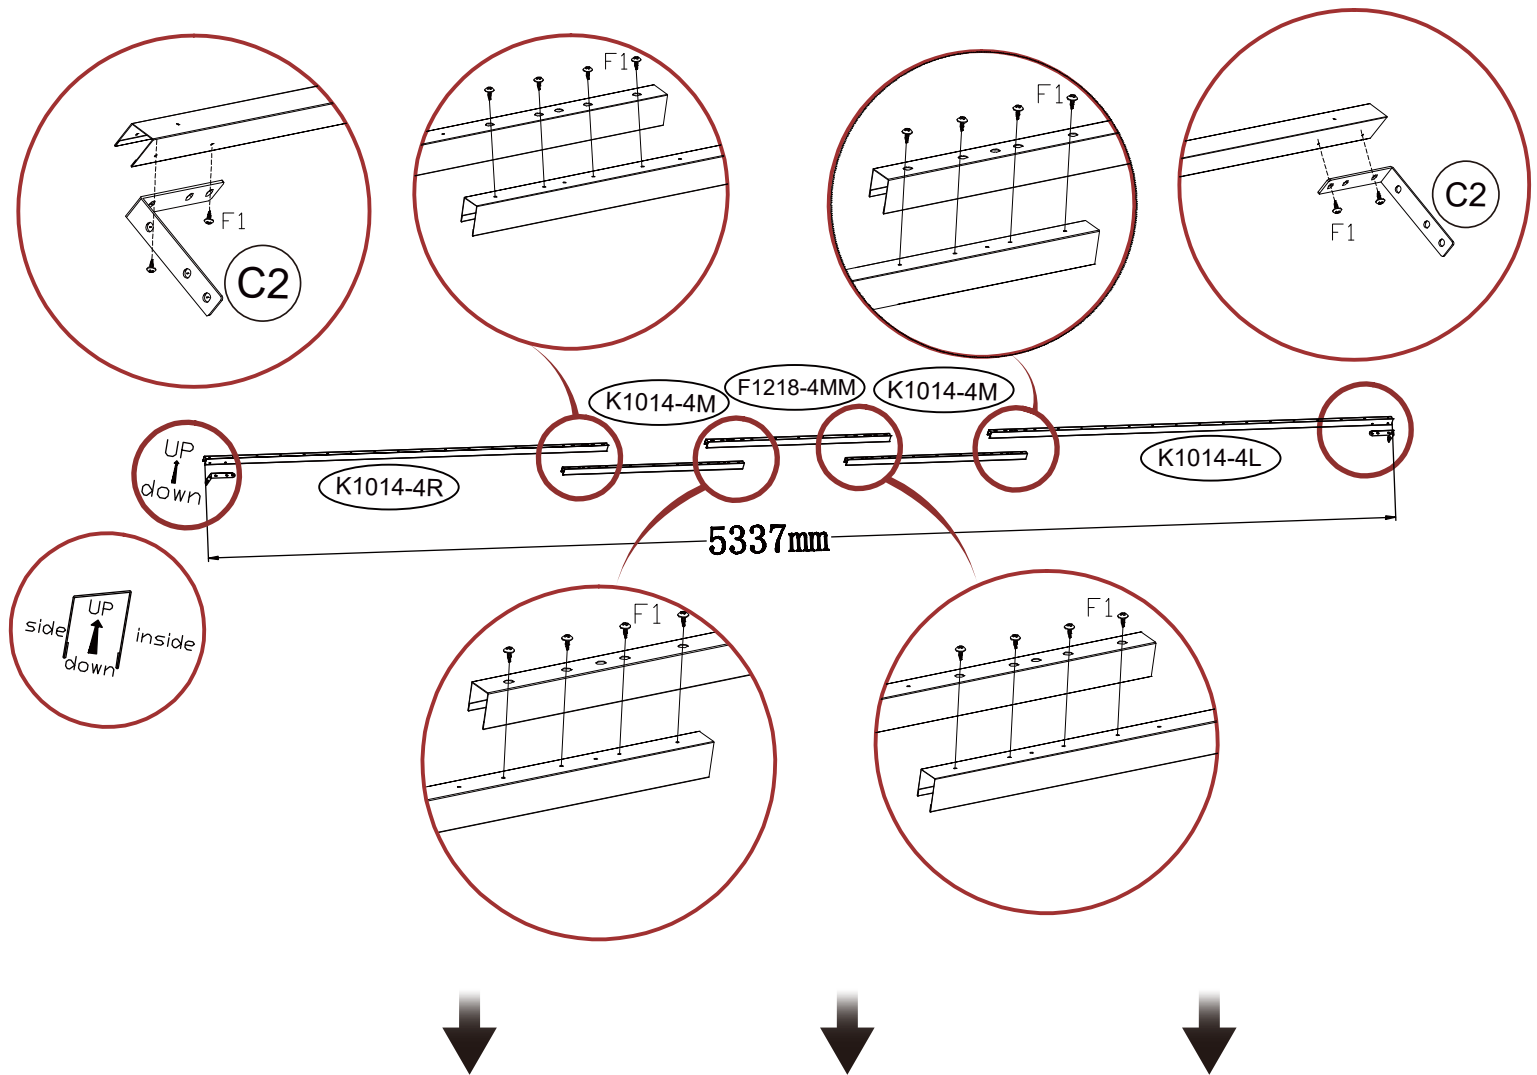


A component

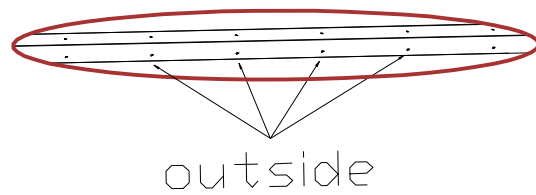



	F1	40
---	----	----

STEP 7

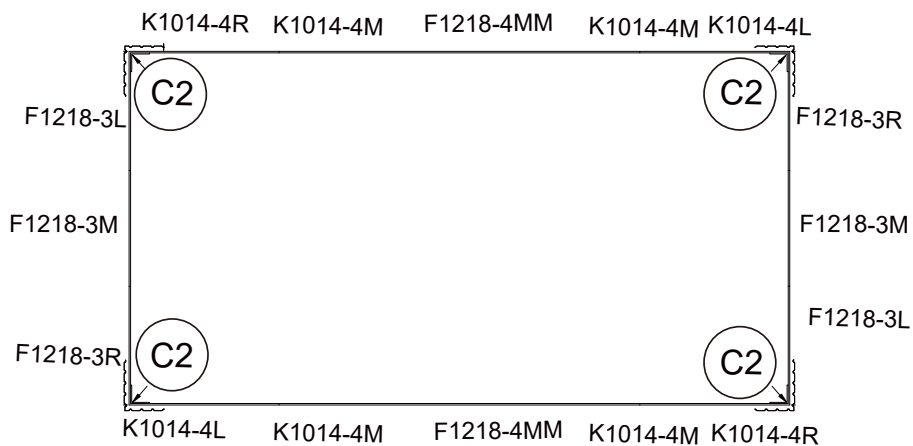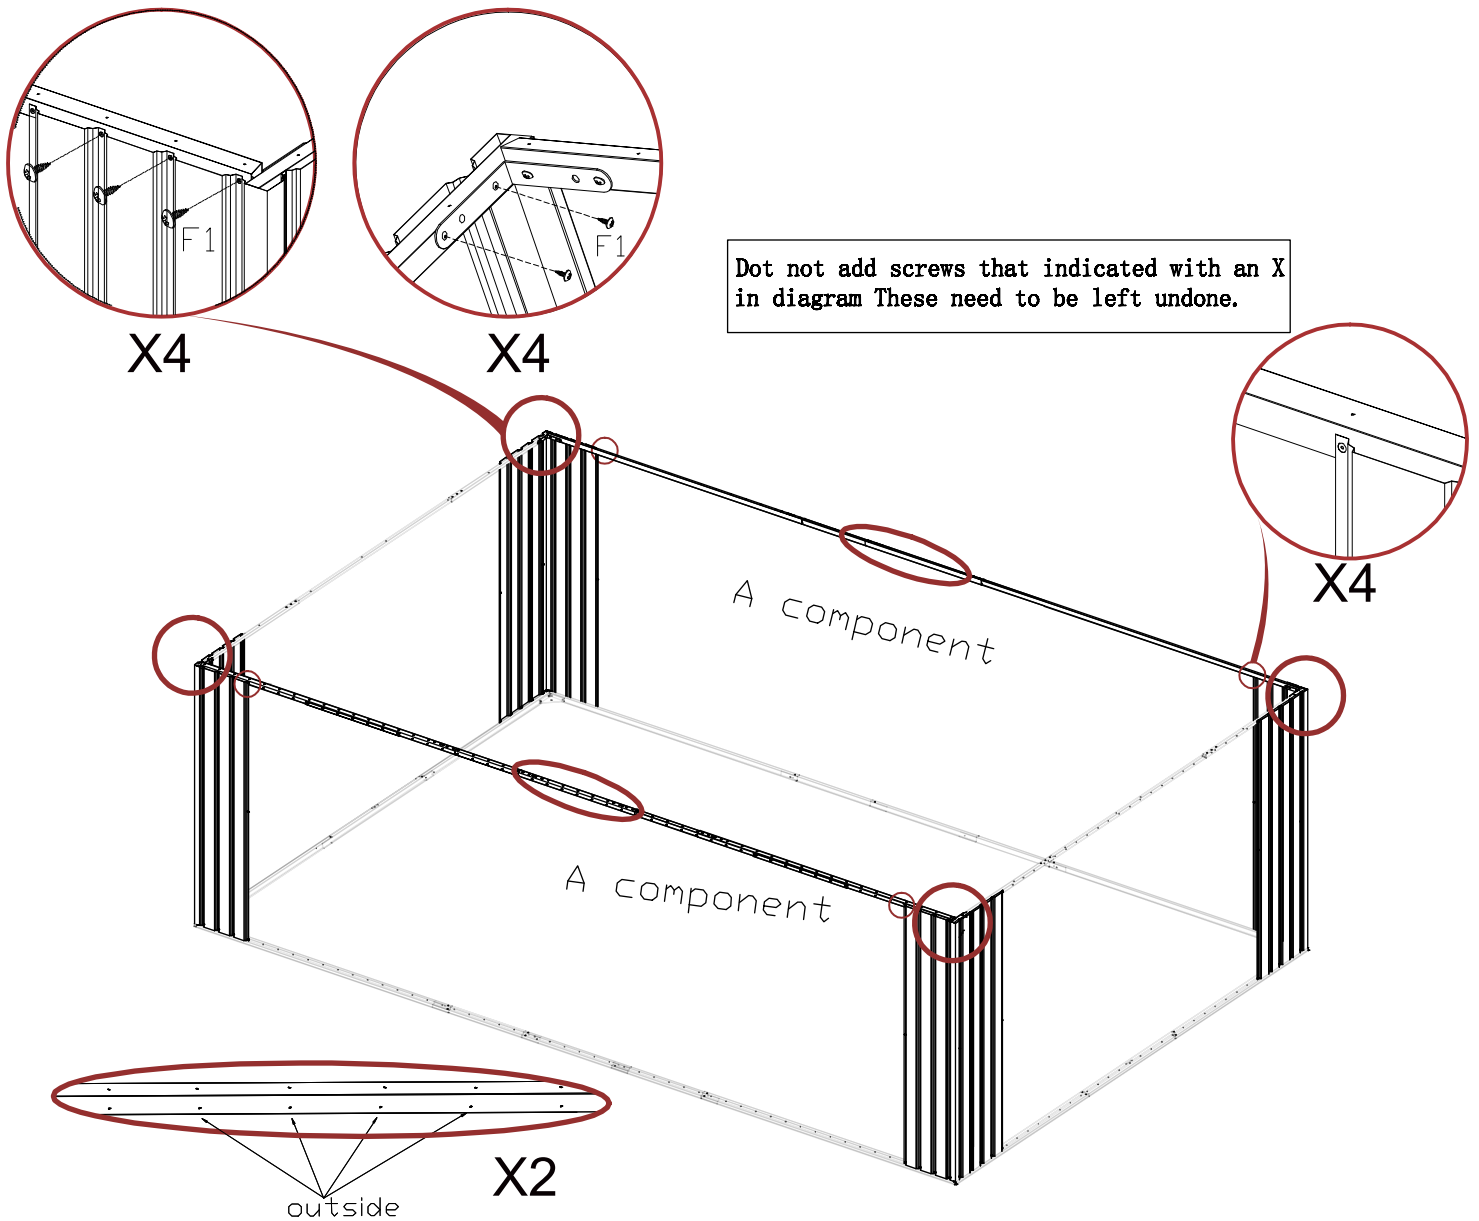


	F1	20
---	----	----

STEP 8

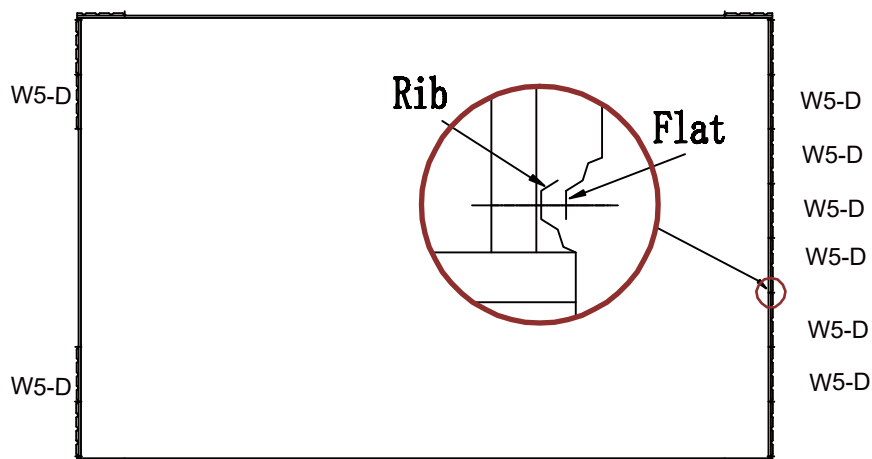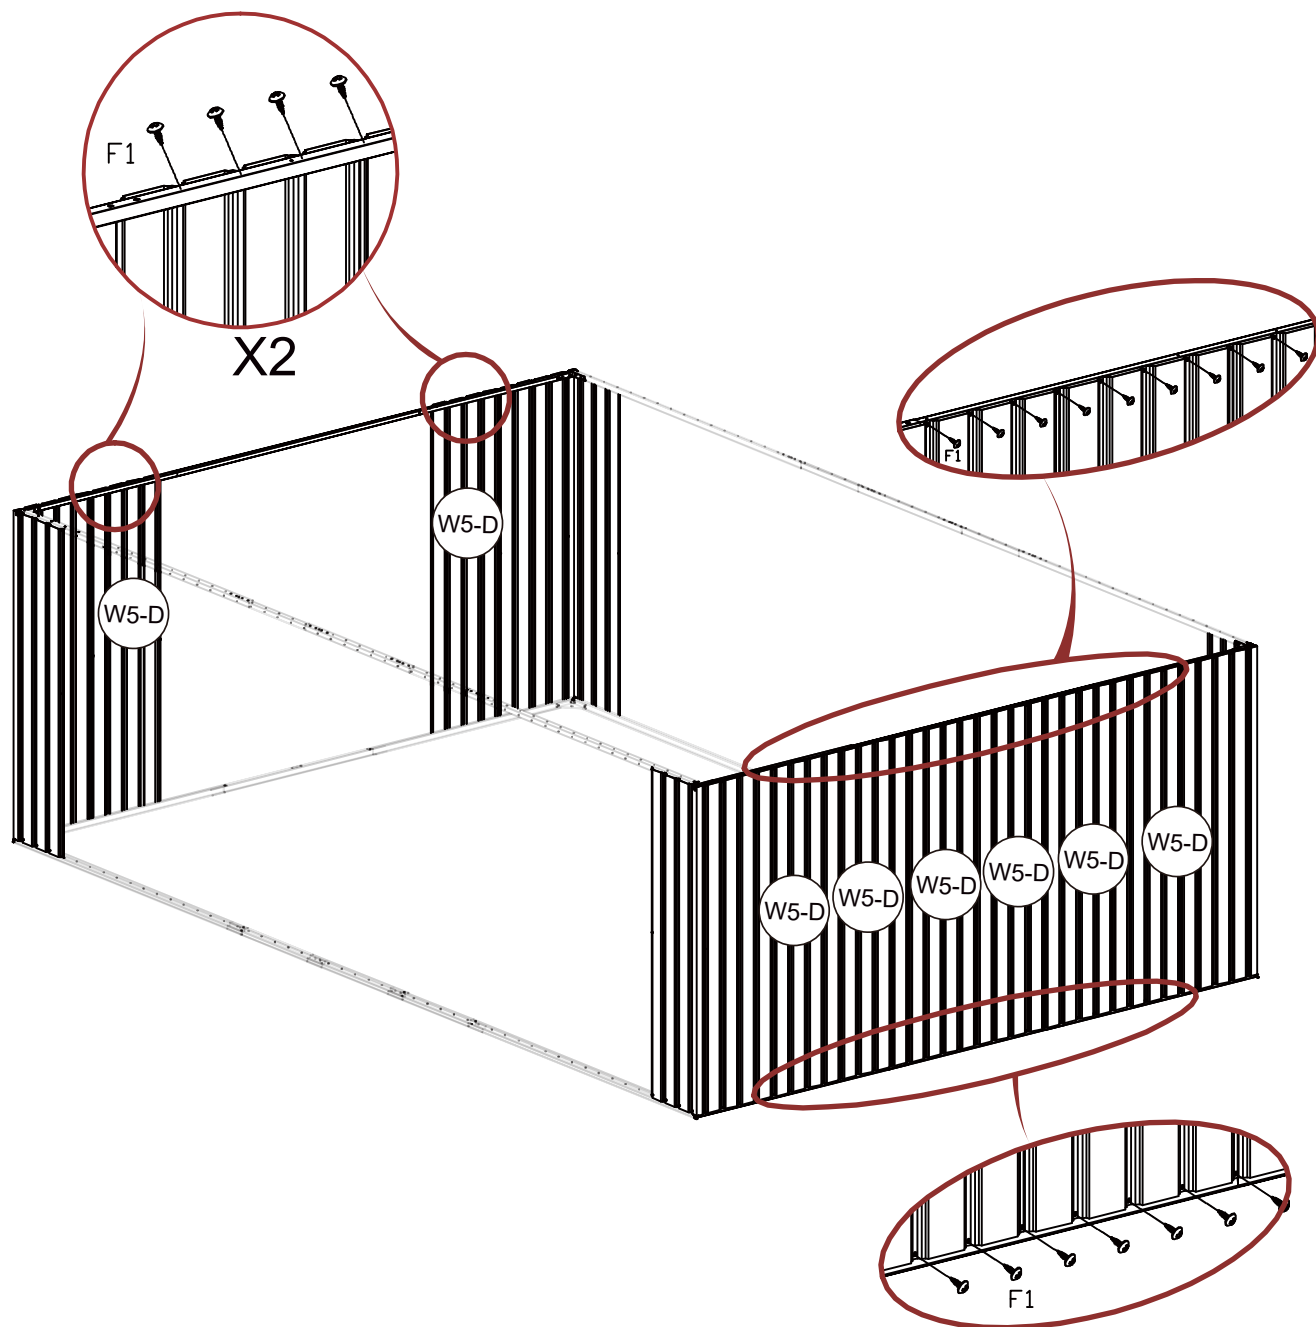

	F1	66
---	----	----

STEP 9

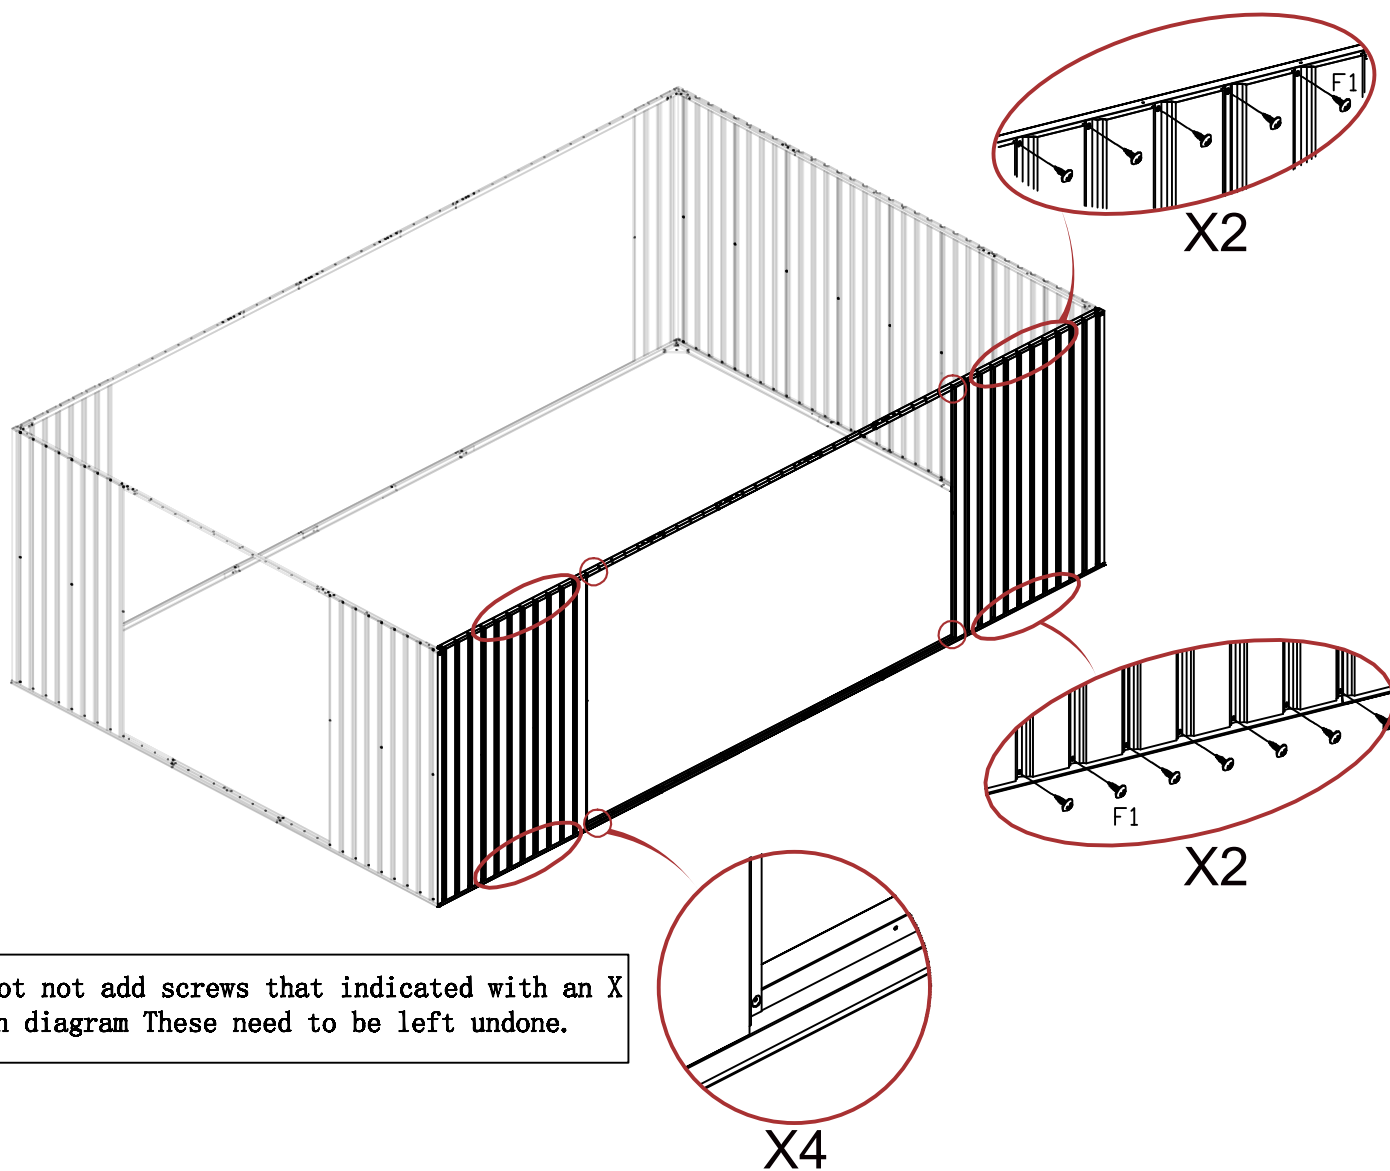




W5-DW5-D

W5-D W5-D

	F1	32
---	----	----


STEP 10

Note: The side with holes should be on top.

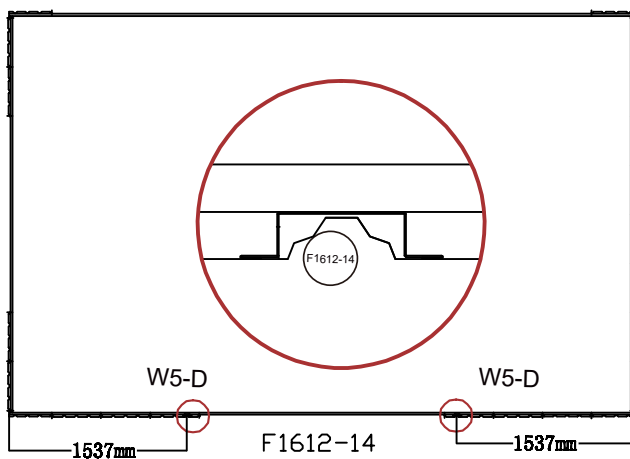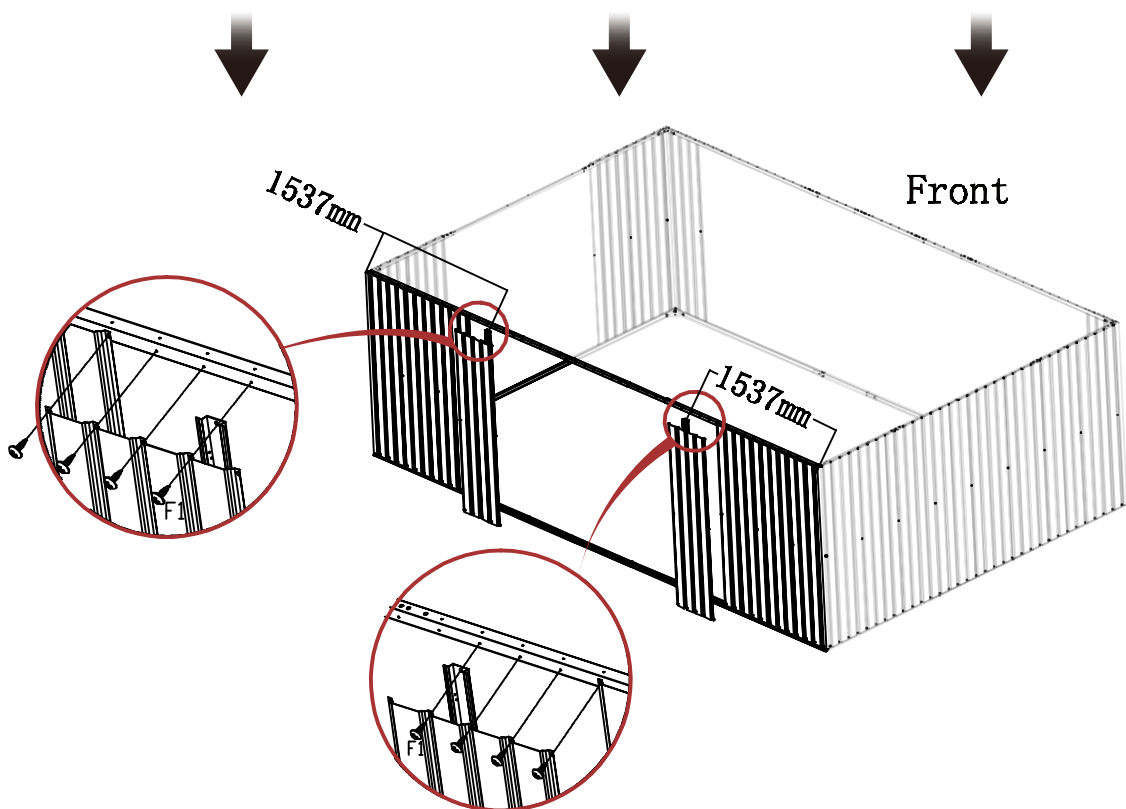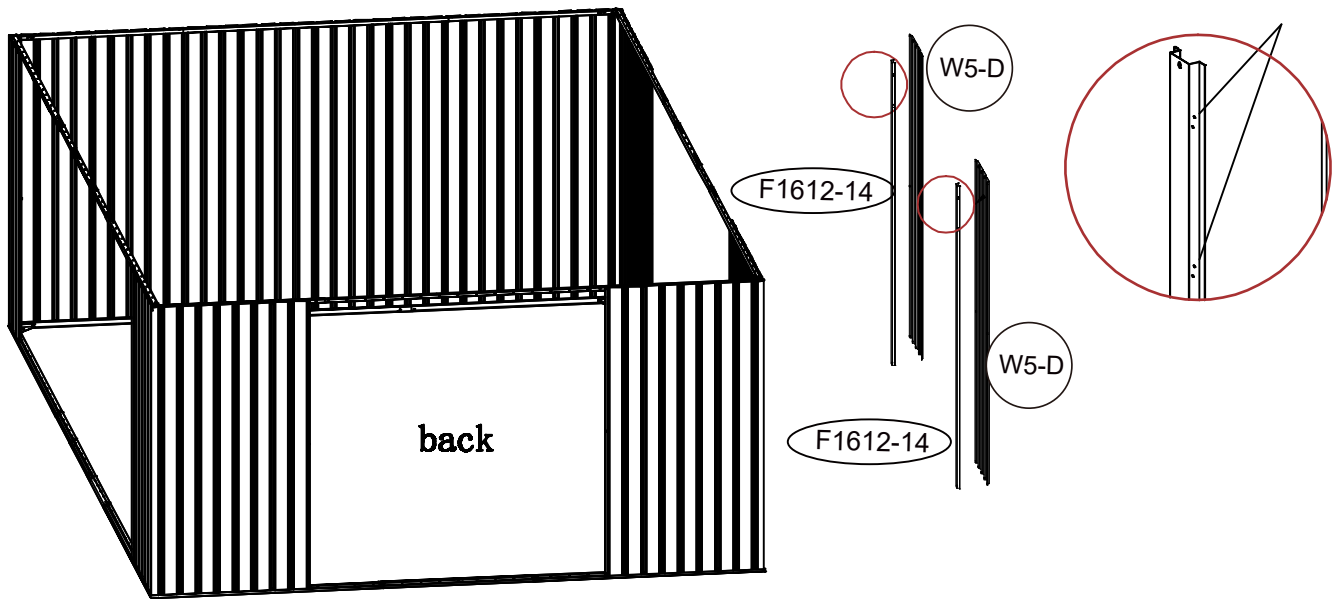


	F1	8
---	----	---

STEP 11

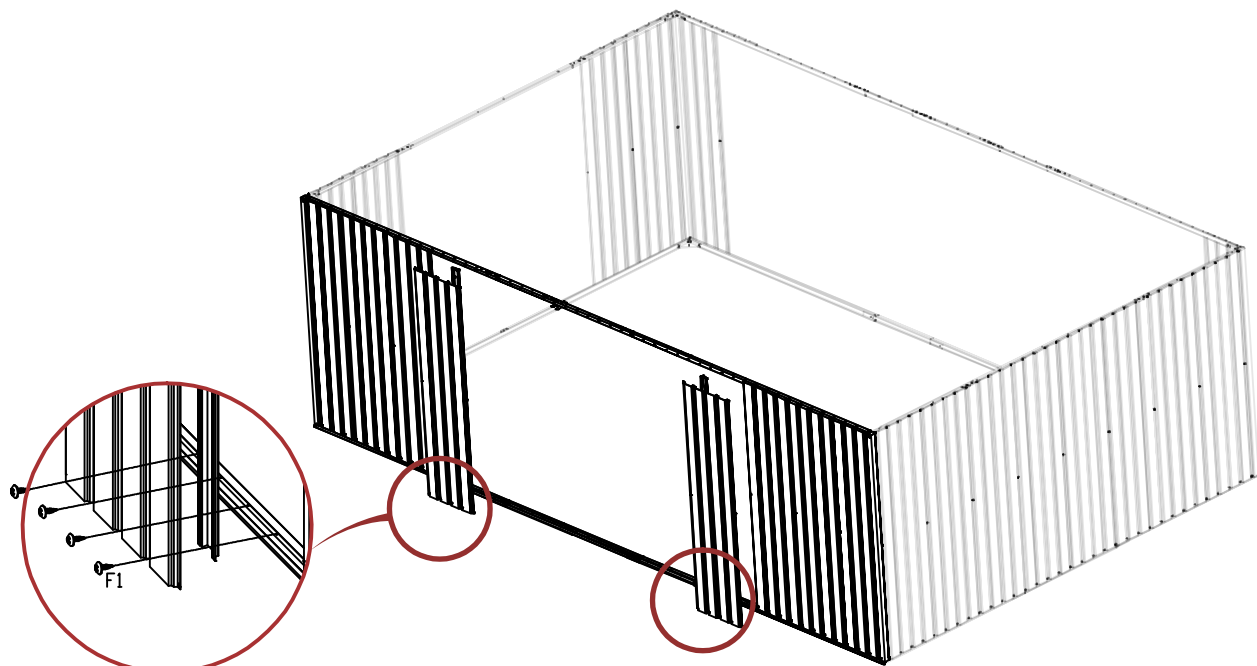


X2

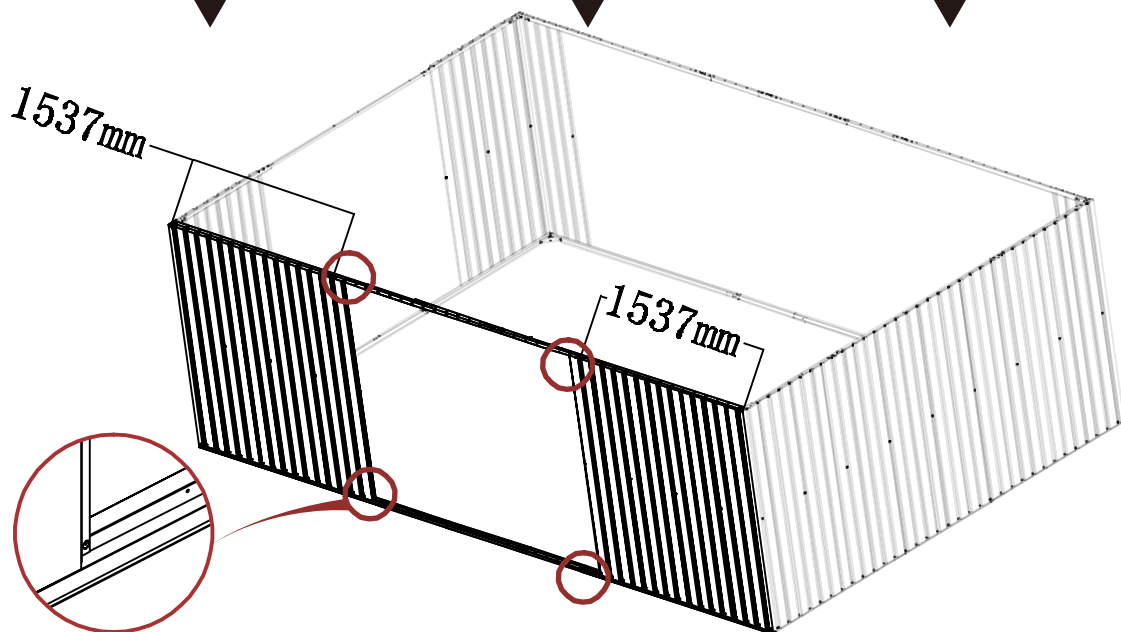


X4

Do not add screws that indicated with an X in diagram. These need to be left undone.

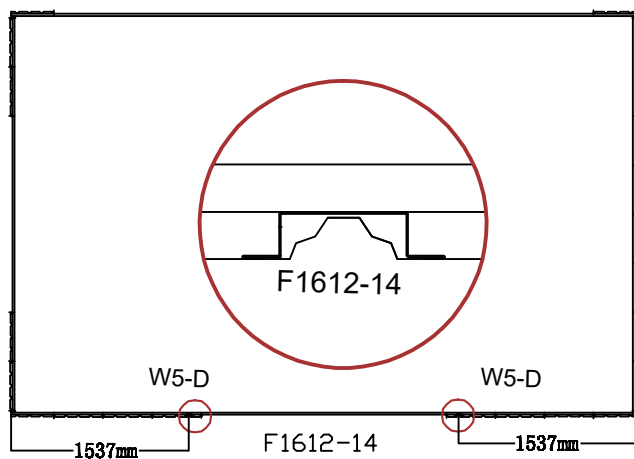



	F1	8
---	----	---

STEP 12

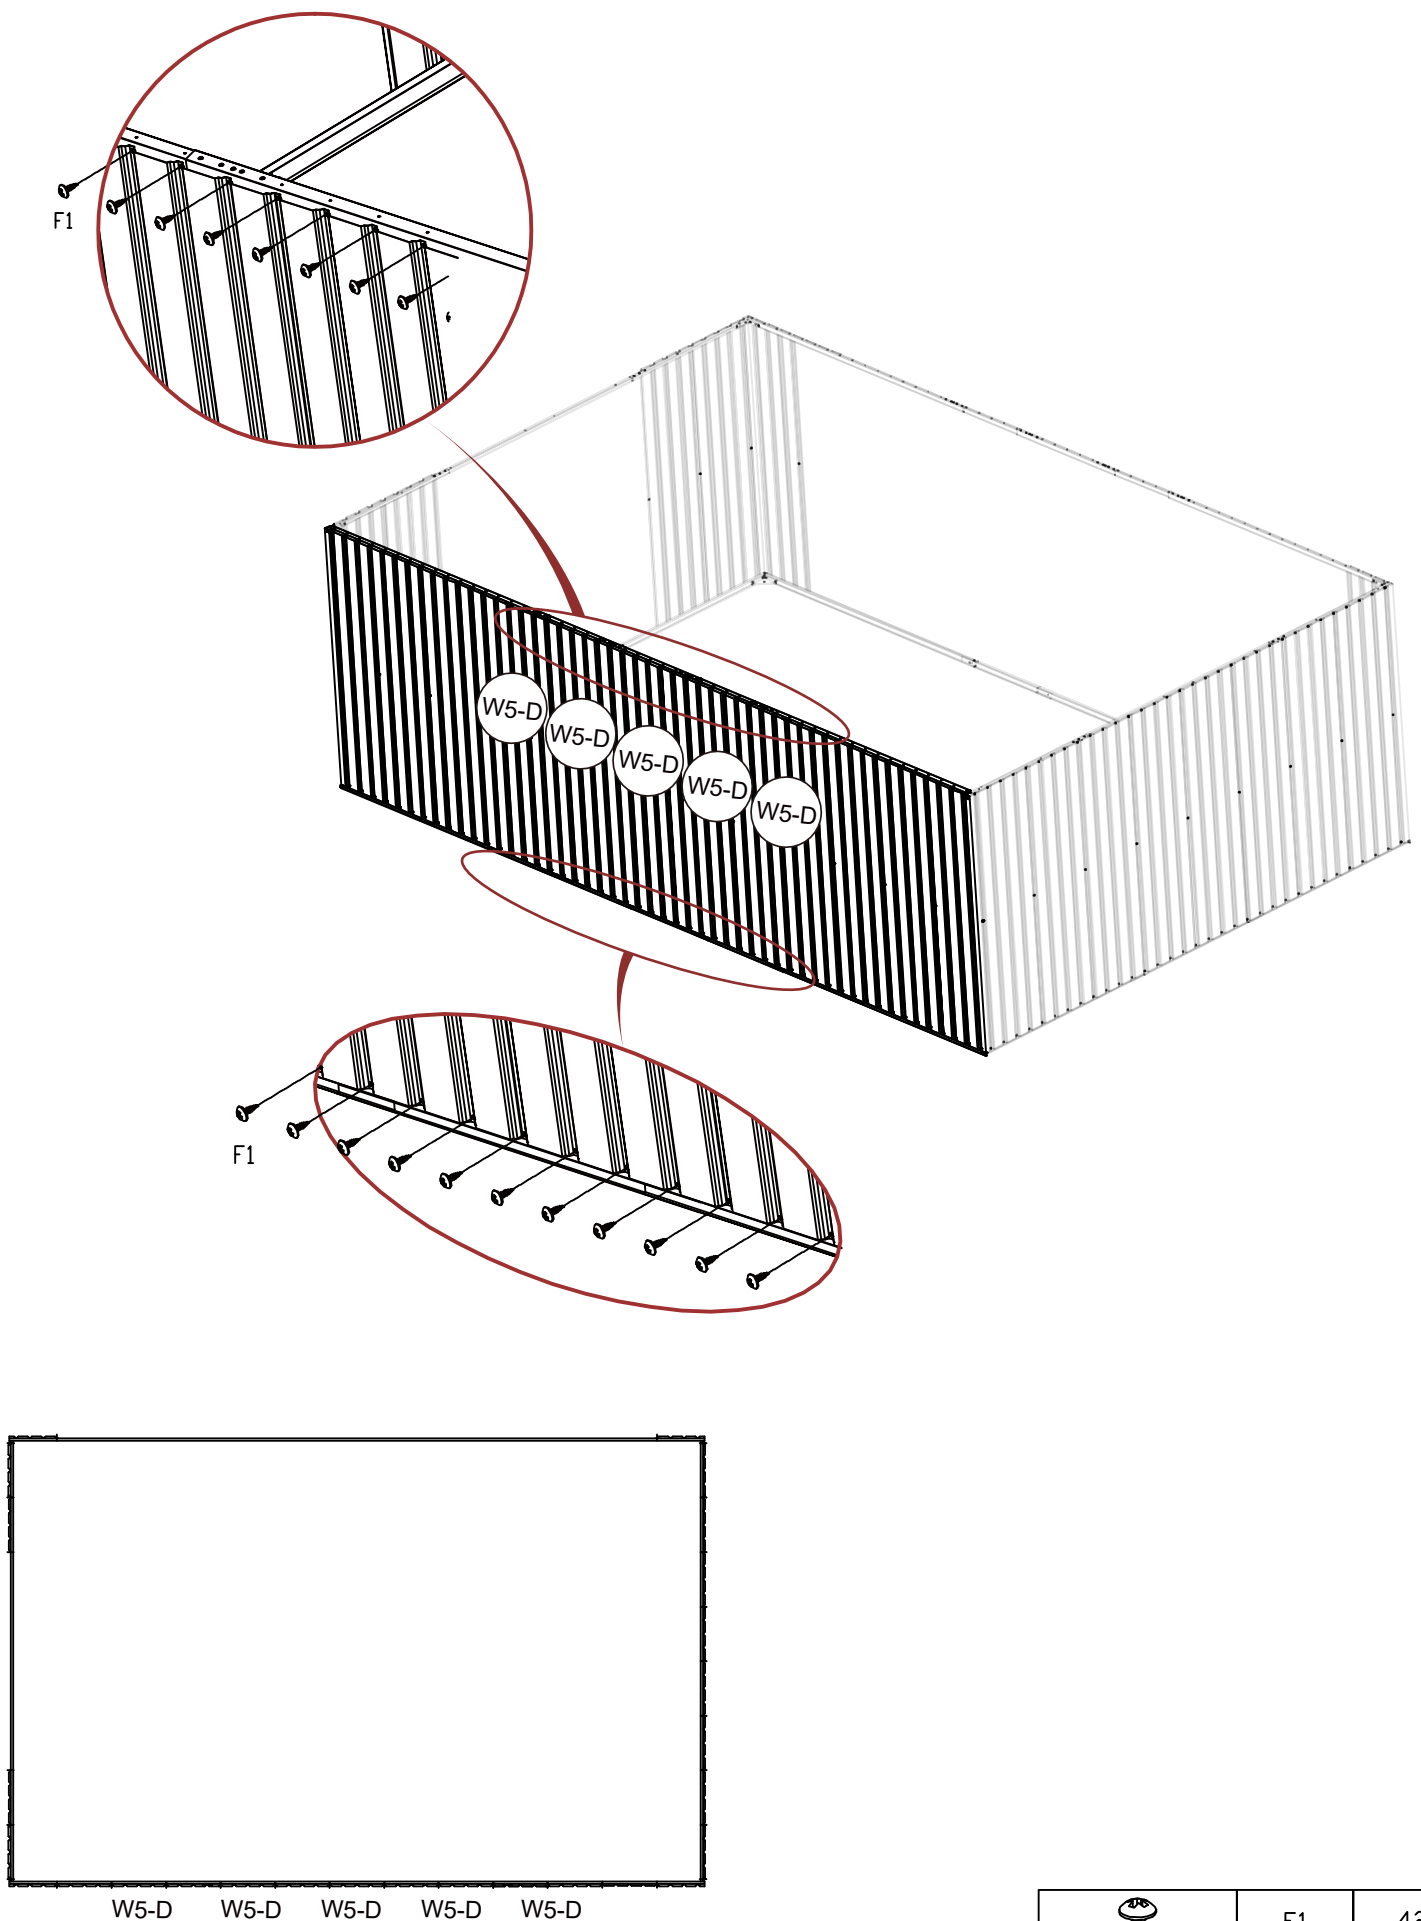



	F1	42
---	----	----

STEP 13

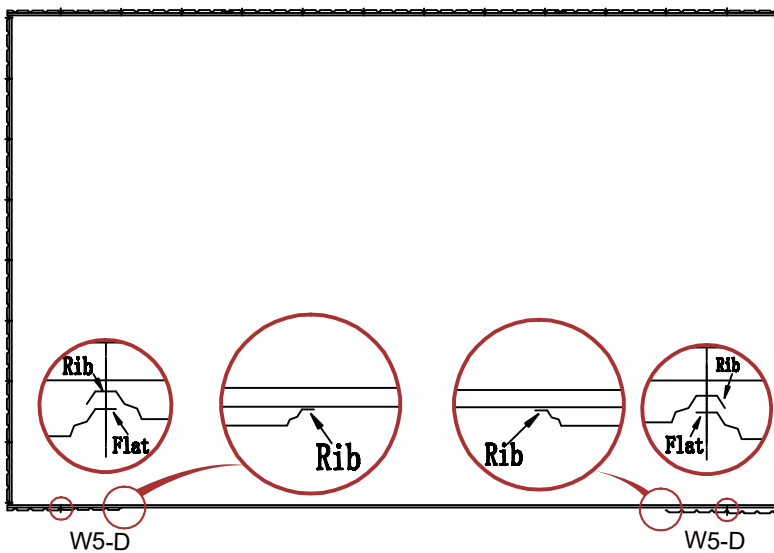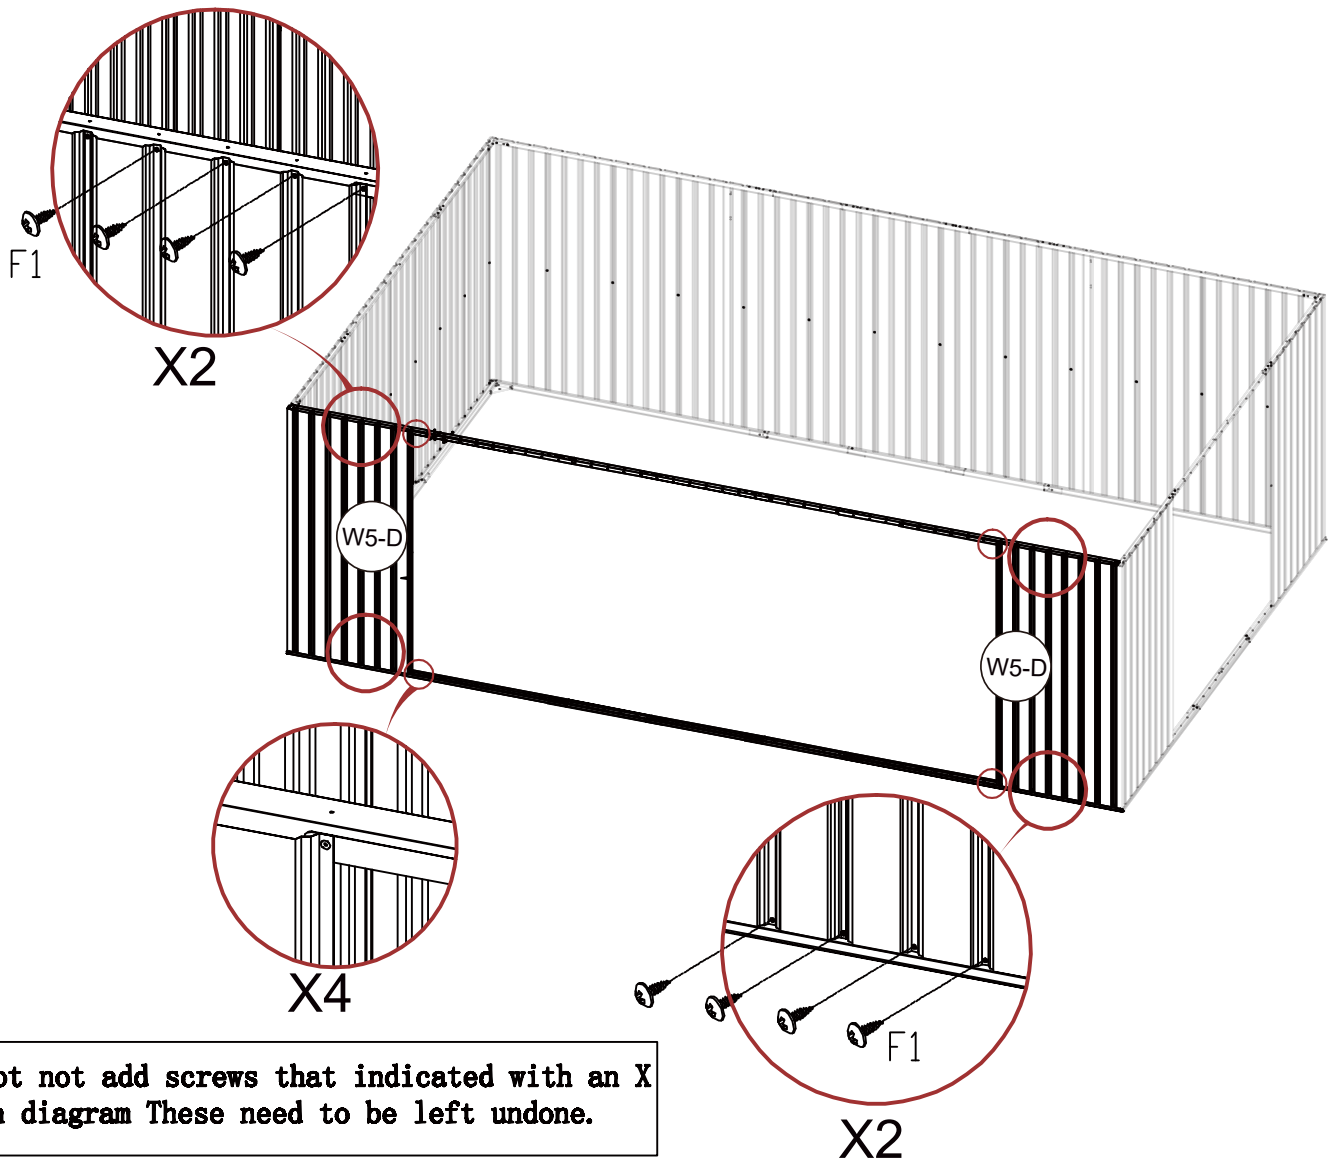




	F1	16
---	----	----

STEP 14

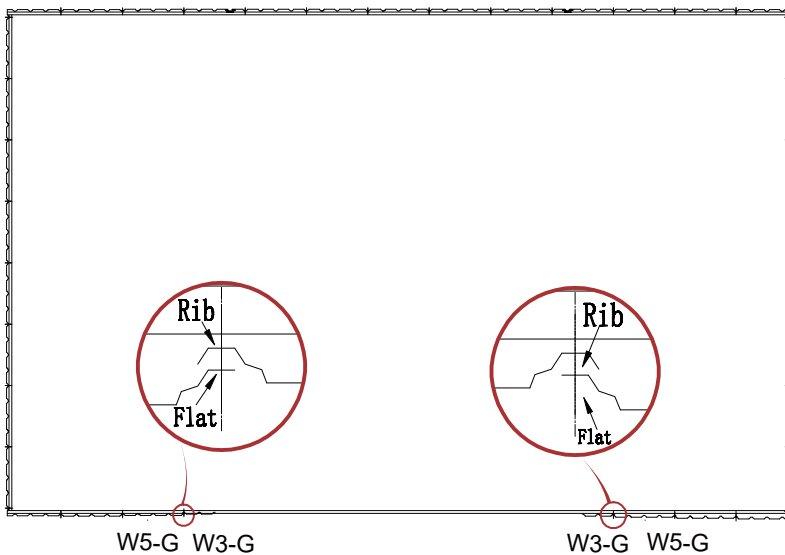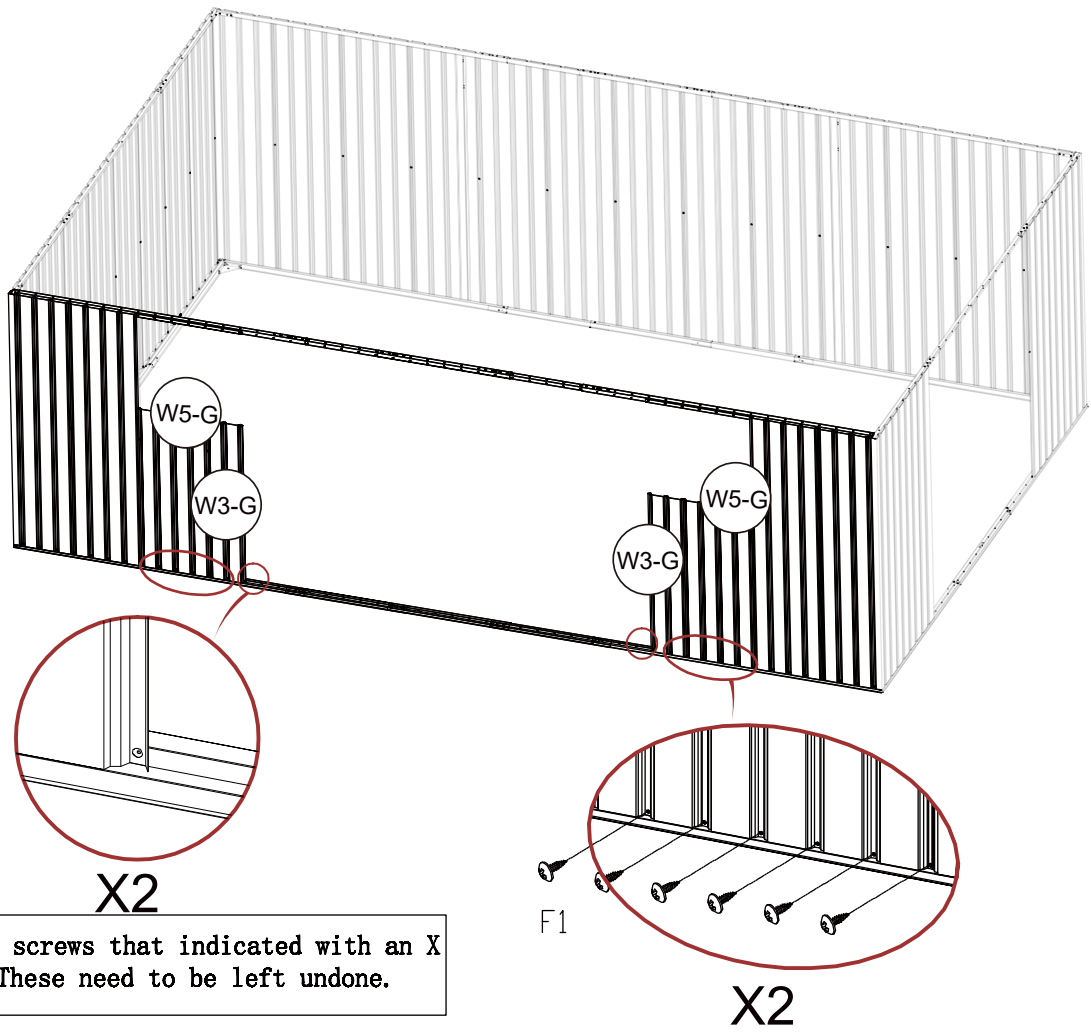



	F1	12
---	----	----

STEP 15

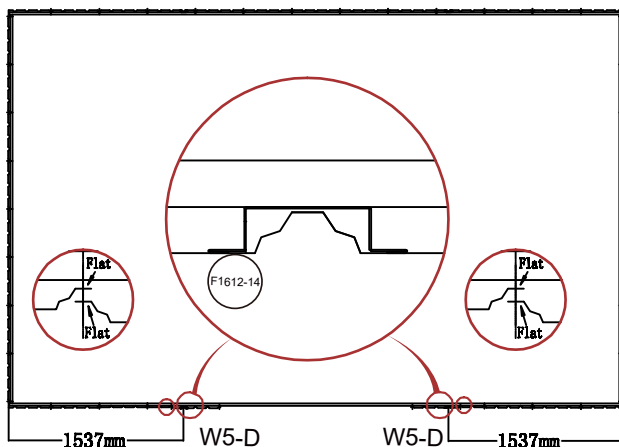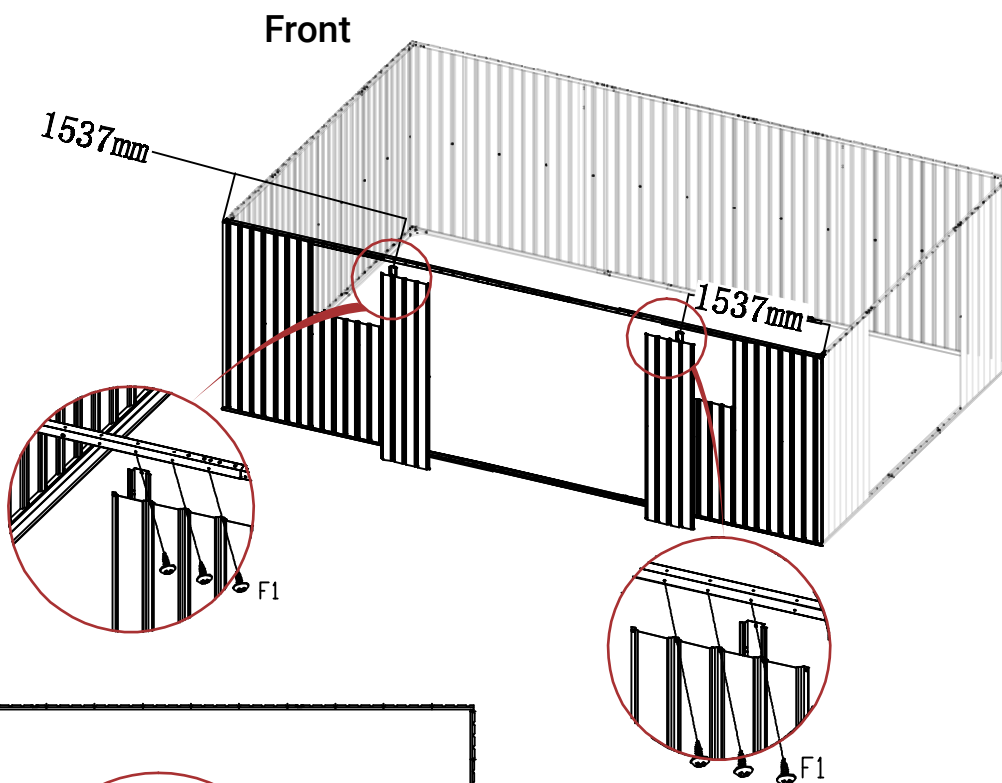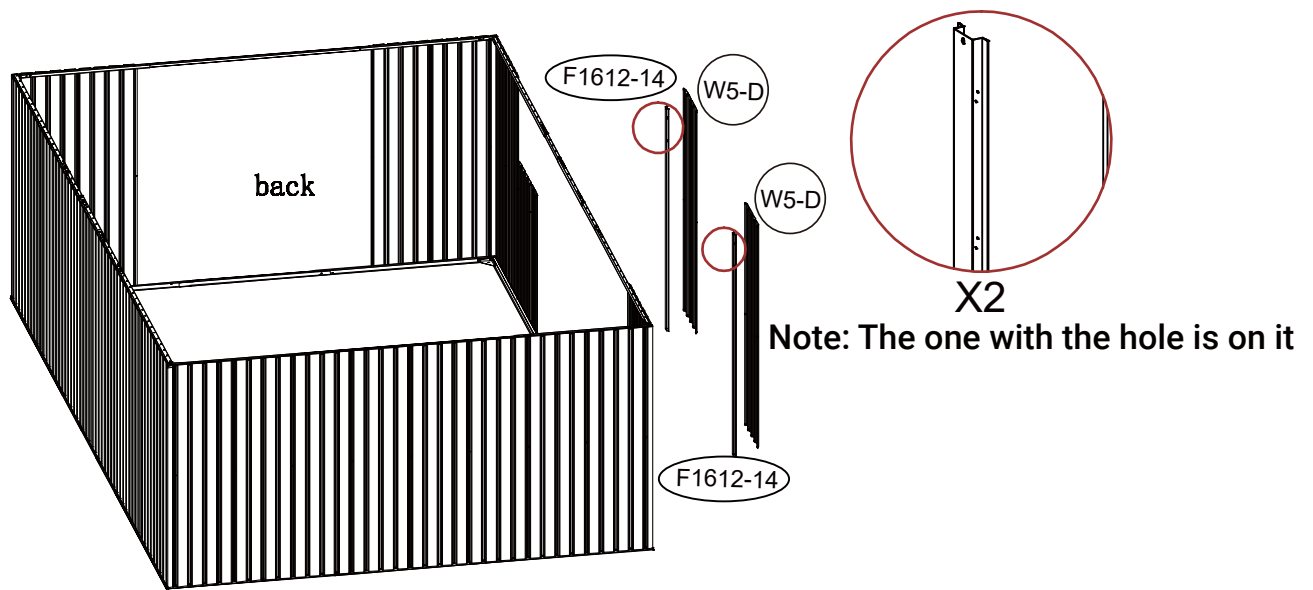


	F1	6
---	----	---

STEP 16

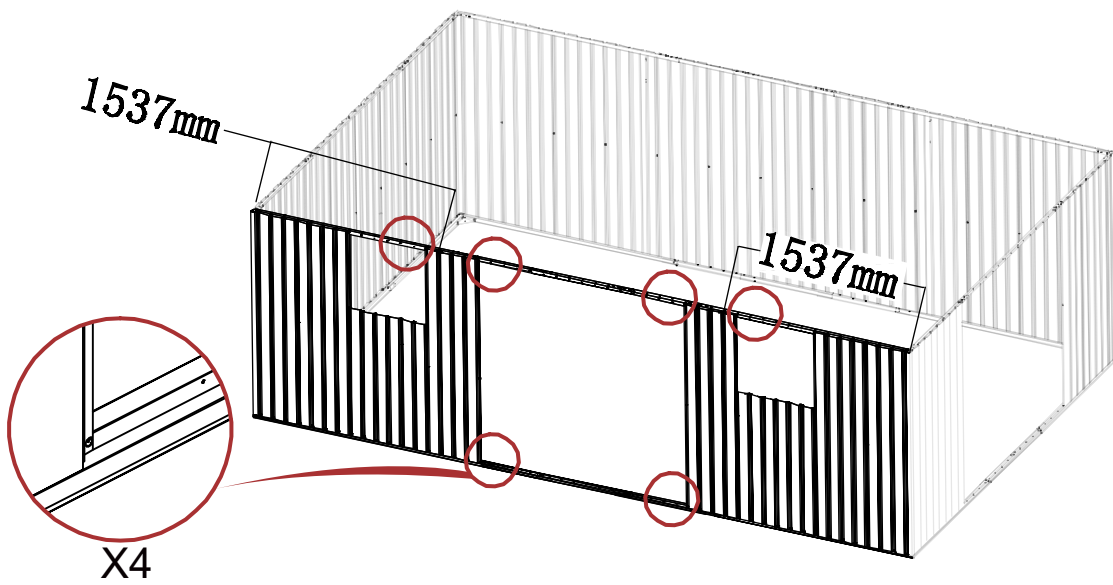
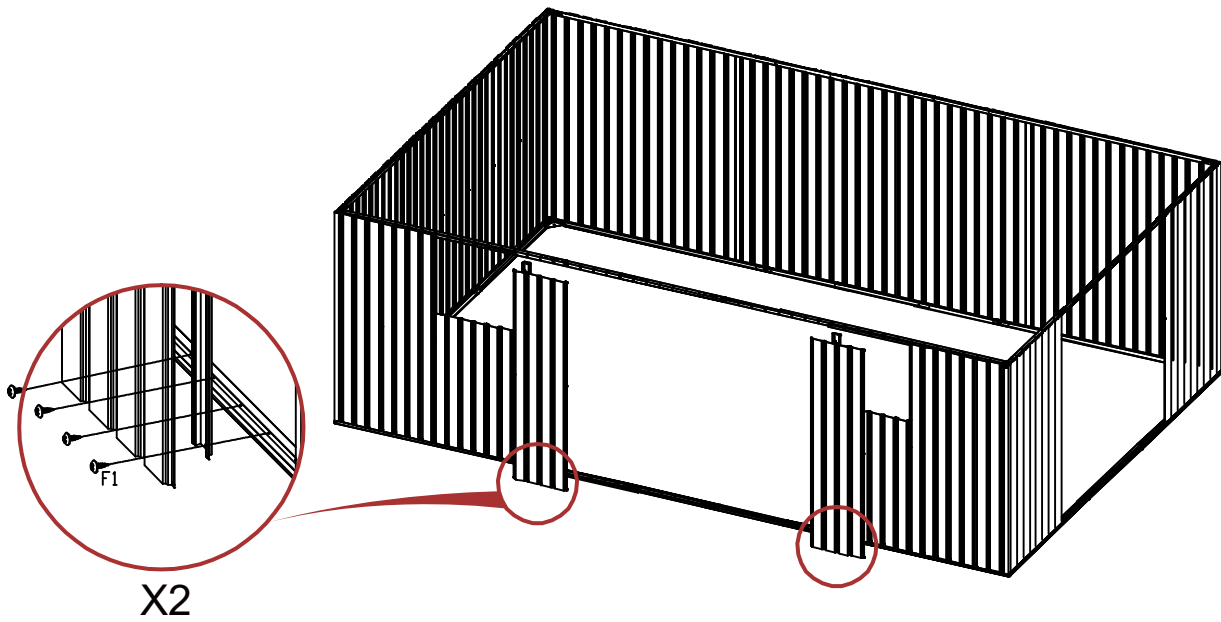


Do not add screws that indicated with an X in diagram These need to be left undone.

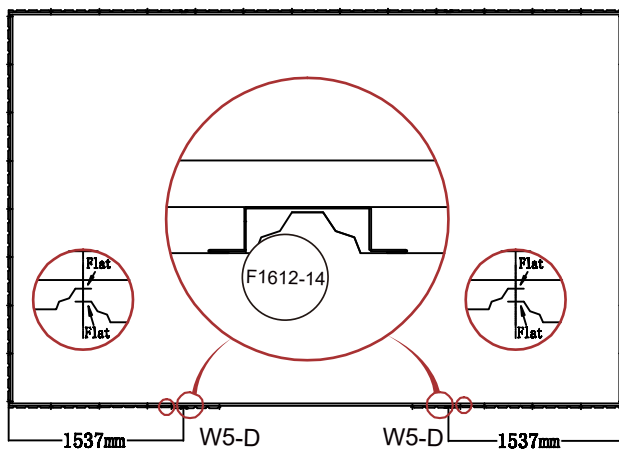



	F1	8
---	----	---

STEP 17

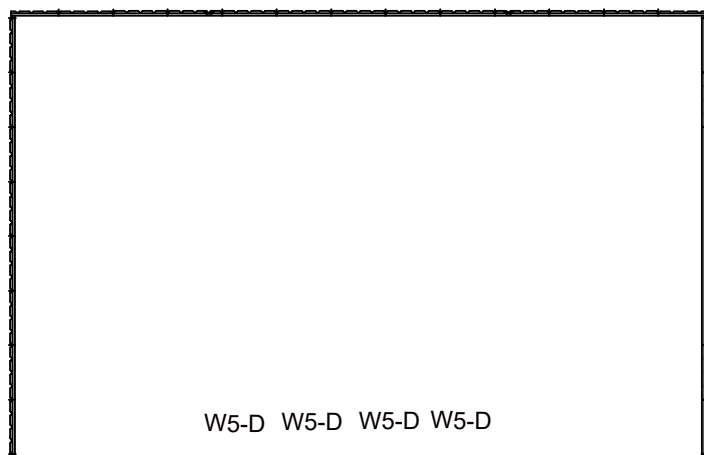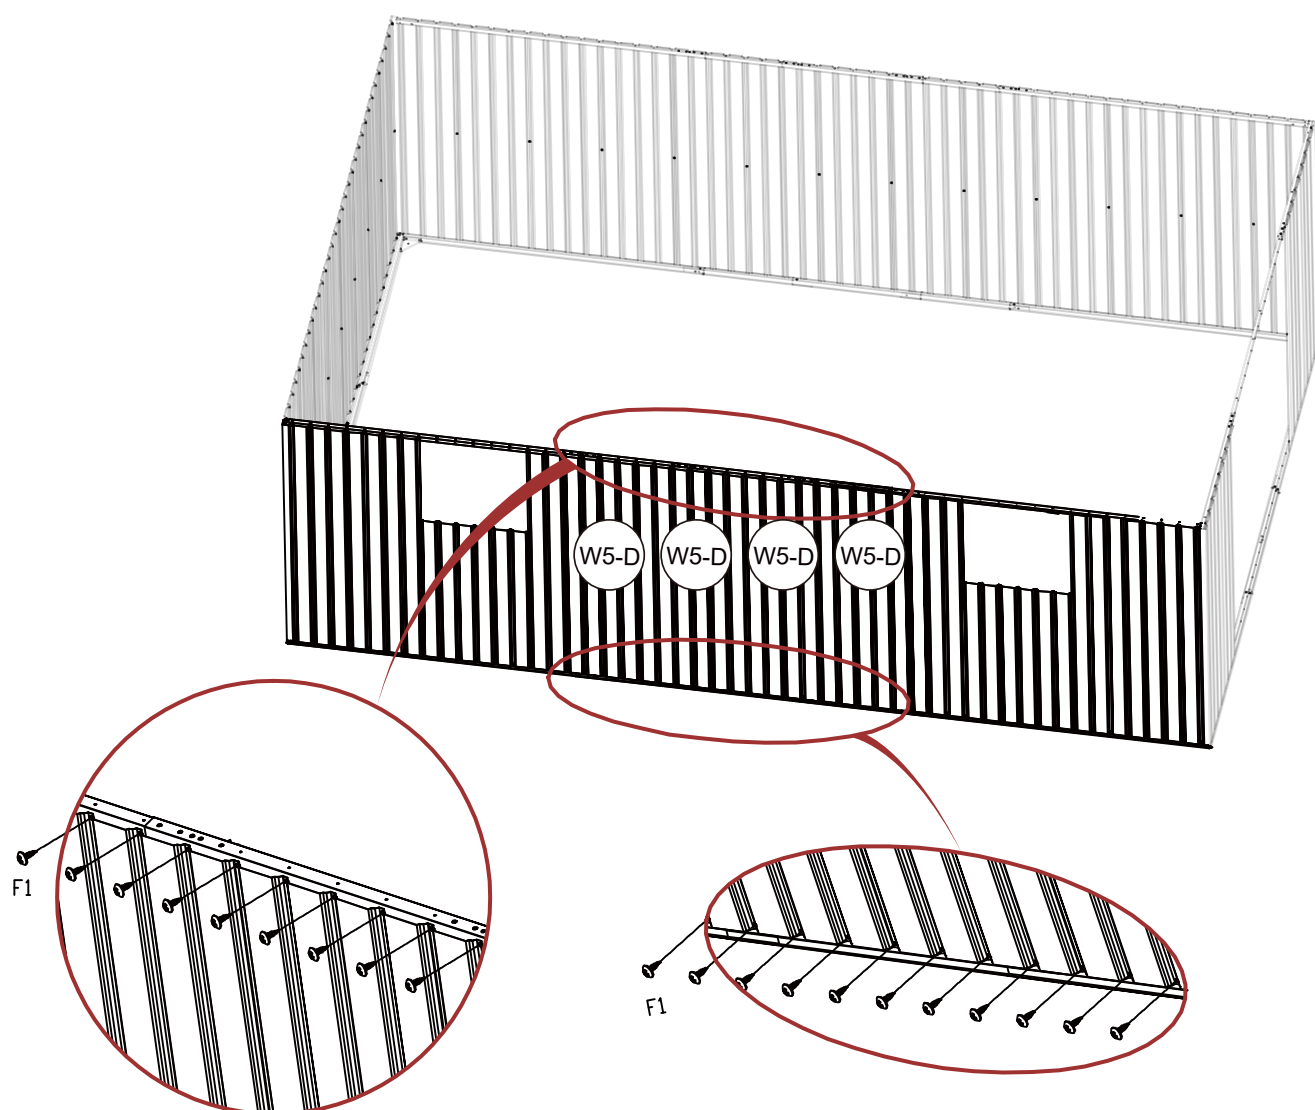

	F1	34
---	----	----


STEP 18

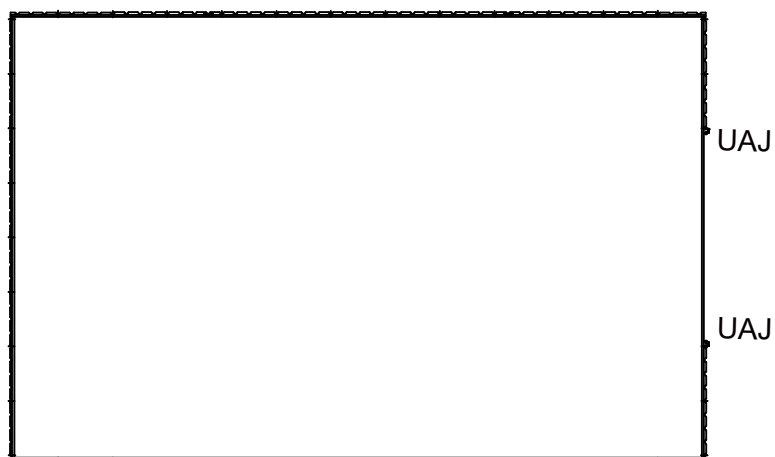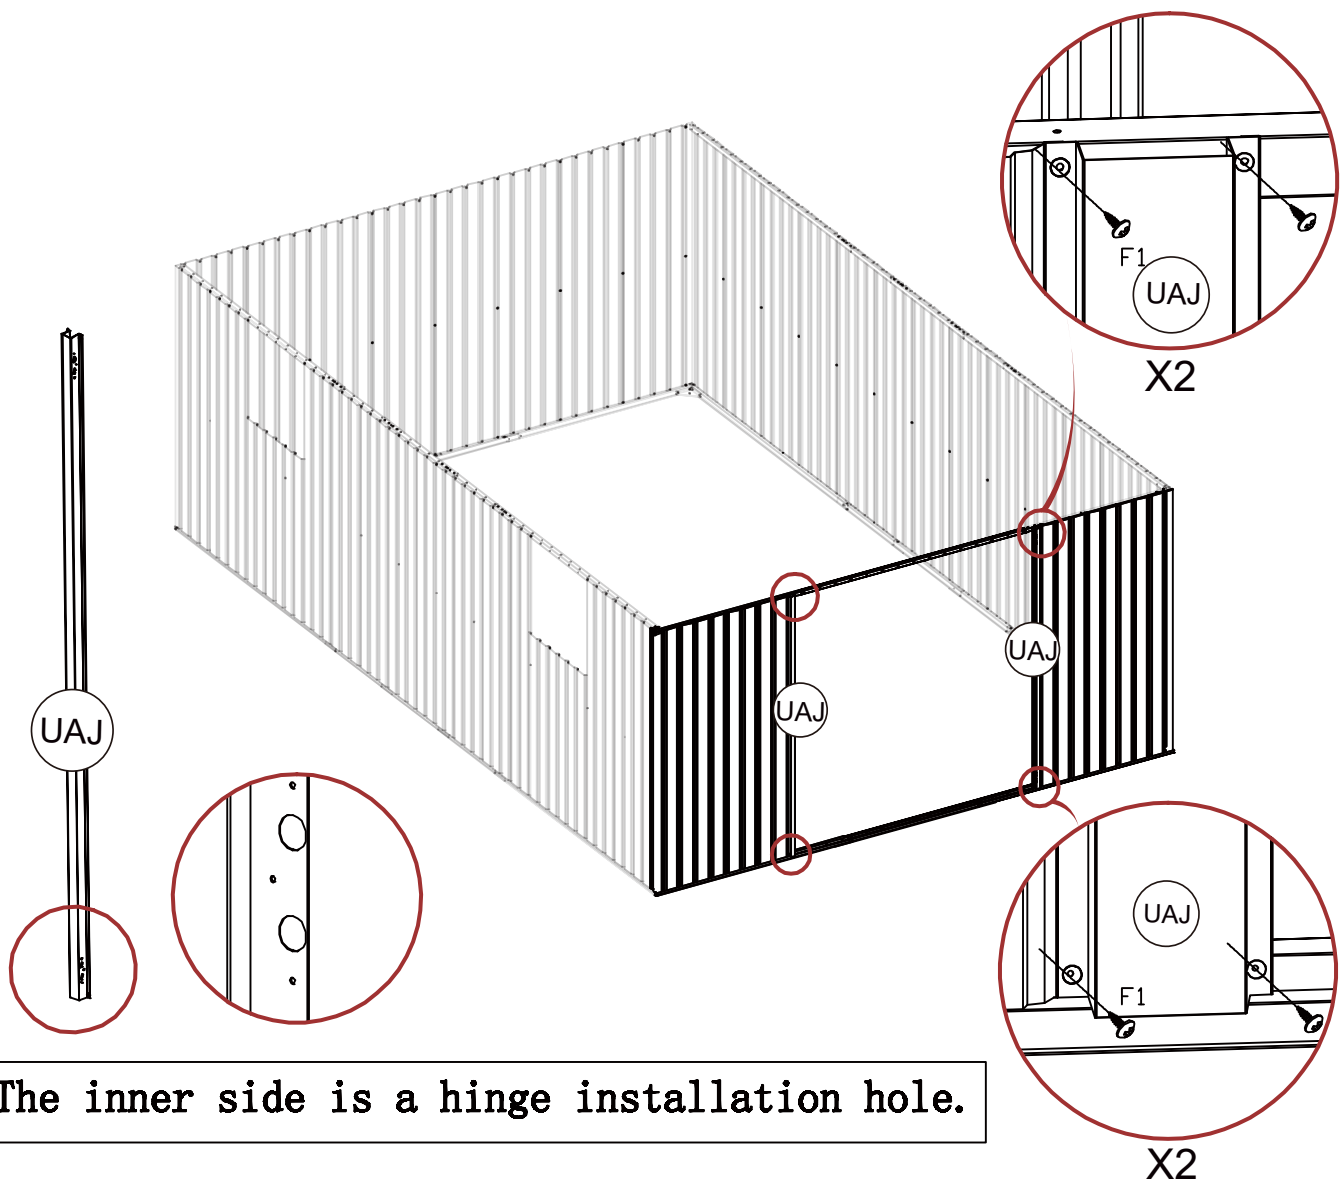

	F1	8
---	----	---

STEP 19

X2

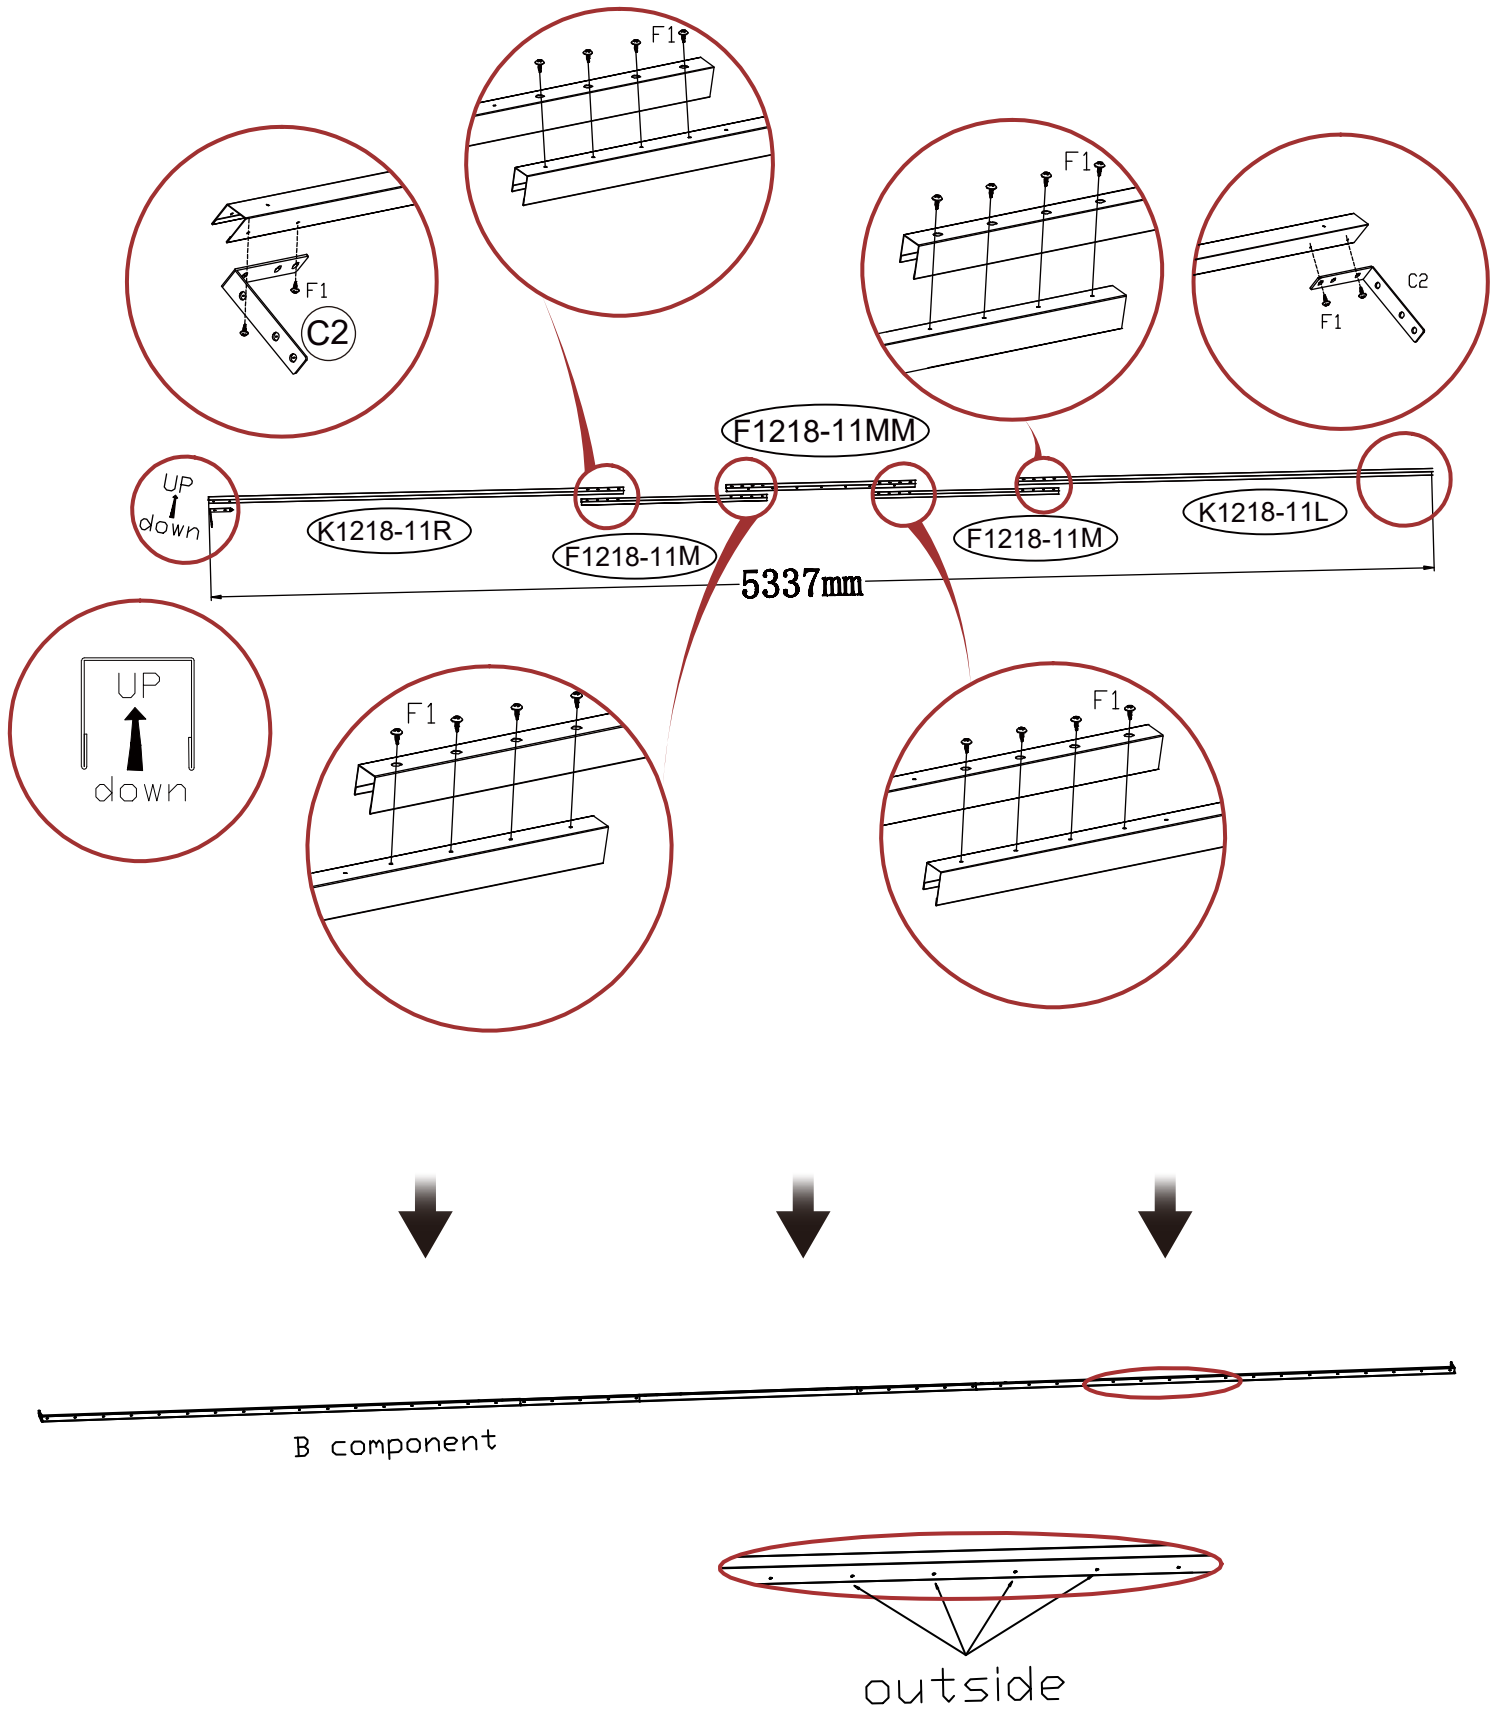


	F1	40
---	----	----

STEP 20

B component

back


Front

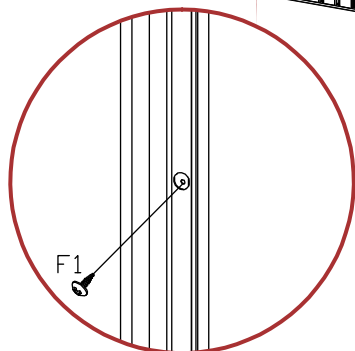


X12

	F1	12
---	----	----

STEP 21

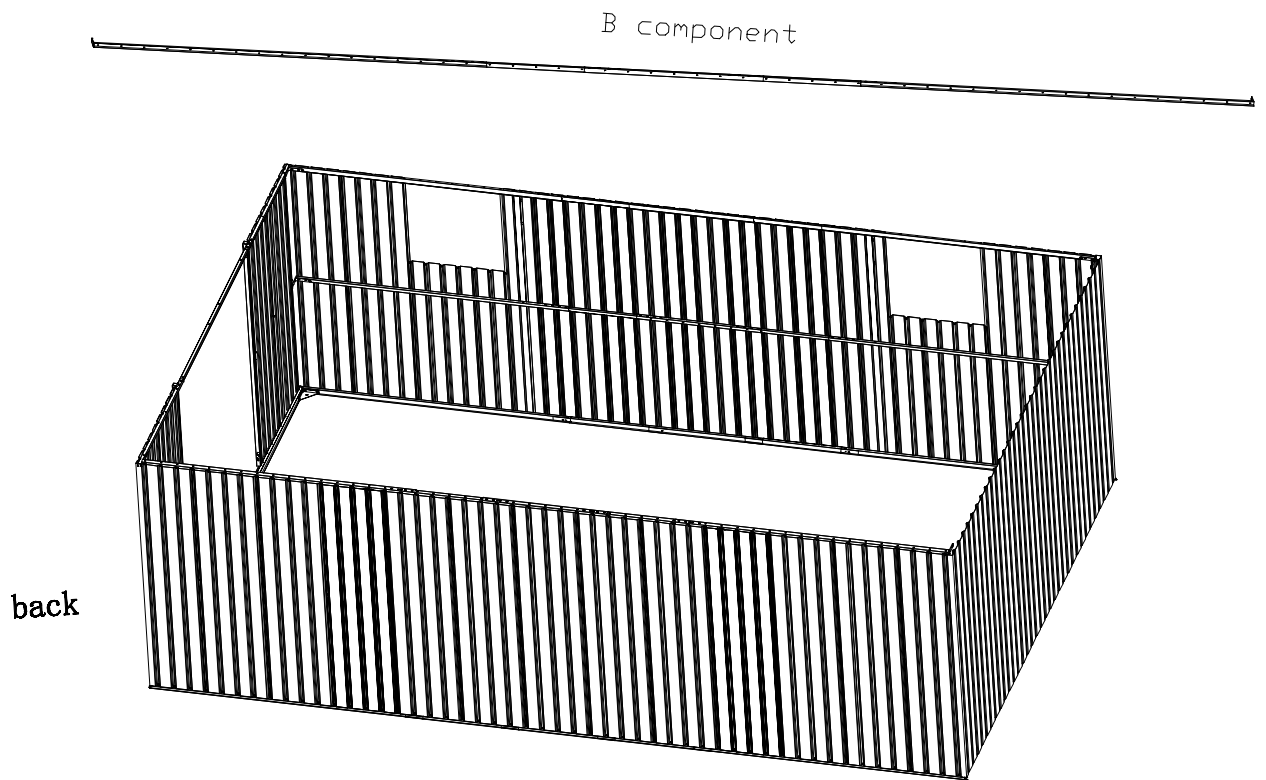

Front

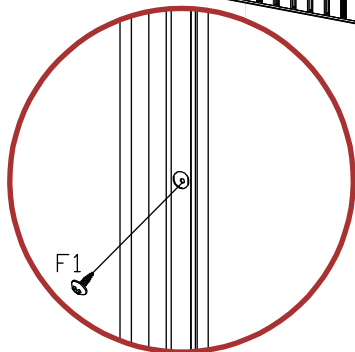

X13



	F1	13
---	----	----

STEP 22

component

F1218-3L/3M/3R


back

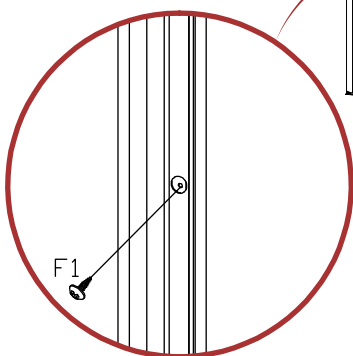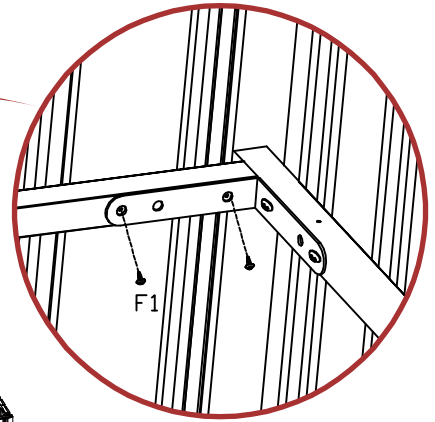





X9

	F1	13
--	----	----

STEP 23

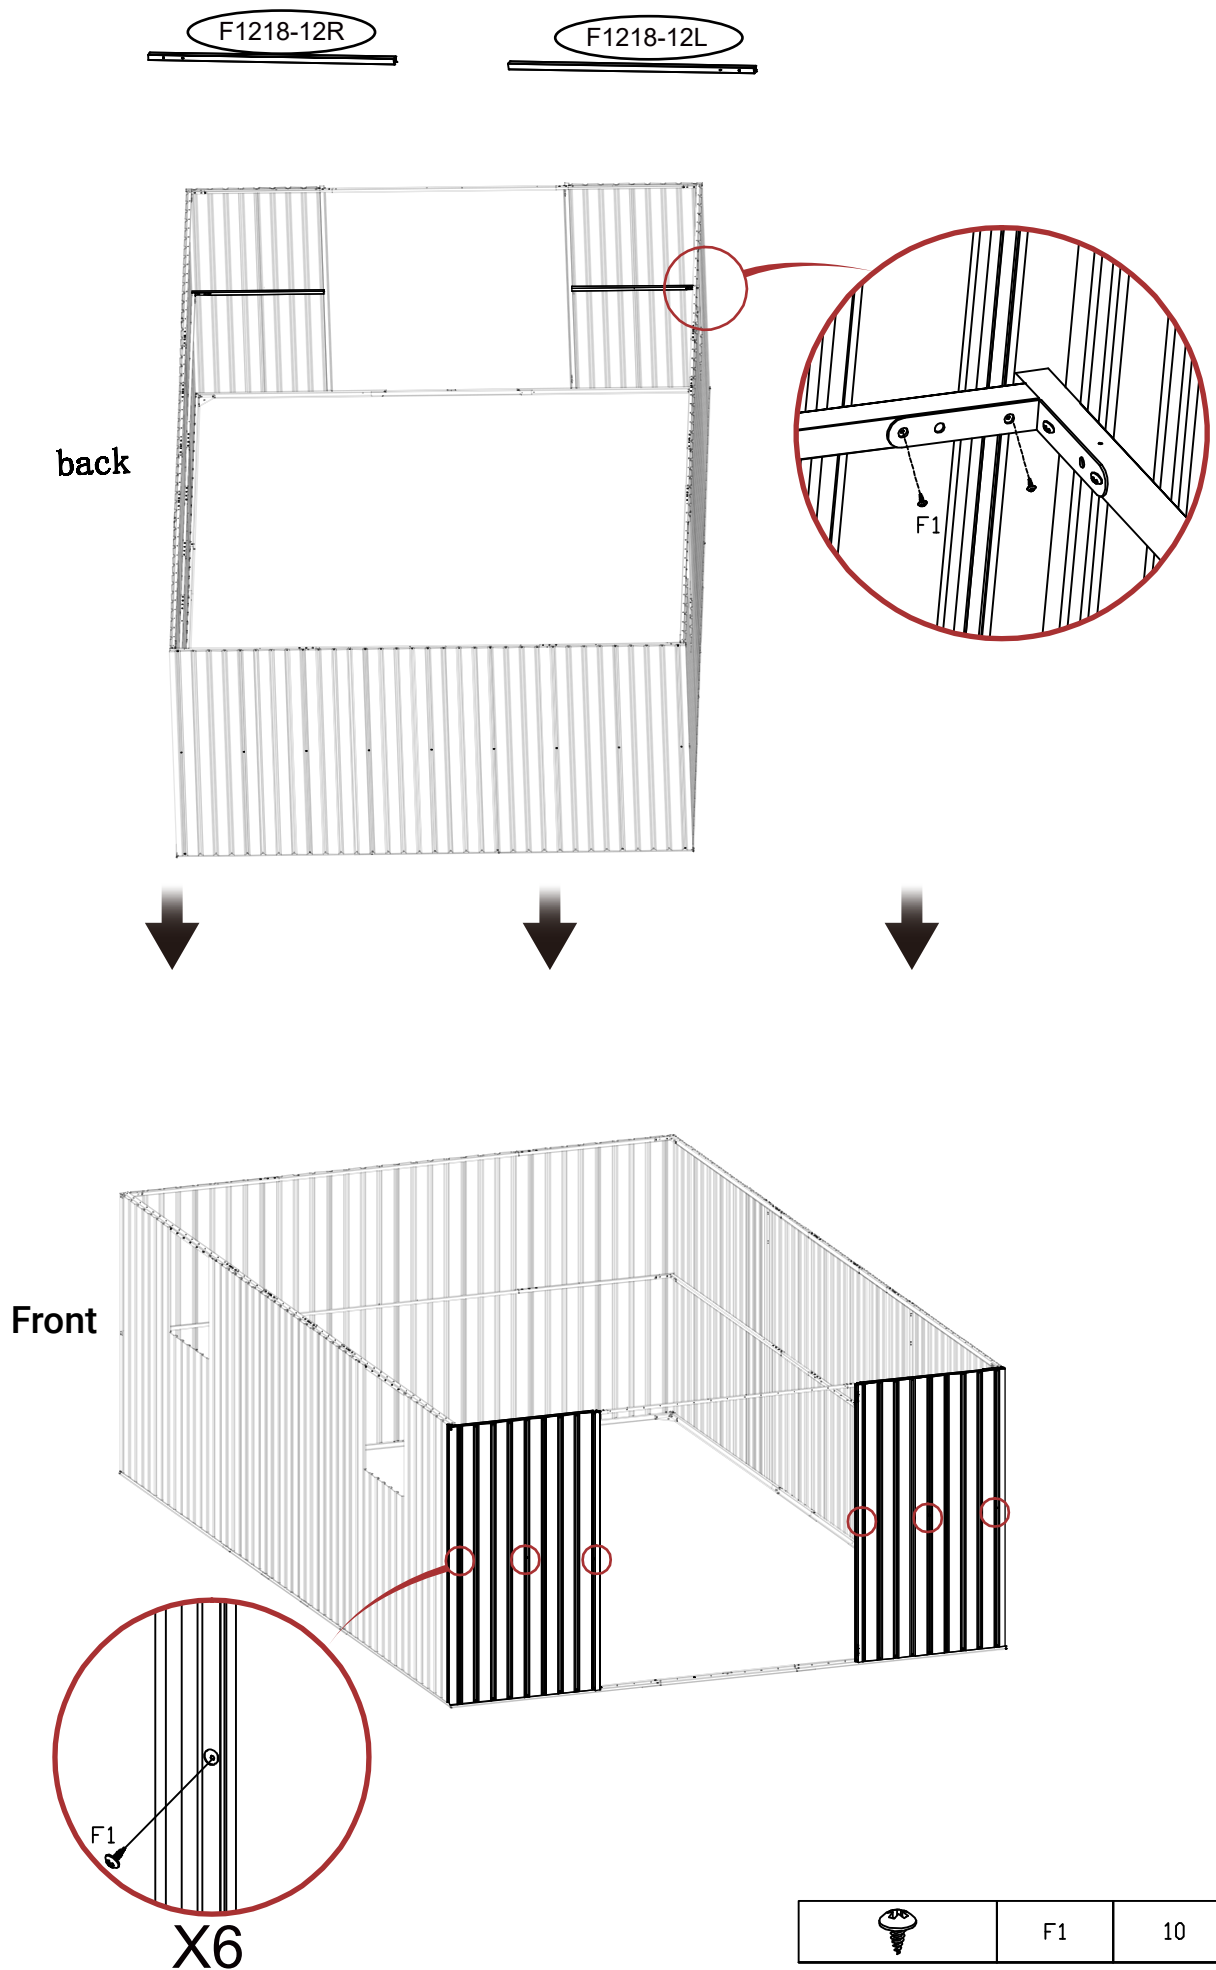

STEP 24

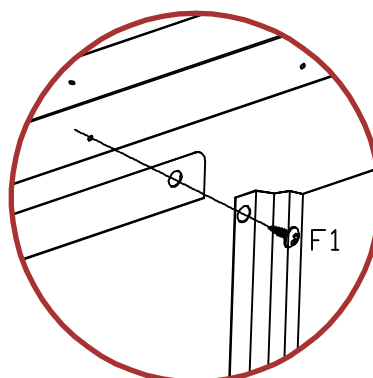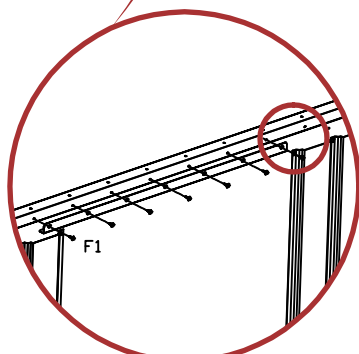
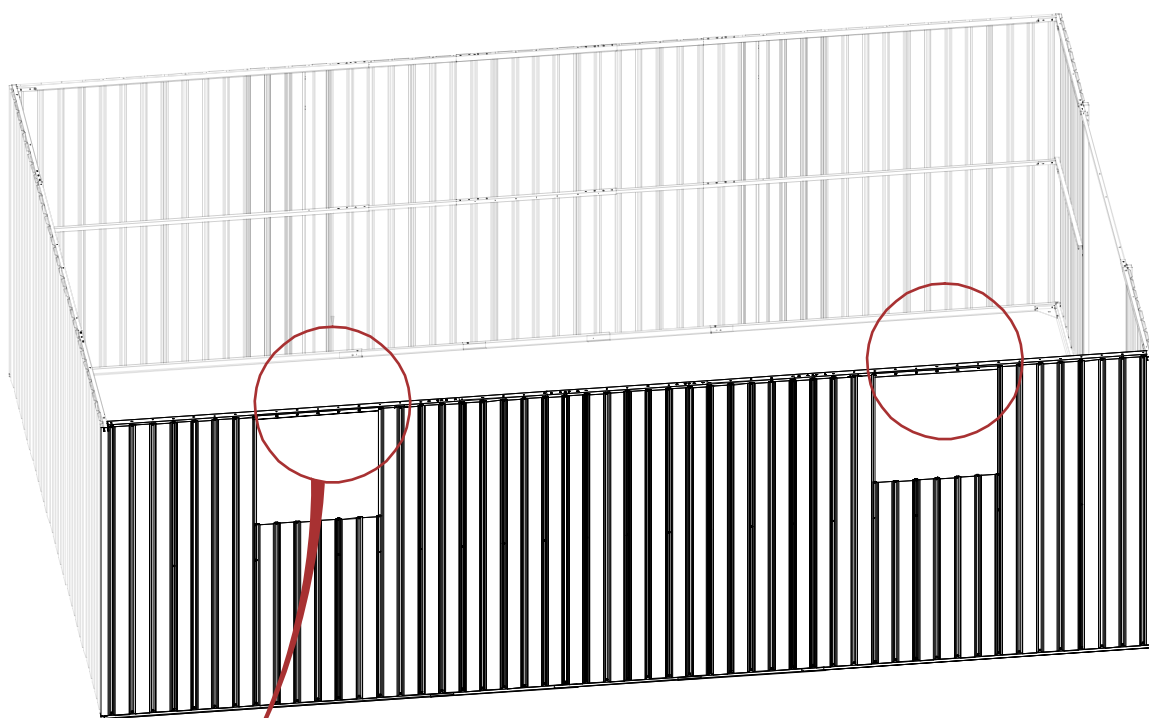
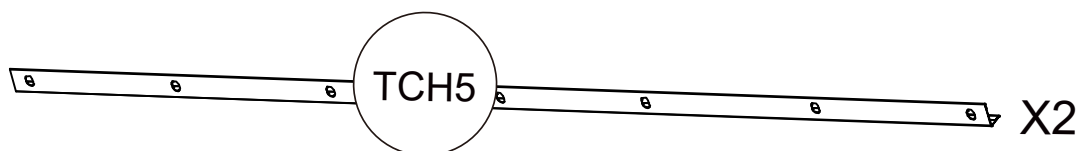


X2

X2



	F1	14
---	----	----

STEP 25

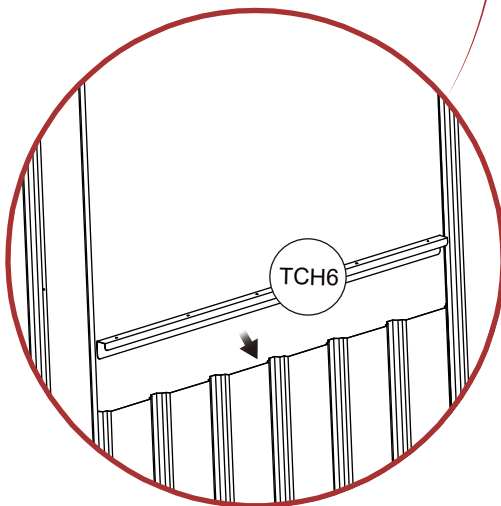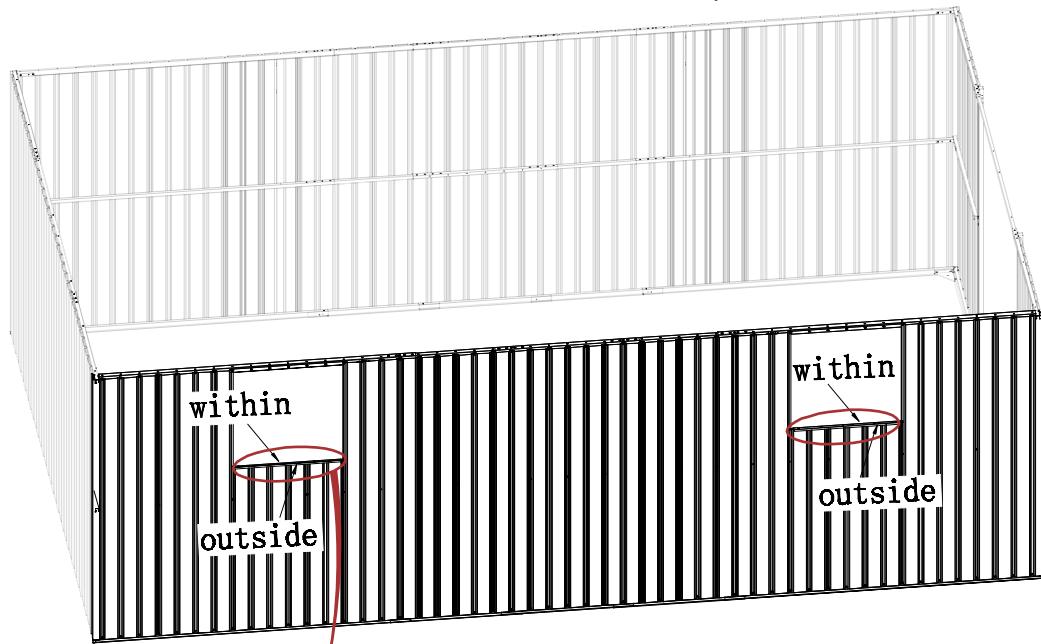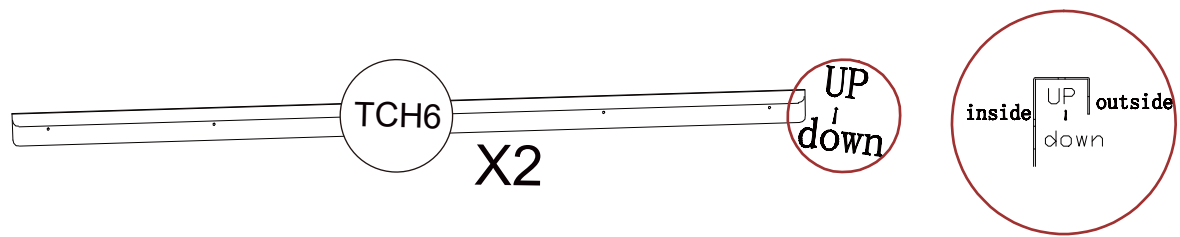


X2

Installation method: Clip the TCH6 slot onto W5-G and W3-G, with the long side facing inward, without the need for screws to secure.

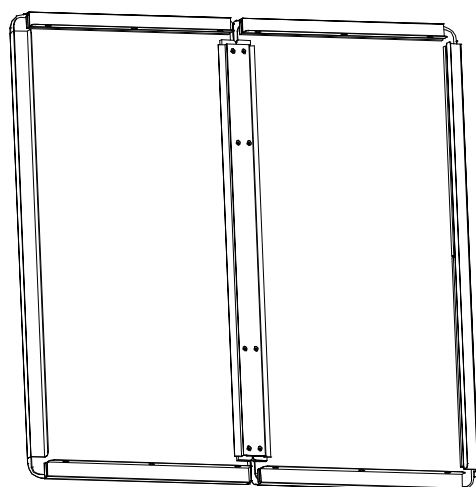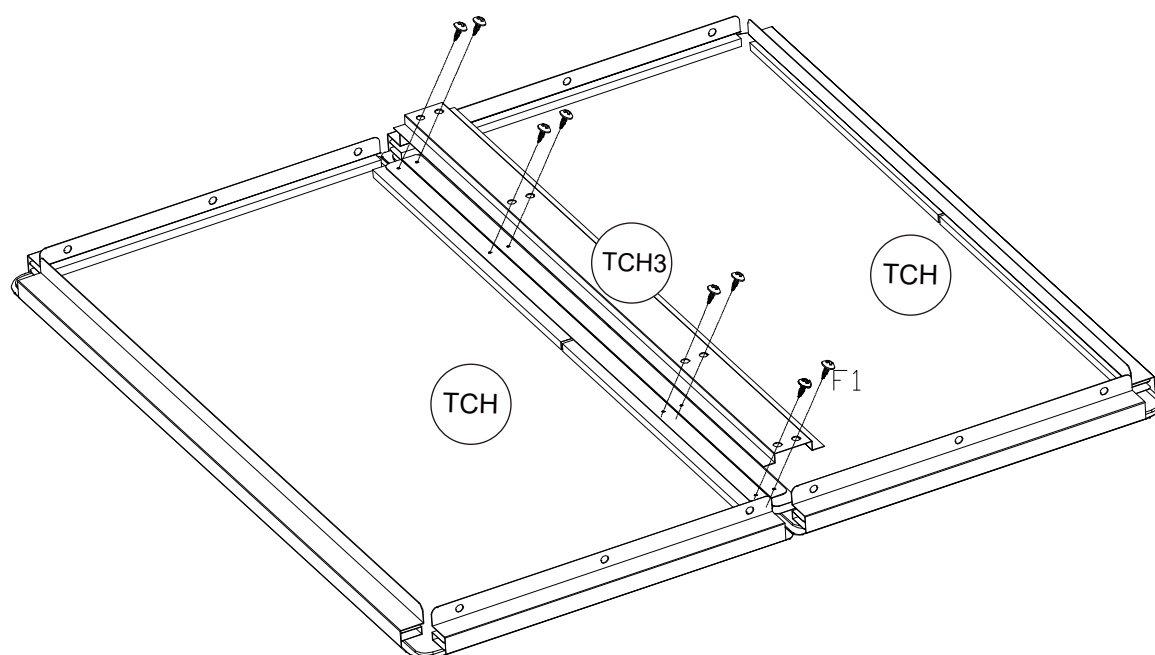




back

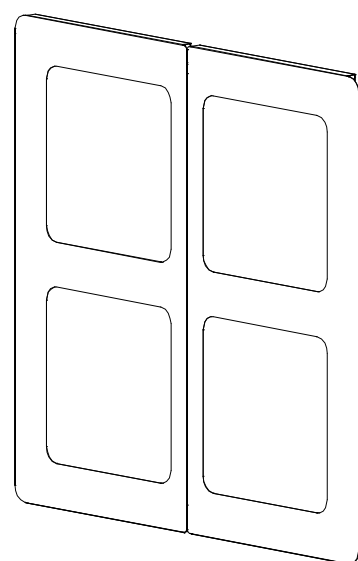

Front




	F1	16
---	----	----

STEP 27

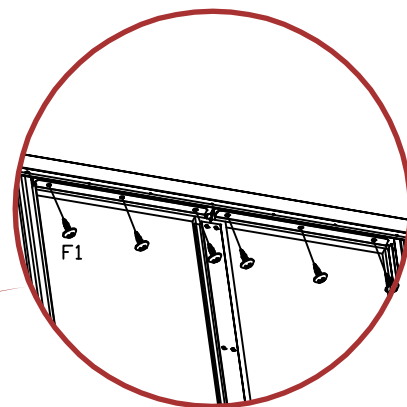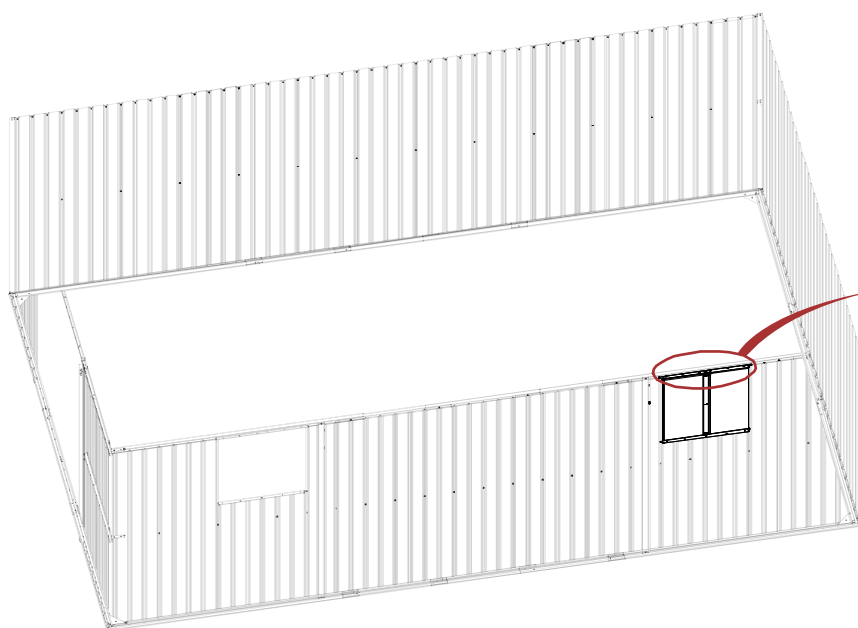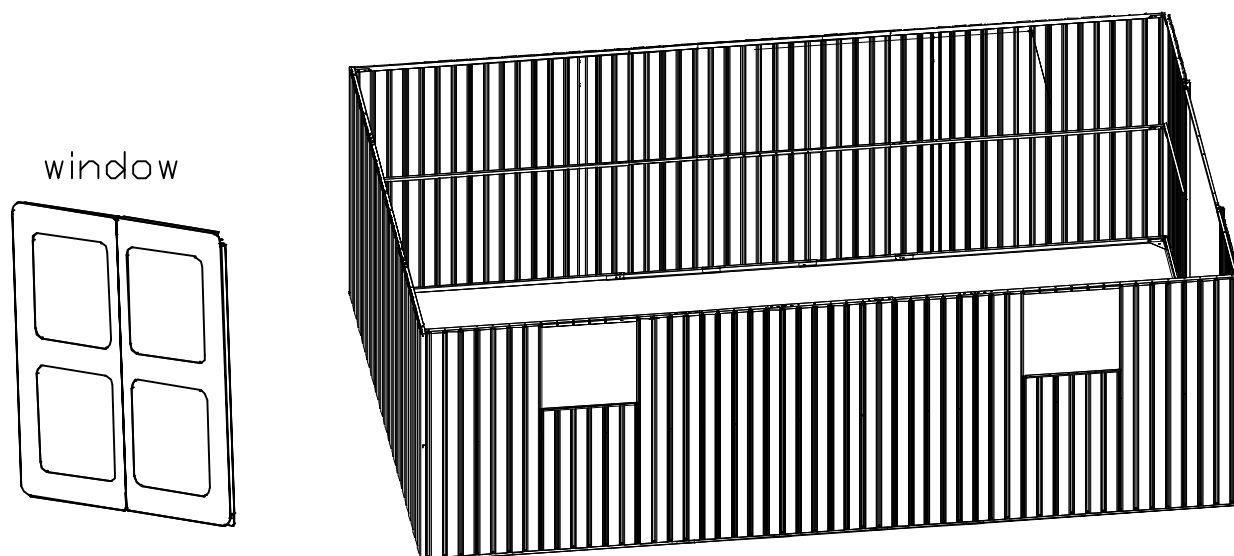





	F1	6
---	----	---

STEP 28

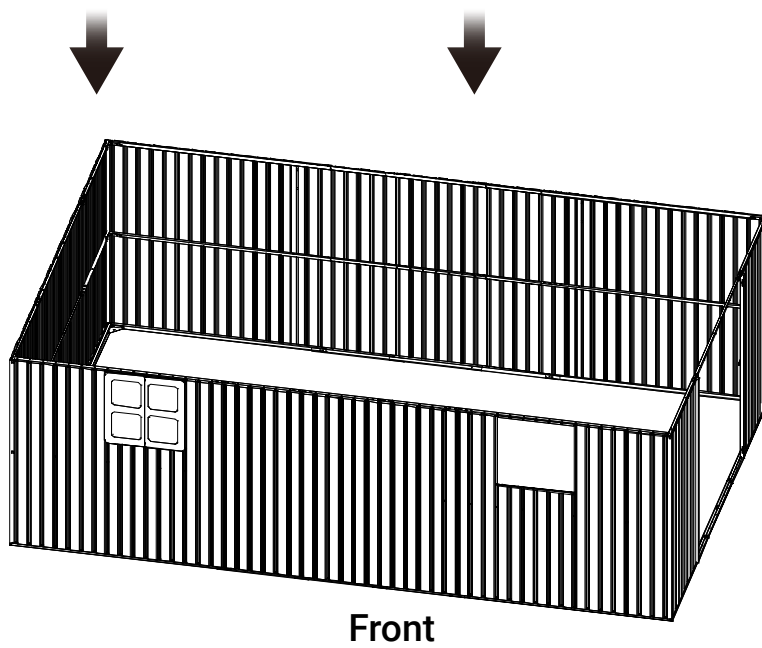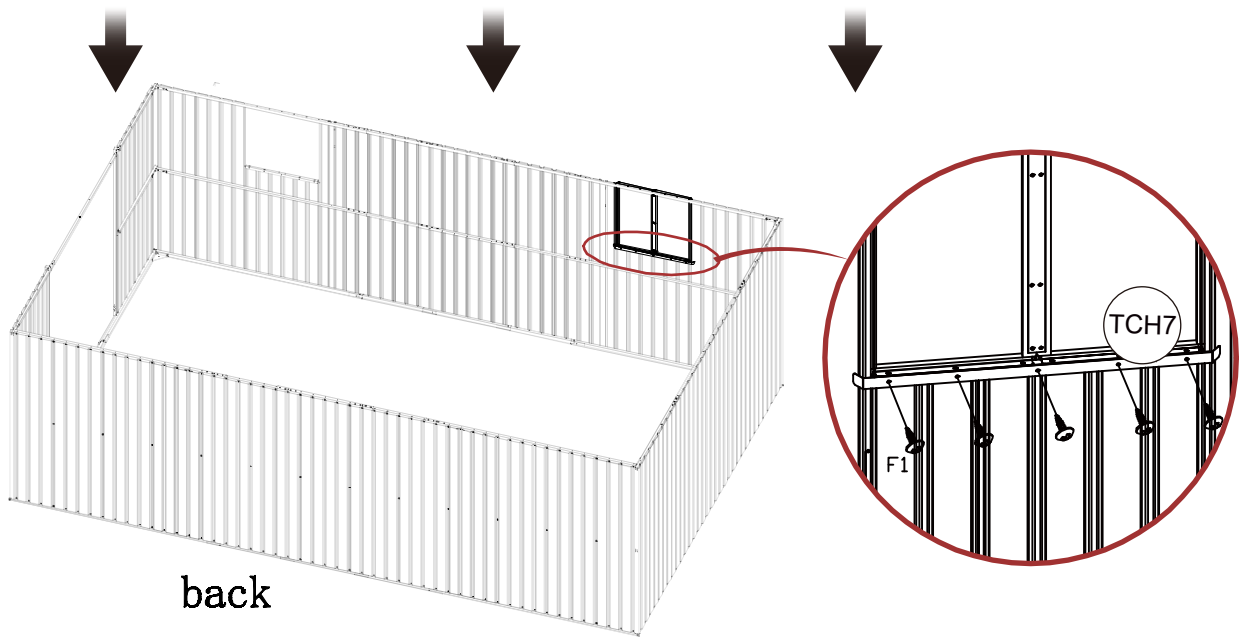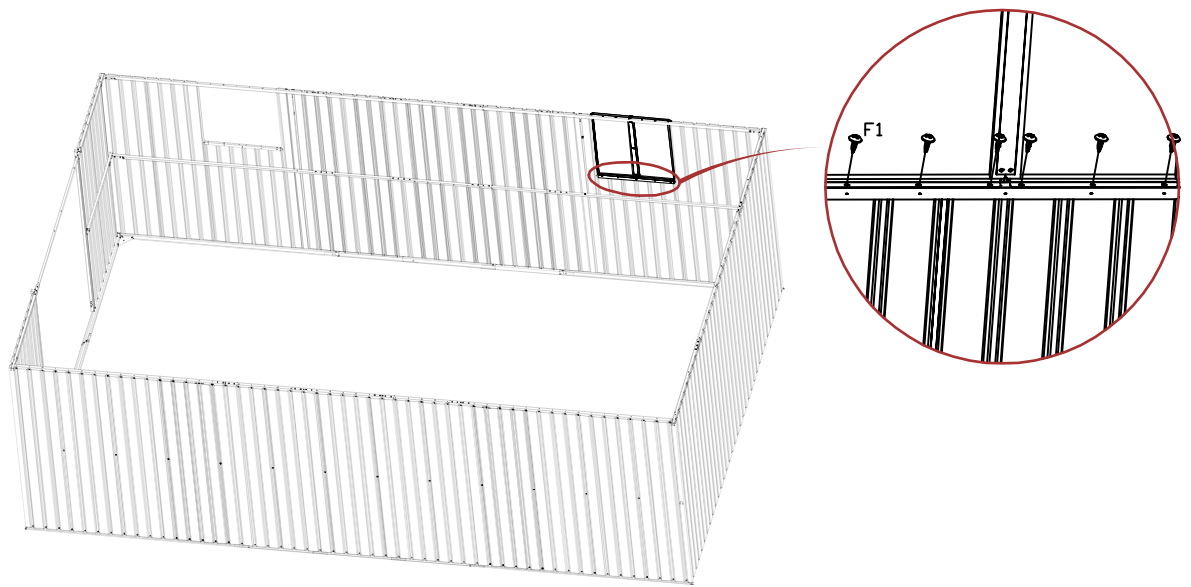





	F1	11
---	----	----

STEP 29

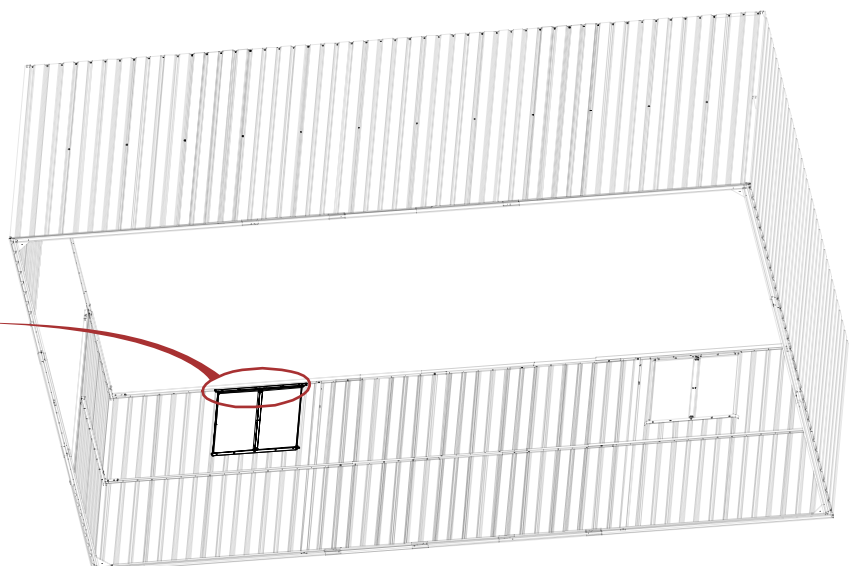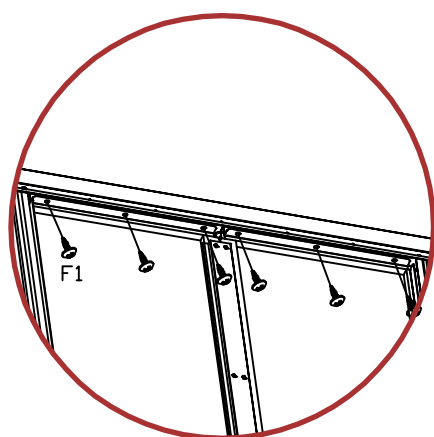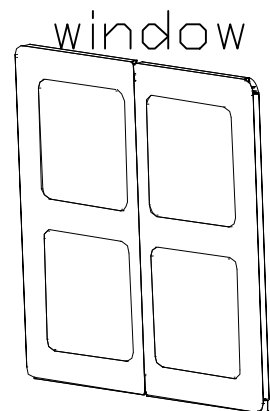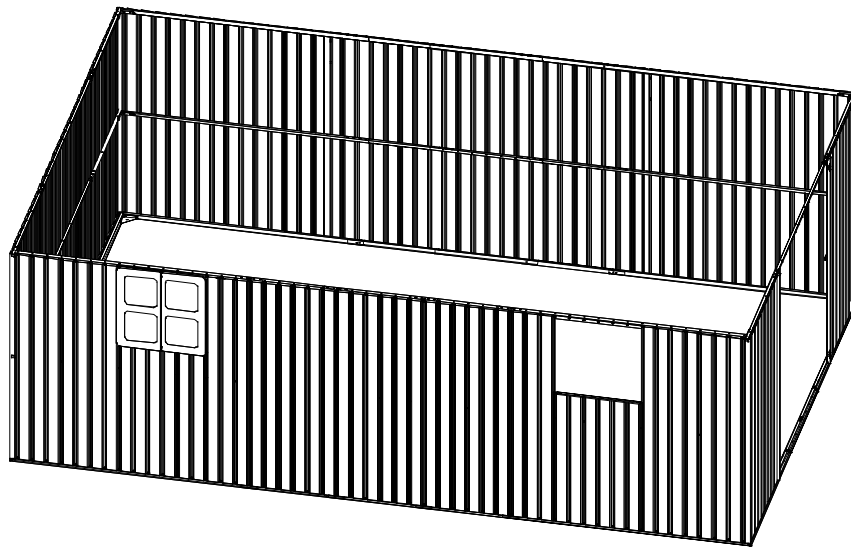


	F1	6
---	----	---

STEP 30

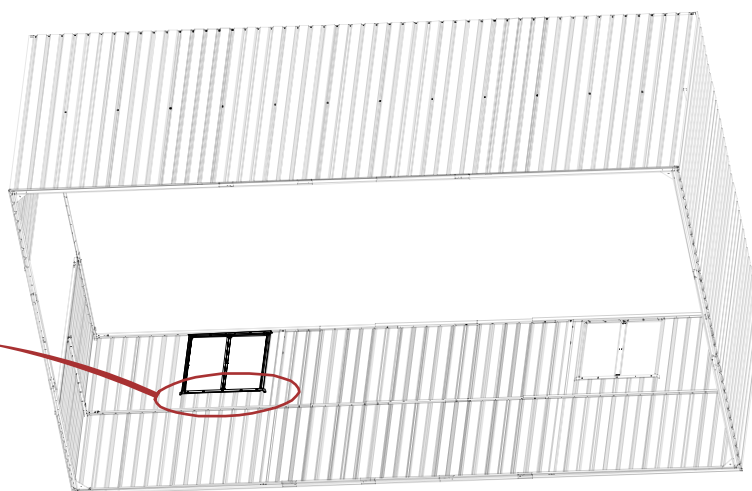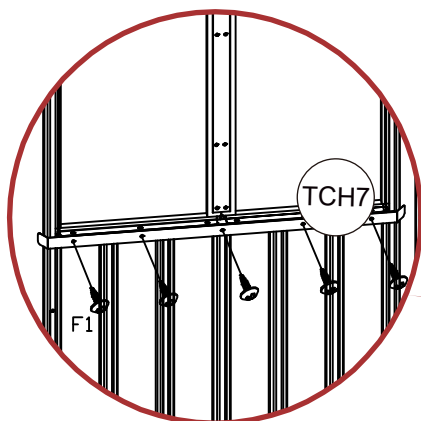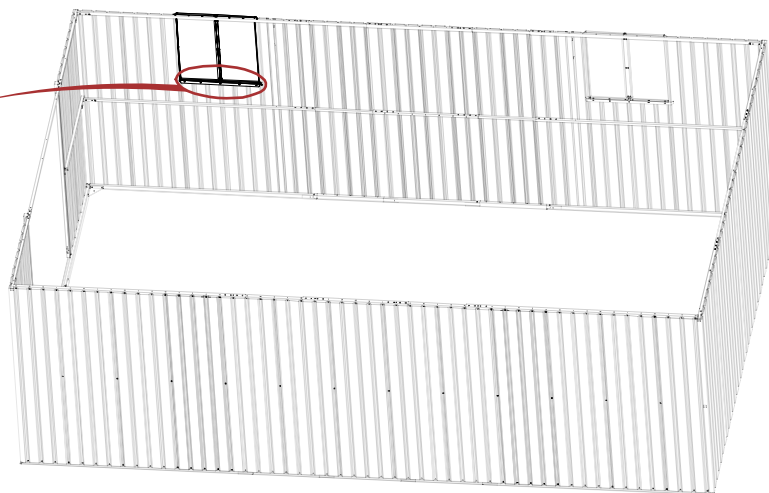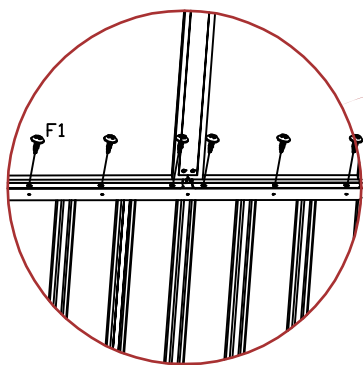

back



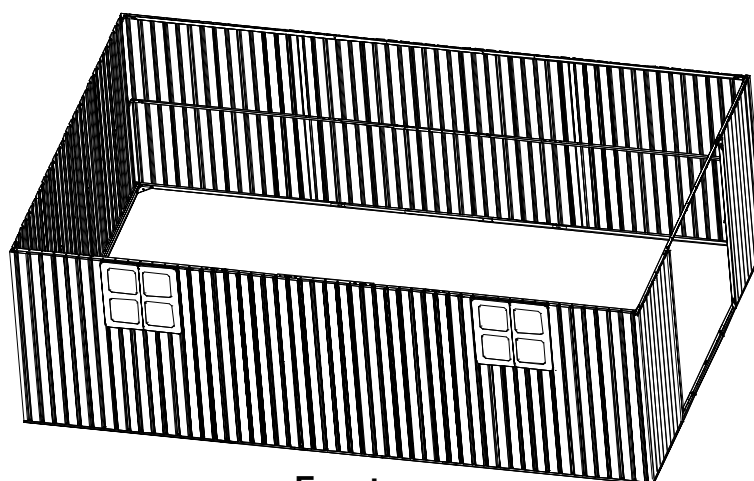


Front

	F1	11
---	----	----

STEP 31





Attention: Assemble the ventilation board screws in the order shown in the diagram, Install the middle hole first to avoid misalignment.

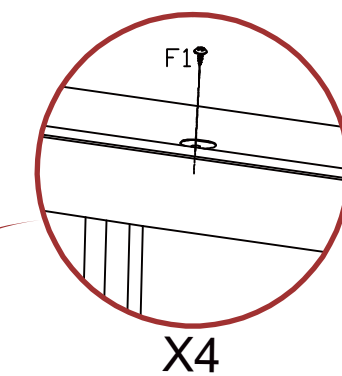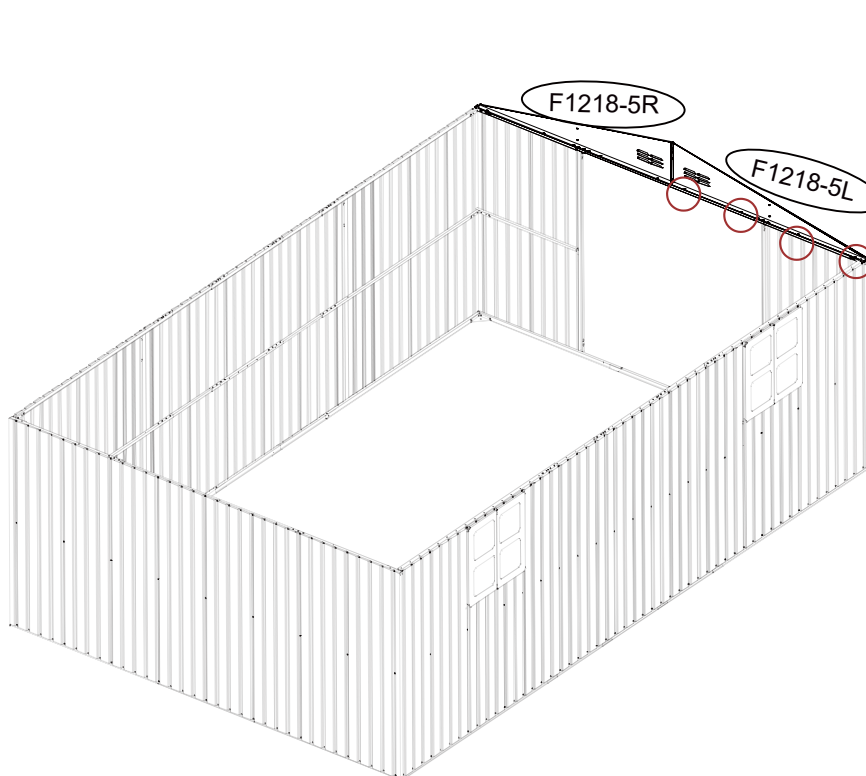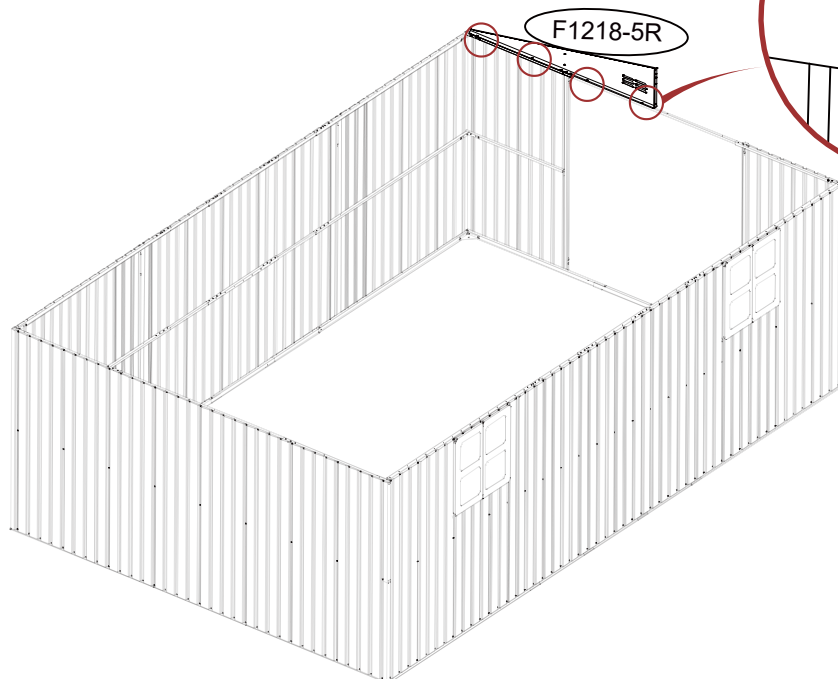

	F1	8
---	----	---


STEP 32

Attention: Assemble the ventilation board screws in the order shown in the diagram, Install the middle hole first to avoid misalignment.

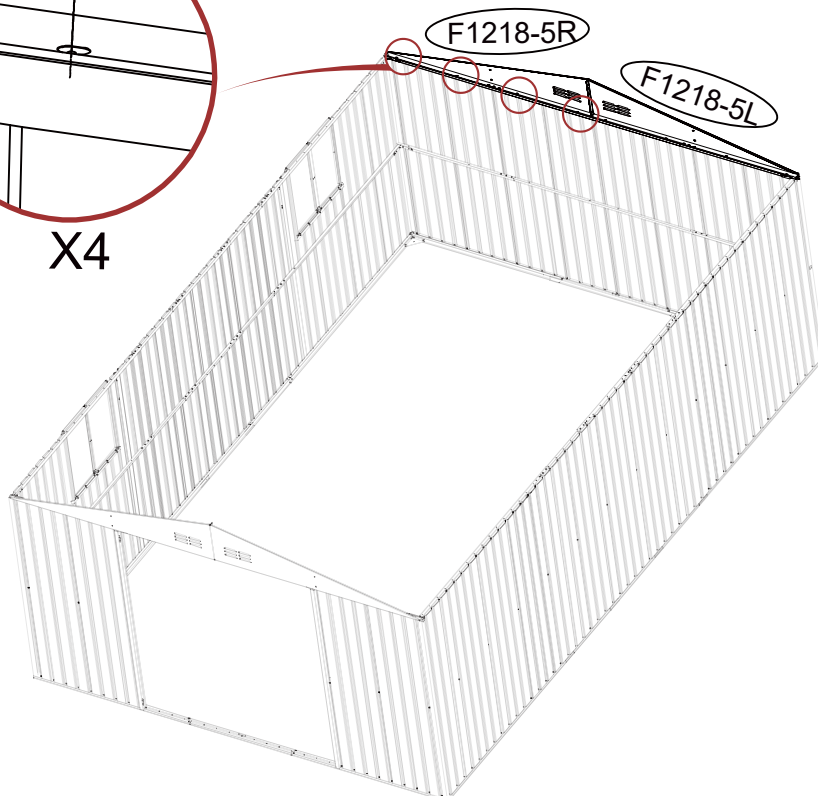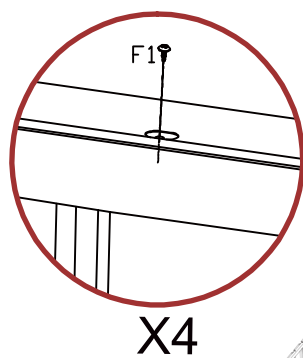
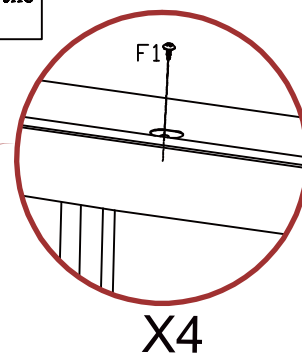
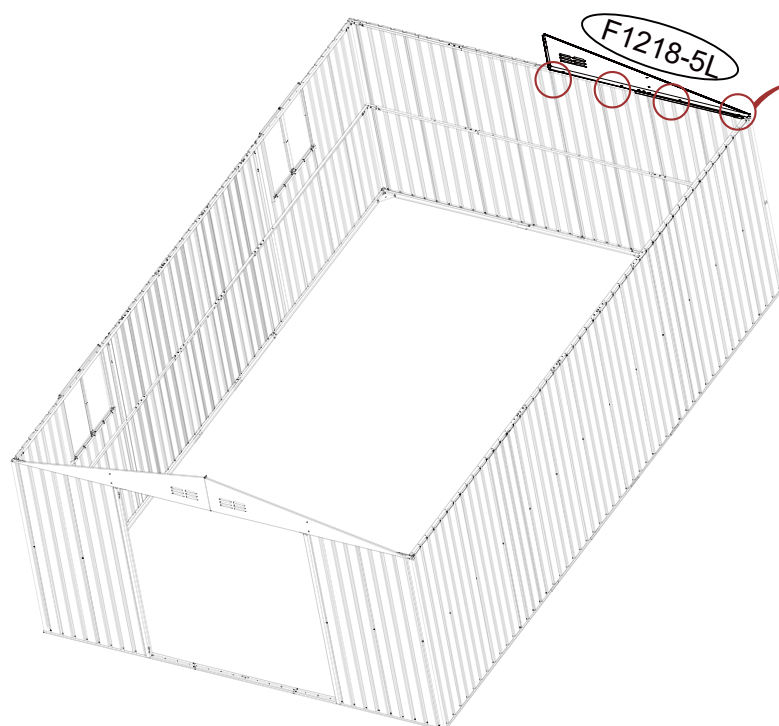


	F1	8
---	----	---

STEP 33

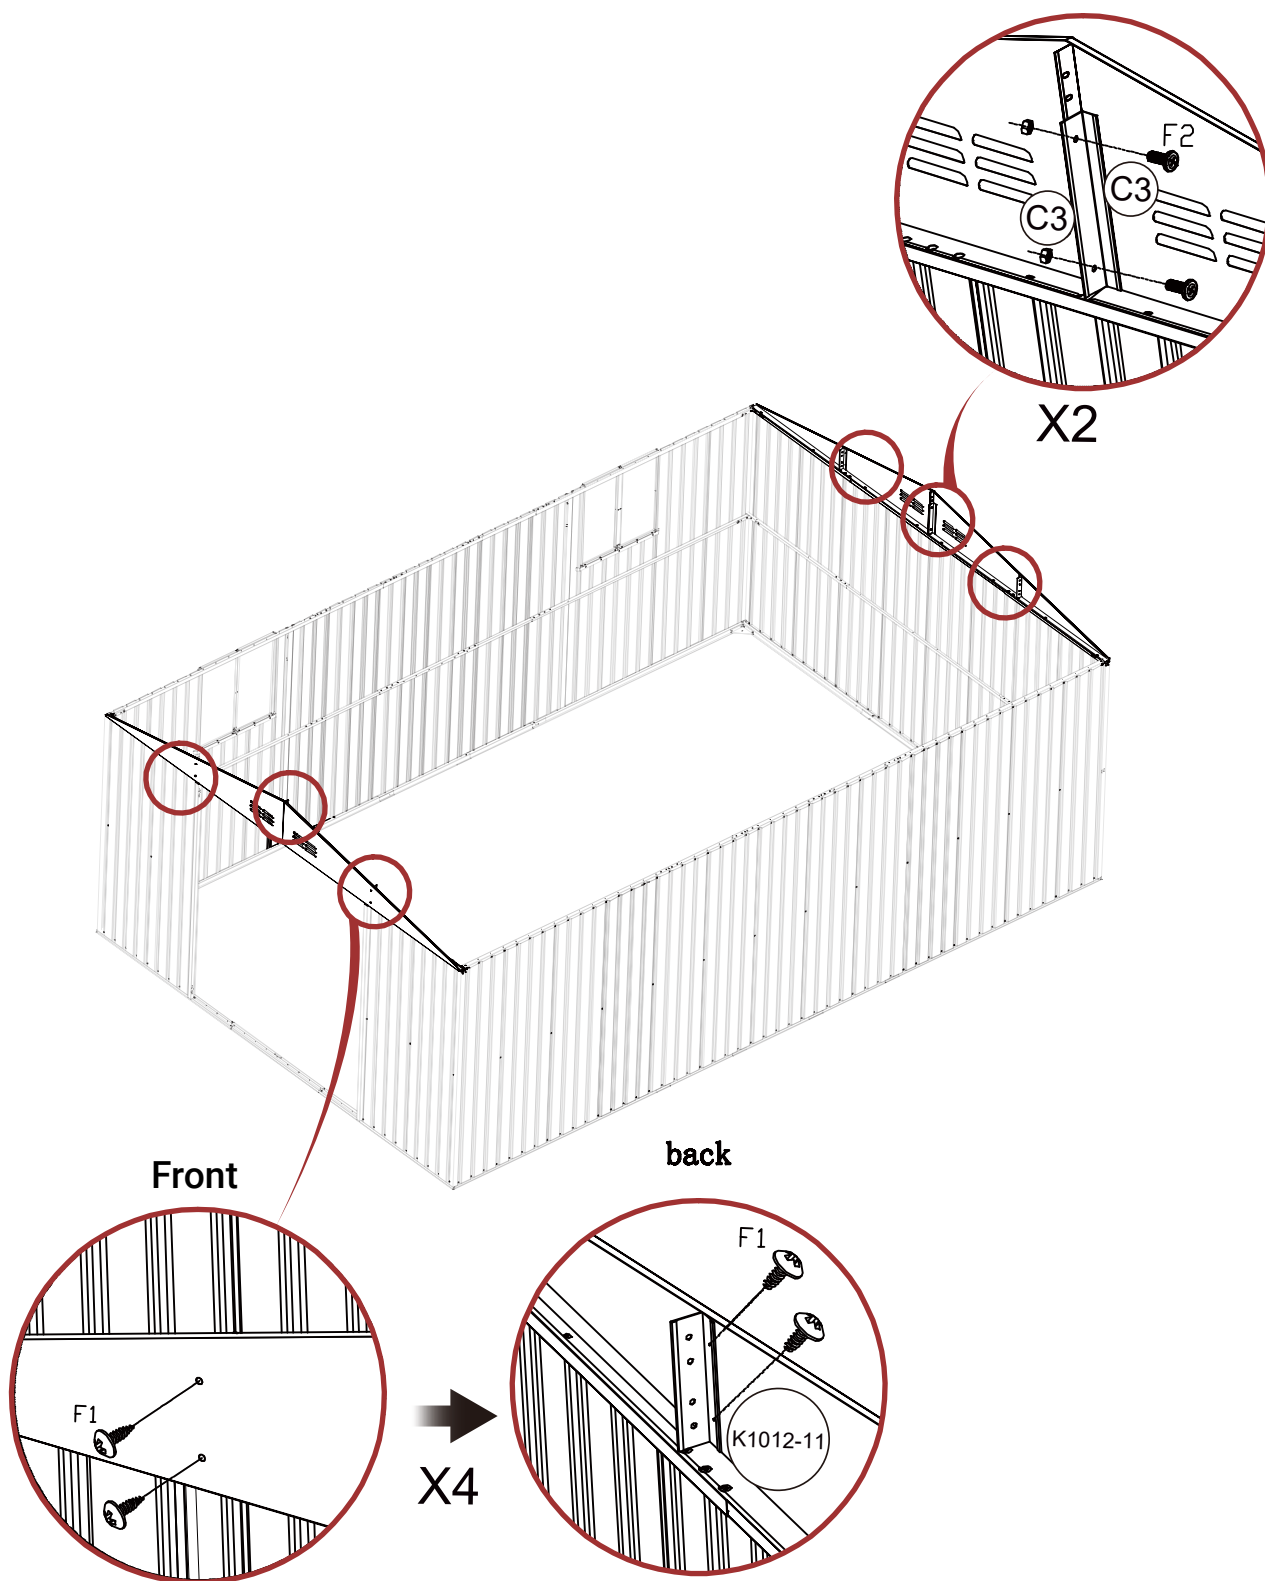


	F1	8
	F2	4

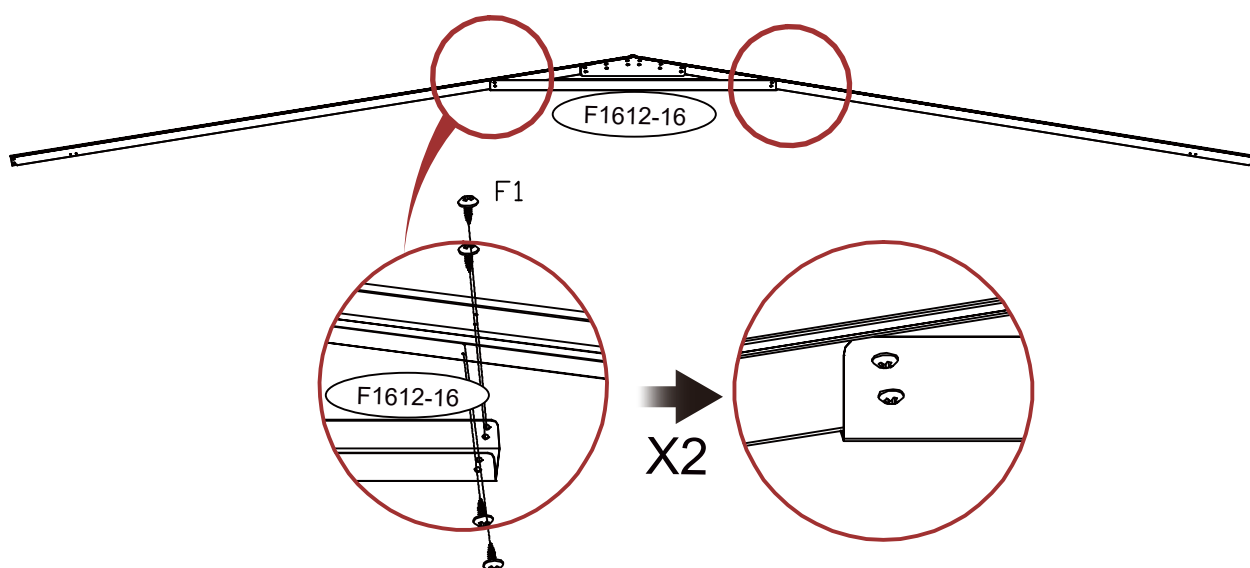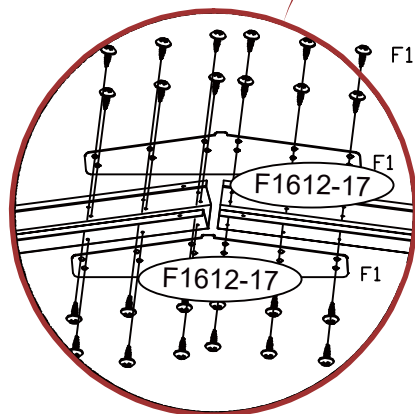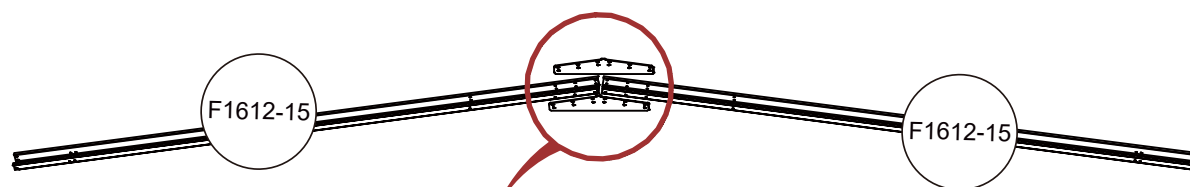


	F1	64
---	----	----

STEP 35

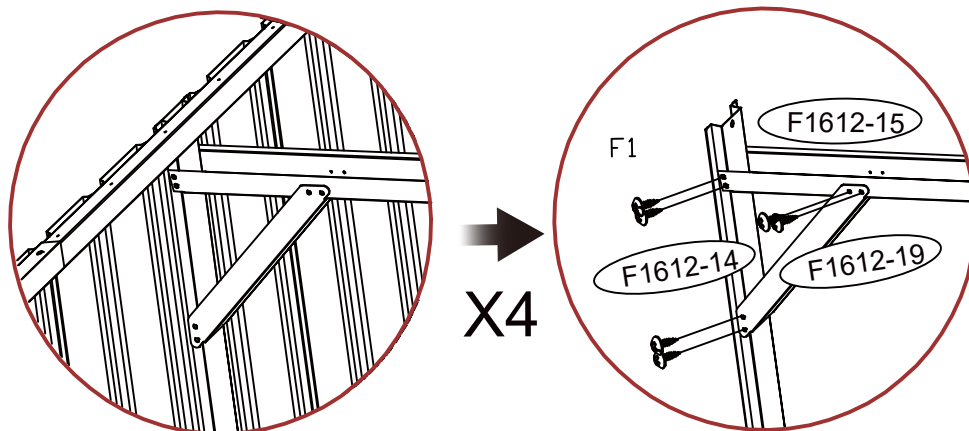


Note: When installing F1612-19, ensure that both F1612-14 are on the same plane. Otherwise, subsequent installation will not be possible.

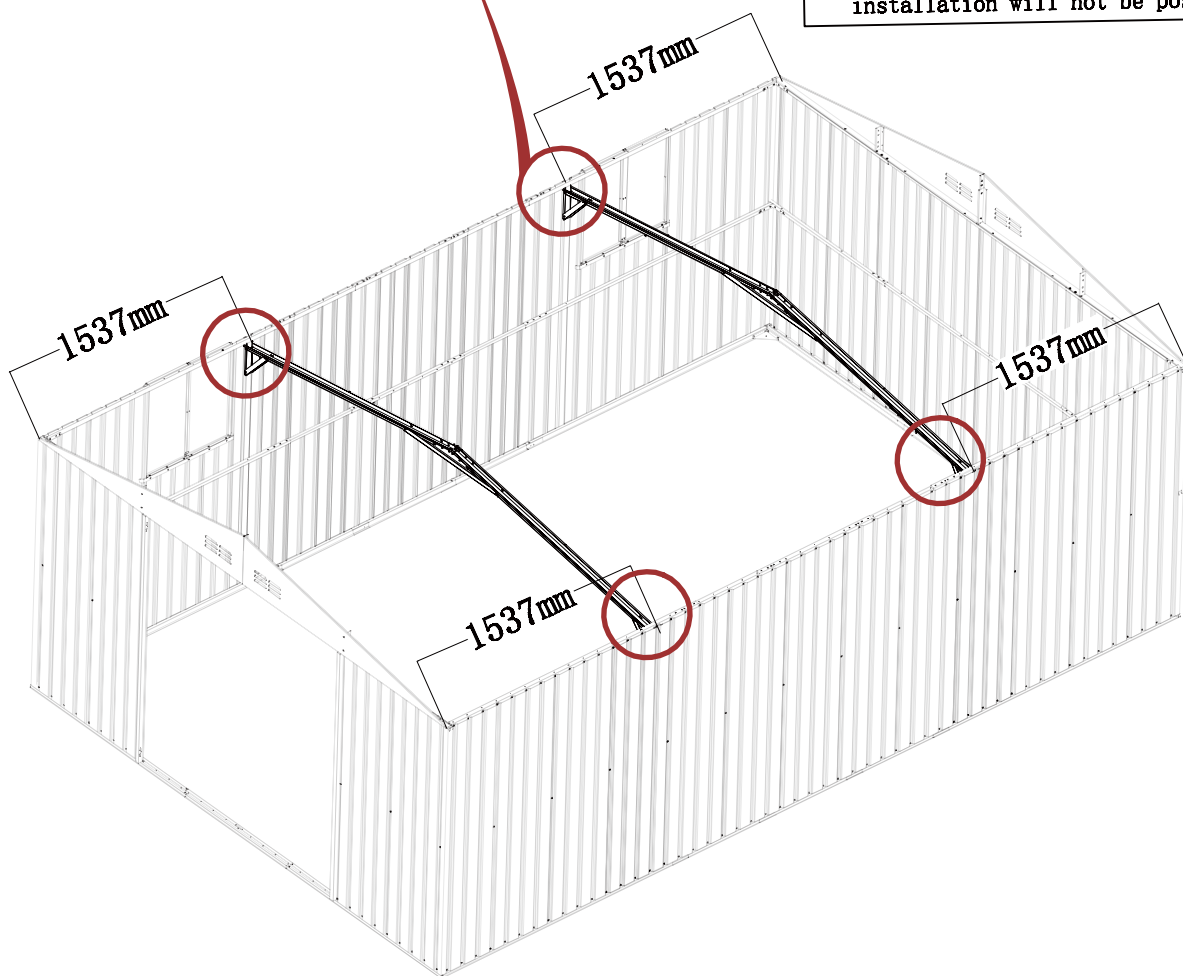

	F1	48
---	----	----

STEP 36

There are holes on top.

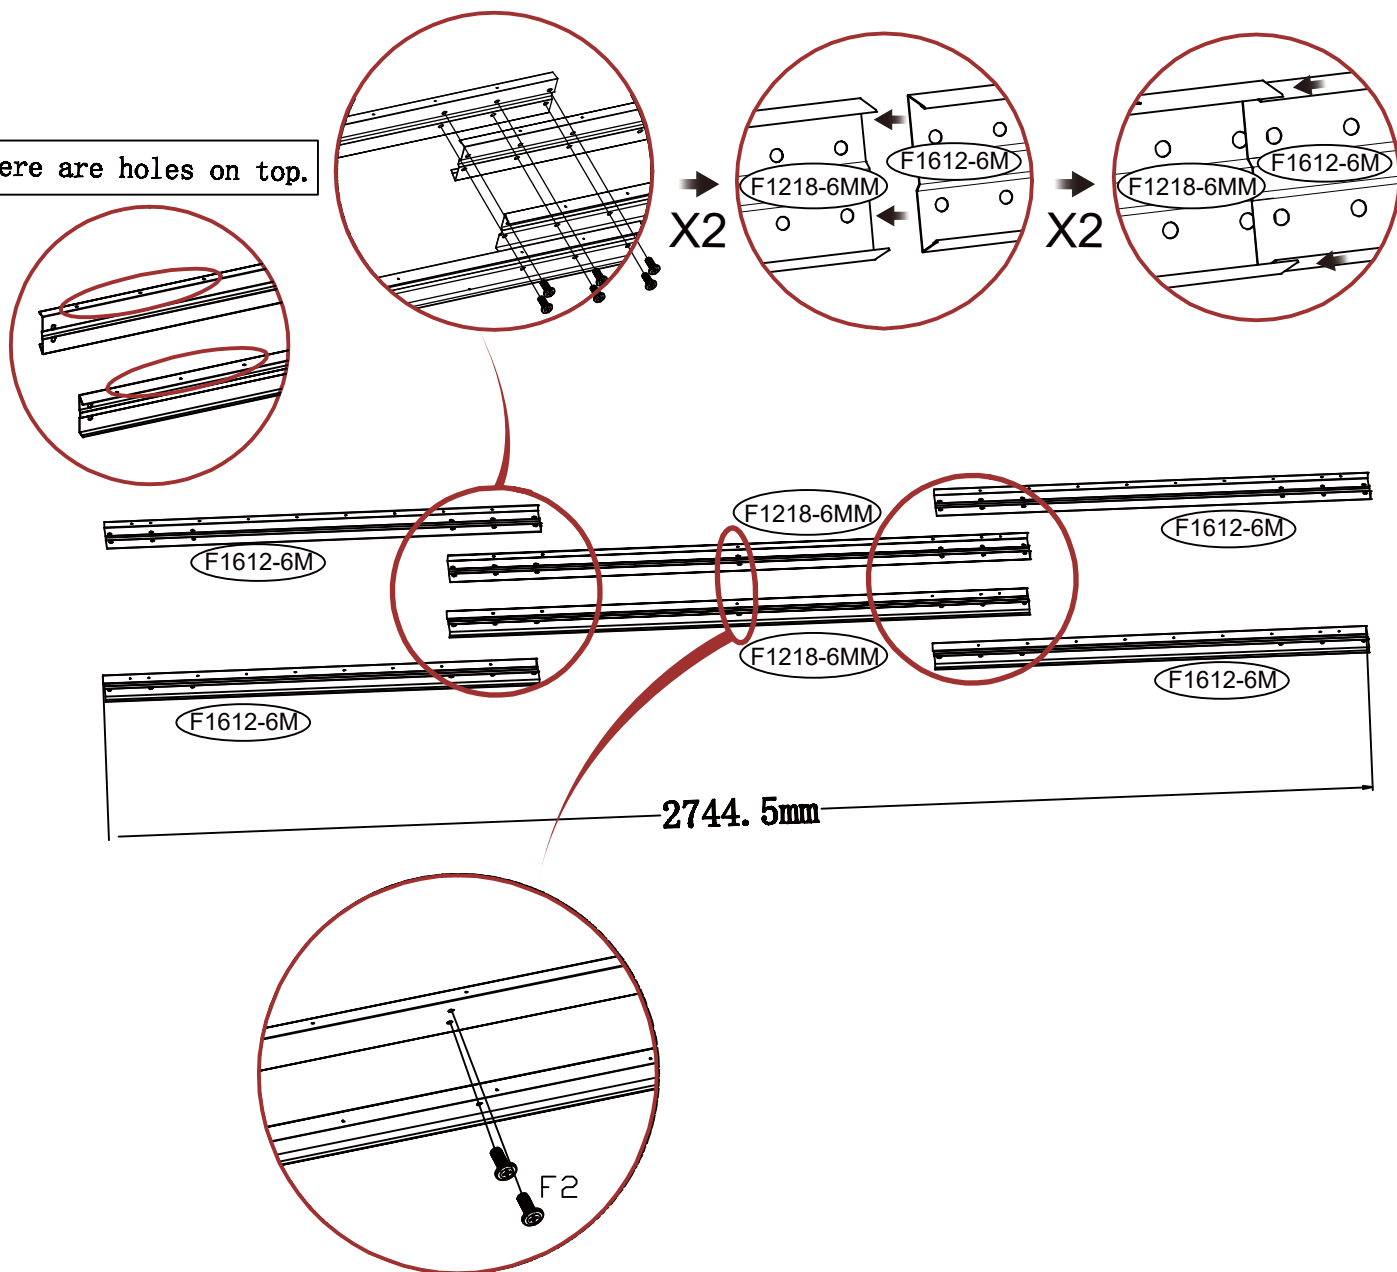

	F2	14
---	----	----