




# 12'x16' Metal Patio Gazebo

## ASSEMBLY MANUAL

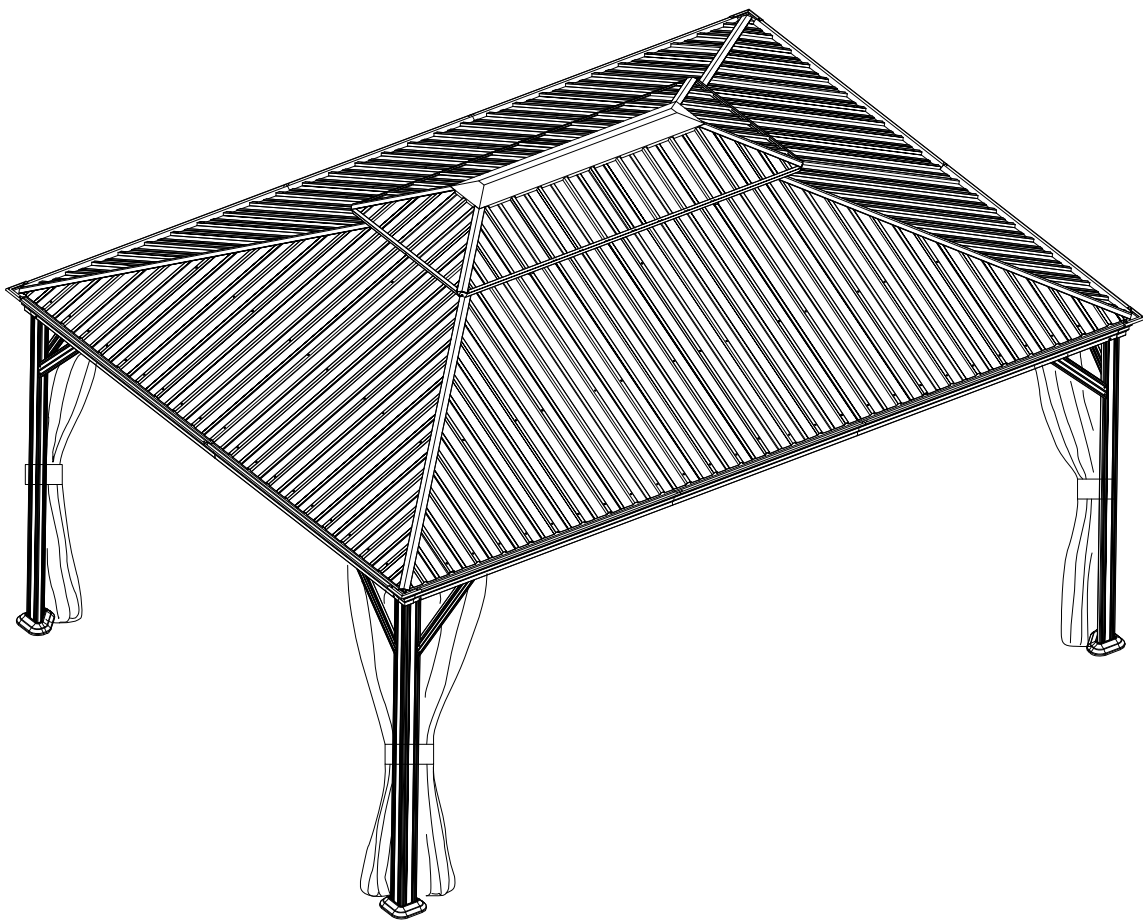

MODEL#: LGMF1671

Missing part? Damaged? Contact us via email at

[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)

[www.domioutdoorliving.com](http://www.domioutdoorliving.com)

## Pre-assembly



1. Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Please use a Phillips screw driver.



6. For ease of construction, you may need a drill.



7. You may need a safety goggle.



8. Do not fully tighten screws prior to complete assembly.

## Warning & Attention



-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;



-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

▲ Use bolts to secure the frame to the ground to against the strong wind.

**IMPORTANT:** A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

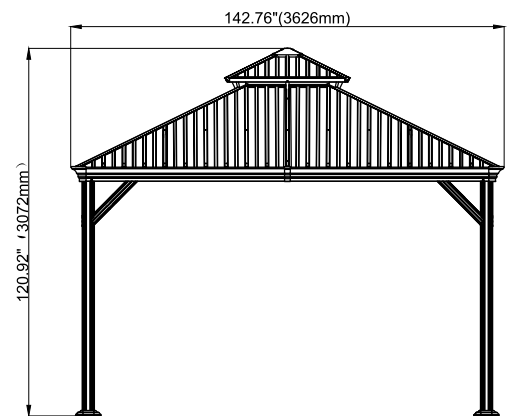
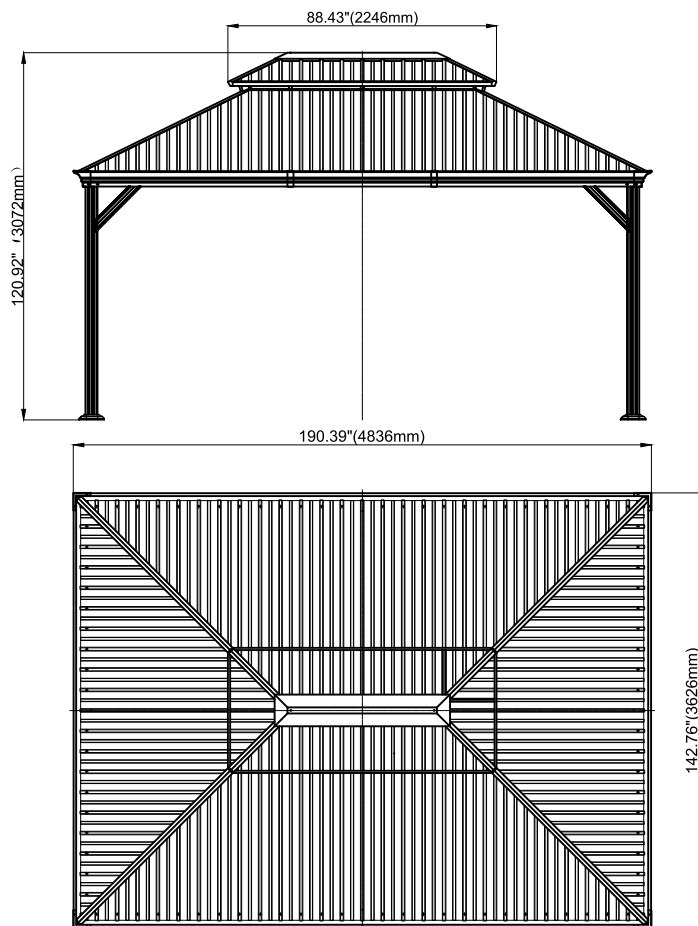


1

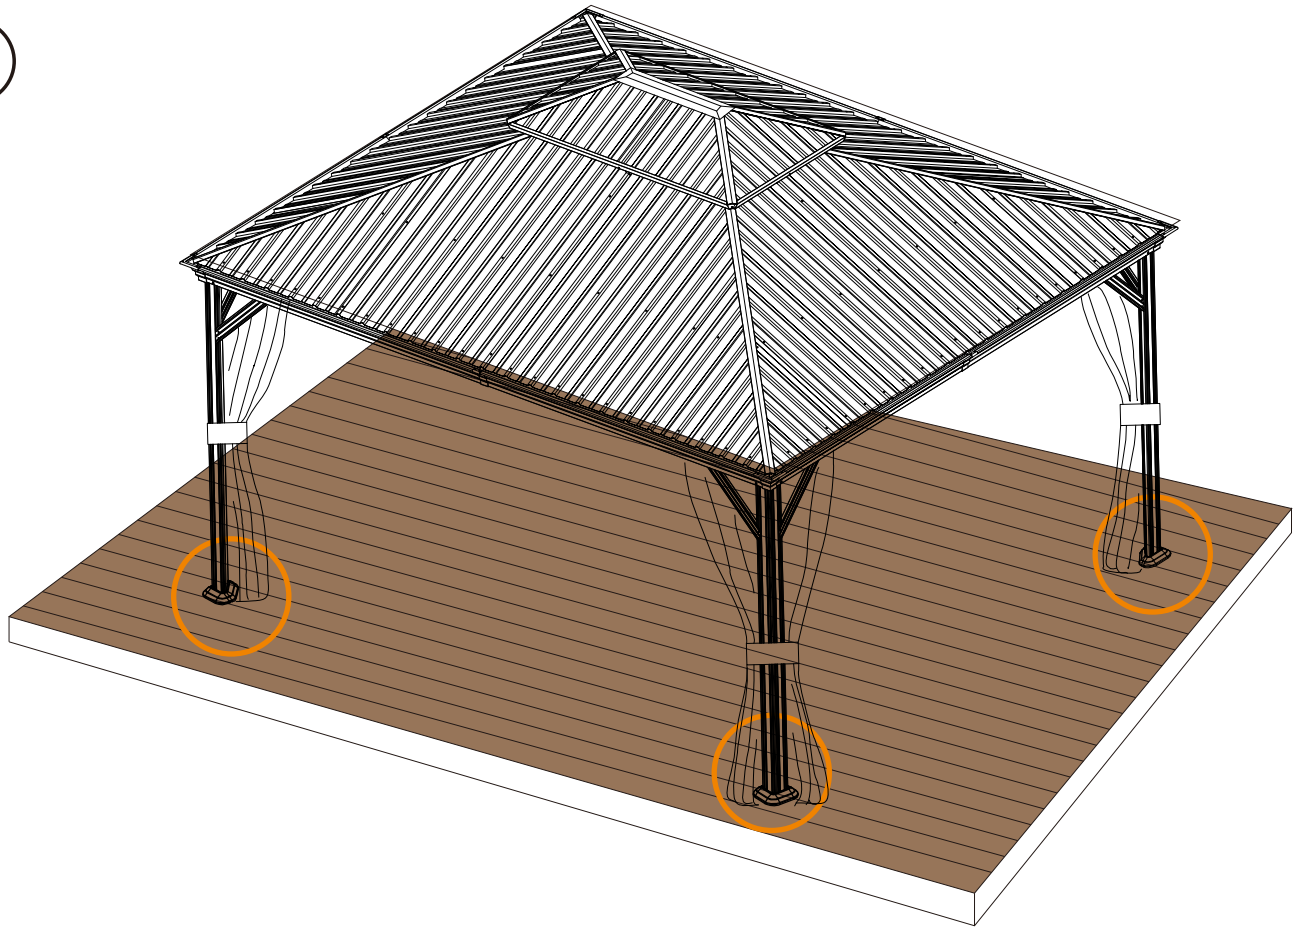


x12

If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. x4 in. Structural Wood Screw** to mount the gazebo.

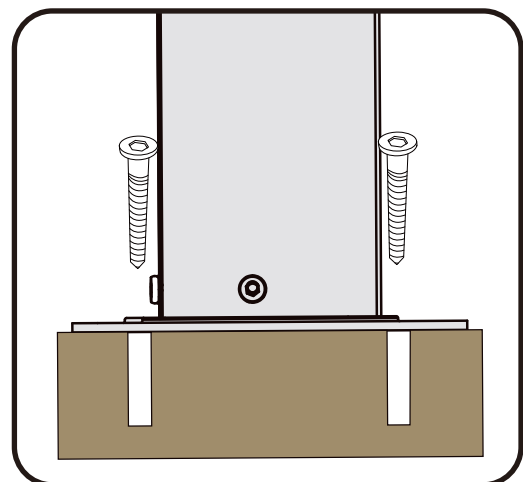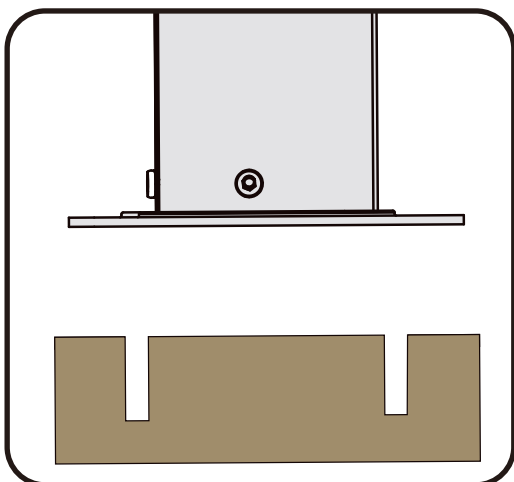





2

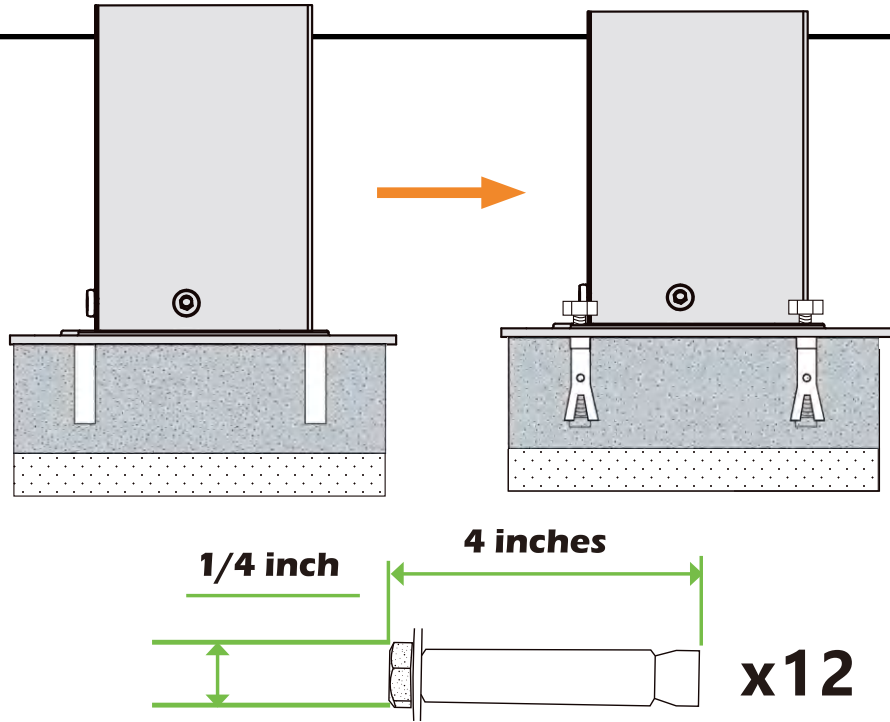


If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo


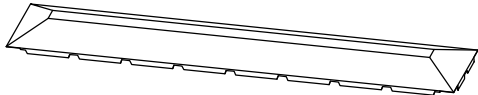

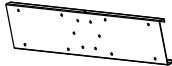


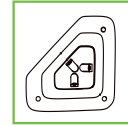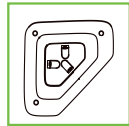








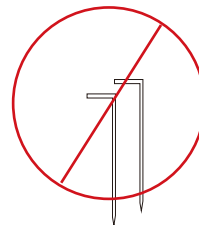


3

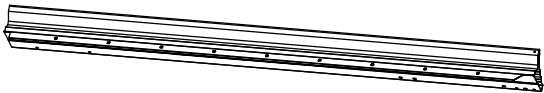
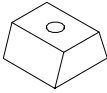
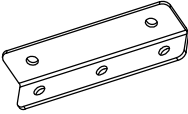


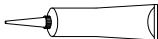



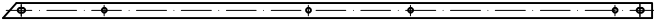


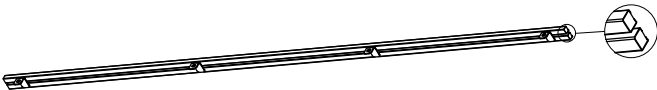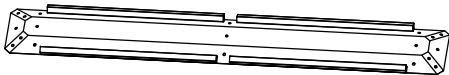


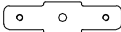
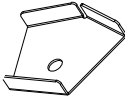
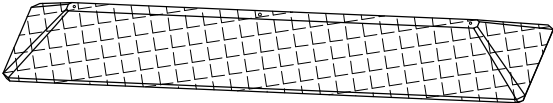



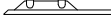

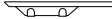
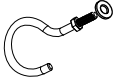

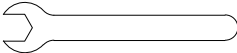
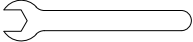



Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended. use expansion bolts to mount the pergola like ② shows.


**IMPORTANT:**  
Anchor is not recommended

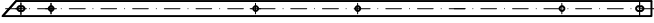

 <p>Pole 2080MM A (x4)</p>	 <p>Outside Roof Cover 1465MM E (x1)</p>
 <p>Beam 1715MM C1 (x2)</p>	 <p>Union Bar 600MM E (x6)</p>
 <p>Beam 1715MM C2 (x2)</p>	 <p>Corner Cover F (x4)</p>
 <p>Beam 1715MM C3 (x2)</p>	 <p>Joint Cover G (x6)</p>
 <p>Beam 1715MM C4 (x2)</p>	 <p>Silicone Sealant H (x1)</p>
 <p>Beam 1200MM C5 (x2)</p>	 <p>Corner Solidifying Bar 578MM I1 (x4)</p>
 <p>Track 1583MM D (x4)</p>	 <p>Corner Solidifying Bar 578MM I2 (x4)</p>
 <p>Track 1583MM D1 (x4)</p>	 <p>Inside Roof Cover 1389MM J (x1)</p>
 <p>Track 1198MM D2 (x2)</p>	 <p>Base K (x4)</p>


 <p>Base Cover</p> <p>K1 (x4)</p>	 <p>Black Rubber</p> <p>S (x136)</p>
 <p>Bracket</p> <p>K2 (x8)</p>	 <p>1021MM</p> <p>Finishing Bar</p> <p>T (x2)</p>
 <p>Corner Roof Tube Connector 690MM</p> <p>M (x4)</p>	 <p>2220MM</p> <p>Finishing Bar</p> <p>T1 (x2)</p>
 <p>Corner Roof Tube 2130MM</p> <p>M1 (x4)</p>	 <p>1085MM</p> <p>Solidfying Bar</p> <p>U (x4)</p>
 <p>Roof Tube 1927MM</p> <p>N (x4)</p>	 <p>1085MM</p> <p>Solidfying Bar</p> <p>U1 (x4)</p>
 <p>Roof Tube 1927MM</p> <p>N1 (x4)</p>	 <p>1158MM</p> <p>Solidfying Bar</p> <p>U2 (x2)</p>
 <p>Finishing Bar 740MM</p> <p>P (x2)</p>	 <p>Bracket</p> <p>U3 (x4)</p>
 <p>Finishing Bar 1940MM</p> <p>P1 (x2)</p>	 <p>Bracket</p> <p>U4 (x6)</p>
 <p>Finishing End</p> <p>Q (x8)</p>	 <p>Mesh</p> <p>O (x1)</p>

 <div> Plastic Bar 1800MM O1 (x2) </div>	 <div> Plastic Clips Z3 (x4) </div>
 <div> Plastic Bar 620MM O2 (x2) </div>	 <div> Plastic Clips Z4 (x4) </div>
 <div> Hooks R1 (x3) </div>	
 <div> x1 </div>	
 <div> x1 </div>	
 <div> x1 </div>	
 <div> Plastic Clips Z (x72) </div>	
 <div> Plastic Clips Z1 (x4) </div>	
 <div> Plastic Clips Z2 (x4) </div>	




M6x16

1#  
x242




M6x25

10#  
x4



M6x20

2#  
x24




M6x12

11#  
x12




3#  
x16




ST6.3\*15

12#  
x4




4#  
x128




M6x28

5#  
x84



M6x45

6#  
x8



M6x50

7#  
x40










M5x16



8#  
x6



ST4.8x13

9#  
x28

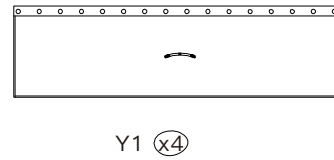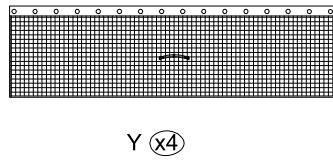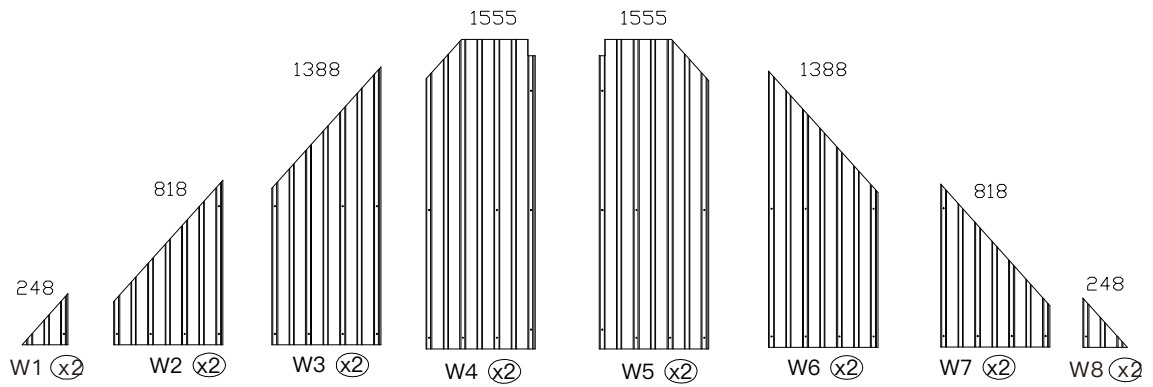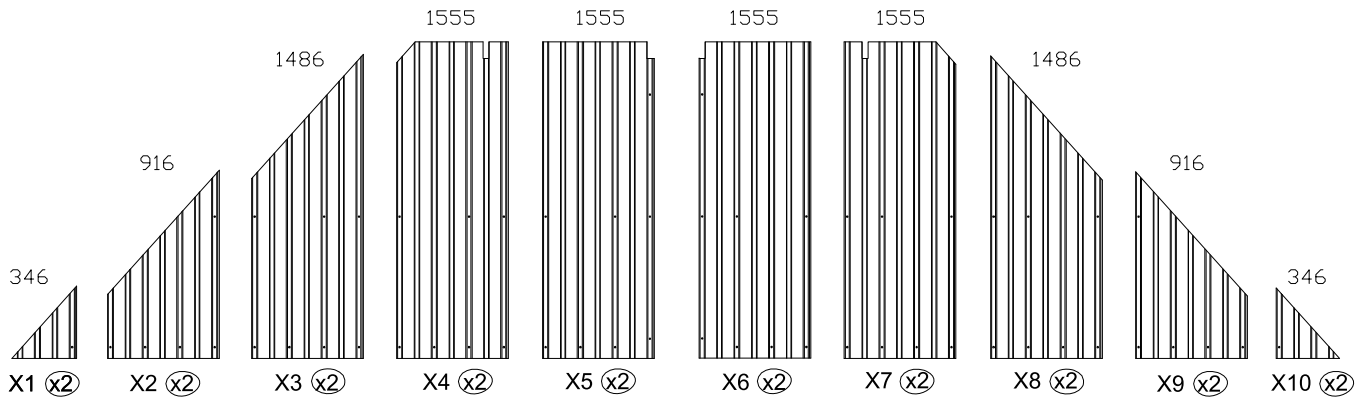
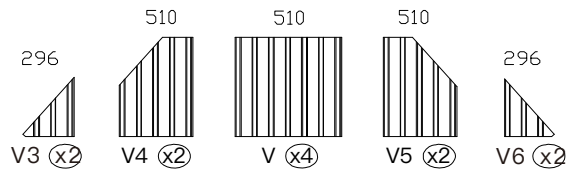
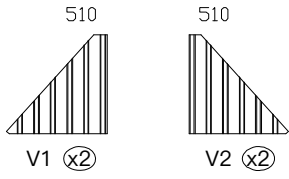


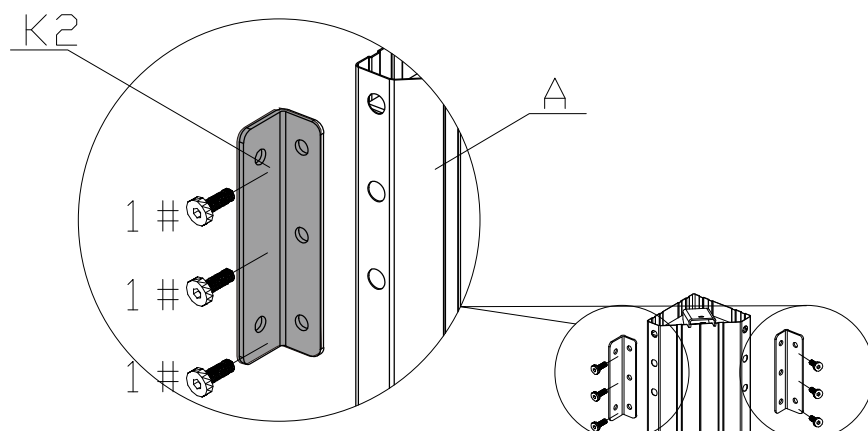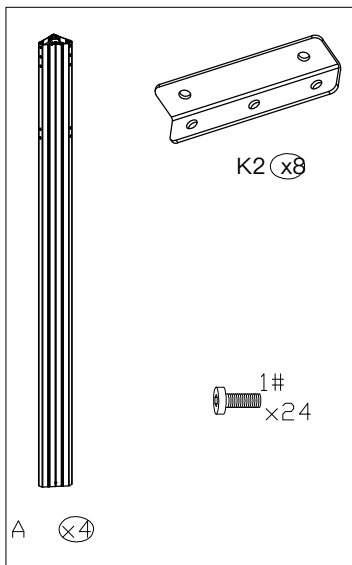

(1) Attach 2 Part #K2 to Part #A with 6 Bolts #1.  
Repeat the above procedures to assemble the other 3 Poles.



**X4**








(1) Put on Base Cover  
#K1 first;

(2) Attach Base #K to  
Pole #A with 3 Bolts  
#1.

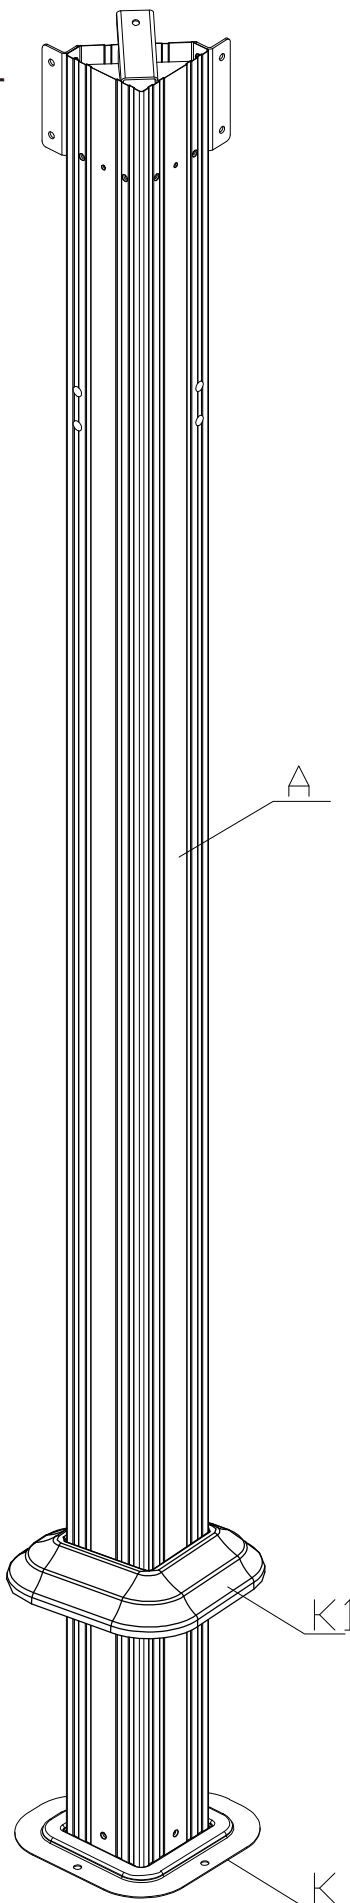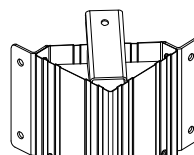


**X4**

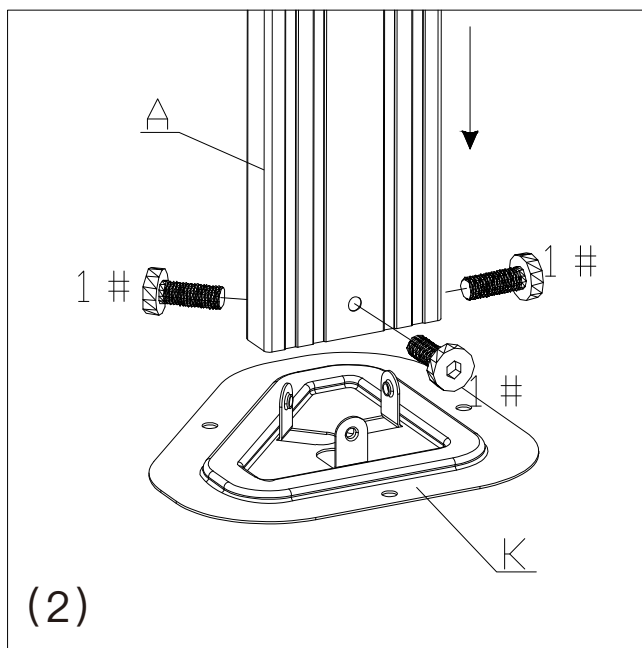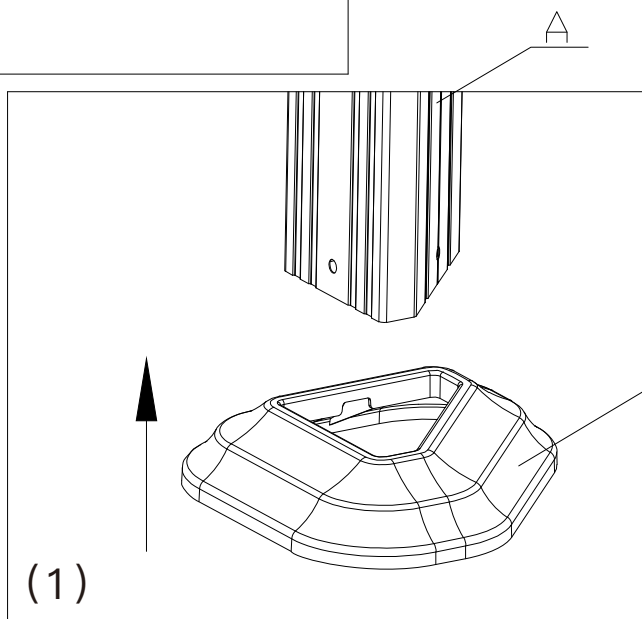

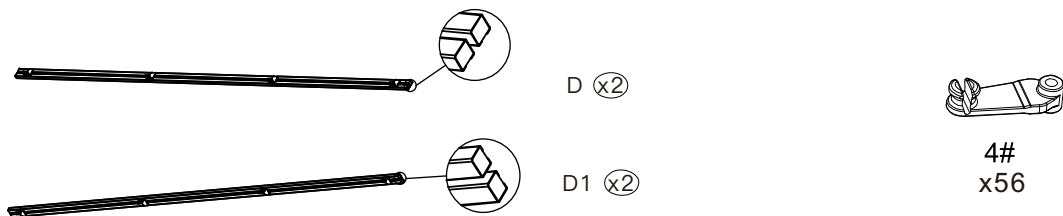


(1) Slide the Plastic Hooks #4 to the double-rail track #D (each slot should slide 7 plastic hooks).



(2) Repeat the above procedures for the other track D.

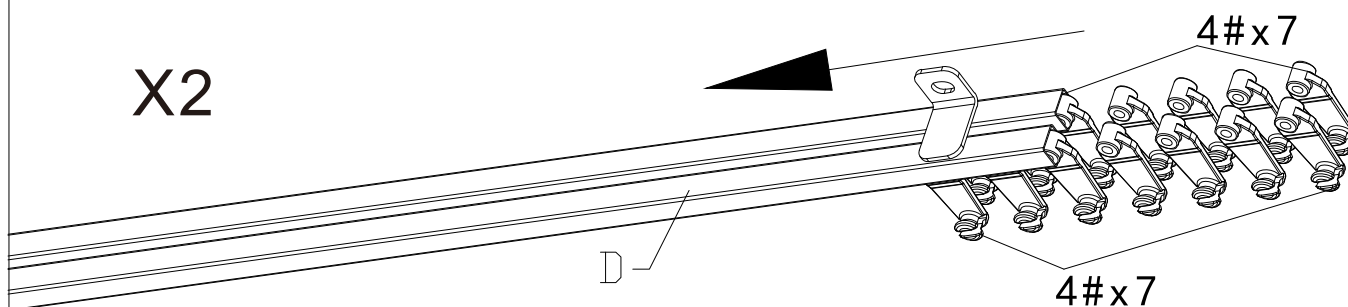

(1) Slide the Plastic Hooks #4 to the double-rail track #D1 (each slot should slide 7 plastic hooks).


(2) Repeat the above procedures for the other track D1.

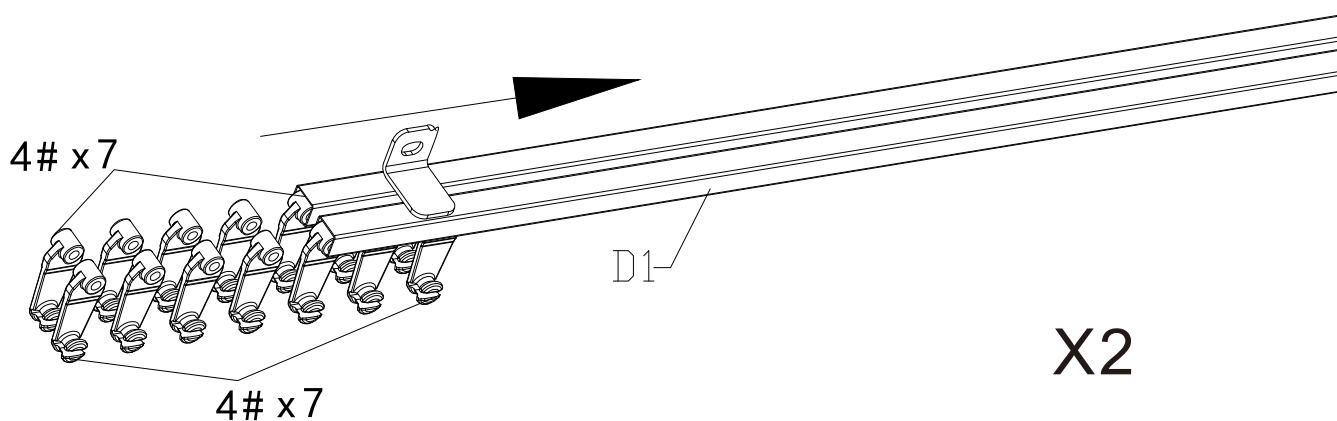

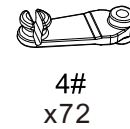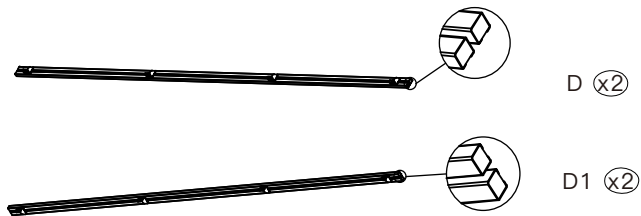


(1) Slide the Plastic Hooks #4 to the double-rail track #D (each slot should slide 9 plastic hooks).



(2) Repeat the above procedures for the other track D.

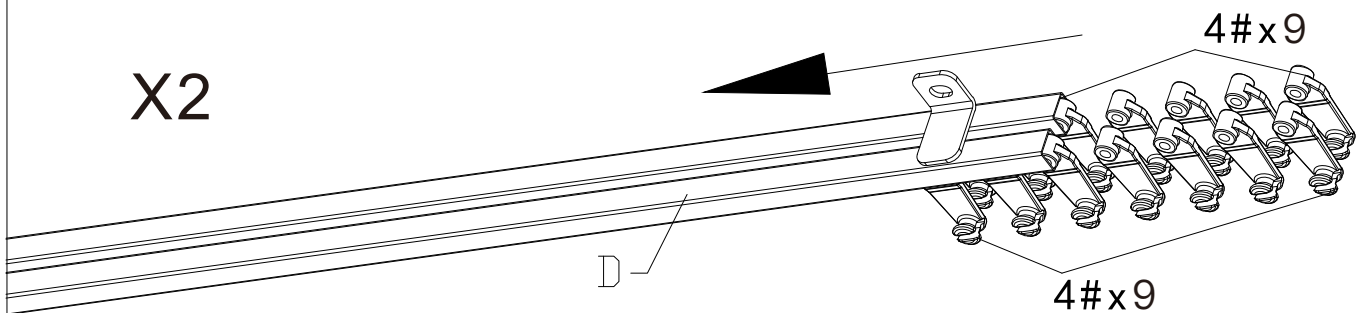


(1) Slide the Plastic Hooks #4 to the double-rail track #D1 (each slot should slide 9 plastic hooks).

(2) Repeat the above procedures for the other track D1.

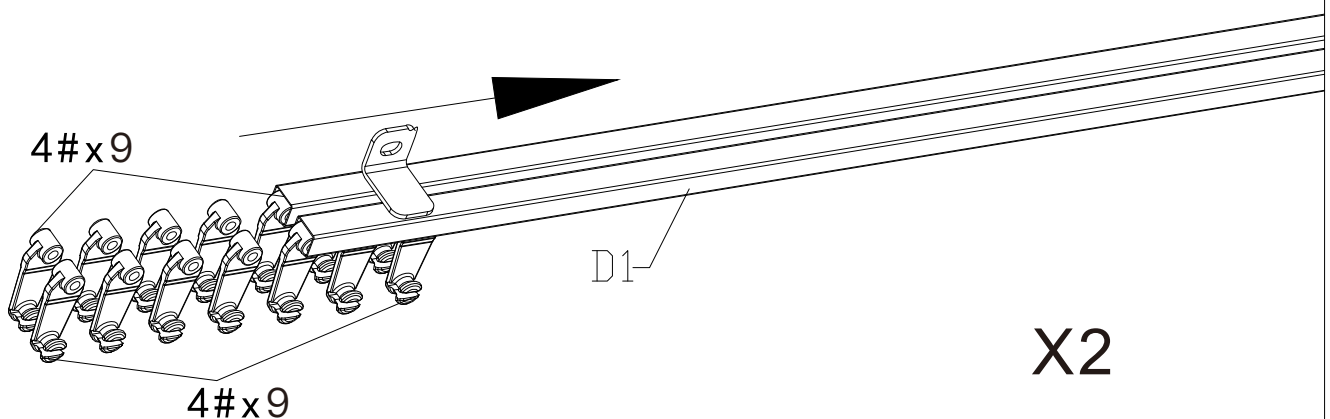

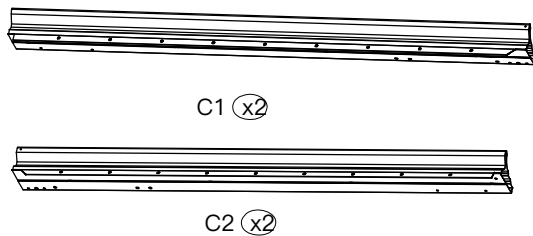


## BEAM ASSEMBLY


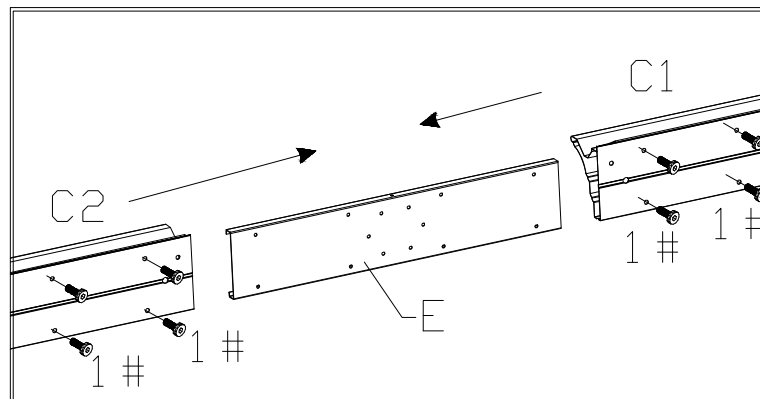


- (1) Insert Part #E into Part #C2, and secure with 4 Bolts #1.
- (2) Insert the other side of Part #E into Part #C1 and secure with 4 Bolts #1.



**Repeat the above procedures to assemble the other Part #C2 and #C1.**

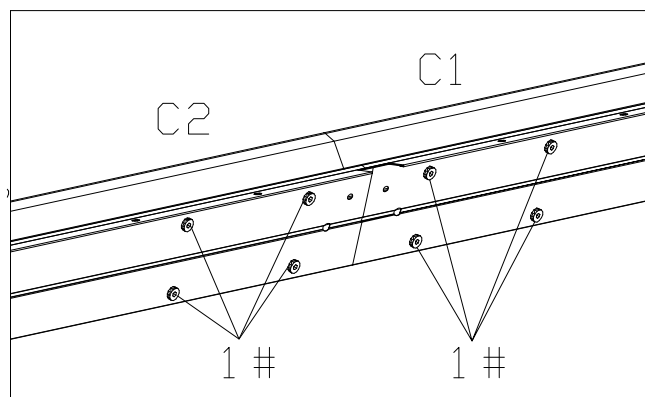






**TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant (part #H) and Joint Cover #G to affix the gap.(see P12)**

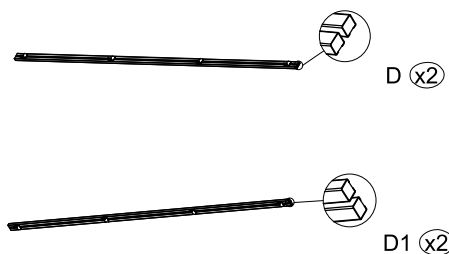


(1) Use 8 Bolts #1 to fix the track D & D1 to the beam C2 & C1.  
Repeat the above procedures for another beam C2 & C1.

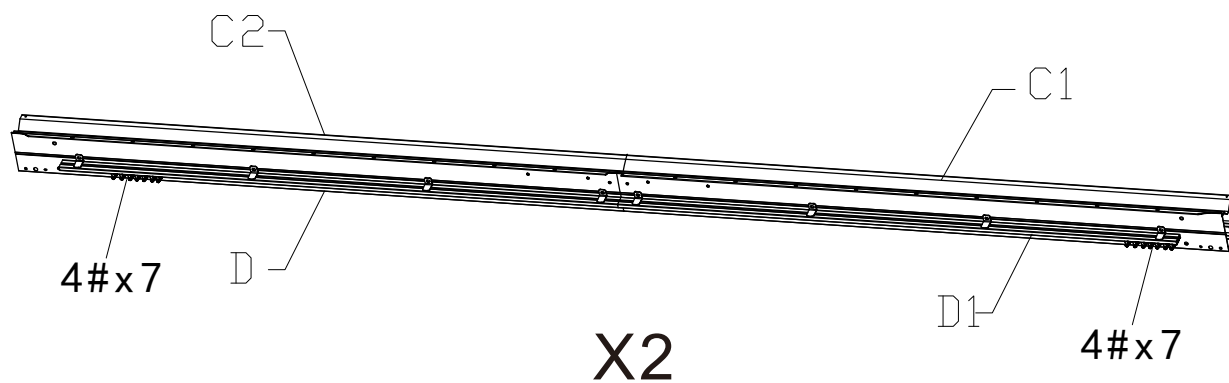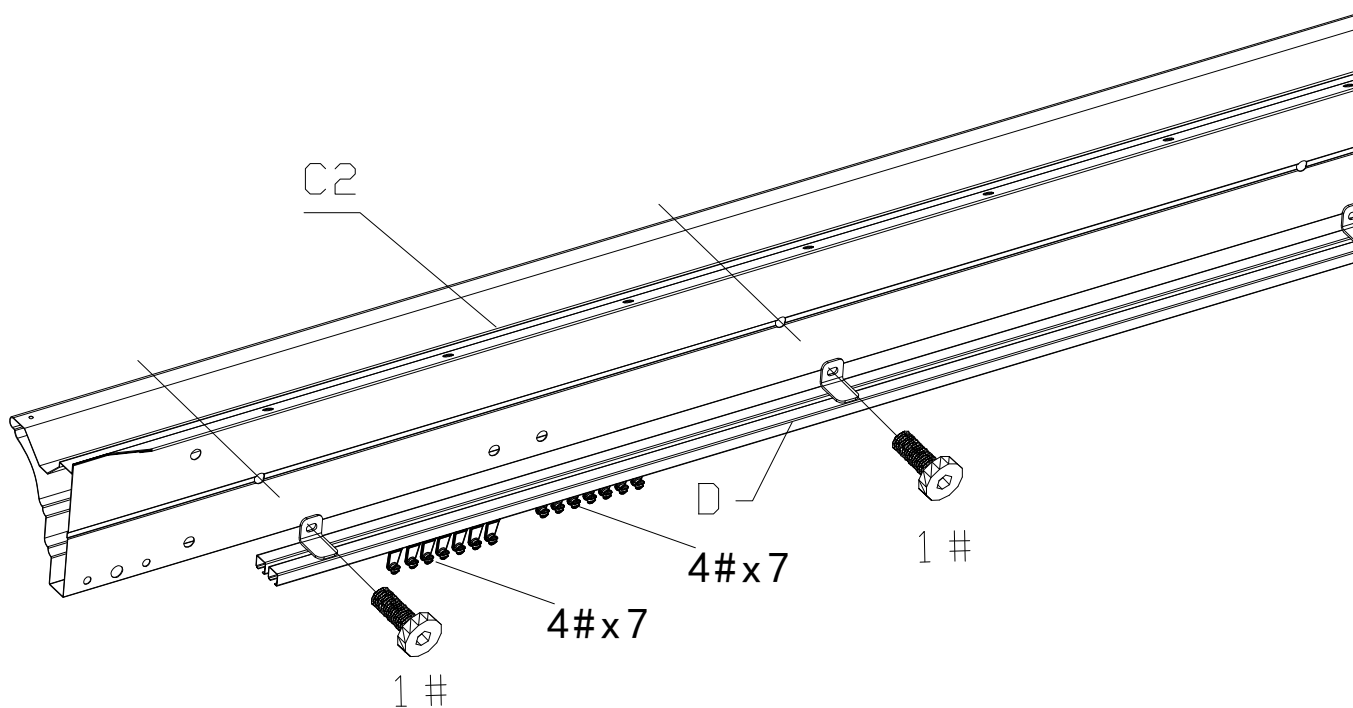

X2

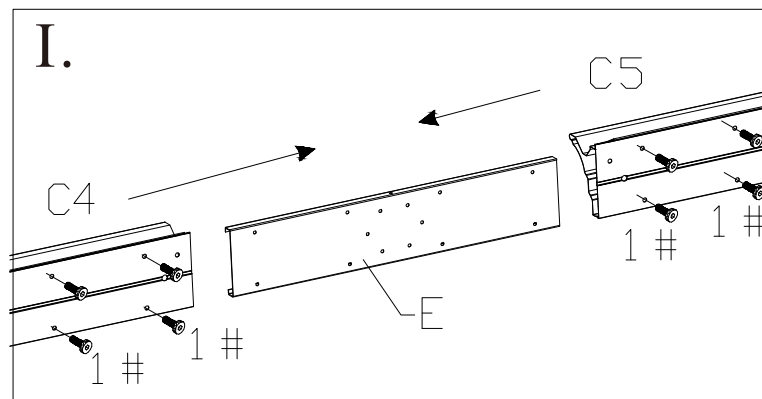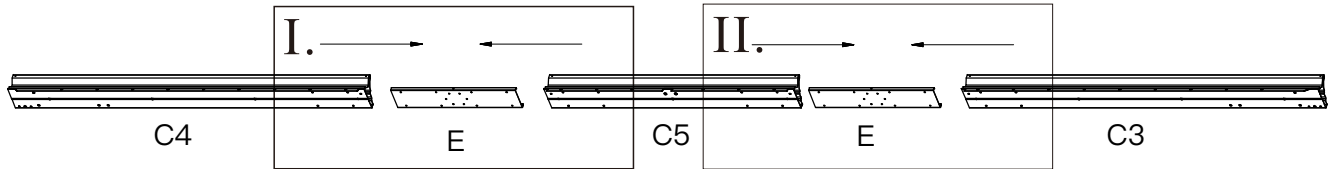
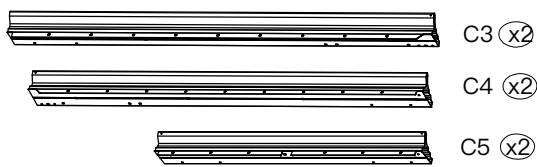


- (1) Insert Part #E into Part #C4, and secure with 4 Bolts #1.
- (2) Insert the other side of Part #E into Part #C5 and secure with 4 Bolts #1.

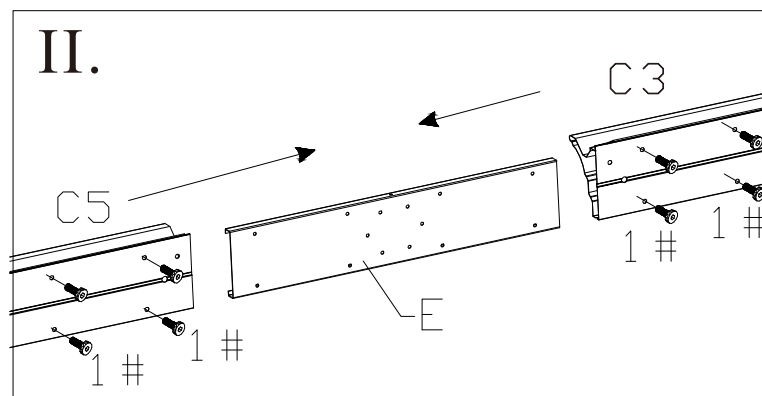


- (3) Insert Part #E into Part #C3, and secure with 4 Bolts #1.
- (4) Insert the other side of Part #E into Part #C5 and secure with 4 Bolts #1.

Repeat the above procedures to assemble another Part #C4, C5 & C3.

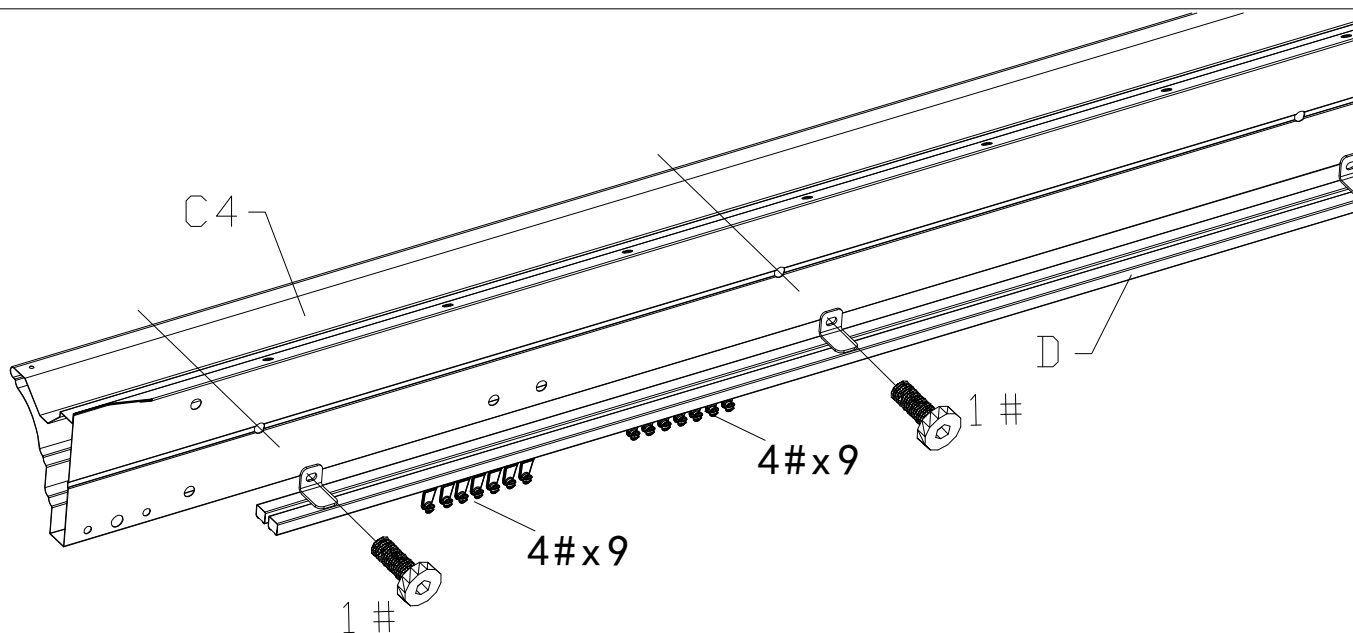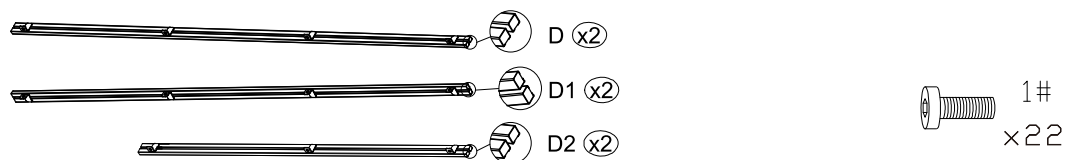

(1) Use 11 Bolts #1 to fix the track D ,D3,D2& D1 to the beam C4,C5 & C3.


Repeat the above procedures for another beam C4, C5 & C3.

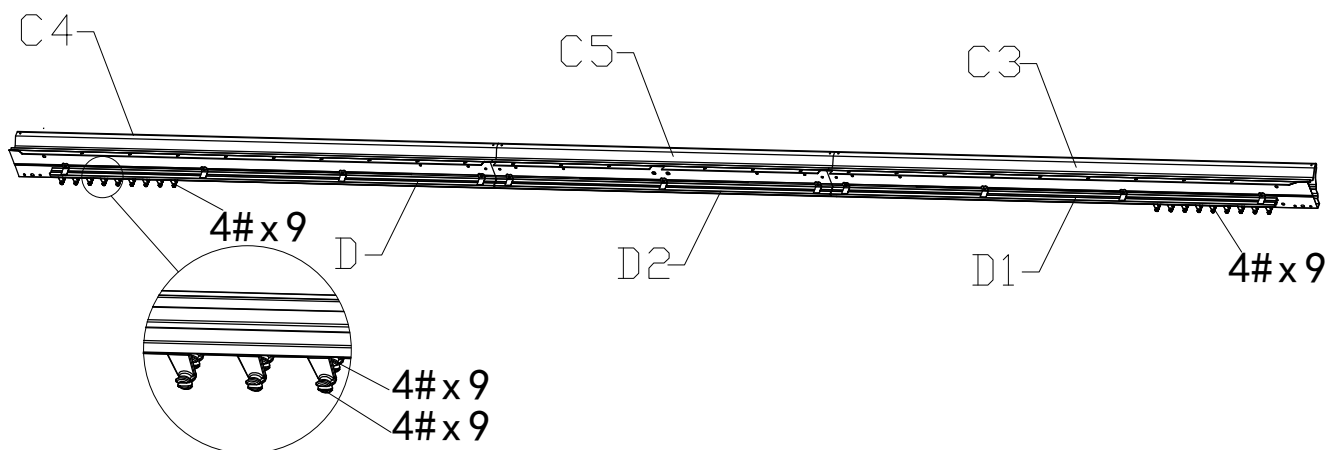






2#  
x16




3#  
x16


## FRAME ASSEMBLY:

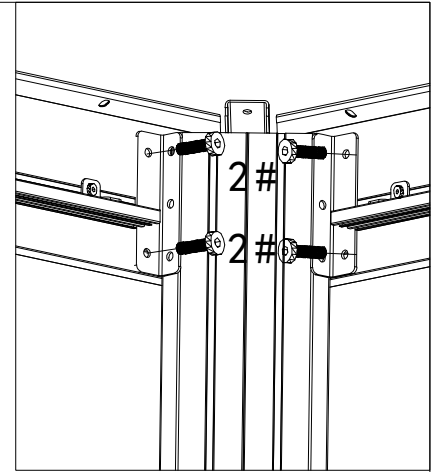


Inside View

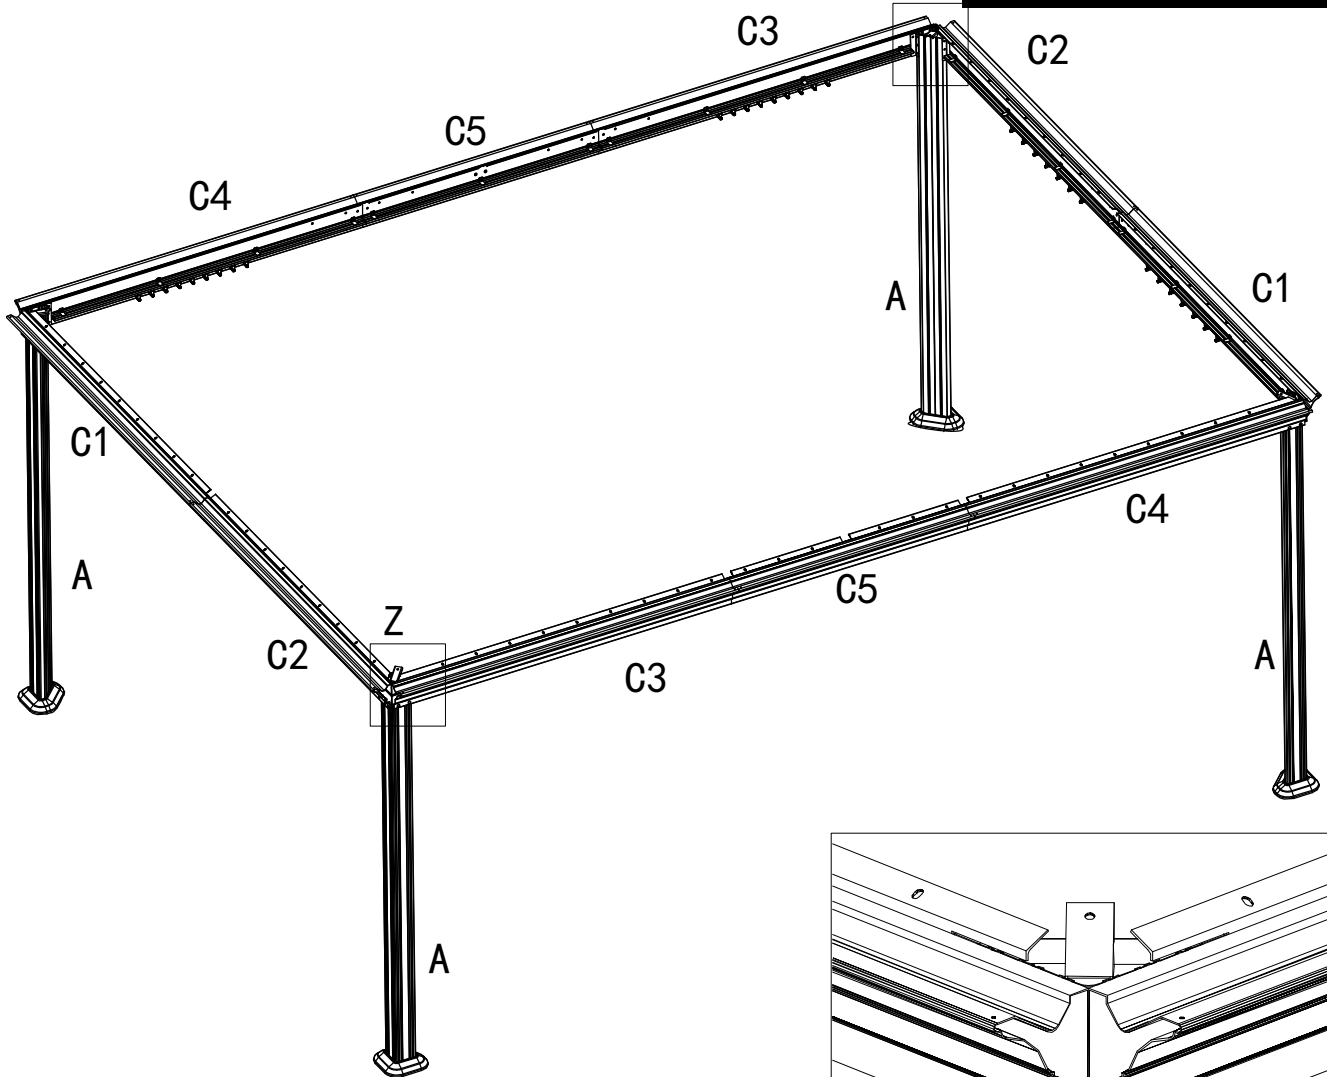

Please don't tighten  
all bolts.


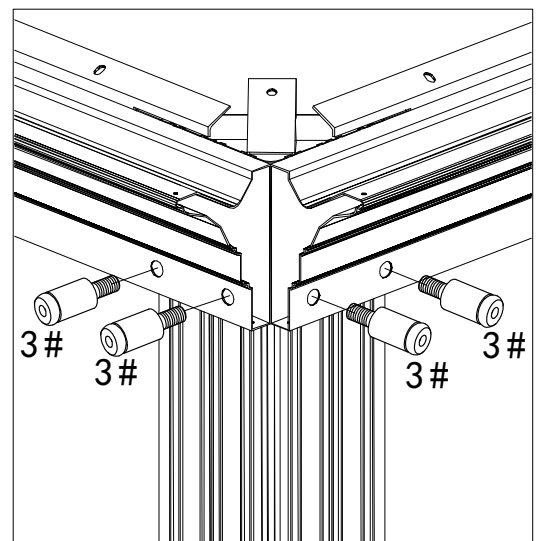


Outside View

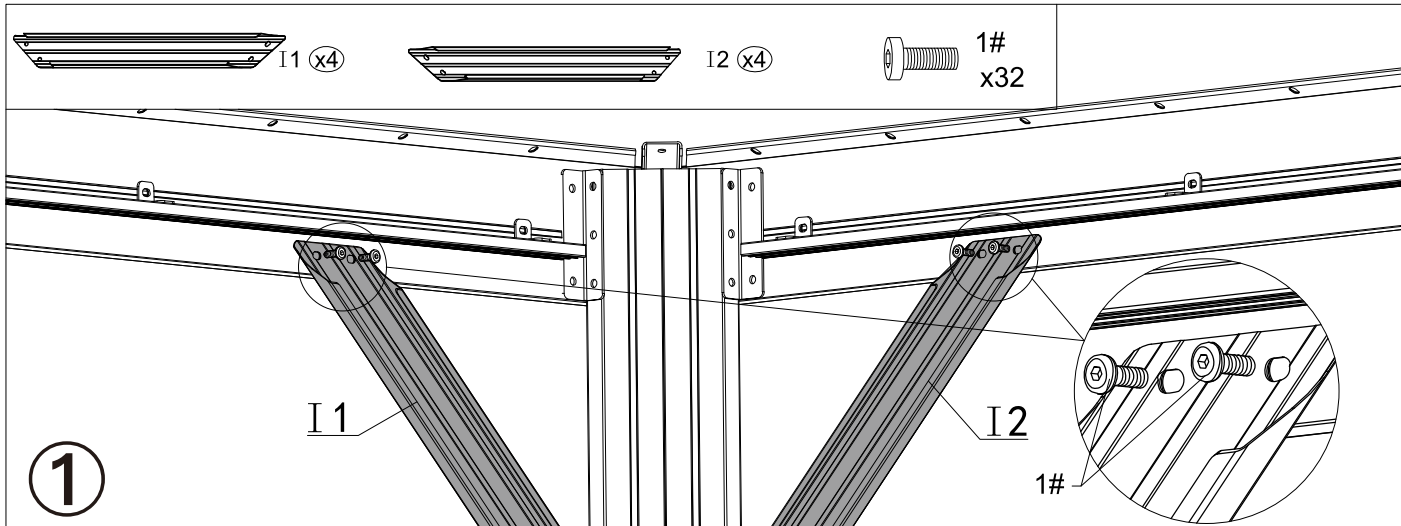

**Inside View**

CORNER SOLIDIFYING  
BAR ASSEMBLY:

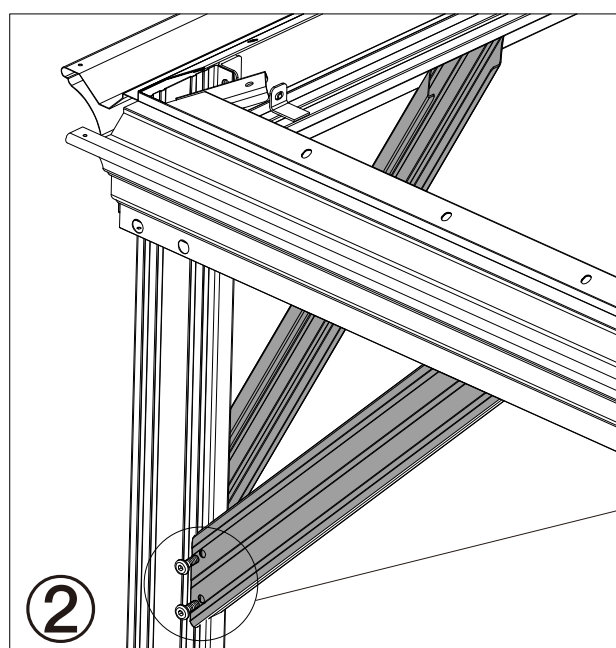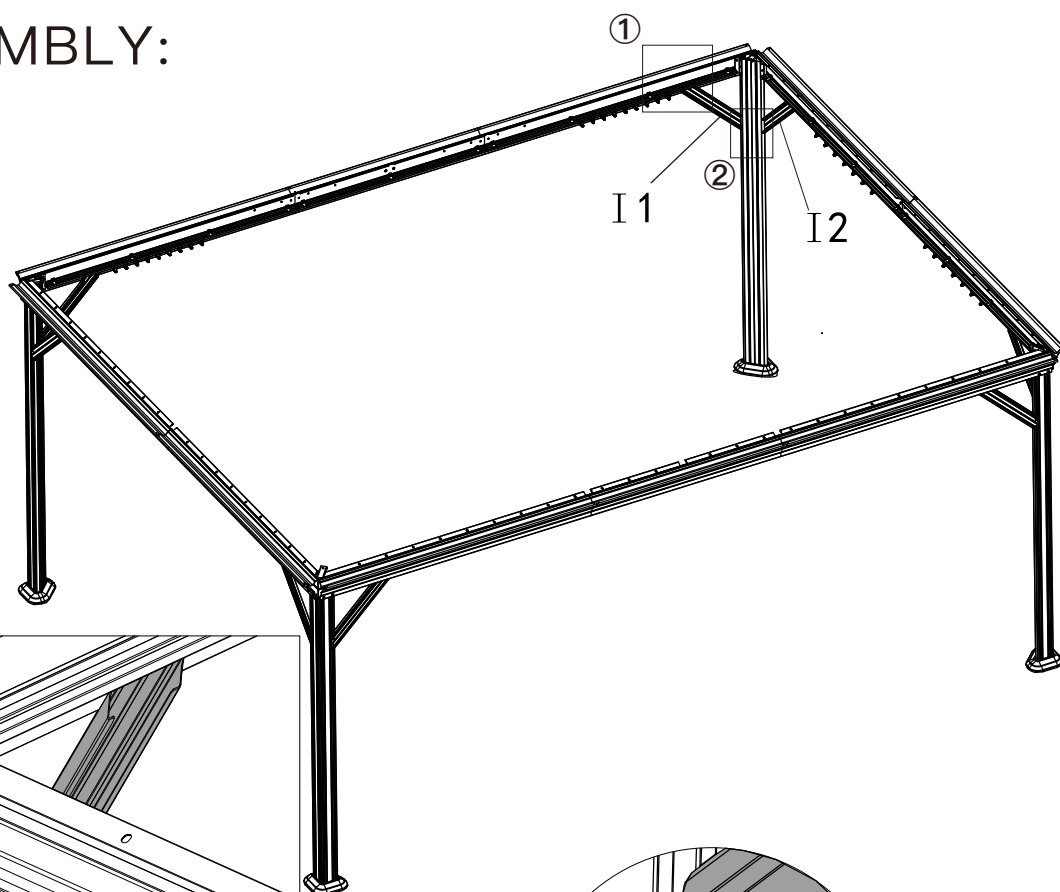

**Outside View**








F (x4)






9#  
x16



## CORNER COVER & JOINT COVER ASSEMBLY:

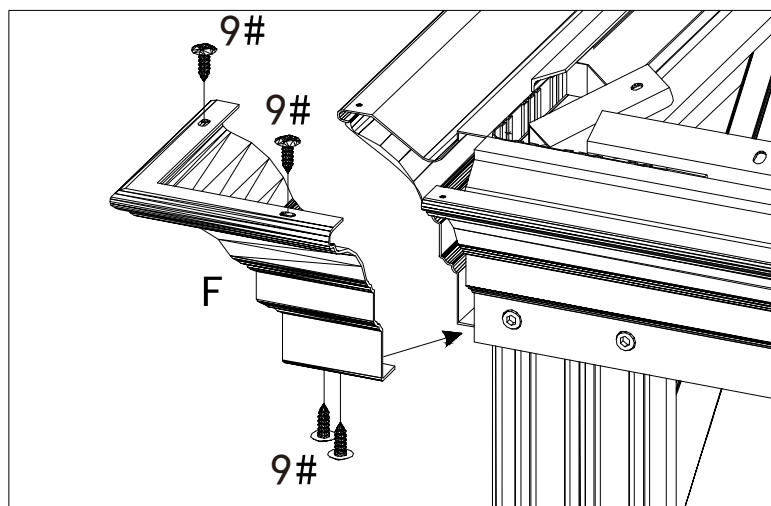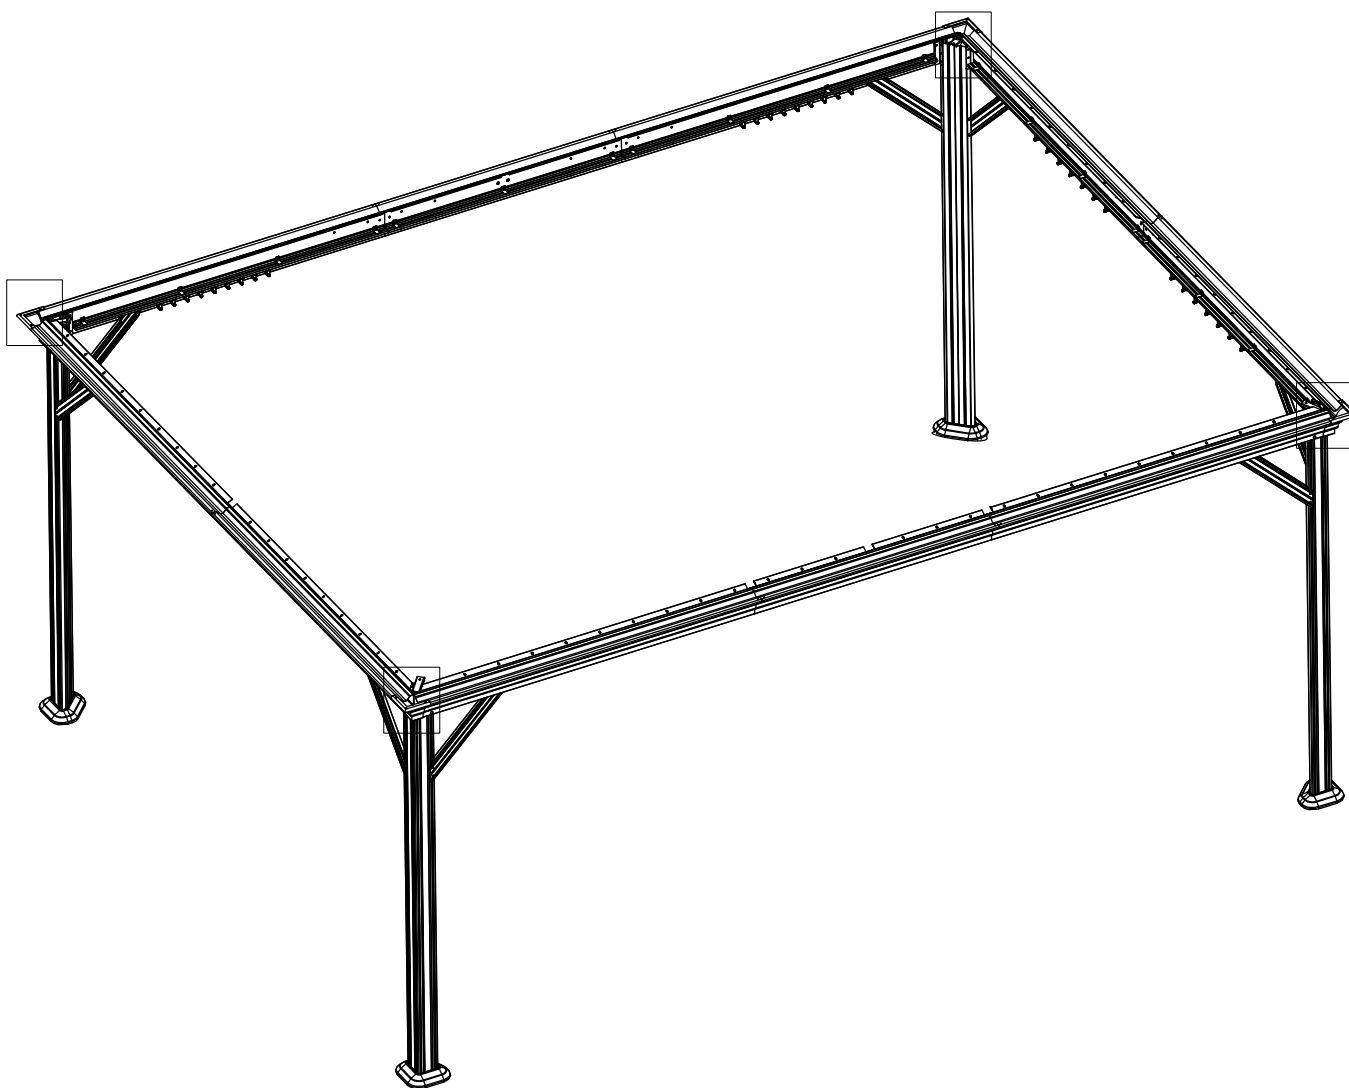



Use 5mm silicone sealant(part #H) and Joint Cover #G to affix the gap.

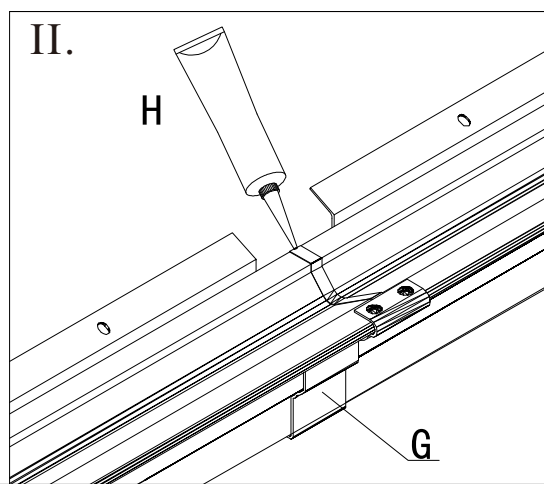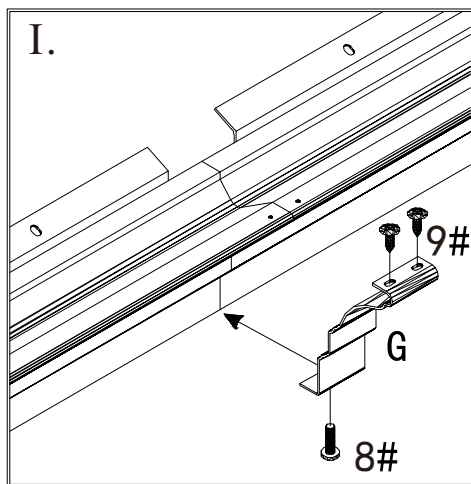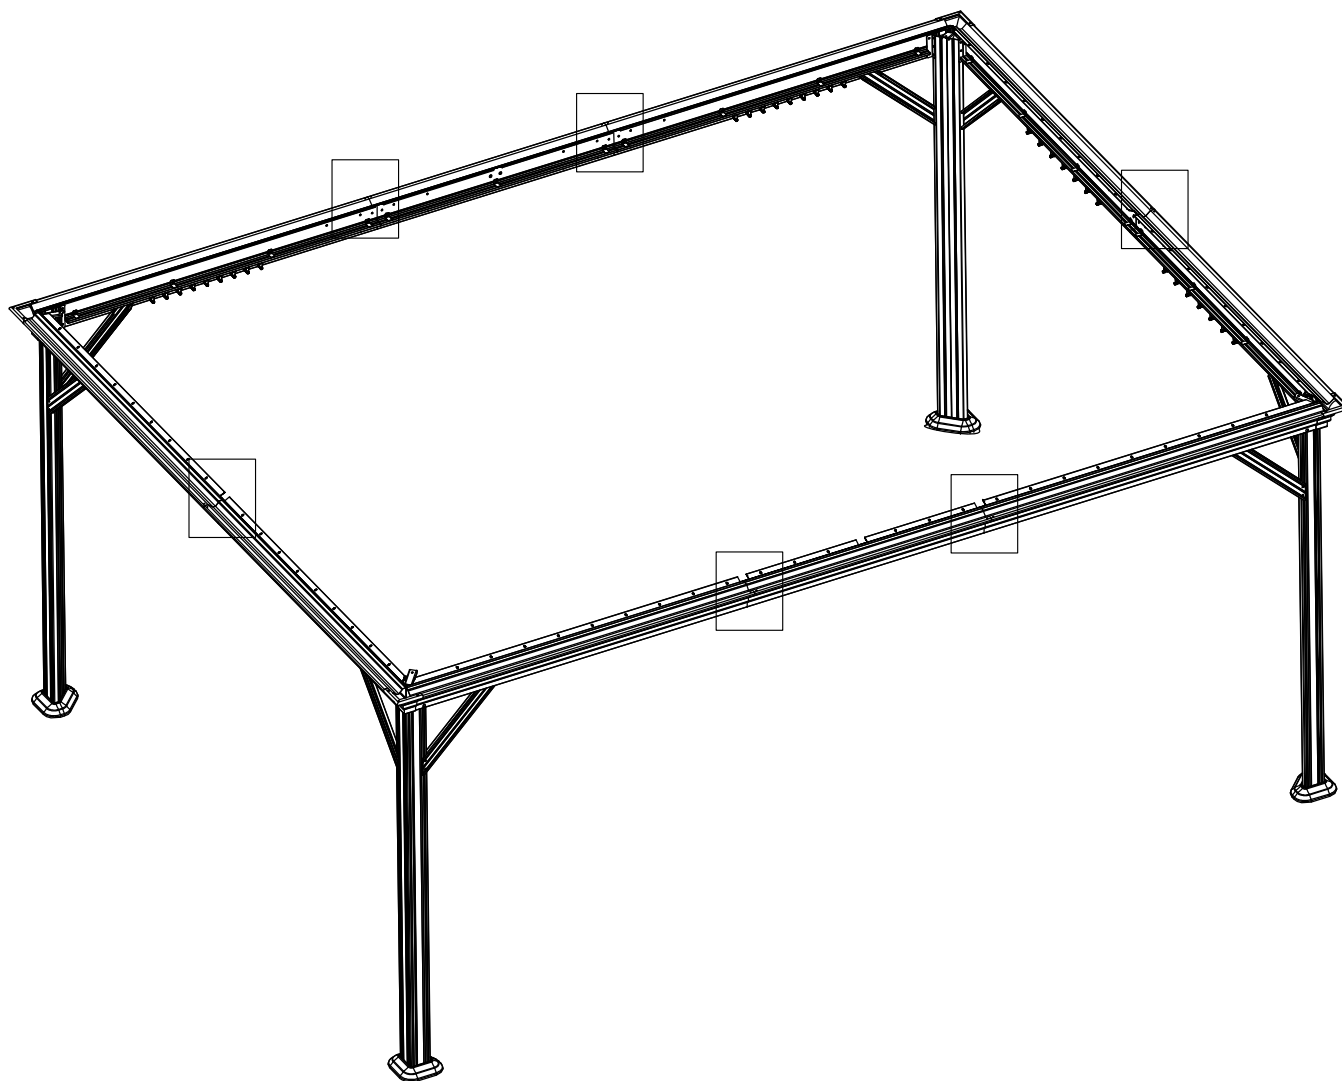

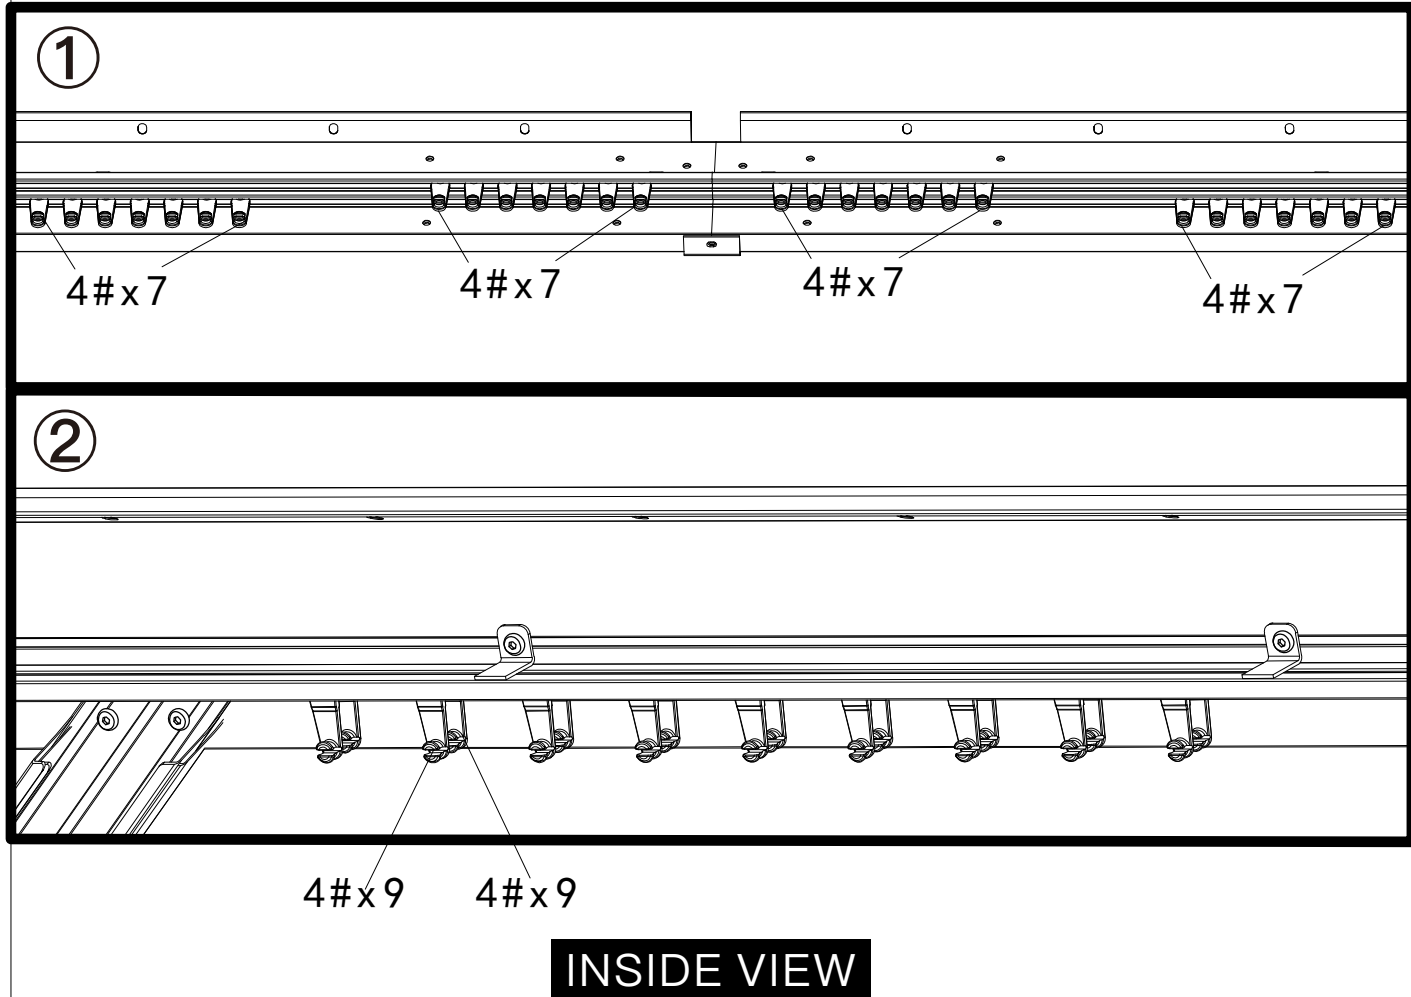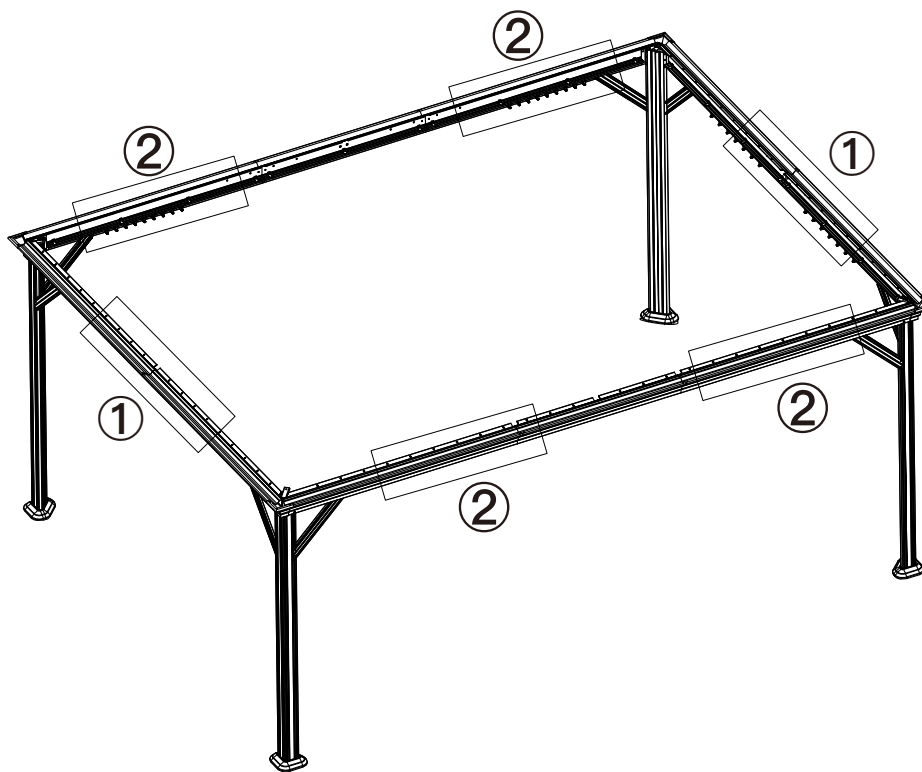




M (x4)




M1 (x4)




2#  
x8

## CORNER ROOF TUBE ASSEMBLY:

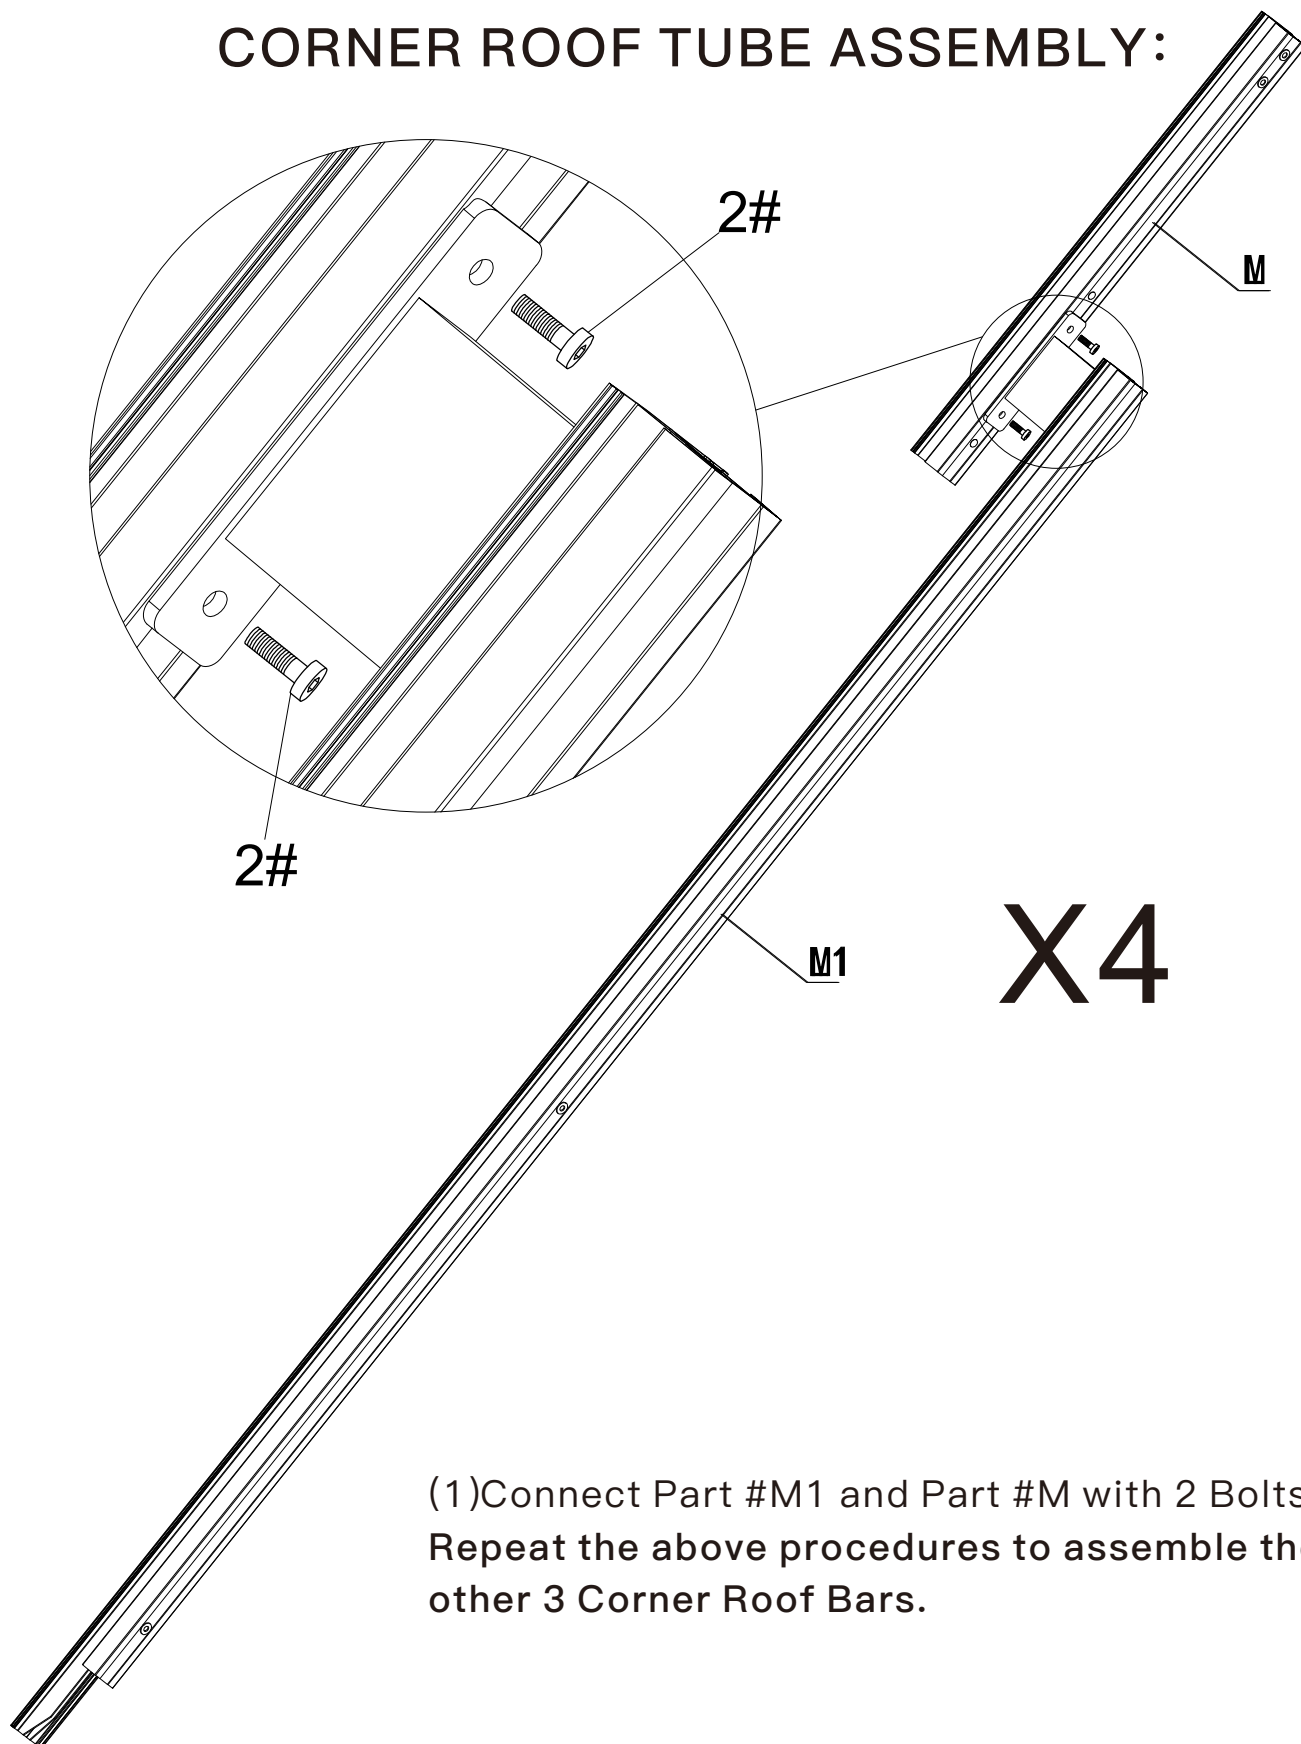


(1) Connect Part #M1 and Part #M with 2 Bolts #2.  
Repeat the above procedures to assemble the  
other 3 Corner Roof Bars.




J (x1)


## CORNER ROOF TUBE AND INSIDE ROOF CONNECTOR ASSEMBLY:

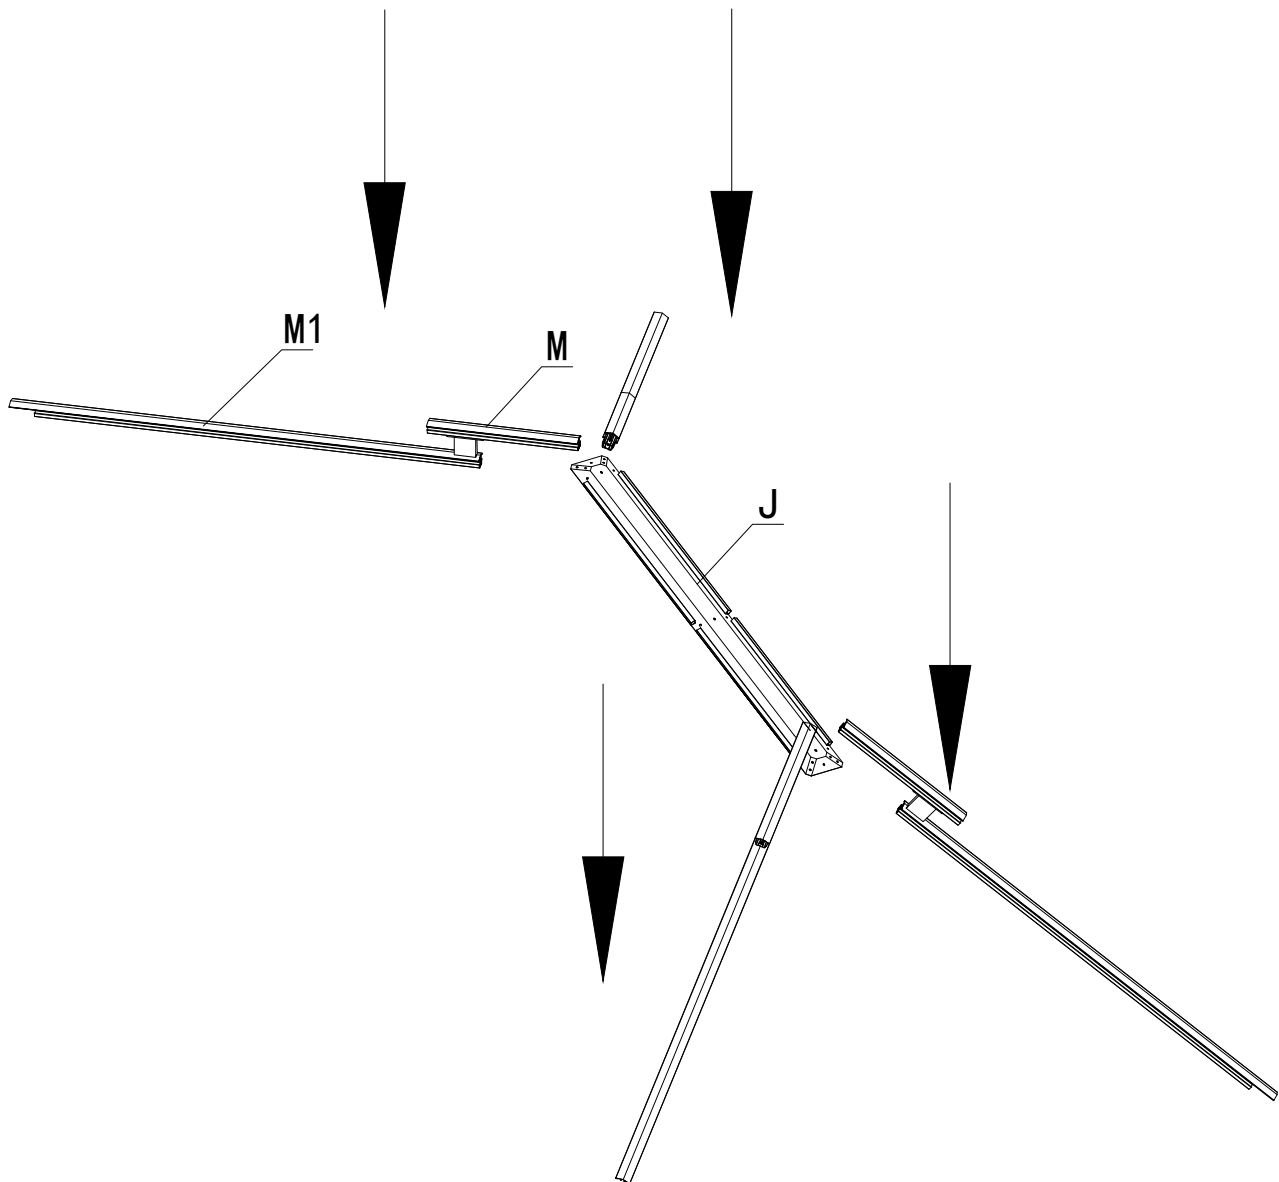






Place 4 Corner Roof Tubes on the 4 corners of Inside Roof Cover #D1,secure with 8 Bolts #1 (from bottom to top).

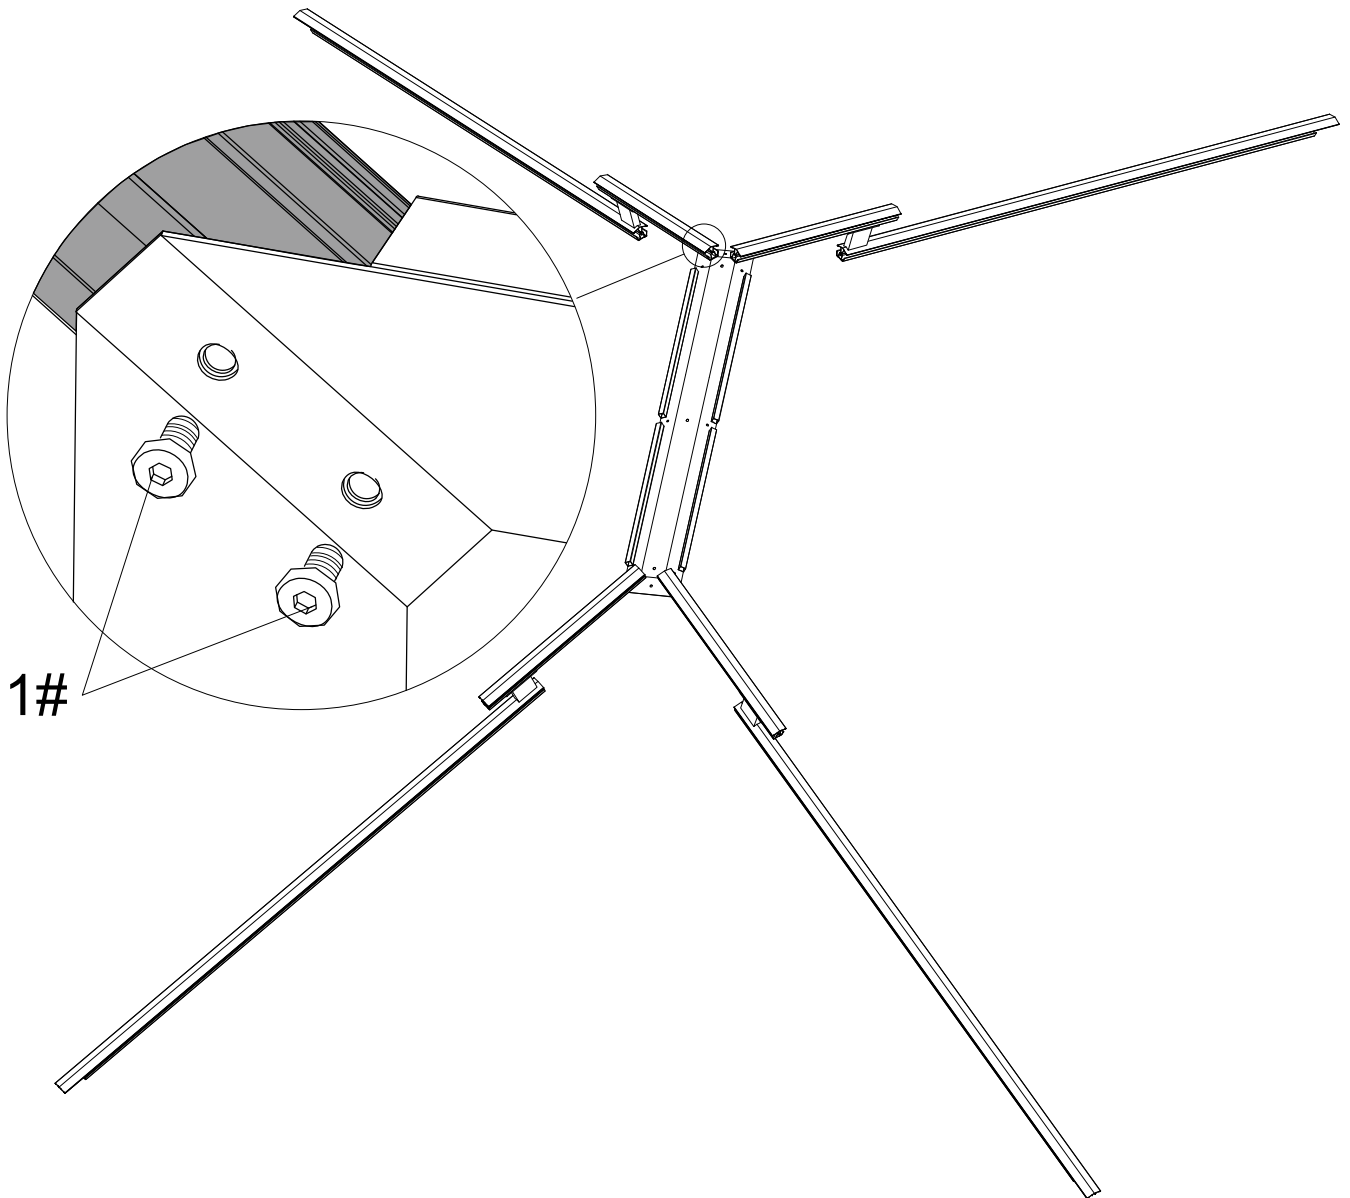


Lift 4 corner roof Tubes and inside roof connector to the top of the frame.(You may need 2 people and 2 ladder).

1#  
×4

Secure with 4 Bolts #1.

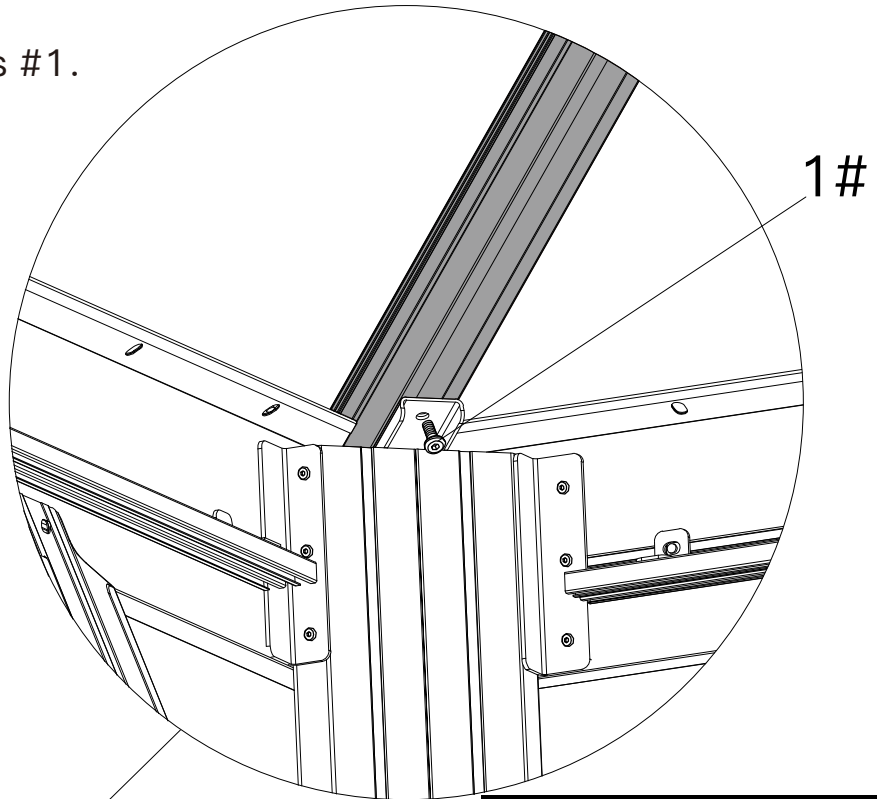


**INSIDE VIEW**

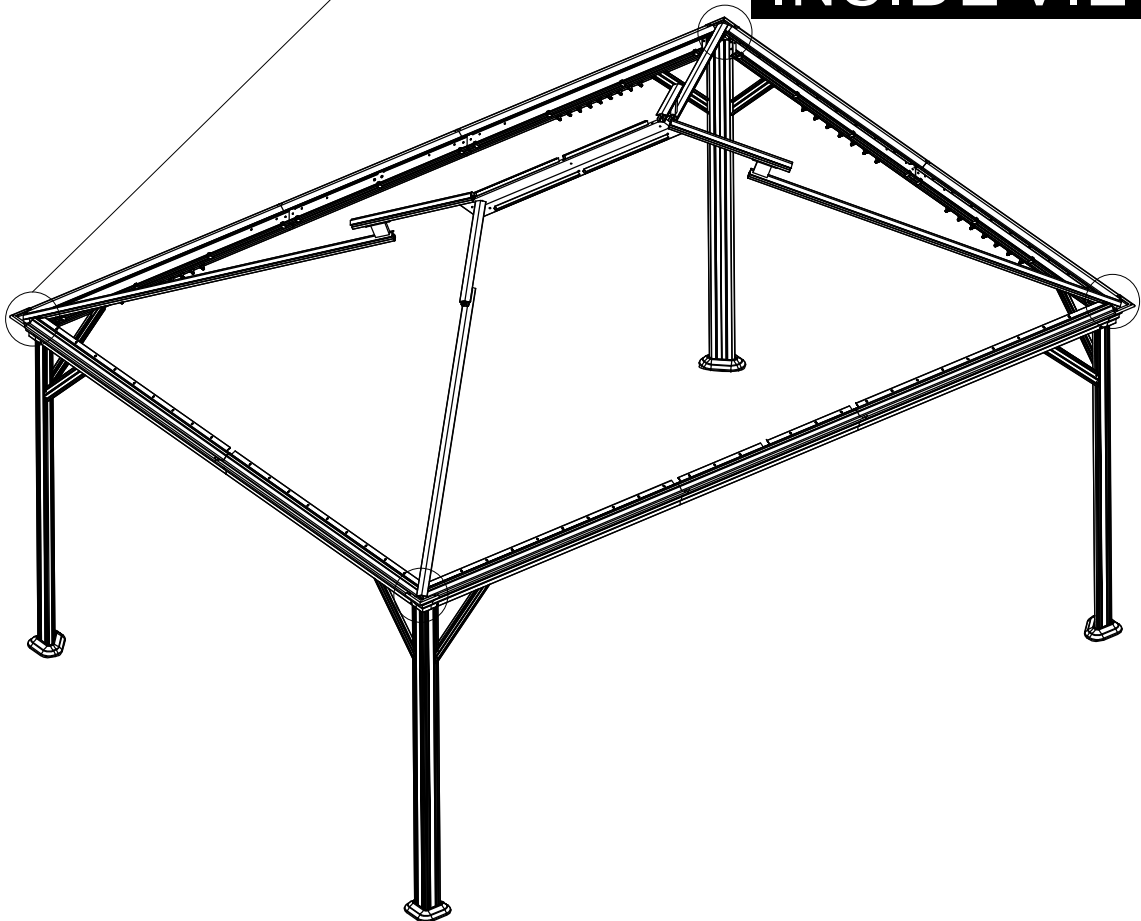





Check the the frame as pictures below shows.

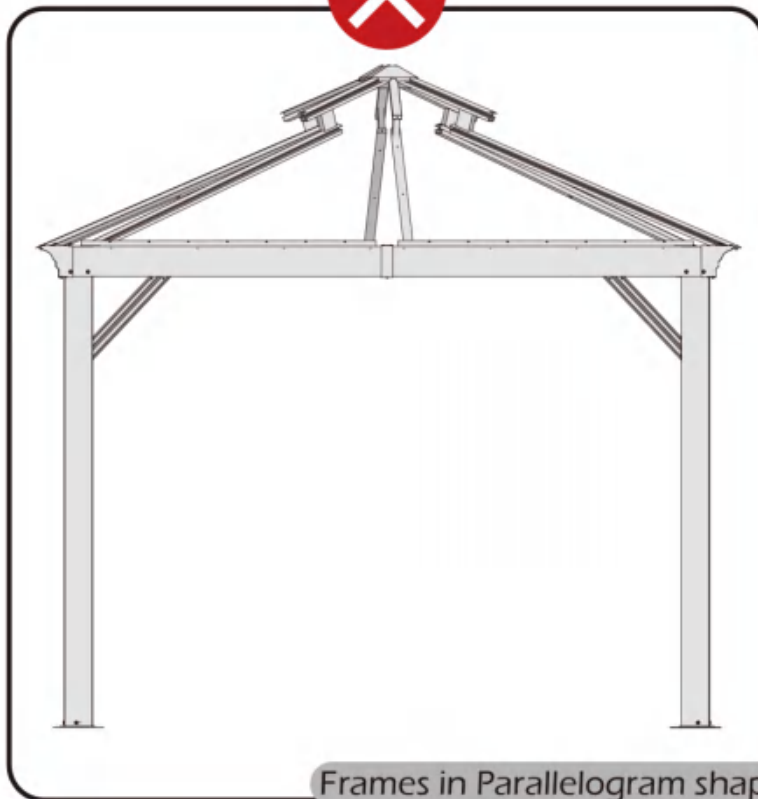

Frames in Parallelogram shape

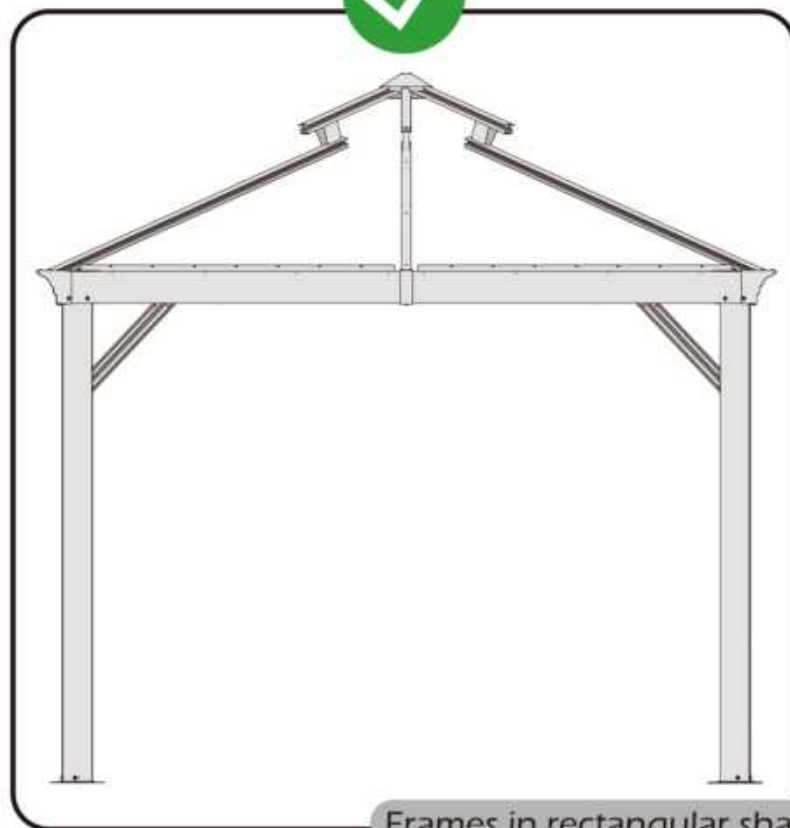

Frames in rectangular shape



O (x1)






O1 (x2)



O2 (x2)

## PLASTIC BAR ASSEMBLY:

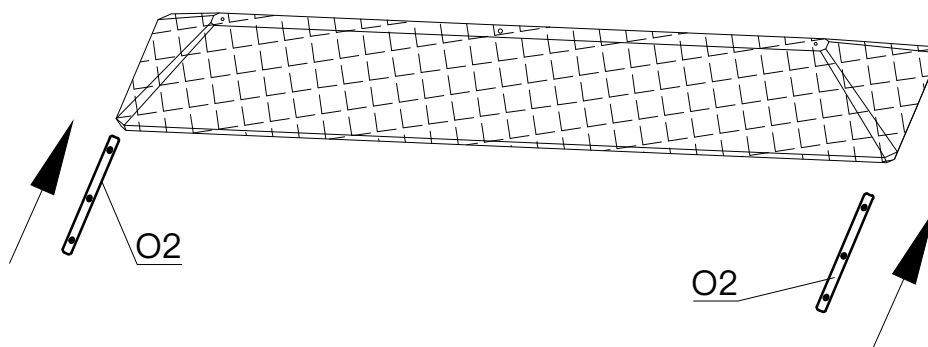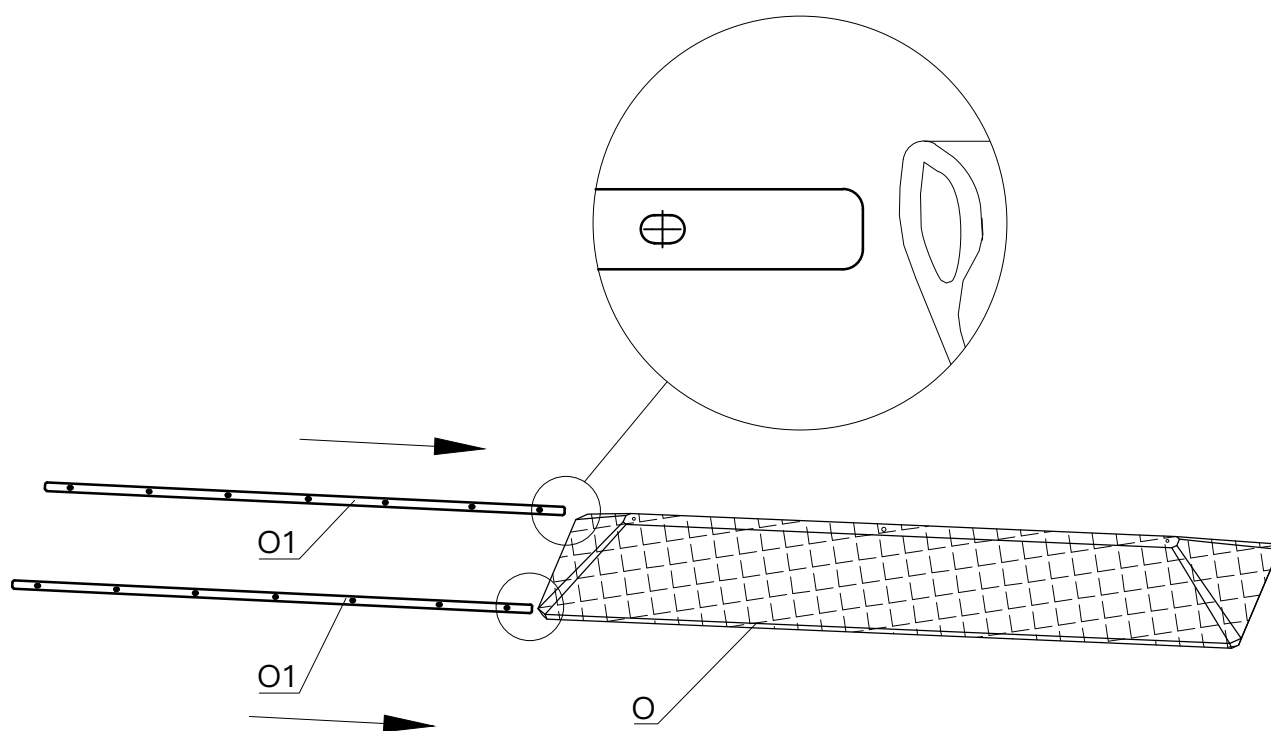





E (x1)


## OUTSIDE ROOF COVER AND MESH ASSEMBLY :

- (1) Place the Outside Roof Cover on the inside Roof Cover.
- (2) Align the holes and use 3 Hooks #R1 to secure Mesh #O to the inside Roof Cover (From Bottom to Top).

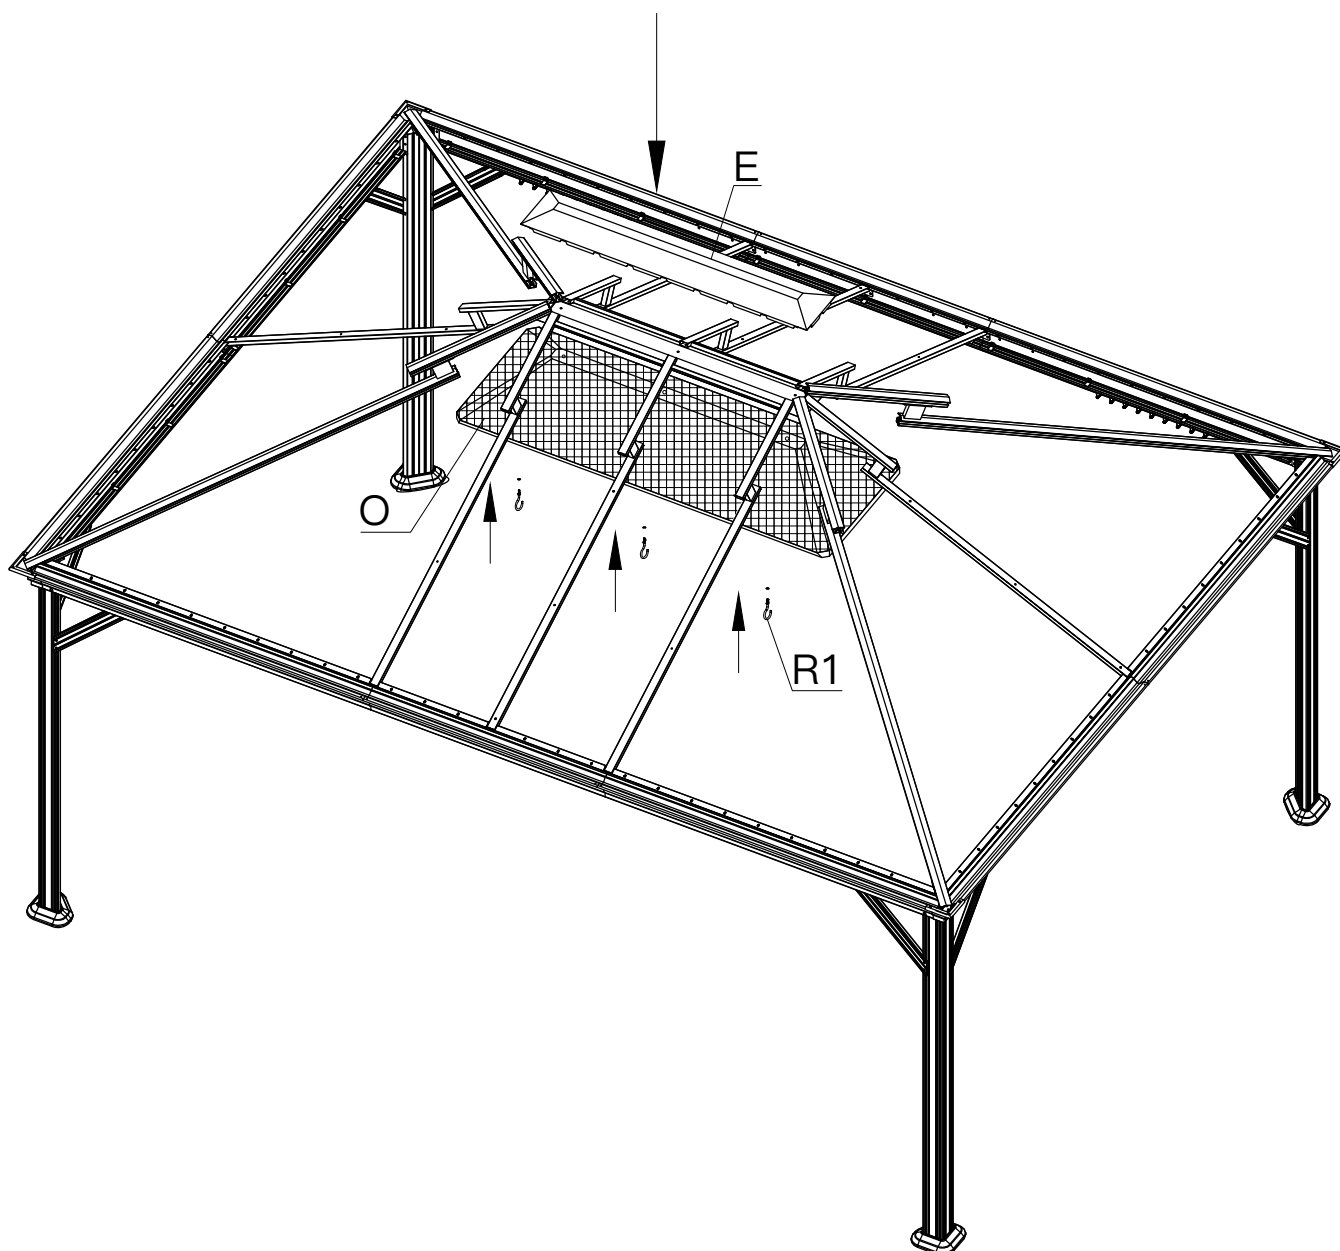


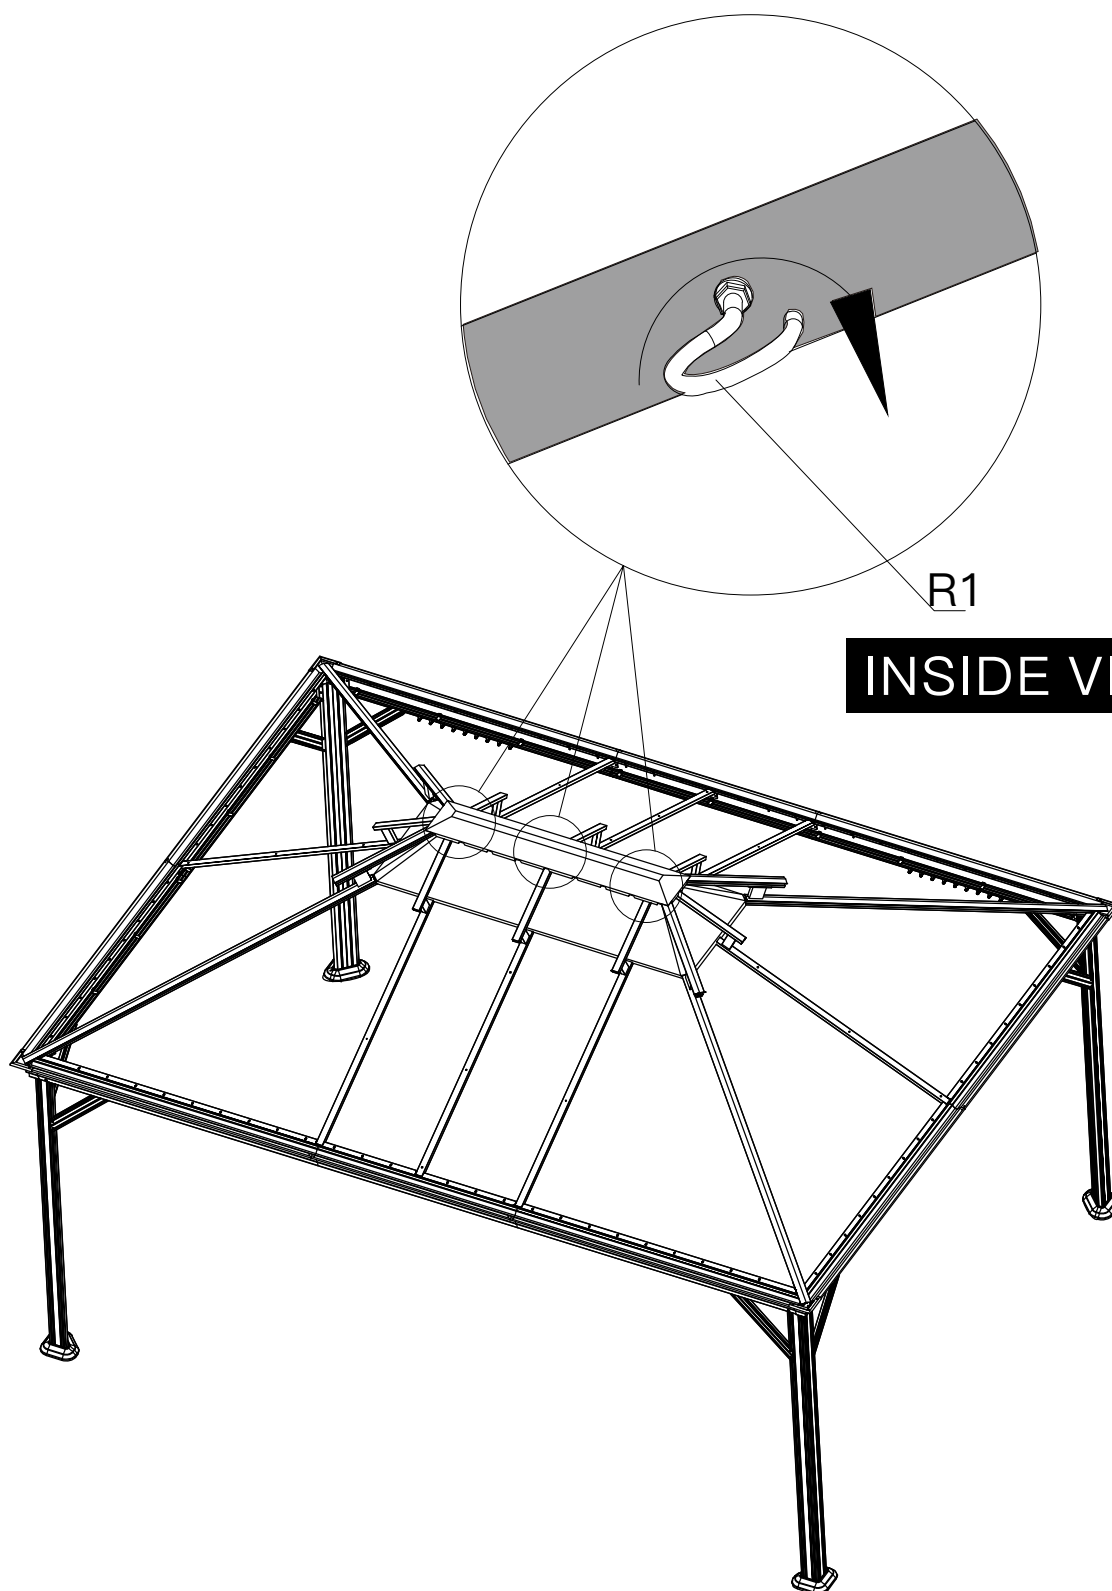



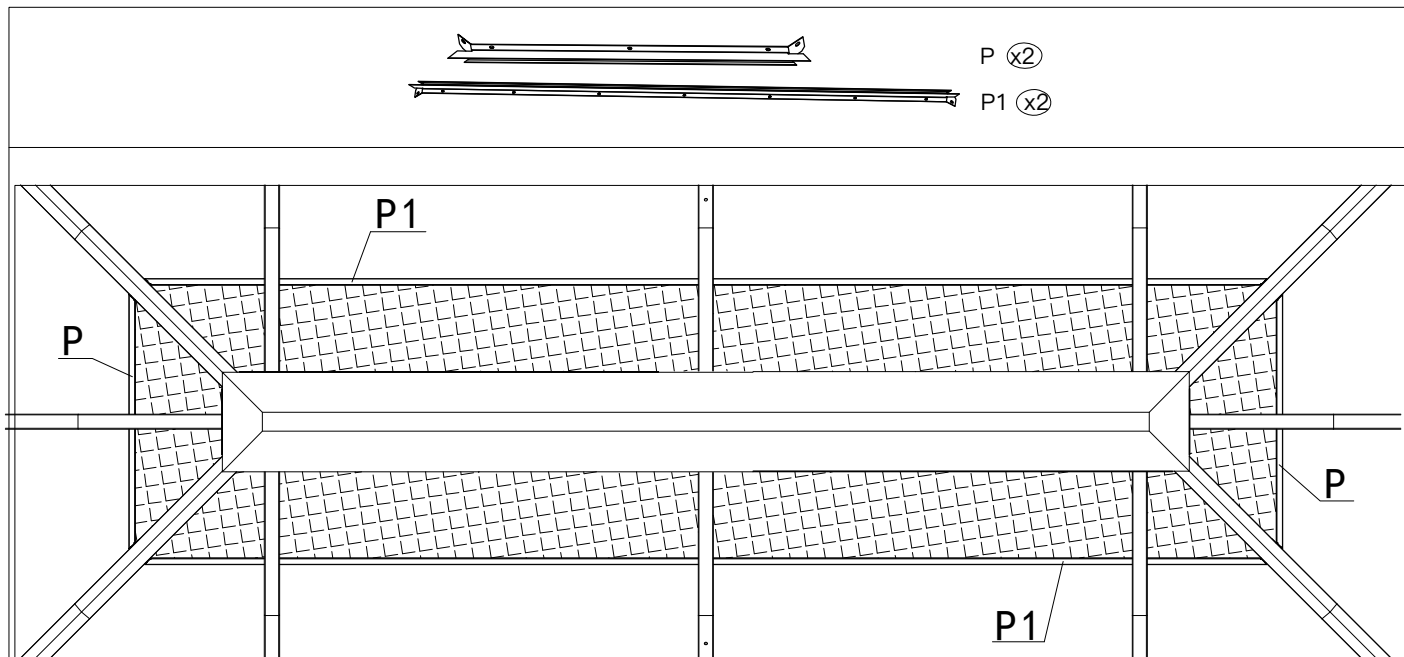


**TOP VIEW**



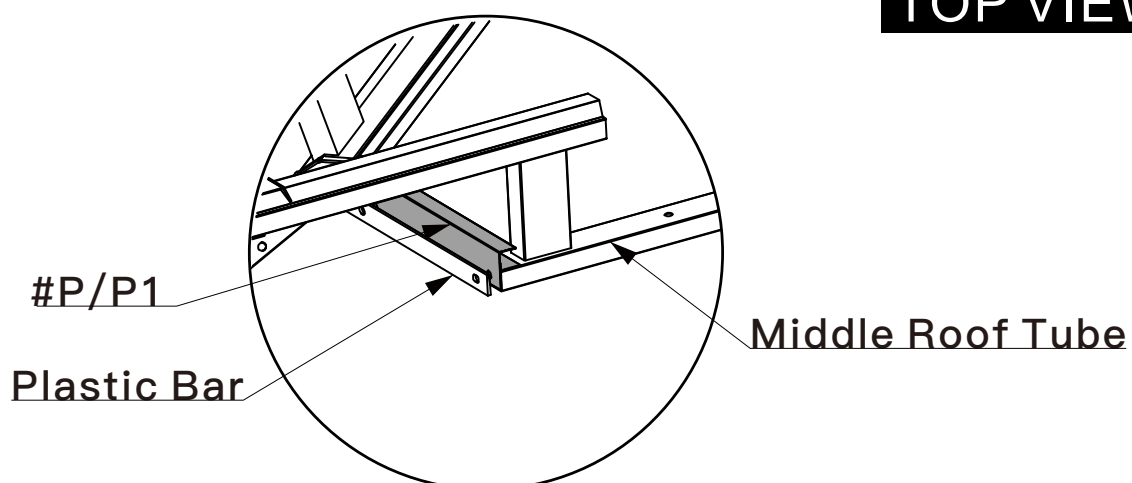


**INSIDE VIEW**





Please do not pull plastic bar out when installing it with #P & P1 on the middle roof tube.




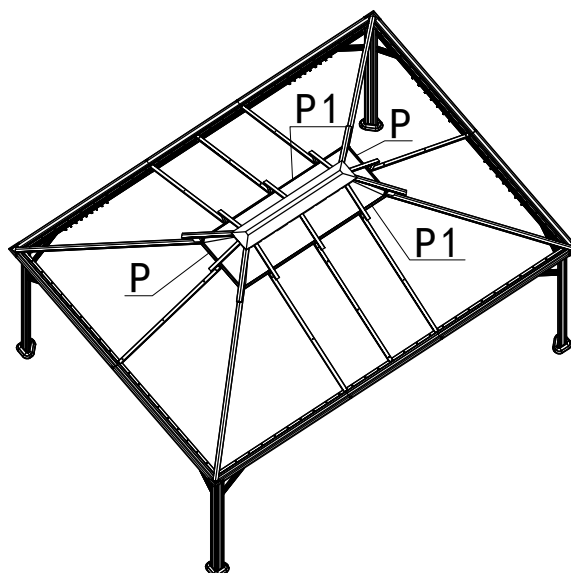




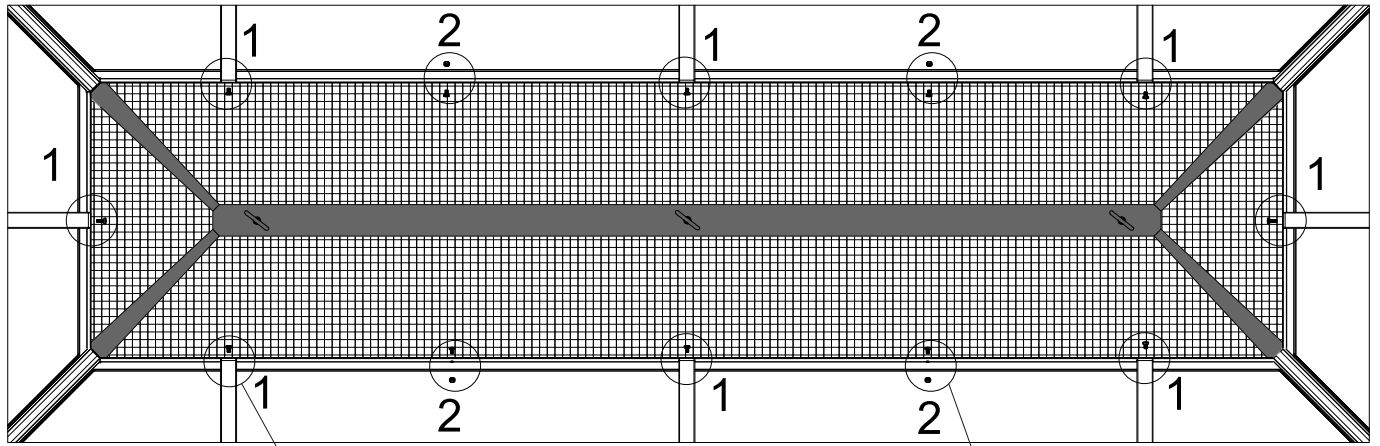




**BOTTOM VIEW**


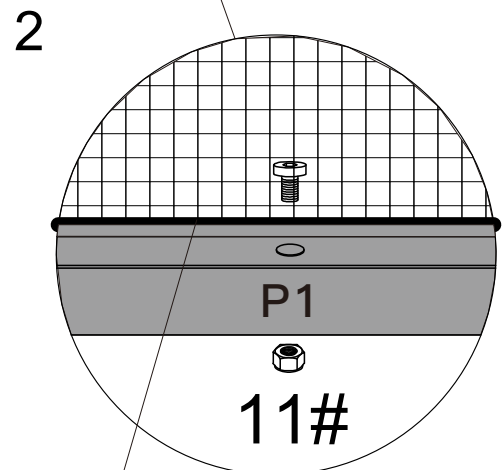
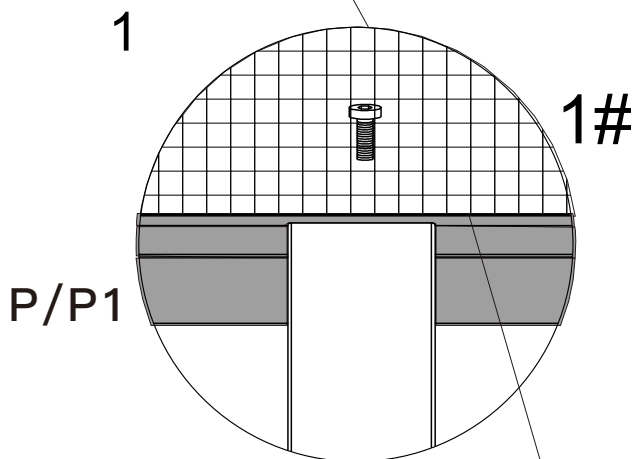


Plastic Bar  
on the mesh

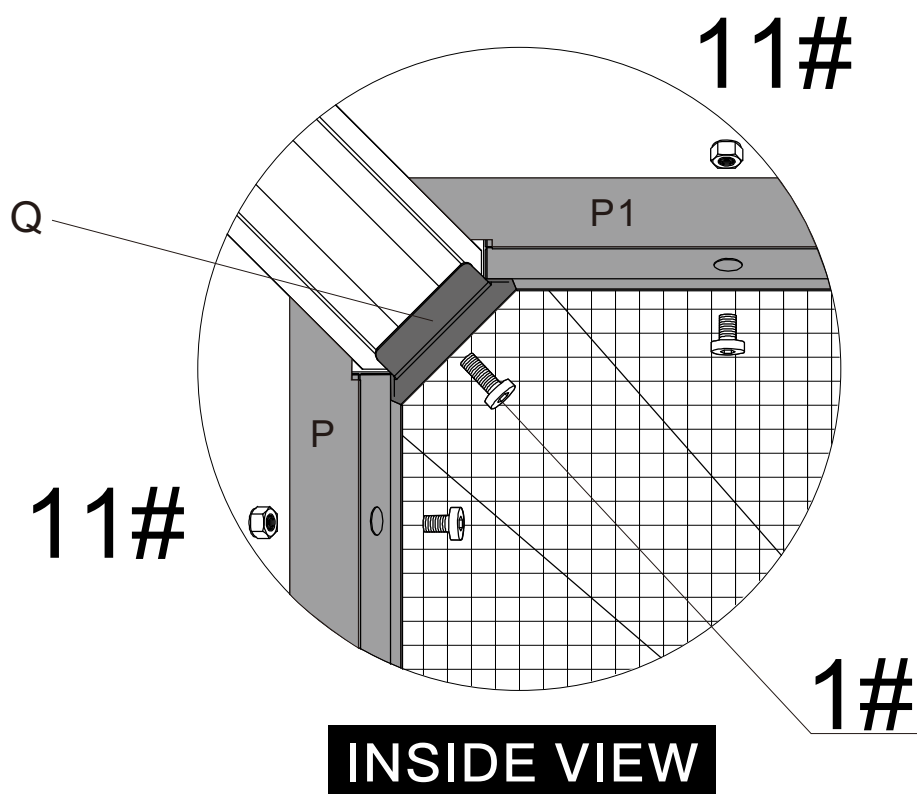
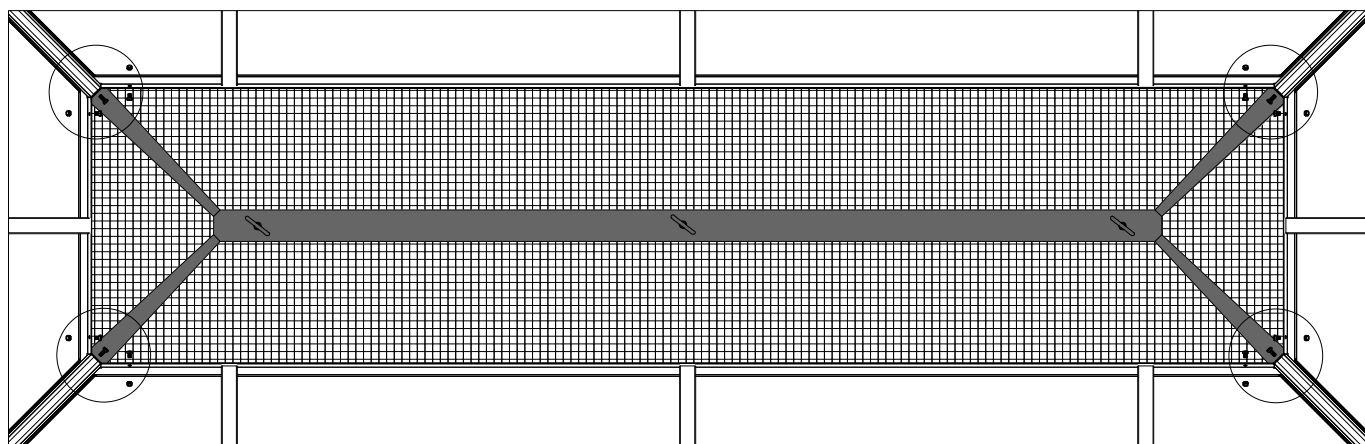








Remove the protective film of the panels before installing the roofing panels,

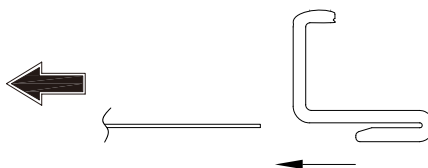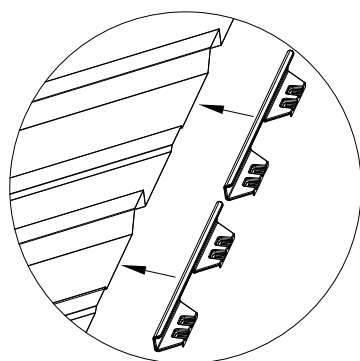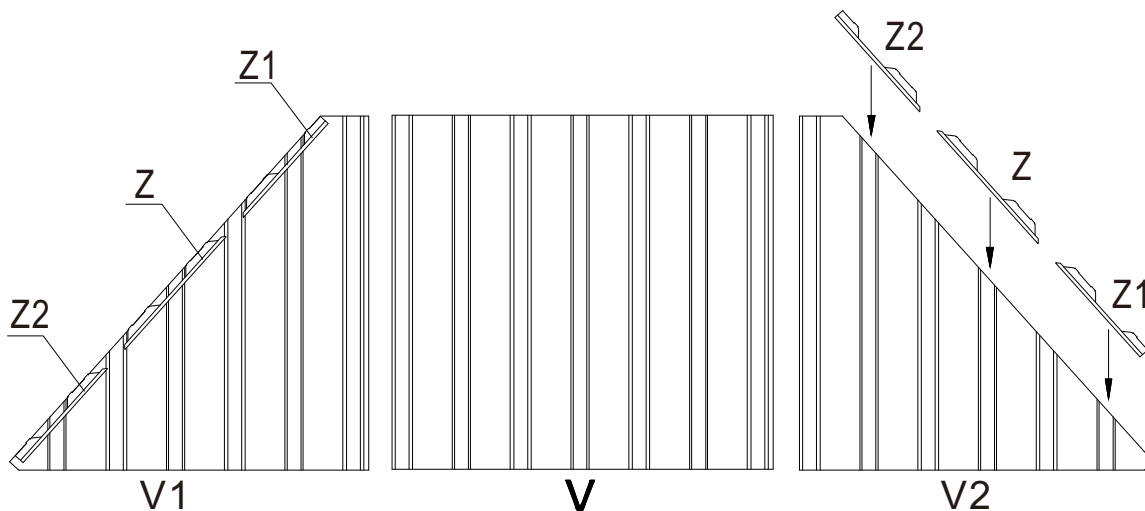


Section View

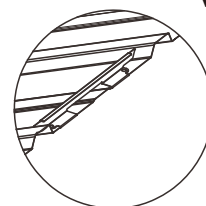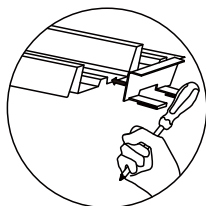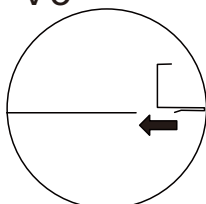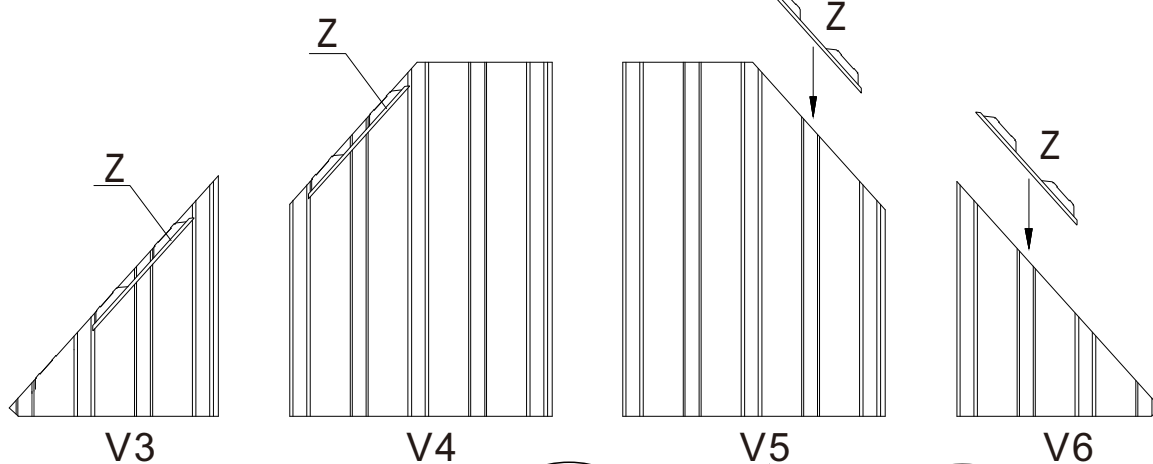


Attach Part #Z,#Z1,#Z2 by lightly tapping with screwdriver.








## SMALL ROOF PANEL AND FINISHING BAR ASSEMBLY:

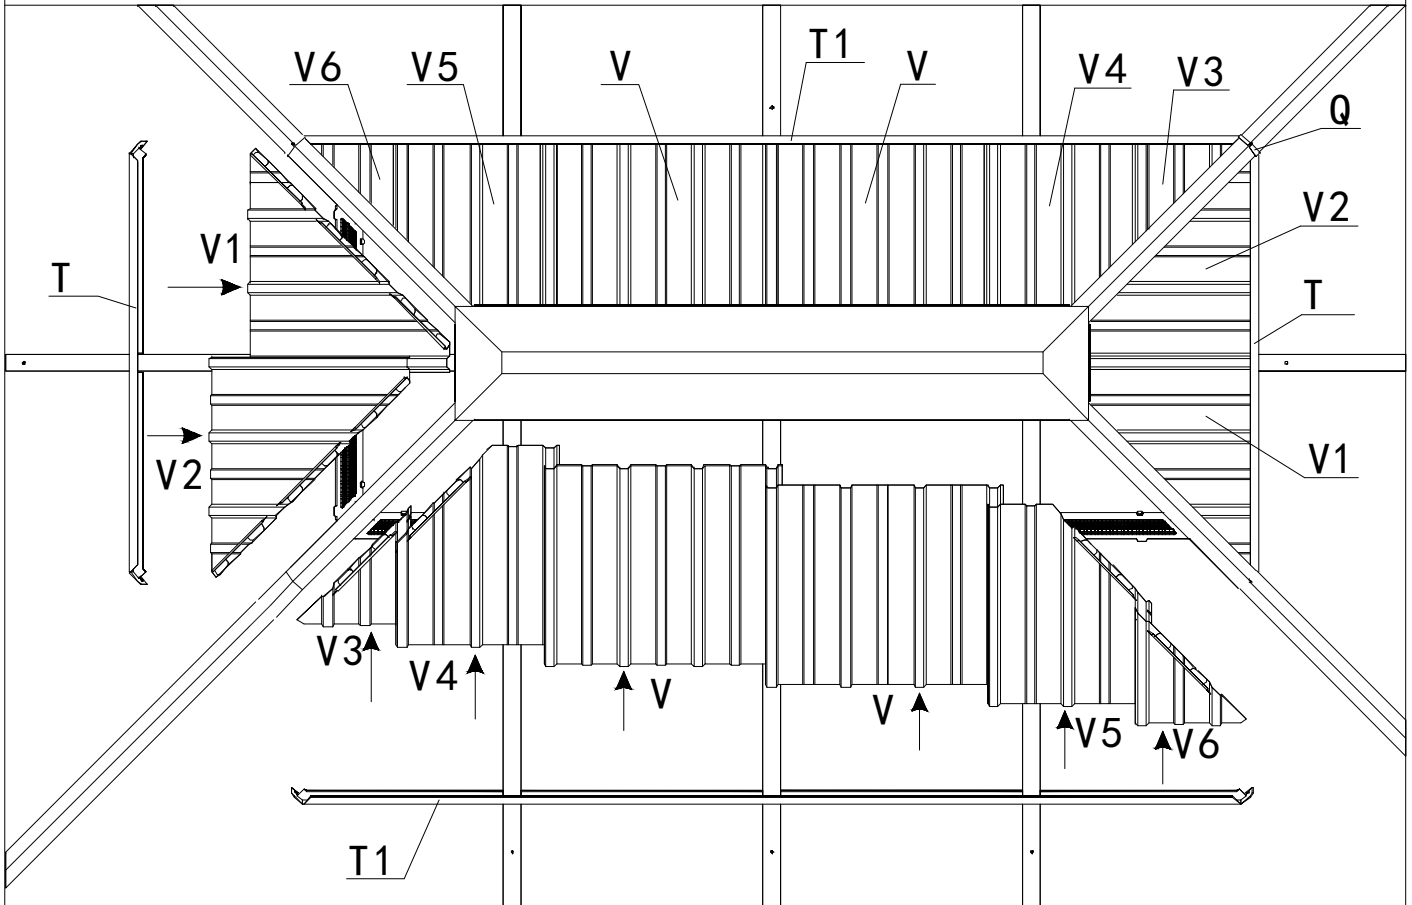


If you can't install #V, push the Outside Roof Cover up and try to insert them again.

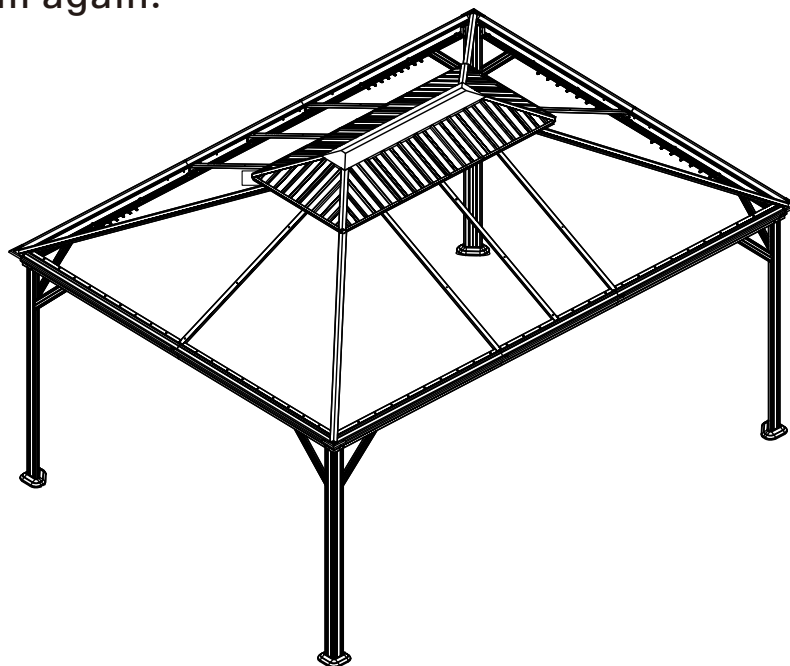

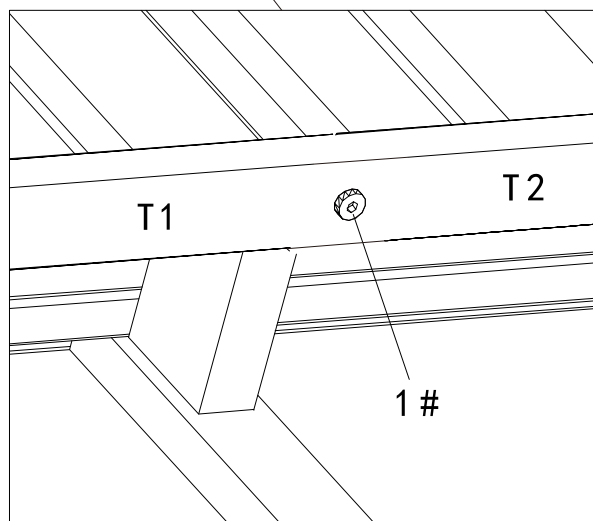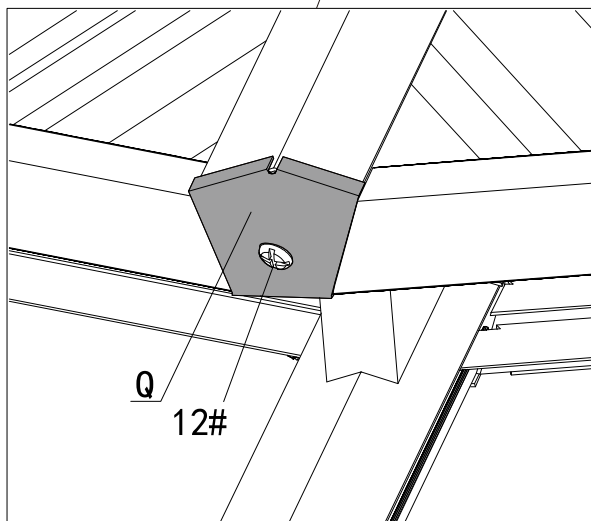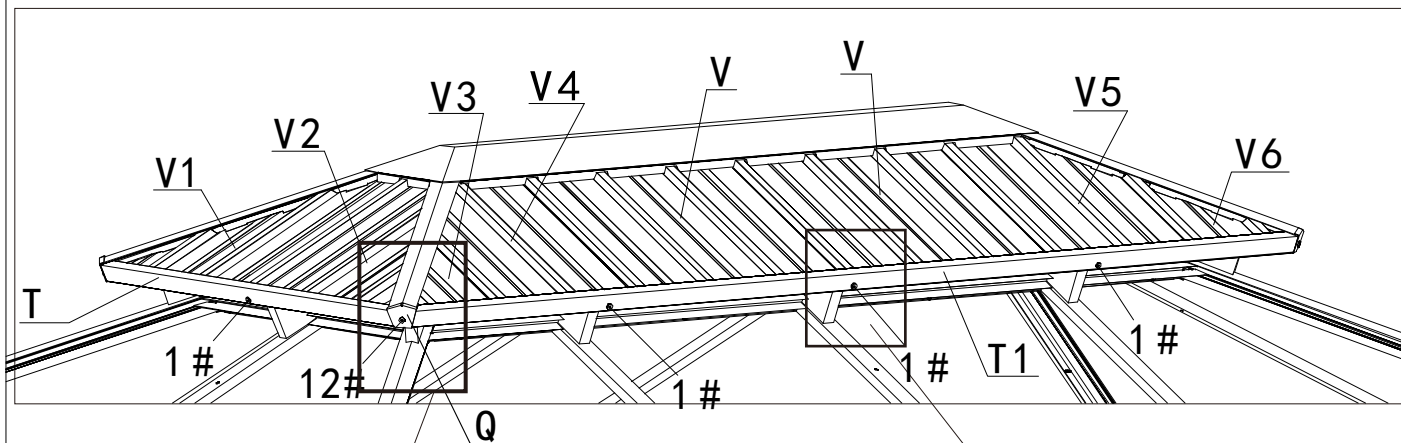










## SOLIDIFYING BAR ASSEMBLY:

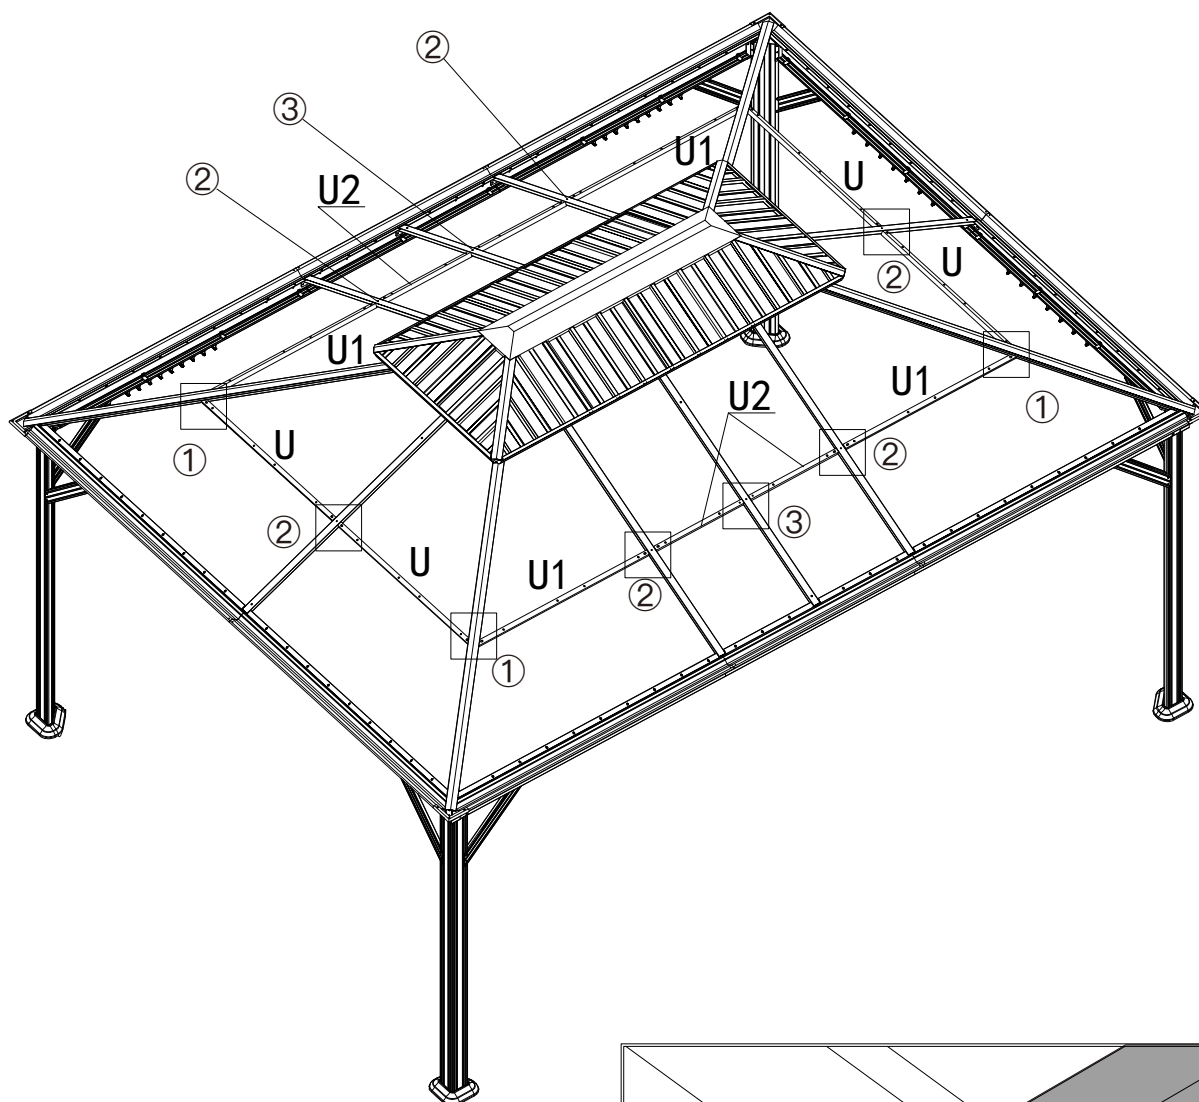



### INSIDE VIEW

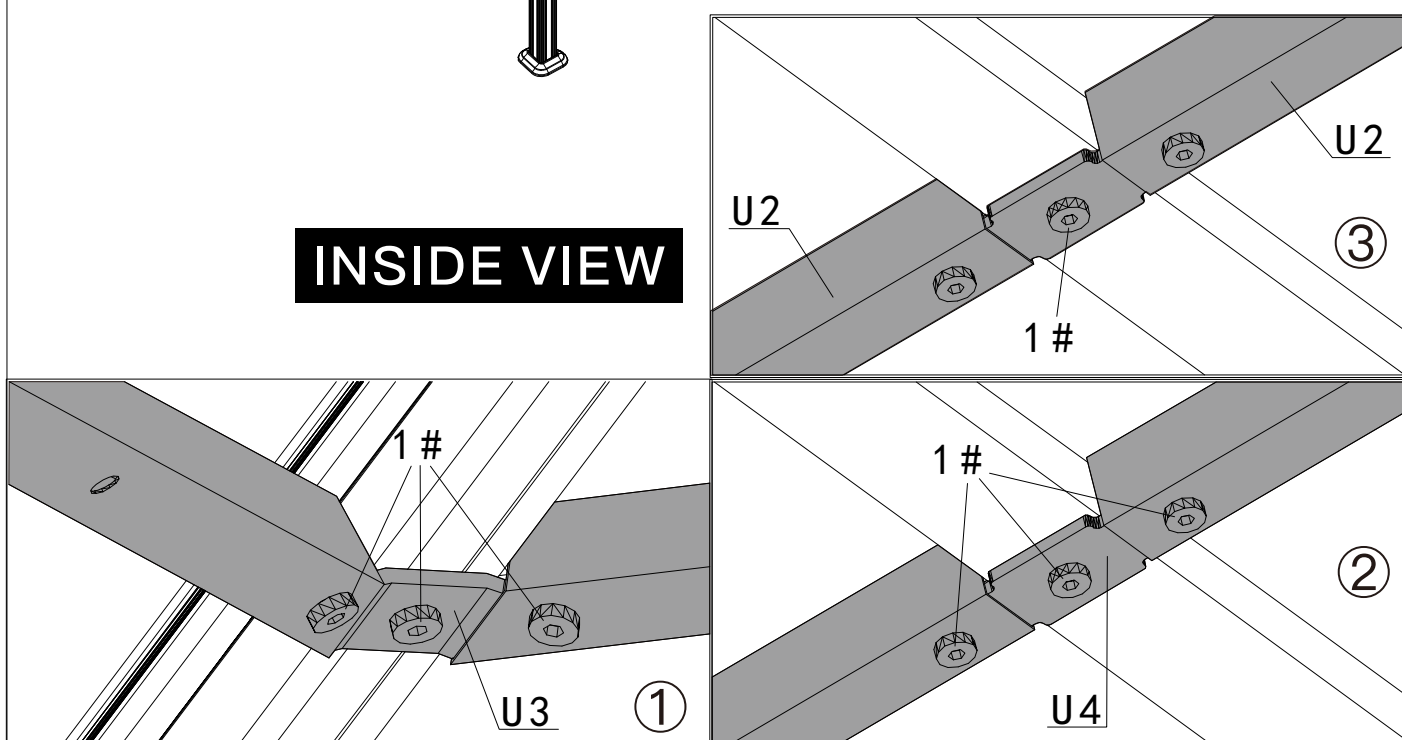

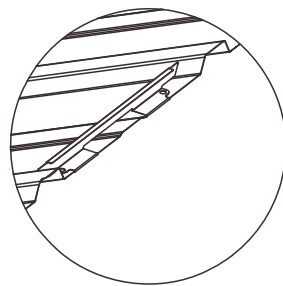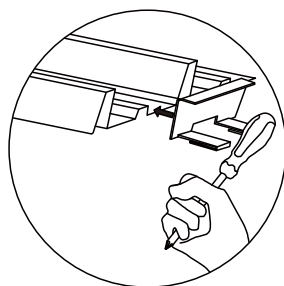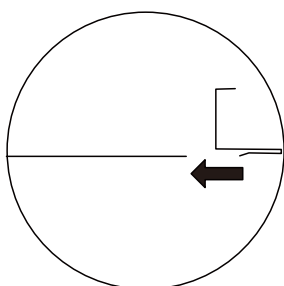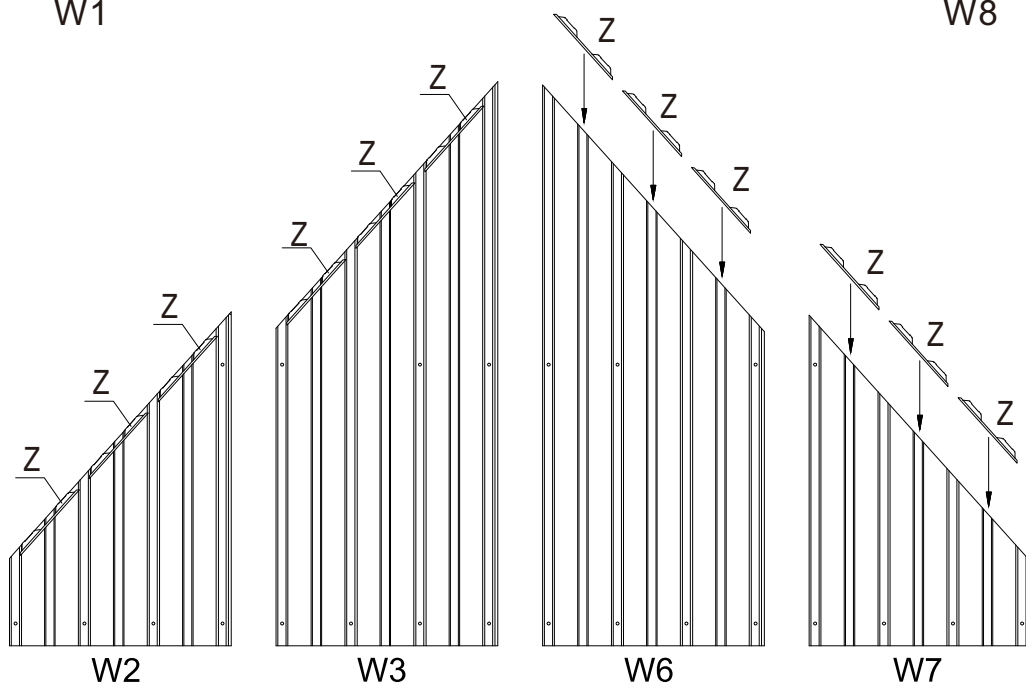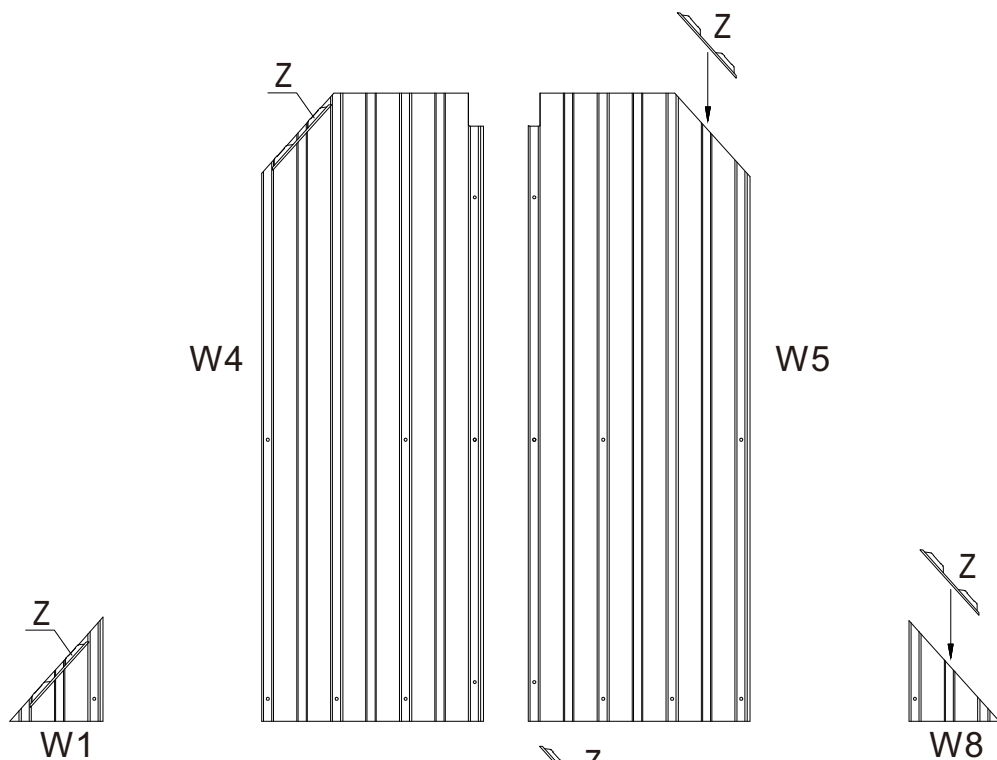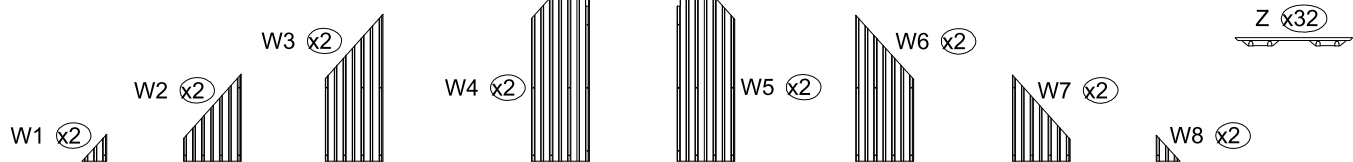


**Attach Part #Z by lightly tapping with screwdriver.**




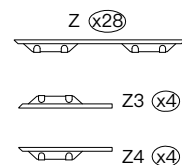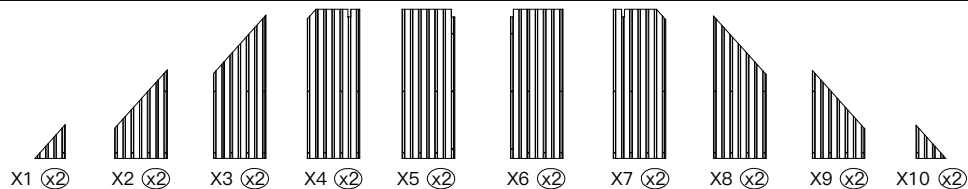


Z3

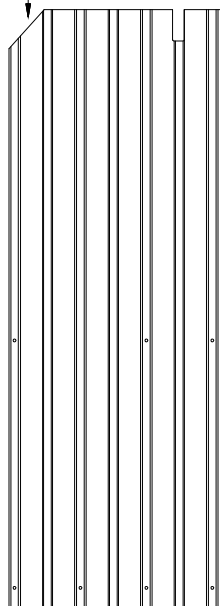


X4

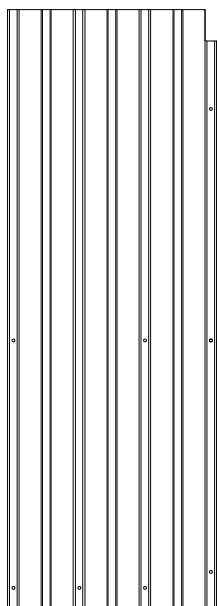


X5

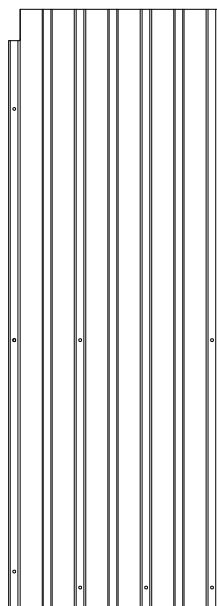


X6

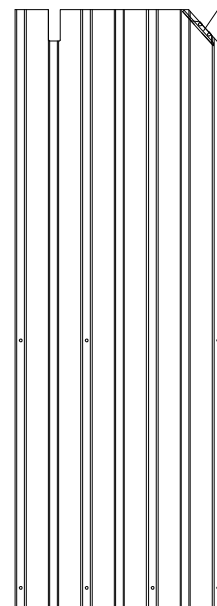


X7

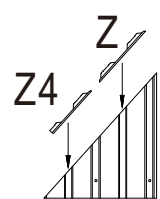


X1

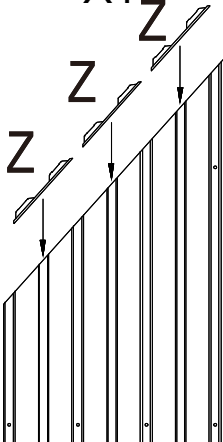


X2

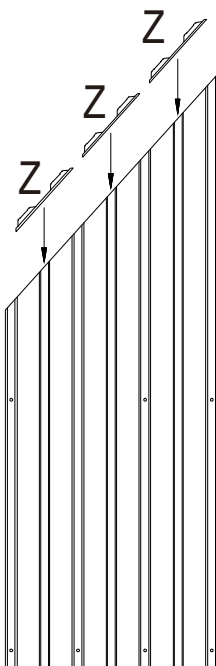


X3

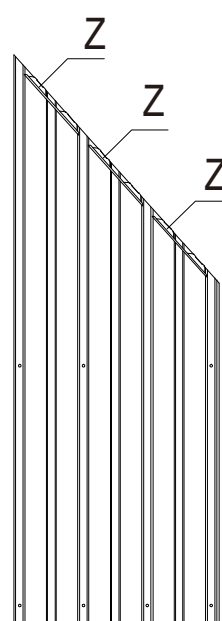

X8

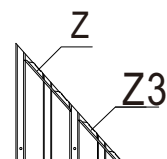


X10

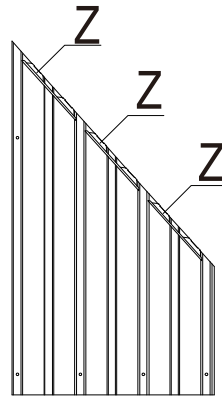

X9

Please install Clips #Z, Z3, Z4 in strict accordance with the instructions.

Install the Middle Panels (#X5, X6 or #W4,W5) first, then the small panels on the edge.

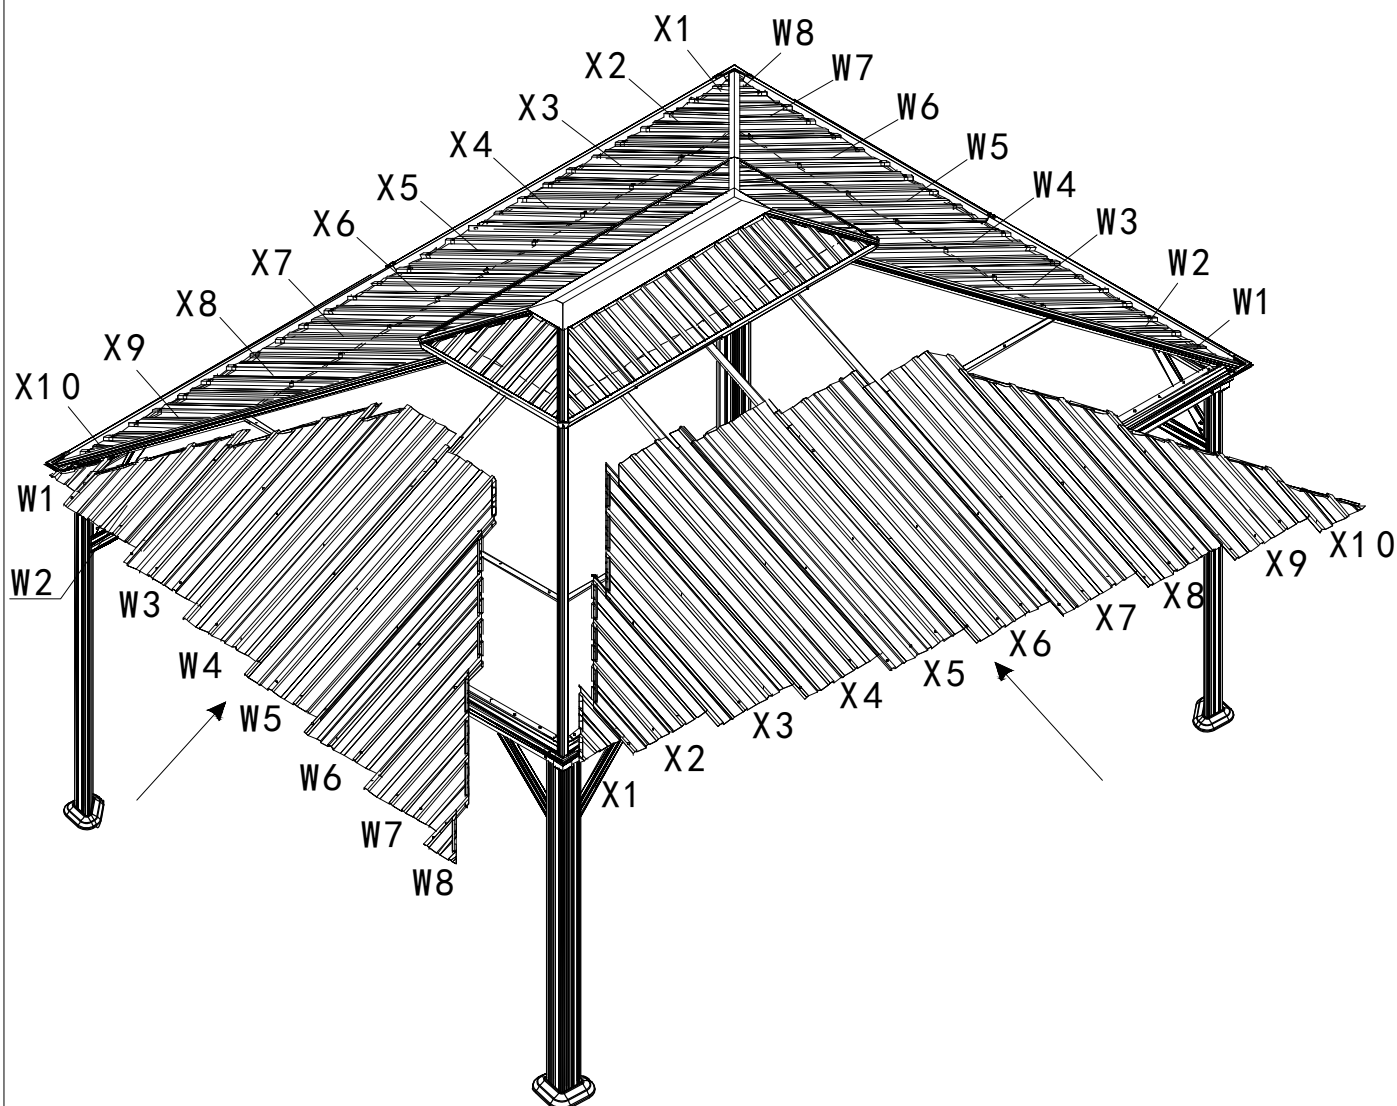

Remove the protective film of the panels before installing the roofing panels,



The Black Rubber #S should be assembled when installing the roof panels; please see the next page.






S x136

5#  
x84

6#  
x8


7#  
x40

10#  
x4

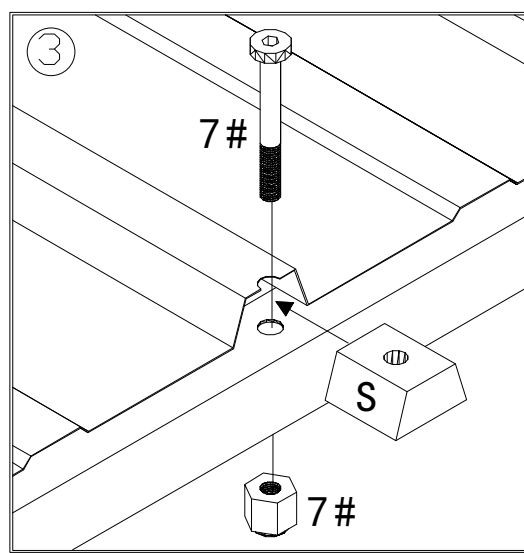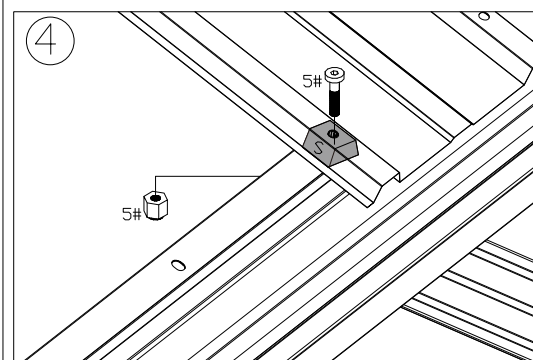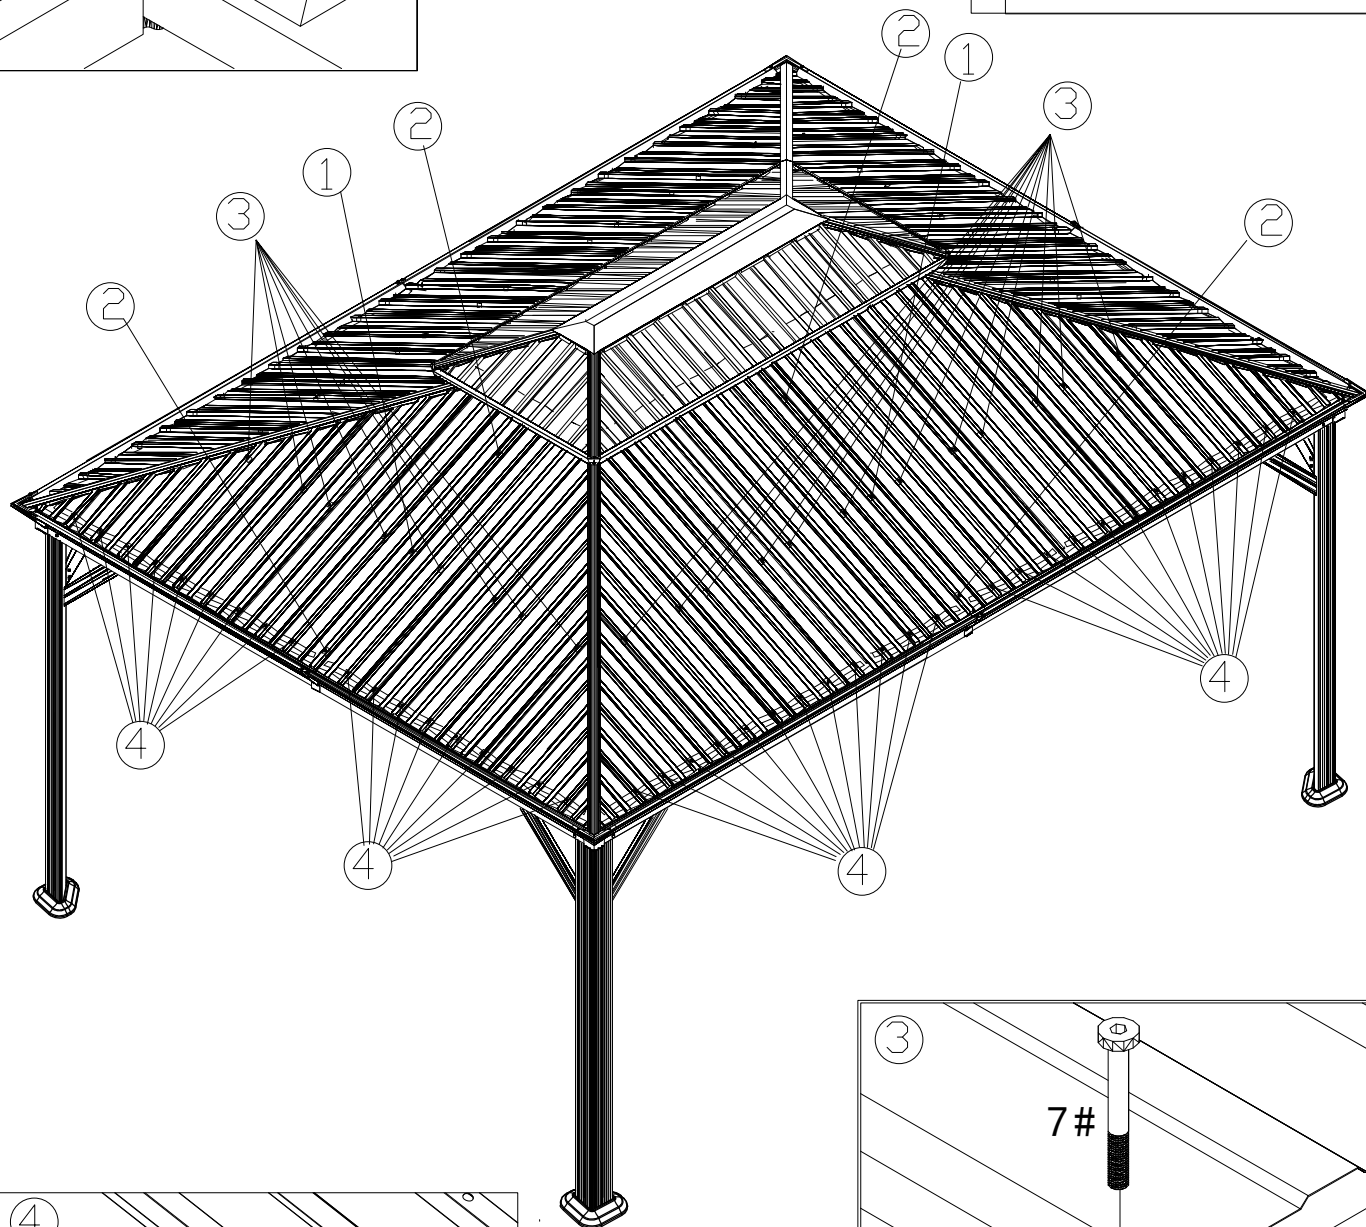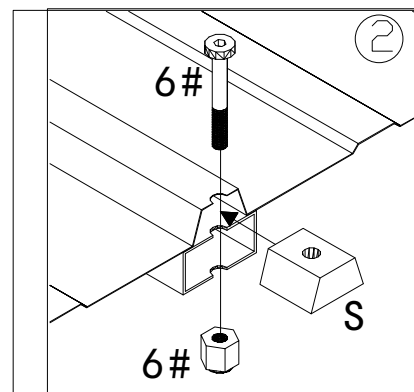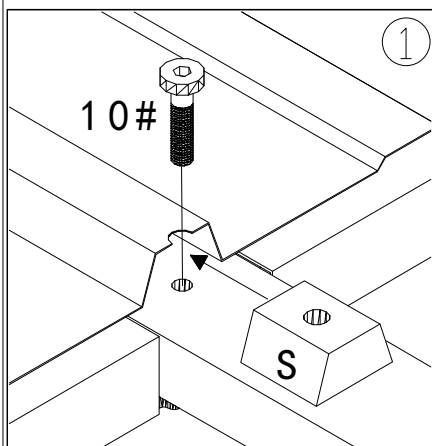

S x4





10#  
x4



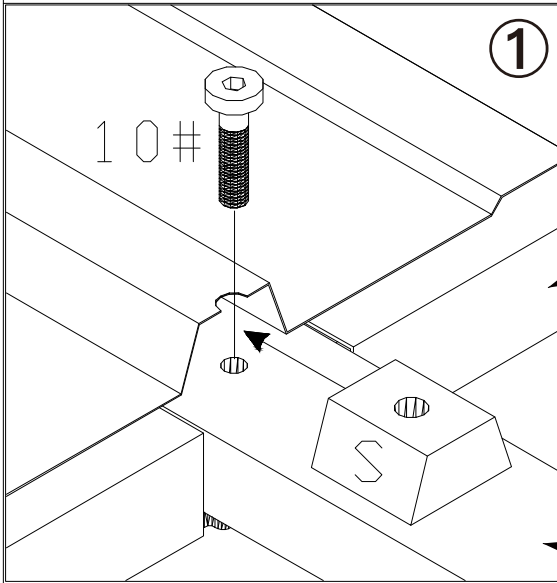


Solidifying Bar


Middle Roof Tube



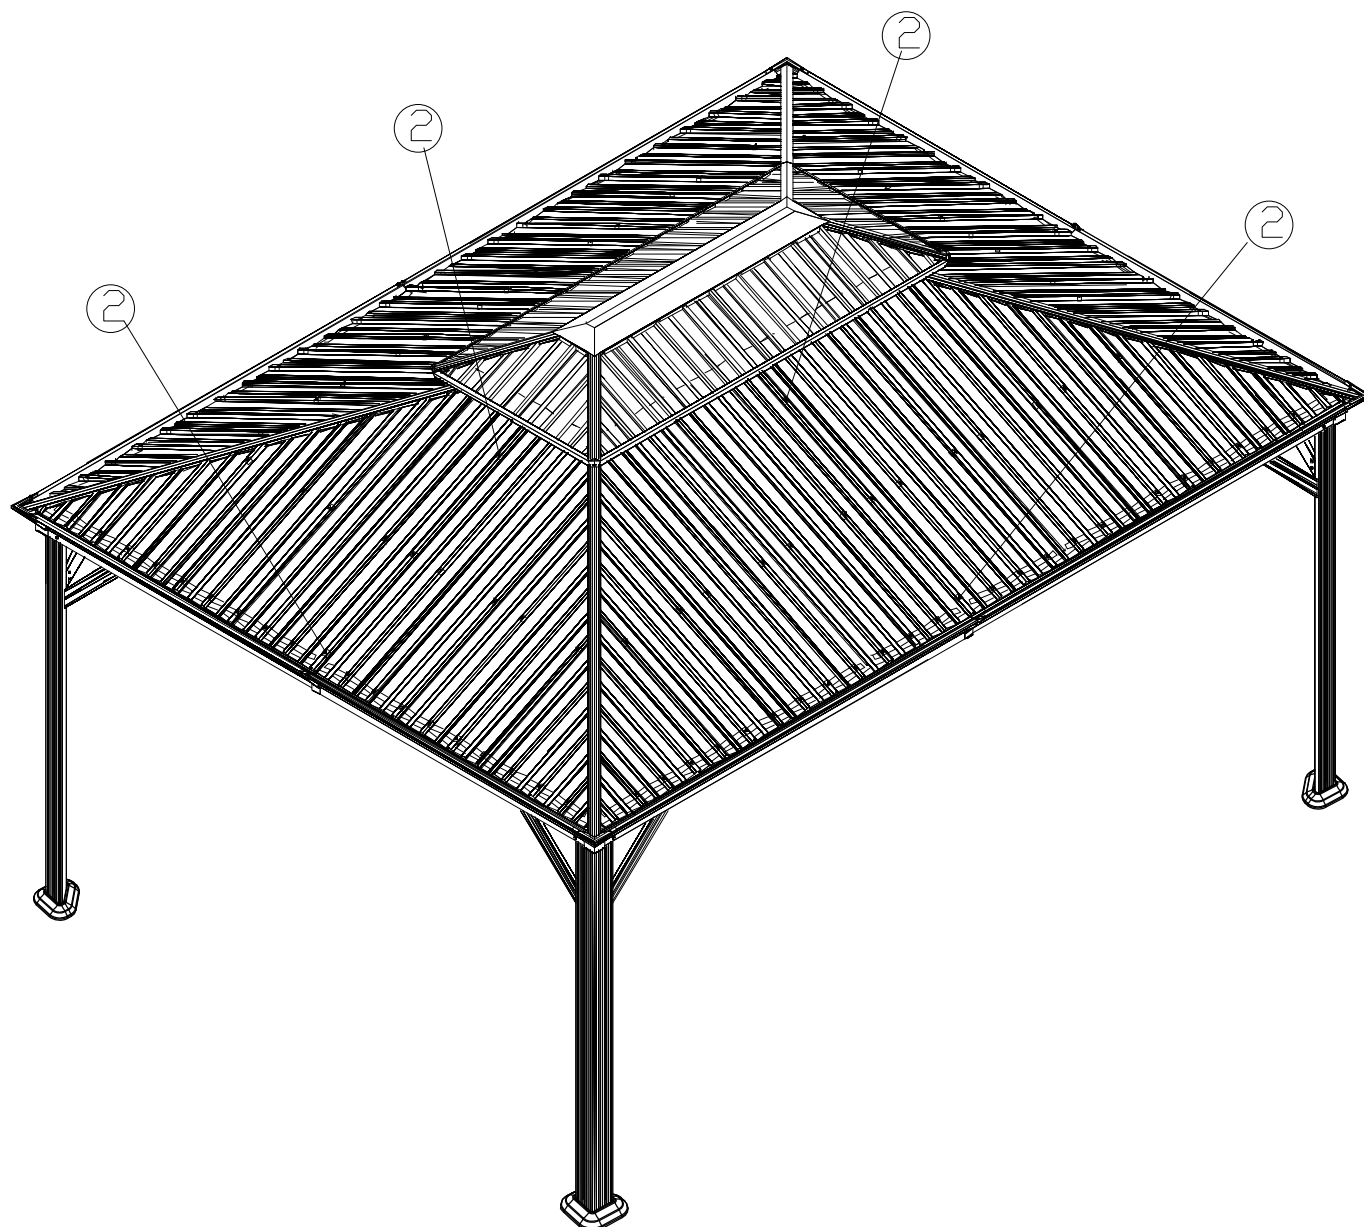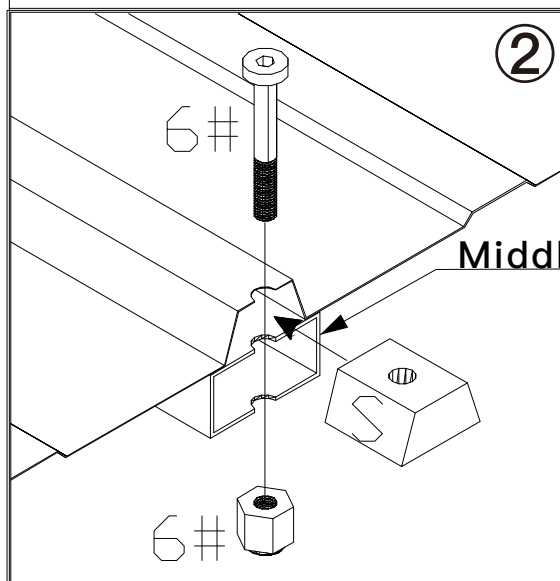


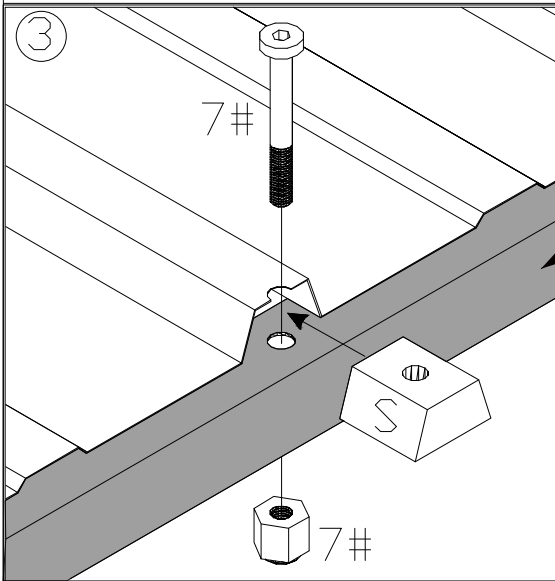


Solidifying Bar

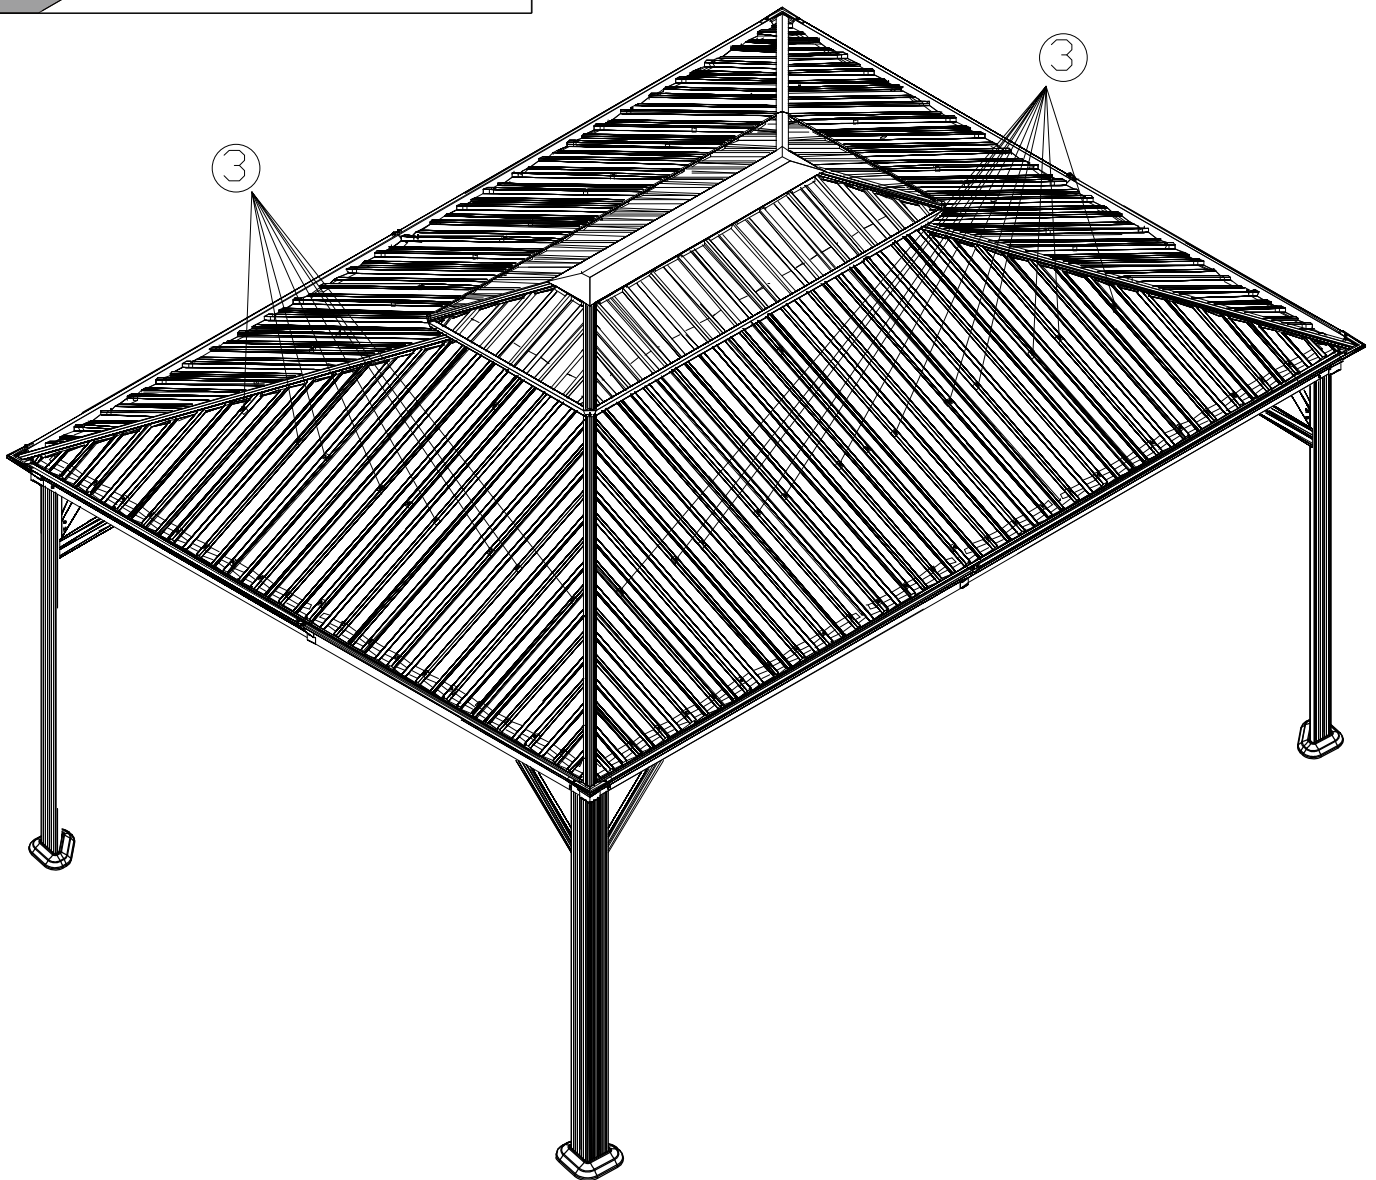



 S x84

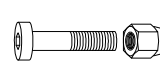 5#  
x84


④

Beam


5#

5#






Y (x4)







Yb (x4)




Y1 (x4)

# MOSQUITO NETTING AND SOLID SIDEWALL ASSEMBLY:

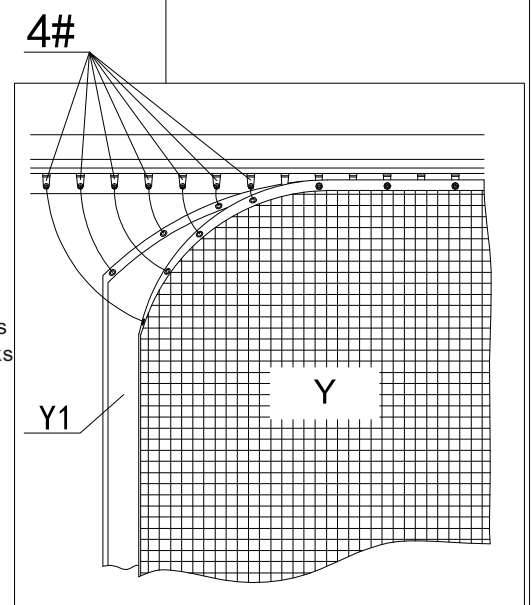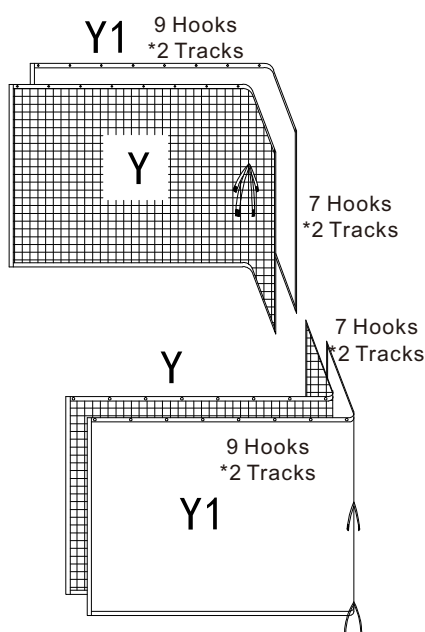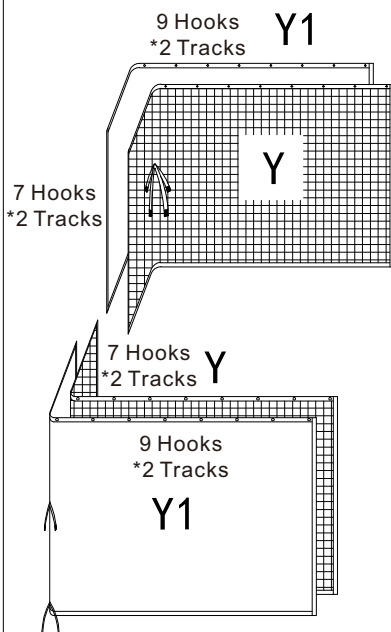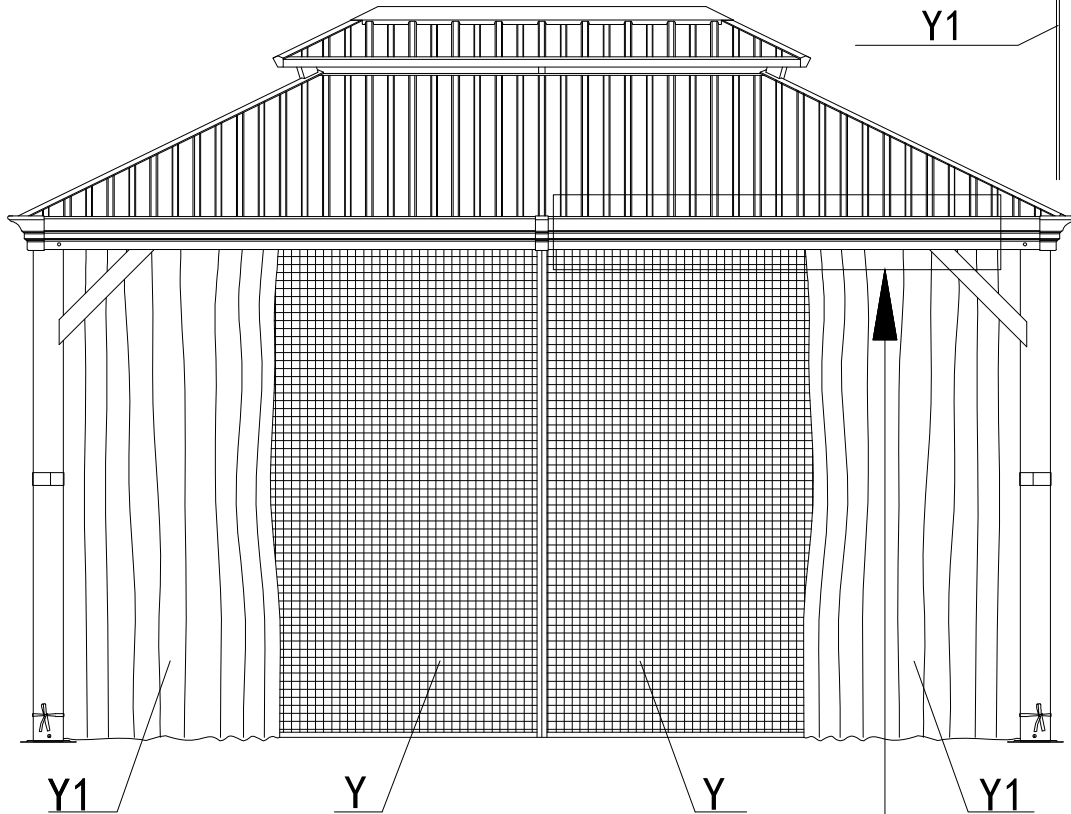





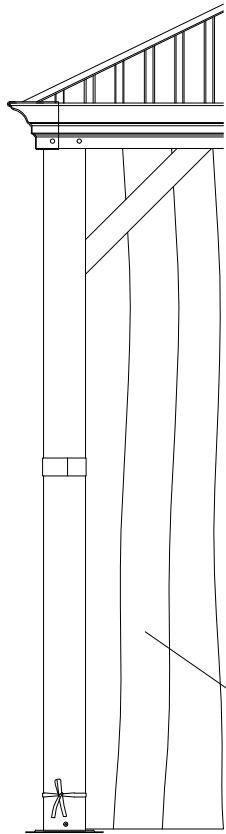

Y


Y1

Y1

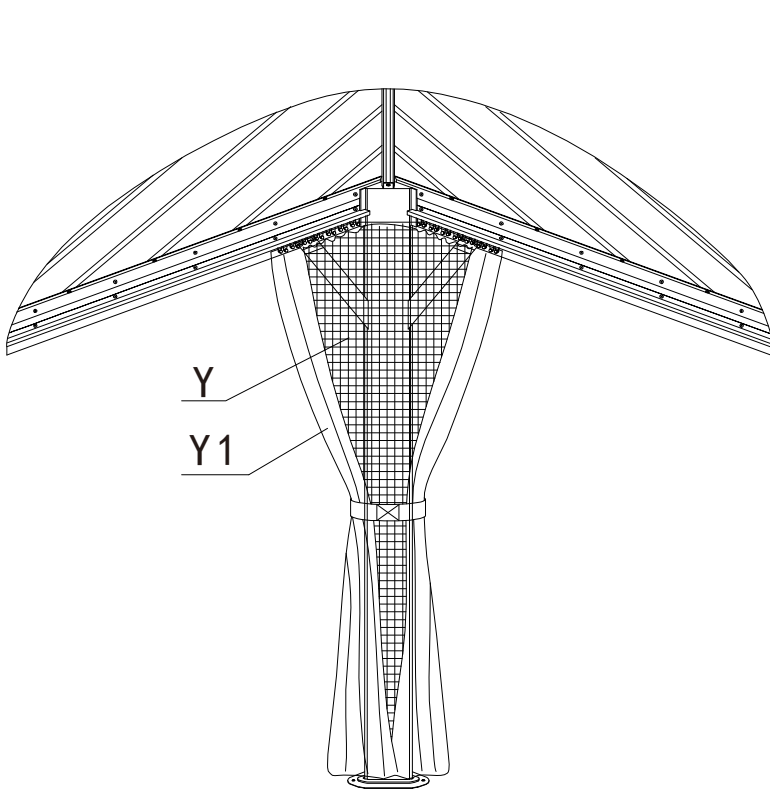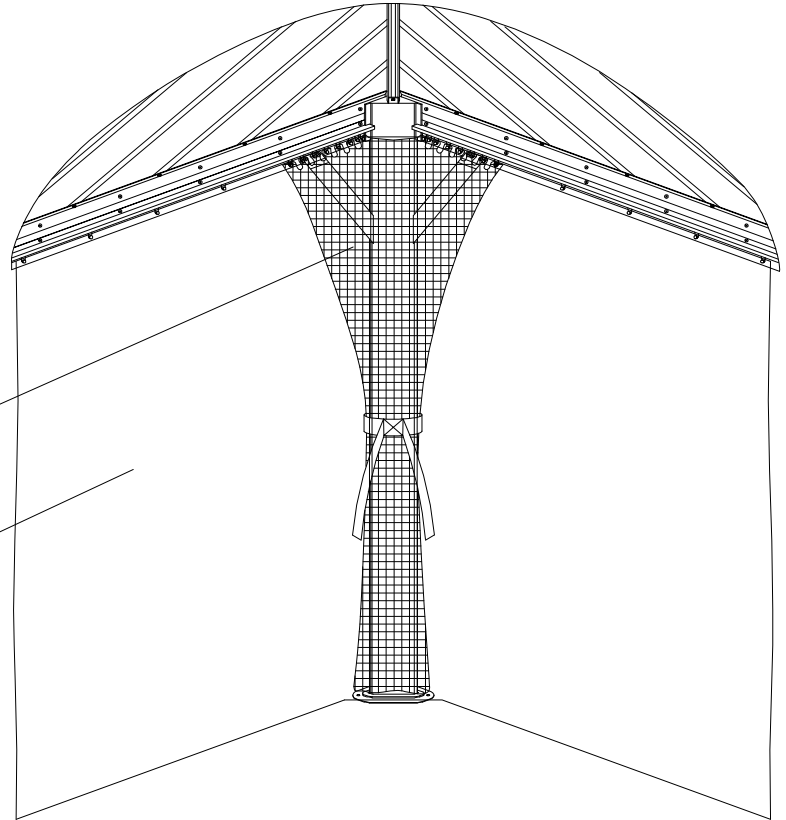

Y

Y1

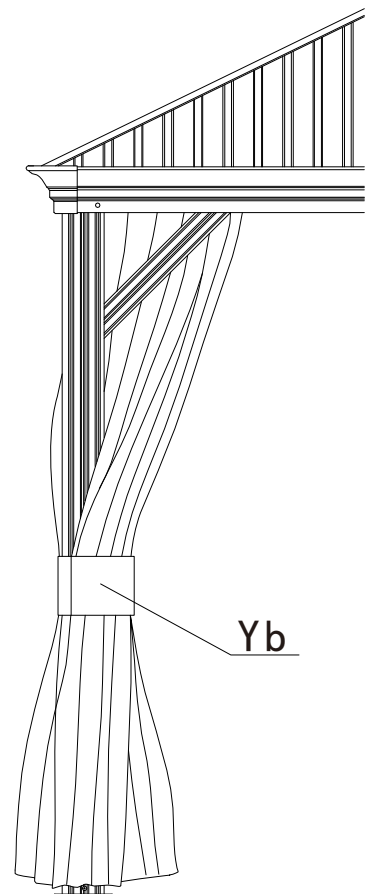

Yb

Please close your gazebo curtain when it is incoming over 30 mph wind, and tie with Strap #Yb.



## Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

**Support:**  

**After-sales contact email:**

[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)

**Business cooperation contact email:**

[marketing@domioutdoorliving.com](mailto:marketing@domioutdoorliving.com)

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.