

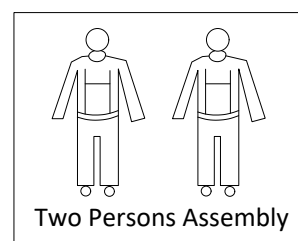
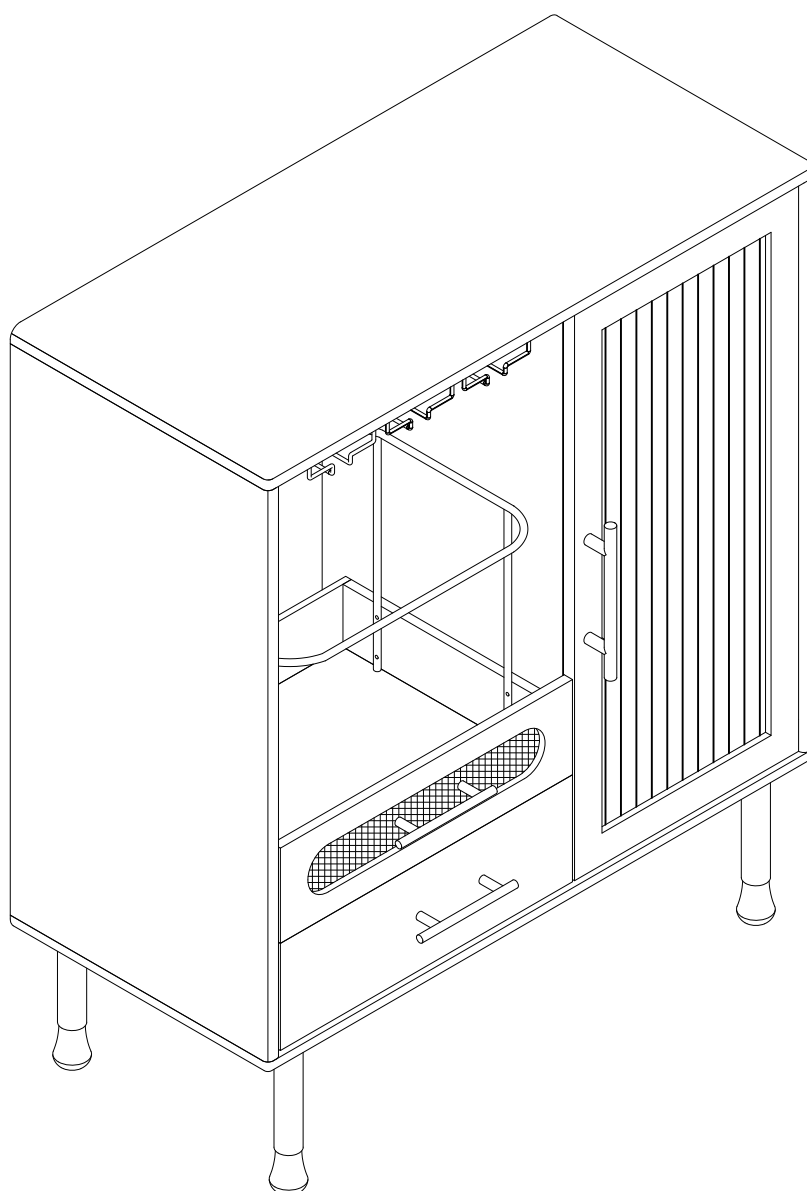
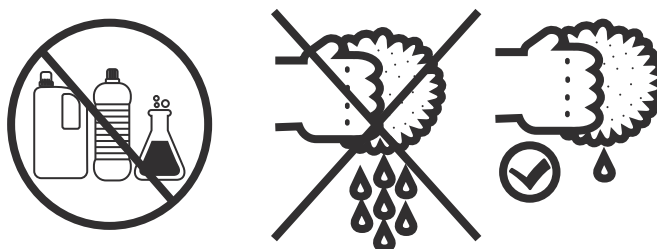
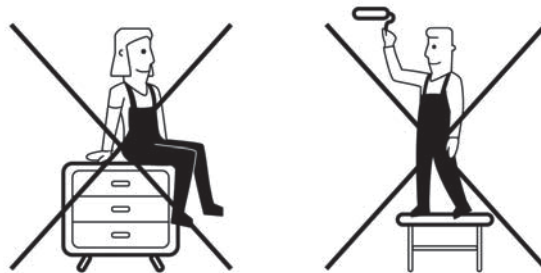



ASSEMBLY INSTRUCTIONS

Item NO.: YJJ250062

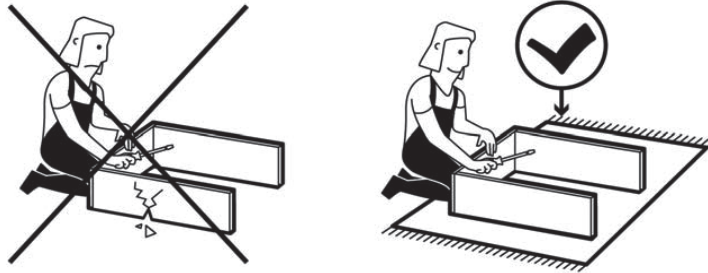

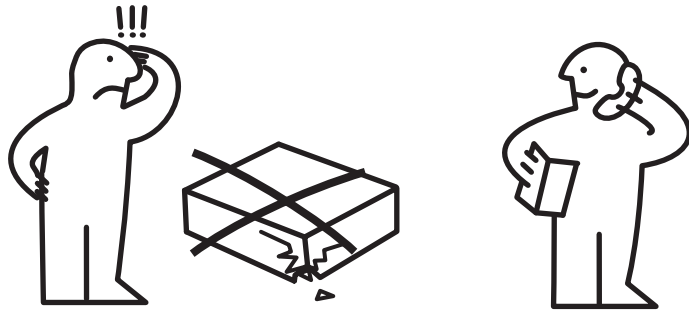


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

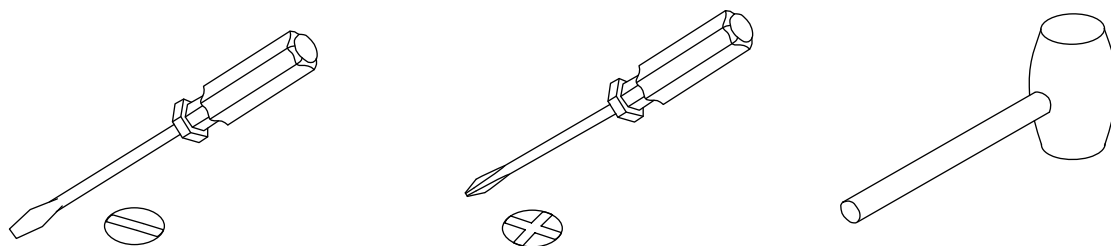

- * Before discarding packing materials, please check all parts and hardware are presented.
- * Please follow the instructions closely.
- * After few days of initial assembly, the product may have acclimated to new environment, please tighten all hardware again.




Dowel Installation

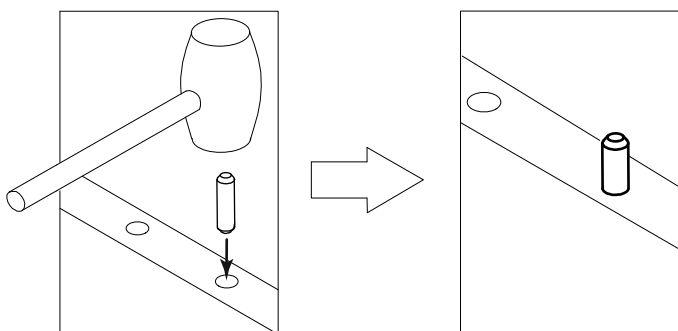

Gently tap dowel into hole with rubber mallet.





CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten

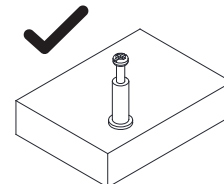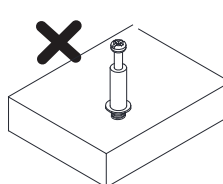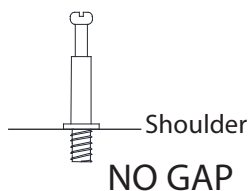


WHEN FITTING CAMS







ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-PILLAR
TURN CLOCKWISE UNTIL SECURE

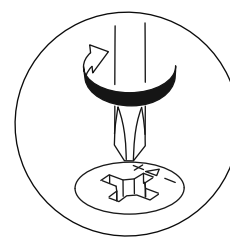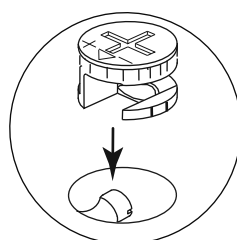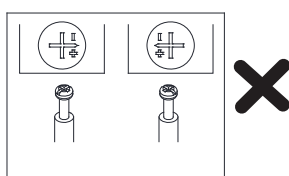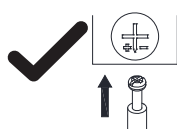


Laying out all the parts and hardware and identifying each part as shown below. It may help you when you assemble the item.


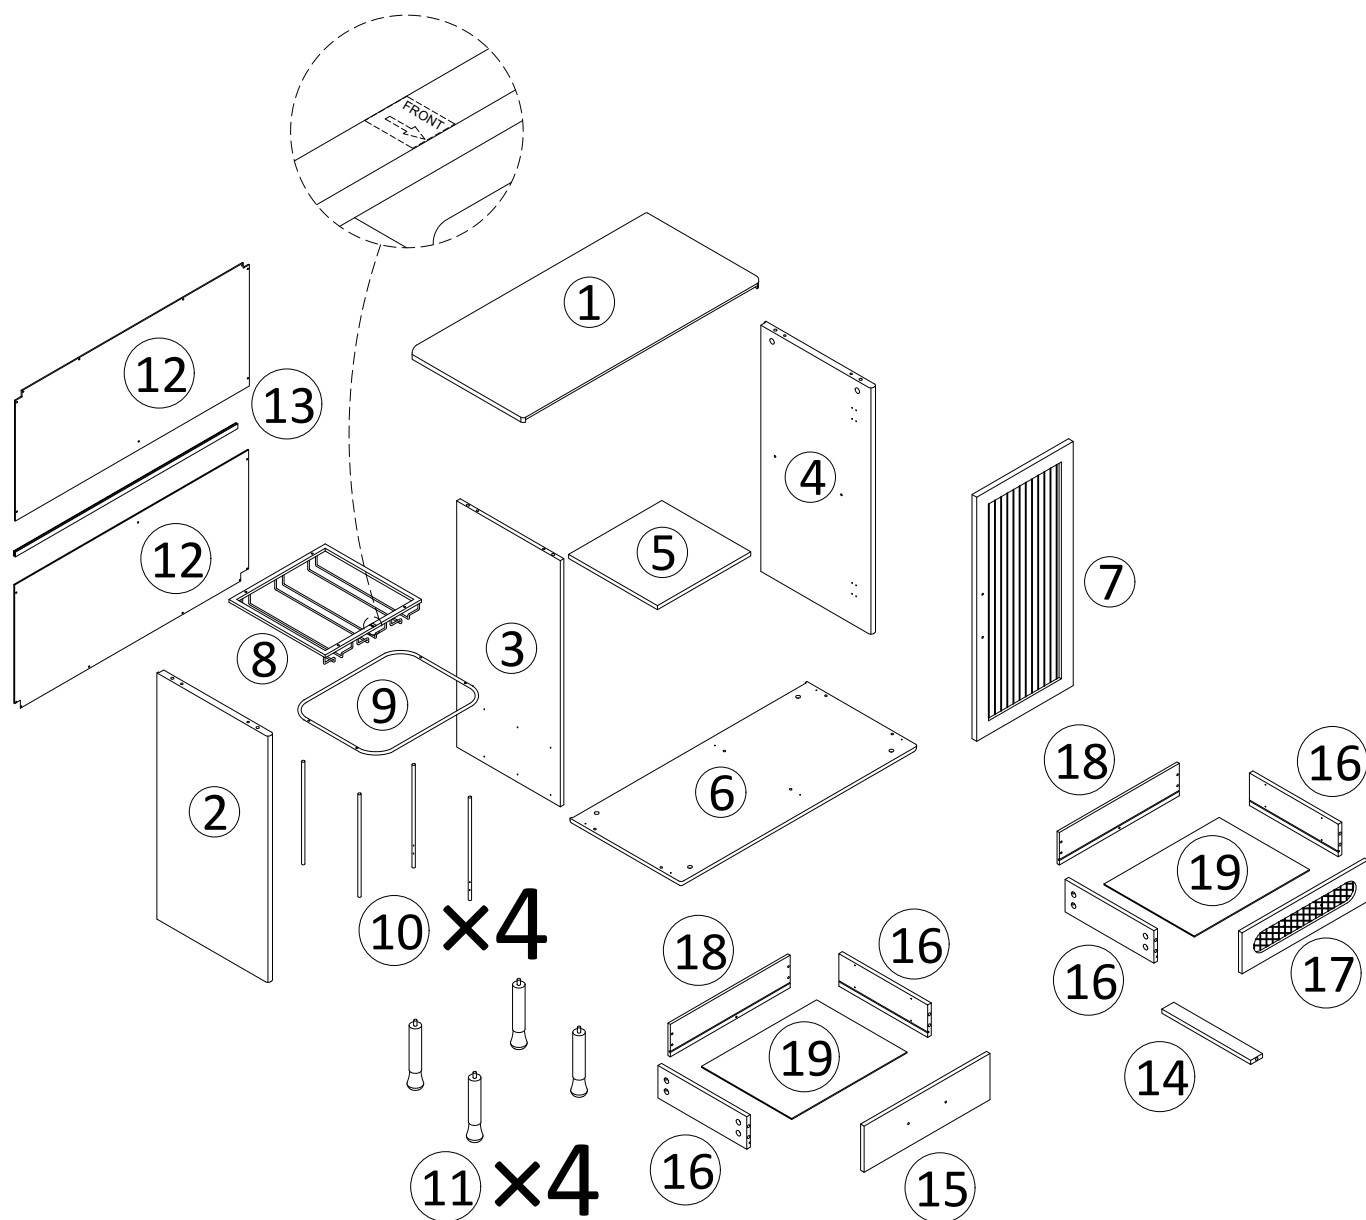


① ×1	② ×1	③ ×1	④ ×1	⑤ ×1	⑥ ×1
⑦ ×1	⑧ ×1	⑨ ×1	⑩ ×4	⑪ ×4	⑫ ×2
⑬ ×1	⑭ ×1	⑮ ×1	⑯ ×4	⑰ ×1	⑱ ×2
⑲ ×2					

A	×23+2(Spare)	B	×23+2(Spare)	C	×12+1(Spare)	D	×12+1(Spare)	E	×2
									
Ø6×27mm		Ø15×9.5mm		Ø6×30mm		FA3.5×14mm		ø26mm-L	
F	×18+1(Spare)	G	×3	H	×4	I	×1	J	×6
									
FA3×10mm		200mmH		M4×22mm		FA3.5×30mm		FA4×40mm	
K	×2	CL	×2	DL	×2	DR	×2	CR	×2
									
4×40mm/4×12mm		300mm		300mm		300mm		300mm	
L	×24+2(Spare)	M	×4	N	×2	O	×12+1(Spare)	P	×4
									
FA3×12mm		M5×14mm		M4×16mm		FA4×18mm		M5×20mm	
Q	×4								
									
φ21 Sticker									


1

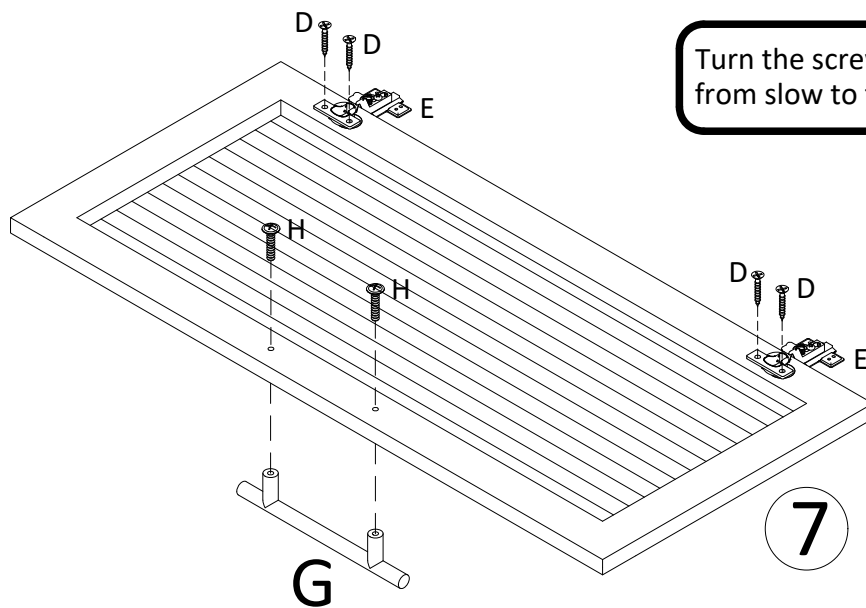


H	G	D	E
			
×2	×1	×4	×2

2


Turn the screws vertically
from slow to fast.

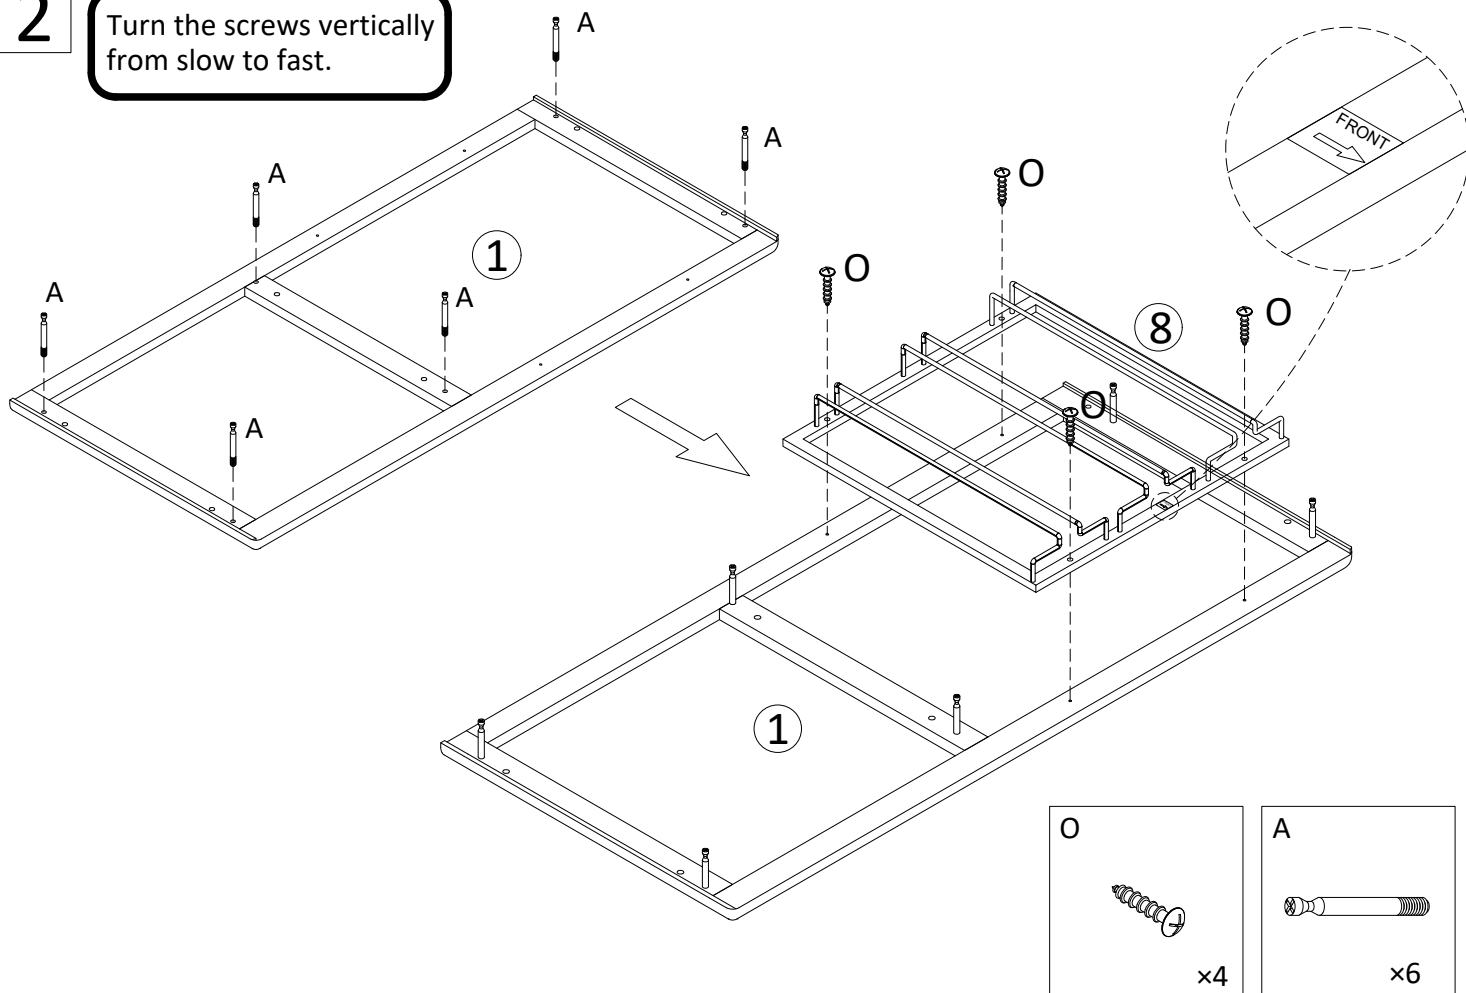

3



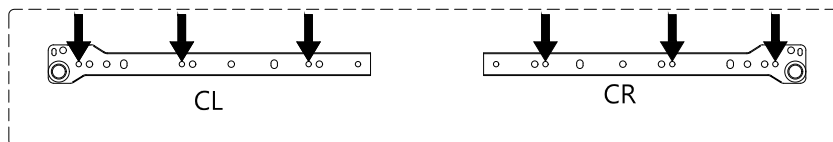


Turn the screws vertically
from slow to fast.

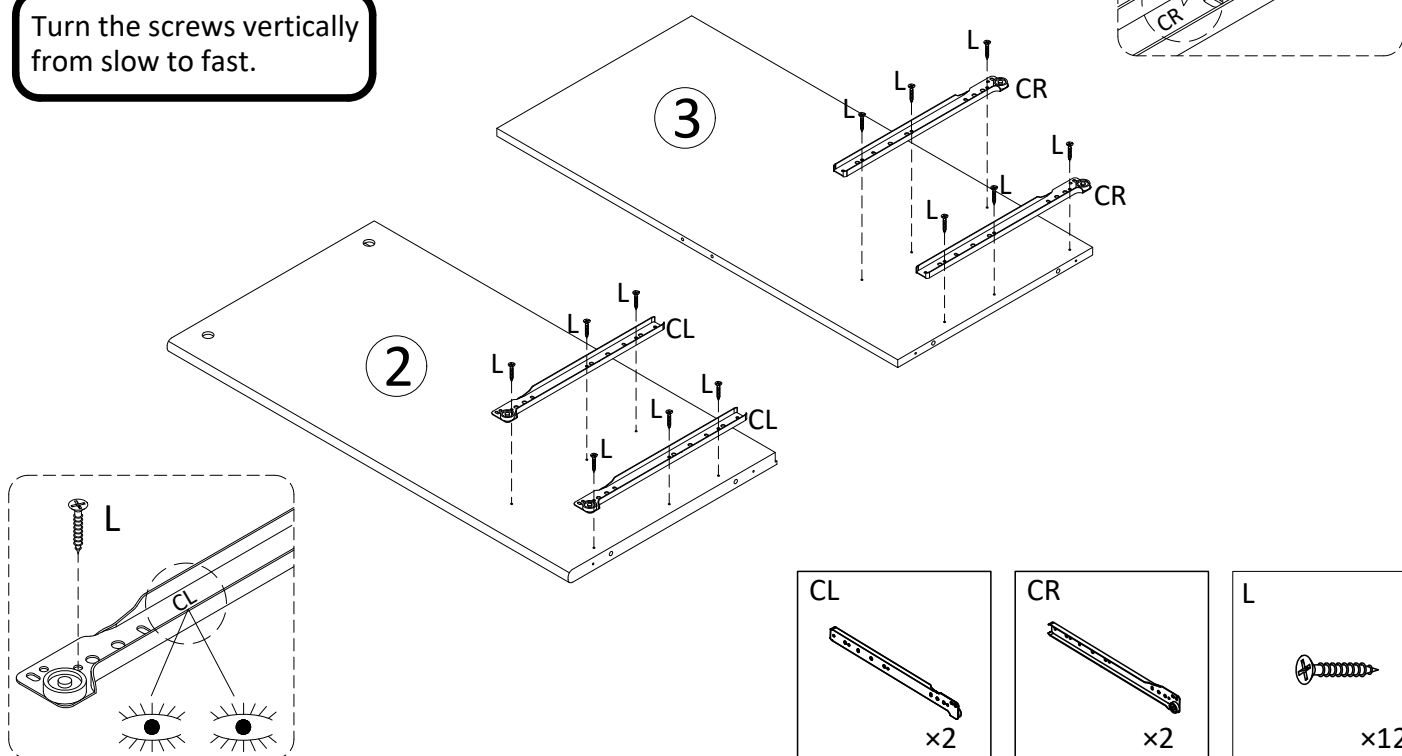


4





Turn the screws vertically
from slow to fast.

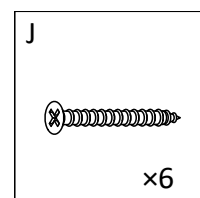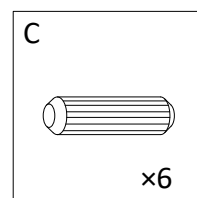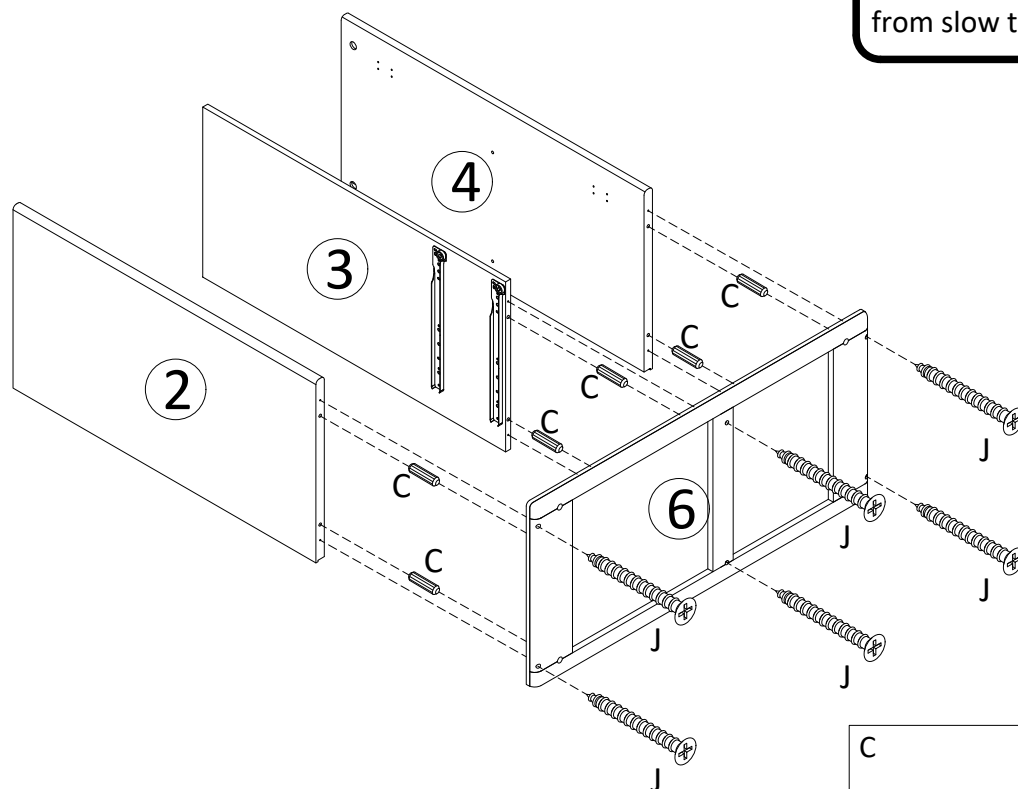


5

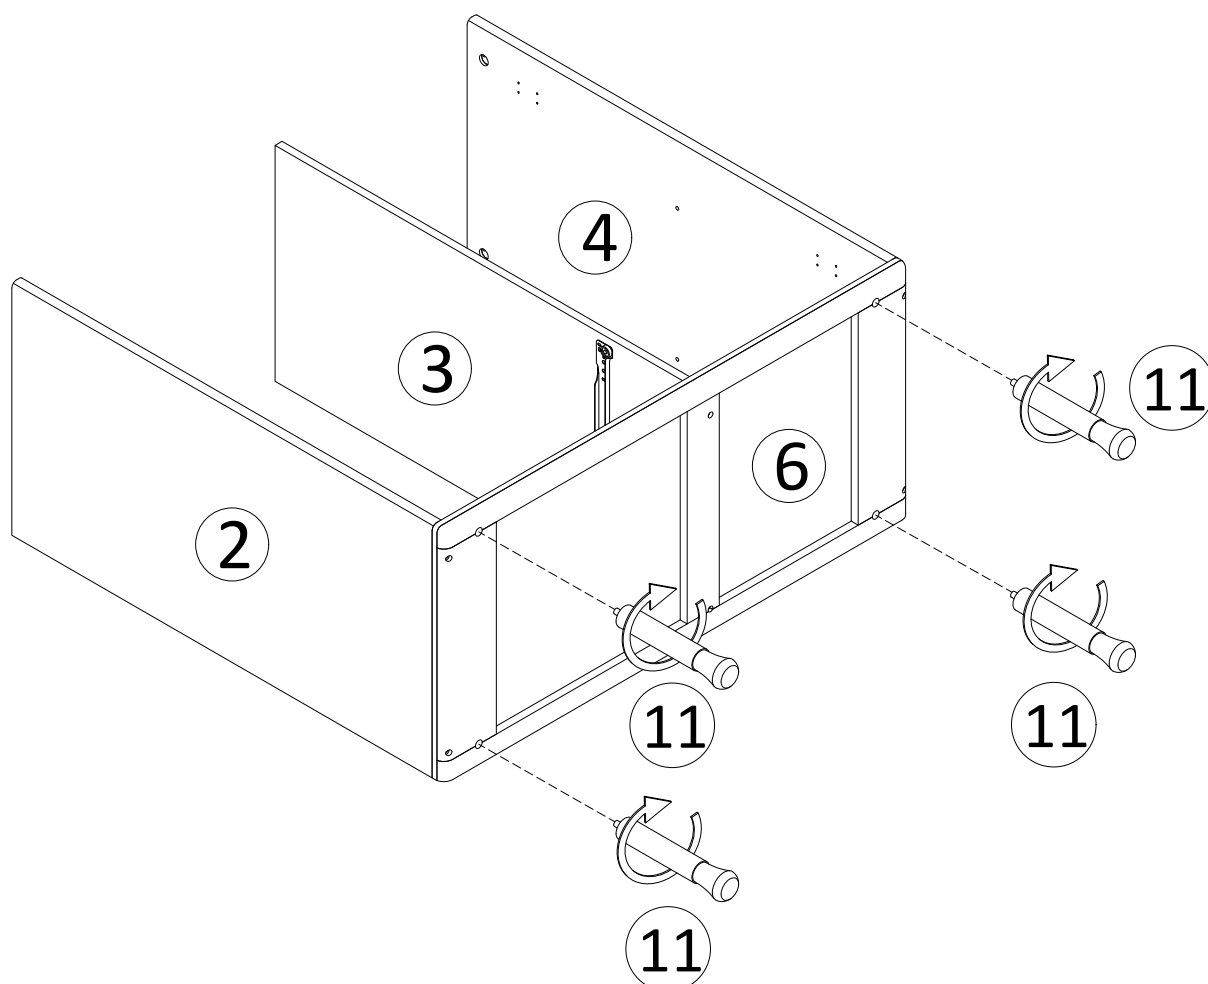



6

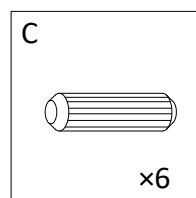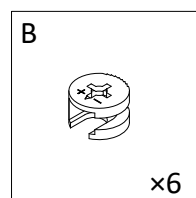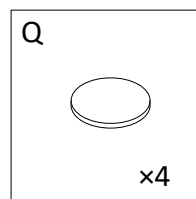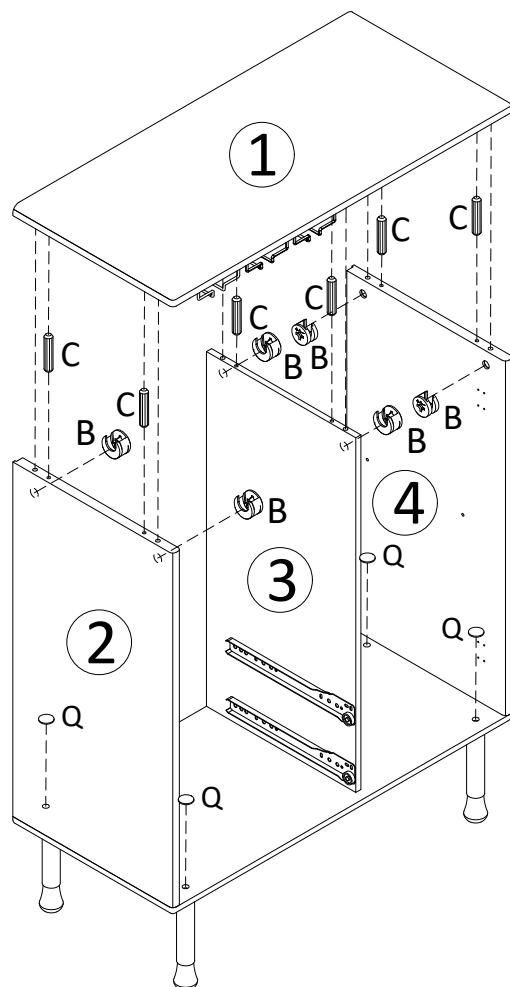

7

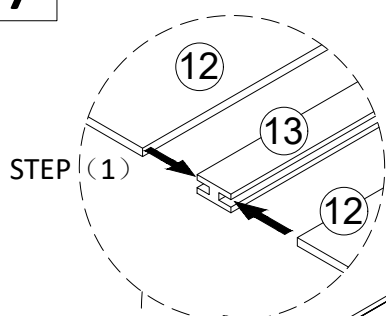


Turn the screws vertically from slow to fast.

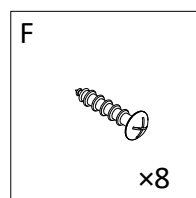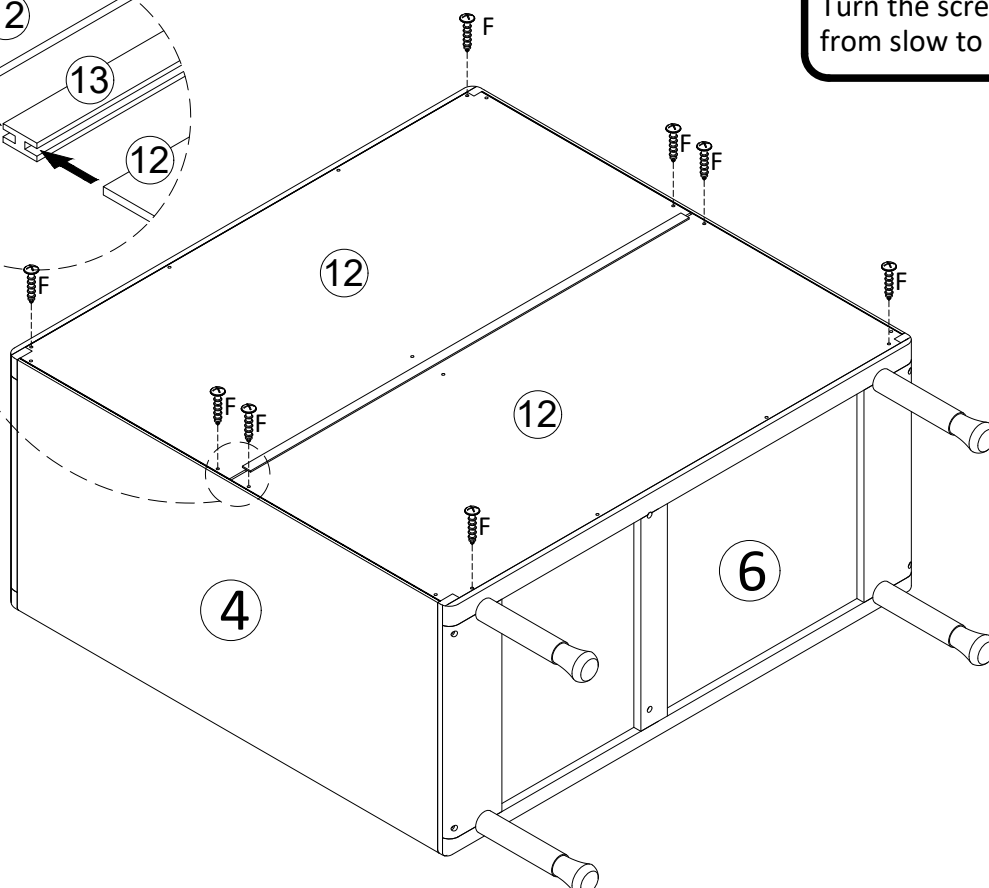



8

Turn the screws vertically from slow to fast.

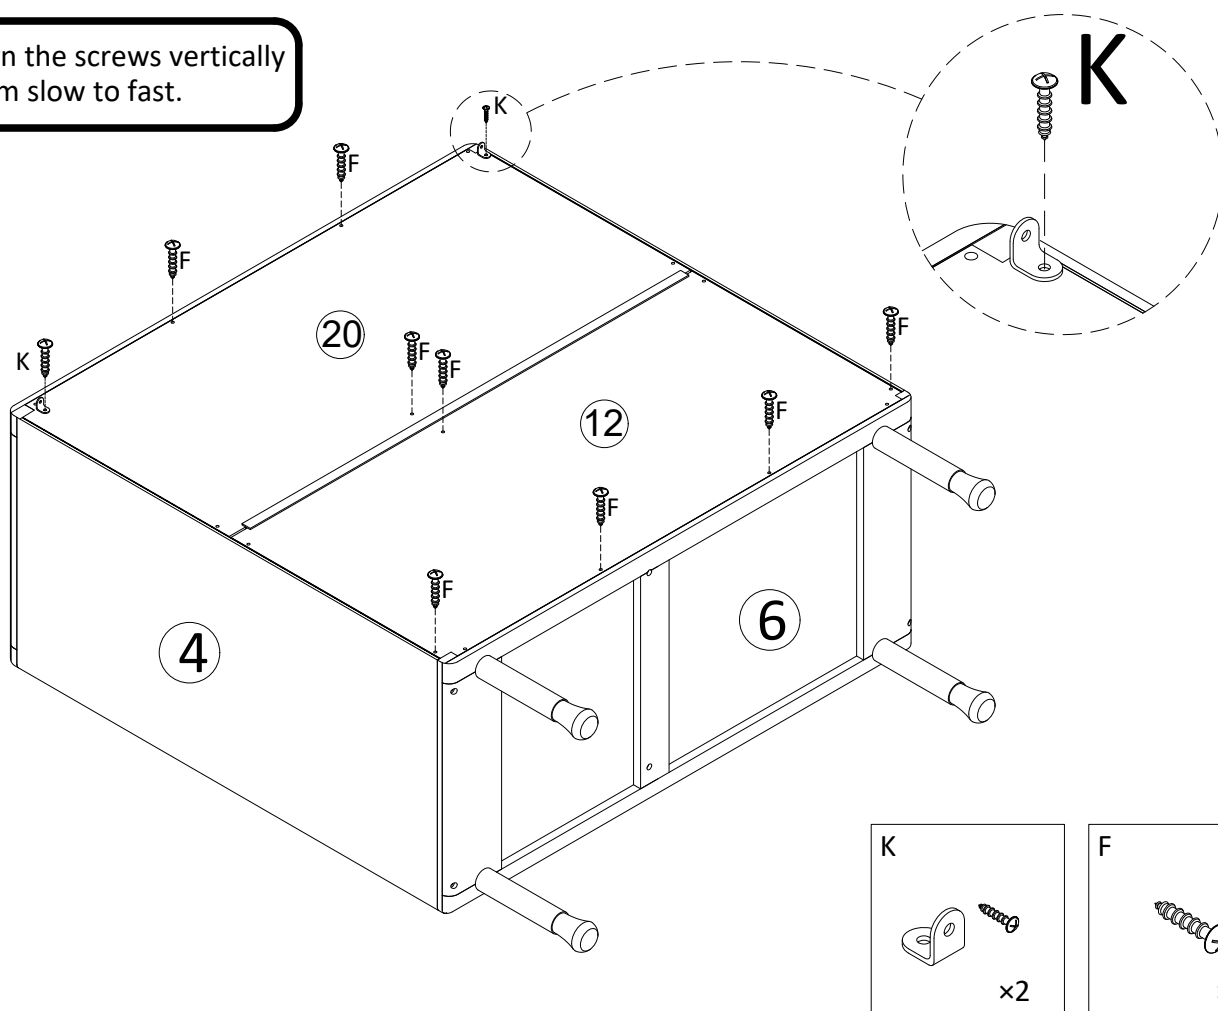









9

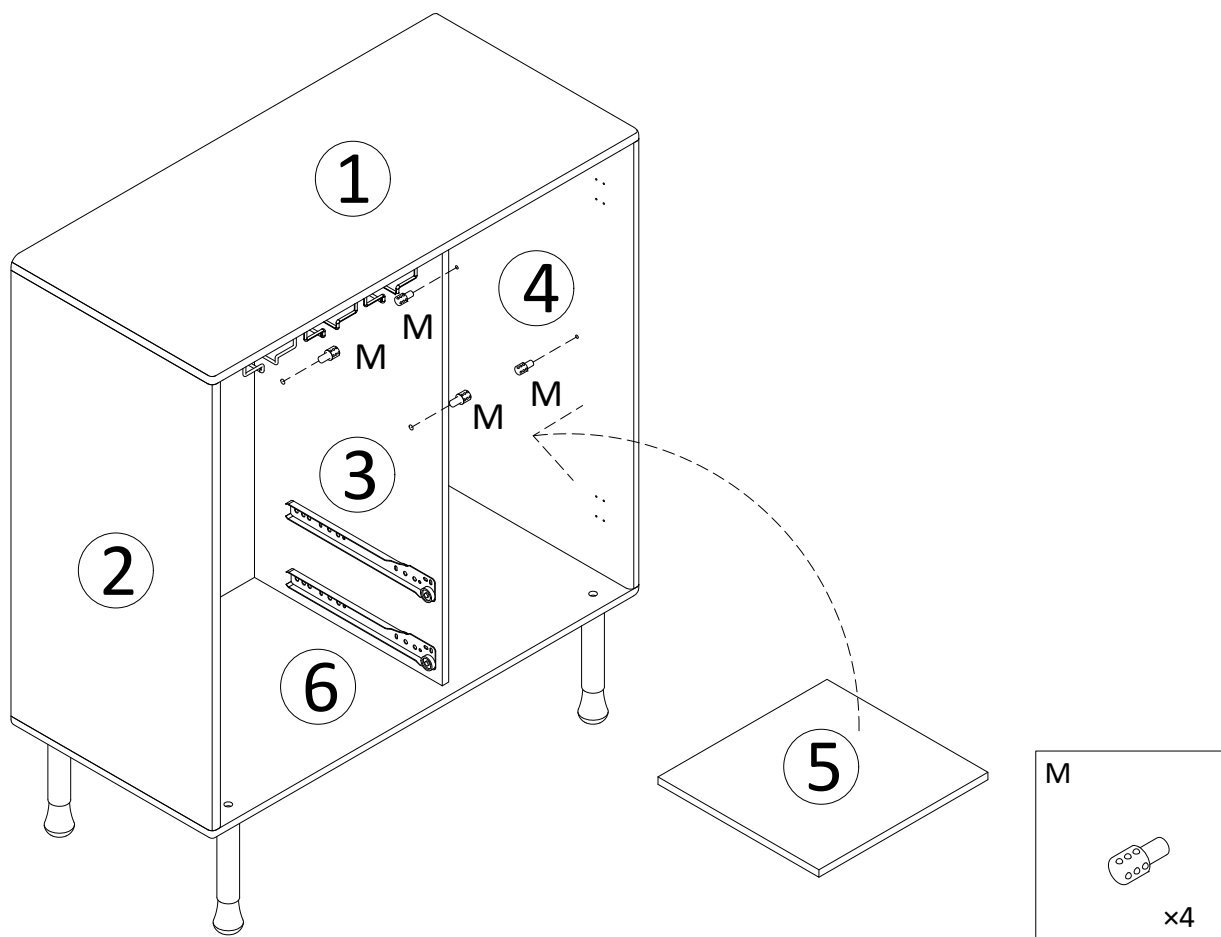


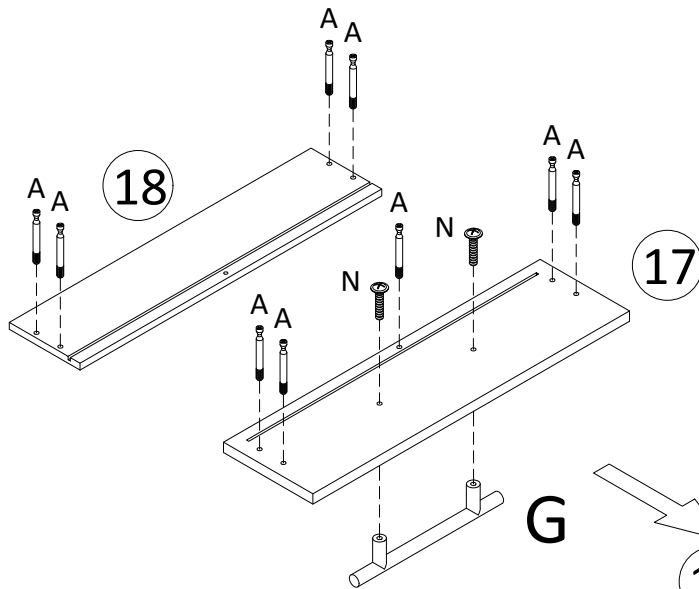

Turn the screws vertically from slow to fast.








G

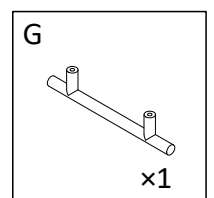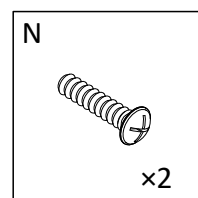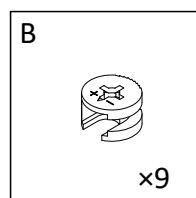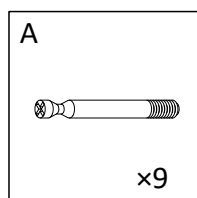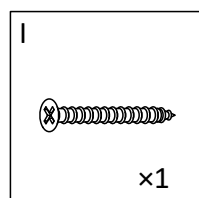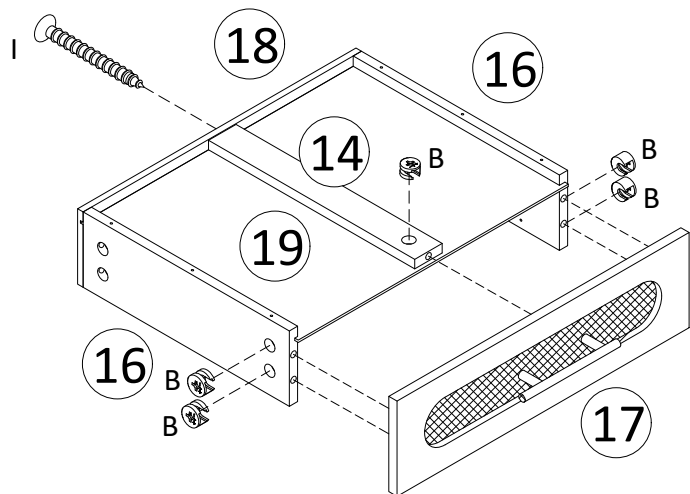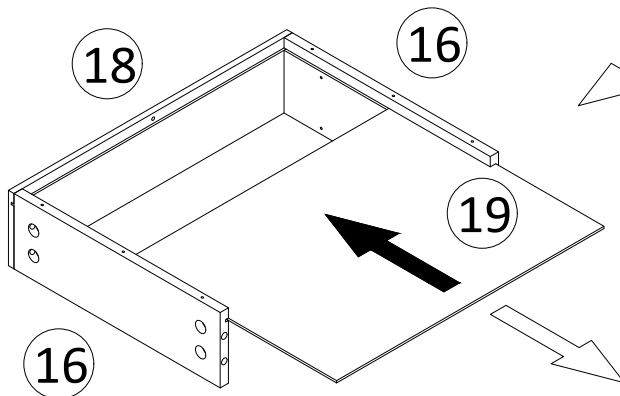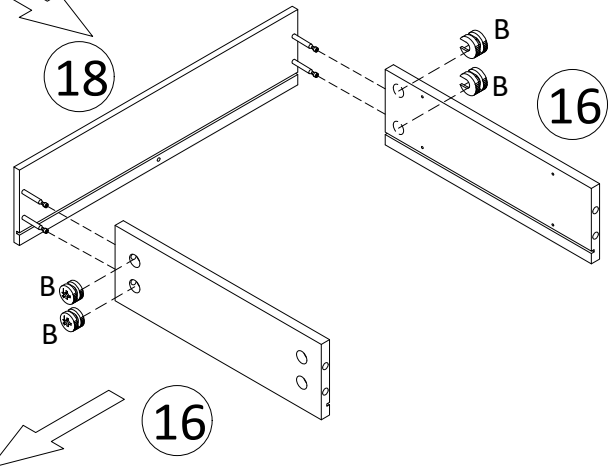

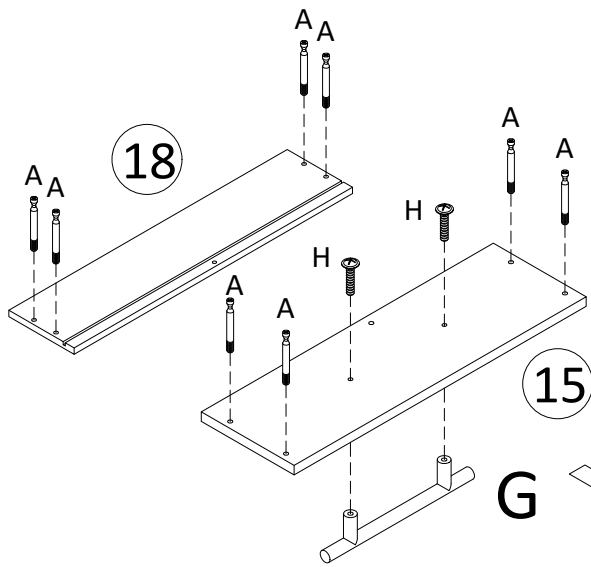







Turn the screws vertically from slow to fast.

G

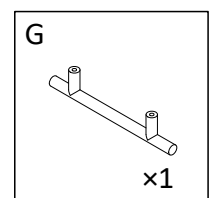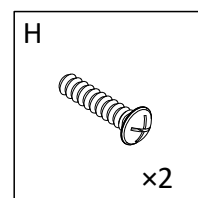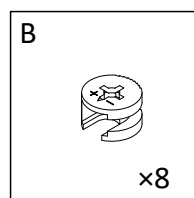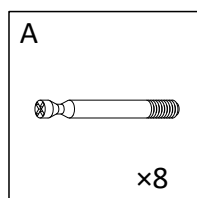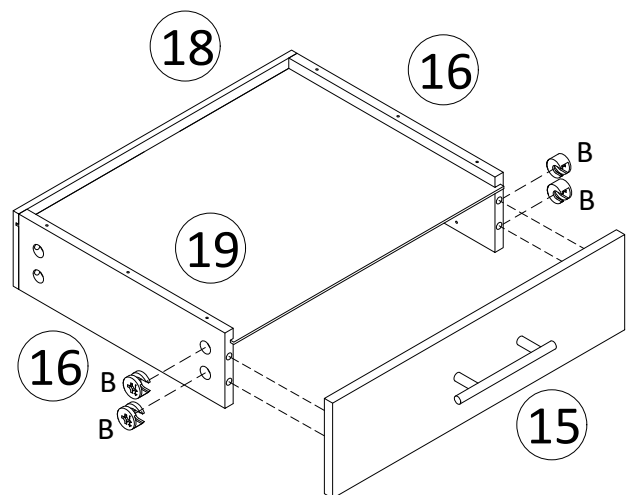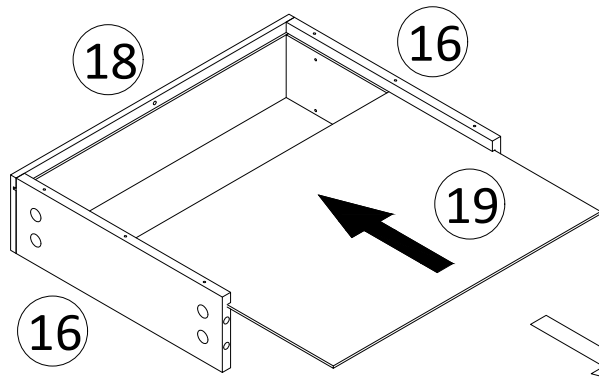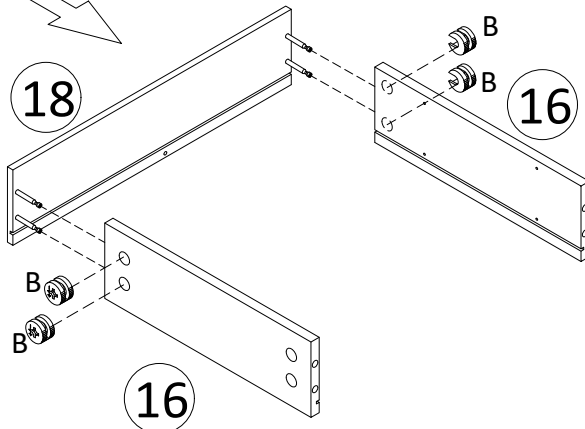







12

Turn the screws vertically from slow to fast.

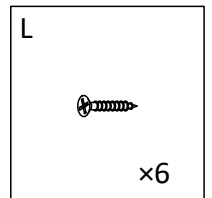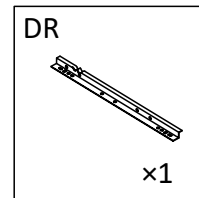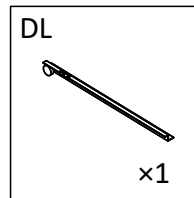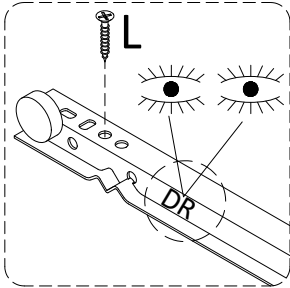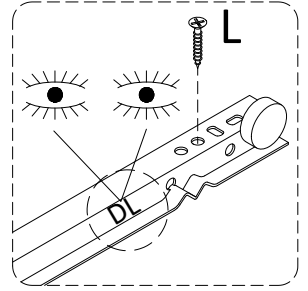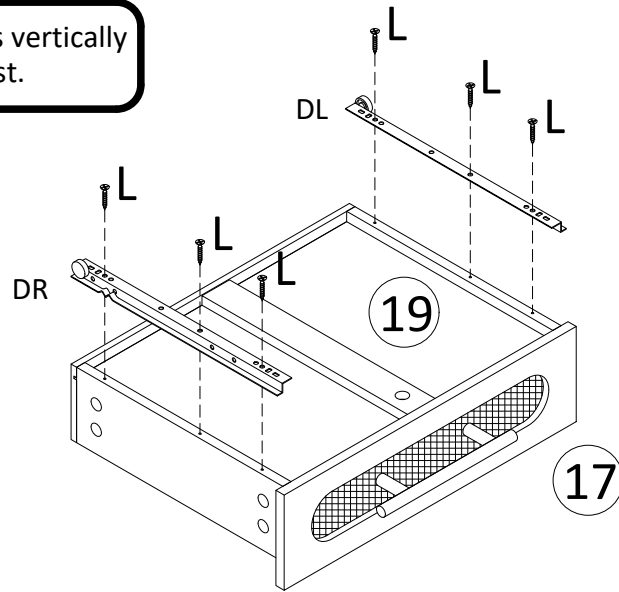


13


Turn the screws vertically from slow to fast.

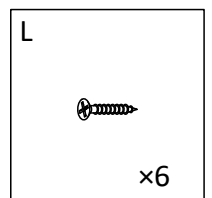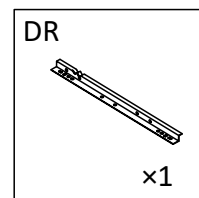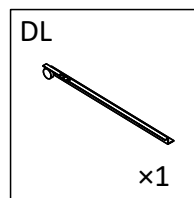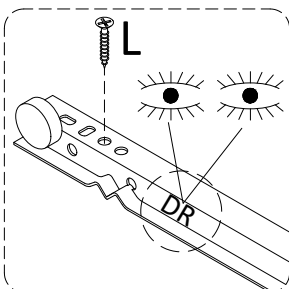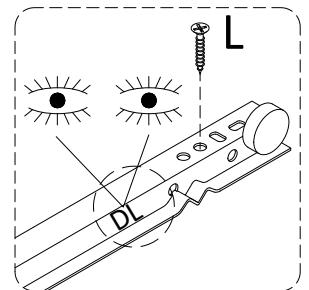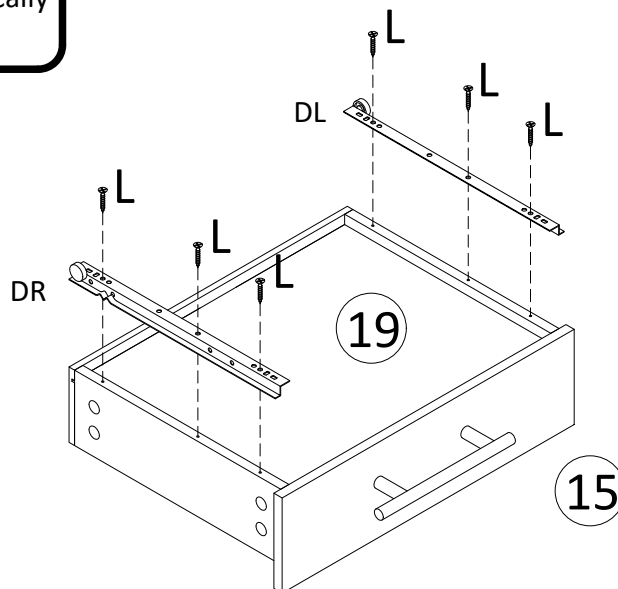


14

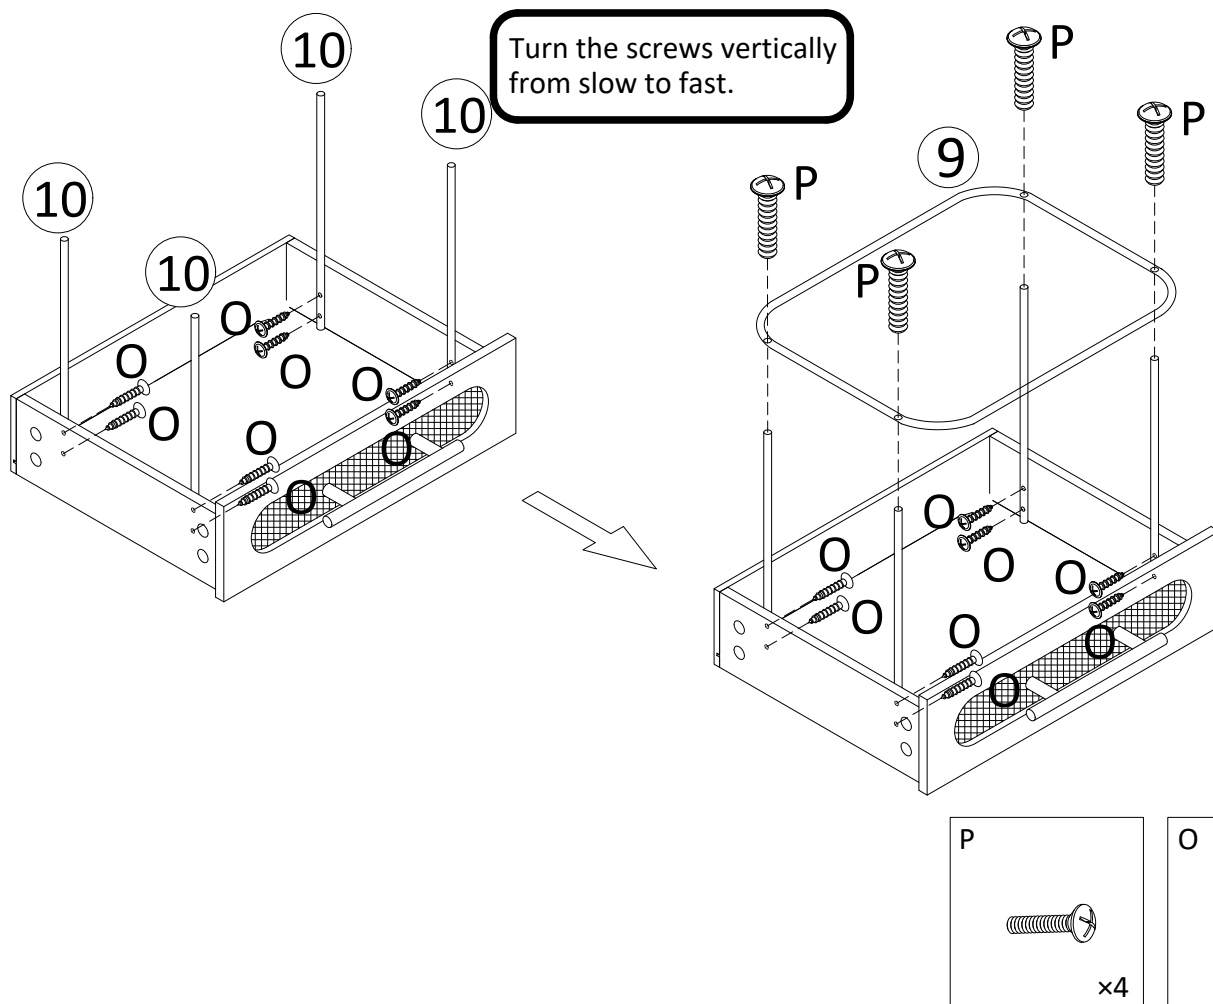

15

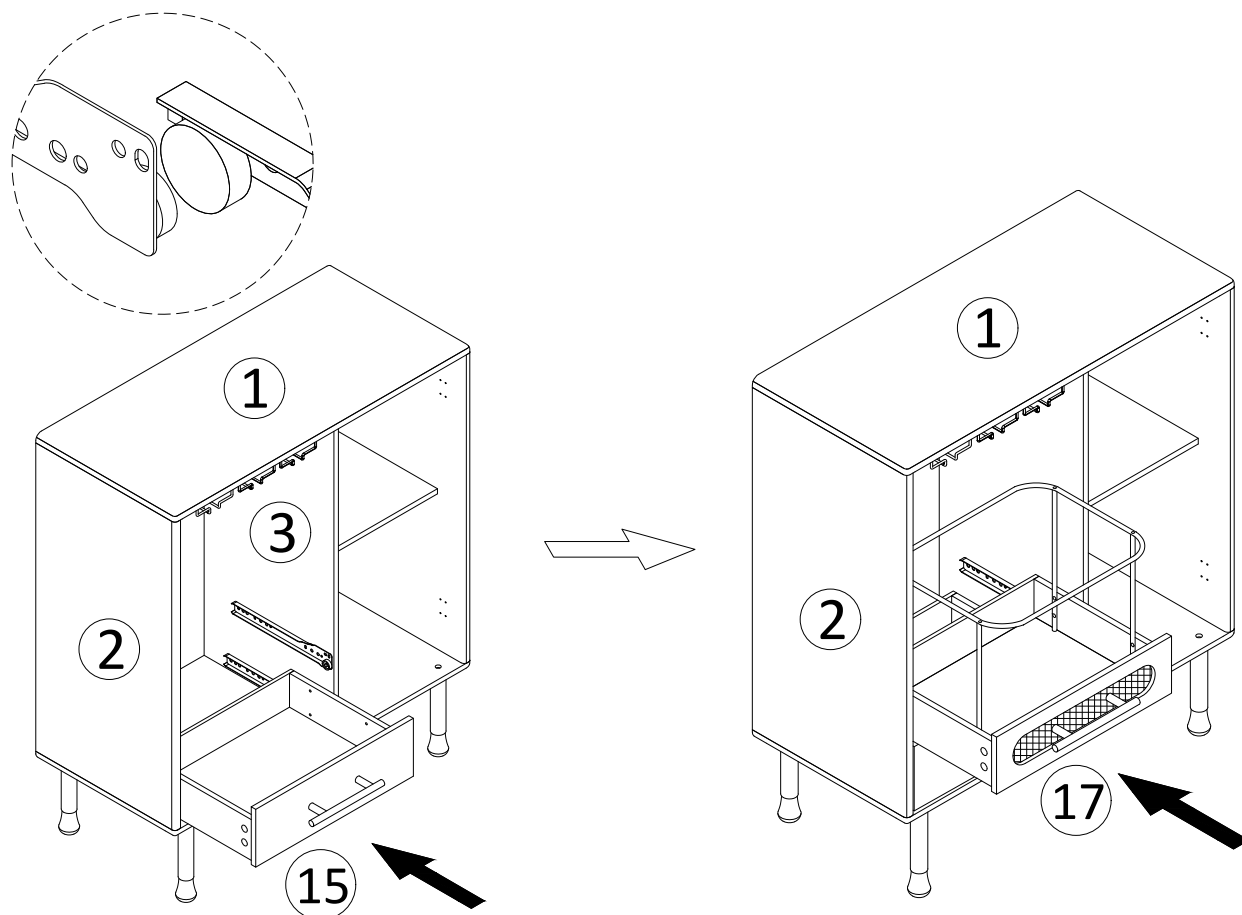


STEP (1)

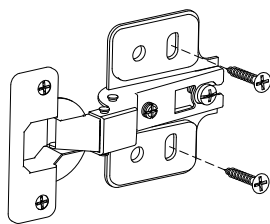


Tips: Turning the screw to approx 50% tightness, don't be fully tight.

STEP (2)

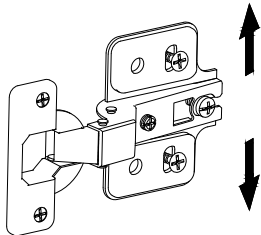


Tips: Moving the hinges up or down appropriately to adjust the gap between the door with the cabinet top and bottom.

STEP (3)

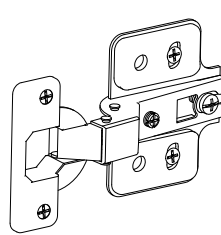






Tips: Tightening the screws completely.

STEP (4)



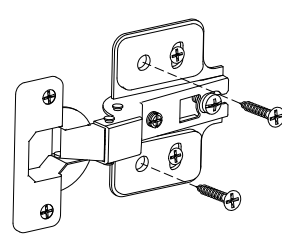


Tips: Tightening the other screws completely.




Turn the screws vertically from slow to fast.

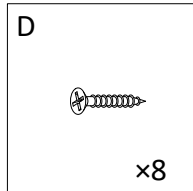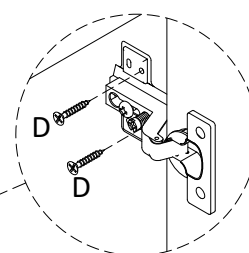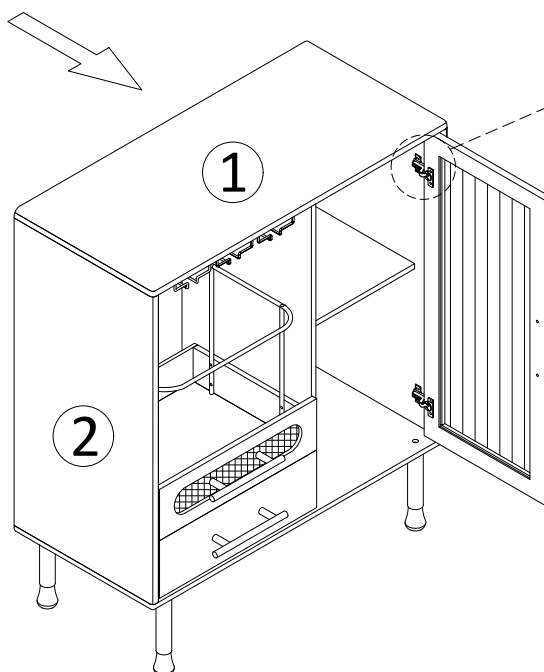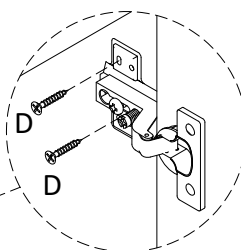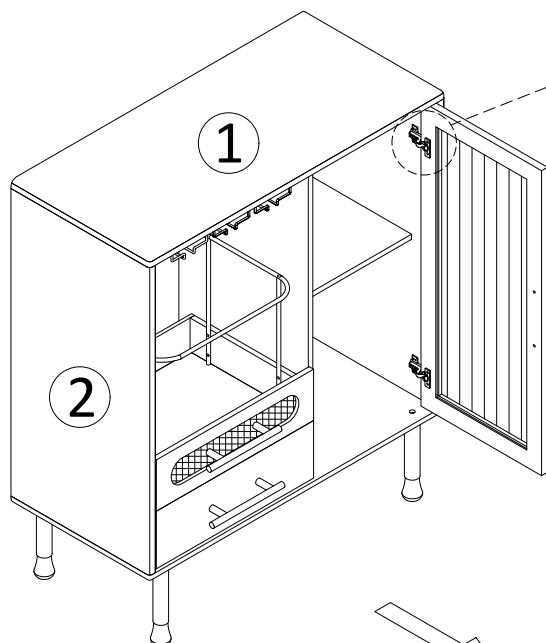





17 Tips: If the gap between the doors with the partition panel is too far or close, please turning the screw as shown below.

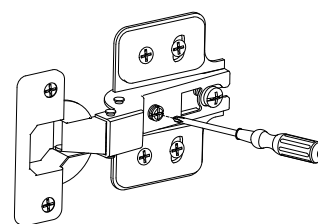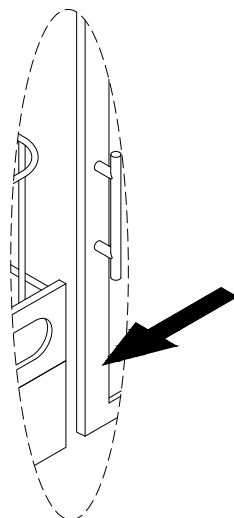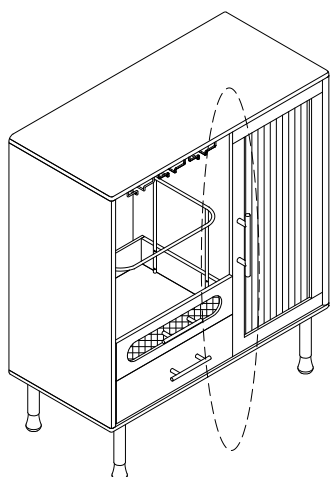


Tips: Adjusting the screw as shown in the following picture can make the door move forward or backward.

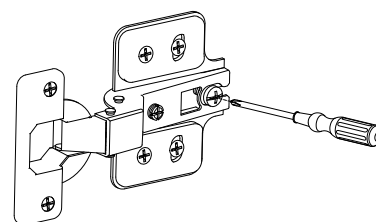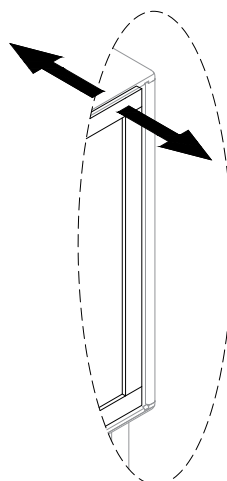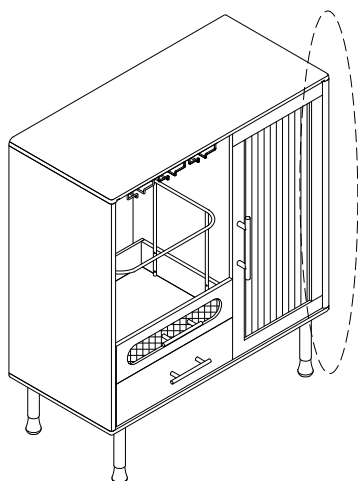

Tips: Adjusting the levelers appropriately underneath the bottom of the foot can make the gaps between the door and frames of cabinet even.

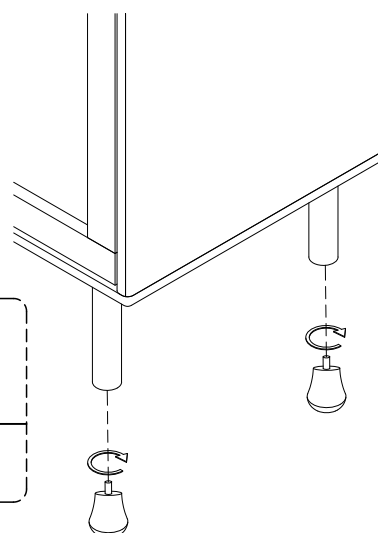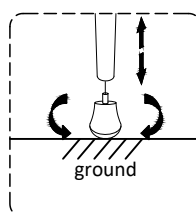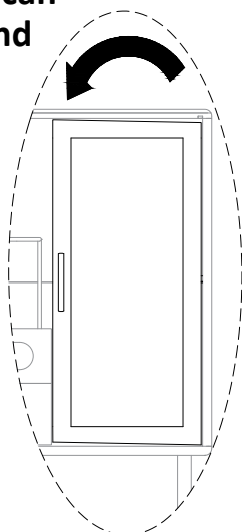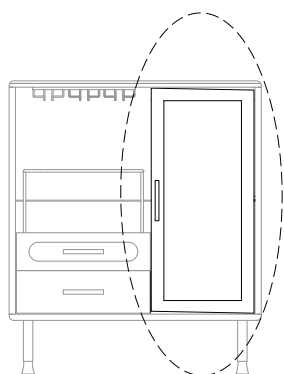

18

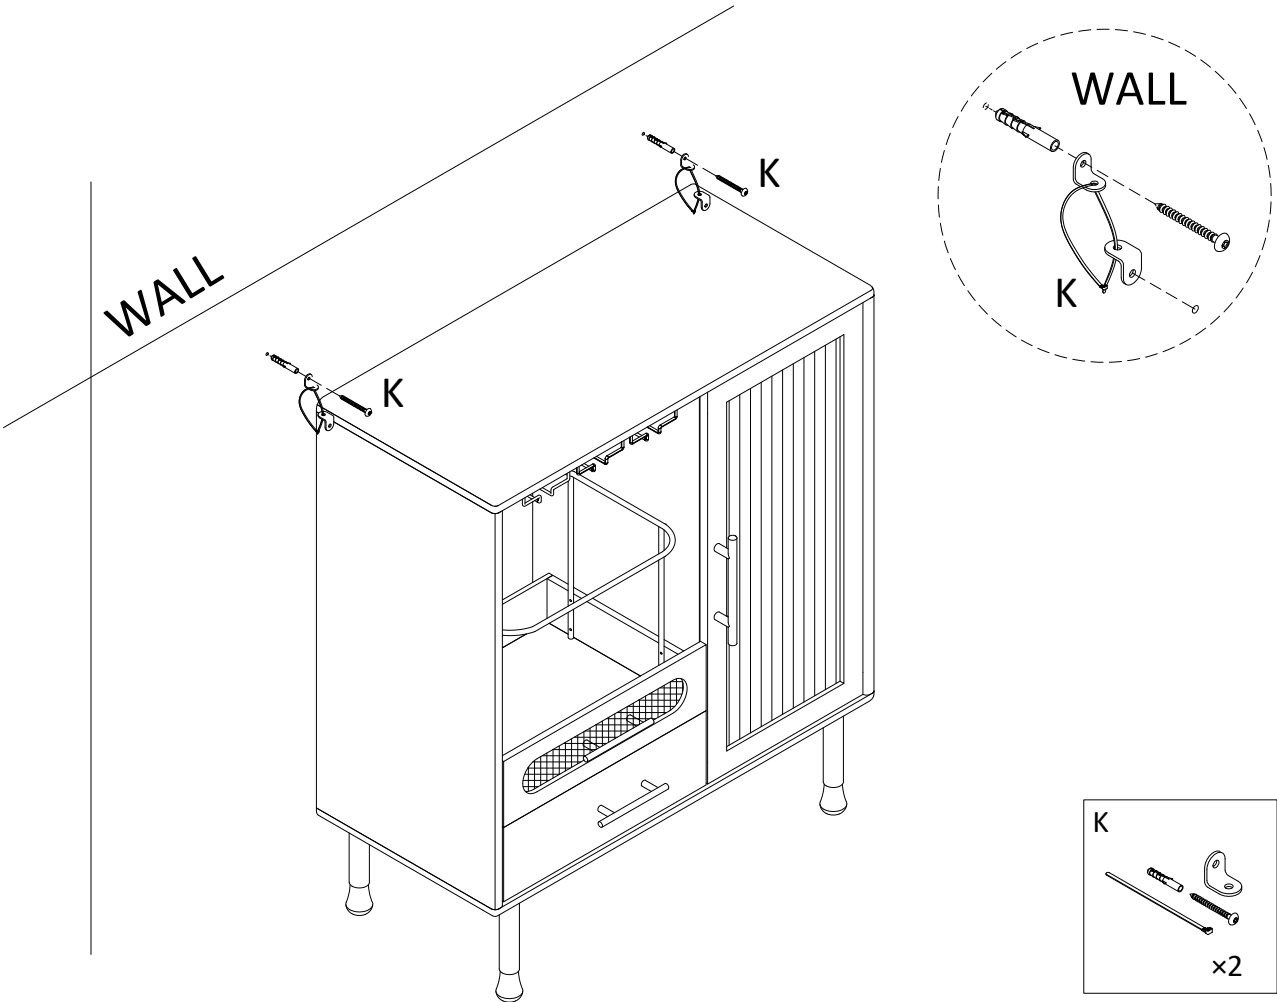

19

