




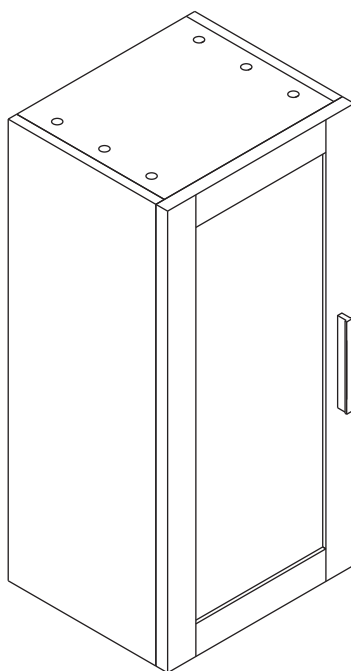



# ASSEMBLY INSTRUCTIONS


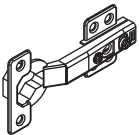

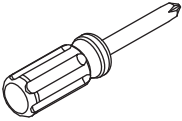






---



# ASSEMBLY INSTRUCTIONS

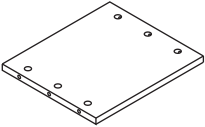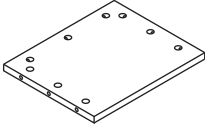1		x1	6		x1
2		x1			
3		x2			
4		x1			
5		x1			


## ASSEMBLY INSTRUCTIONS

<b>A</b>	 Ø6x26mm	x35	<b>I</b>		x2
<b>B</b>	 Ø15x9mm	x35	<b>J</b>		x1
<b>C</b>	 Ø3.5x14mm	x12			
<b>D</b>		x4			
<b>E</b>		x4			
<b>F</b>		x4			
<b>G</b>	 Ø4x25mm	x2			
<b>H</b>		x1			


## Use the Cam Lock and Eccentric Wheel

### ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.  
Be sure not to tighten too much or too little.

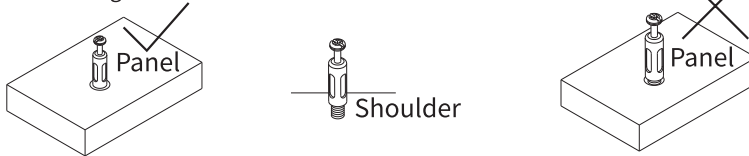

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

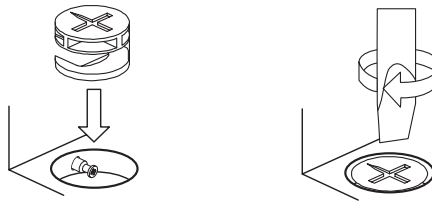


Turn the cam lock clockwise to tighten.

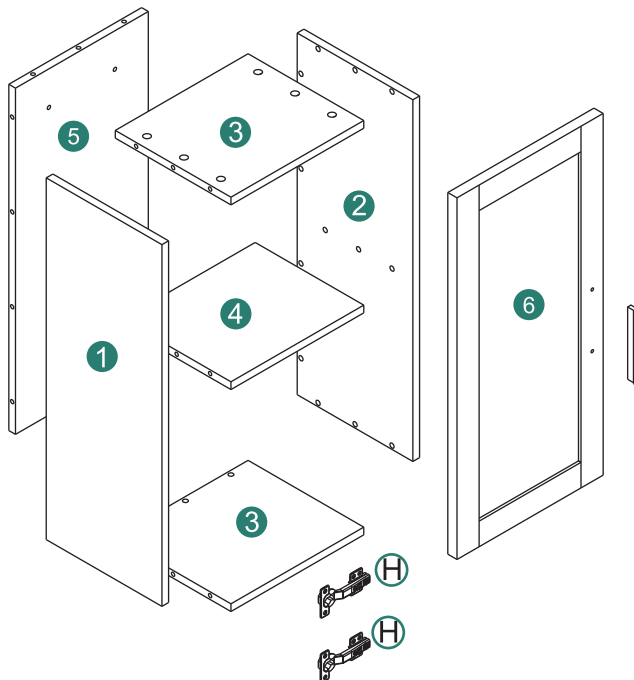


# ASSEMBLY INSTRUCTIONS



## 1





The floor needs to be covered with paper or carpet protective material before installation!

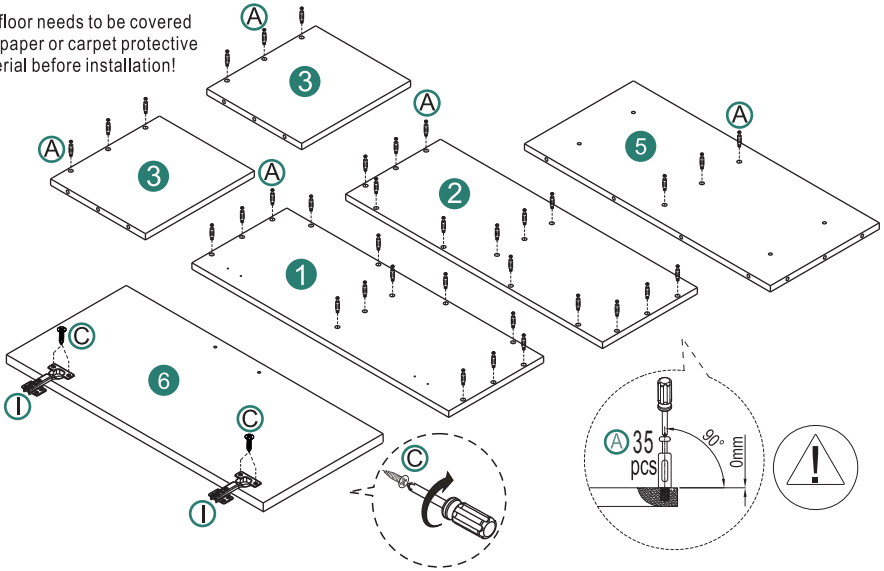

## 2

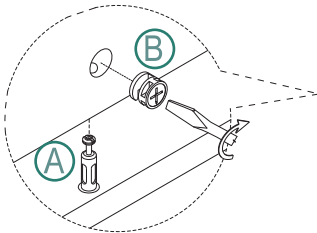


5

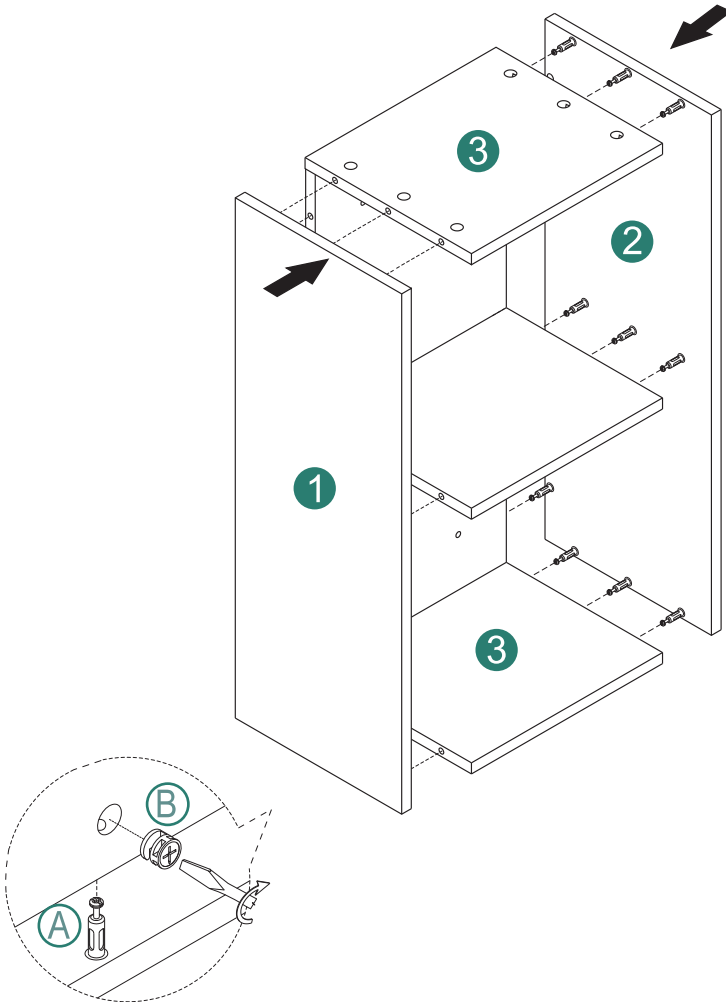



# ASSEMBLY INSTRUCTIONS

4

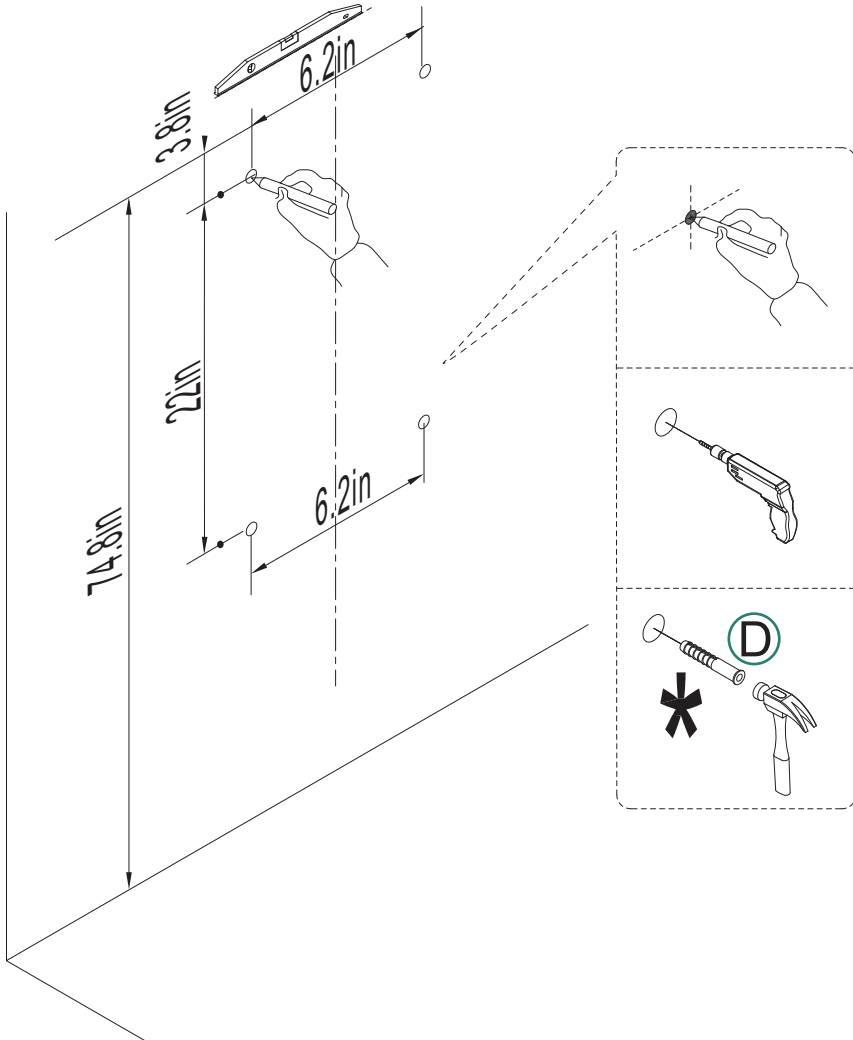

# ASSEMBLY INSTRUCTIONS

5

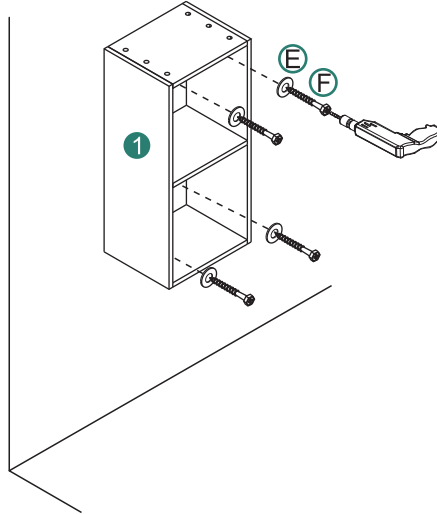

6

