


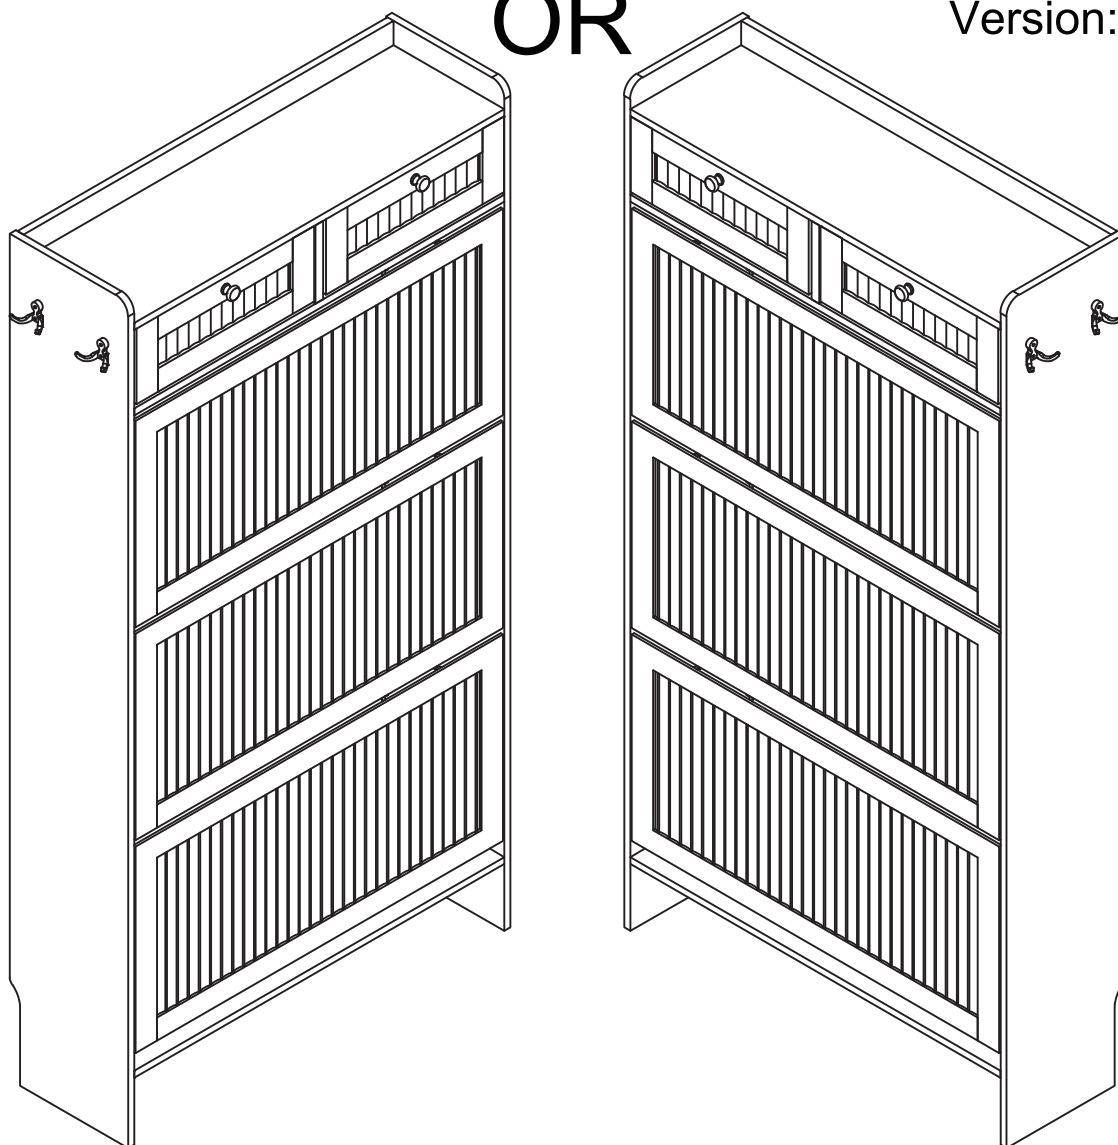



Please note: Items cannot be returned once assembled

OR


Version:1.0













IT IS RECOMMENDED
TO USE POWER TOOLS





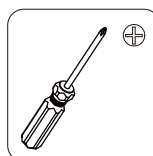
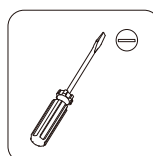





120MIN

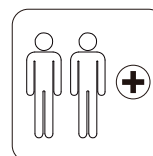


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

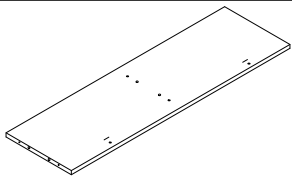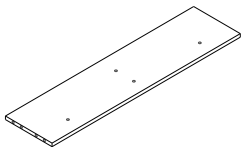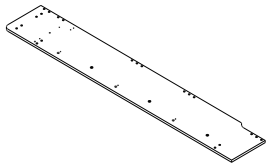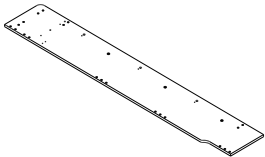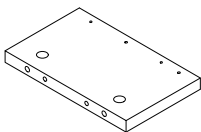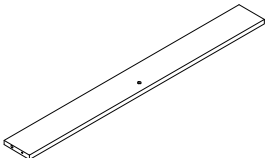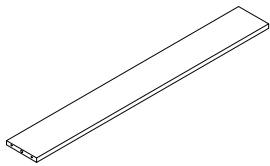
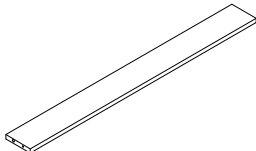
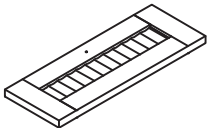

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x3	
⑧		x1	
⑨		x2	
⑩		x2	

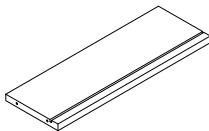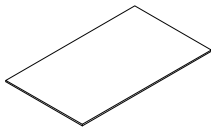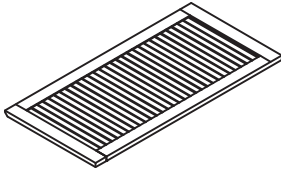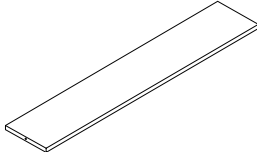
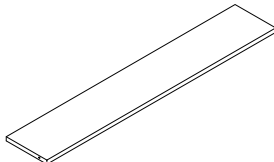
NO.	PARTS	QTY	SPARE
⑪		x2	
⑫		x2	
⑬		x2	
⑭		x3	
⑮		x3	
⑯		x6	

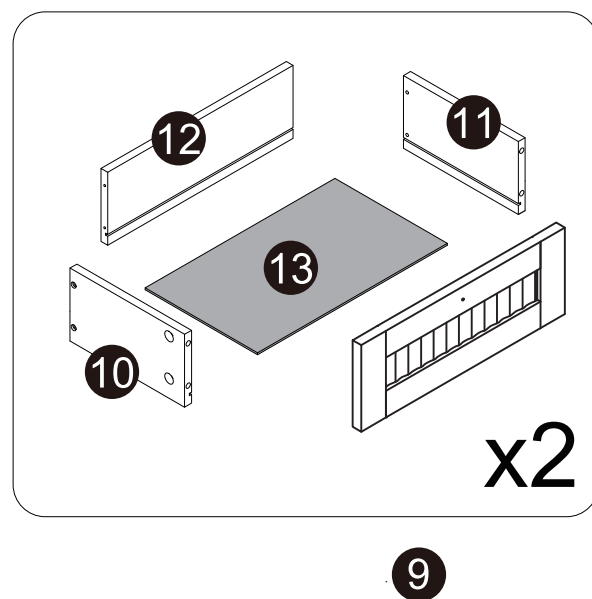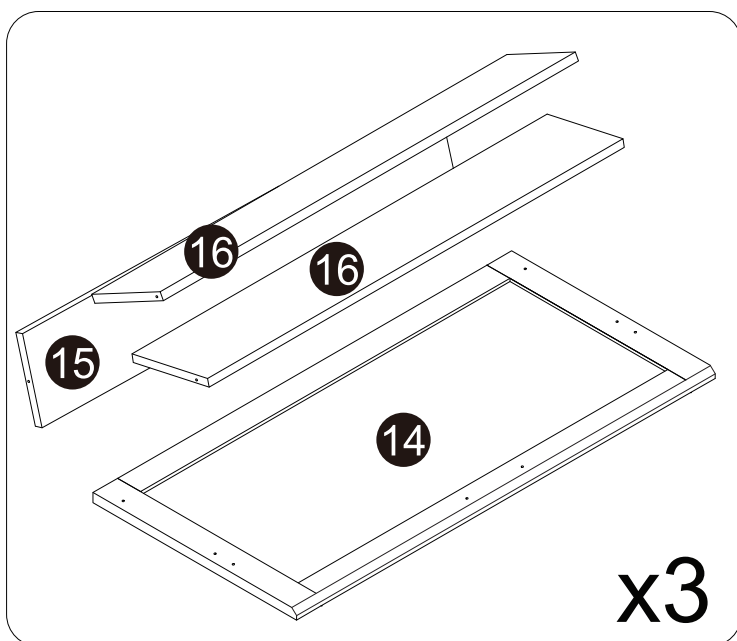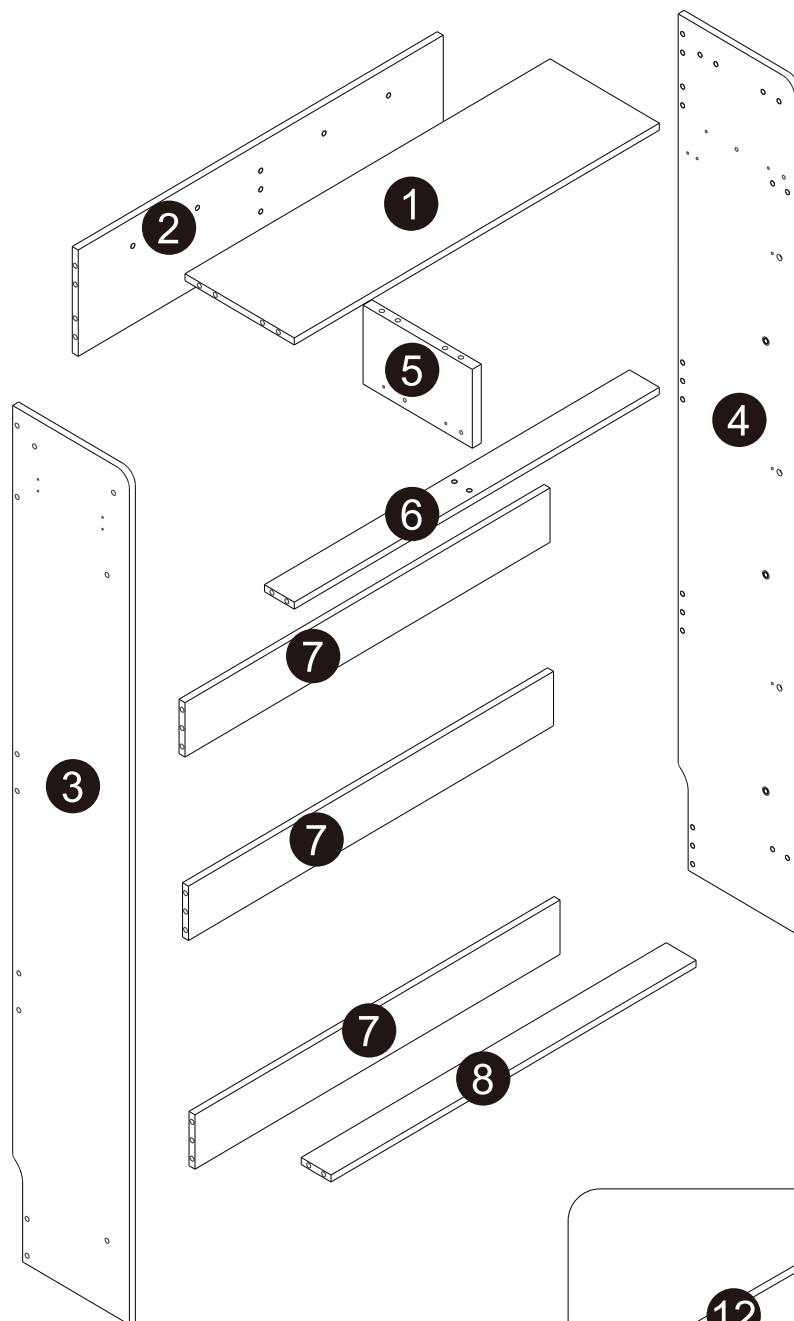

A x10 $\varnothing 6 \times 35 \text{mm}$ +1(spare)	B x10 $\varnothing 15 \times 10 \text{mm}$ +1(spare)	C x29 $\varnothing 6 \times 30 \text{mm}$ +2(spare)	D x37 $\varnothing 4 \times 35 \text{mm}$ +3(spare)	E x44 $\varnothing 3.5 \times 12 \text{mm}$ +2(spare)	F x2 F-1 F-2
G x3 G-1 G-2	H x4	I x8 $\varnothing 3 \times 12 \text{mm}$ +1(spare)	J x2 $\varnothing 4 \times 12 \text{mm}$ J-1 J-2	K x2 K-1 K-2	M x28 +4(spare)
N x6 N-1 +1(spare) N-2 +1(spare)	O x2	L x3	R x3	P x2 P-1 P-2	
Q x6					

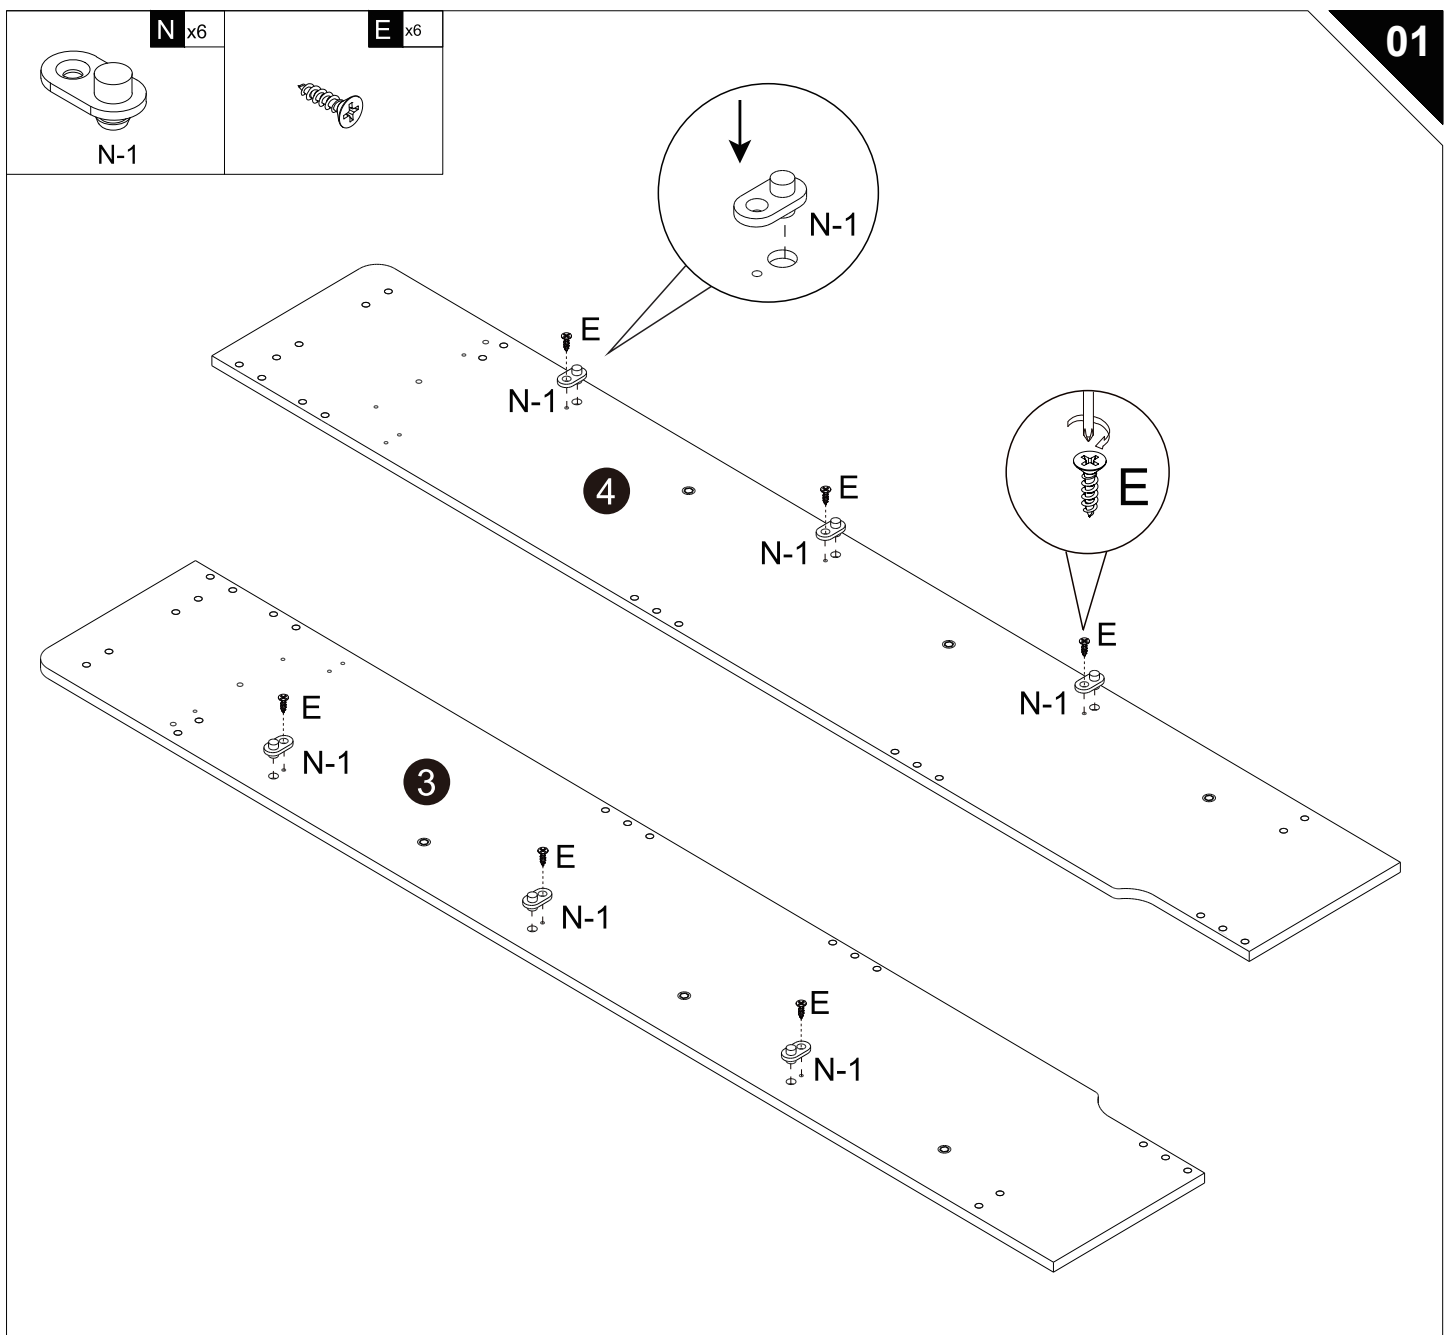


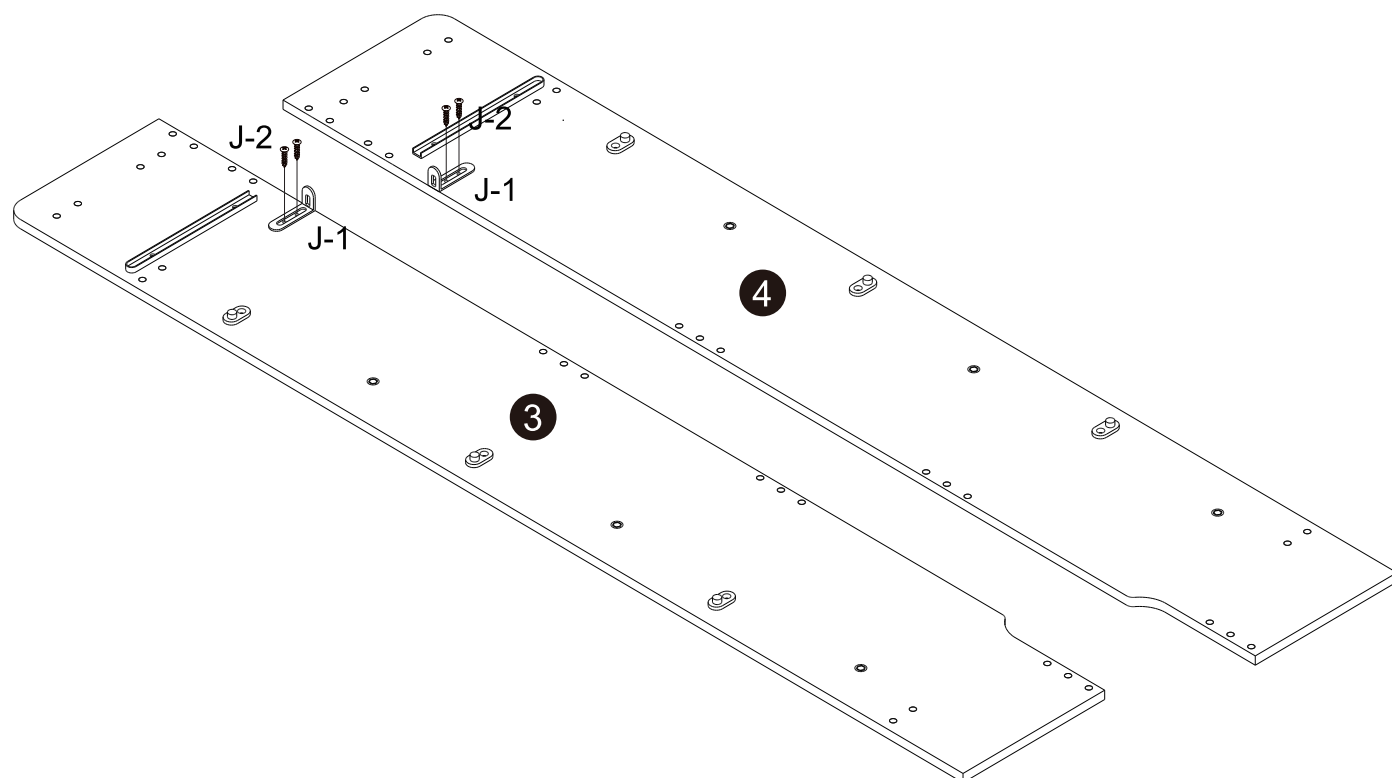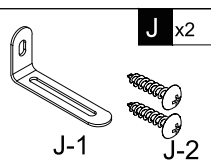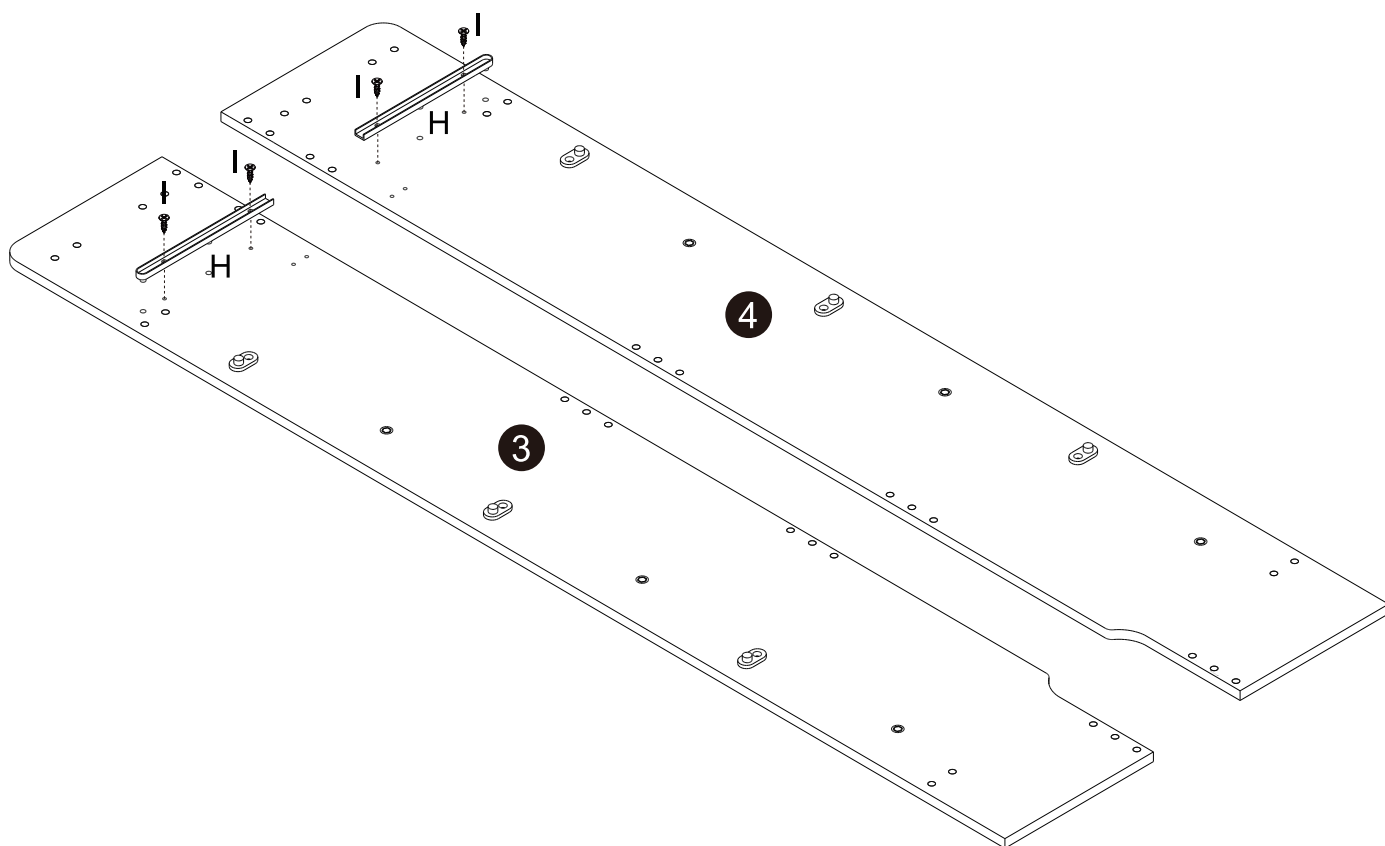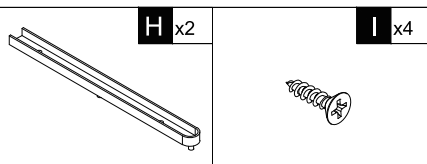

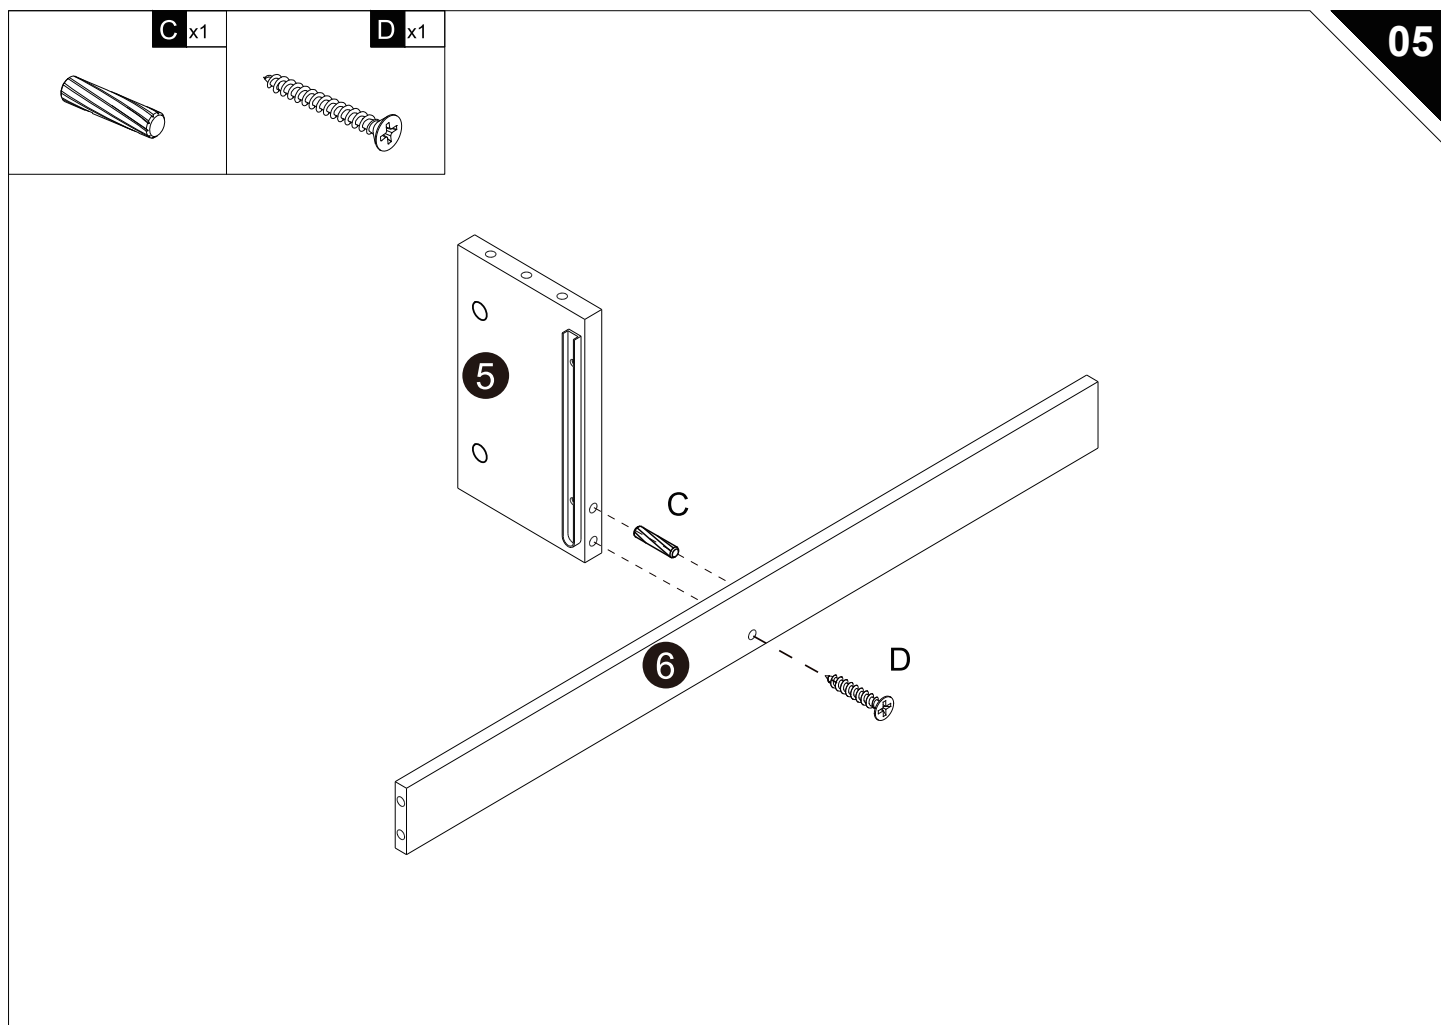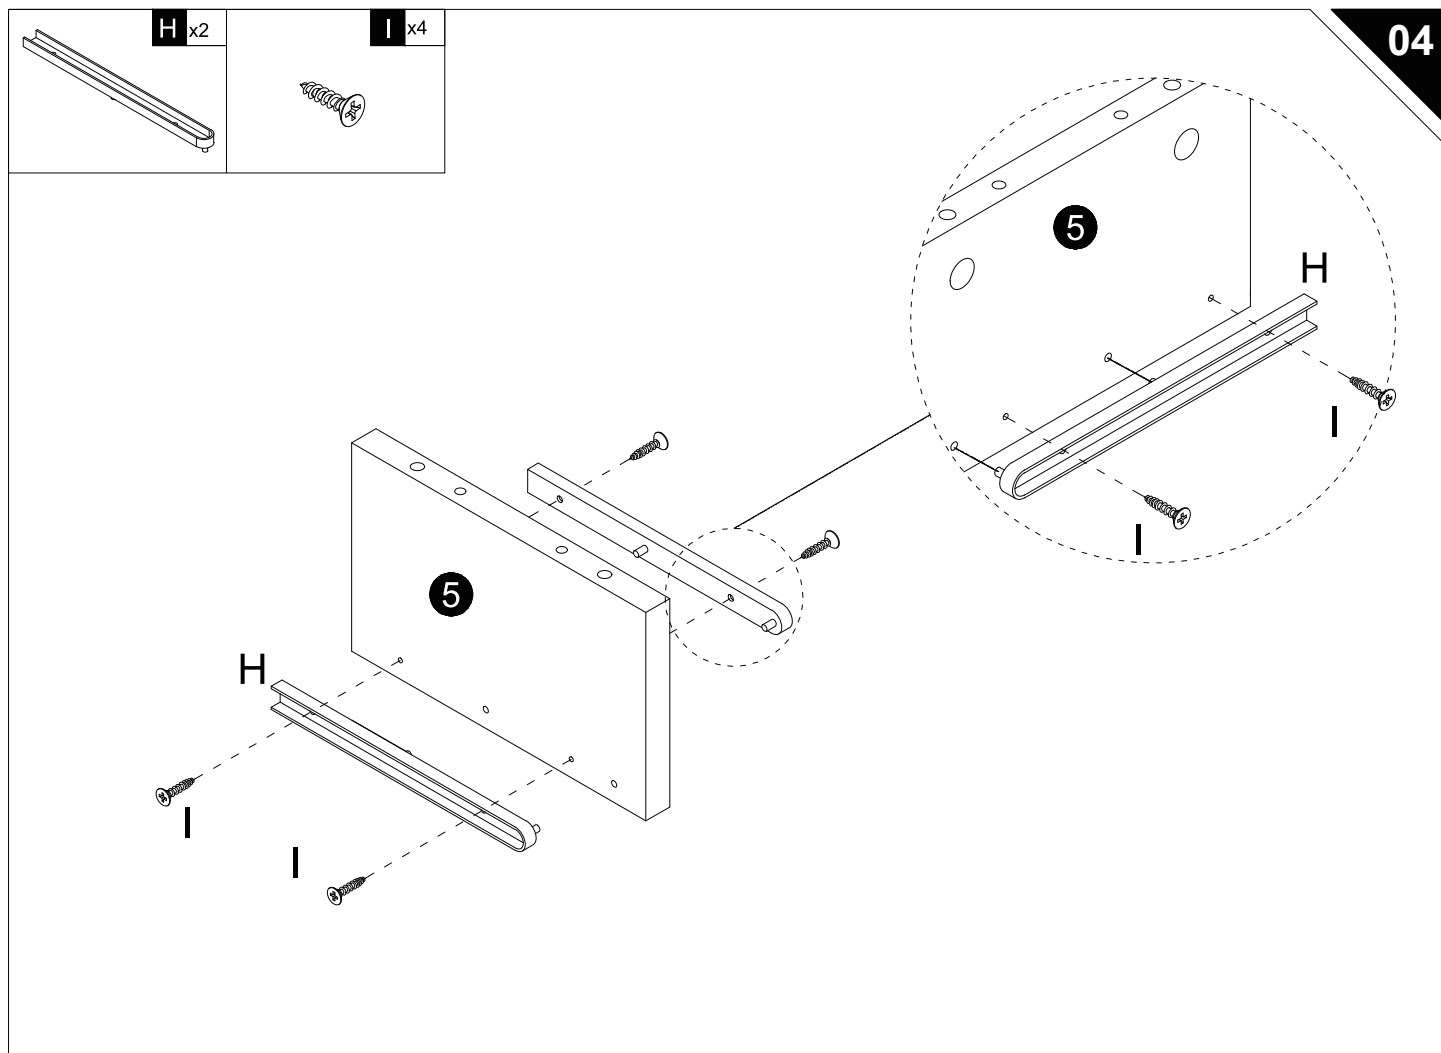


06


A x2



O x2



E x2

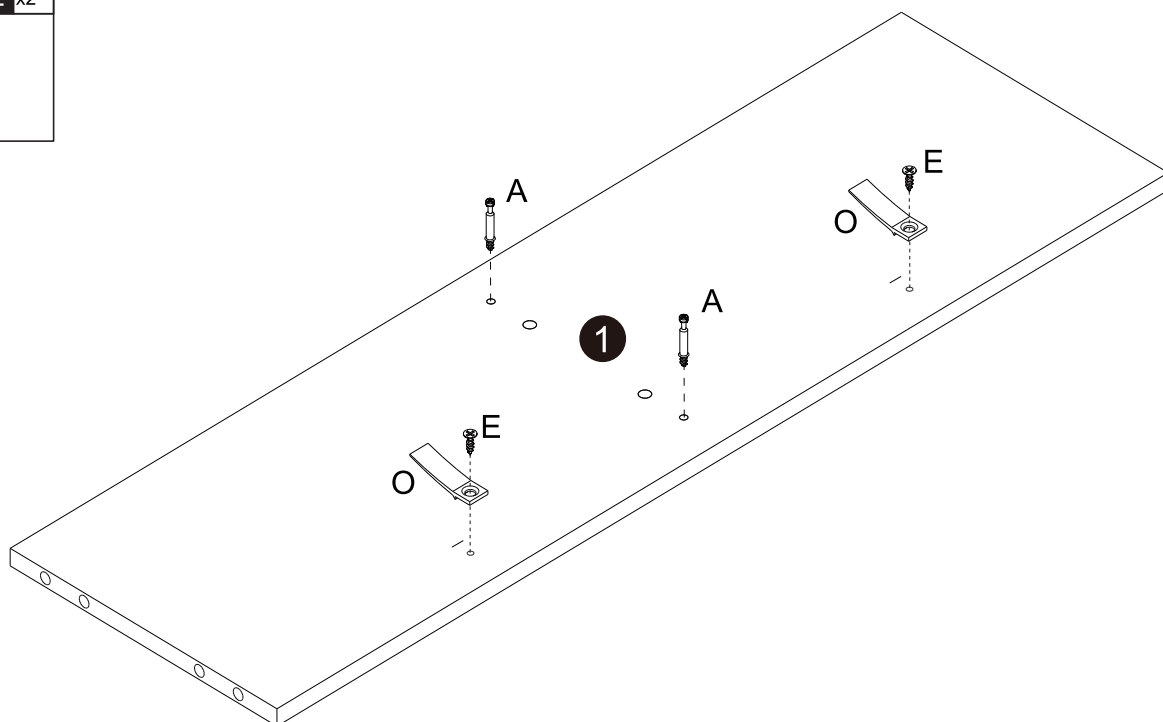


07

B x2





C x2

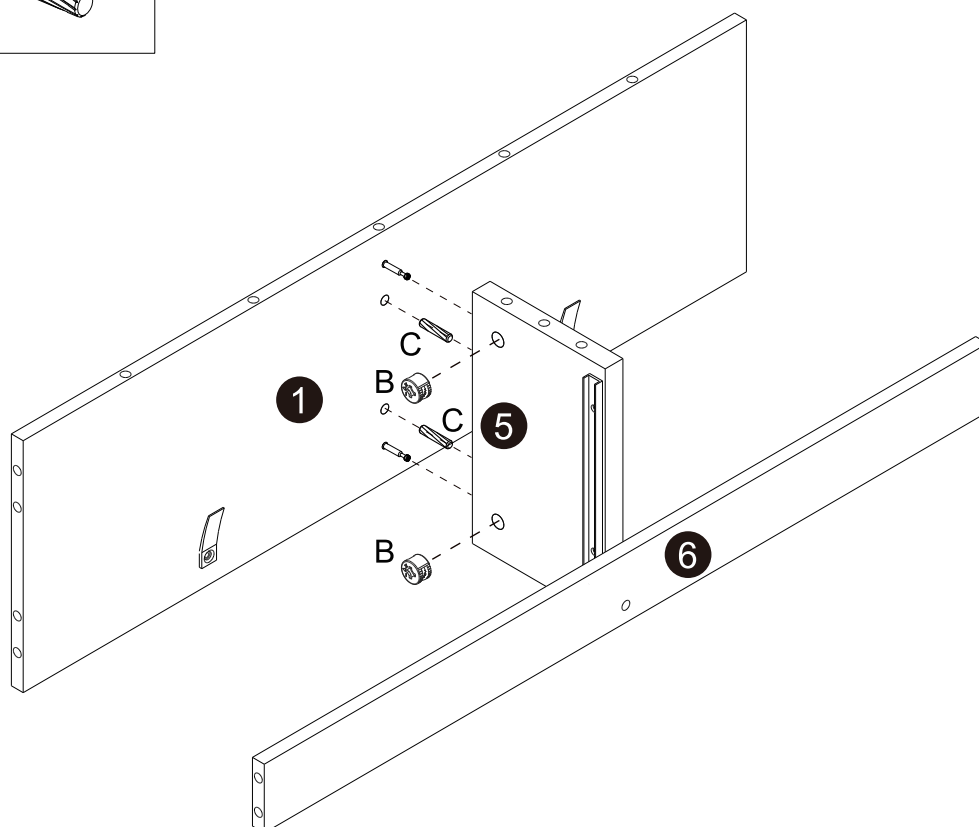



C x4

D x4

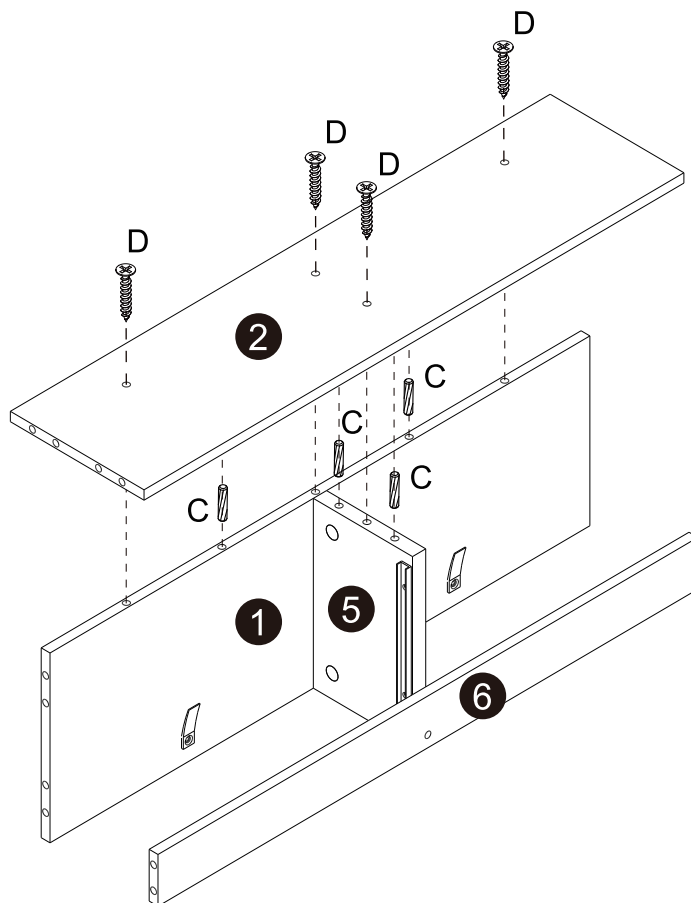



C x6

D x6

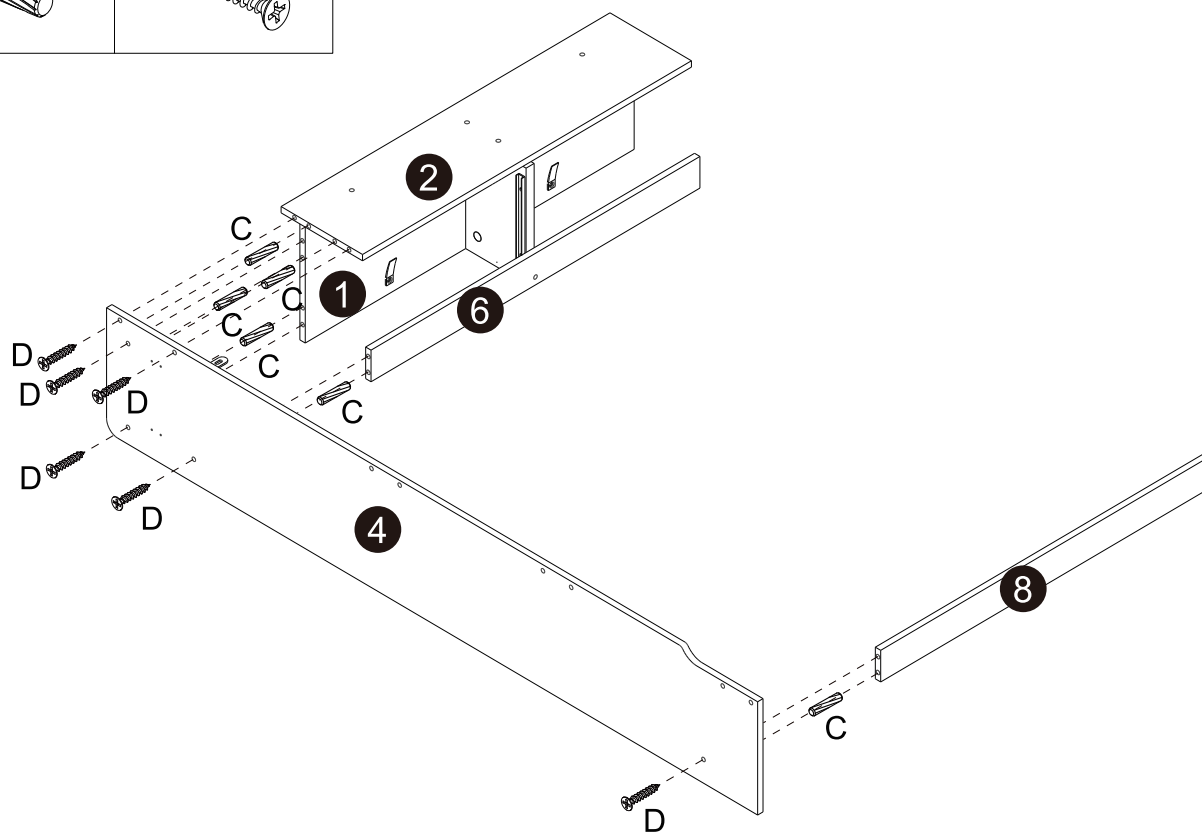


C x3

D x6







During the installation process,
you need to keep your balance
by hand to avoid damage.


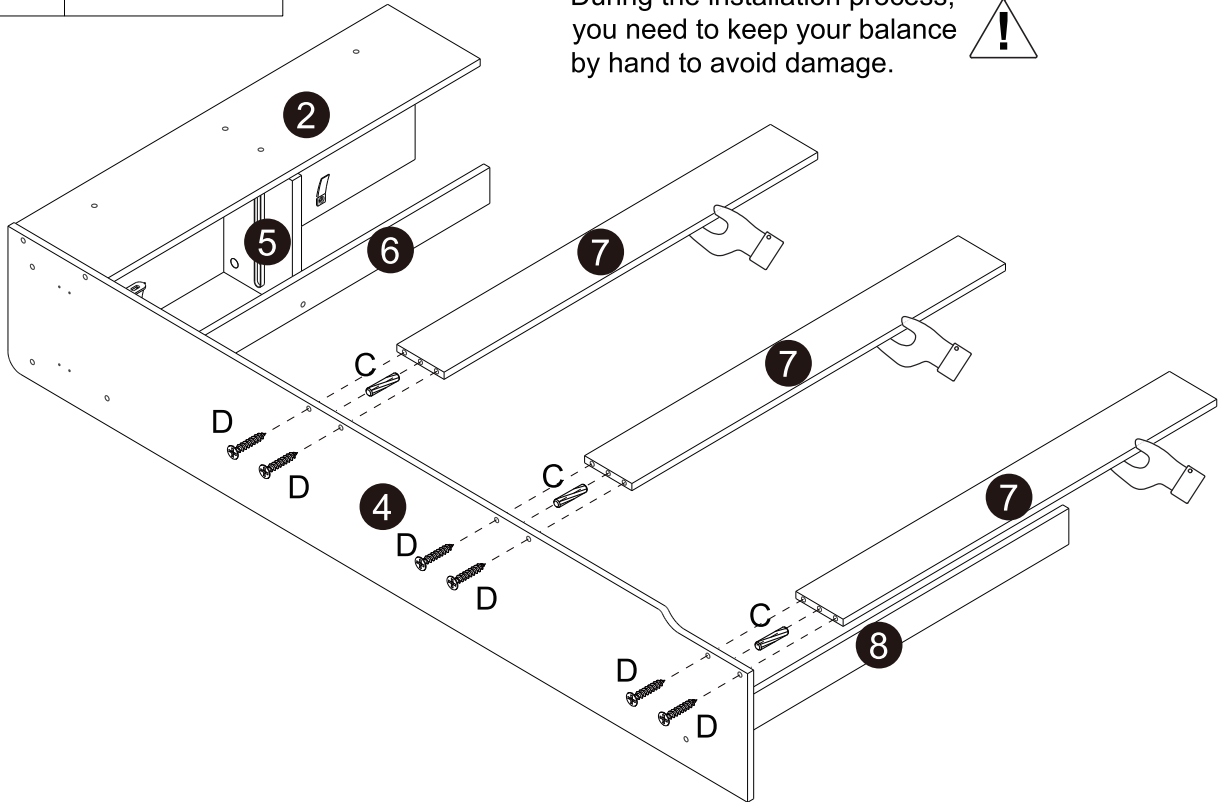


C x9


D x12

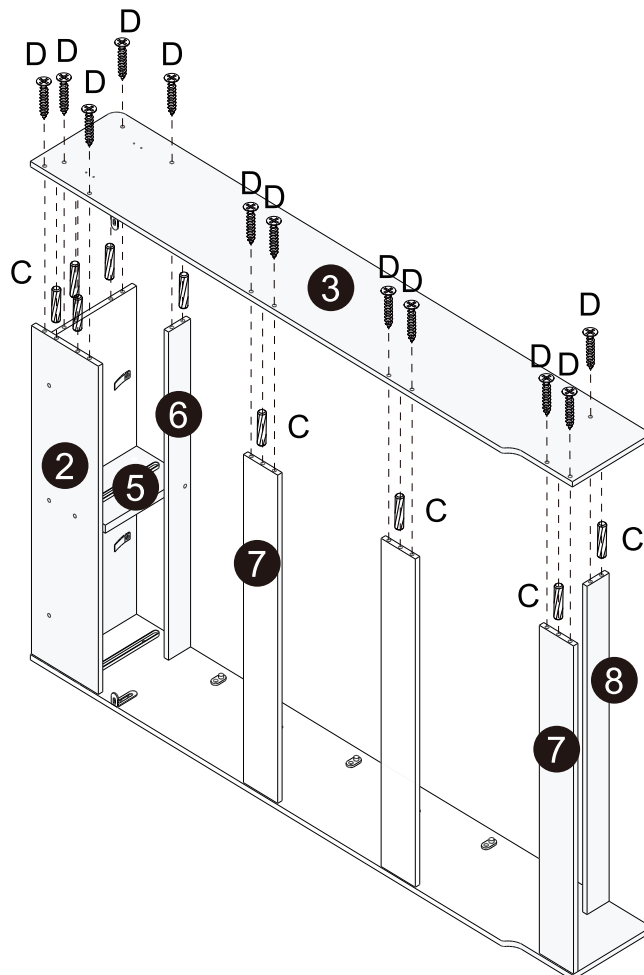

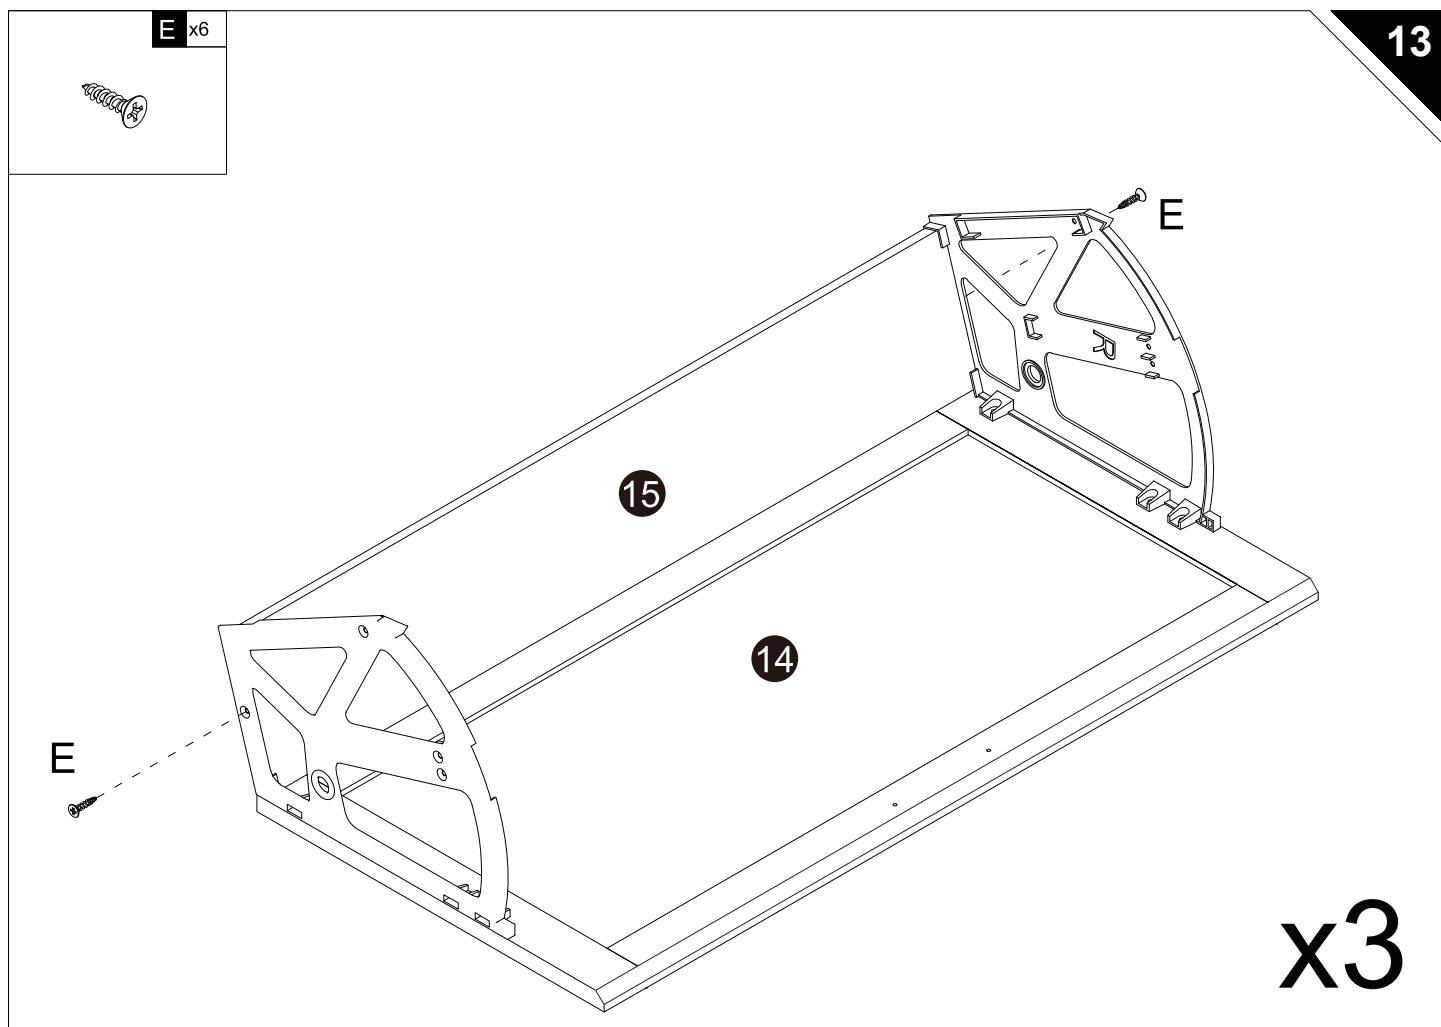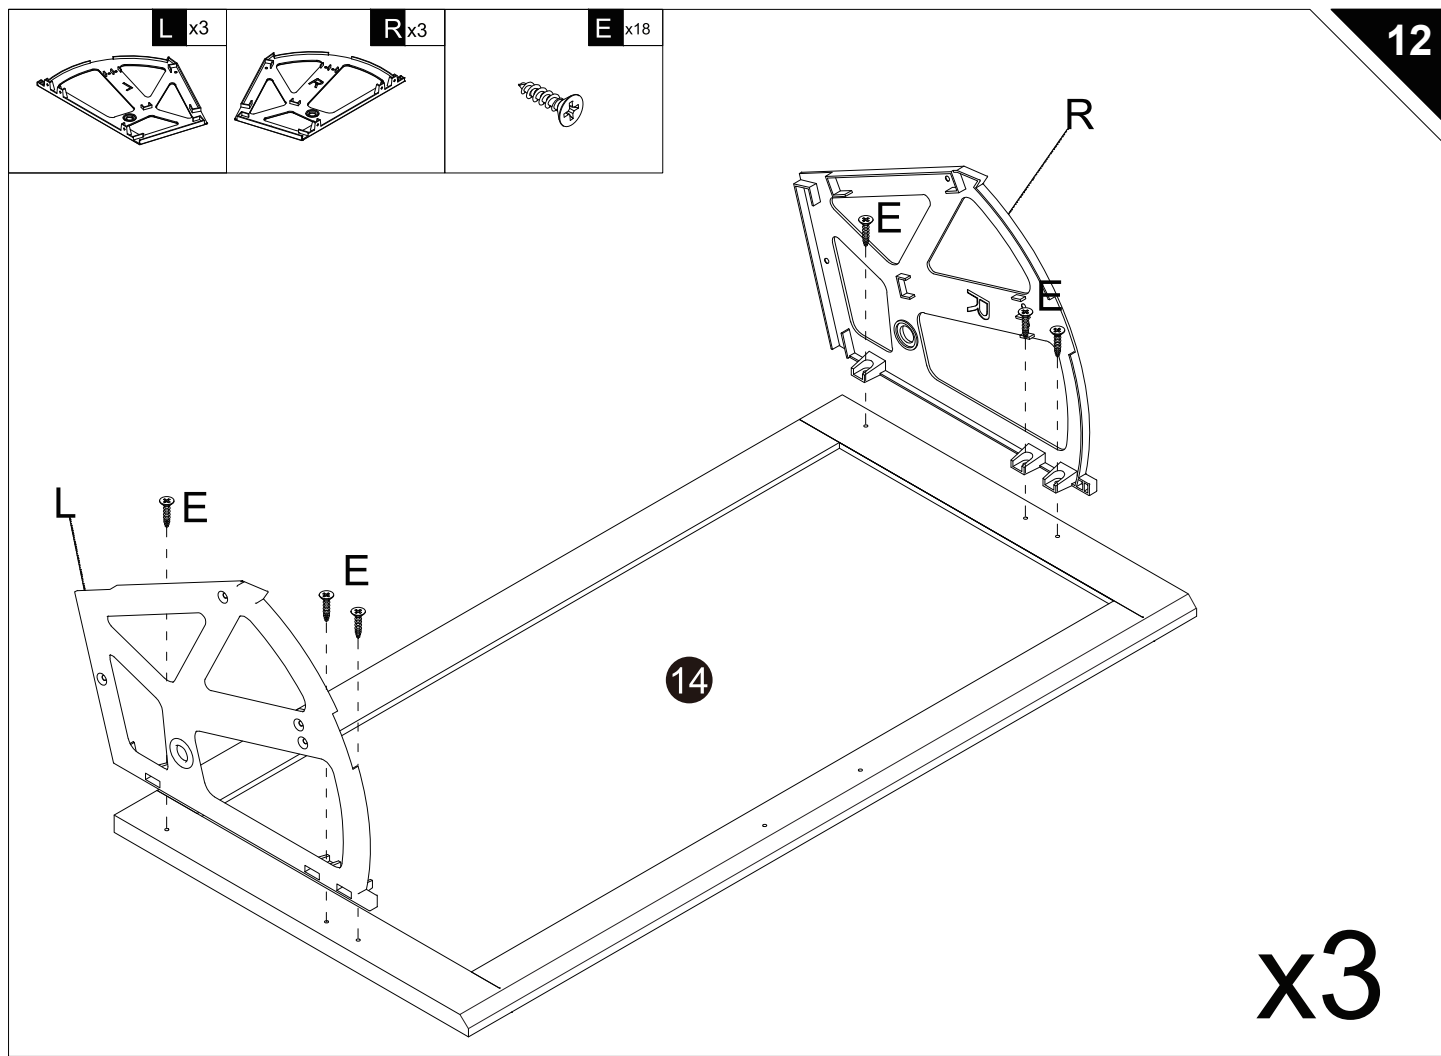


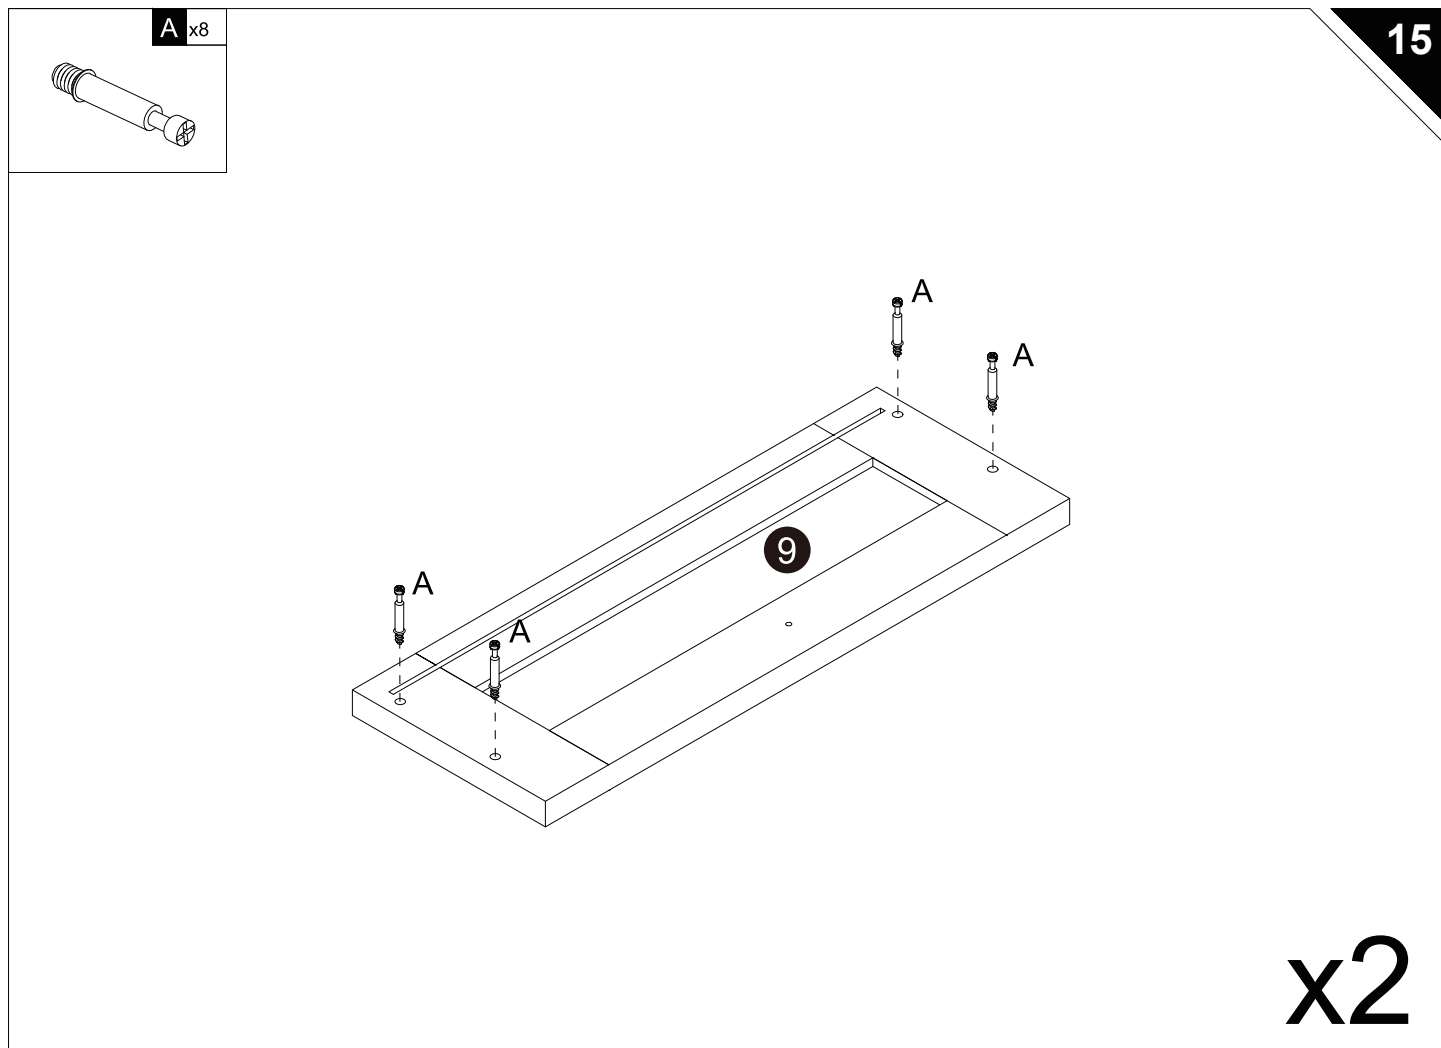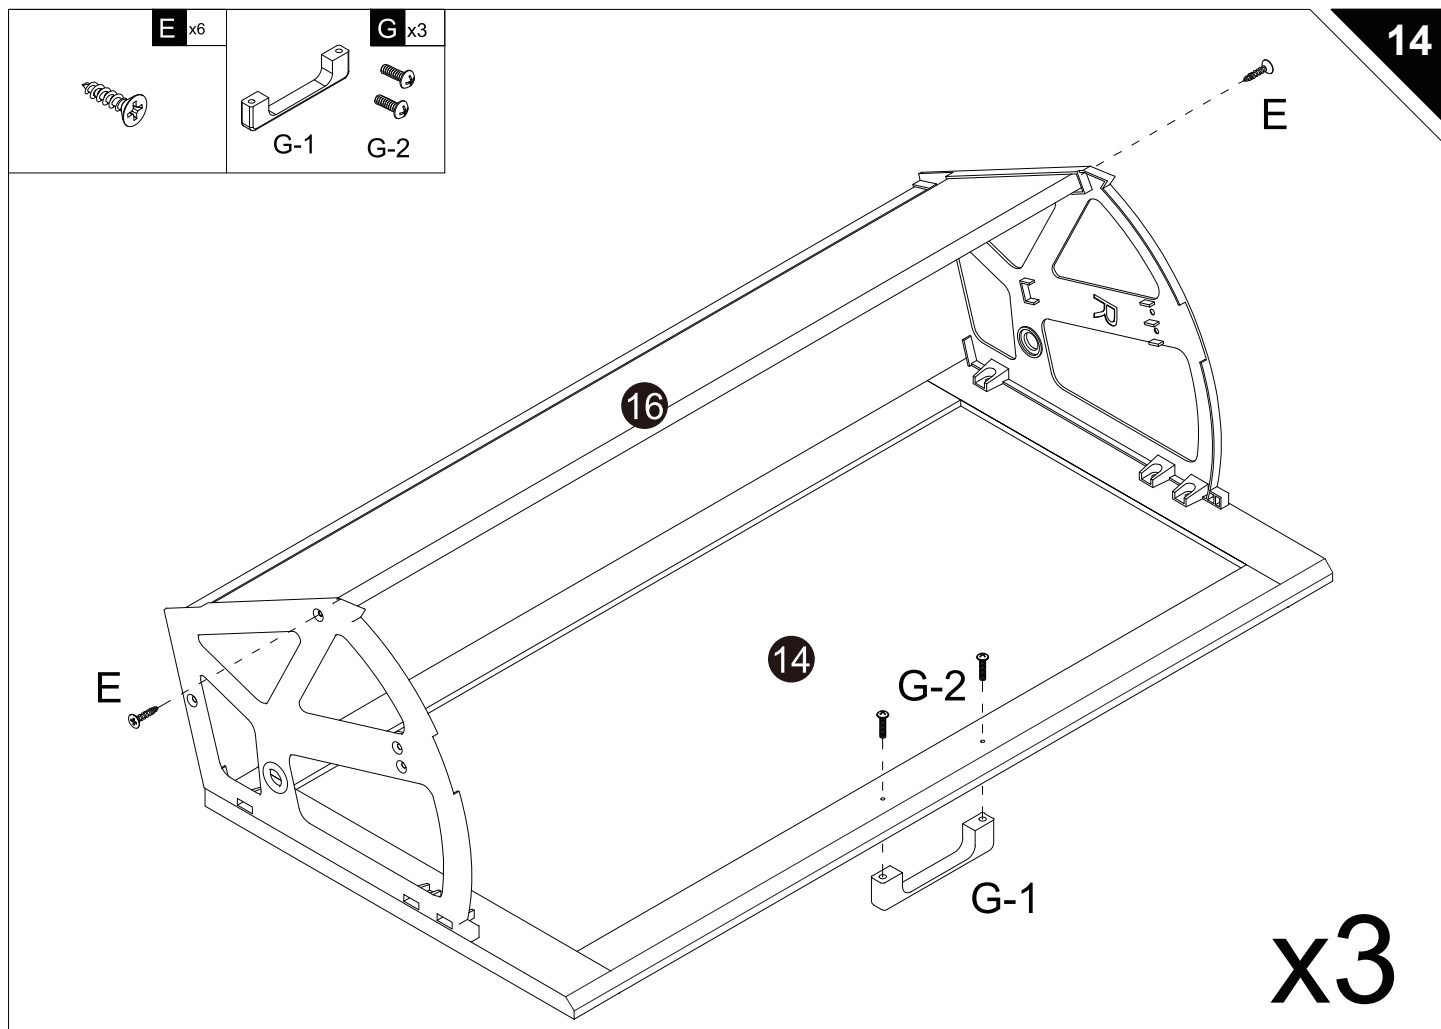

D x8




16

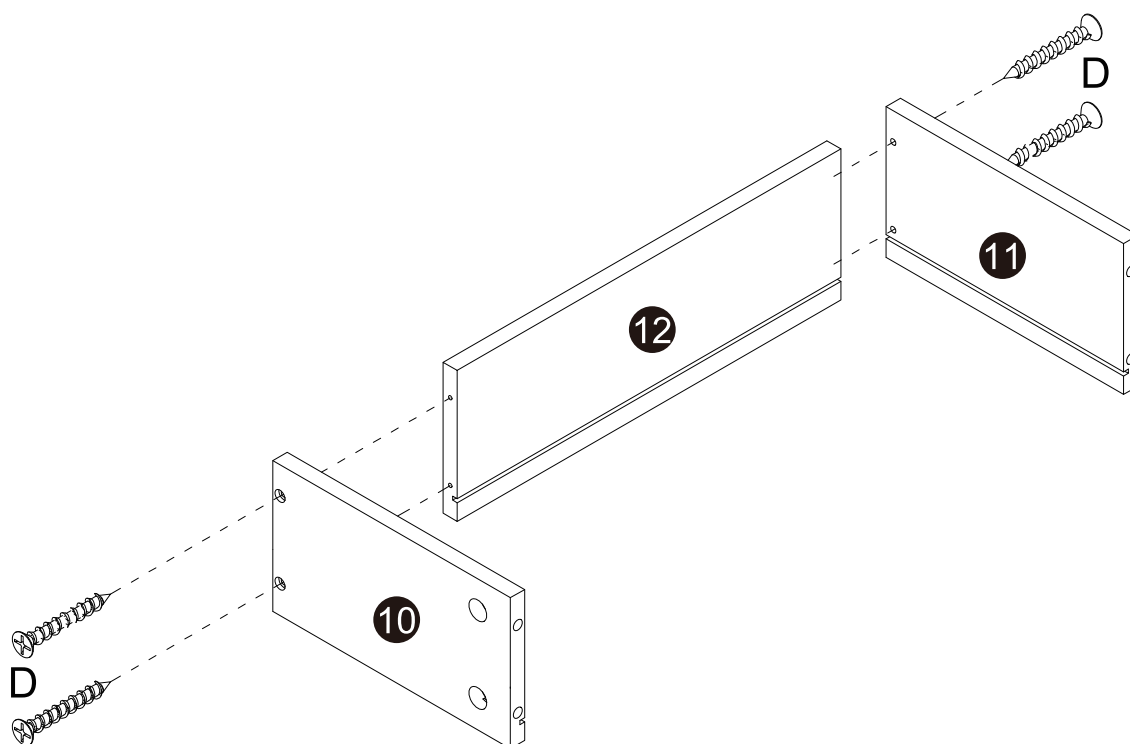

x2


17

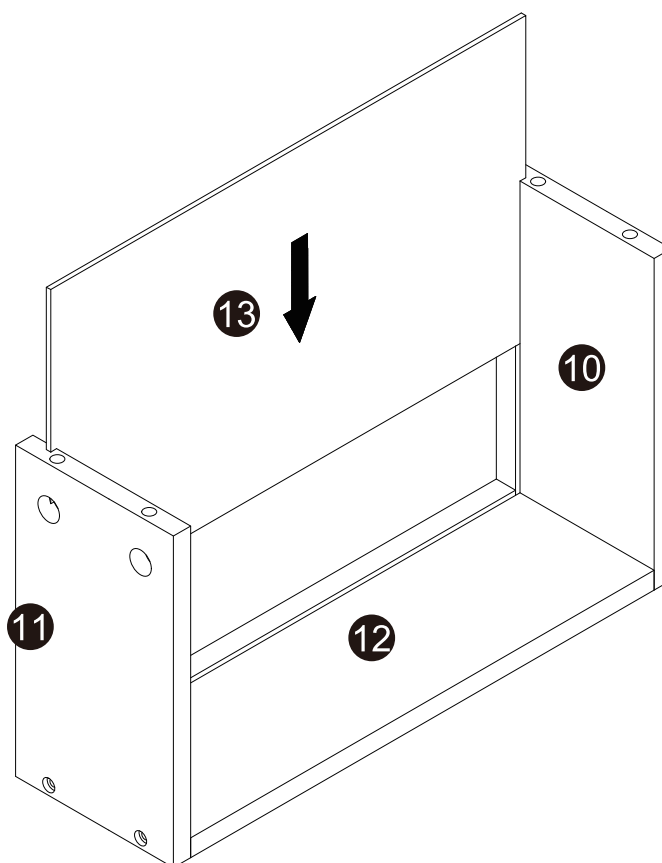

x2

B x8

18

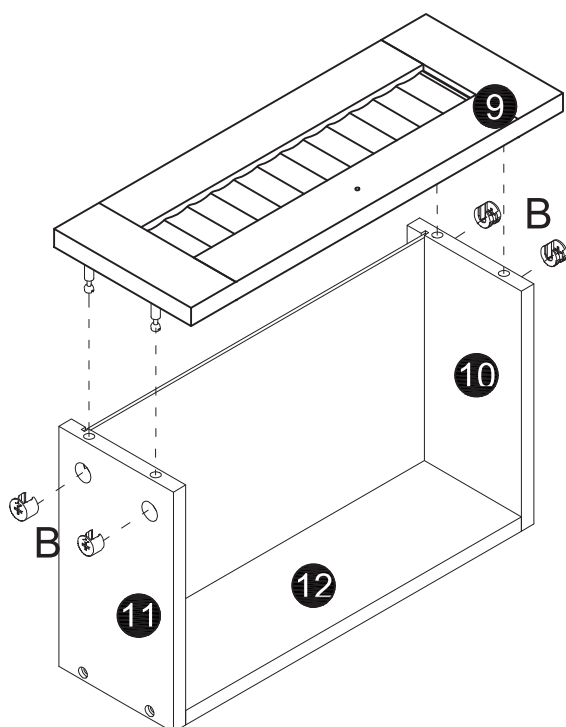

x2


F x2

19



F-1


F-2

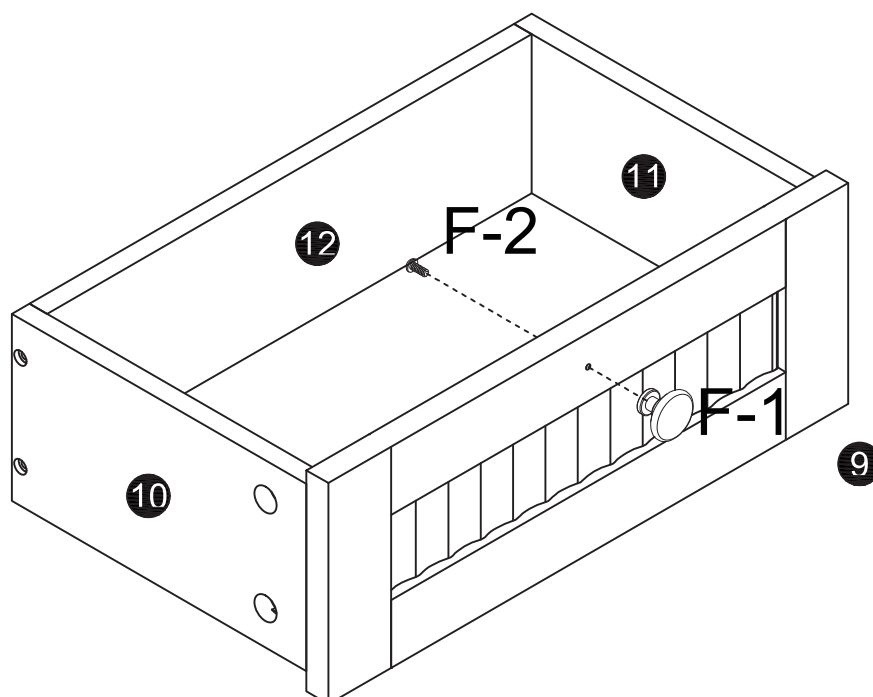

x2


K x2

M x24



K-1

K-2

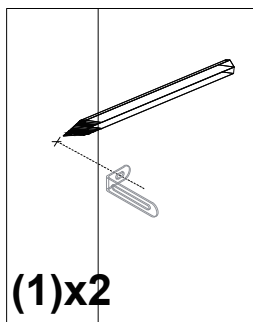

(1)x2

WALL

+
drilling hole
Ø6x30mm

(2)x2




then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL


K-1

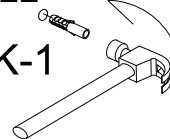

(3)x2

WALL


K-2

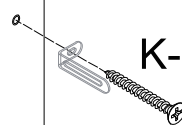

(4)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

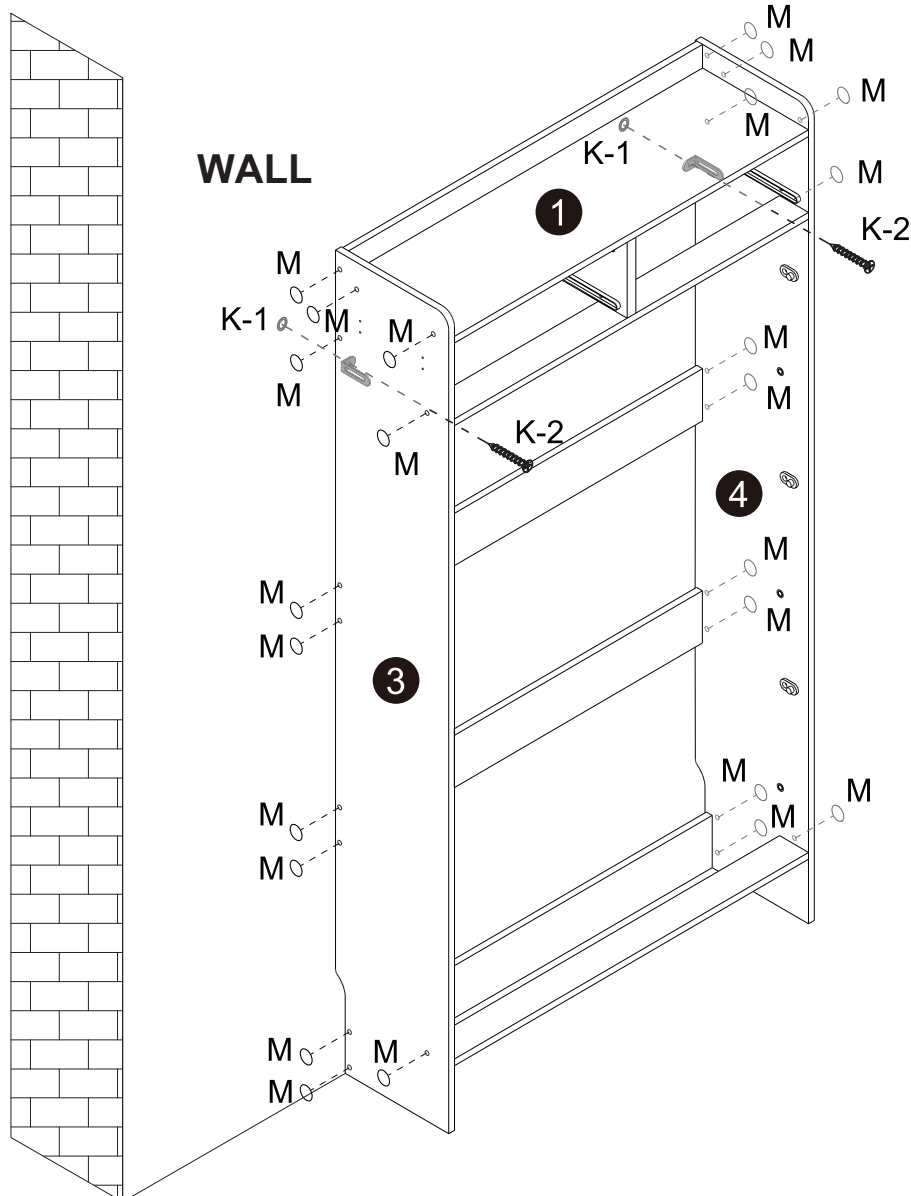


N x6

Q x6





If the installation cannot be placed in the correct position, please try operating at other inclined angles.

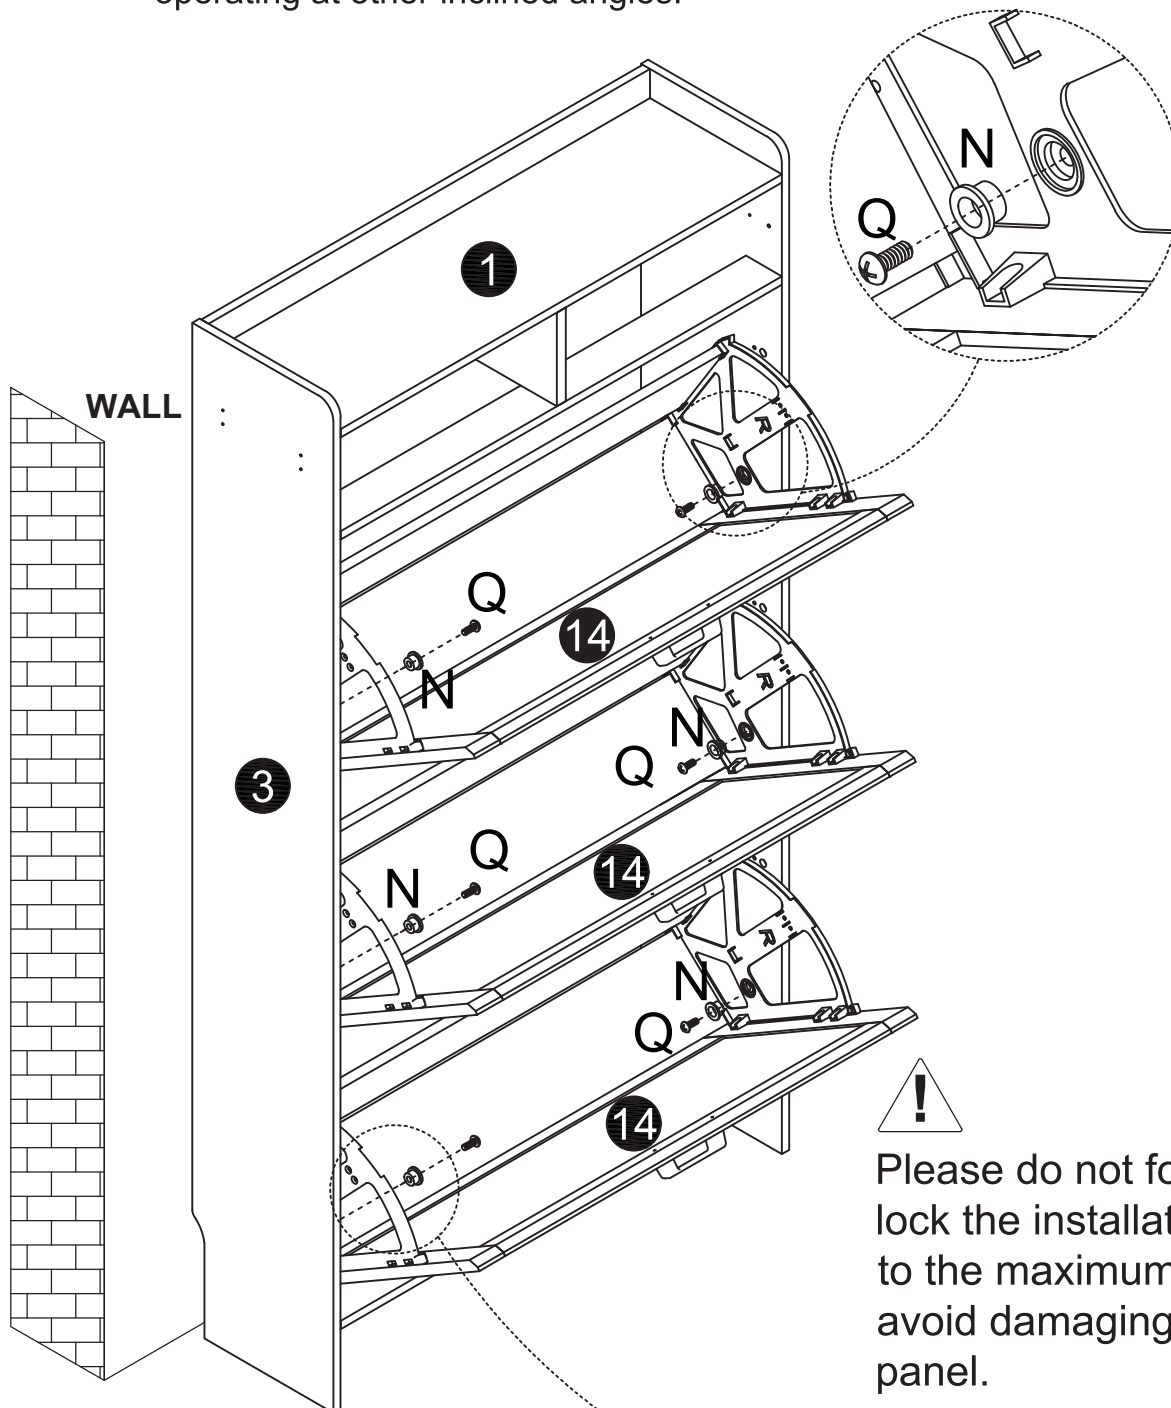


Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.

Note: If the N-2 and accessories (L/R) feel a bit tight, please install the N-2 into the R or L position first, then secure the N-3

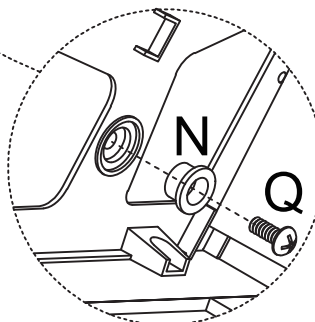

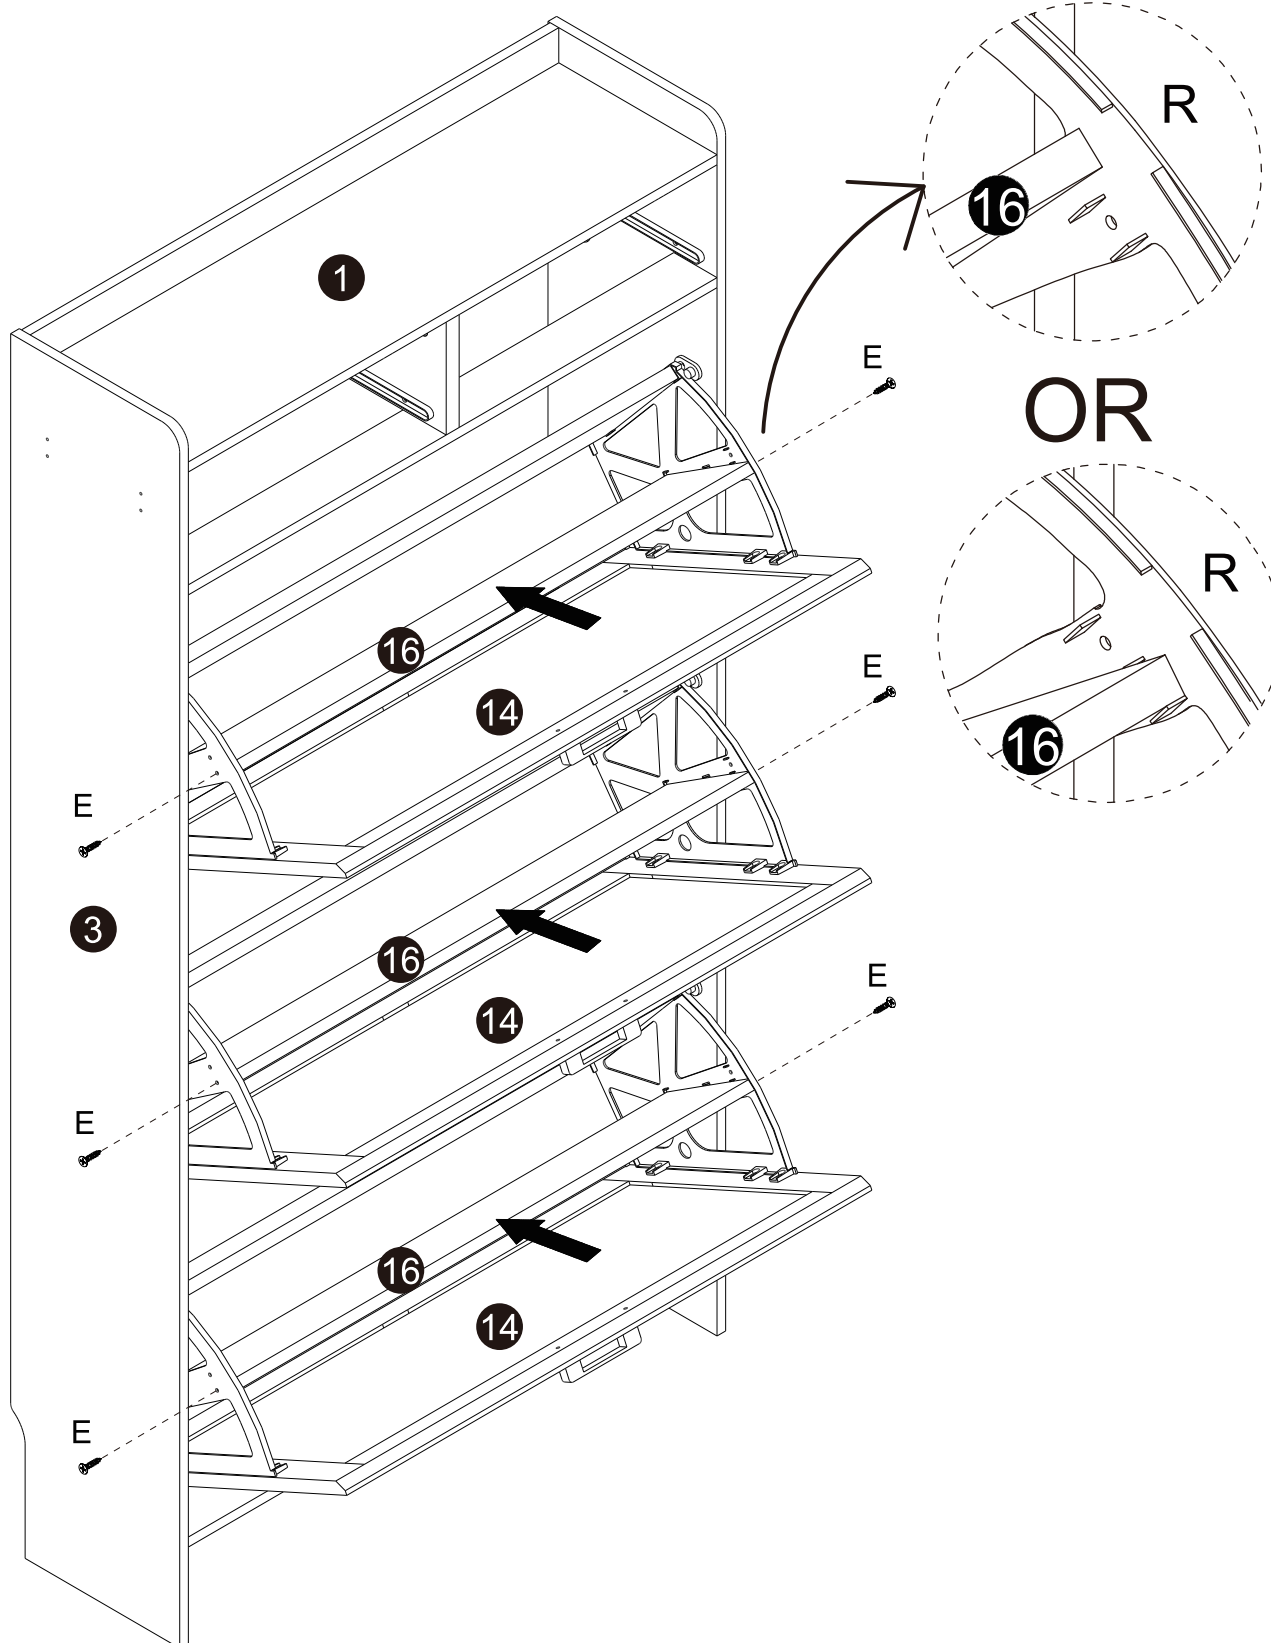

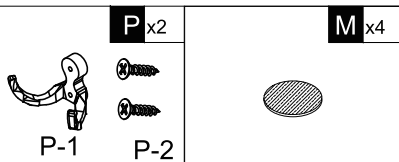

Component P can be freely installed on either panel 3 or panel 4.
The excess holes are allowed to be covered by component M

OR

