



Installation



Wooden Board
3 pcs (L/M/S)



Bracket
6 pcs



Short Screw
12 pcs





Long Screw
6 pcs



Wall Plug
6 pcs



Step 1:

Place the wood board in from one side of the brackets. Align the brackets and the board and find the small holes on the brackets, then screw the small screws to fix the wood board with brackets.

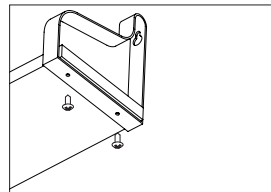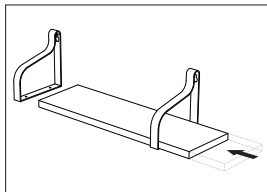



Step 2:

Keep the wood board horizontally, then mark two gauge points from the holes at top of iron brackets.

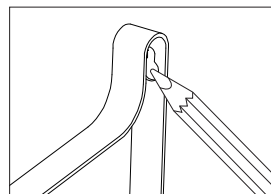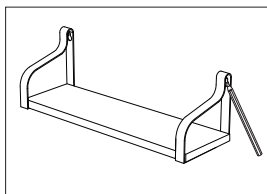


Step 3:

Drill holes at the marked points and hammer the wall plugs in.

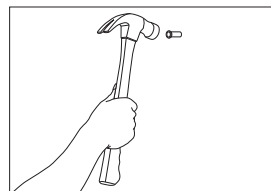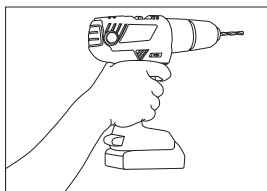

Step 4:

Screw the long screws in.
(NOT totally in, leave the screws out for hanging).

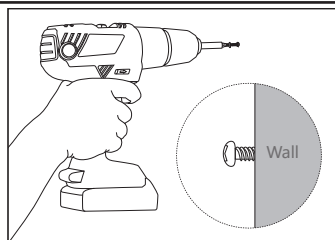

Step 5:

Align the holes of iron bracket with screws, hang the bracket onto the screws and pull down to fasten.

