

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A	TOP		1PC
C	TRESTLE BAR		1PC
D	LEAF		2PCS

B2 (BOX 2)


B	BASE		2PCS
---	------	--	------

HARDWARE IDENTIFICATION


Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED

1	THREADED BOLT (M8 x 100mm - BLK)		2PCS
2	HEX NUT (M8 x 15mm - RBW)		2PCS
3	BIG WRENCH (2 x 24 x 90mm - RBW)		1PC
4	BOLT (M8 x 50mm - RBW)		8PCS
5	LOCK WASHER (M8 - RBW)		8PCS
6	FLAT WASHER (M8 - RBW)		8PCS
7	SMALL WRENCH (M12 - SR)		1PC

ASSEMBLY INSTRUCTIONS
STEP 1

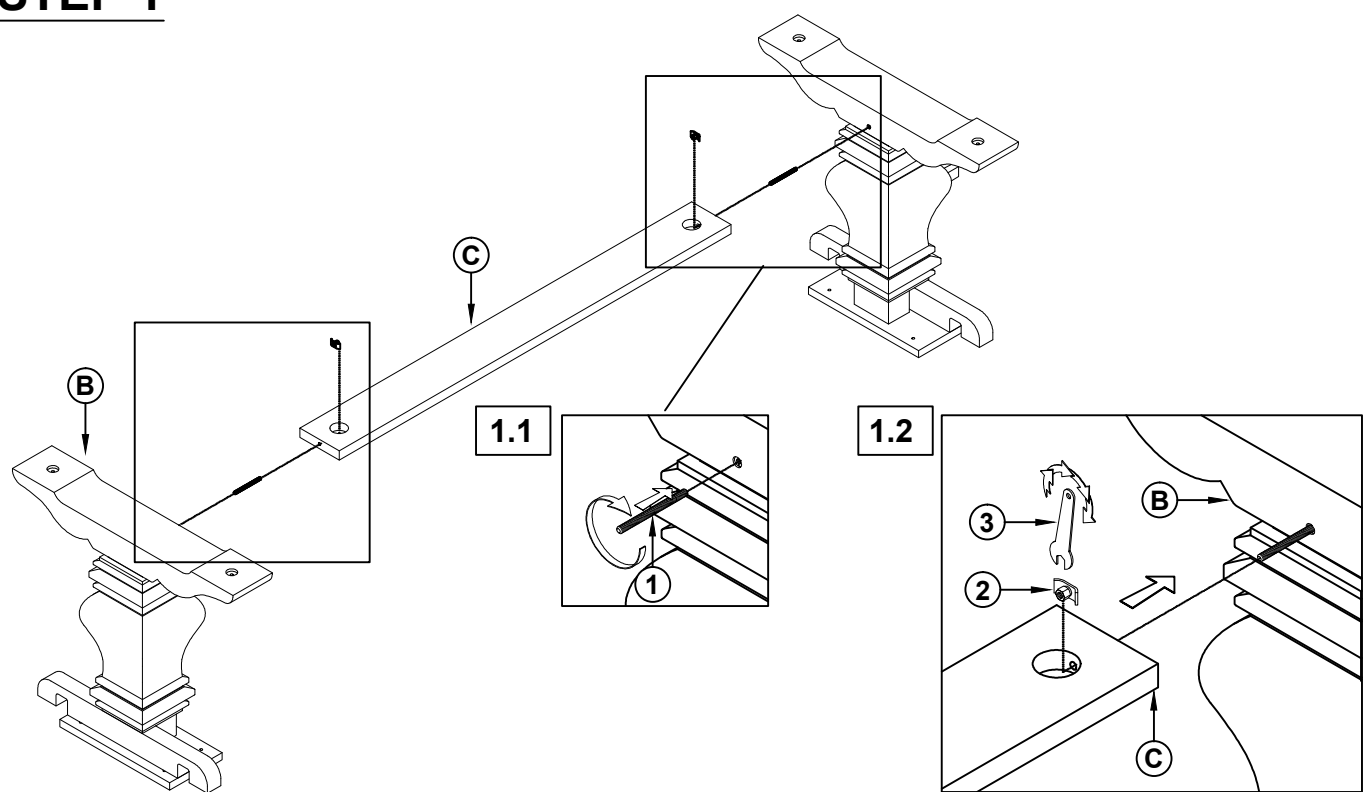


STEP 2

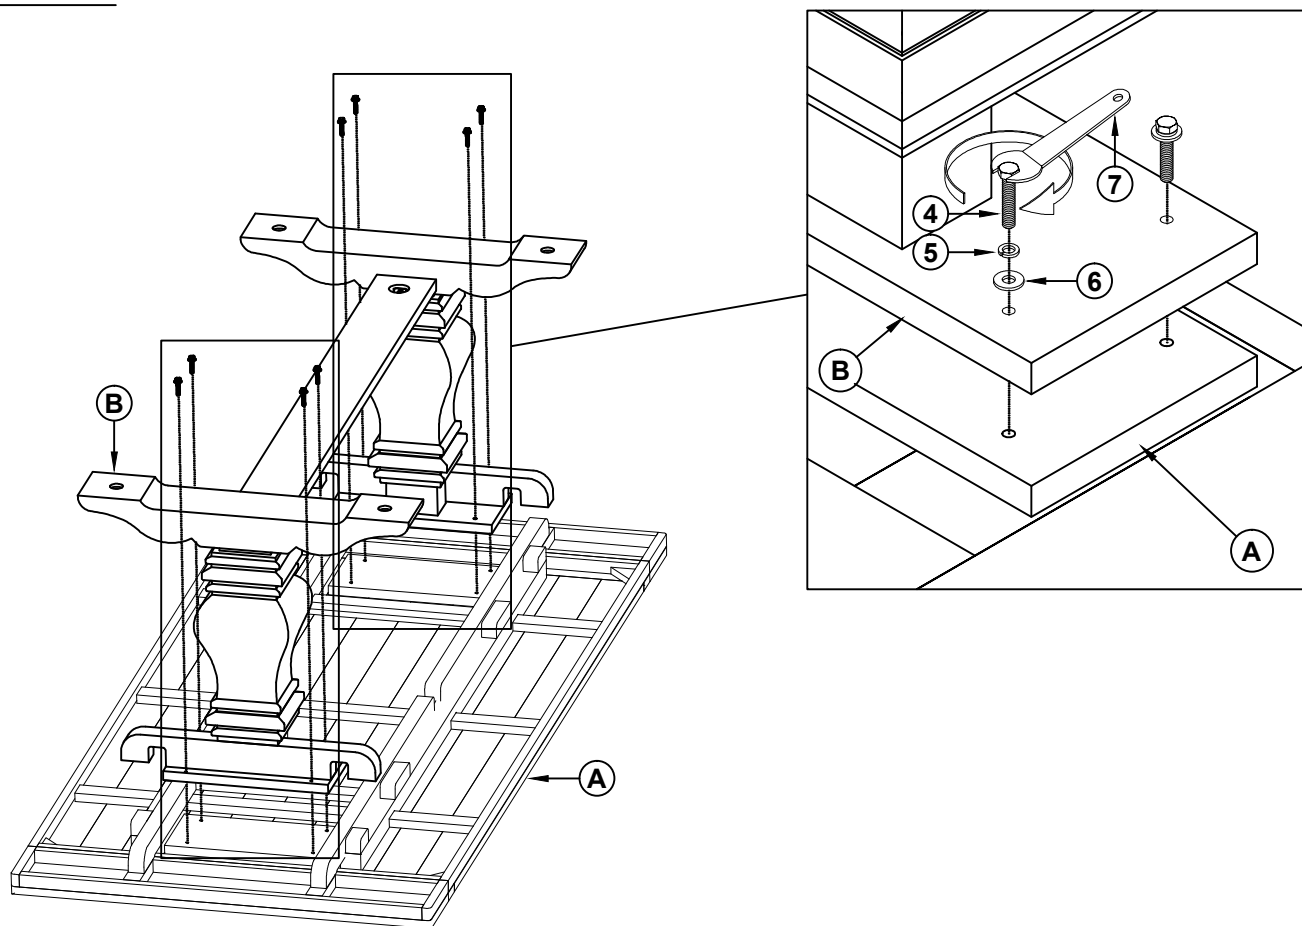


ASSEMBLY INSTRUCTIONS

STEP 3

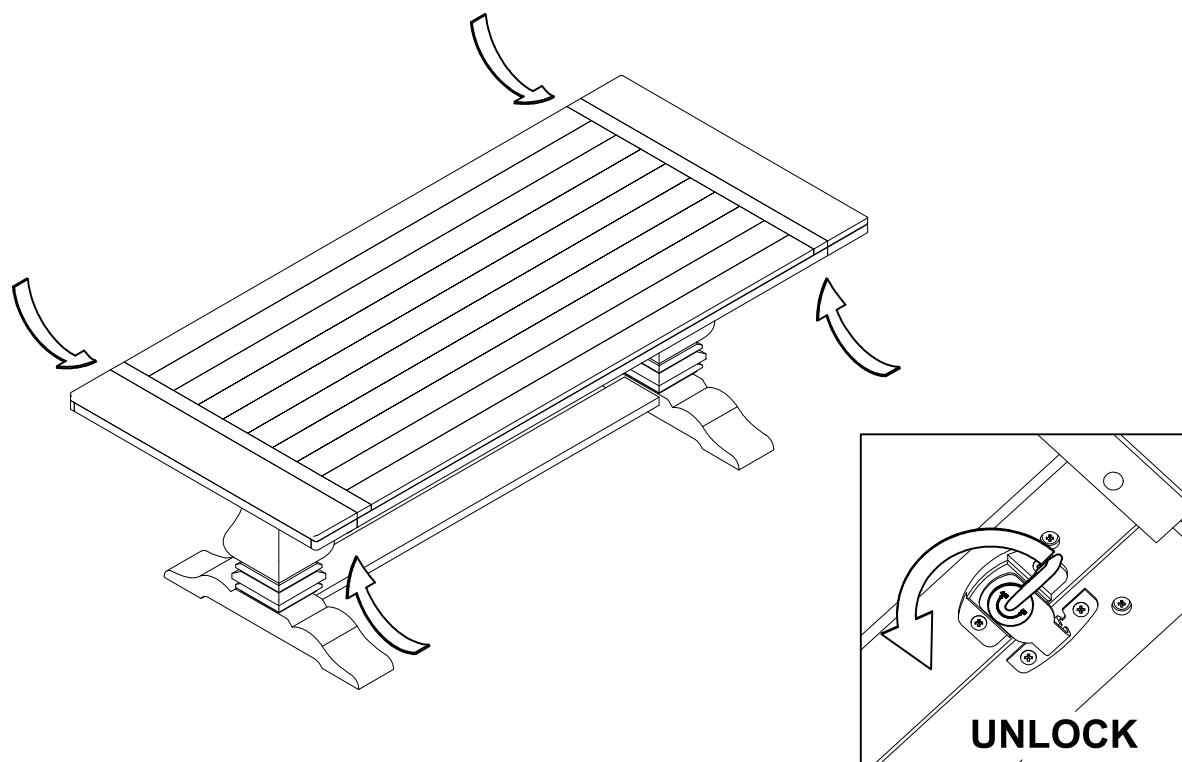


STEP 4

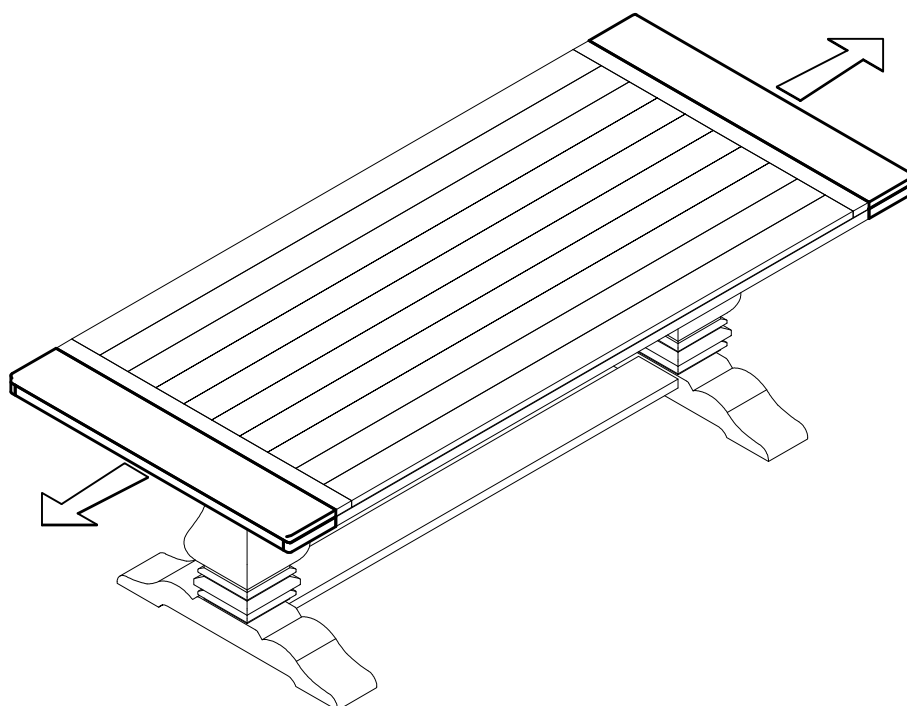


ASSEMBLY INSTRUCTIONS

STEP 5

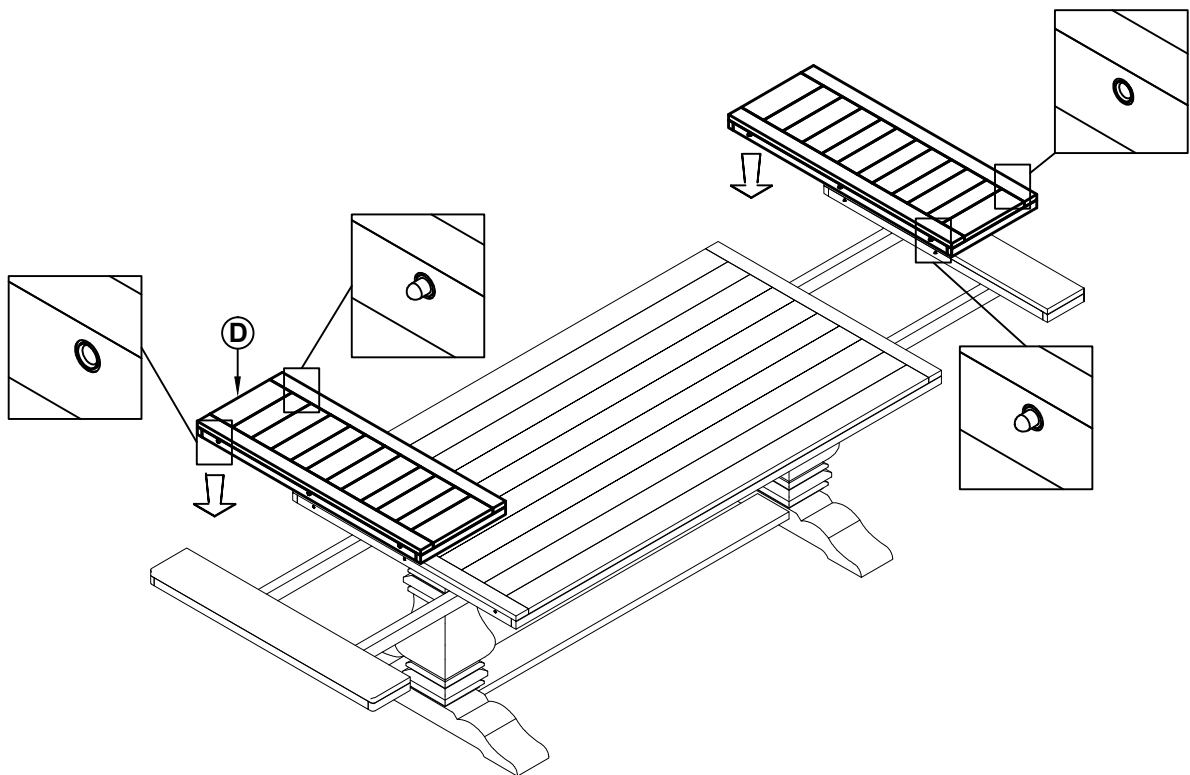


STEP 6


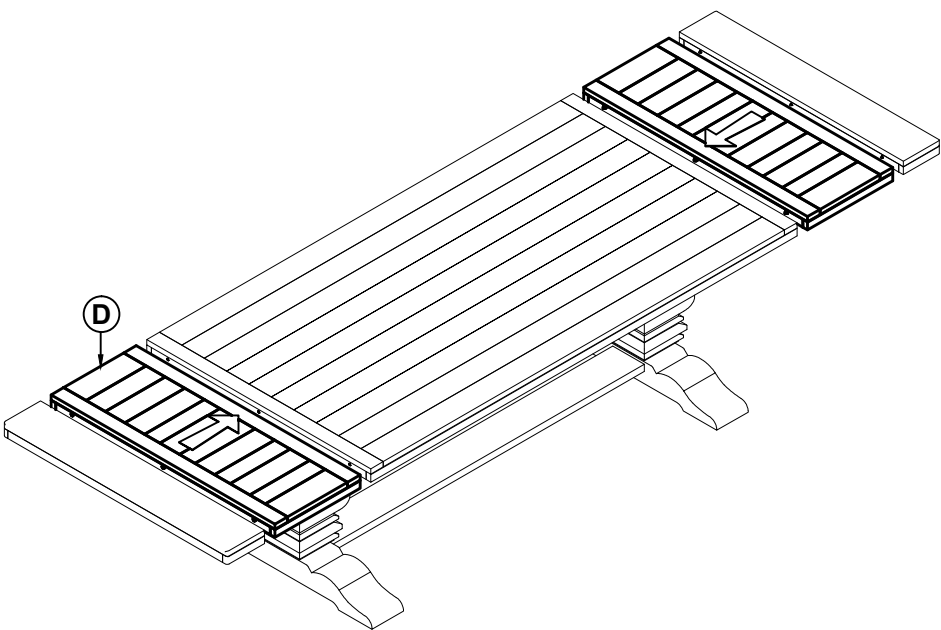


ASSEMBLY INSTRUCTIONS

STEP 7

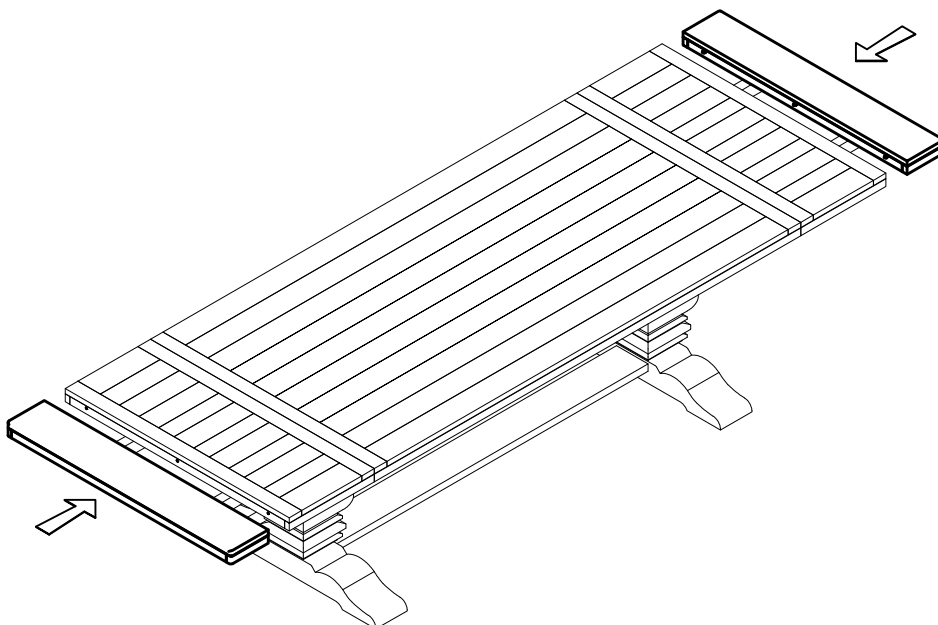



STEP 8

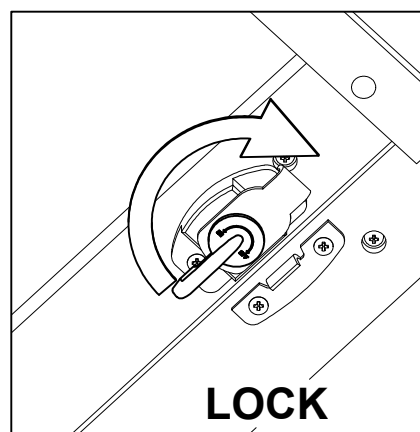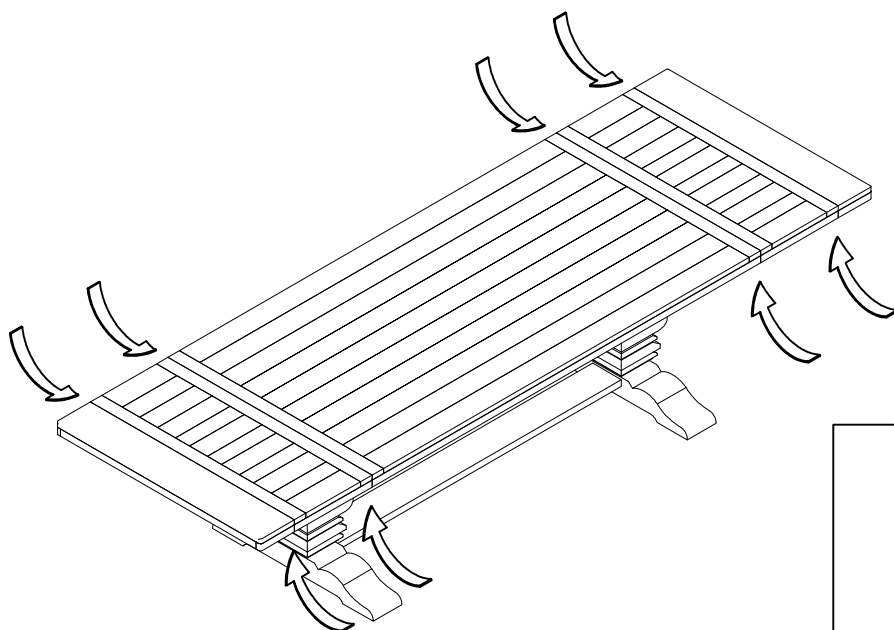

ASSEMBLY INSTRUCTIONS

STEP 9 COMPLETE

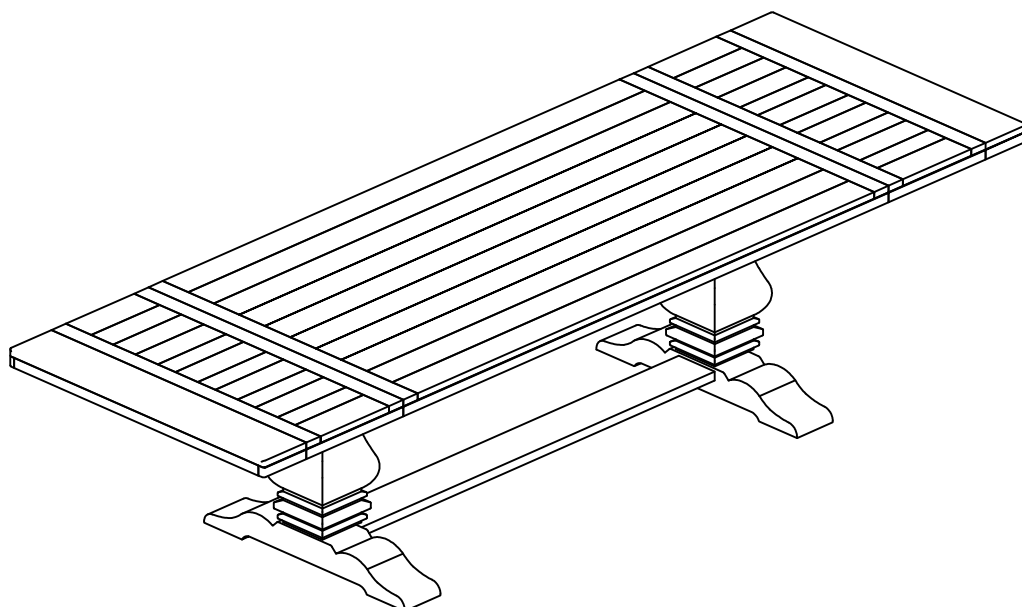

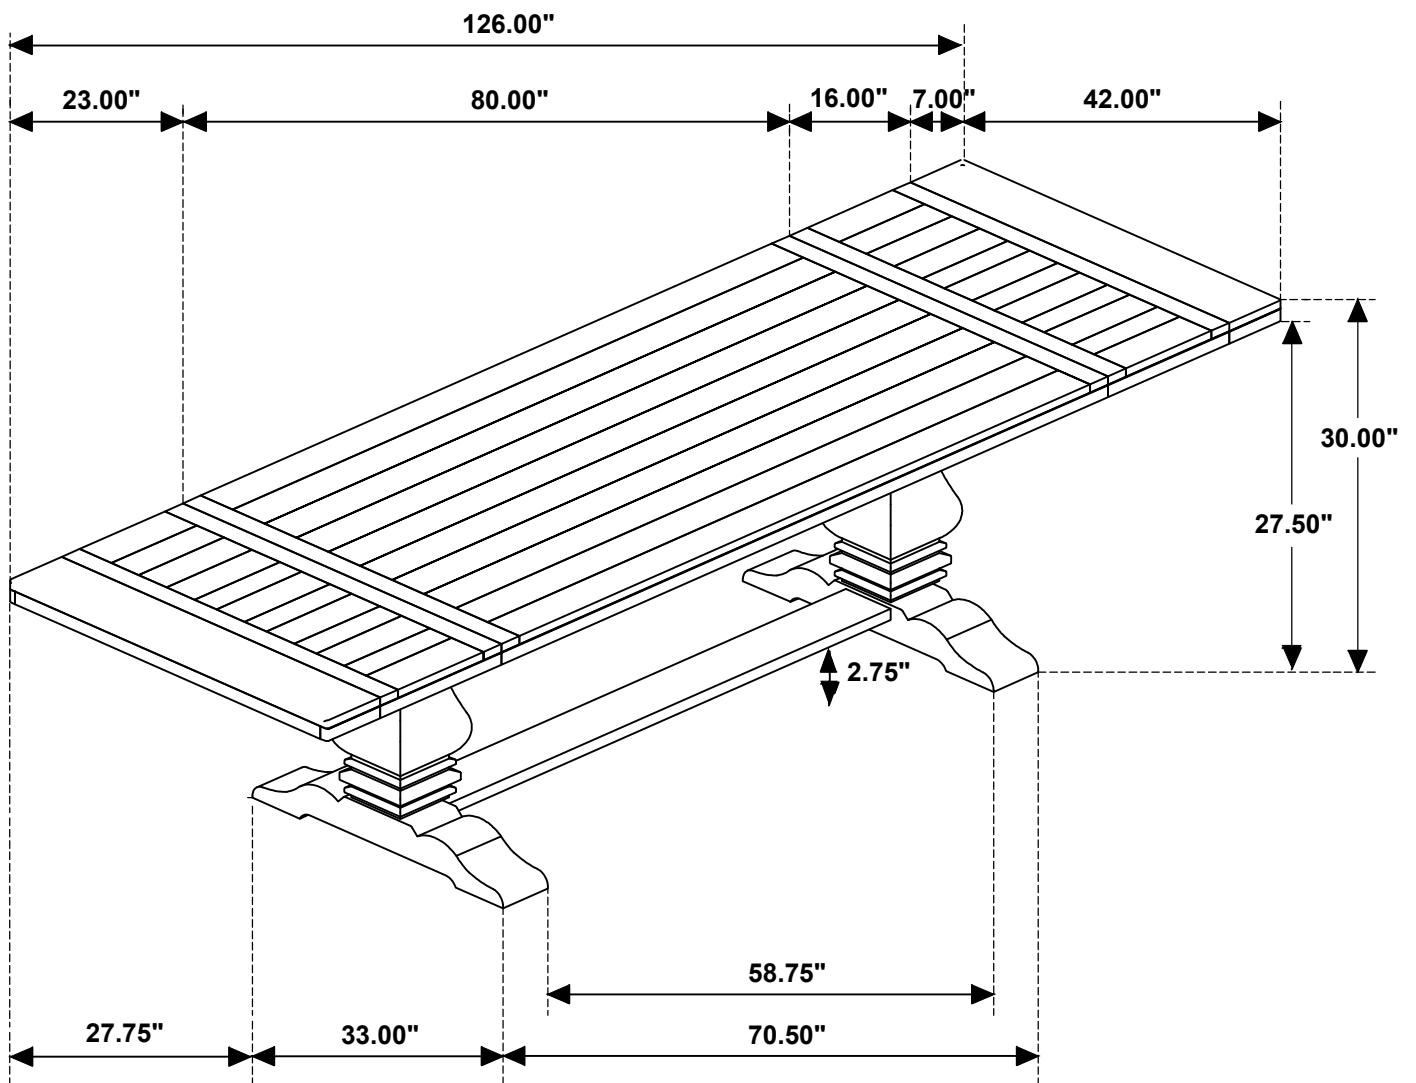

Note: Dimension tolerance $\pm 5\%$