
SUMERAIN®

Model: S1394XI

US Version: 3.0

INSTALLATION GUIDE




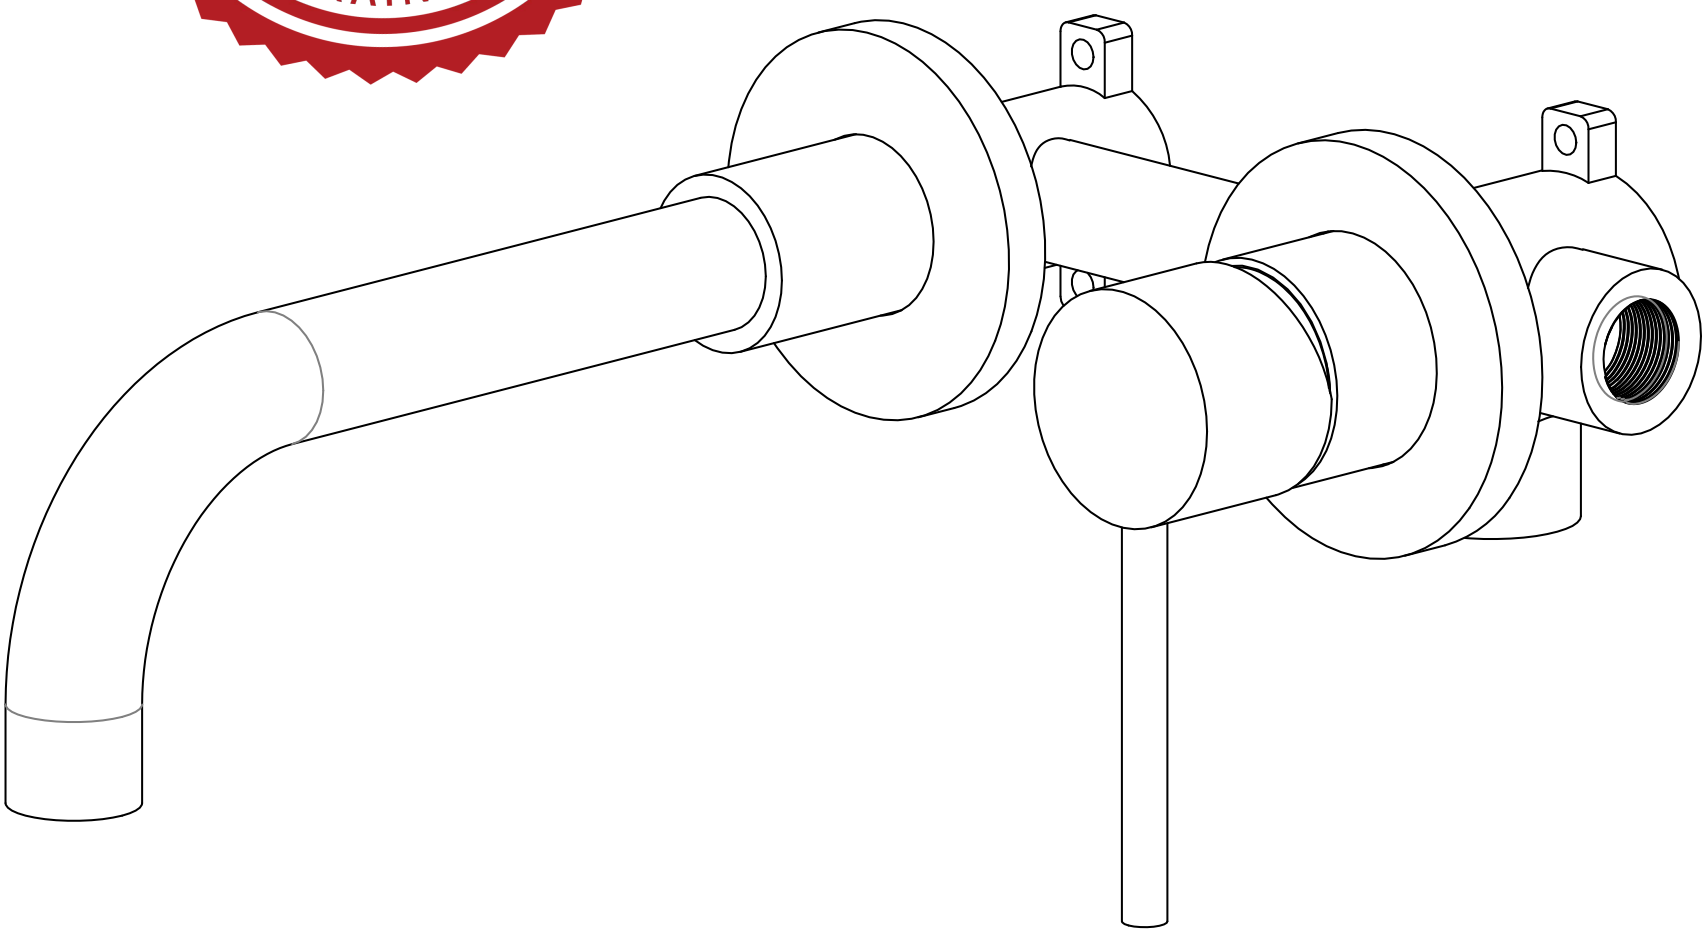


WALL MOUNTED BATHROOM SINK FAUCET

CUSTOMER CARE LINE: +1-866-203-0866


TOOLS RECOMMENDED

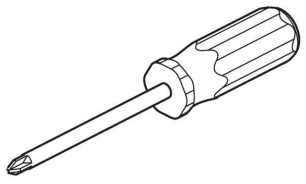

Philips screwdriver

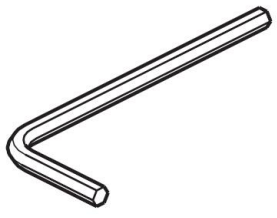


Allen wrench

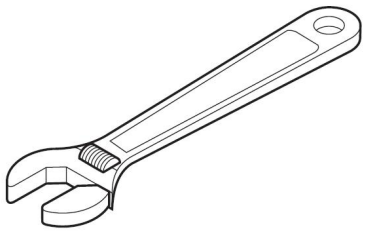

Adjustable wrench



Channel locks

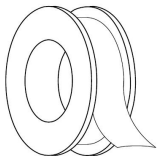

Teflon tape

1. BEFORE PROCEEDING



WARNING: Before proceeding with any operation, please read all instructions thoroughly. If you are uncertain about installing this product, please consult a professional! This product should be installed in accordance with all local and state plumbing and building codes. It is recommended to seek professional assistance.

2. SHUT OFF WATER SUPPLY


Locate the water supply inlets and shut off the corresponding water supply valves, typically found near the water meter. If replacing an existing unit, remove the old unit and thoroughly clean the mounting surface.

3. CHECK THE COMPONENTS OF THE BOX


Upon opening the box, verify the presence of the following items. If any of these items are missing, please contact SUMERAIN consumer service via email: support@sumerain.com.

4. VALVE TRIM SET INSTALLATION


4.1 Prepare a mounting rack, typically made from wood, for the installation of the rough-in valve. The front face of the mounting rack should be positioned between “A” and “B” behind the finished wall surface.

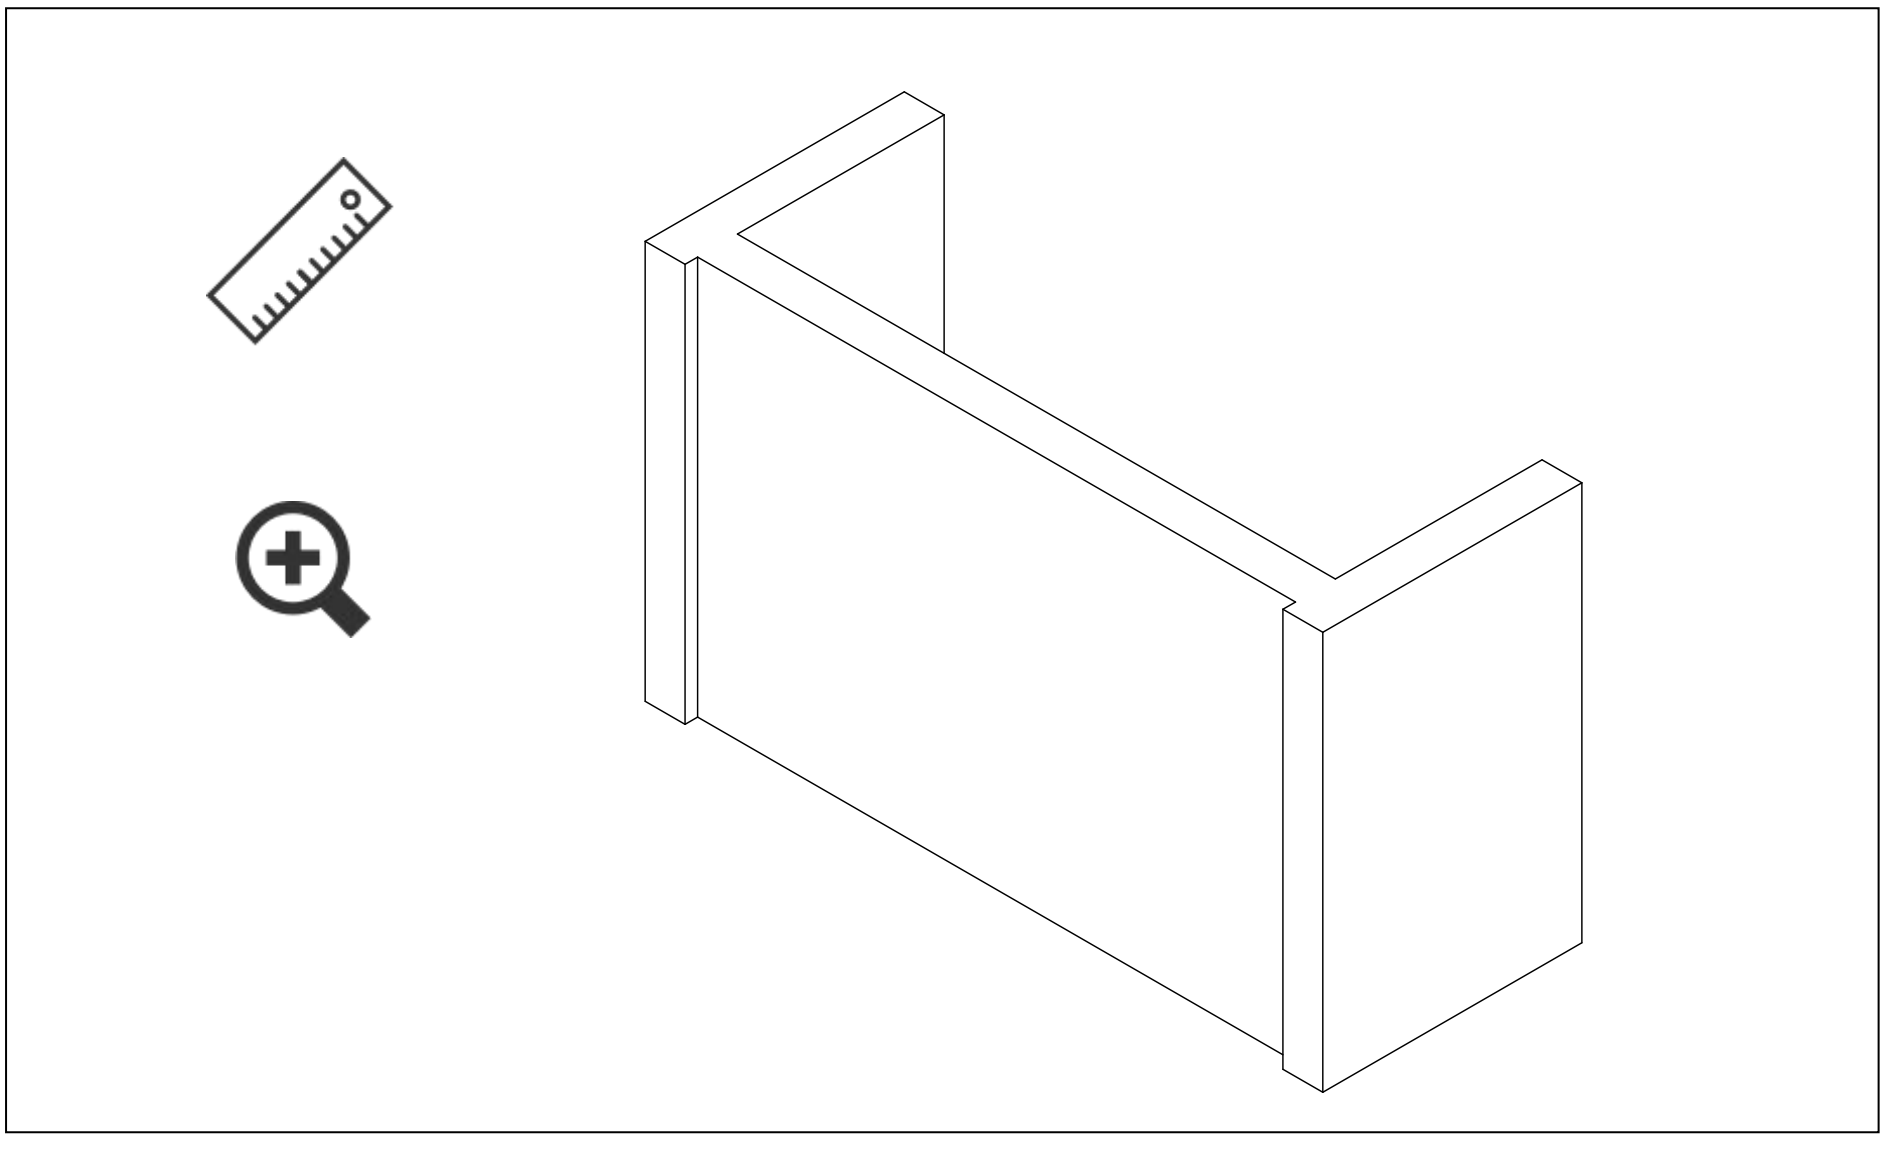


Code	Dimensions - Inch	Dimensions - mm
A	Min 1-15/16″	50
B	Max 2-29/32″	74

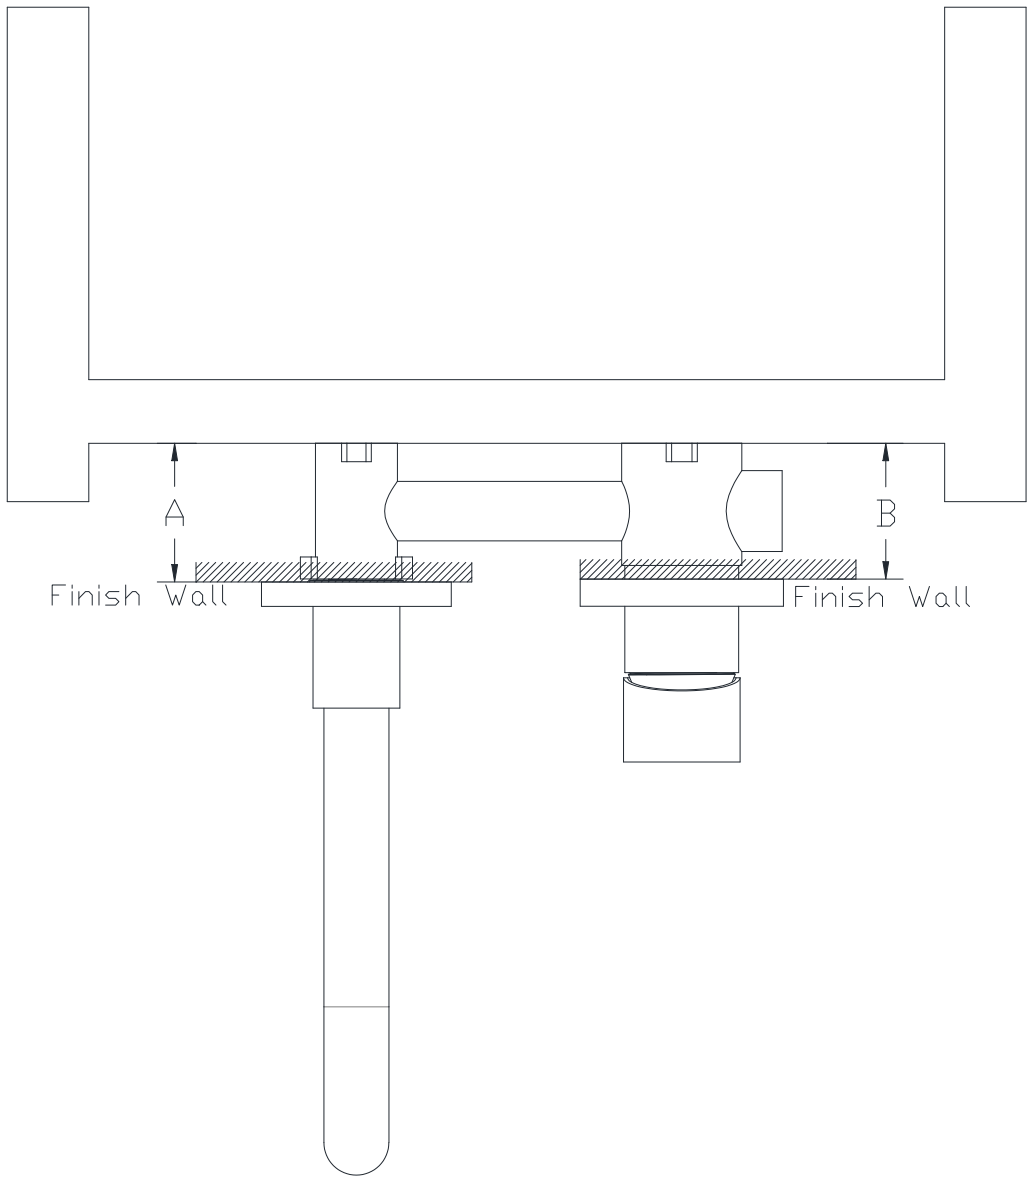

4.2 Secure the rough-in valve to the mounting rack with screws. (screws not provided)

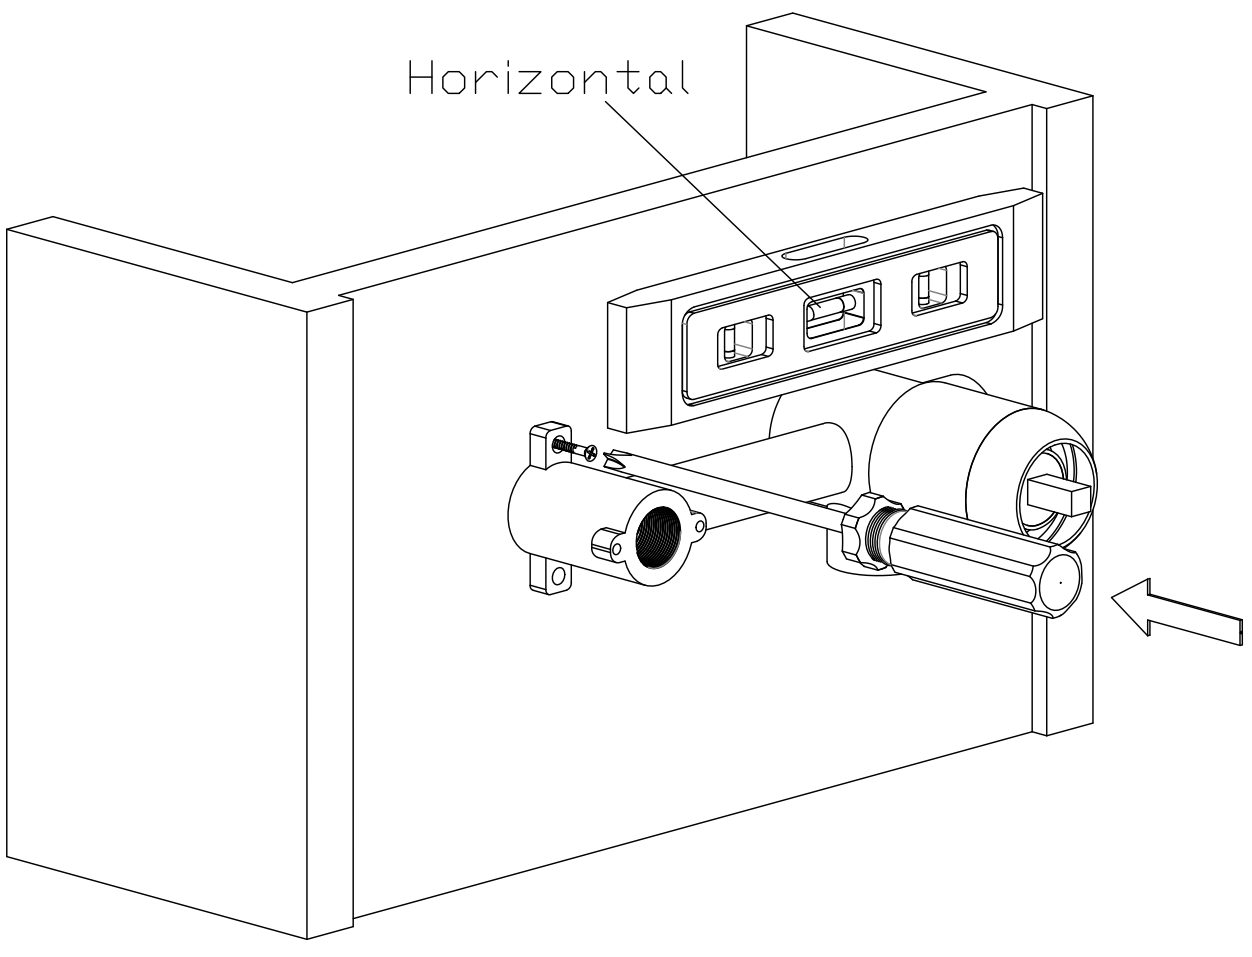


4.3 Turn on your shut-off valve to clean the hot and cold water supply tubes before connecting them to the valve trim. Allow the water to flush for 3 to 5 minutes to clear out any dirt and debris. Once the flushing is complete, shut off the water supply again.

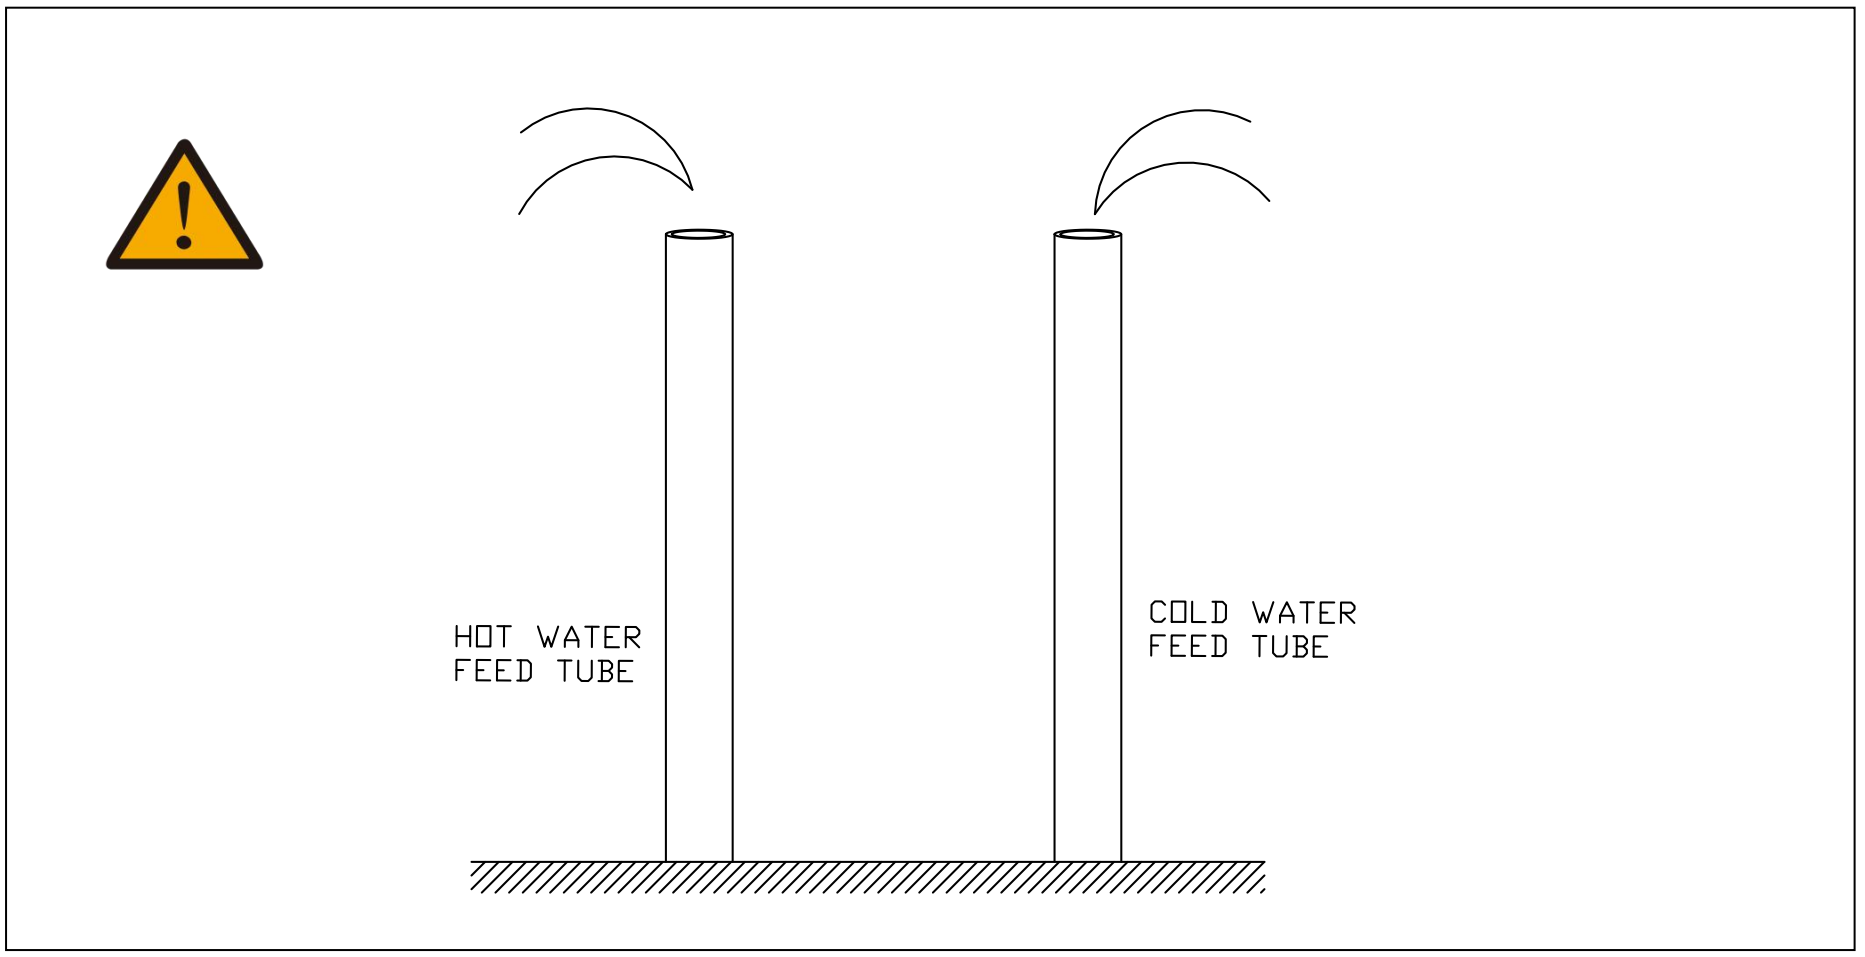


4.4 Apply Teflon tape to the thread of the supply tube outlet, then connect it to the rough-in valve using an elbow.
Rough-in Valve thread for the Hot&Cold water inlet: G1/2” [1/2 BSPP], Customers in the US and Canada may need an NPT to BSPP adapter for connection. (If you can't find this adapter, please inquire at the SUMERAIN support center.).


Region	Code	Specifications
US	X	NPT 1/2″
Europe	X	G1/2″
UK&Other	X	G1/2″

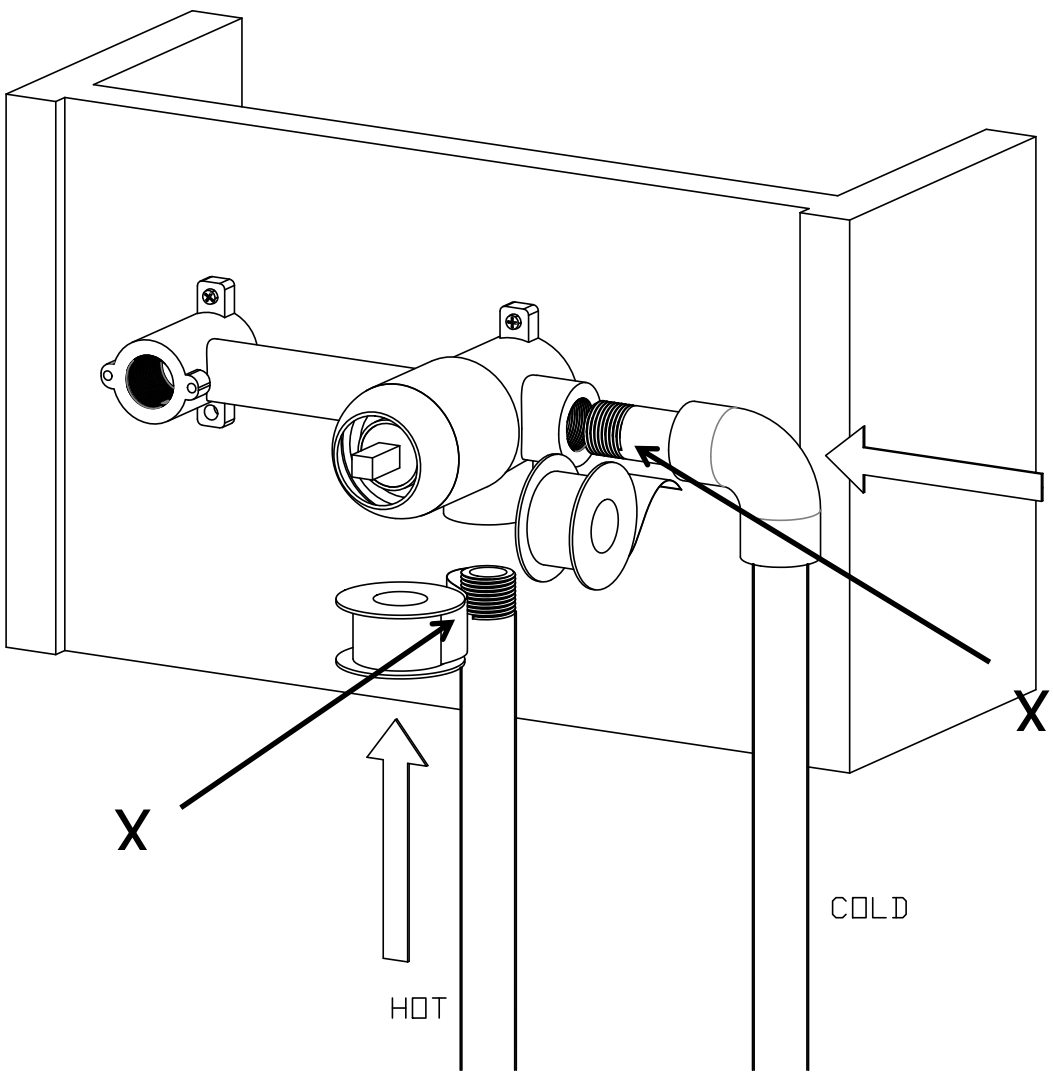


4.5 Install the finished wall.

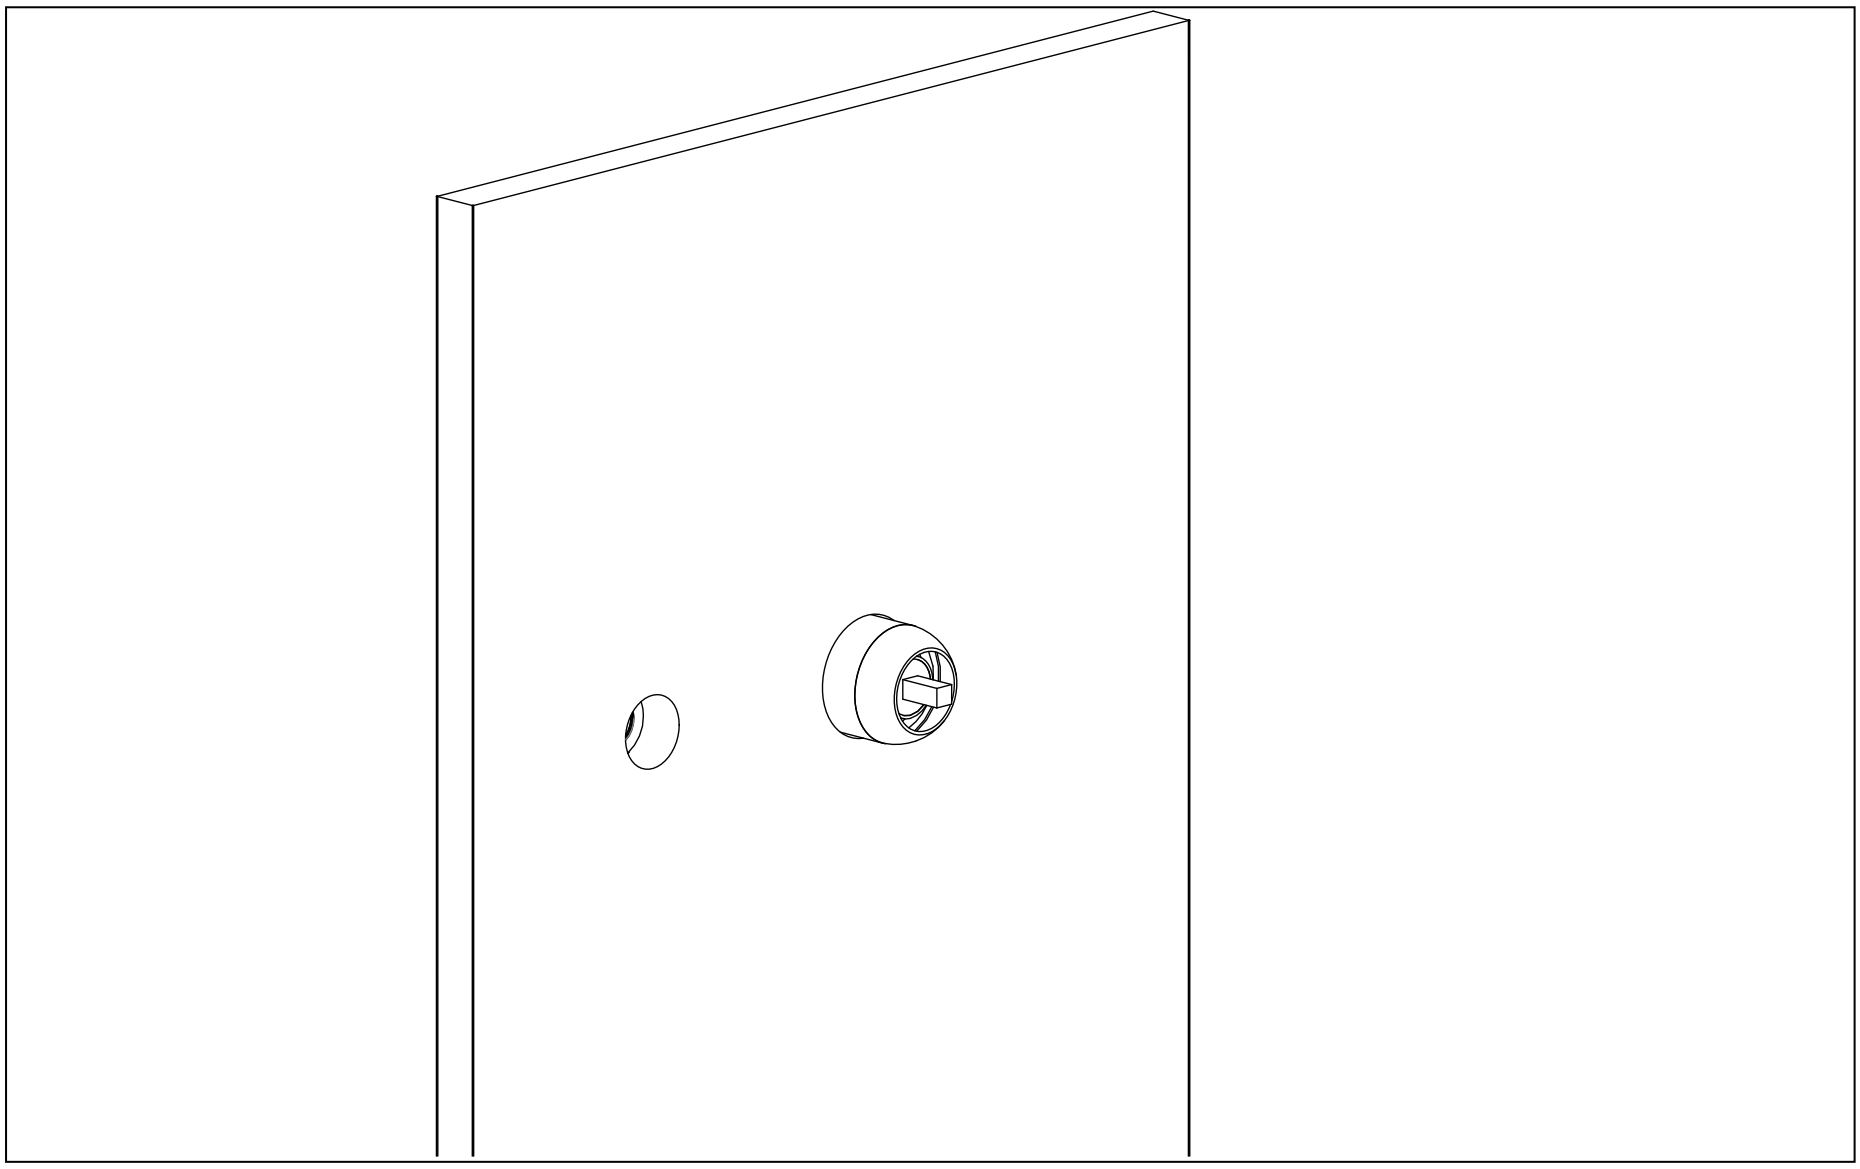


4.6 Apply Teflon tape to the thread of the spout inlet, then connect it to the rough-in valve.

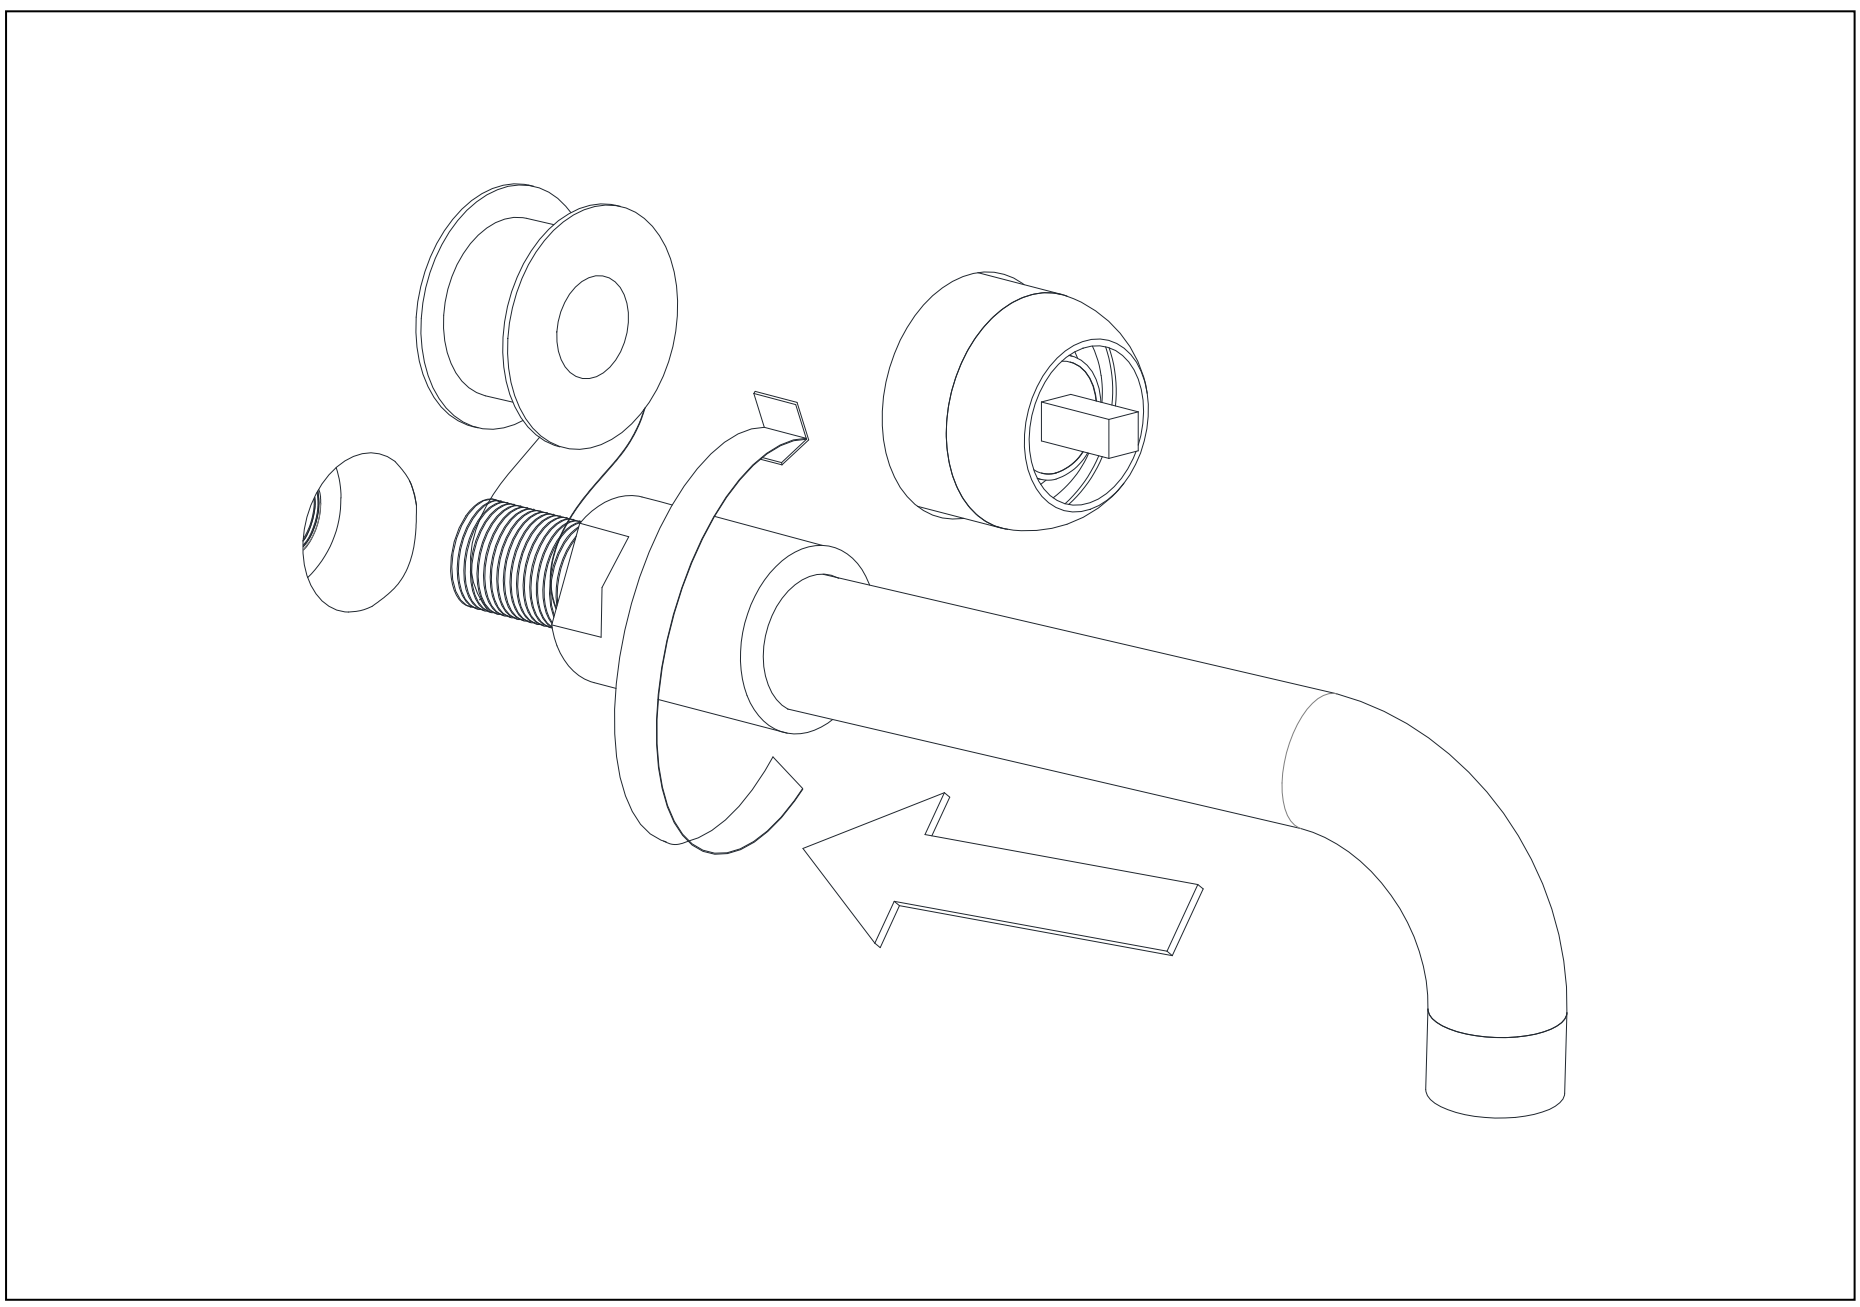


4.7 Attach the escutcheon to the spout.

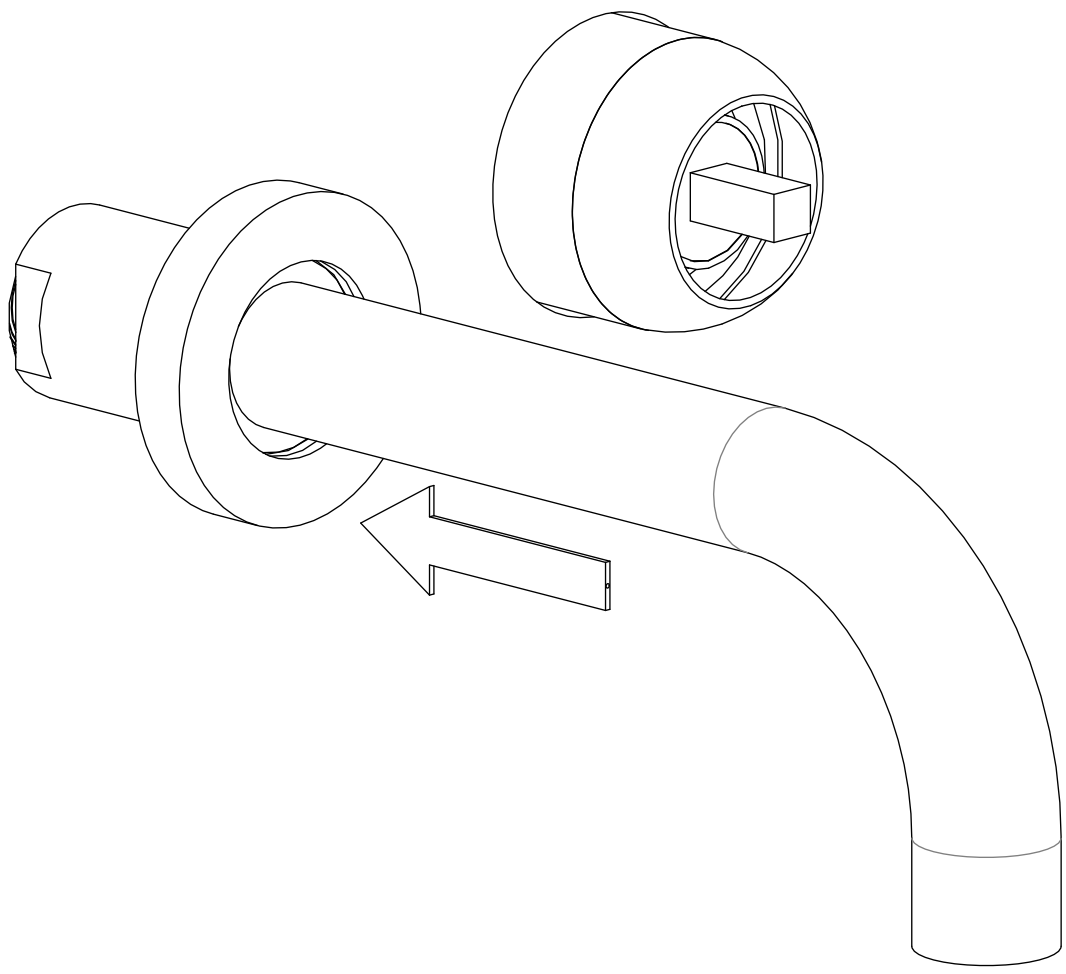


4.8 Slide the escutcheon over the sleeve and attach it to the finished wall.

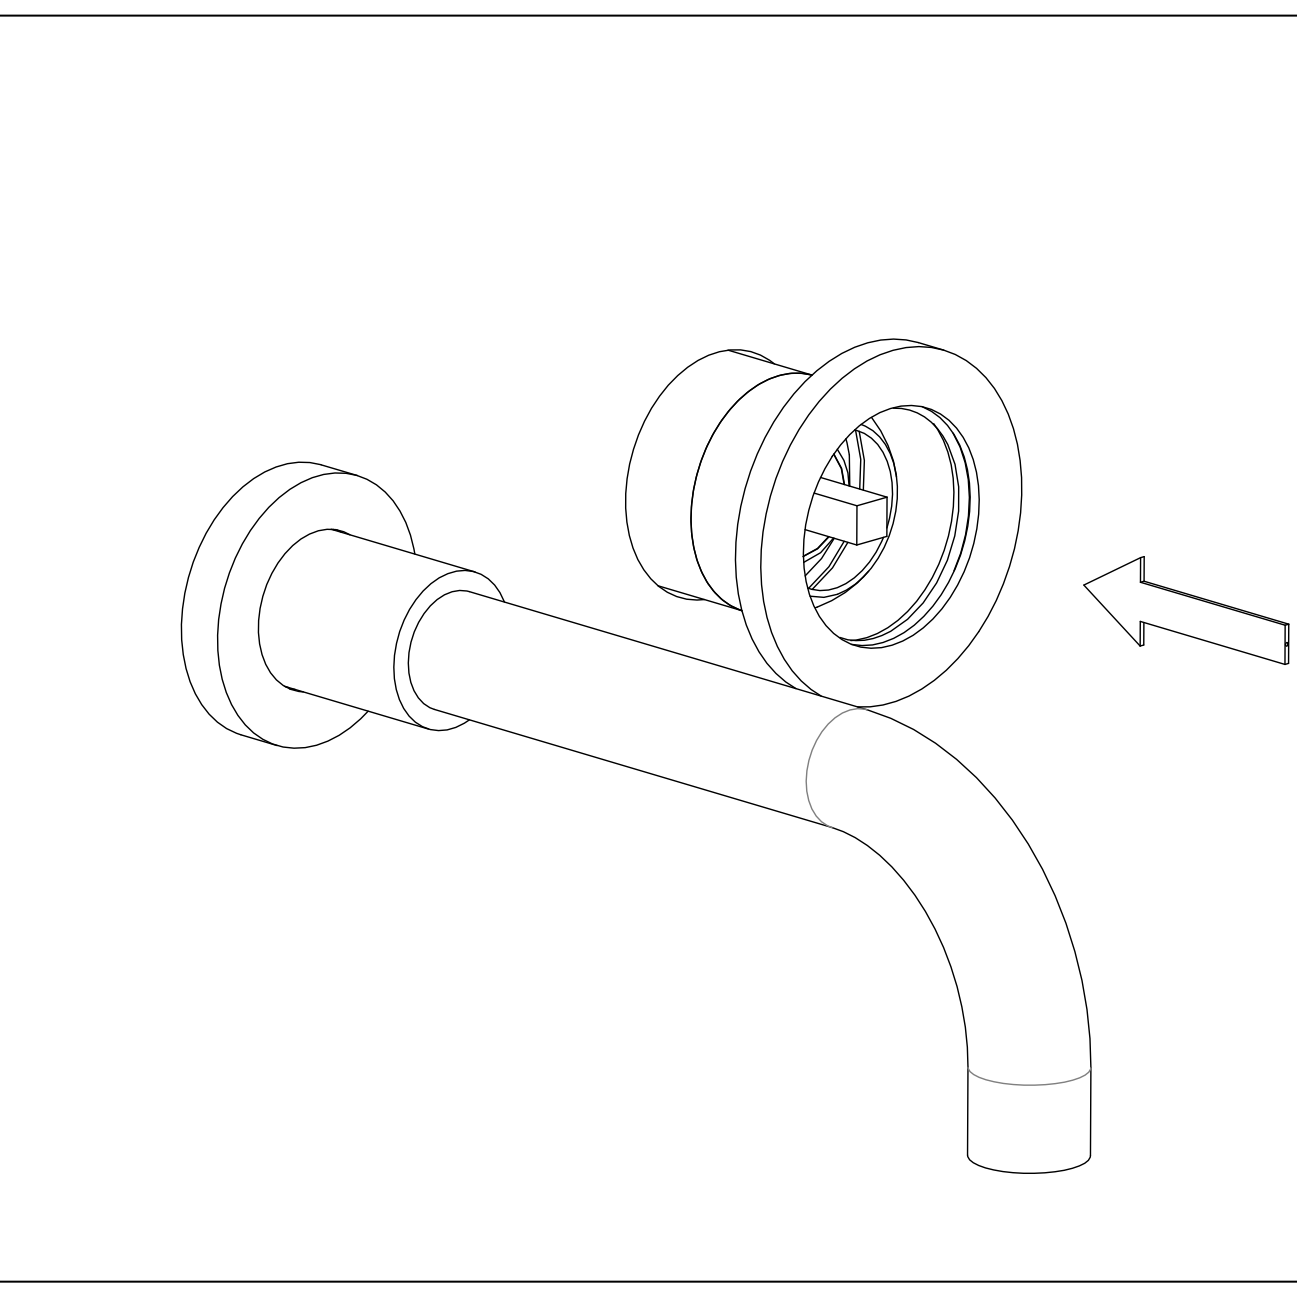

4.9 Place the handle onto the valve stem and tighten the set screws using the provided Allen wrench. (Please avoid over-tightening). Then, attach the screw cover onto the handle.

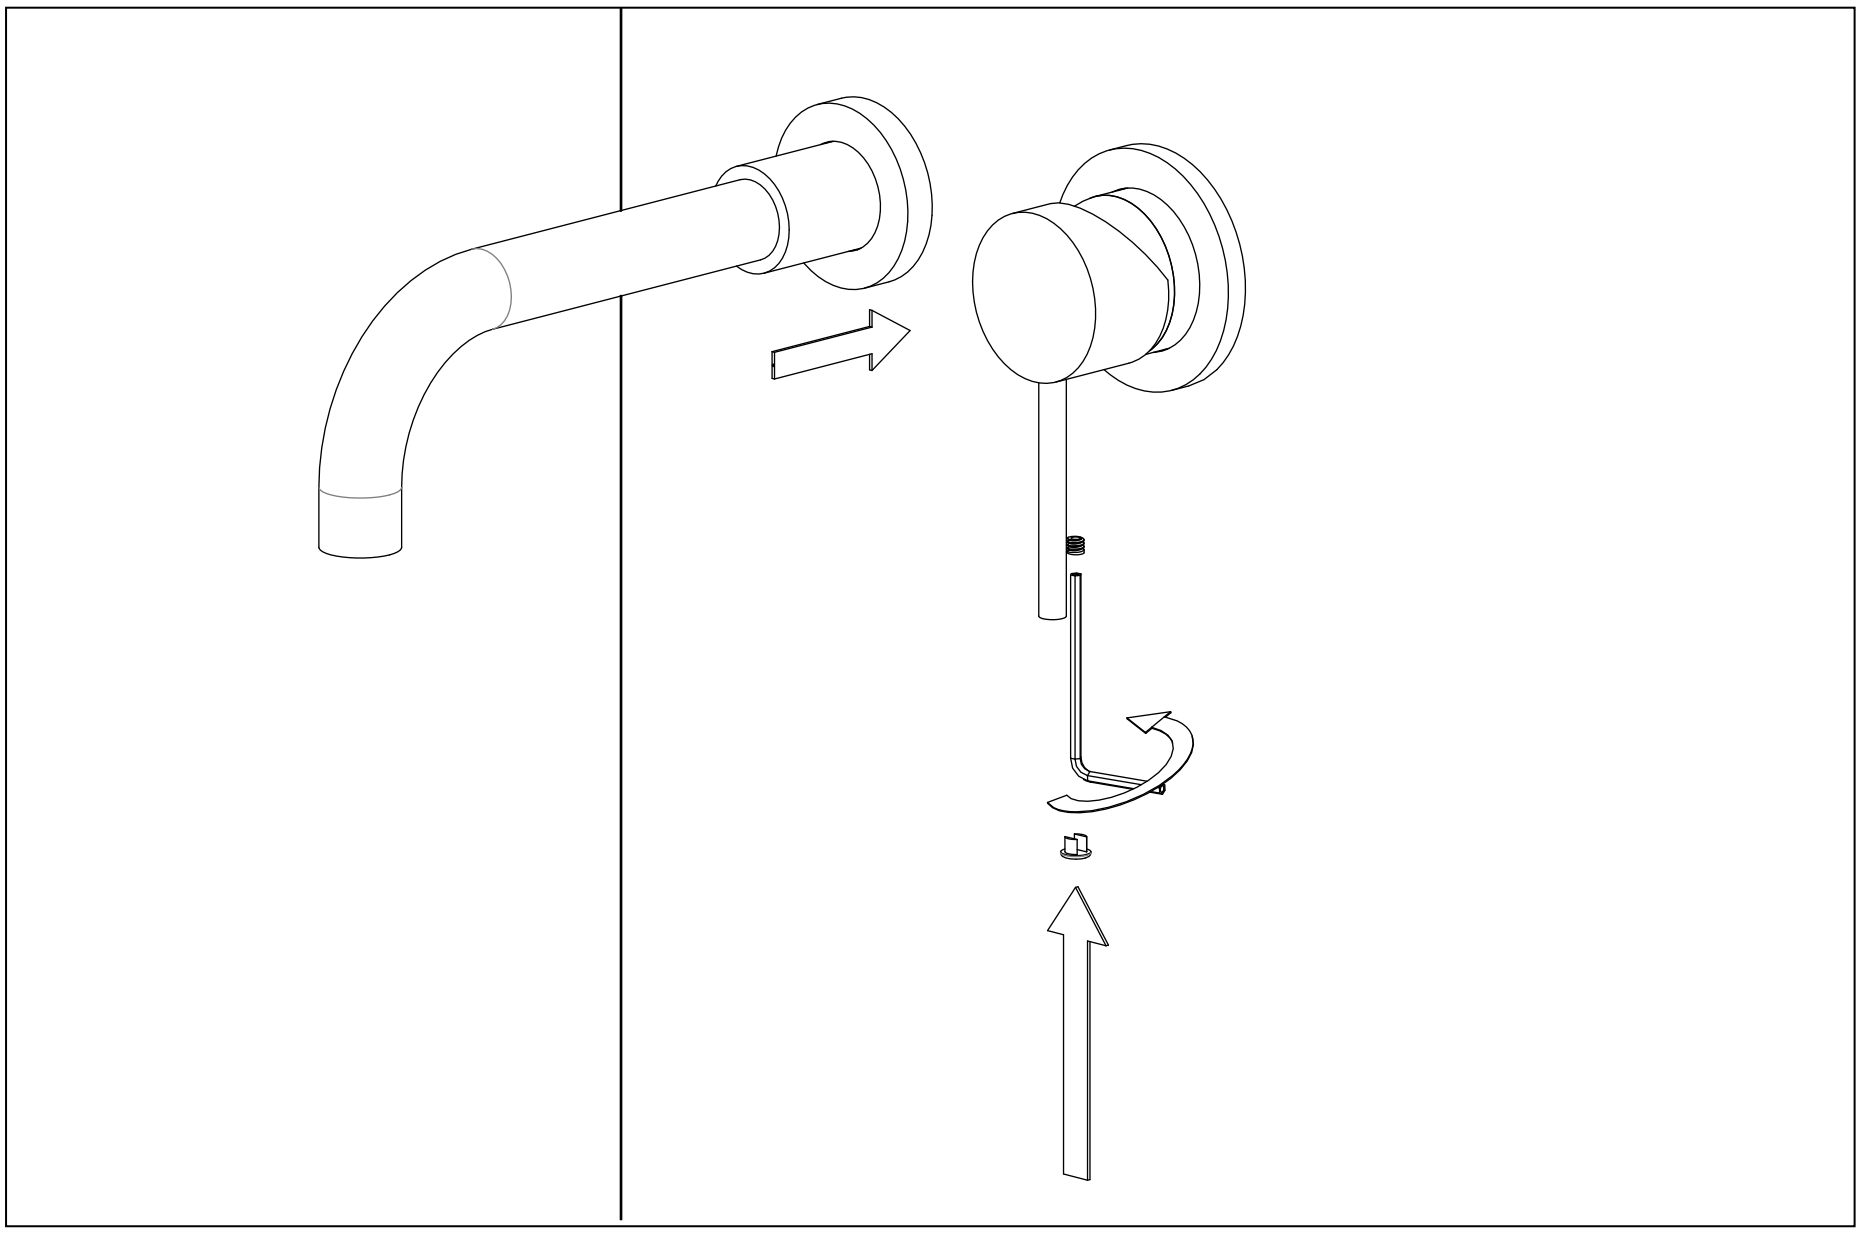

ASSEMBLY FINISHED

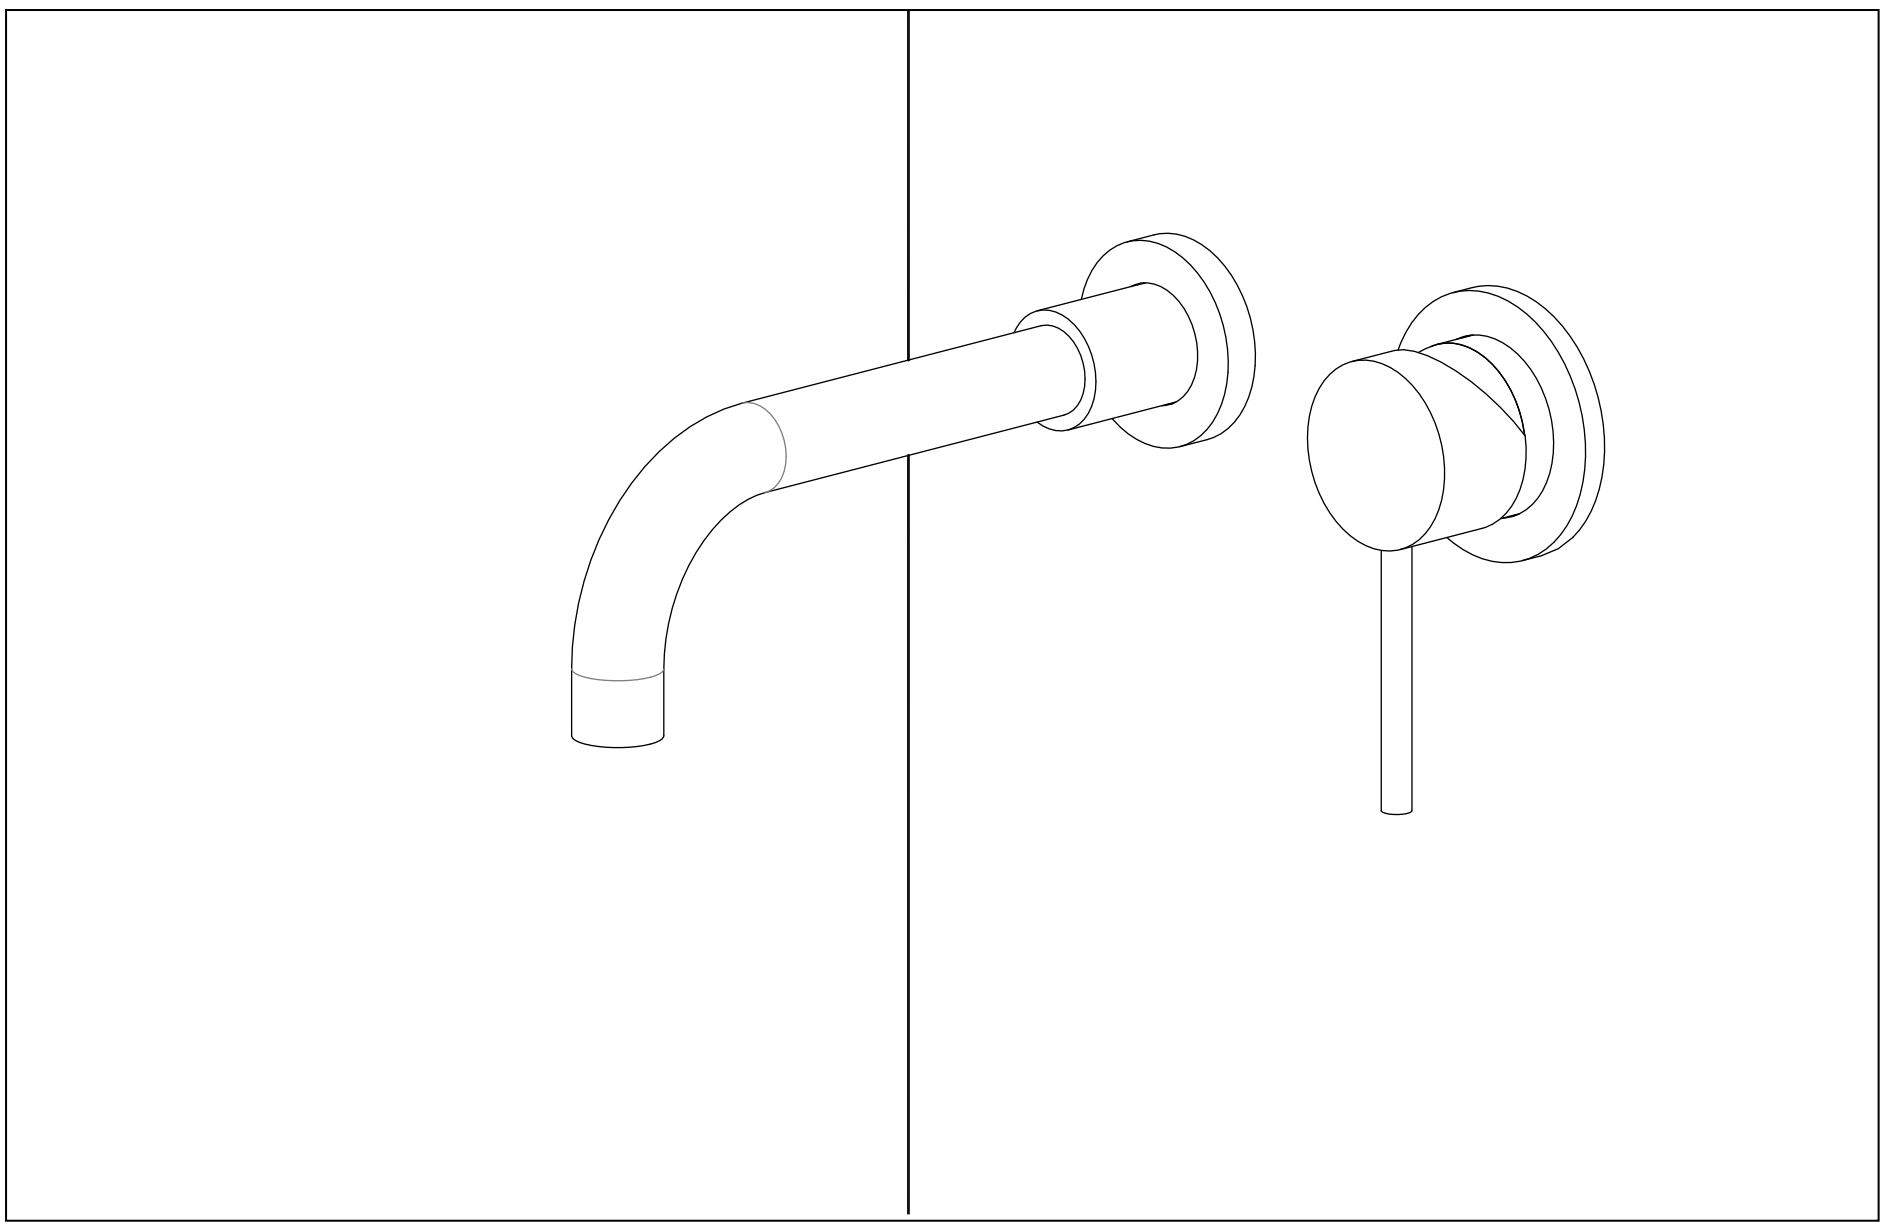


5. INSPECTION


Turn on both the hot and cold water supplies and check all connections to ensure there are no leaks anywhere.

6. FUNCTION INSPECTION

6.1 Turn on the handle, the water will flow out of the spout and then turn off the handle, the water stop out flowing.

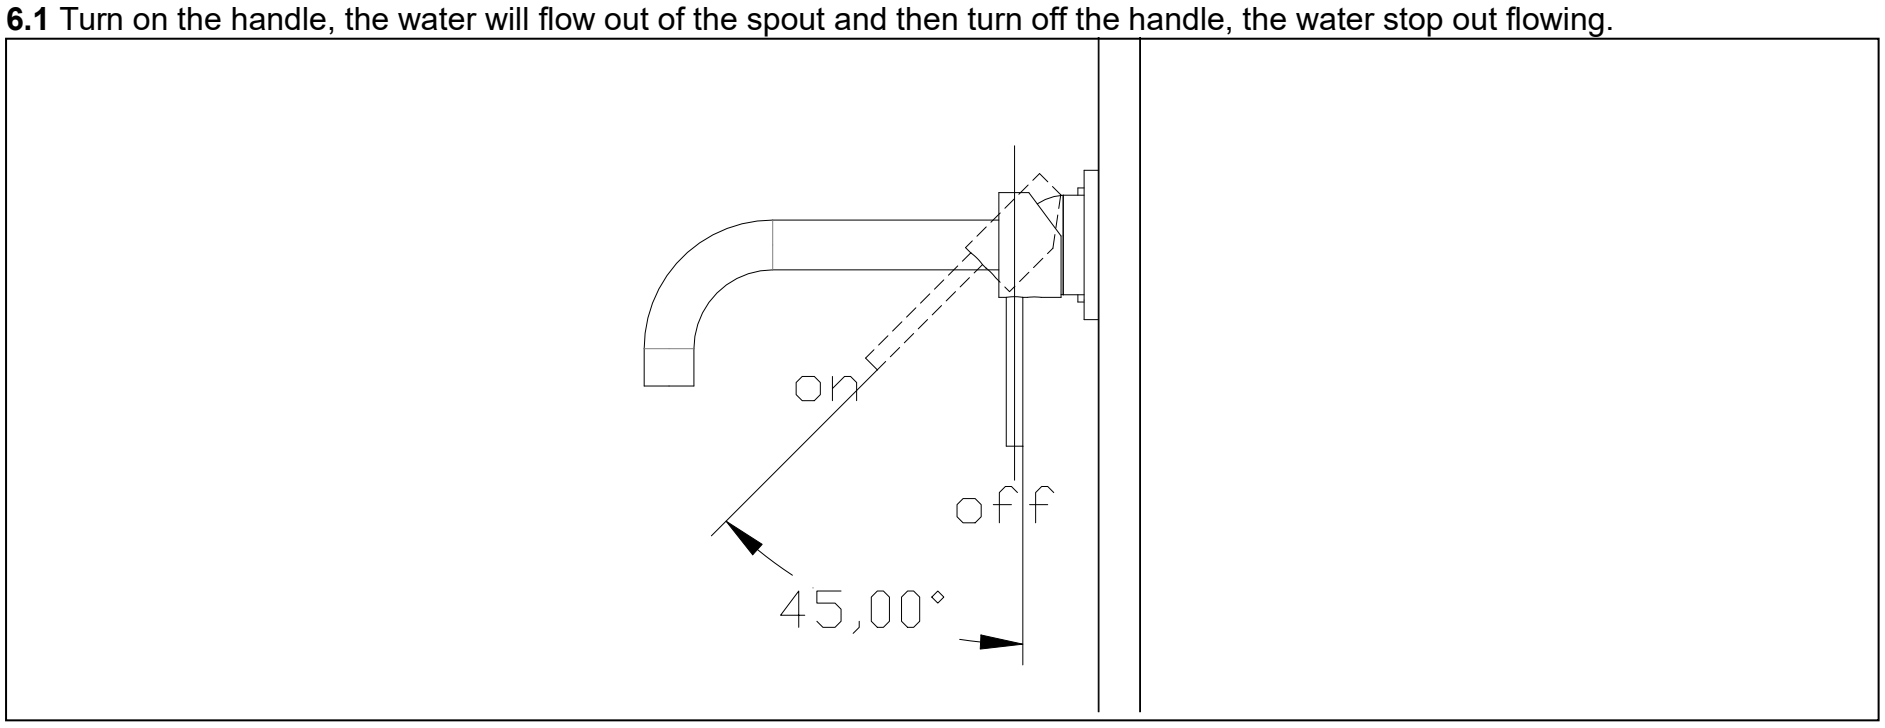

6.2 Turn the handle to the right to get cold water. Conversely, turn the handle to the left for hot water.

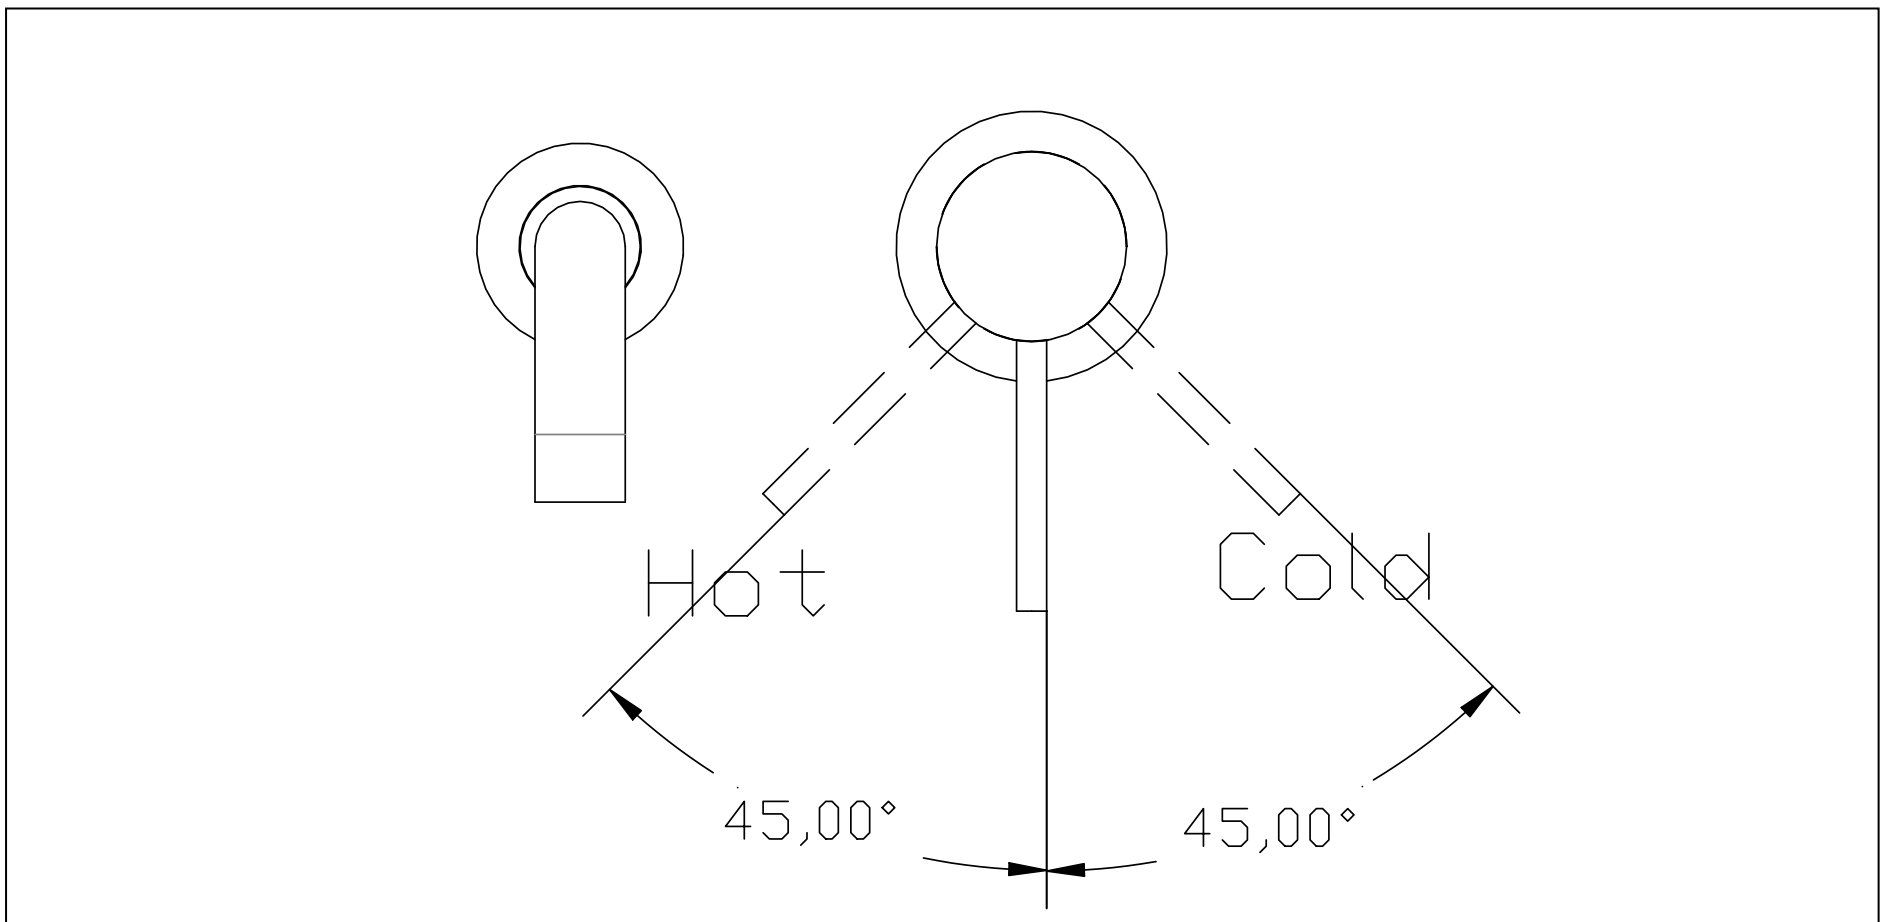

INSTALLATION FINISHED

SUMERAIN®

North America	Asia	Europe
SUMERAIN INTERNATIONAL GROUP INC.	HONGKONG SUMERAIN SANITARY INDUSTRY CO., LIMITED	SUMERAIN EUROPE SUPPORT TEAM
Add: 1400 Summit Ave, Suite A, Plano, TX 75074, USA	Add: ROOM 14 2/F WELLBORNE COMMERCIAL CENTRE NO.8 JAVA ROAD NORTH POINT HK	Add: Flottwellstr.15 10785 Berlin, Deutschland
Tel: +1-866-203-0866	Tel: +86-750-2731579	Tel: +49 (0)30/23975898
E-mail: support@sumerain.com	E-mail: support@sumerain.com	E-mail: support@sumerain.com