









Assembly Instructions

HUTCH WITH DOORS

48W x 12D x 36H


TUN010CL	TUN011KC		TUN026	TUN017SC	TUN023DH	TUN018SC
A	B	C	D	E	F	H
						
Cam lock 20Pcs+2Pcs(spare)	Klix Cam 20Pcs+2Pcs(spare)	Cam Cover 20Pcs+2Pcs(spare)	Dowel 20Pcs+1Pcs(spare)	JCBC Black Grommet 2Pcs	Side door hinge 4Pcs	Screw #4 1/2" 24Pcs+2Pcs(spare)

STEP1

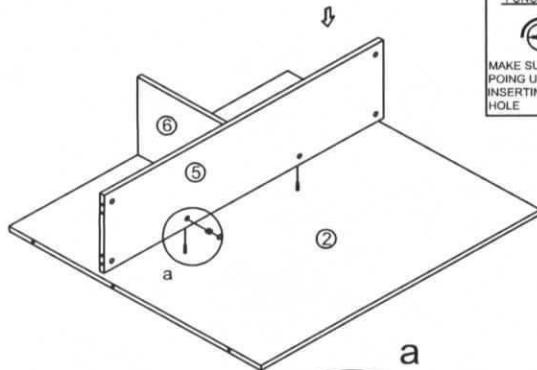


IMPORTANT:
FUNCTION OF KLIx CAM
1/4 RIGHT
TURN FOR
LOCKING
MAKE SURE THE ARROW IS
POINTING UPWARDS BEFORE
INSERTING INTO THE PANELS
HOLE

STEP2

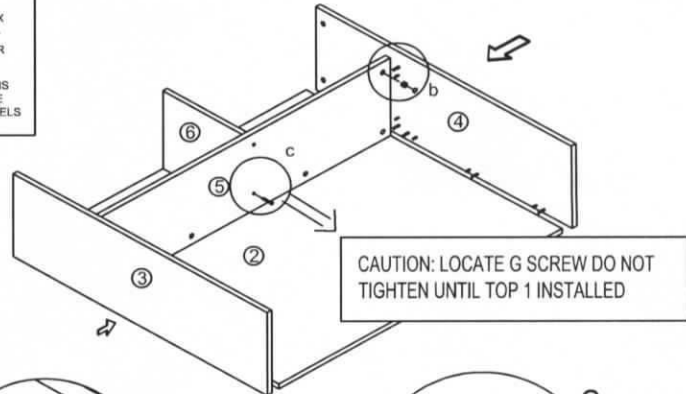


CAUTION: LOCATE G SCREW DO NOT
TIGHTEN UNTIL TOP 1 INSTALLED

STEP3

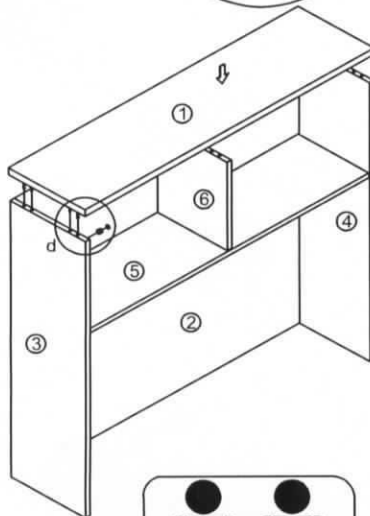


STEP4

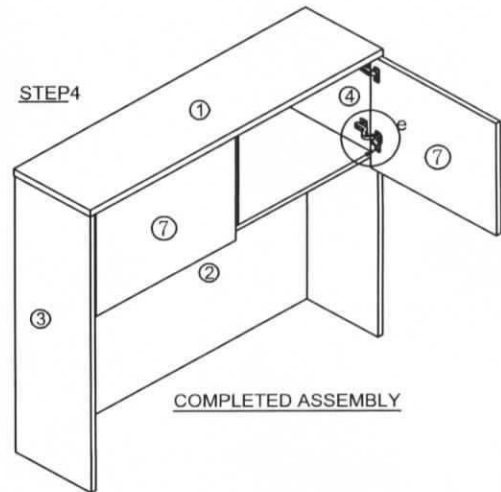

COMPLETED ASSEMBLY



TWO PEOPLE ARE REQUIRED TO
ASSEMBLE AND MOVE THIS MODEL

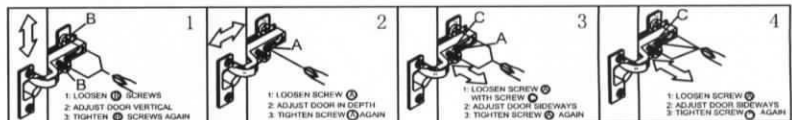

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children