


ASSEMBLE INSTRUCTION


Unfinished African Mahogany Exterior Door

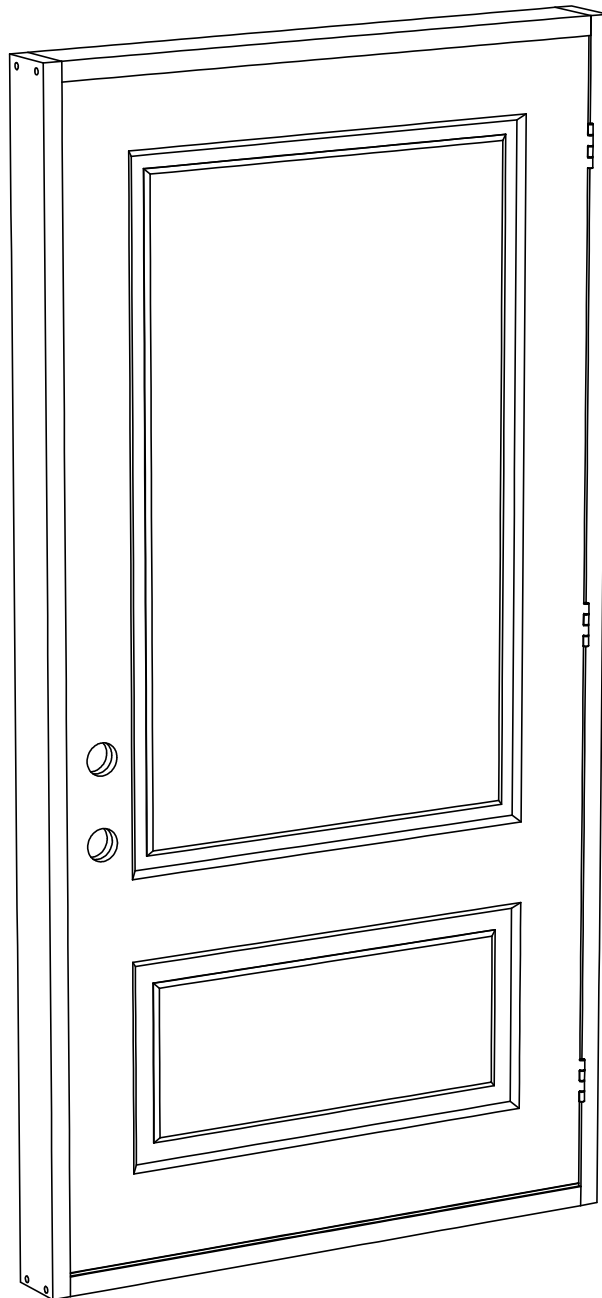

*The door panel shown is for reference only and may differ from the actual product.

A: Jamb
B: Door Slab 35-3/4" x 79" x 1-3/4"
C: Jamb
D: Jamb
E: Aluminum Threshold

1: Weatherstripping
2: Weatherstripping
3: Bottom
Weatherstripping

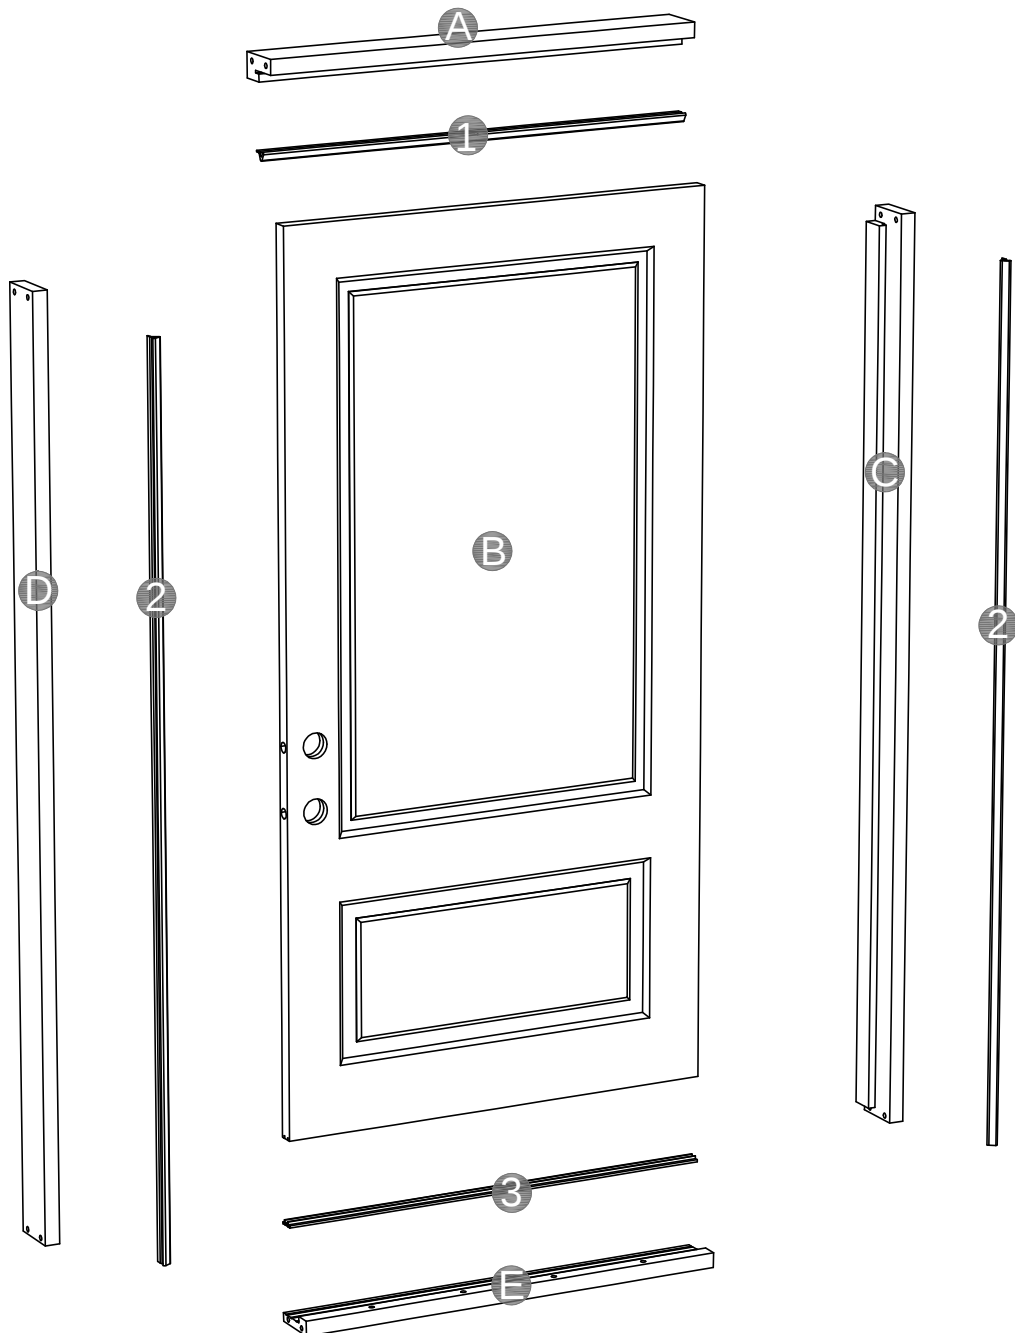


Not Included:


- ⊗ Hardwares (Hinges&Nails)
- ⊗ Locks
- ⊗ Hinge mortises are not pre-cut

Attention: Hinges, nails, and hinge mortises must be prepared before installation.


Step1

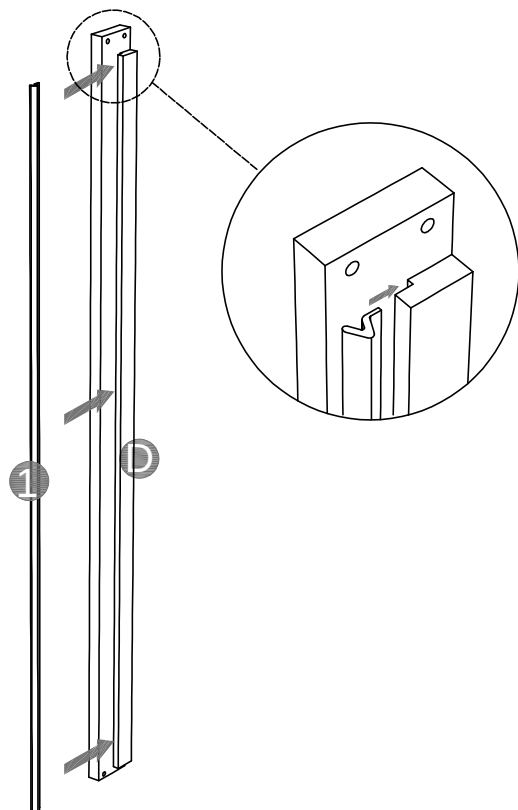


Step2

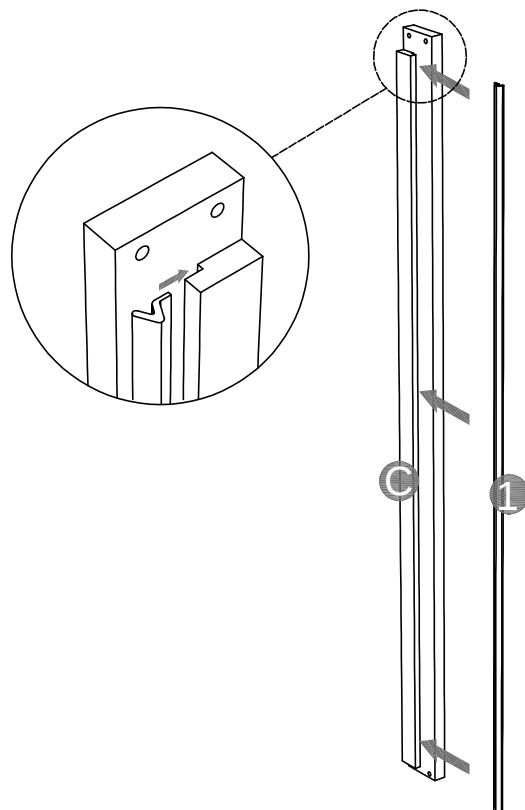


Step3

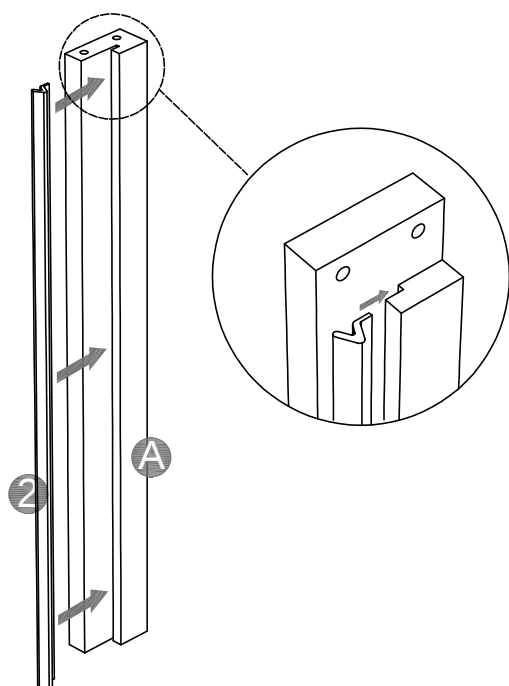


Step4

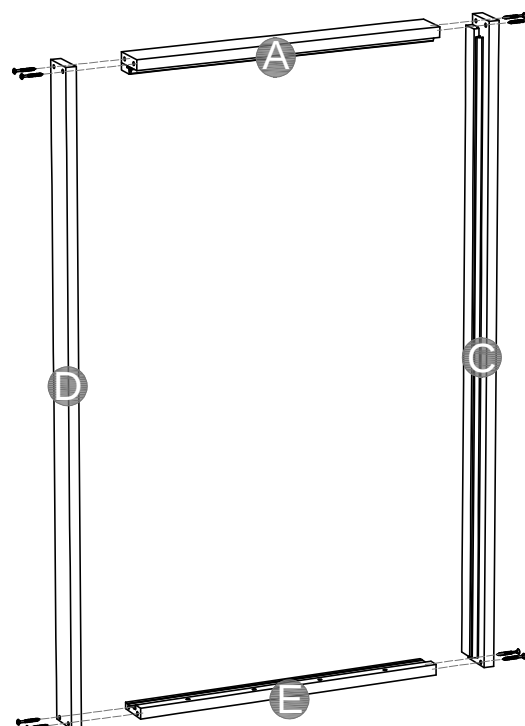

Step5

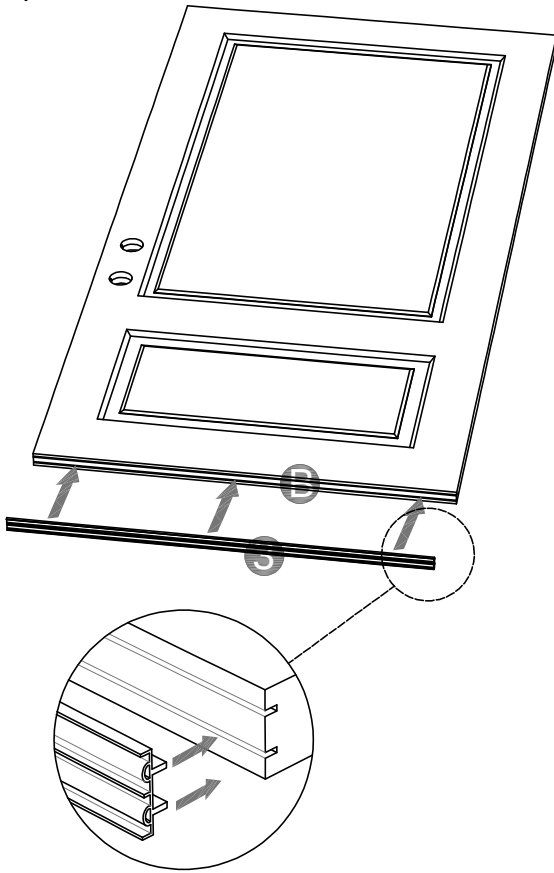

Step6

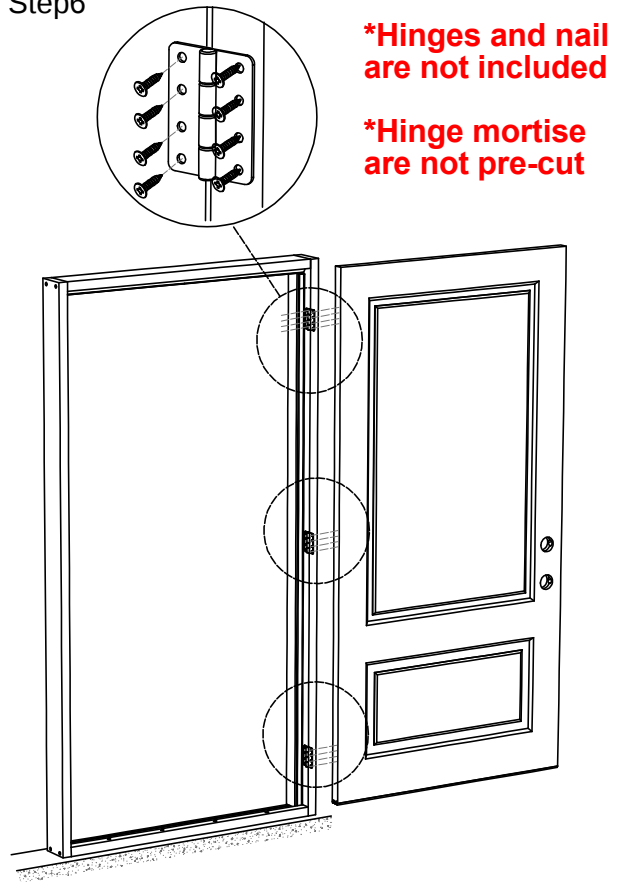

Step7

