
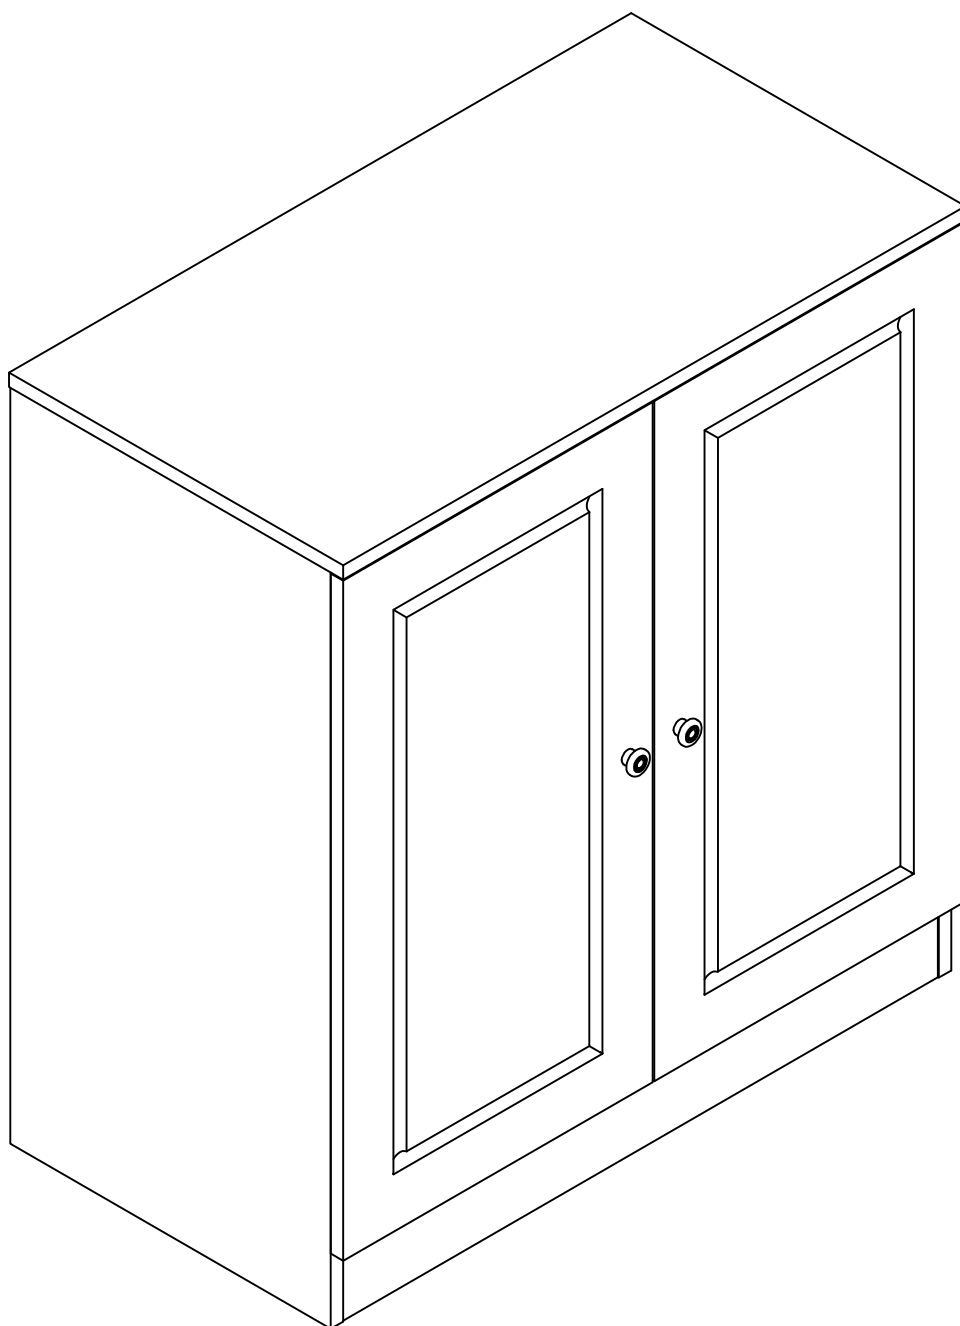
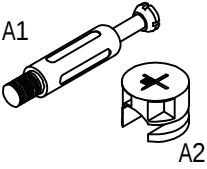

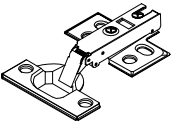


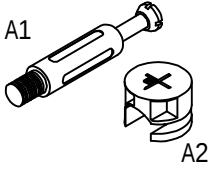






Hardware


 A1 A2	 Φ 8*30	 Φ 3*14	 Φ 3.5*14	 E
A × 15	B × 10	C × 8	D × 26	E × 8
 F	 G	 H	 4*18	 J
F × 4	G × 4	H × 2	I × 2	J × 2
 K	 Φ 20	 M		
K × 1	L × 15	M × 4		

Spare hardware

 A1 A2	 Φ 8*30	 Φ 3*14
A × 2	B × 2	C × 2
 Φ 3.5*14	 E	 Φ 20
D × 2	E × 2	L × 2

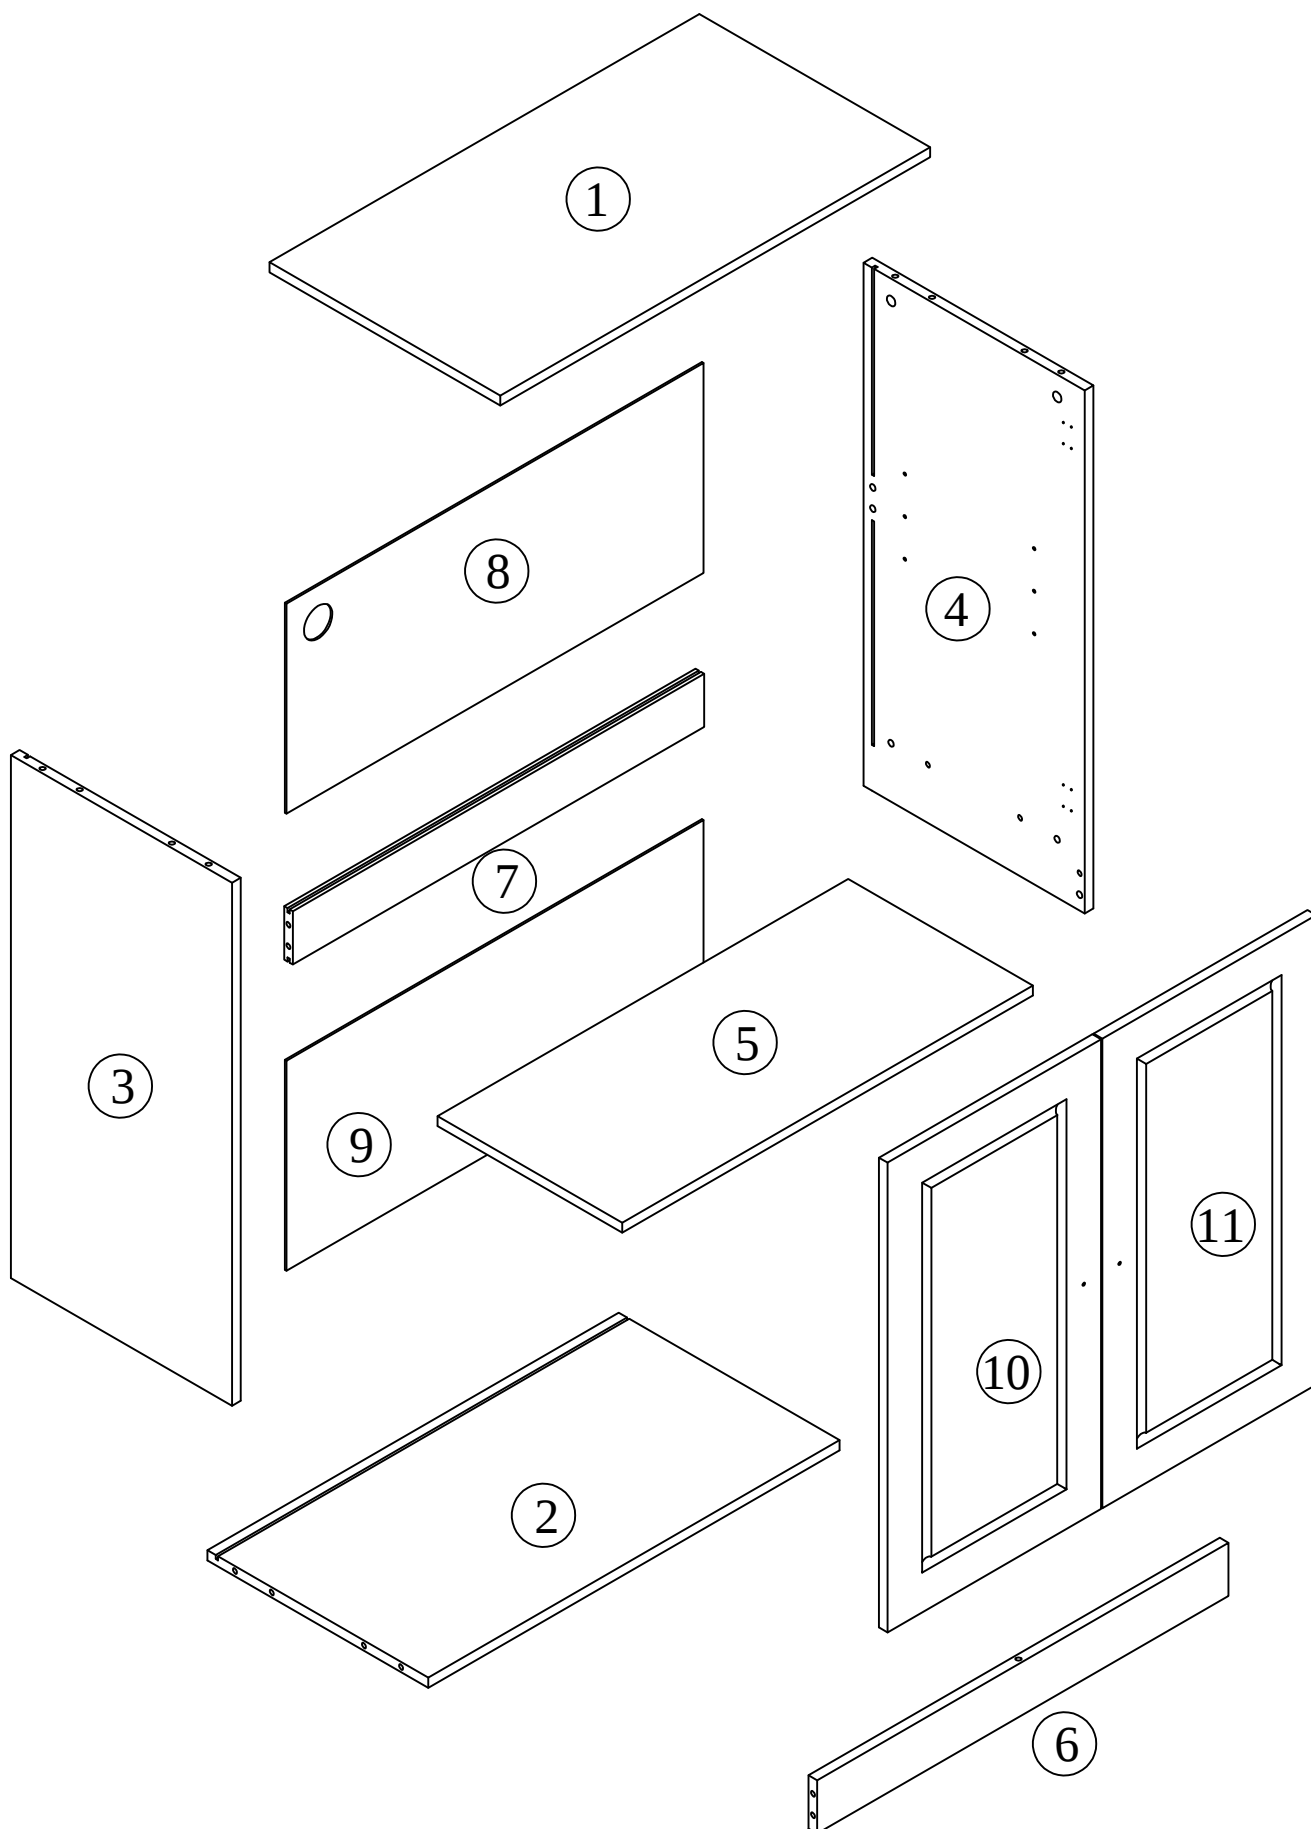


1

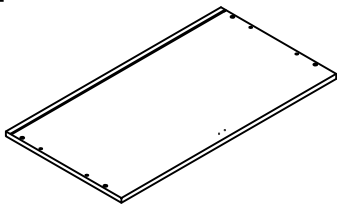


x1

2

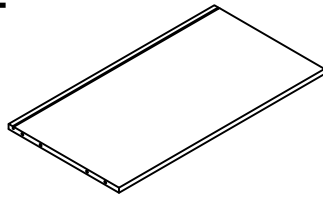


x1

3

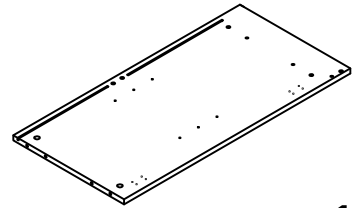


x1

4

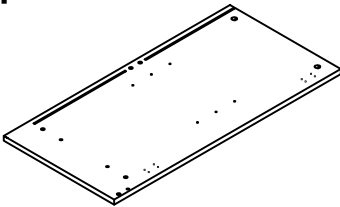


x1

5

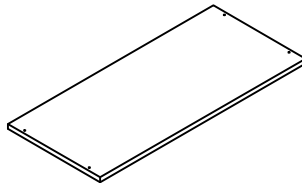


x1

6

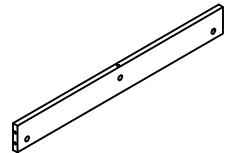


x1

7

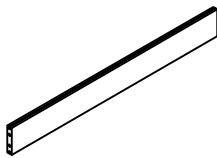


x1

8

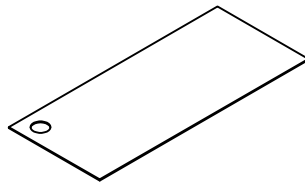


x1

9

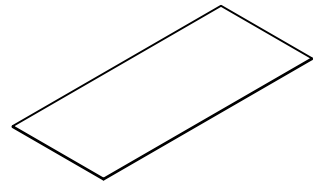


x1

10

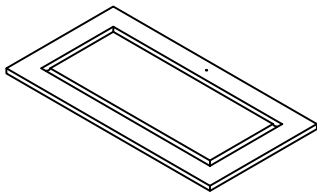


x1

11

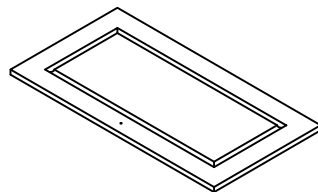

x1

1

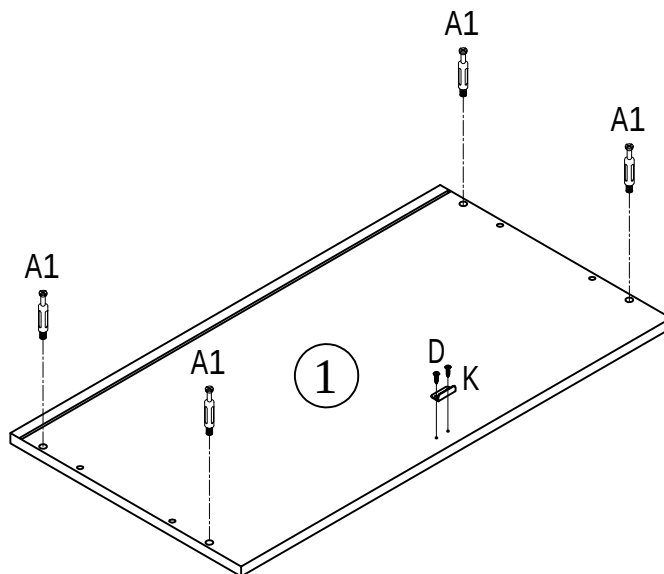

A1



4pcs

D



Φ3.5*14


2pcs

K



1pcs

2

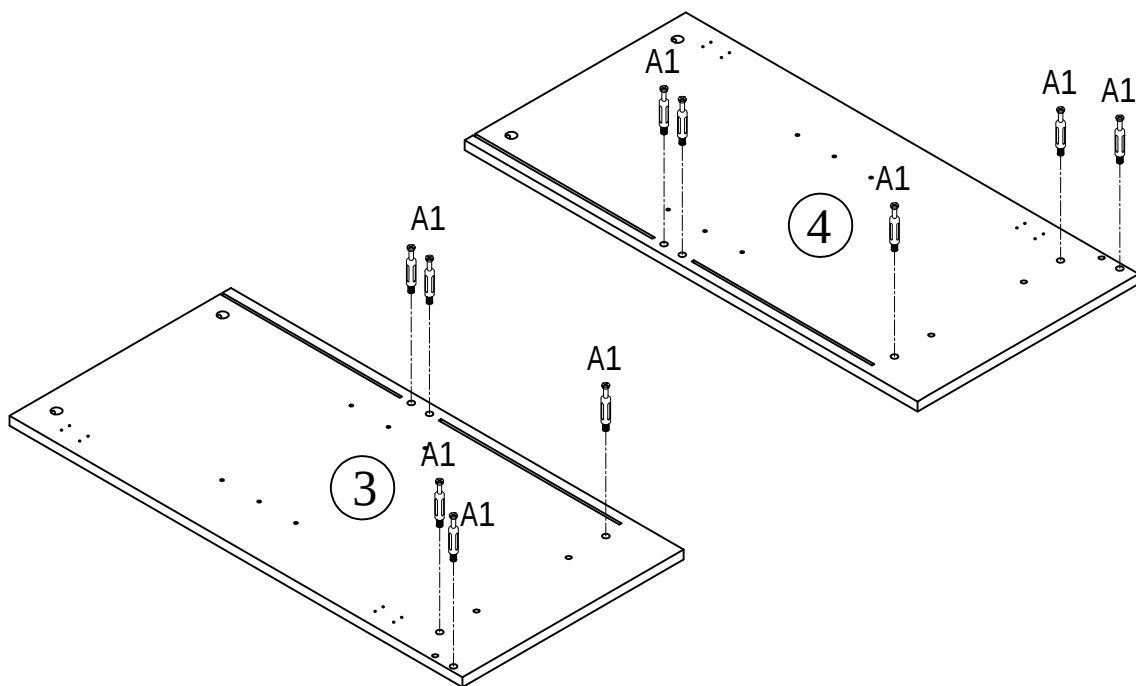


A1



10pcs

3

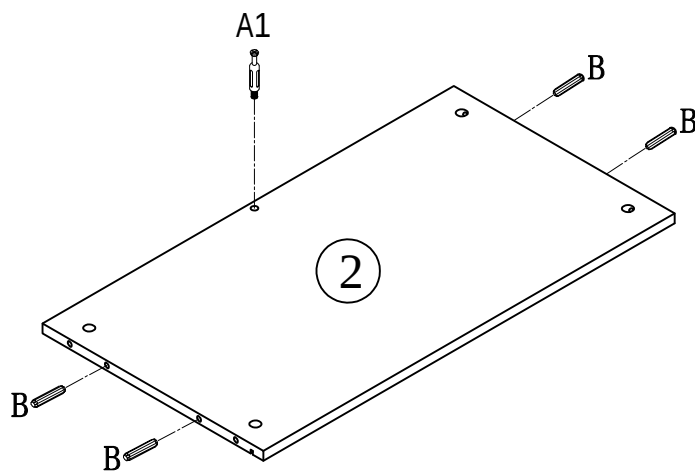


A1



1pcs


B



Φ 8*30

4pcs

4

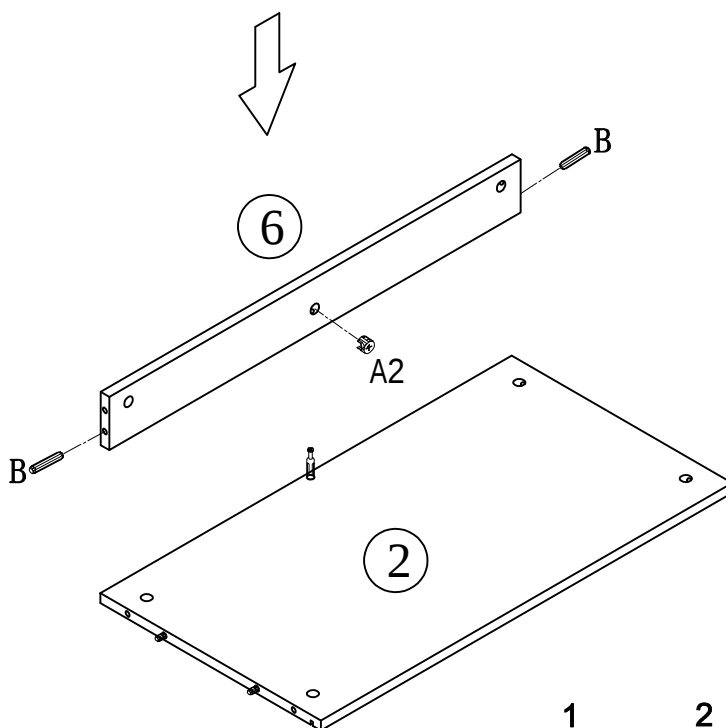


A2



1pcs


B



Φ 8*30


2pcs

L






Φ 20




1pcs

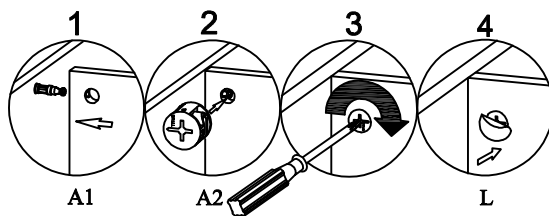


5

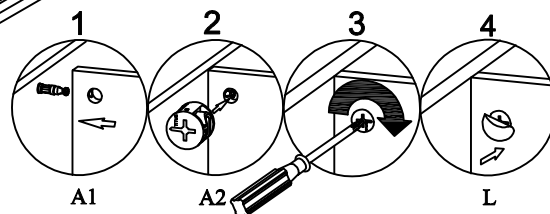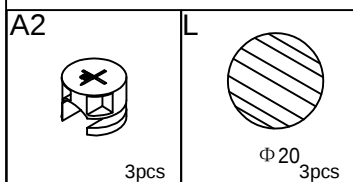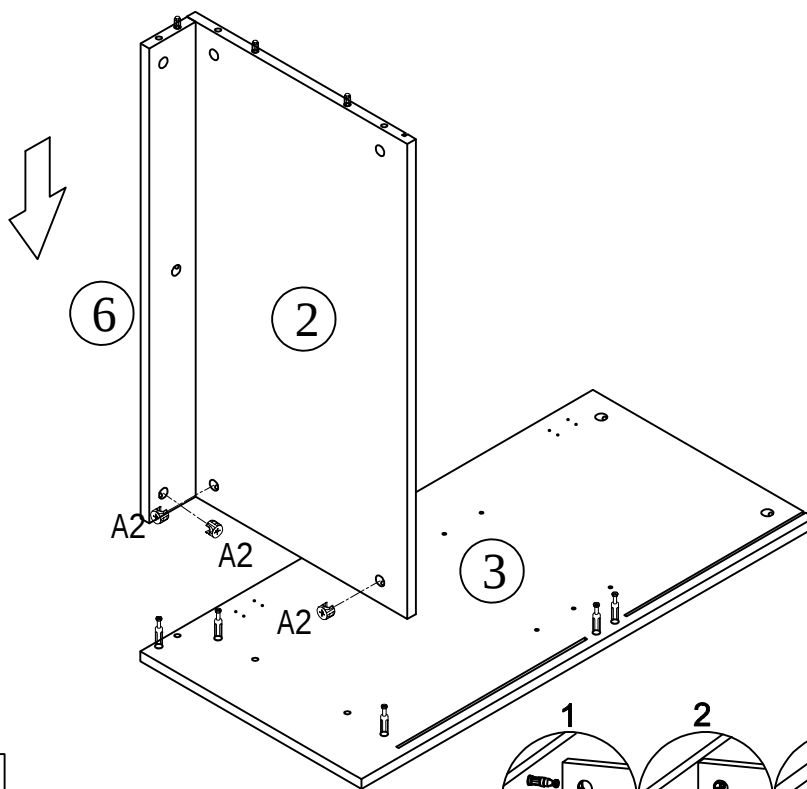




6

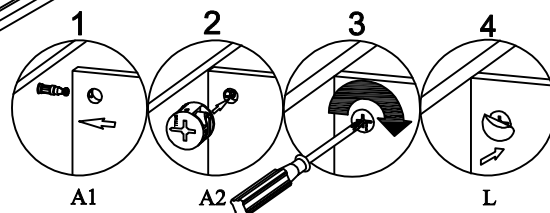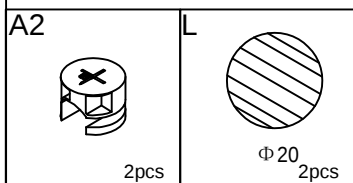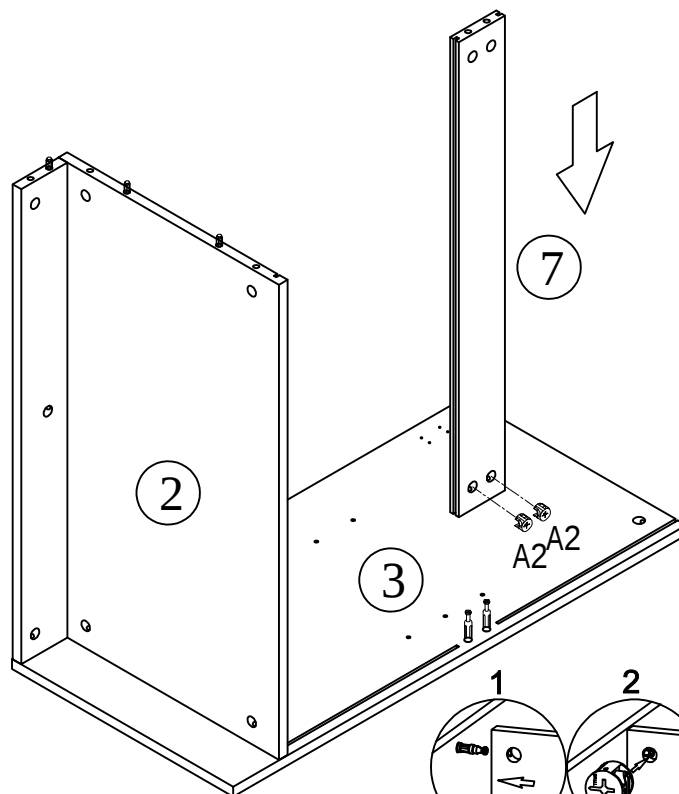



7

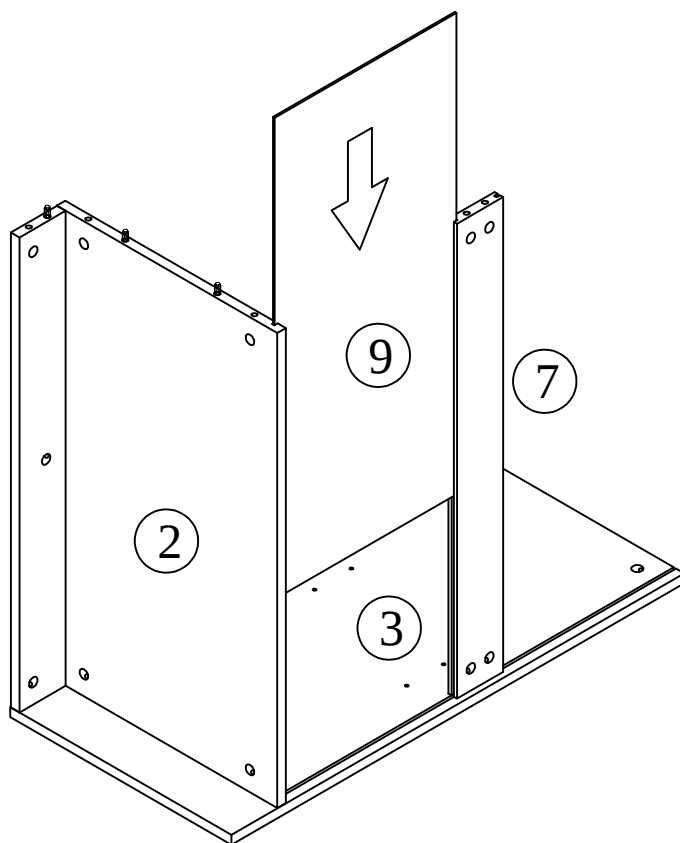




8

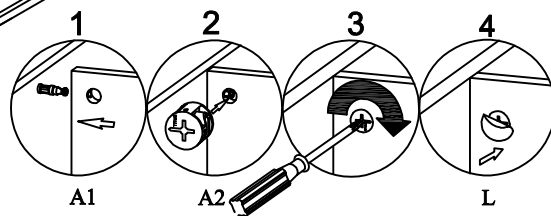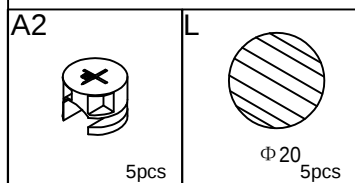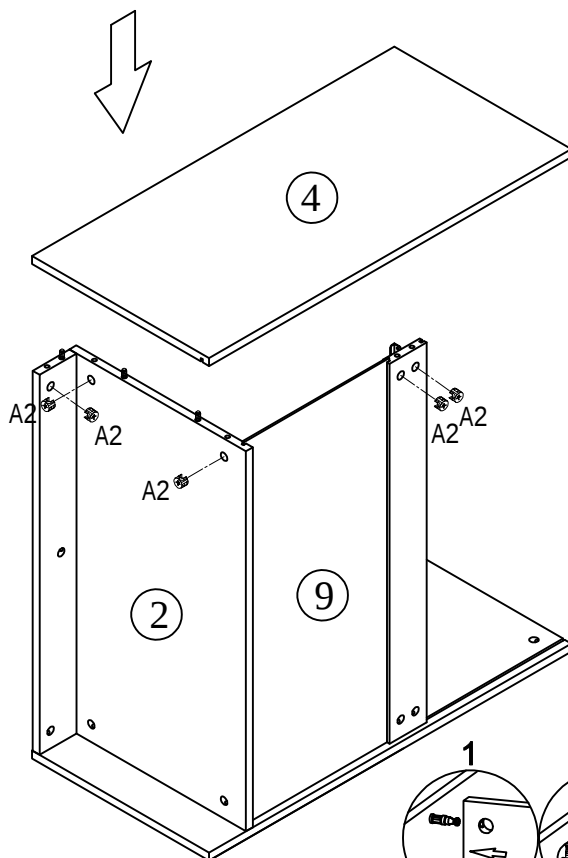



9

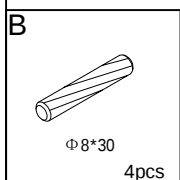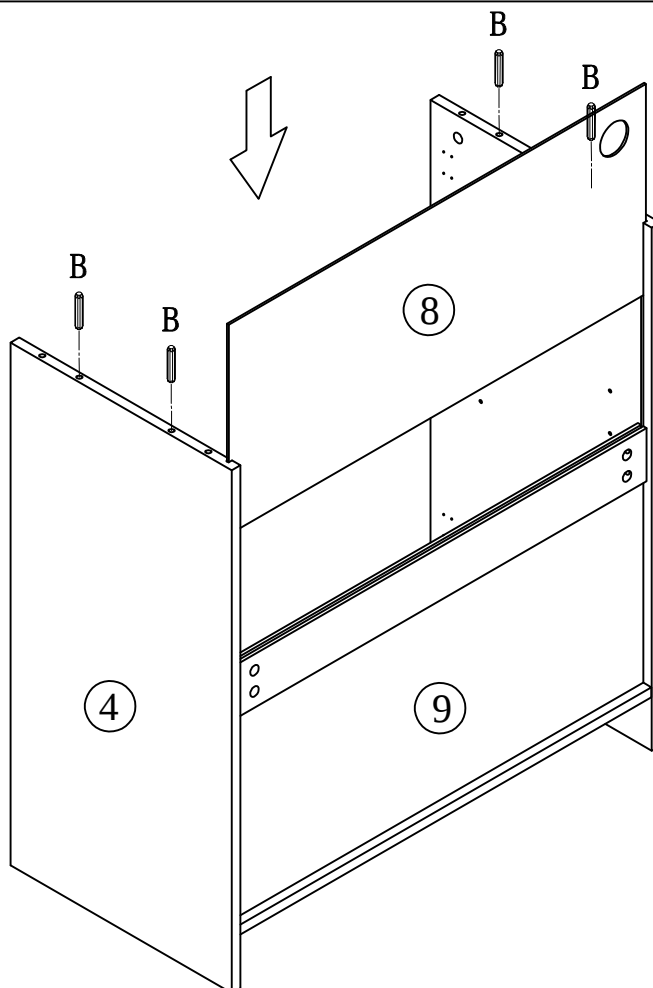

10

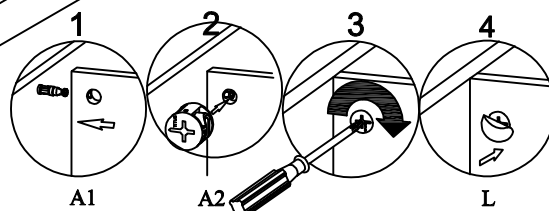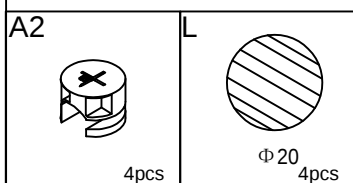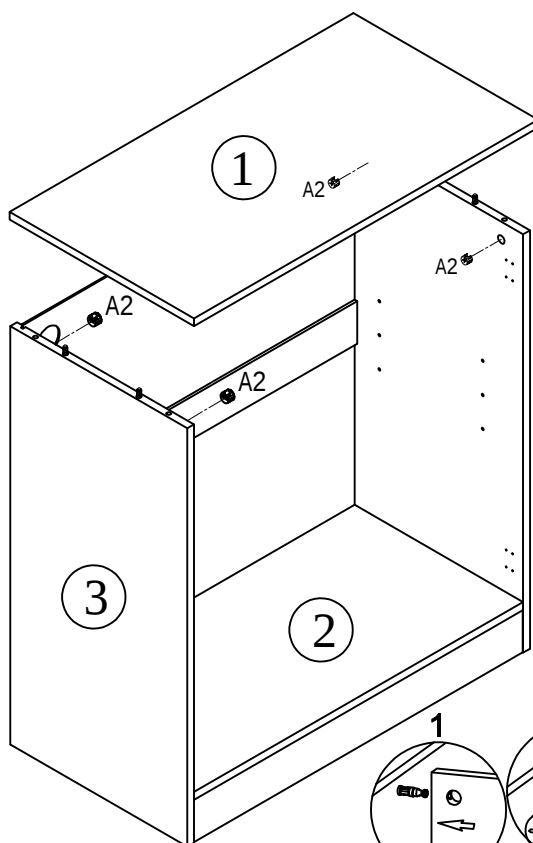


11

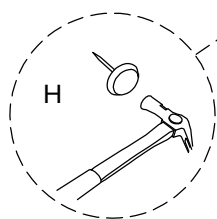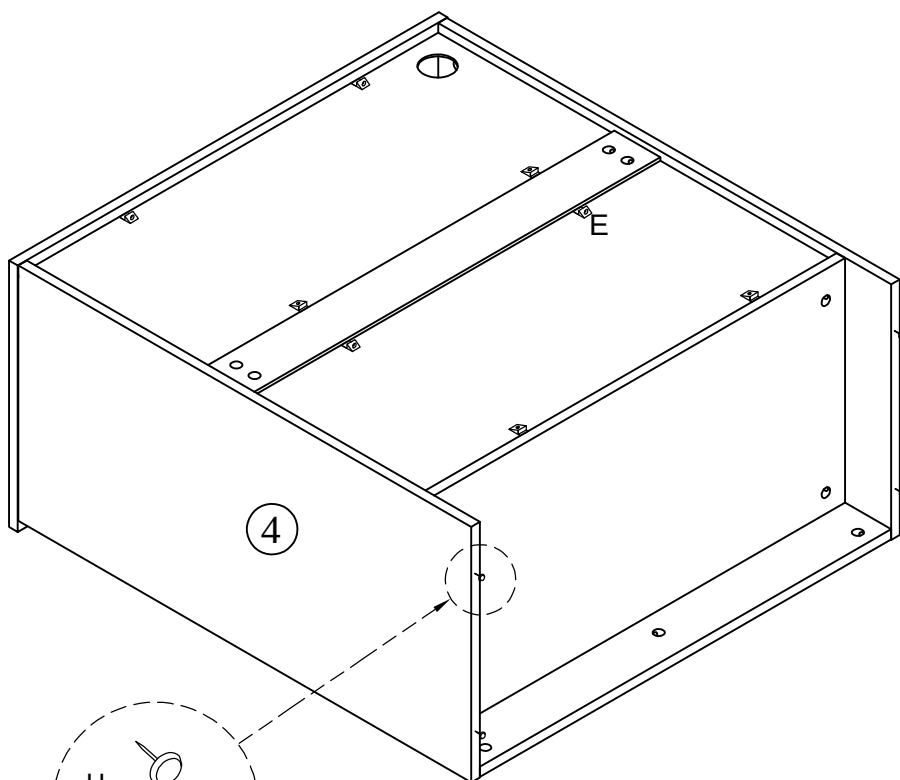

E  8pcs	C  Φ3*14 8pcs	M  4pcs
--	---	--

12


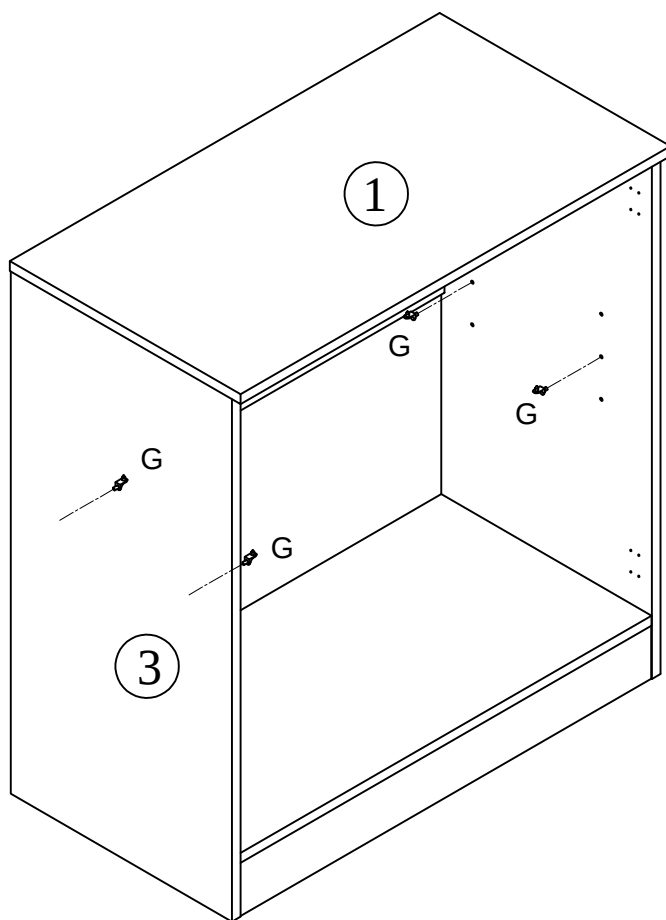


G





4pcs

13

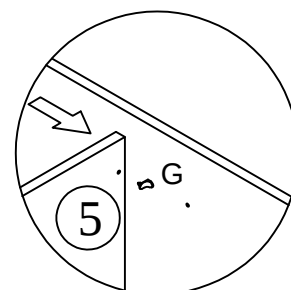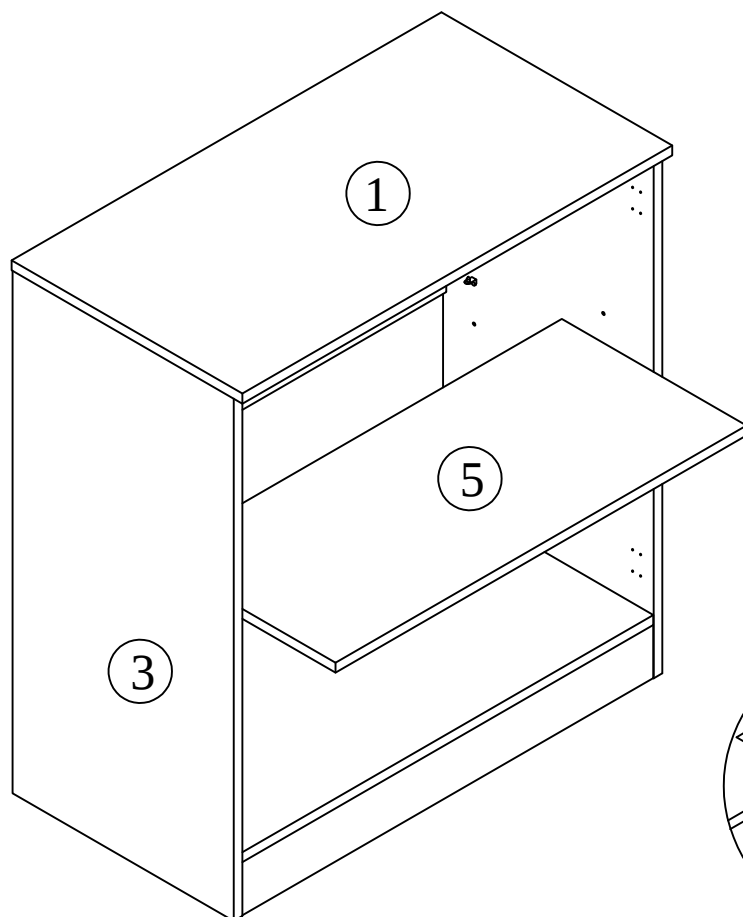

14

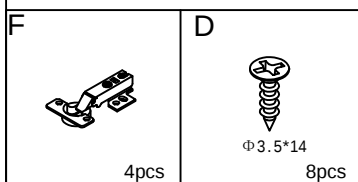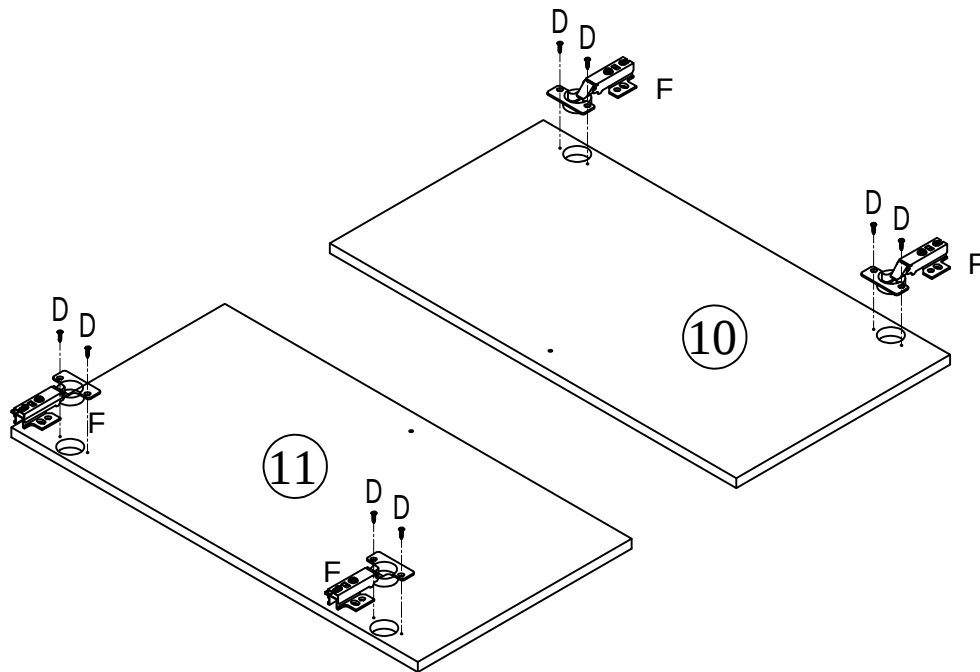

15

▲ First, install the two screws on the rear side, then adjust the height of the cabinet door. After that, install the two screws on the front side.

