
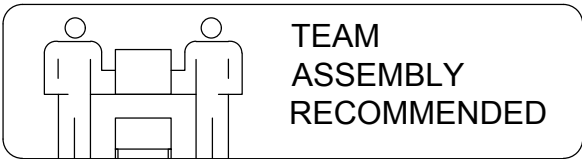
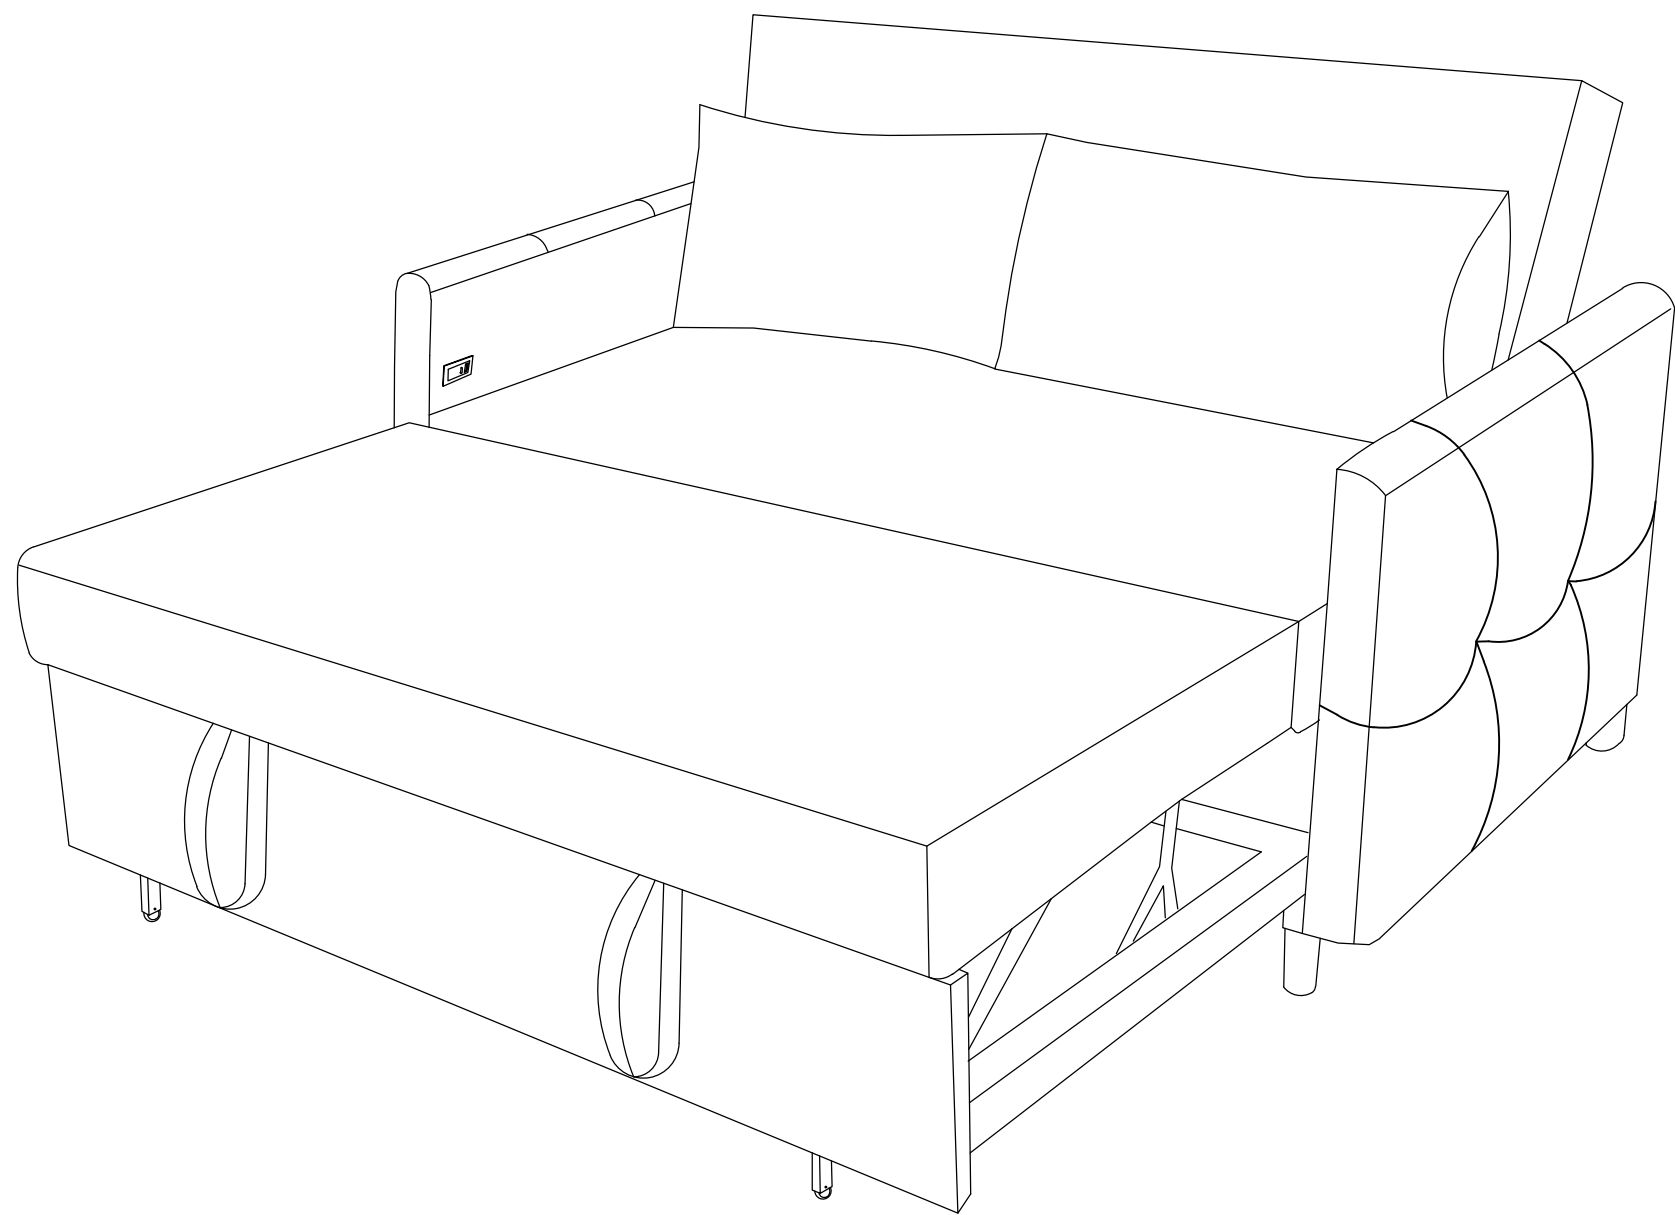
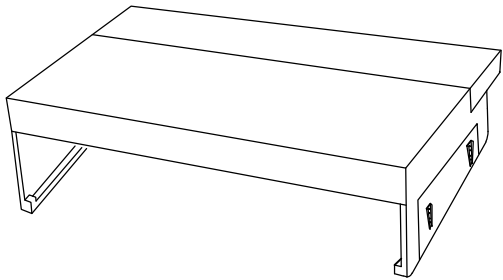
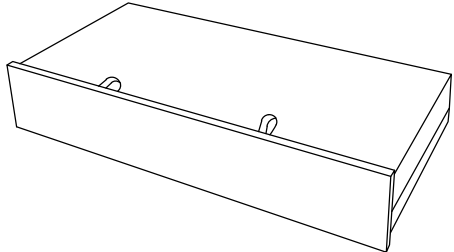
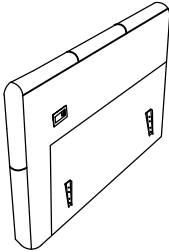
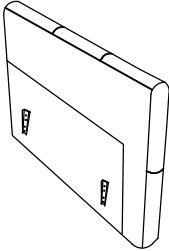
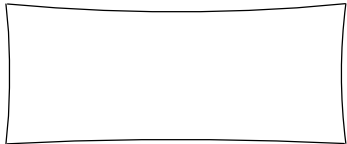

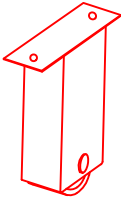
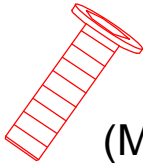
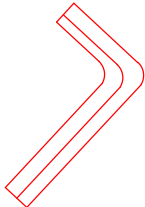


# INSTRUCTION

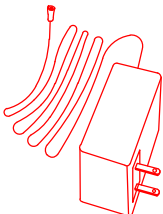


SOFA BED

# PARTS LIST

| NO | PART                                                                                             | DECS               | QTY |
|----|--------------------------------------------------------------------------------------------------|--------------------|-----|
| A  |                 | SEAT<br>CUSHION    | 1pc |
| B  |                 | TRUNDLE<br>BED     | 1pc |
| C  |                | LEFT<br>ARM        | 1pc |
| D  |               | RIGHT<br>ARM       | 1pc |
| E  |               | PILLOW             | 2pc |
| F  |               | LEGS               | 4pc |
| G  |               | LEGS               | 4pc |
| H  | <br>(M6*20MM) | SHORT<br>SCREW     | 8pc |
| I  |               | L-SHAPED<br>WRENCH | 1pc |
| J  |               | USB<br>POWER       | 1pc |


STEP 1

Ship by 1 box

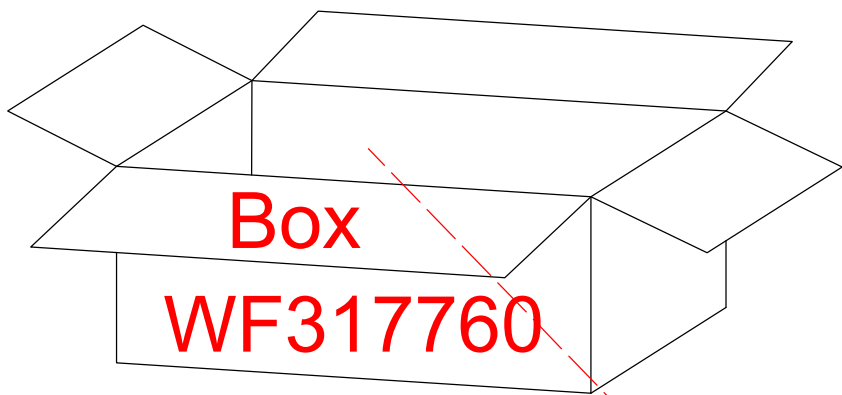


| NO | PART          | DECS            | QTY |
|----|---------------|-----------------|-----|
| A  |               | SEAT CUSHION    | 1pc |
| B  |               | TRUNDLE BED     | 1pc |
| C  |               | LEFT ARM        | 1pc |
| D  |               | RIGHT ARM       | 1pc |
| E  |               | PILLOW          | 2pc |
| F  |               | LEGS            | 4pc |
| G  |               | LEGS            | 4pc |
| H  | <br>(M6*20MM) | SHORT SCREW     | 8pc |
| I  |               | L-SHAPED WRENCH | 1pc |
| J  |               | USB POWER       | 1pc |


STEP 2

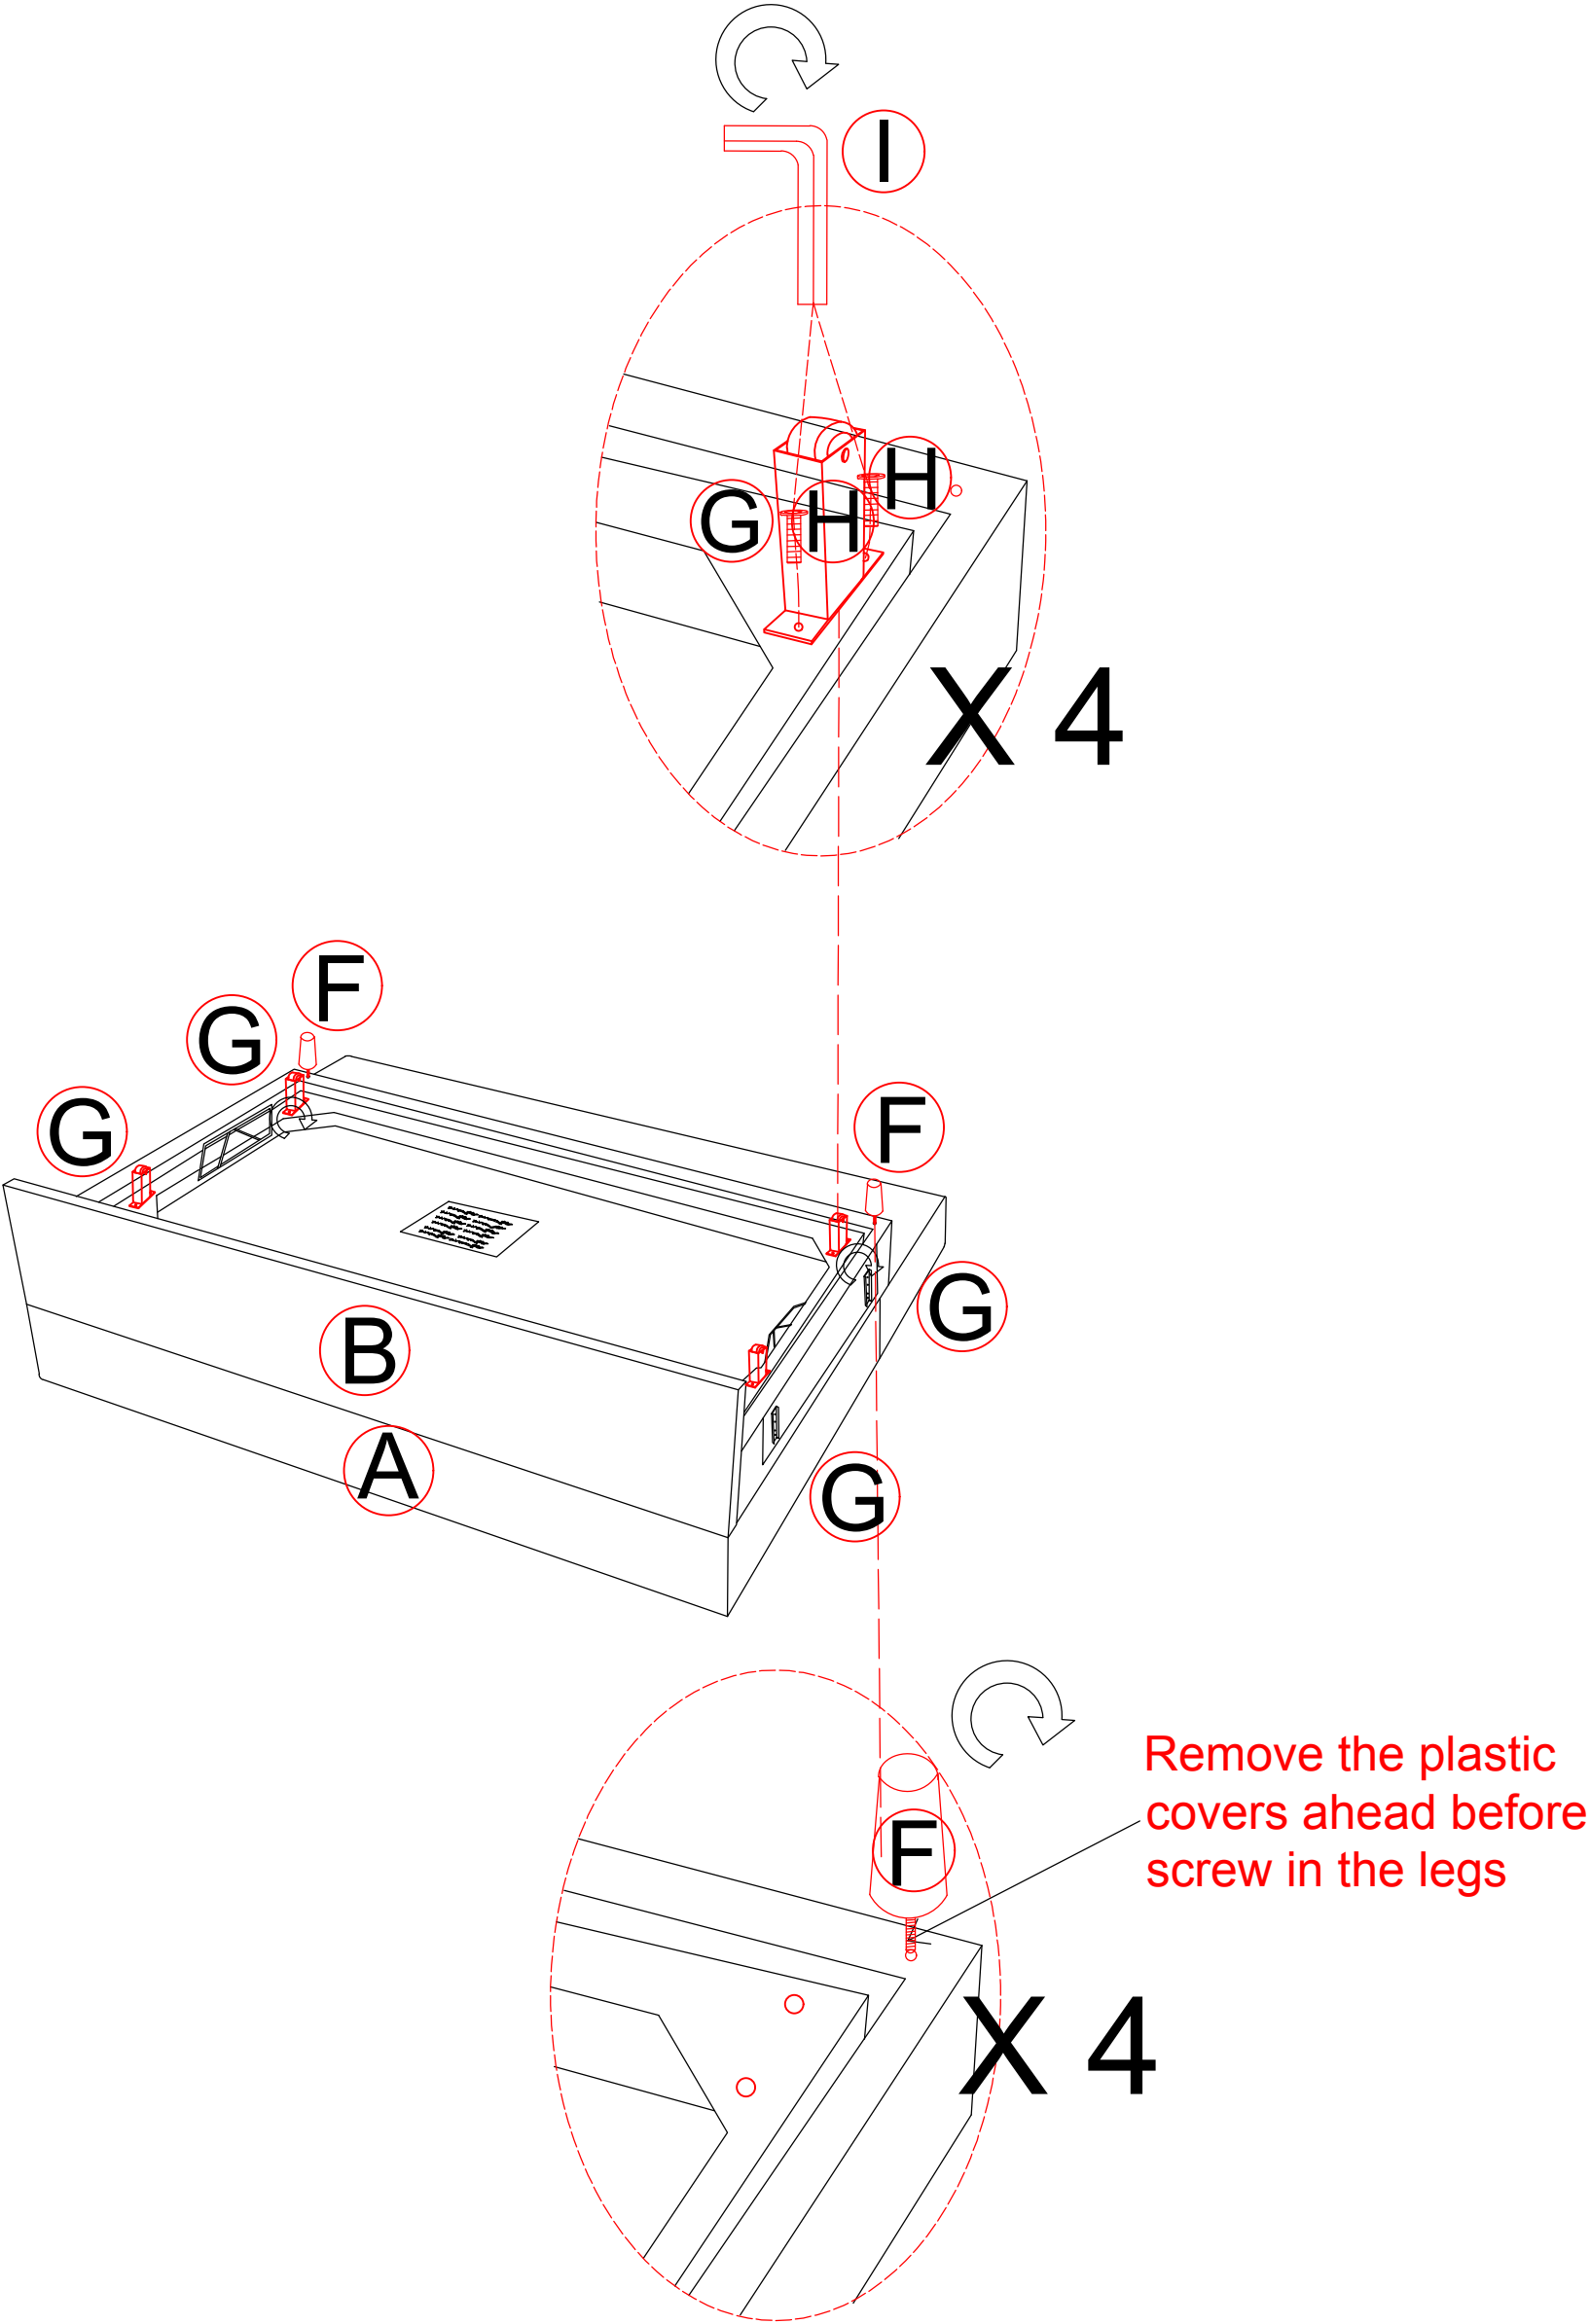

STEP 3

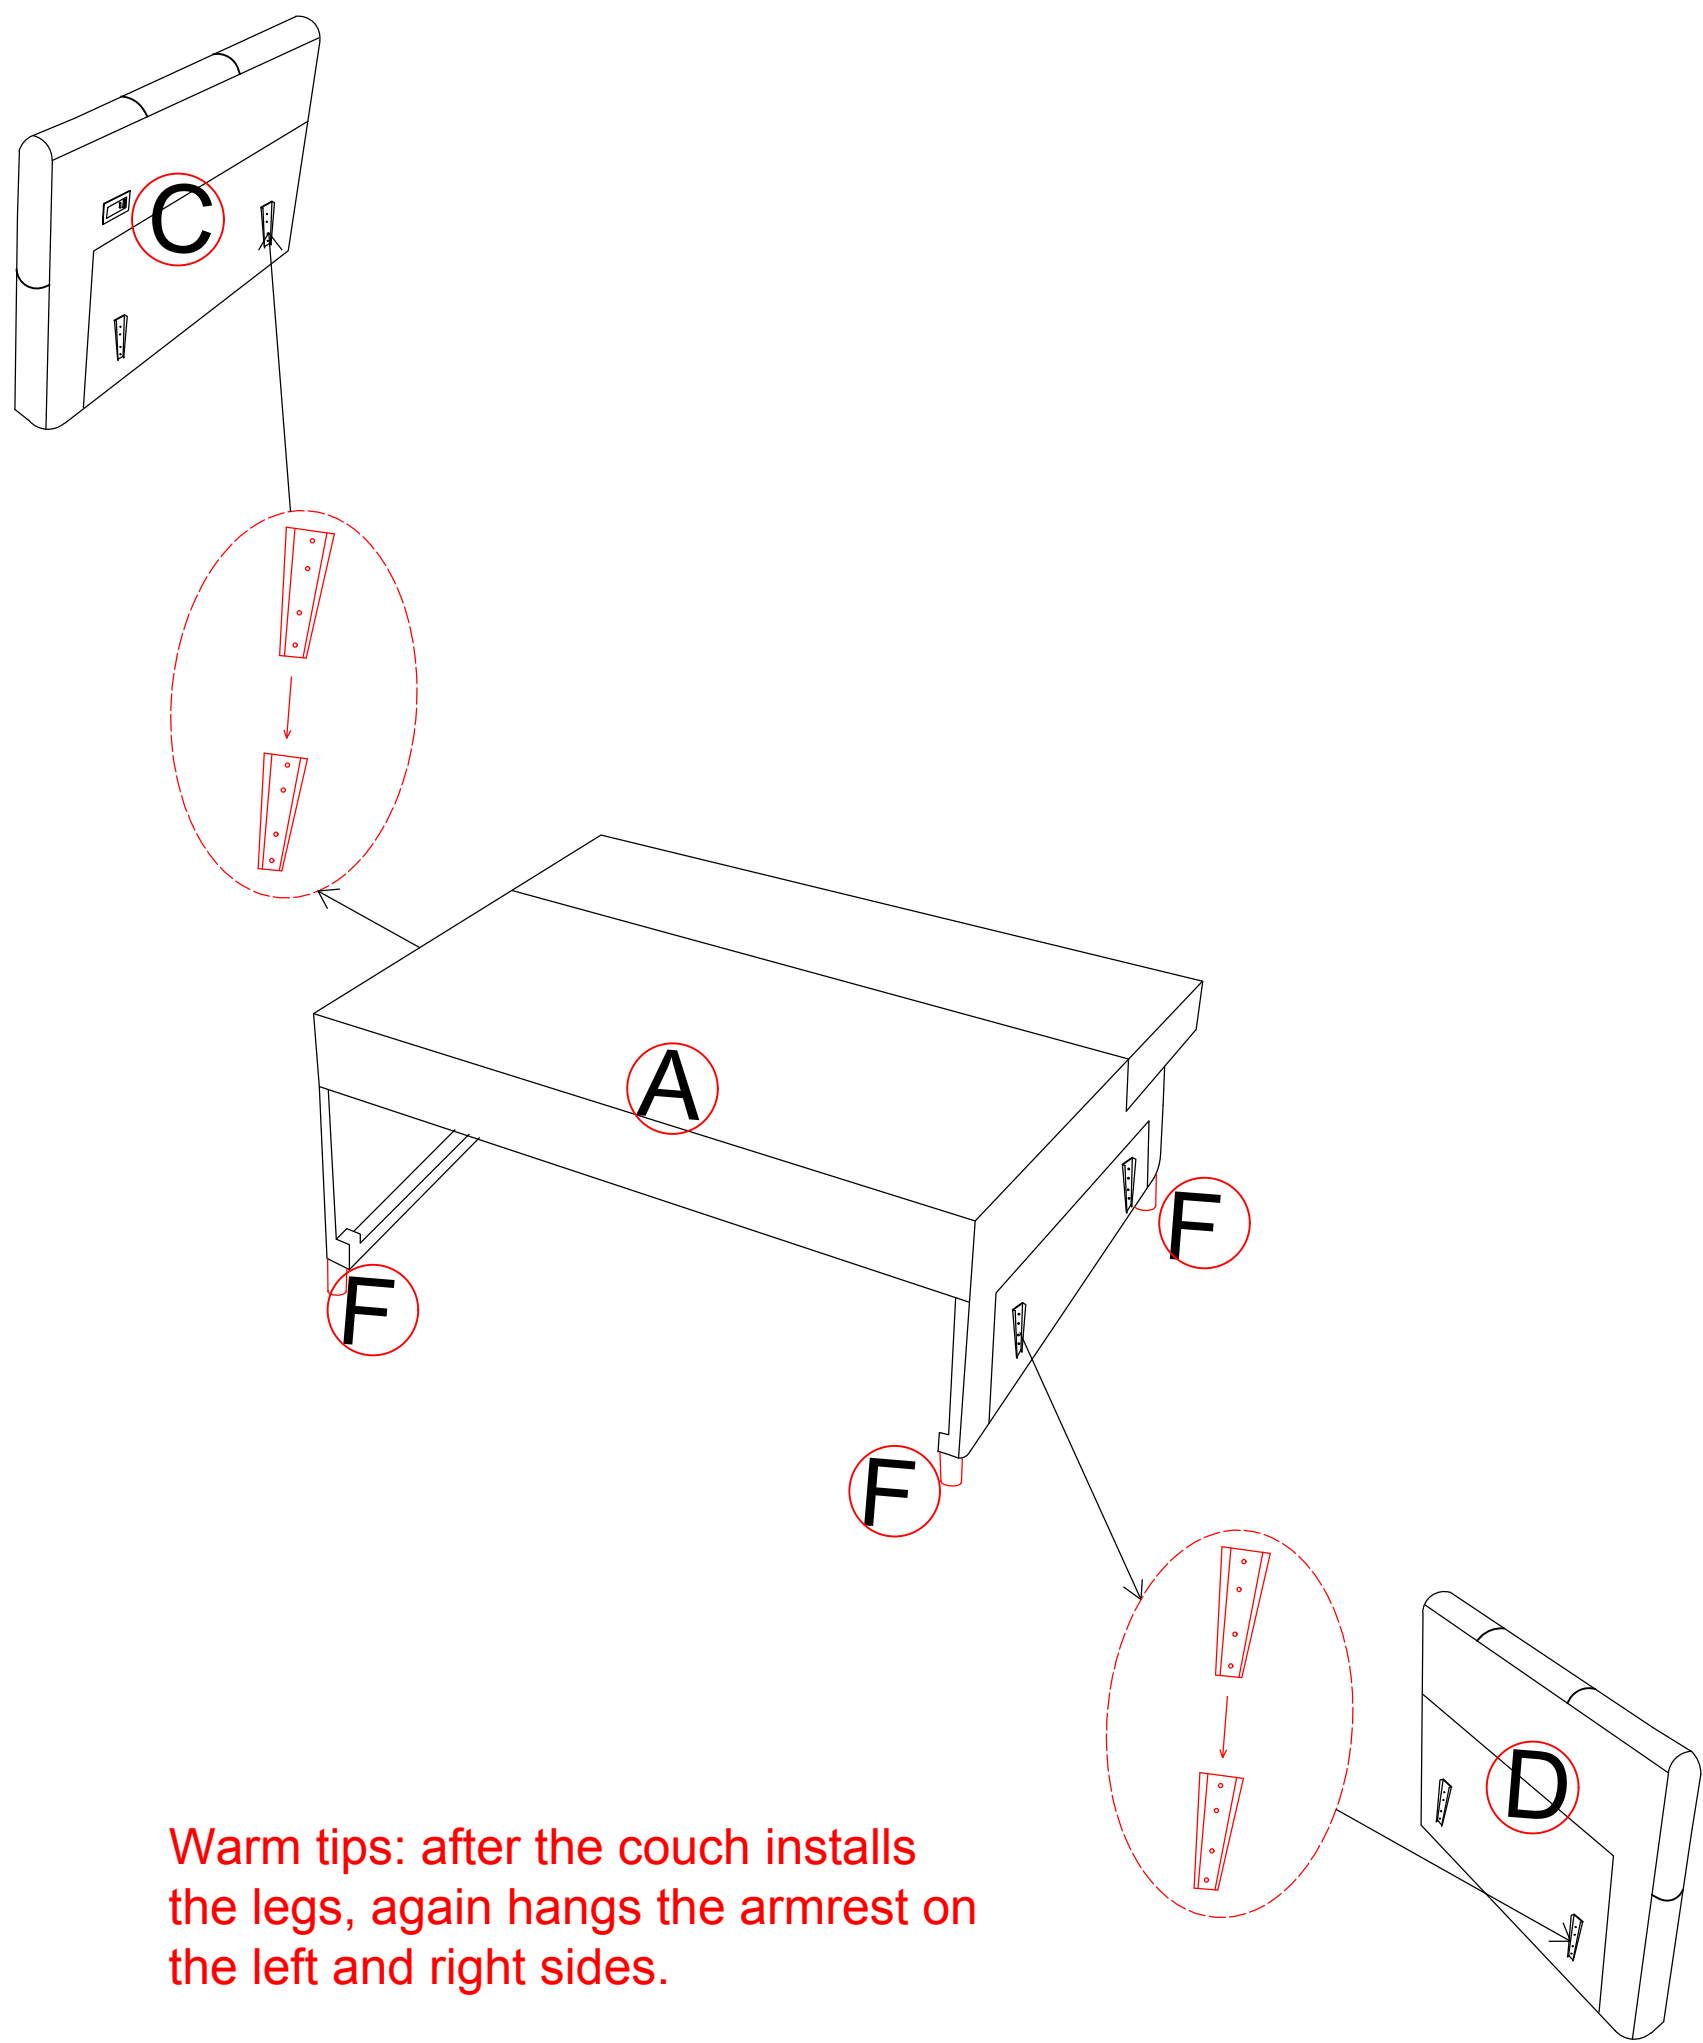


STEP 4

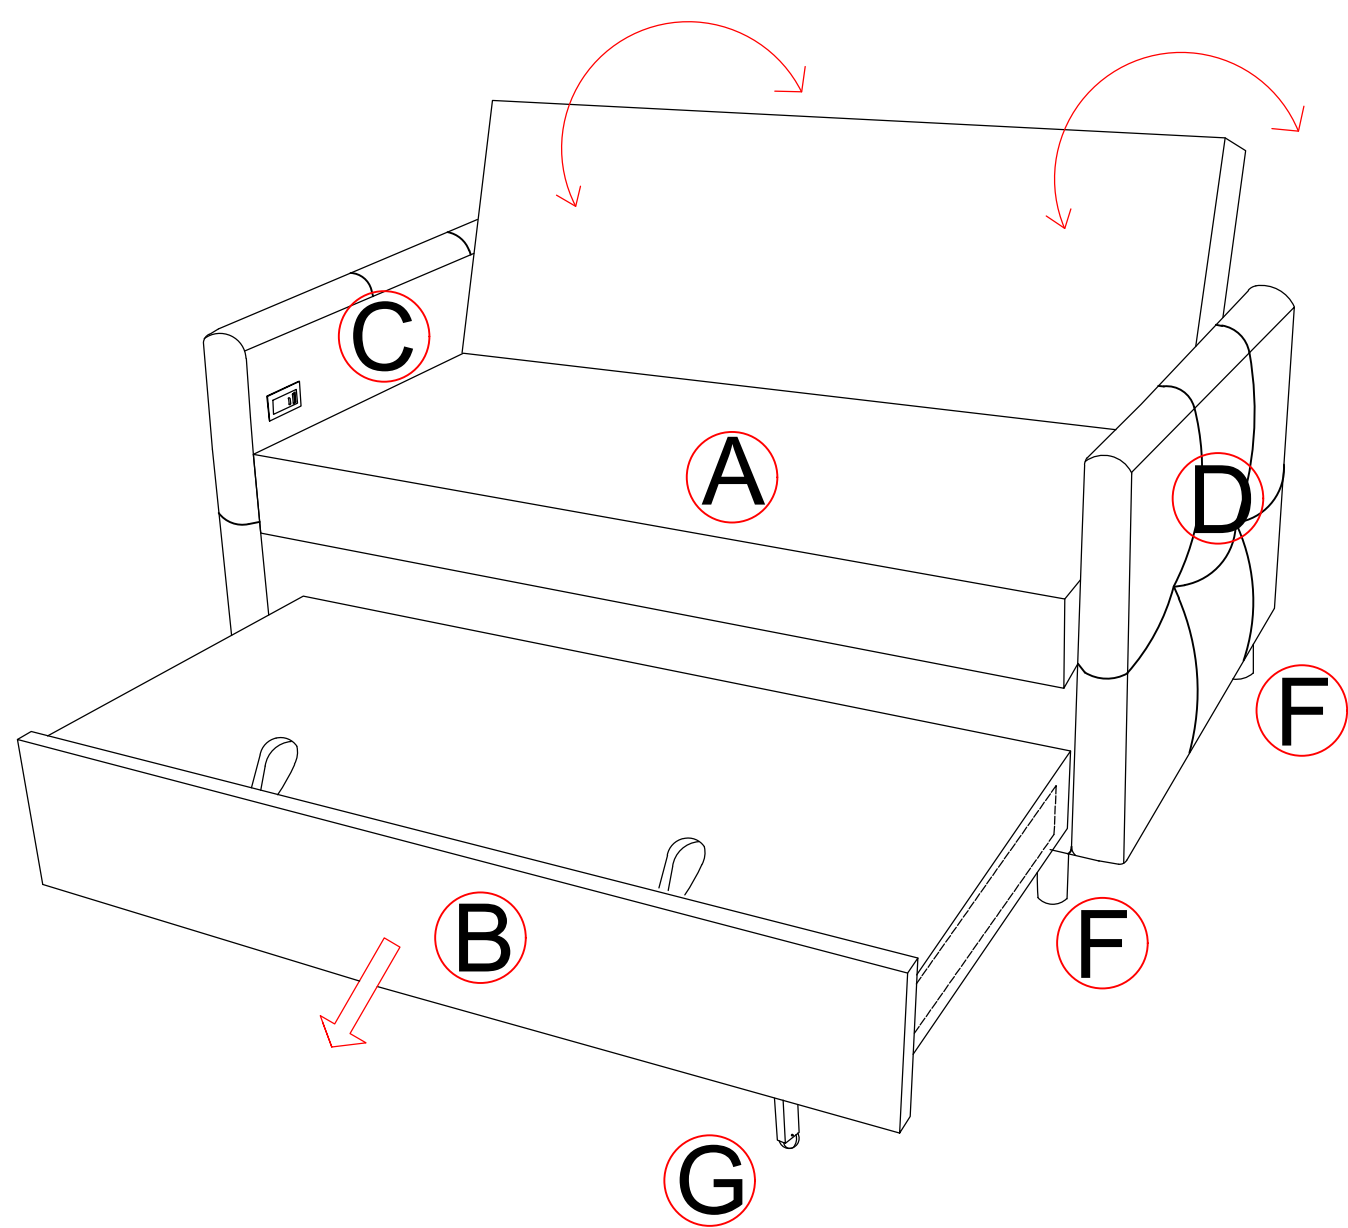


The trundle bed can be pulled out.

STEP 5

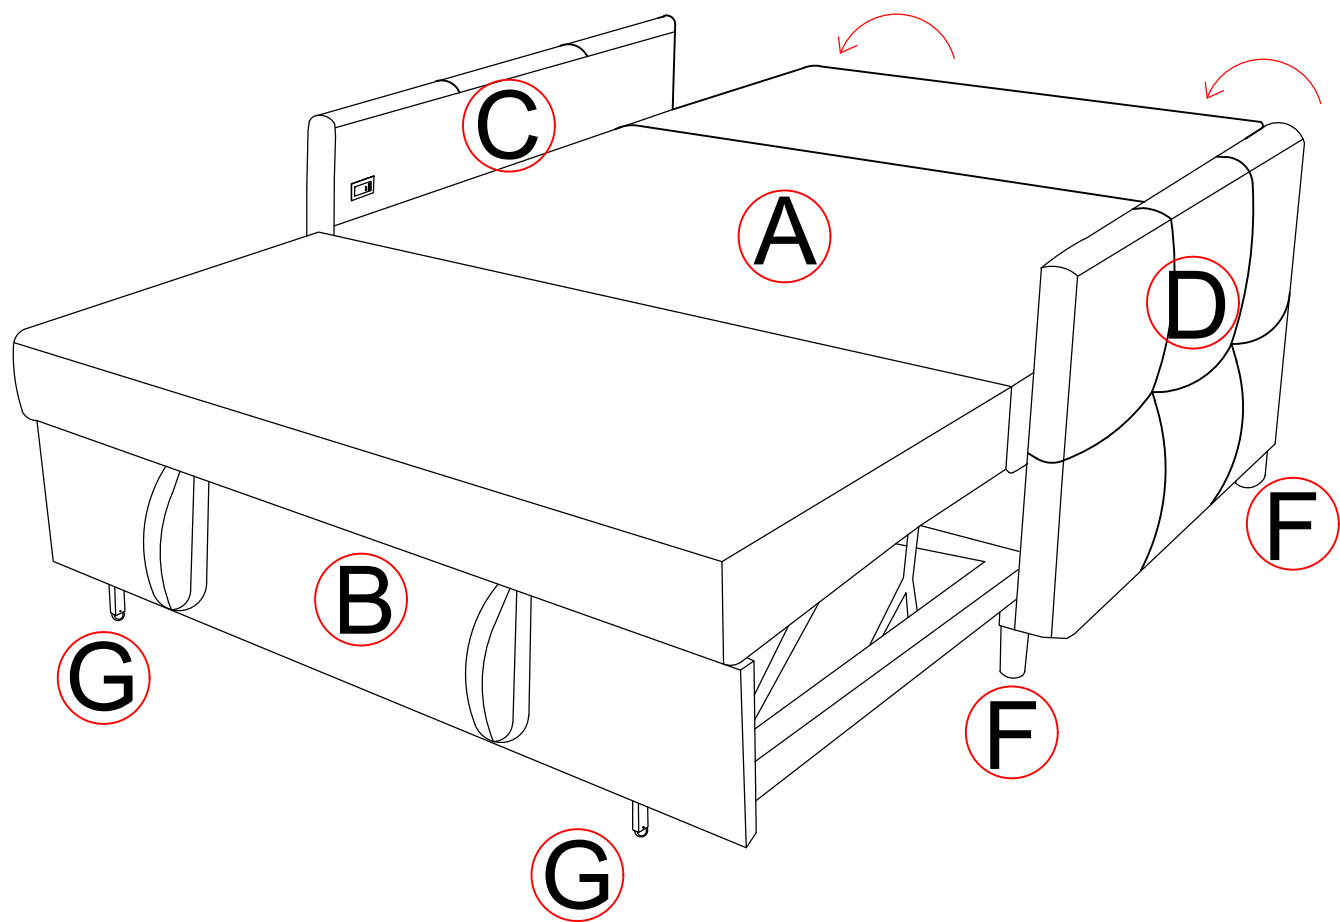

The backrest can be flat.

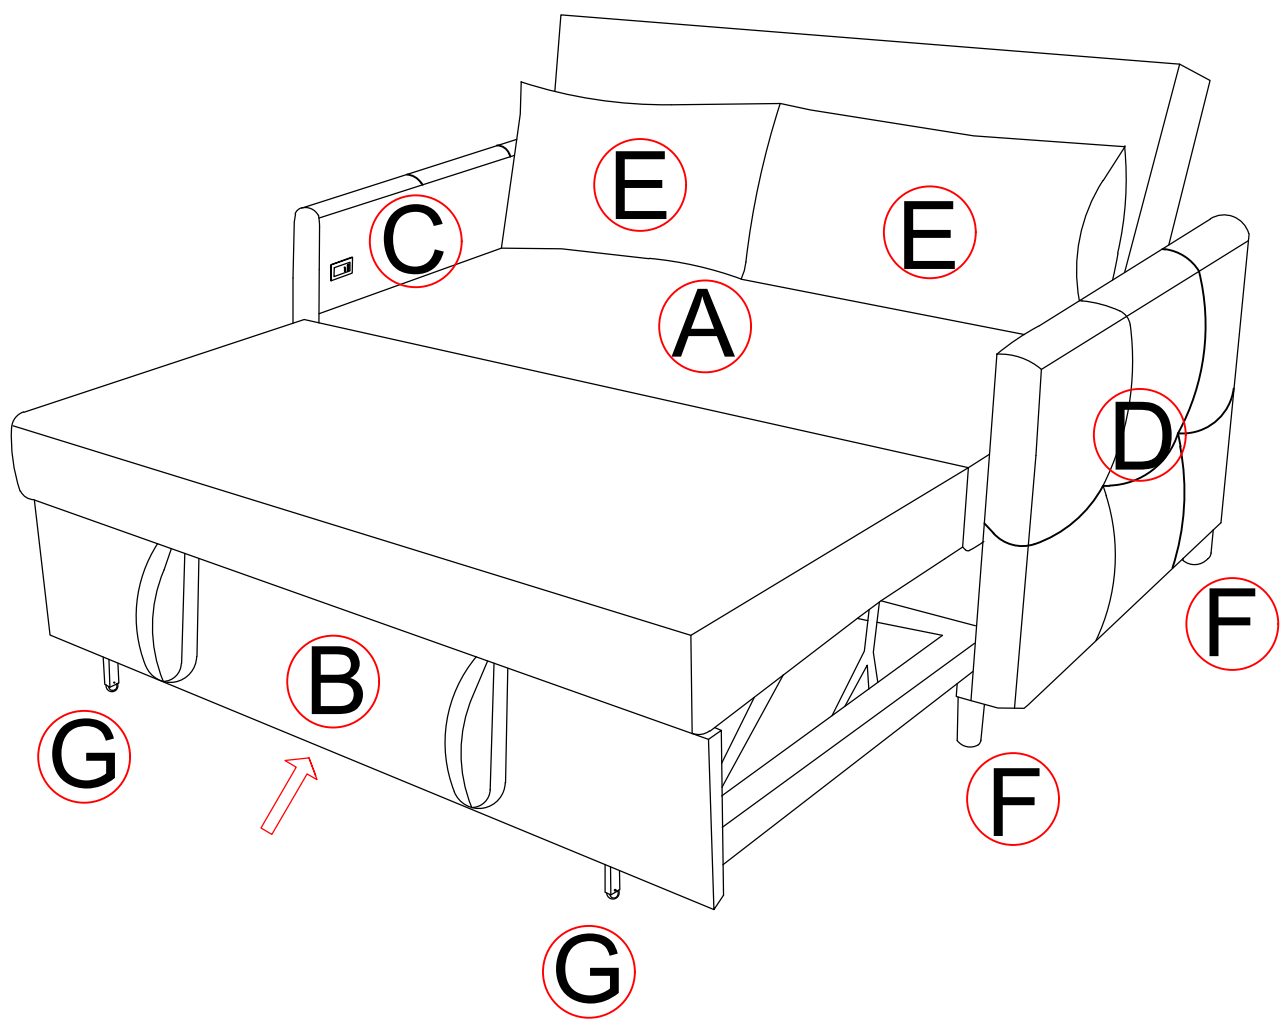

STEP 6

