
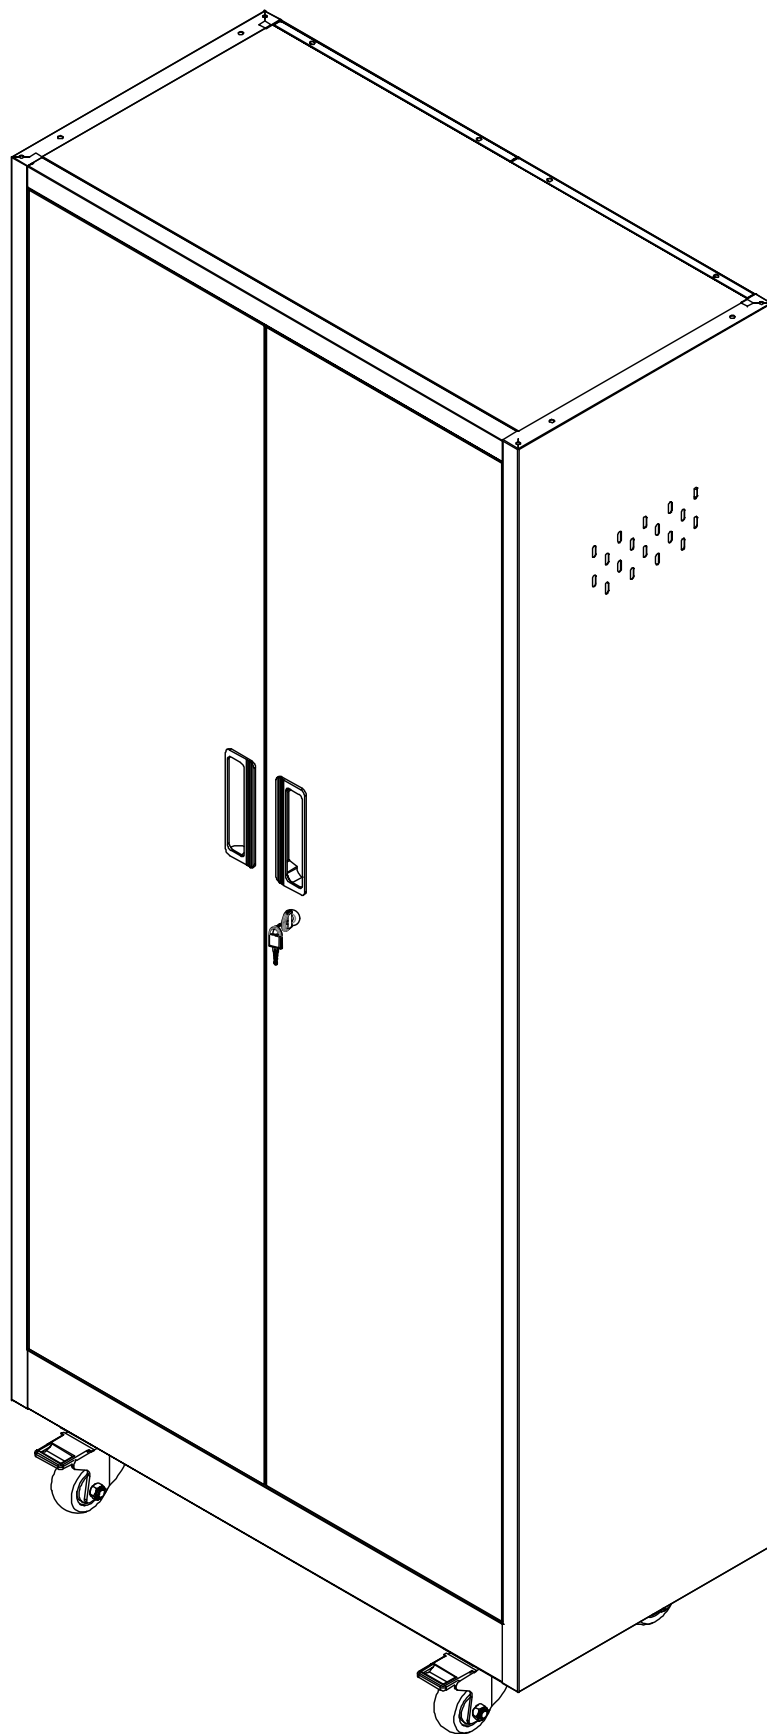


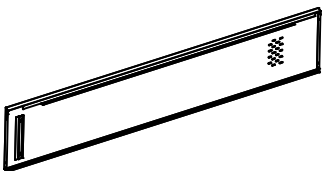

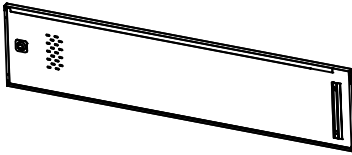
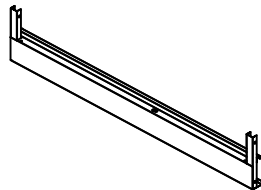
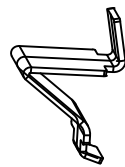
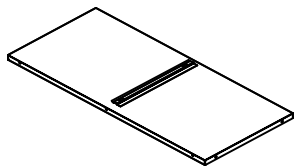
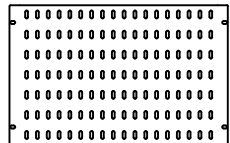
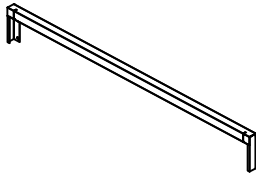

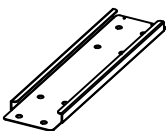
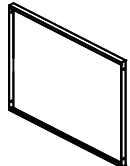




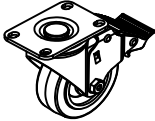






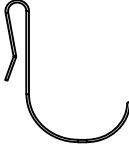

Accessories

Name		Picture	QTY	Name		Picture	QTY
A	Left Back Panel		1	K	Left Door		1
B	Right Back Panel		1	L	1-3/16 " Wall		2
C	Left Side Panel		1	M	Wall Anchor Screw		2
D	Right Side Panel		1	N	13/32 " Screw		45
E	Kick Plate		1	O	Shelf Clip		16
F	Bottom Panel		1	P	Pegboard		3
G	Top Rail		1	Q	Middle Plate		1
H	Top Panel		1	R	Baseplate		2
I	Shelf		4	S	Door Pivot Pin		2
J	Right Door		1	T	Shim		4


Accessories

Name		Picture	QTY	Name		Picture	QTY
U	Foam Pad		2	Y-1	Front wheel		2
V	Towel Rail		2	Y-2	Rear wheel		2
W	Pedestal		2	Z	M6 × 12		16
X	M3 × 8		8	AA	Hook		6
BB	Hanger Rod		1	CC	Peg		3

Step 1

(N)  × 3


Connect left back panel A and right back panel B with 3 screws N

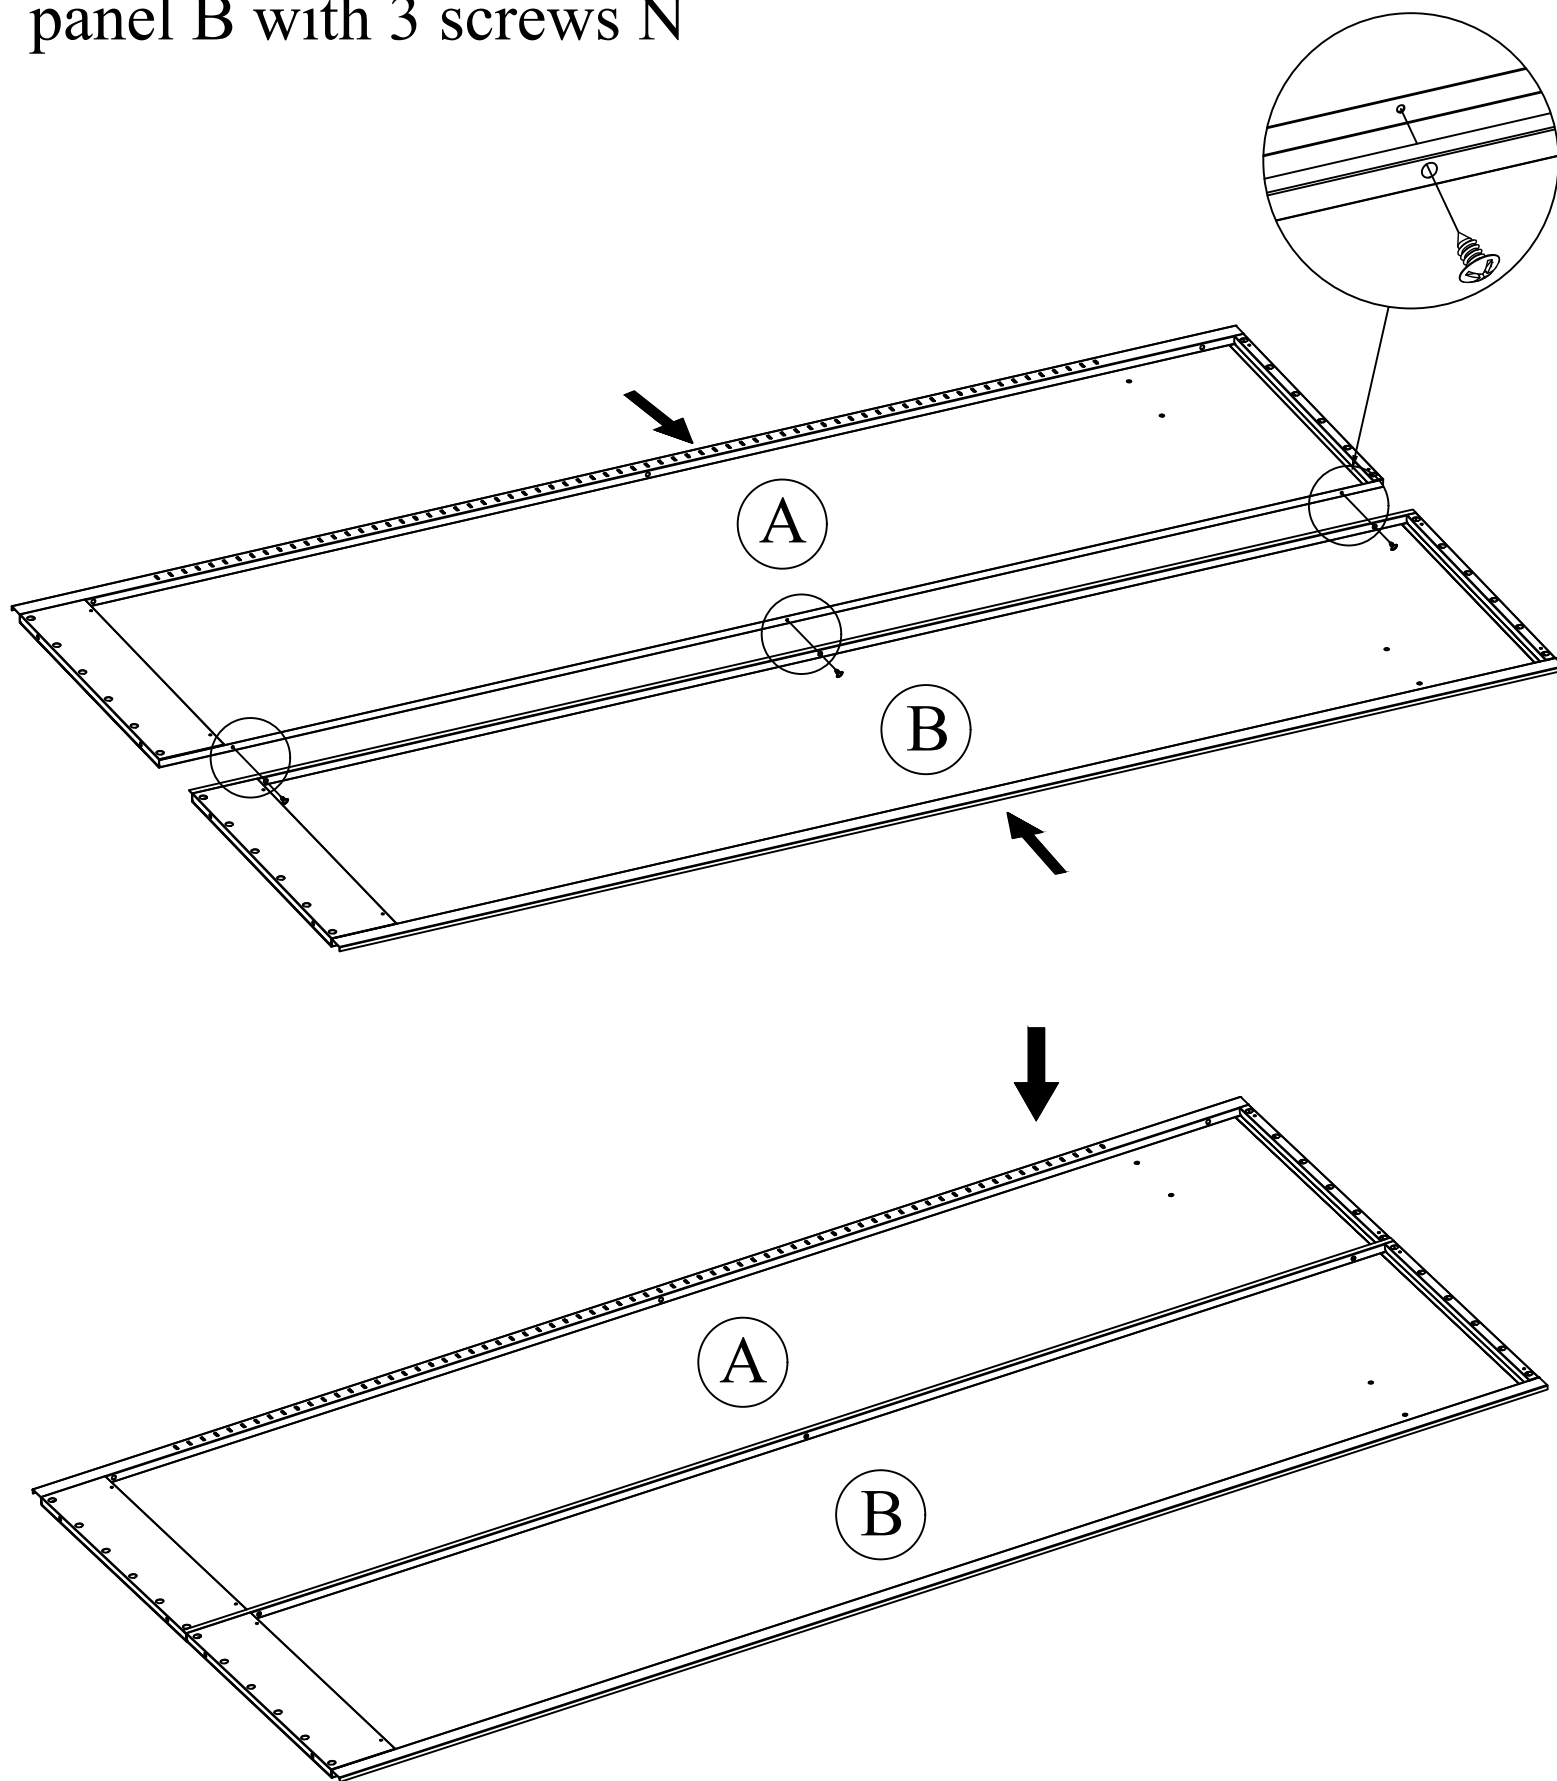

Step 2



(N)  × 6

Connect left side panel C and right side panel D on back panels with 6 screws N

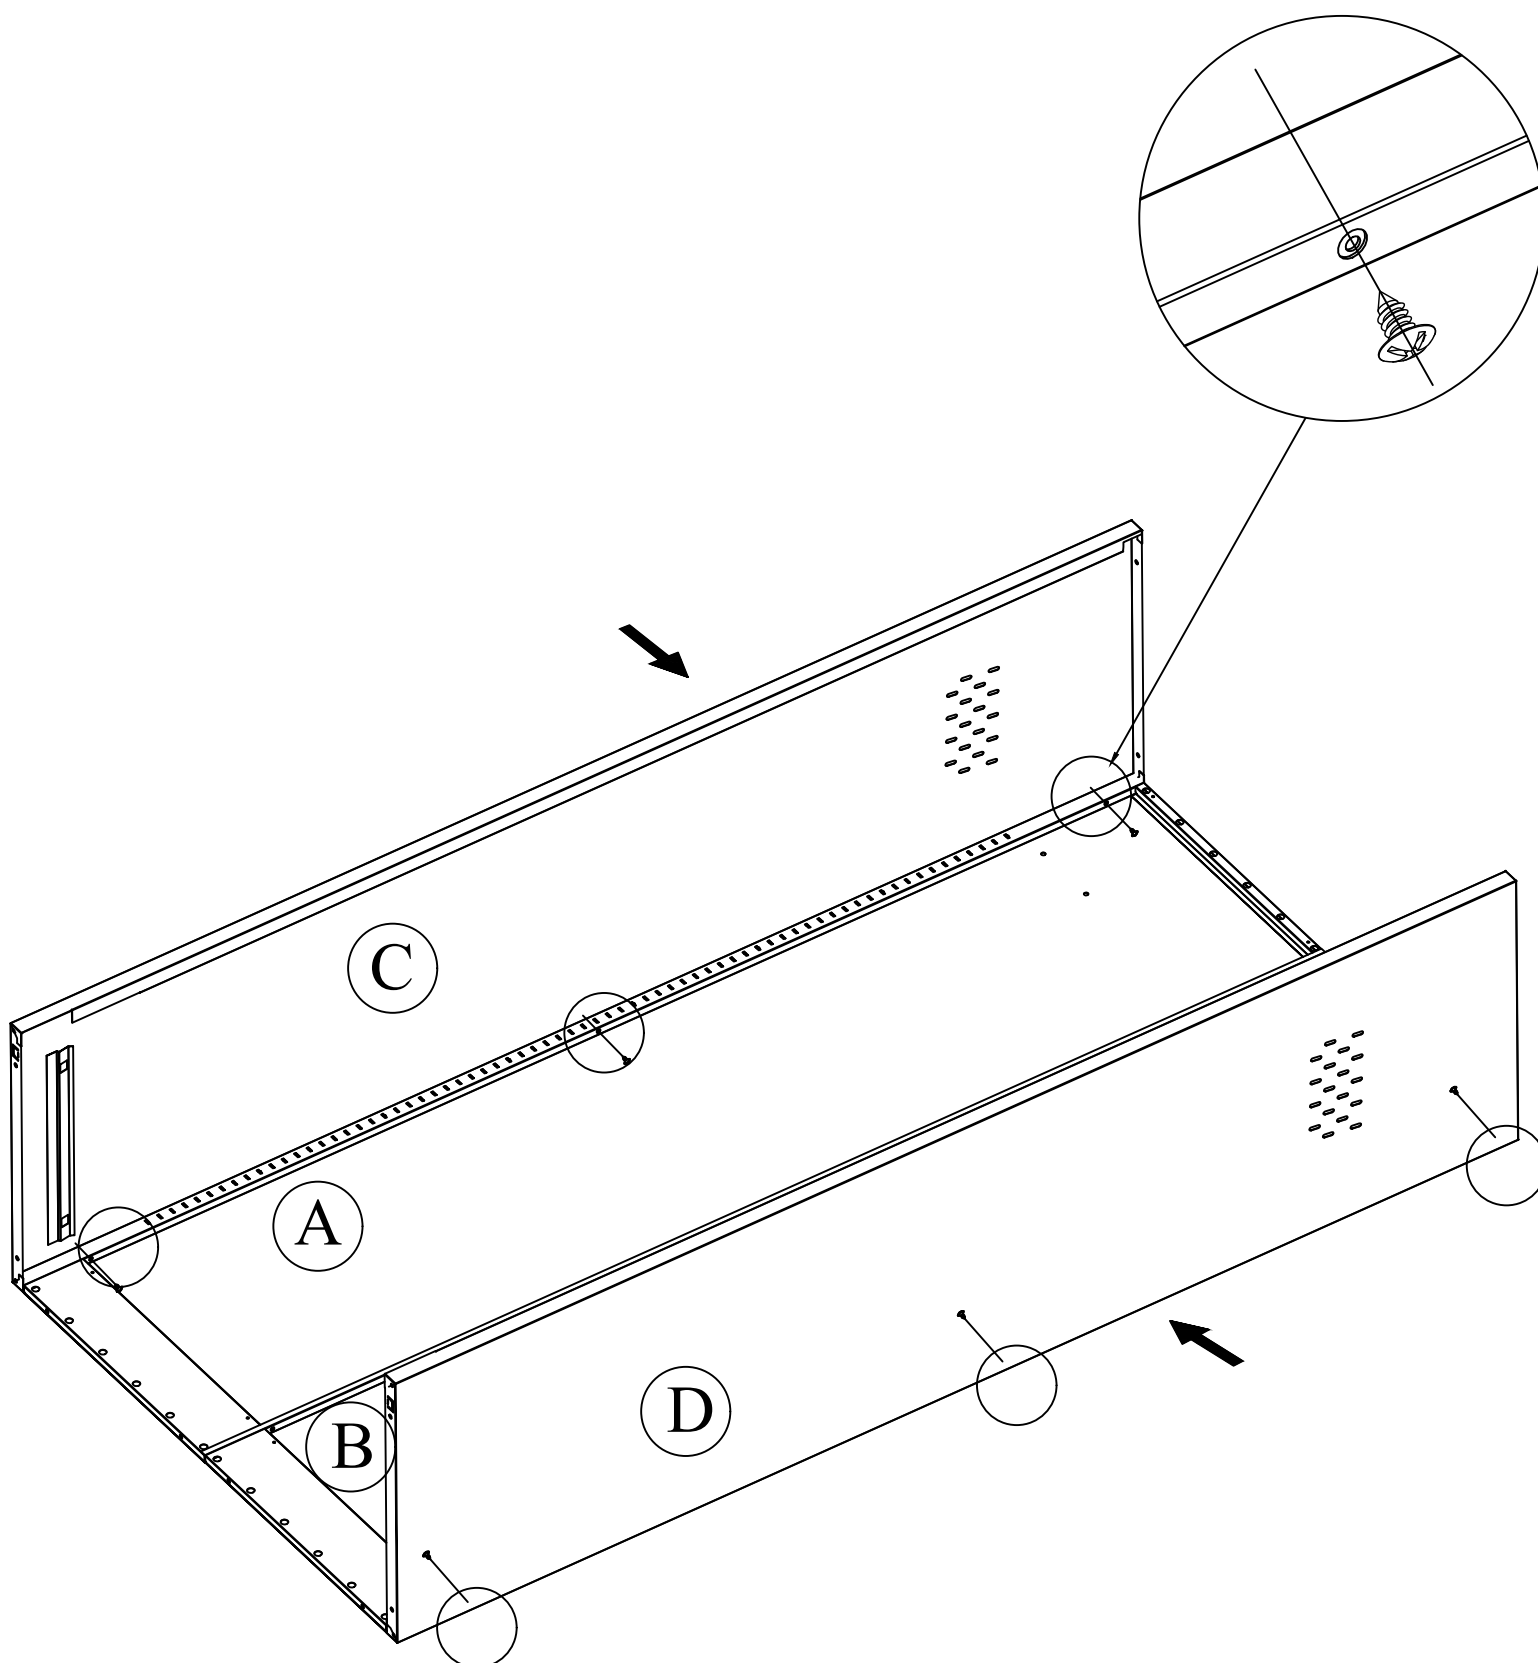


Step 3

Insert kick plate E into the bottom

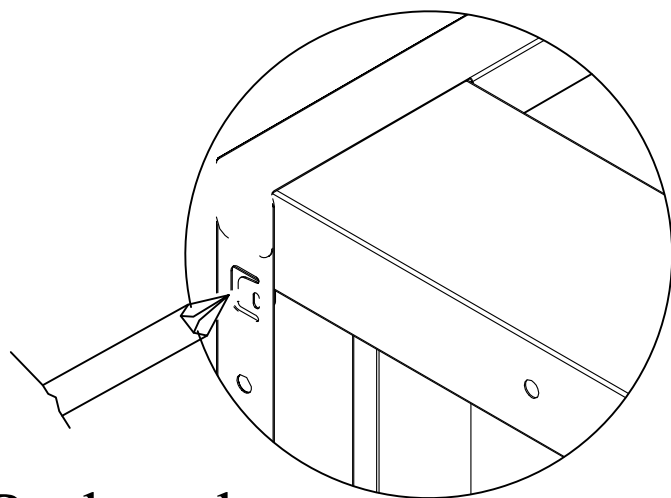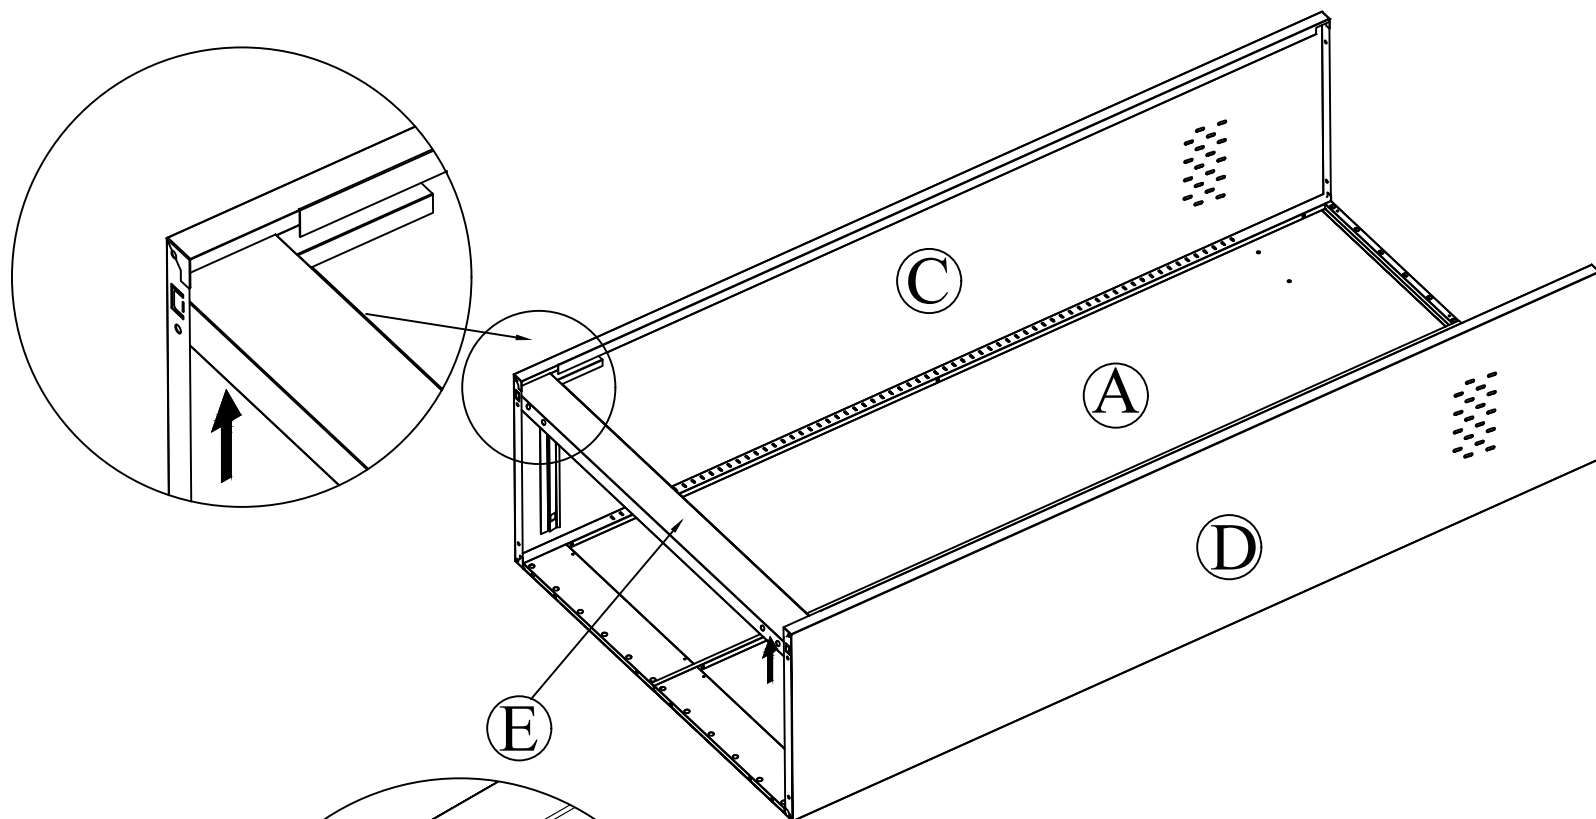

Push up here

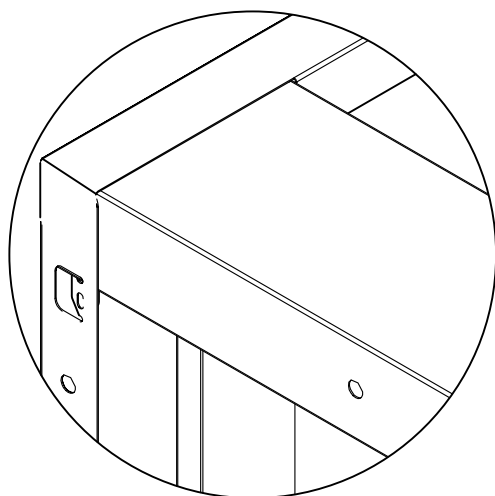


Step 4

(N)  × 11

Fix top rail G with 4 screws N


Fix bottom panel F with 7 screws N

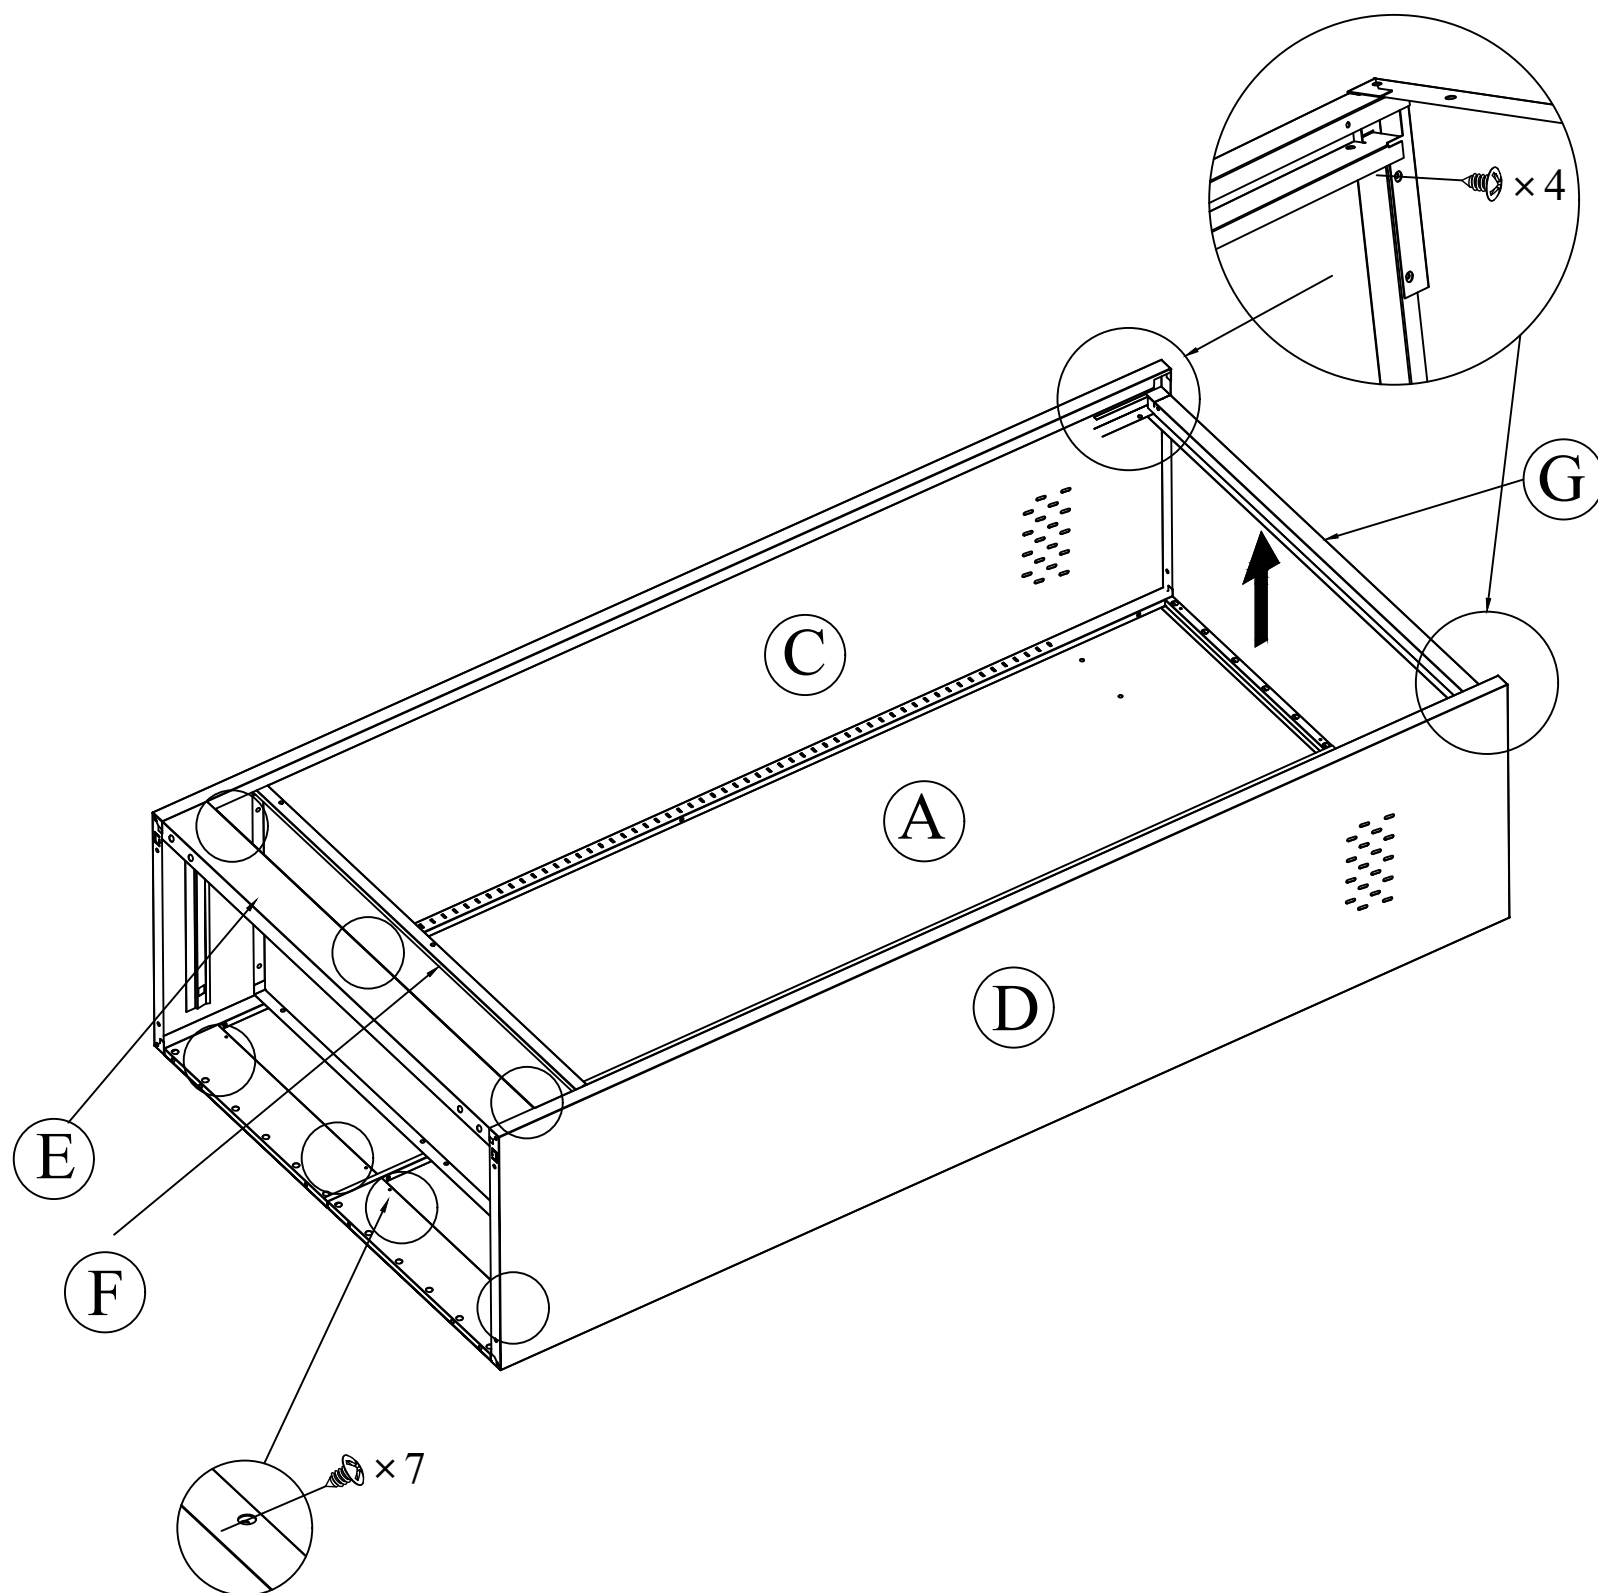

Step 5


Ⓝ  × 7

Fix top panel H with 7 screws N

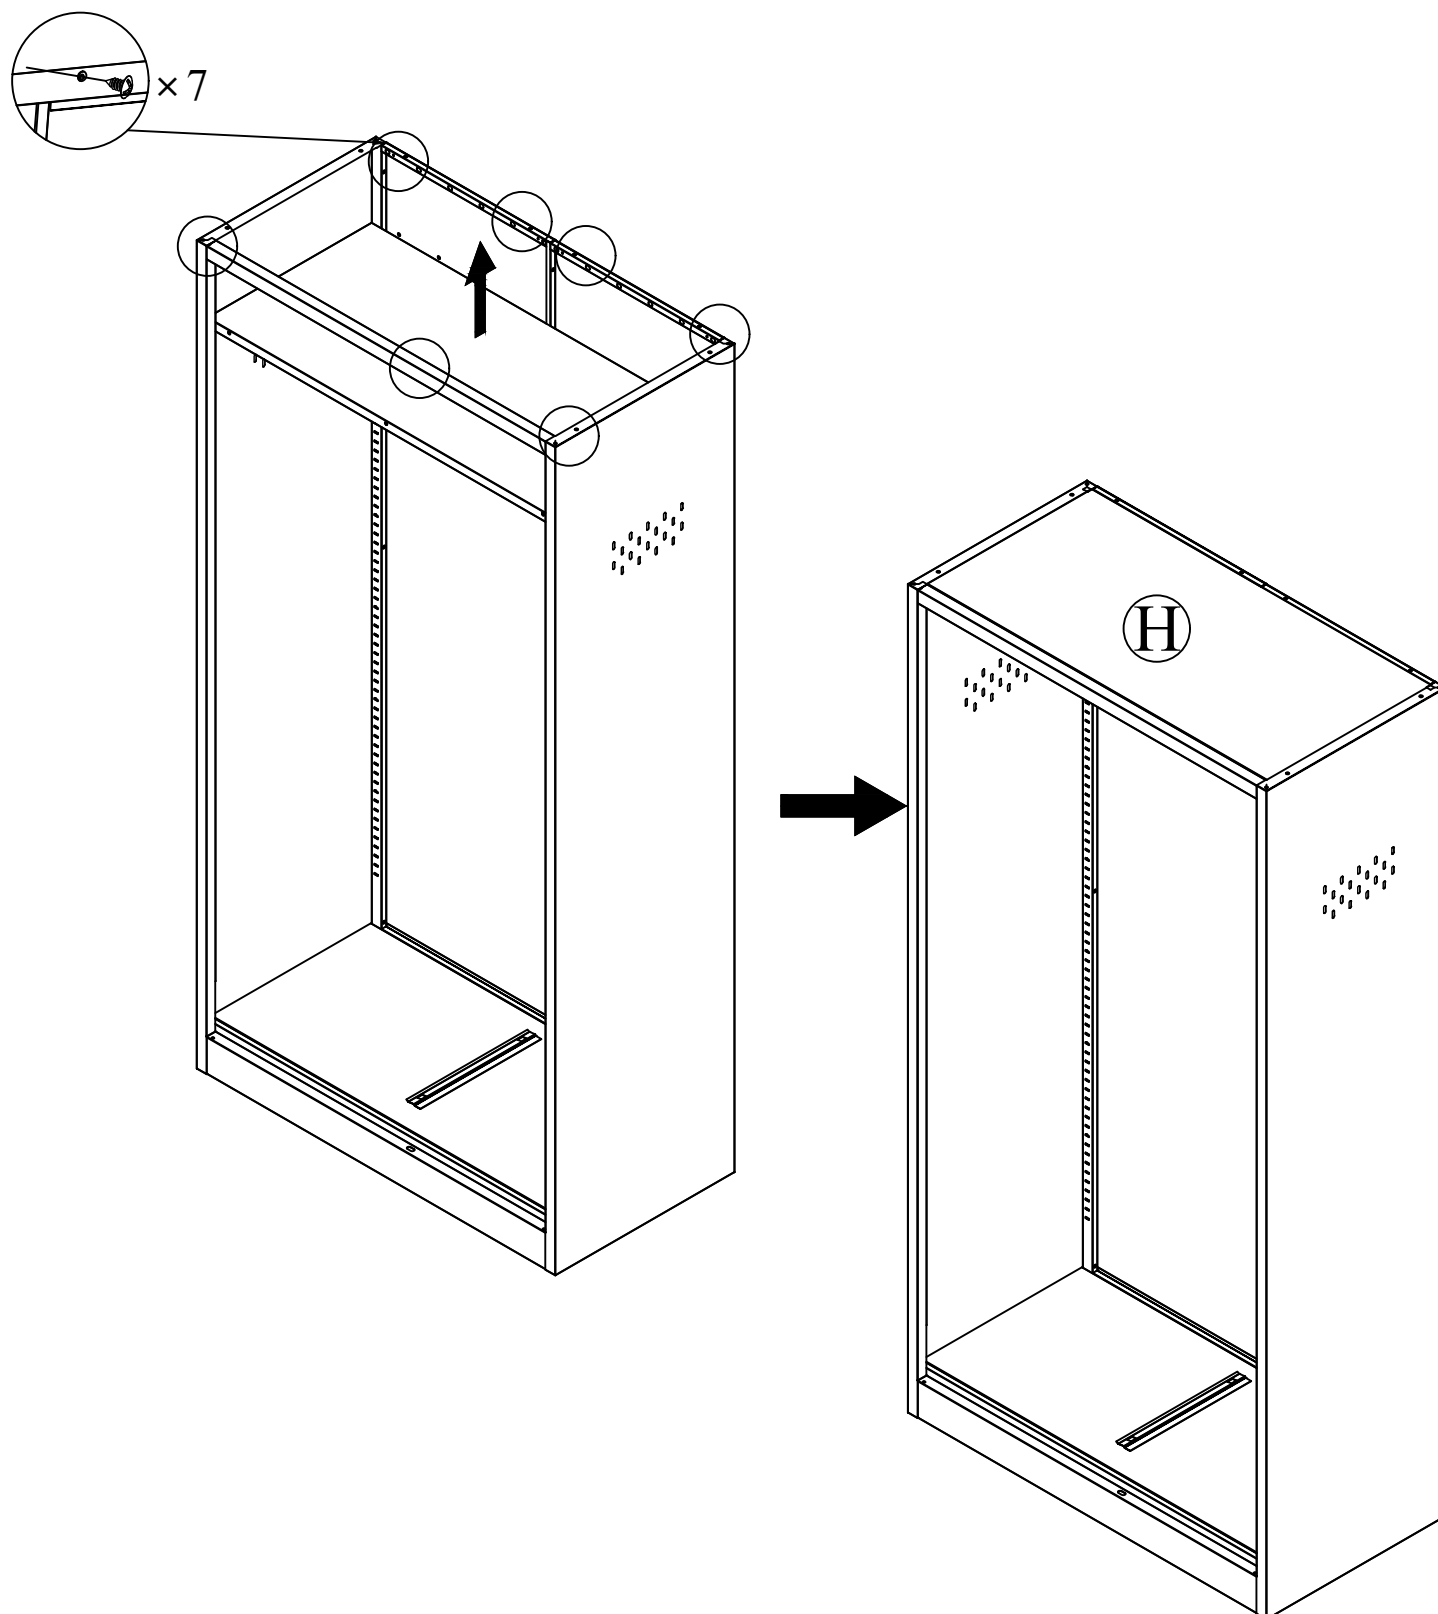

Step 6

Put the middle plate Q into the cabinet

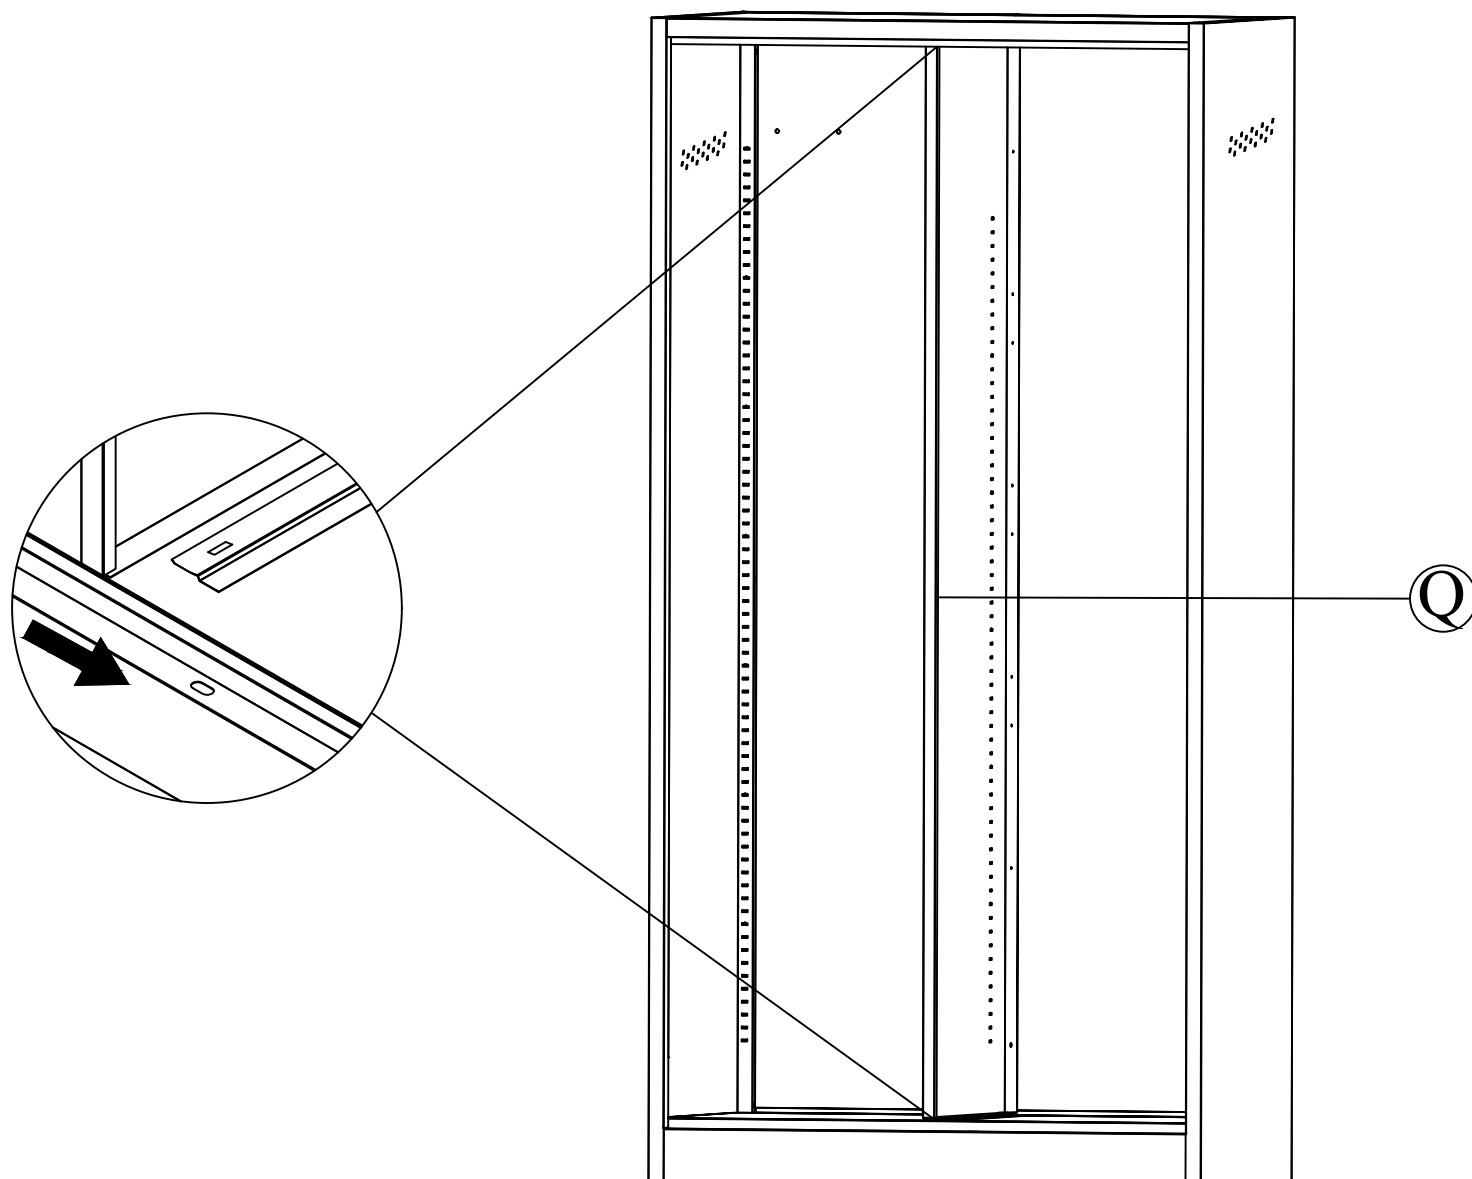


Step 7

Fix baseplate R to the bottom with 4 screws N






Fix 2 wheels Y-1 and 2 wheels Y-2 with 16 screws Z

(N)  × 4

(Y-1)  × 2

(Y-2)  × 2




(Z)  × 16

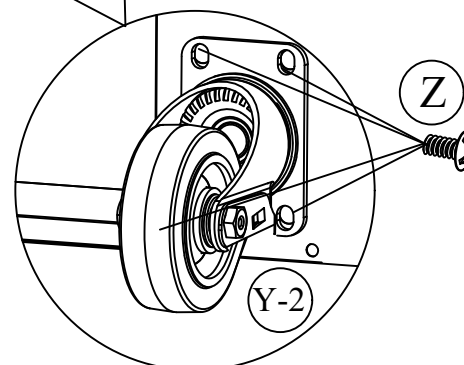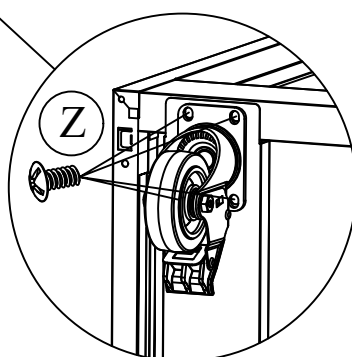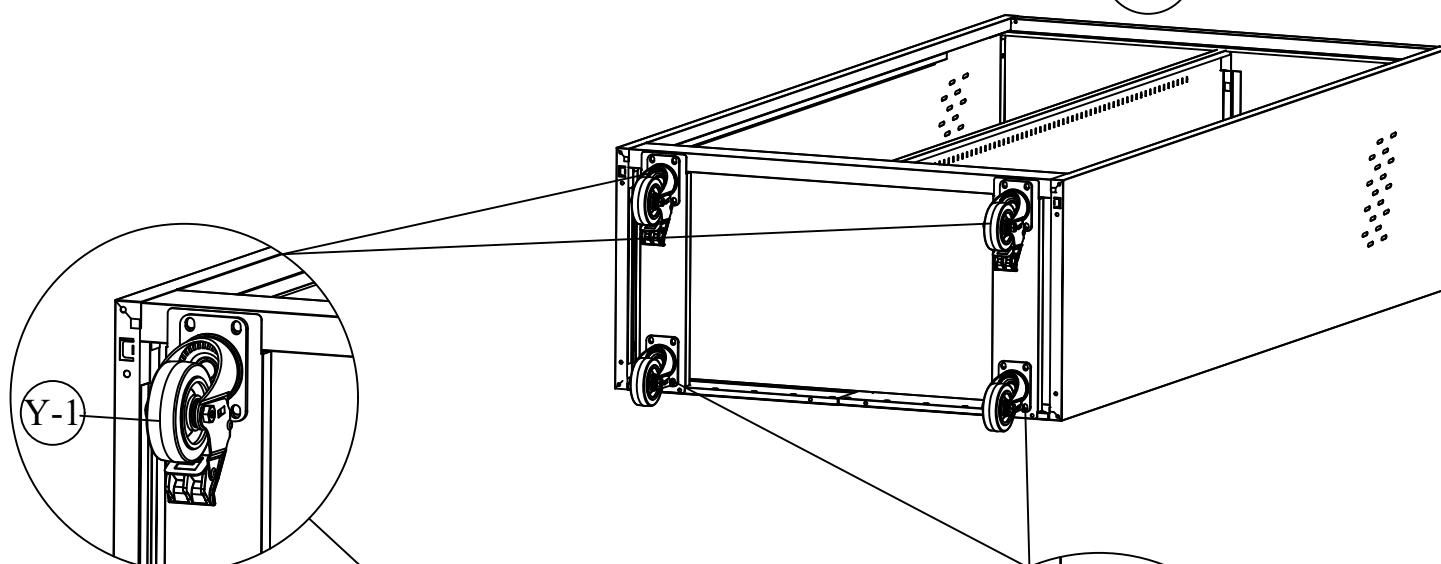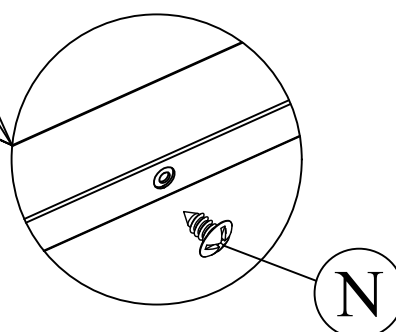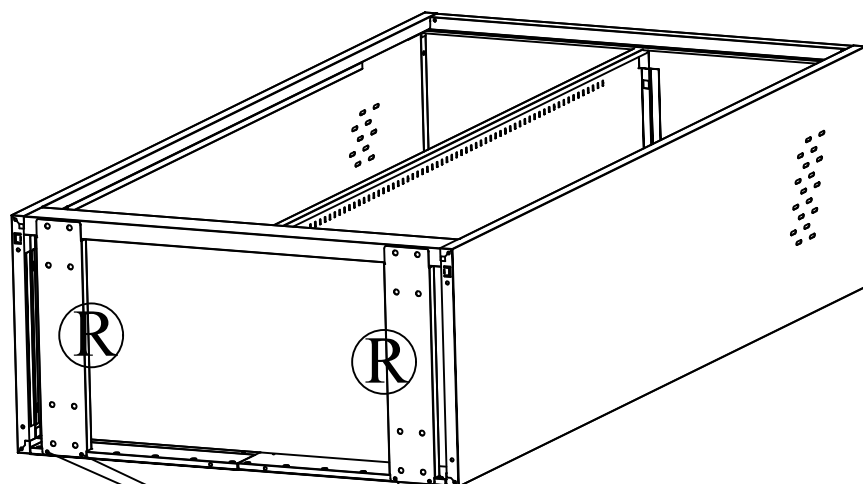


Step 8

○  × 16

Install shelf clips O at the same level and put the shelves I on them

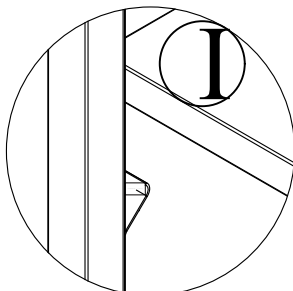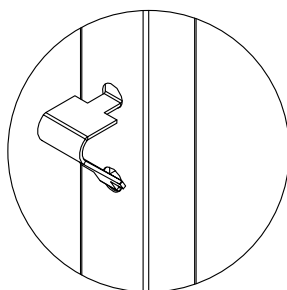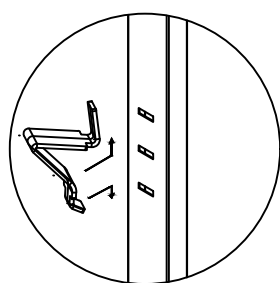


I

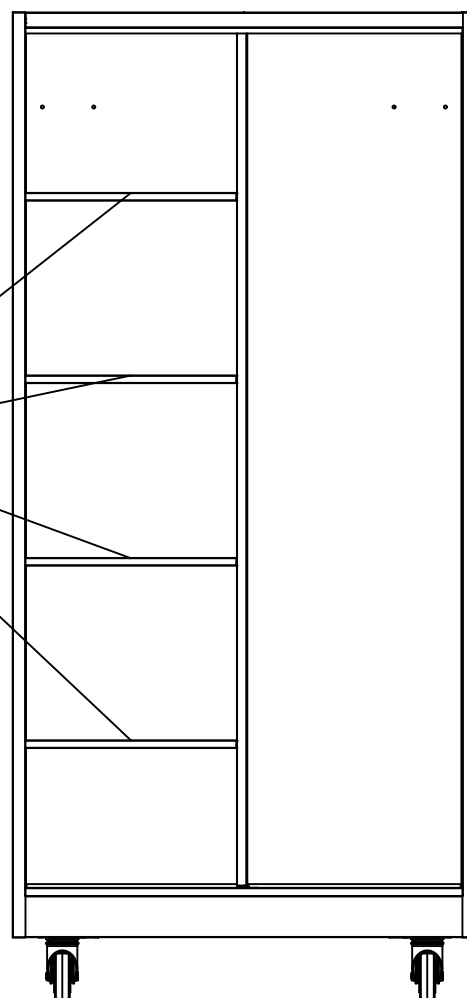

Step 9

Ⓝ  × 14

Fix the middle plate Q and pegboard P
with 14 screws N

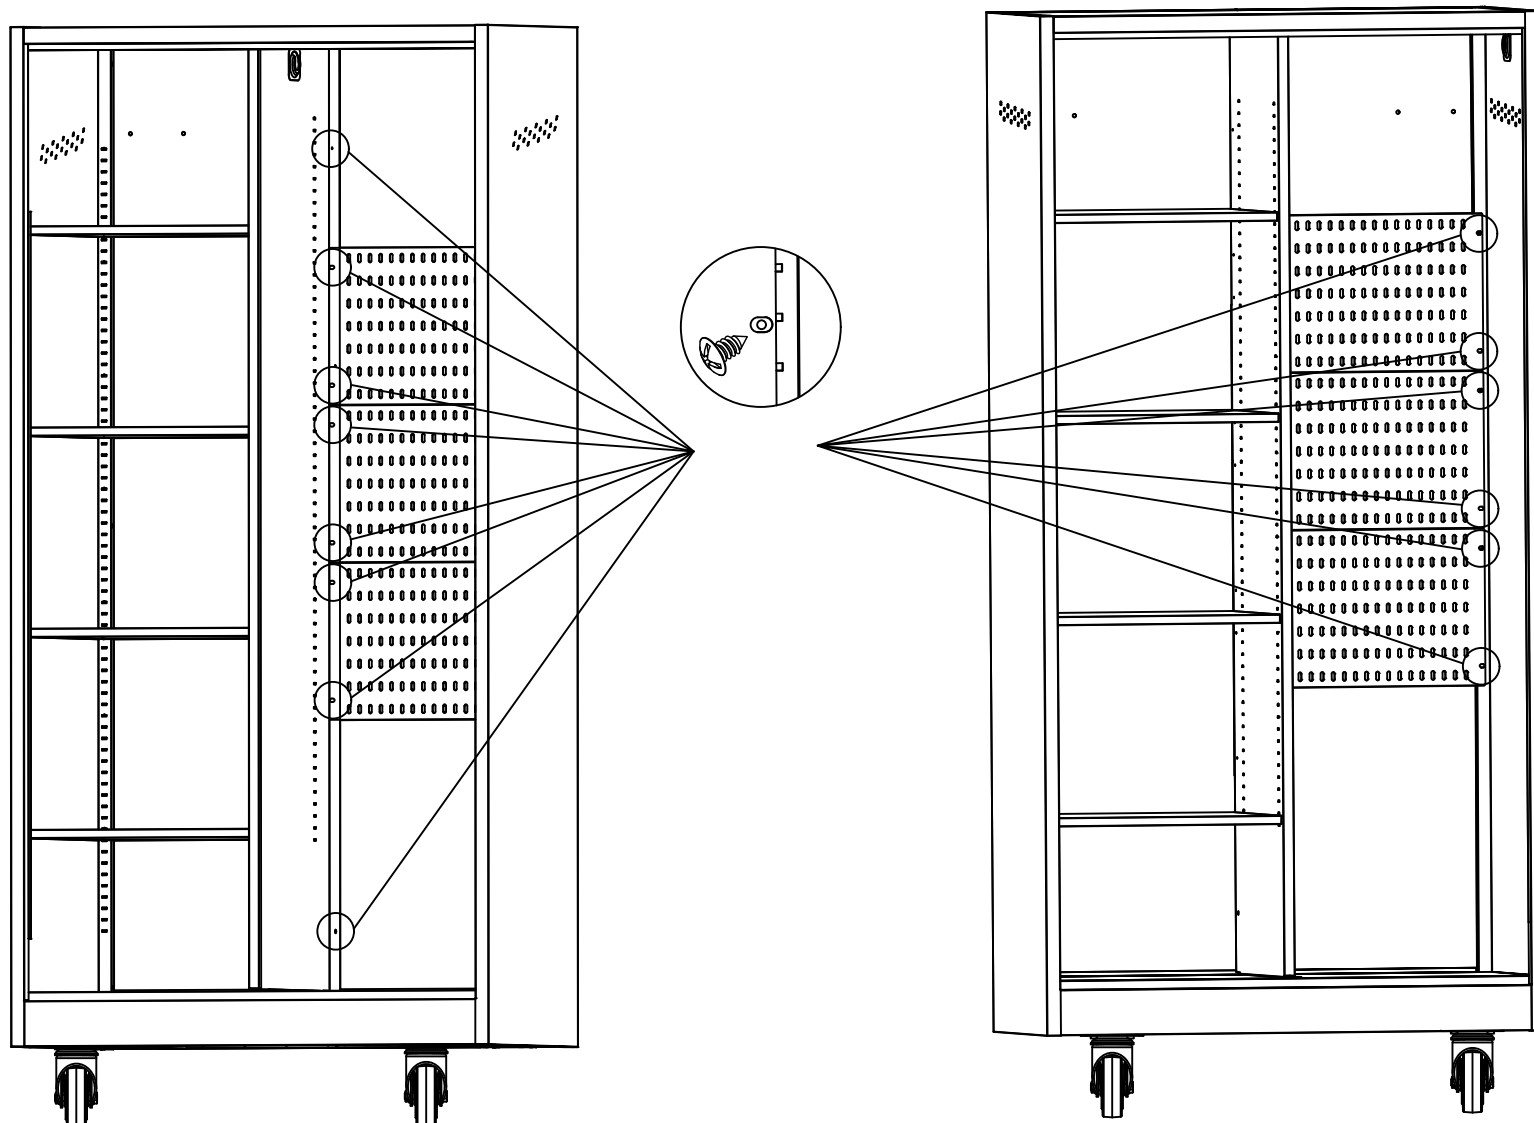

Step 10


- Install the hanger rod BB on the top
- Hang the pegs CC on the hanger rod BB
- Hang the hooks AA on the pegboard P

AA



× 6

BB




× 1

CC







× 3

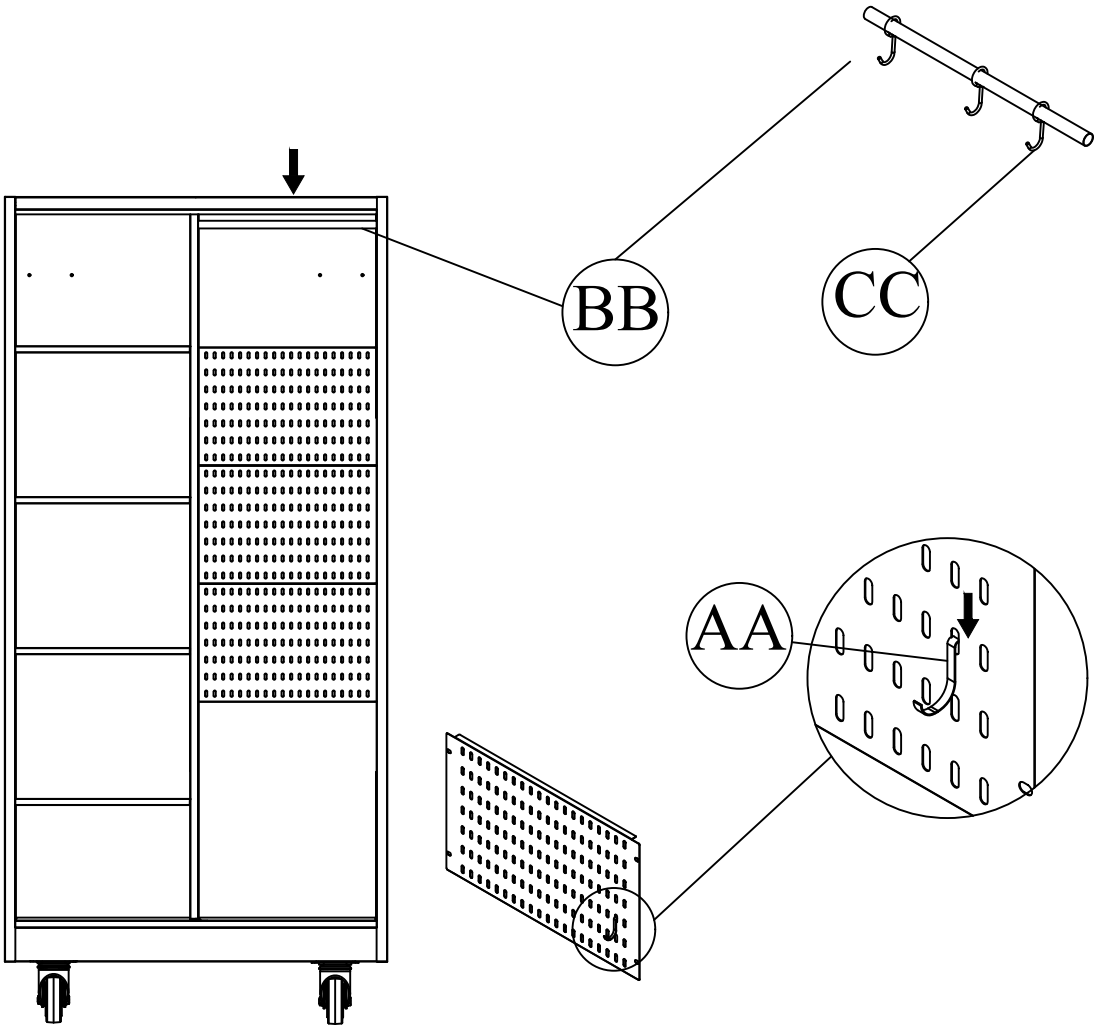

Step 11


Install the pedestals W on the right door J
Fix the towel rails V on the pedestals with 8 screws X


- V — × 2
- W   × 2
- X  × 8

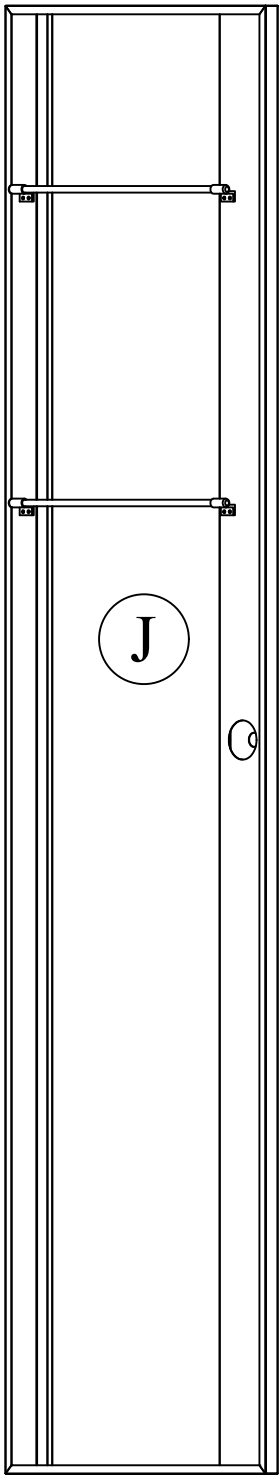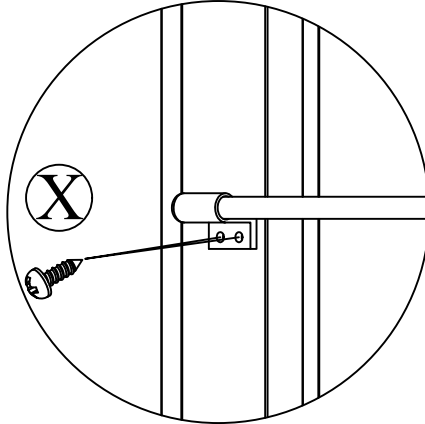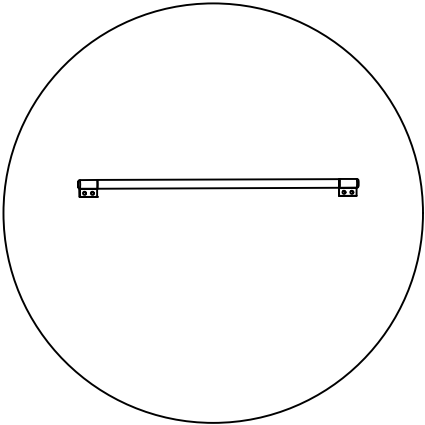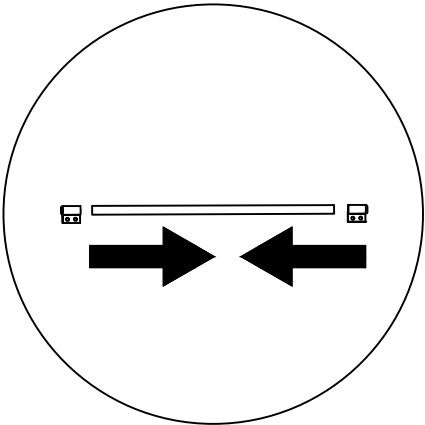

Step 12


Insert S and T on each bottom corner of the cabinet, then install door K and J (0/1/2 shim T can be used to adjust the seam)

- (S)  × 2
- (U)  × 2
- (T)  × 4

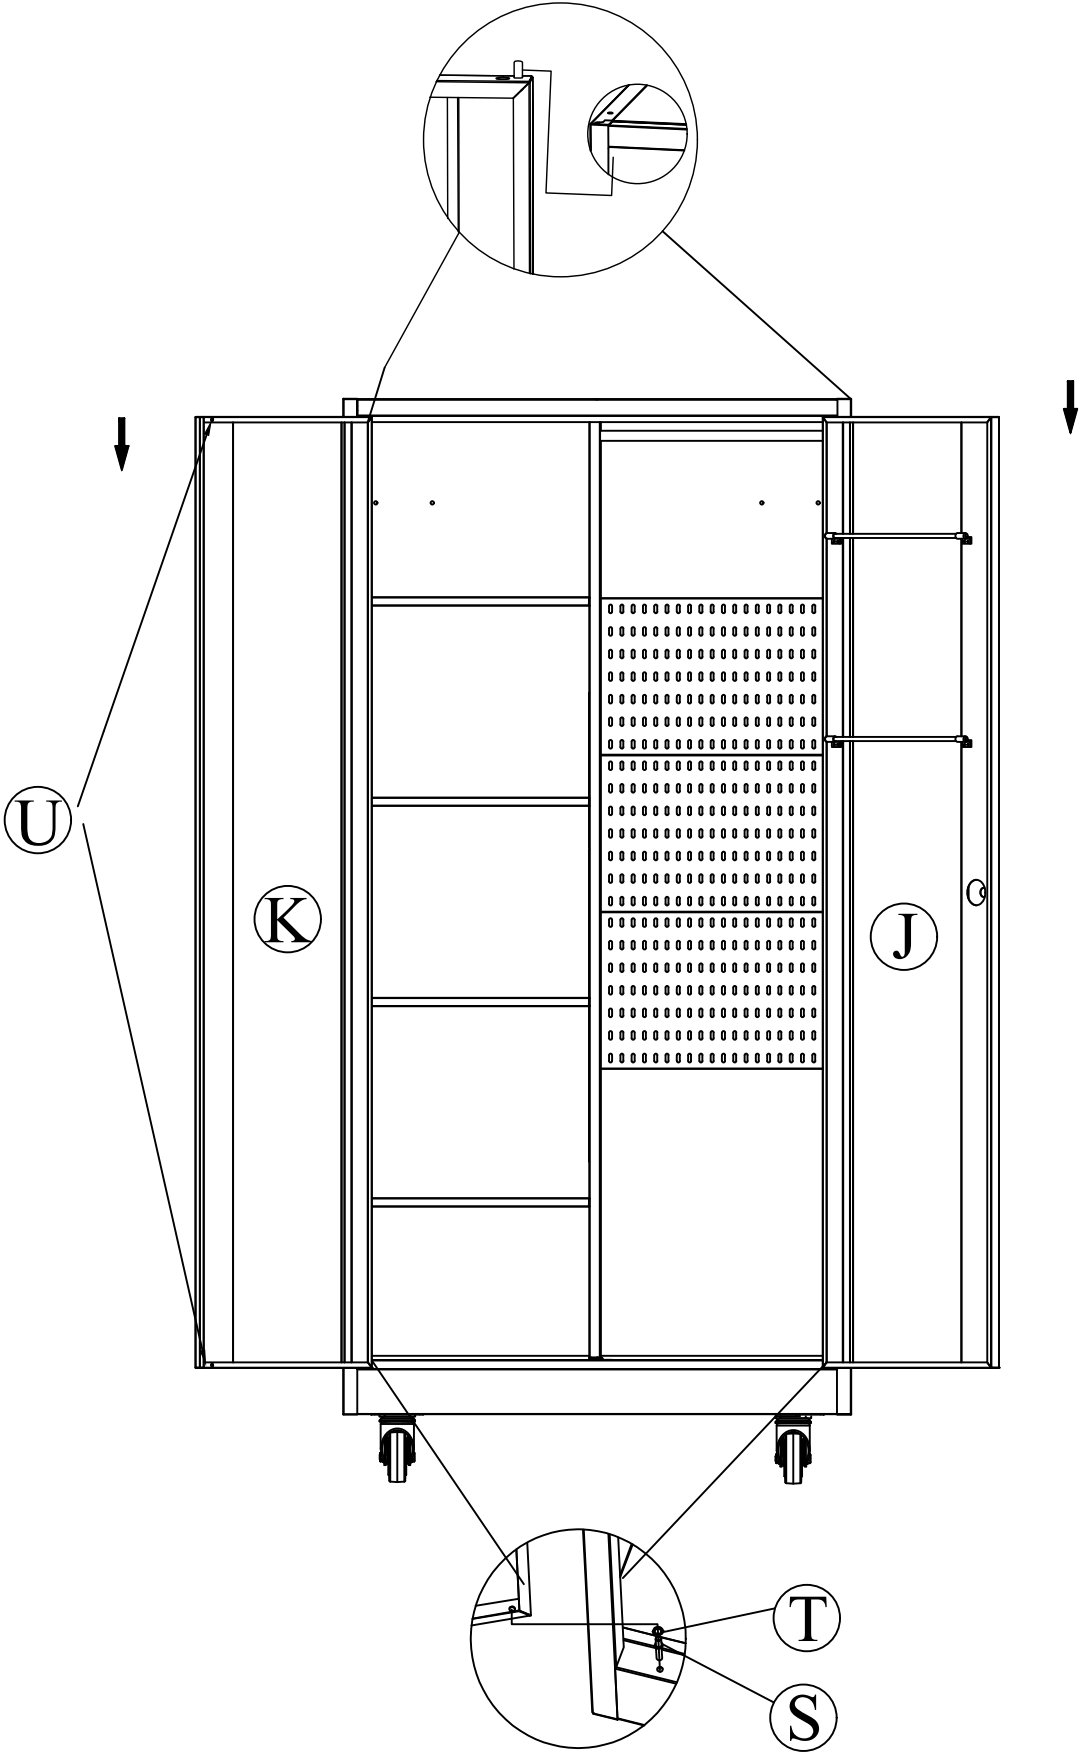


Step 13

Fix the cabinet on the wall with 2 screws M
and 2 screws L

Ⓛ  × 2

Ⓜ  × 2

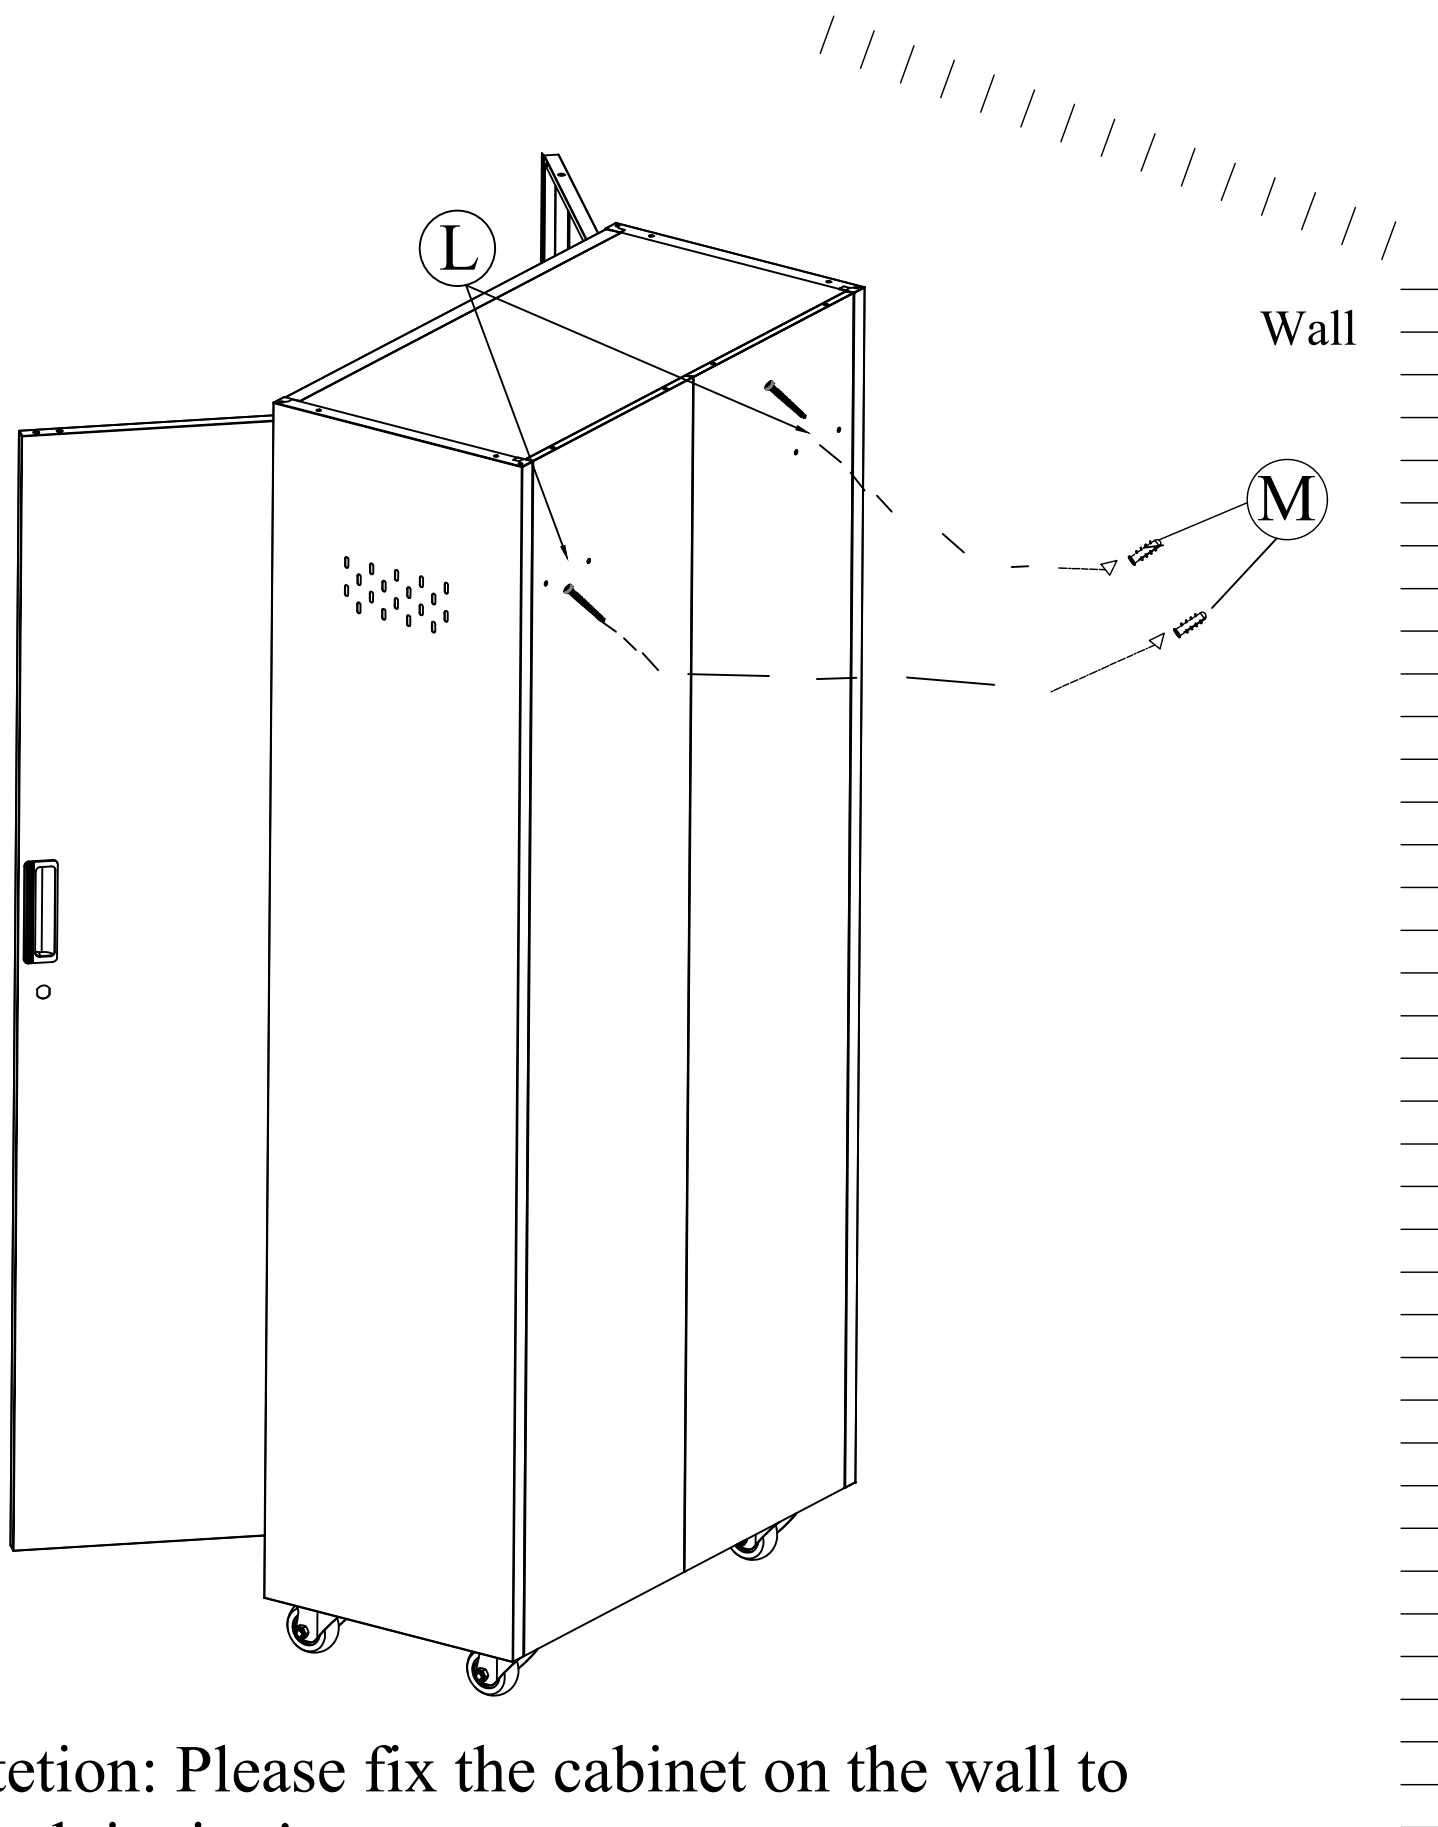

Attention: Please fix the cabinet on the wall to avoid tipping!