

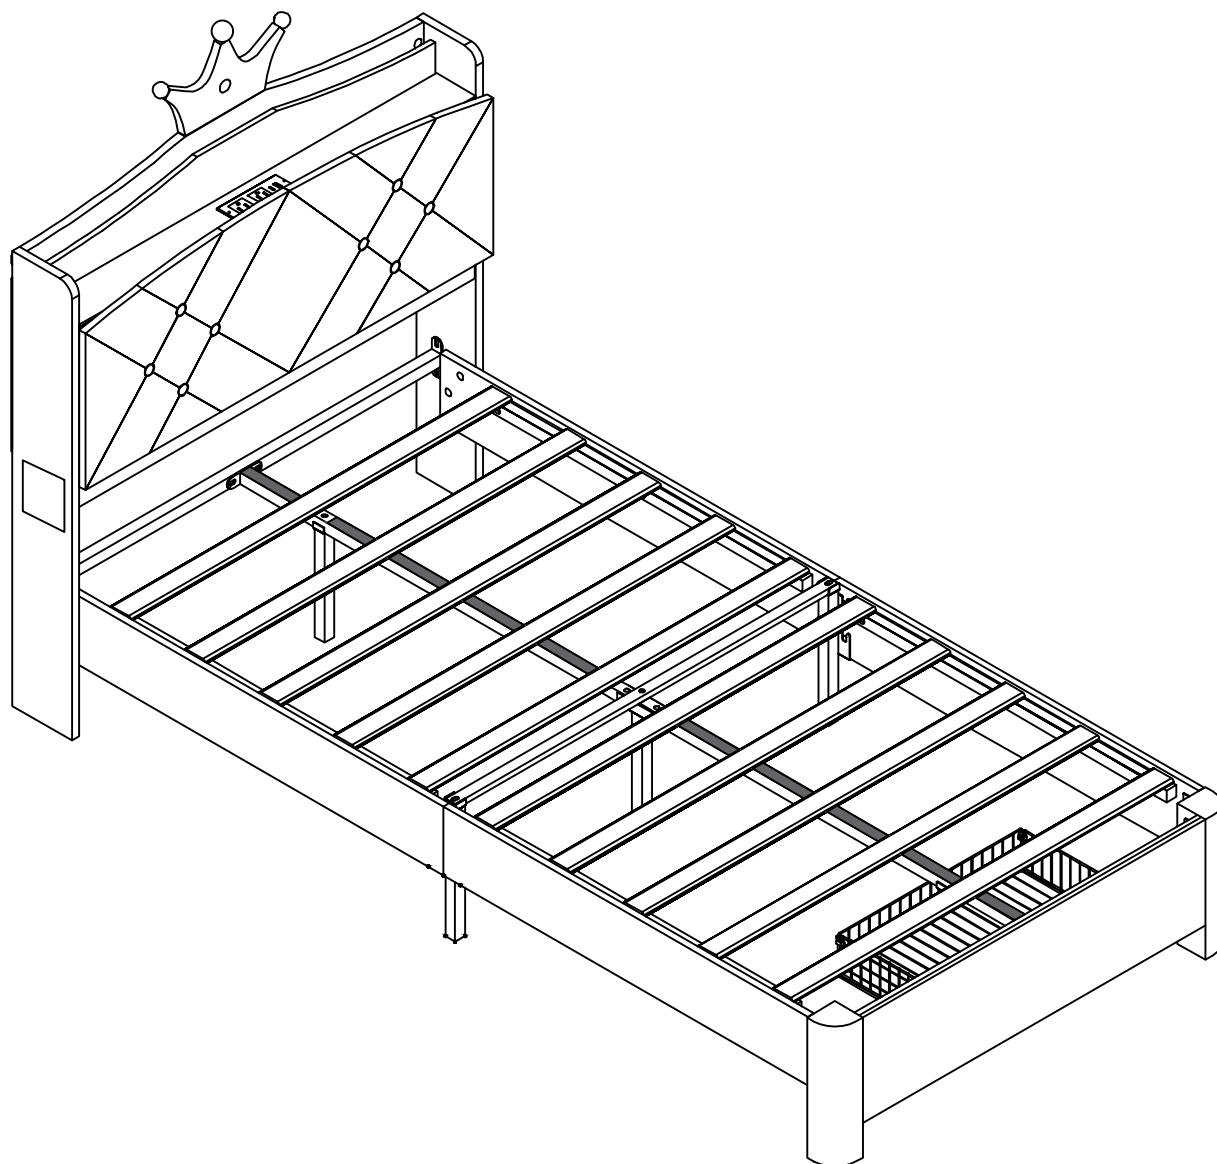
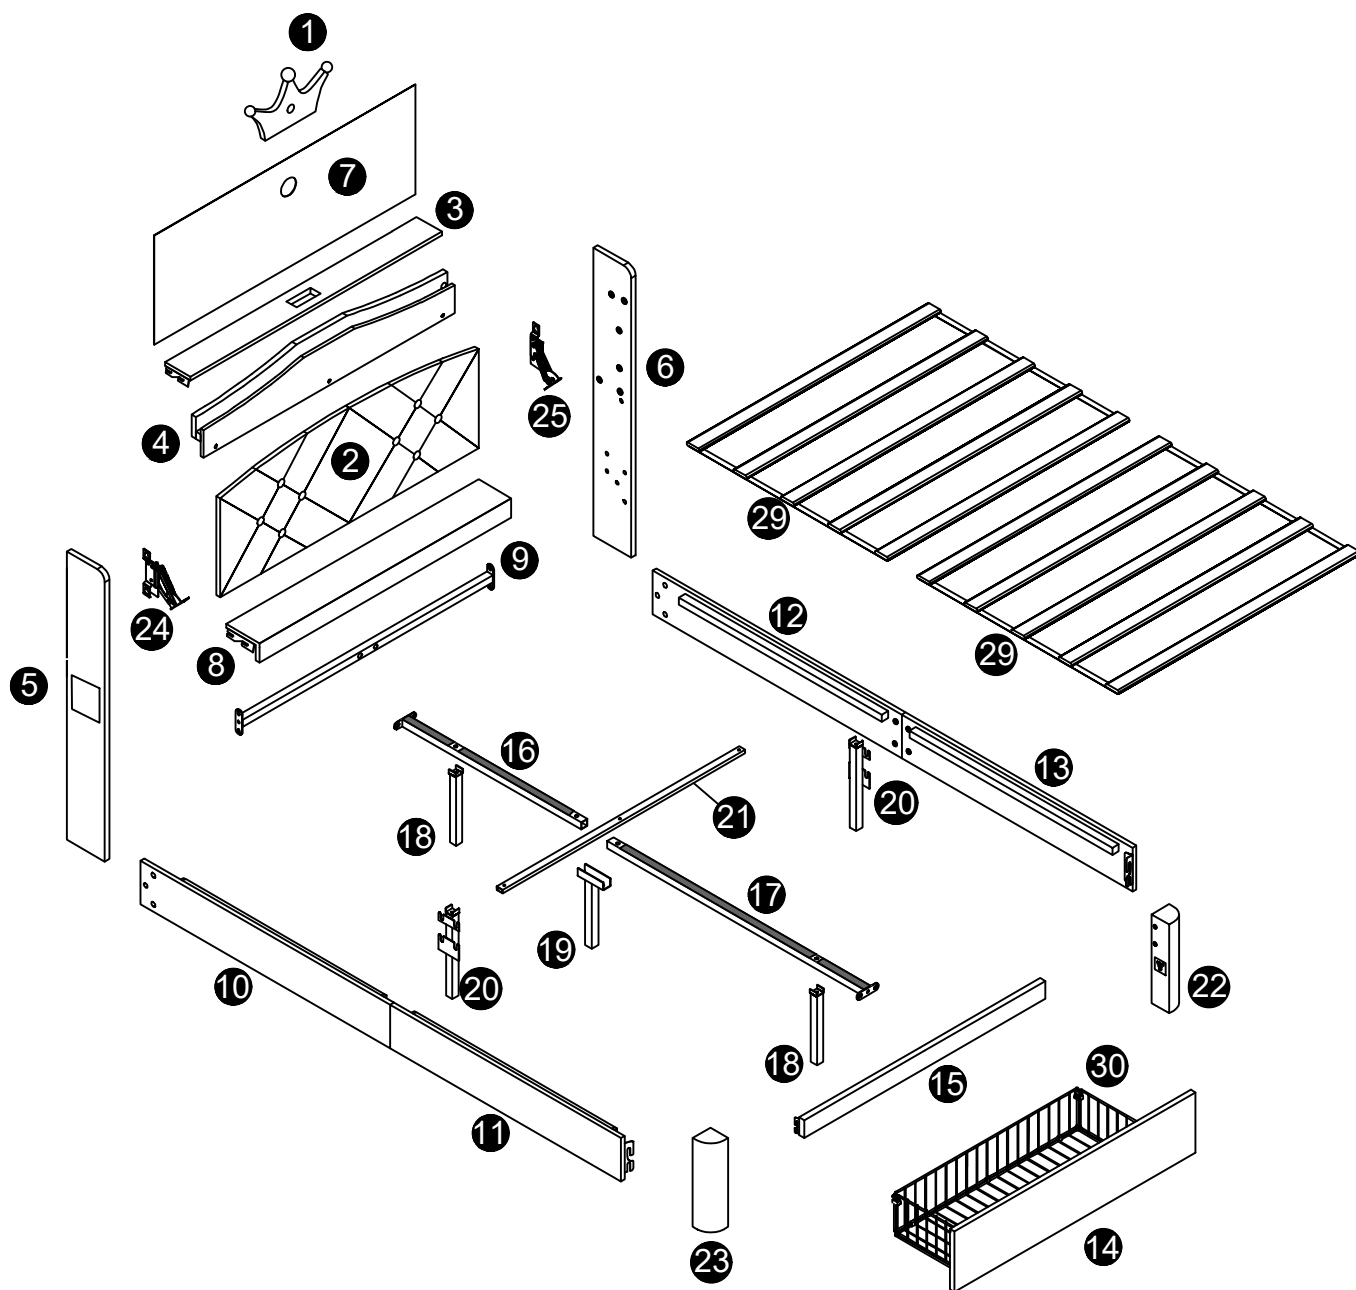
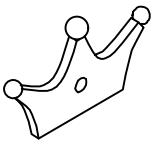
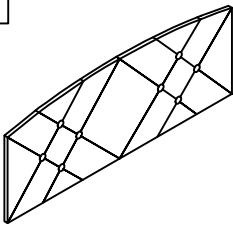
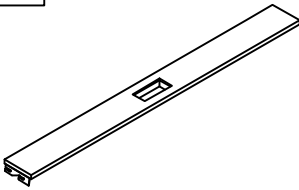
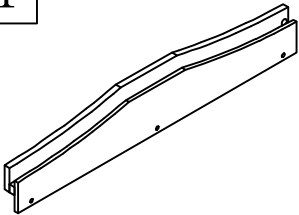
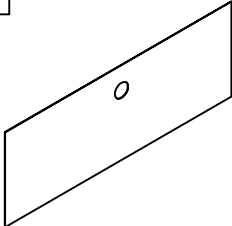
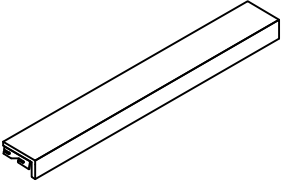
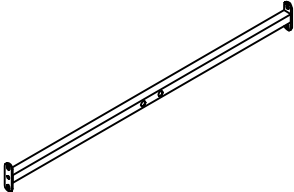
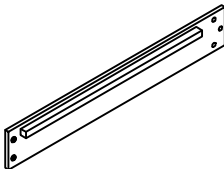
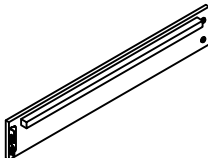
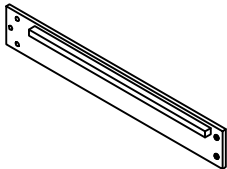
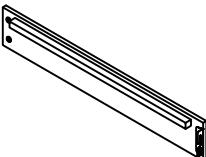
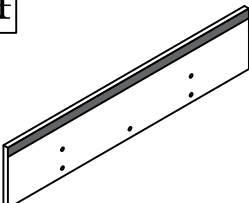
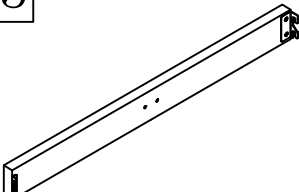
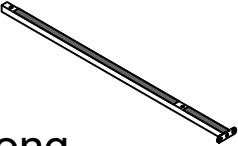

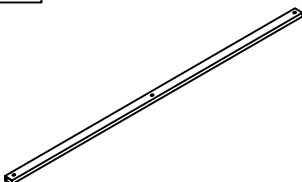



Version:1.0
DJ504851















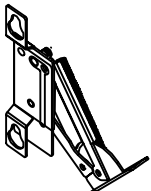





Part list

1		1PC	2		1PC	3		1PC	4		1PC
5		1PC	6		1PC	7		1PC	8		1PC
9		1PC	10		1PC	11		1PC	12		1PC
13		1PC	14		1PC	15		1PC	16	 short	1PC
17	 long	1PC	18		2PCS	19		1PC	20		2PCS
21		1PC	22		1PC	23		1PC	24	 R	1PC

Part list

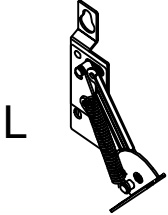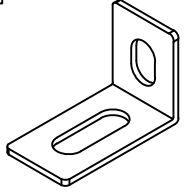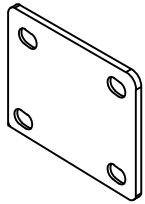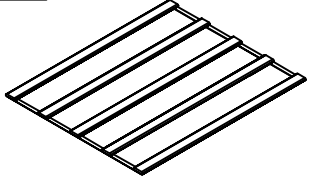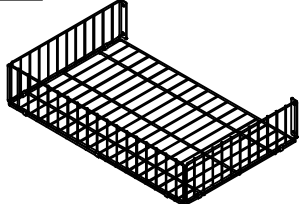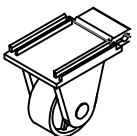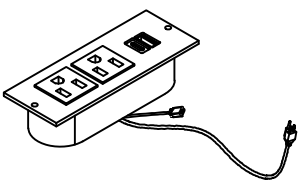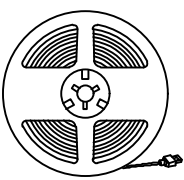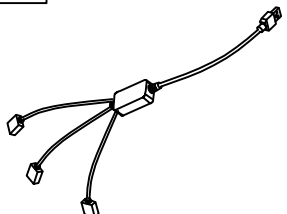
25	 1PC	26	 2PCS	27	 2PCS	28	 1PC
29	 2PCS	30	 1PC	31	 4PCS	32	 1PC
33	 2PCS	34	 1PC	35	 smaller 1PC	36	 longer 2PCS
37	 1PC	38	 1PC				

Hardware list

A	 M8*50mm 1PC	B	 M8*35mm 13PCS	C	 M8*15mm 22PCS	D	 M6*25mm 3PCS	E	 M6*12mm 9PCS
F	 M4*12mm 3PCS	G	 M5*65MM 1PC	H	 M4*65MM 1PC				


Step1

F		M4x12mm	2pcs
G		M5*65MM	1pc

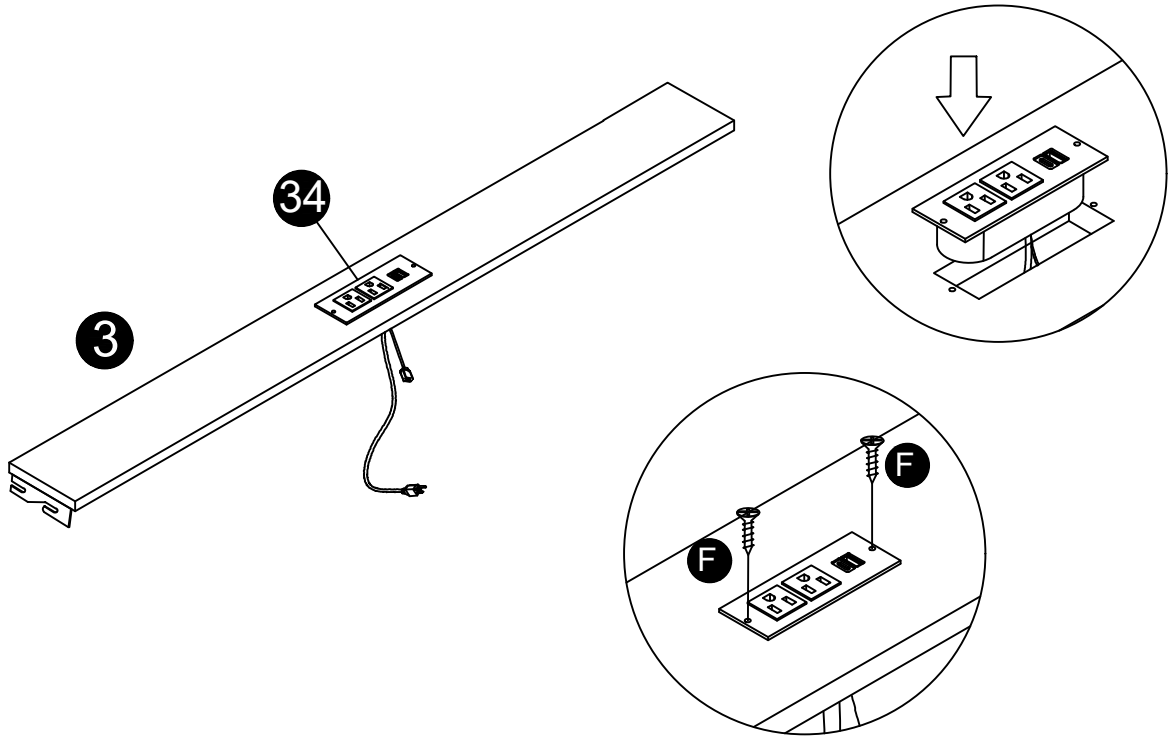


Step2

C		M8*15mm	4pcs
G		M5*65MM	1pc

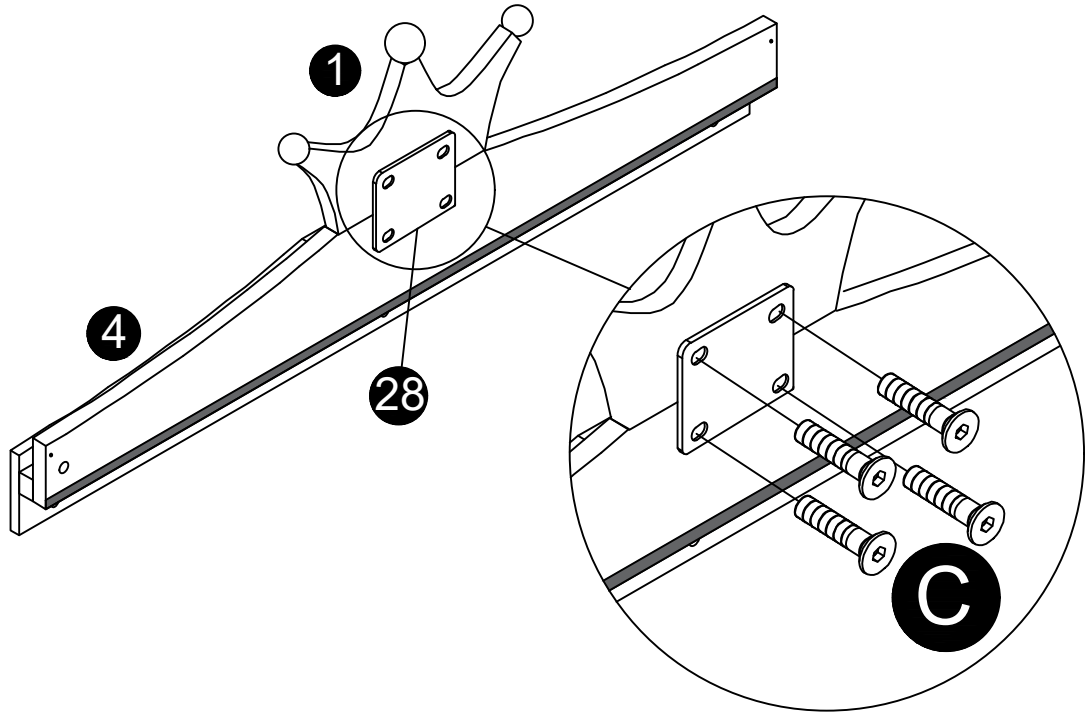

Step3

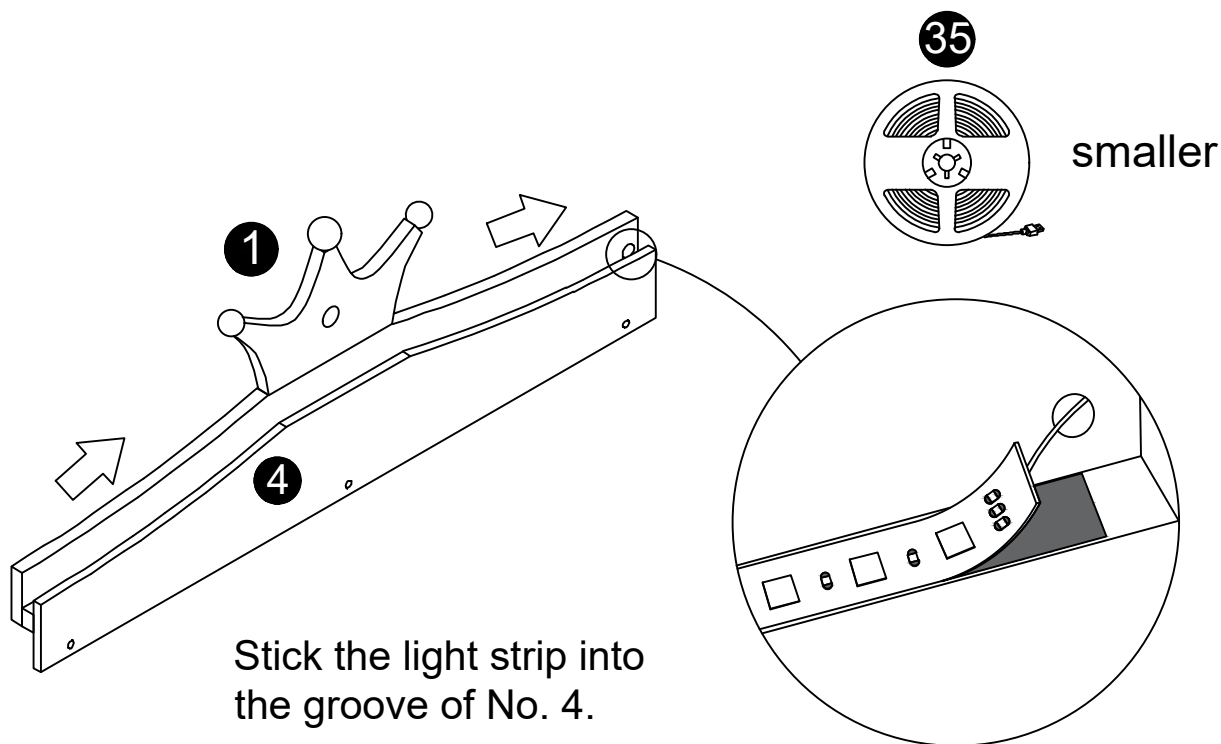


Step4

G



M5*65MM


1pc

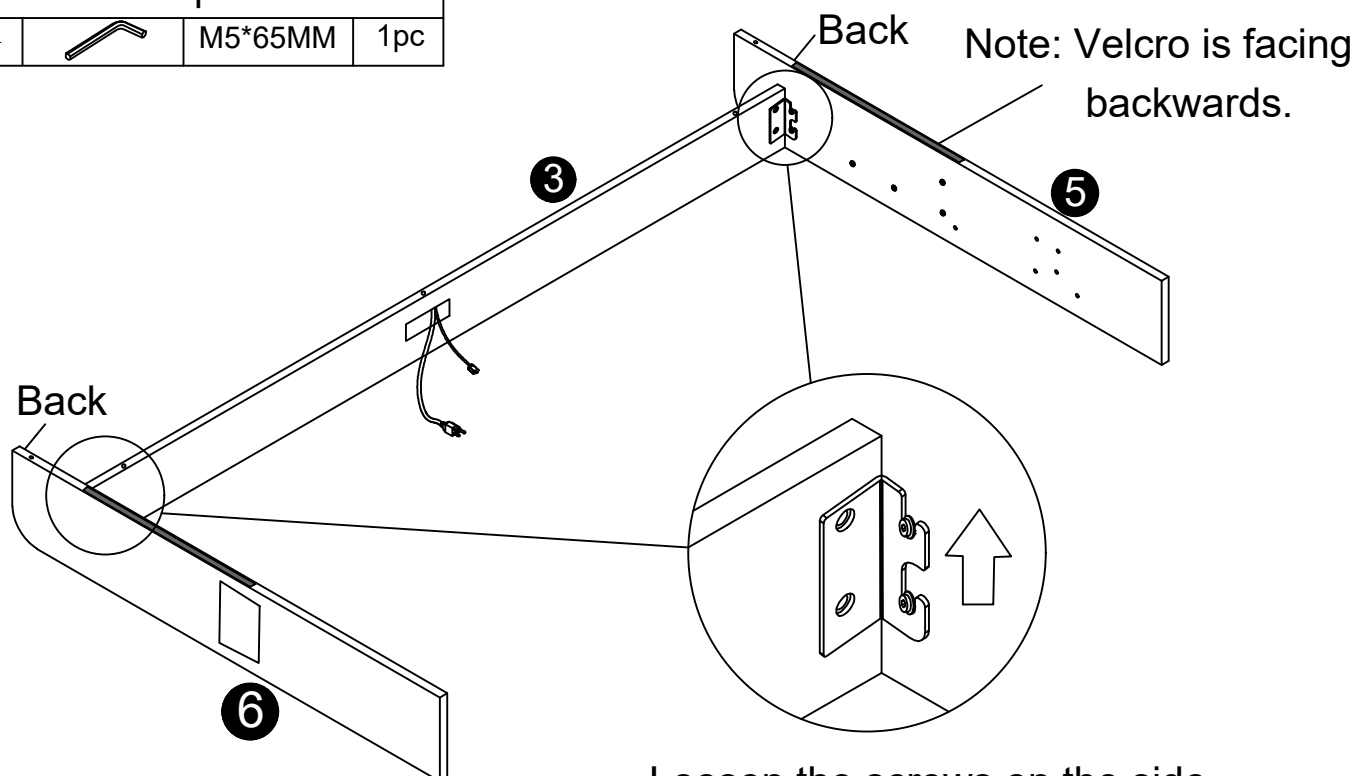

Loosen the screws on the side board, hang the brackets and tighten the screws.


Step5

C		M8*15mm	2pcs
G		M5*65MM	1pc

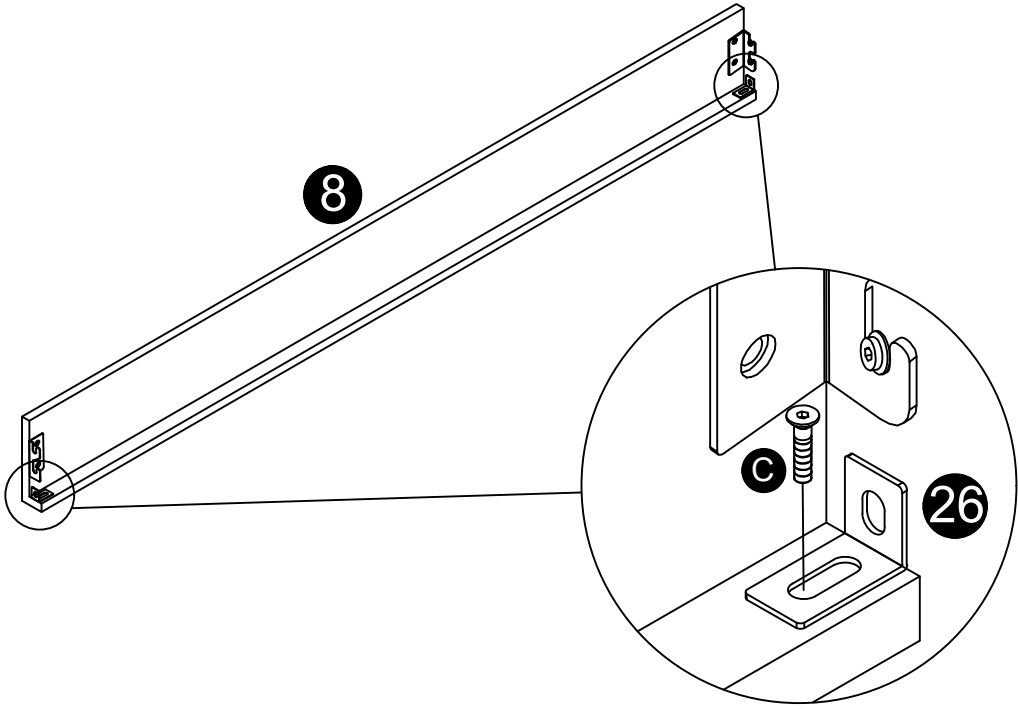

Step6


C		M8*15mm	2pcs
G		M5*65MM	1pc

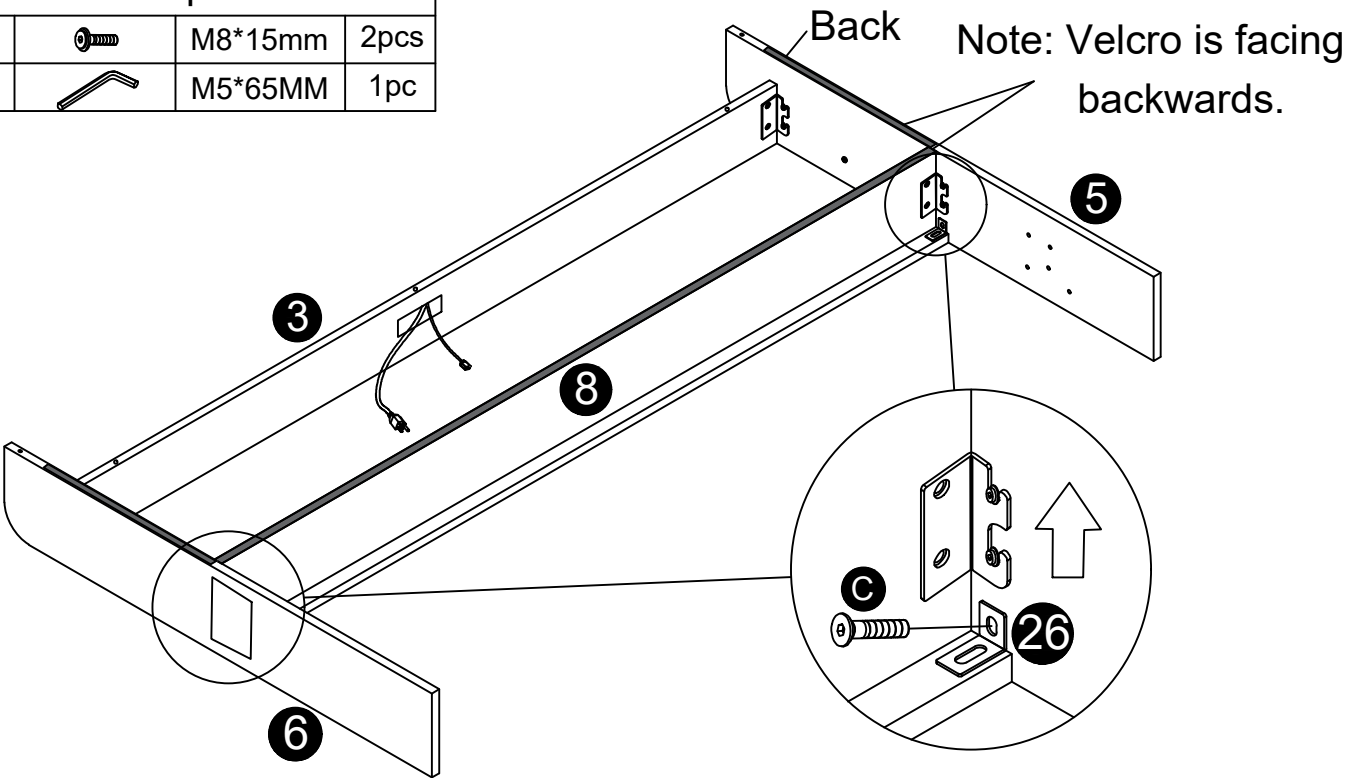

Loosen the screws on the side board, hang the brackets and tighten the screws.


Step7

D		M6*25mm	3pcs
H		M4*65MM	1pc

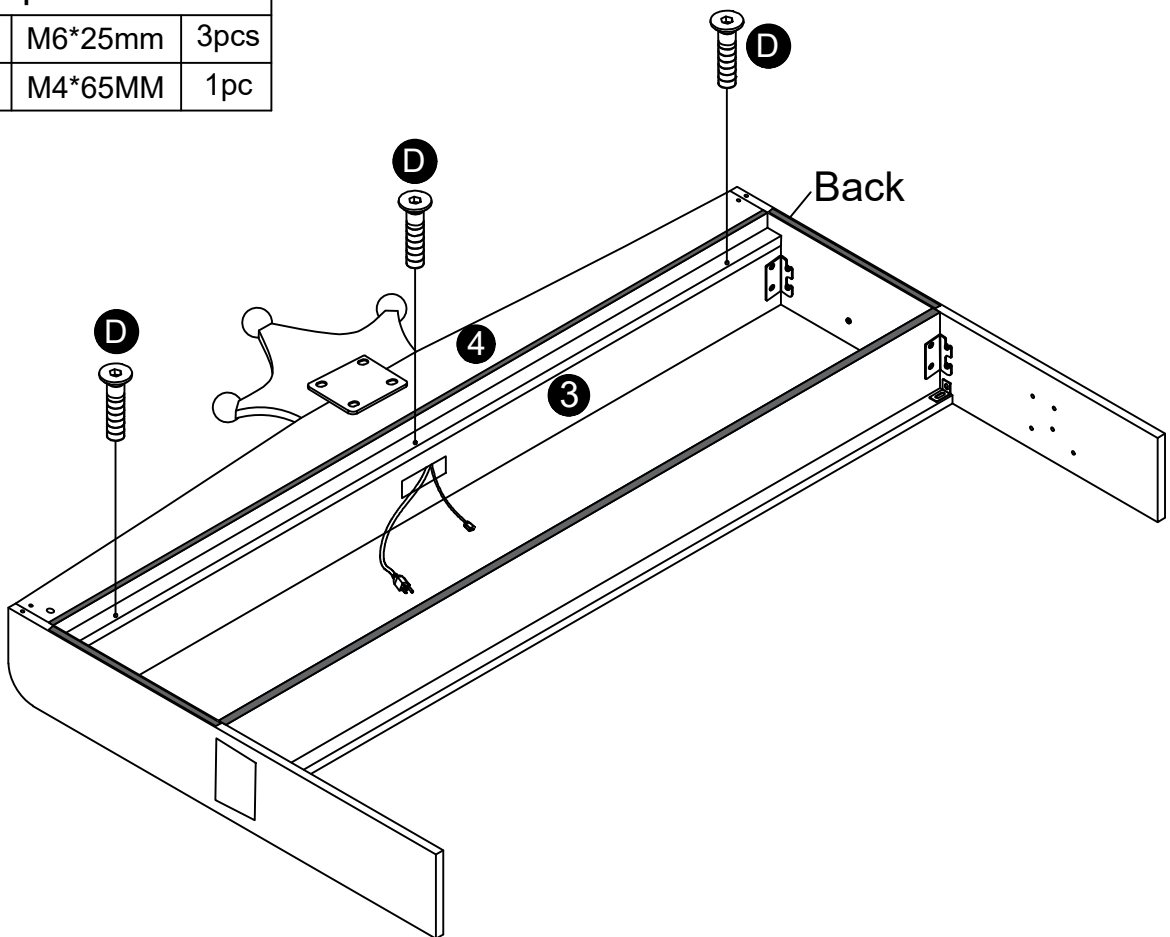


Step8

E		M6*12mm	4pcs
H		M4*65MM	1pc

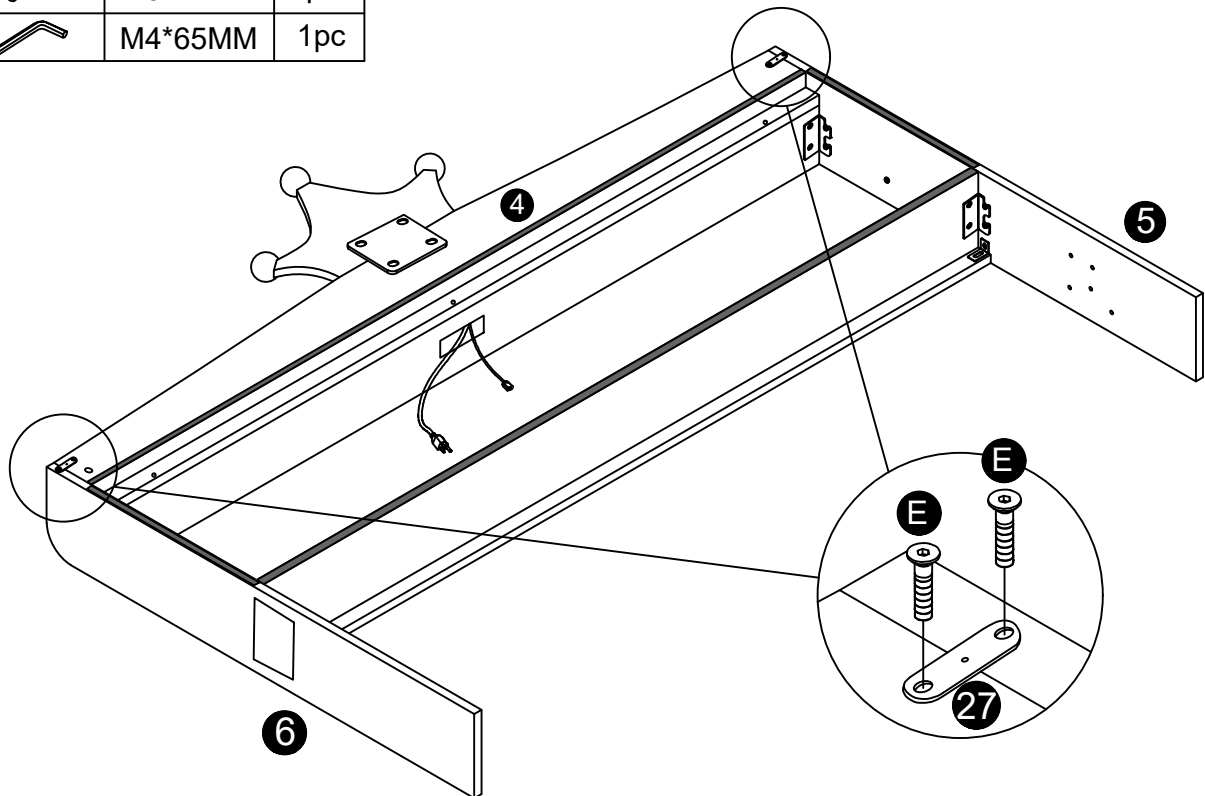


Step9

C		M8*15mm	4pcs
G		M5*65MM	1pc

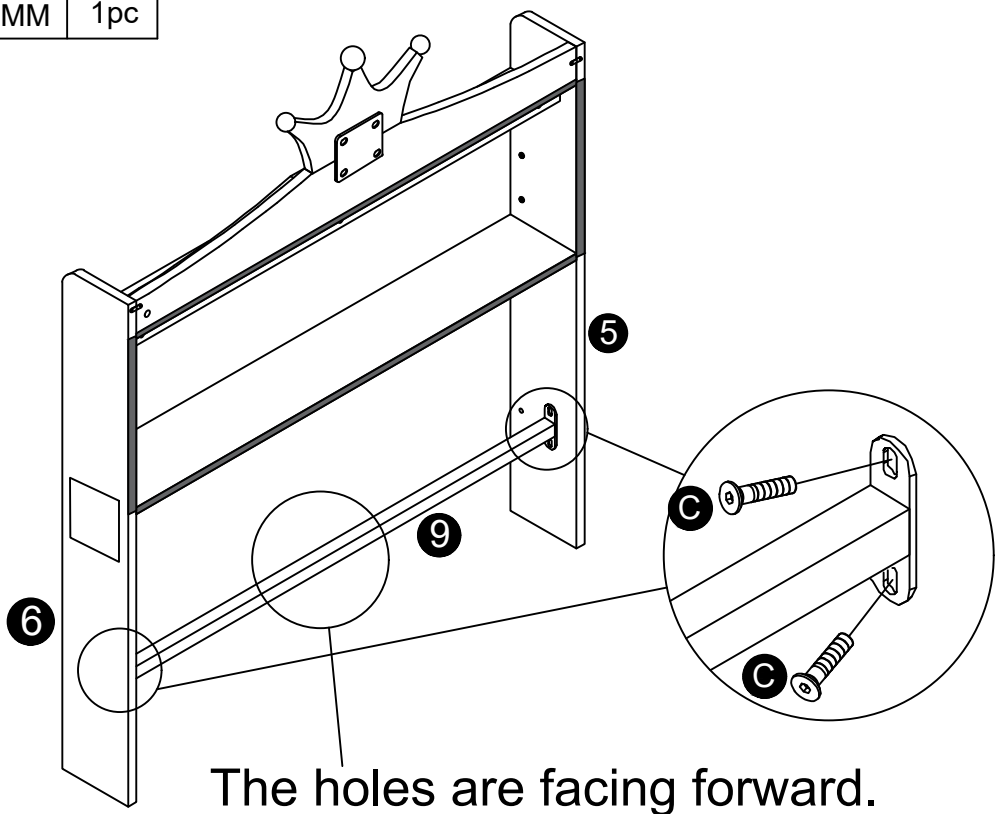

Step10

C		M8*15mm	4pcs
G		M5*65MM	1pc

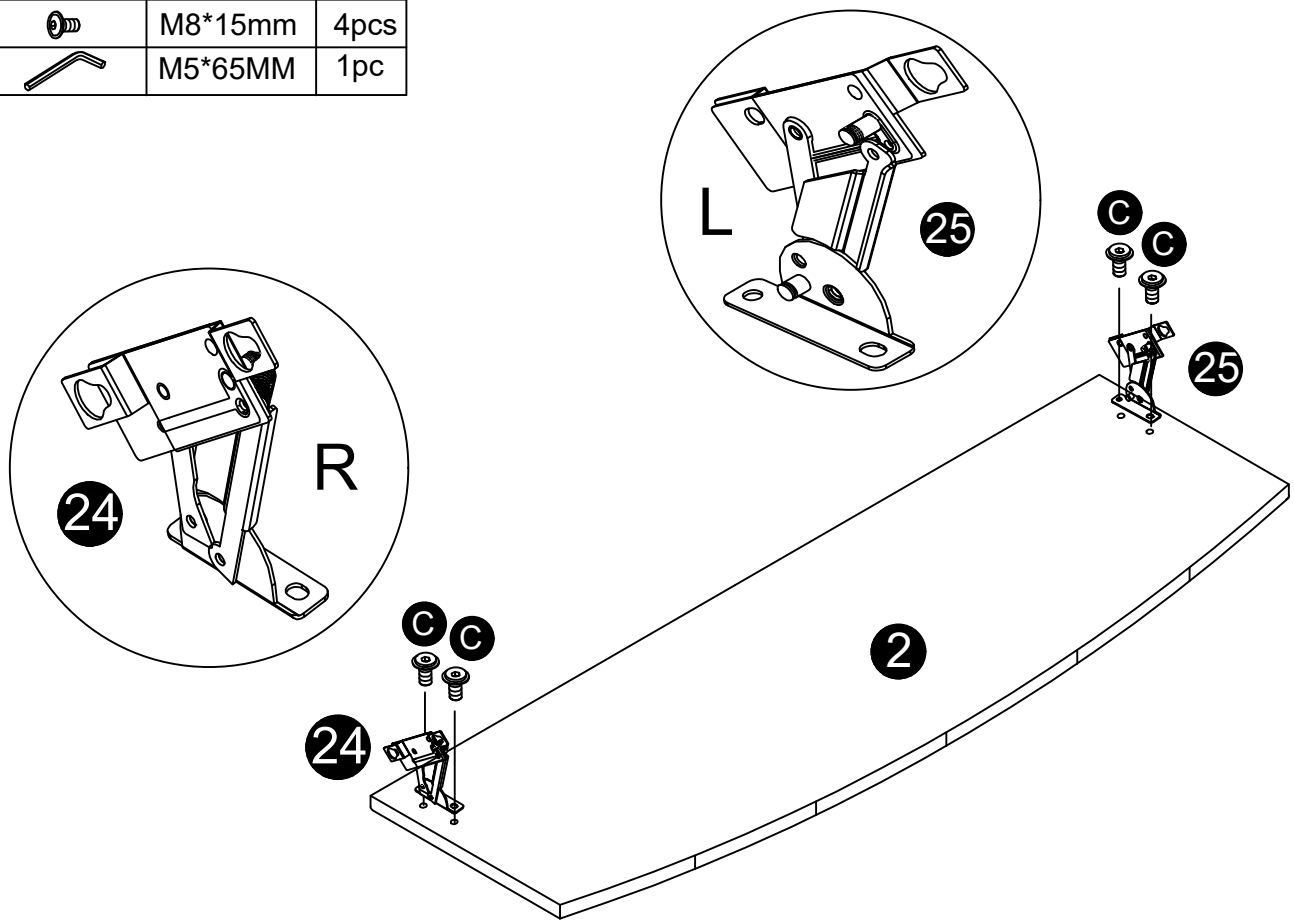

Step11

G




M5*65MM


1pc



RECOMMEND 2 OR MORE ADULTS
FOR QUICKER ASSEMBLY

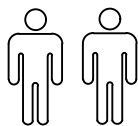


2PERS

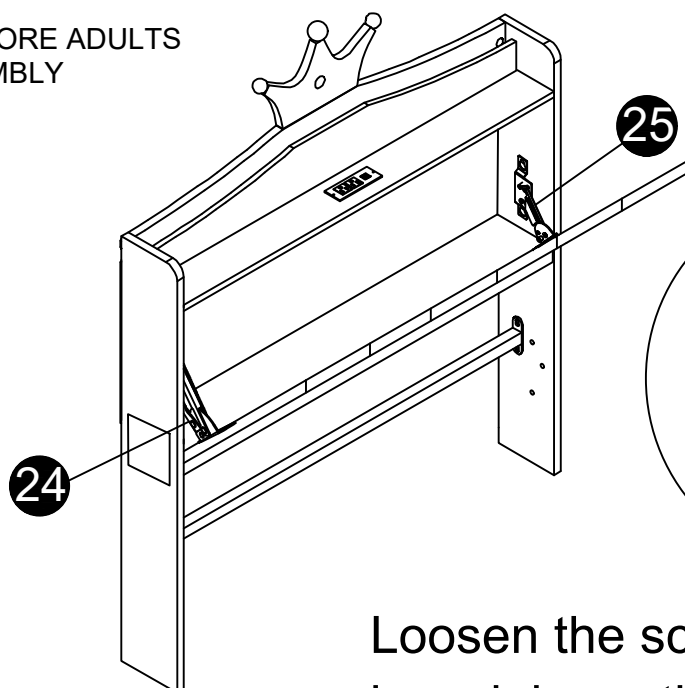

Loosen the screws on the side
board, hang the brackets and
tighten the screws.


Step12

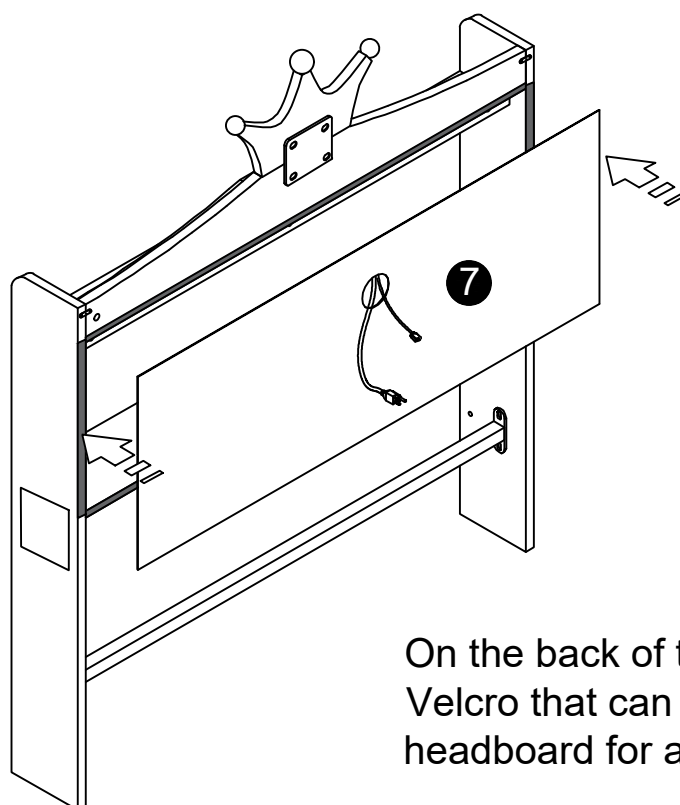

On the back of the 7, there is a
Velcro that can be fixed to the
headboard for adhesion


Step13

B		M8*35mm	4pcs
G		M5*65MM	1pc

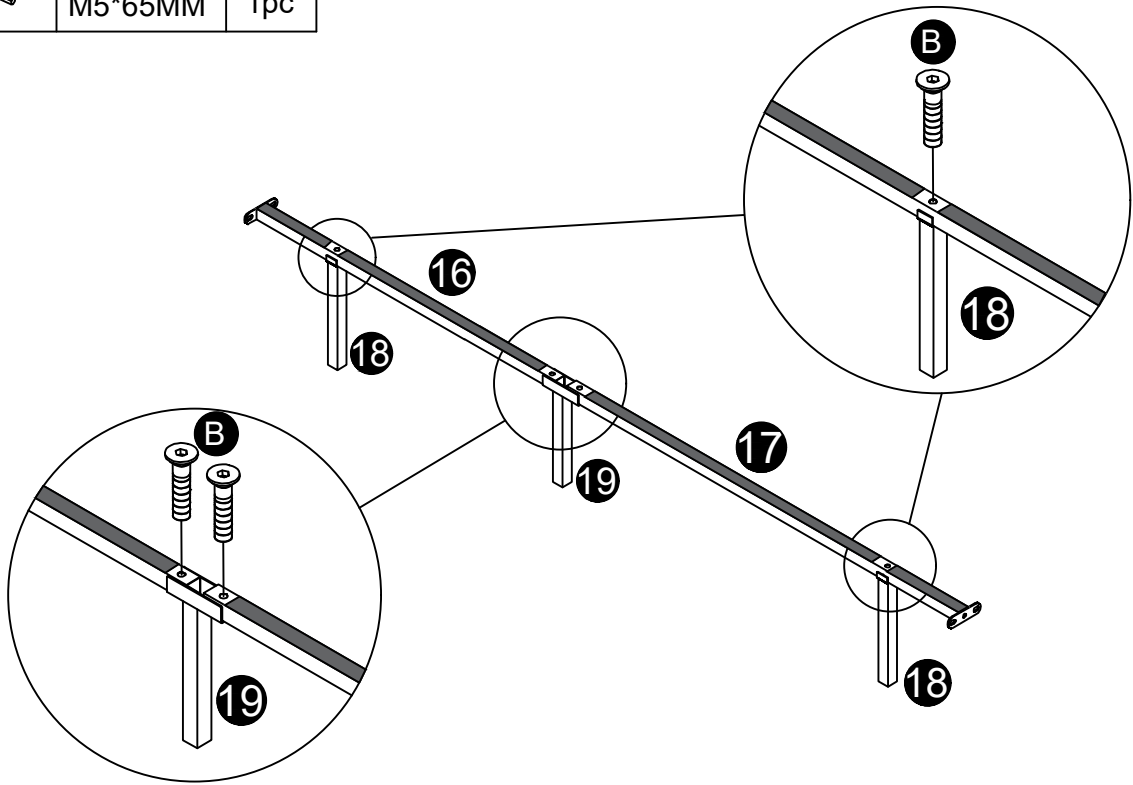

Step14

A		M8*50mm	1pc
B		M8*35mm	2pcs
G		M5*65MM	1pc

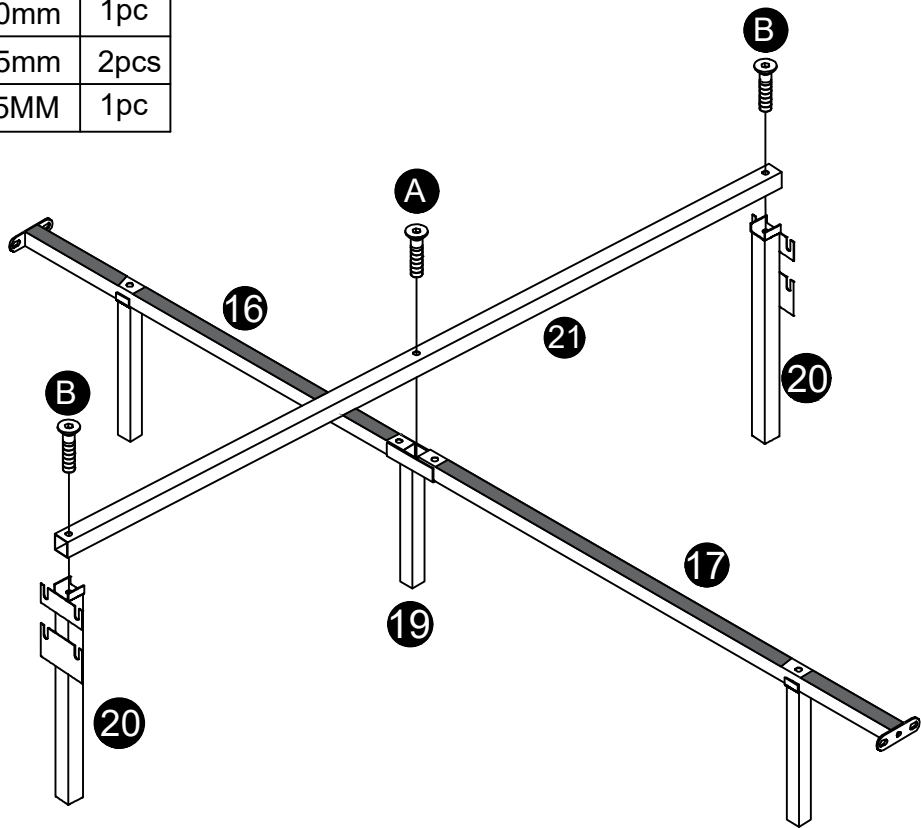


Step15

G



M5*65MM

1pc

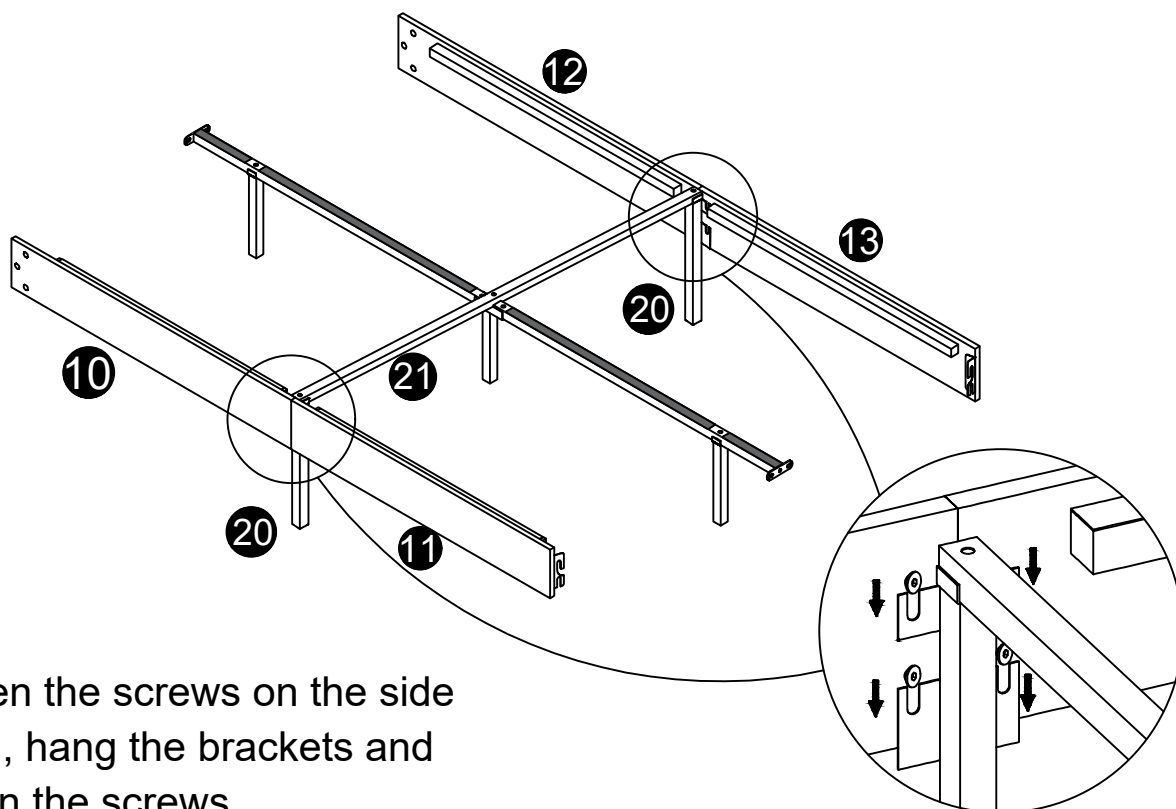

Loosen the screws on the side board, hang the brackets and tighten the screws.


Step16

G



M5*65MM


1pc

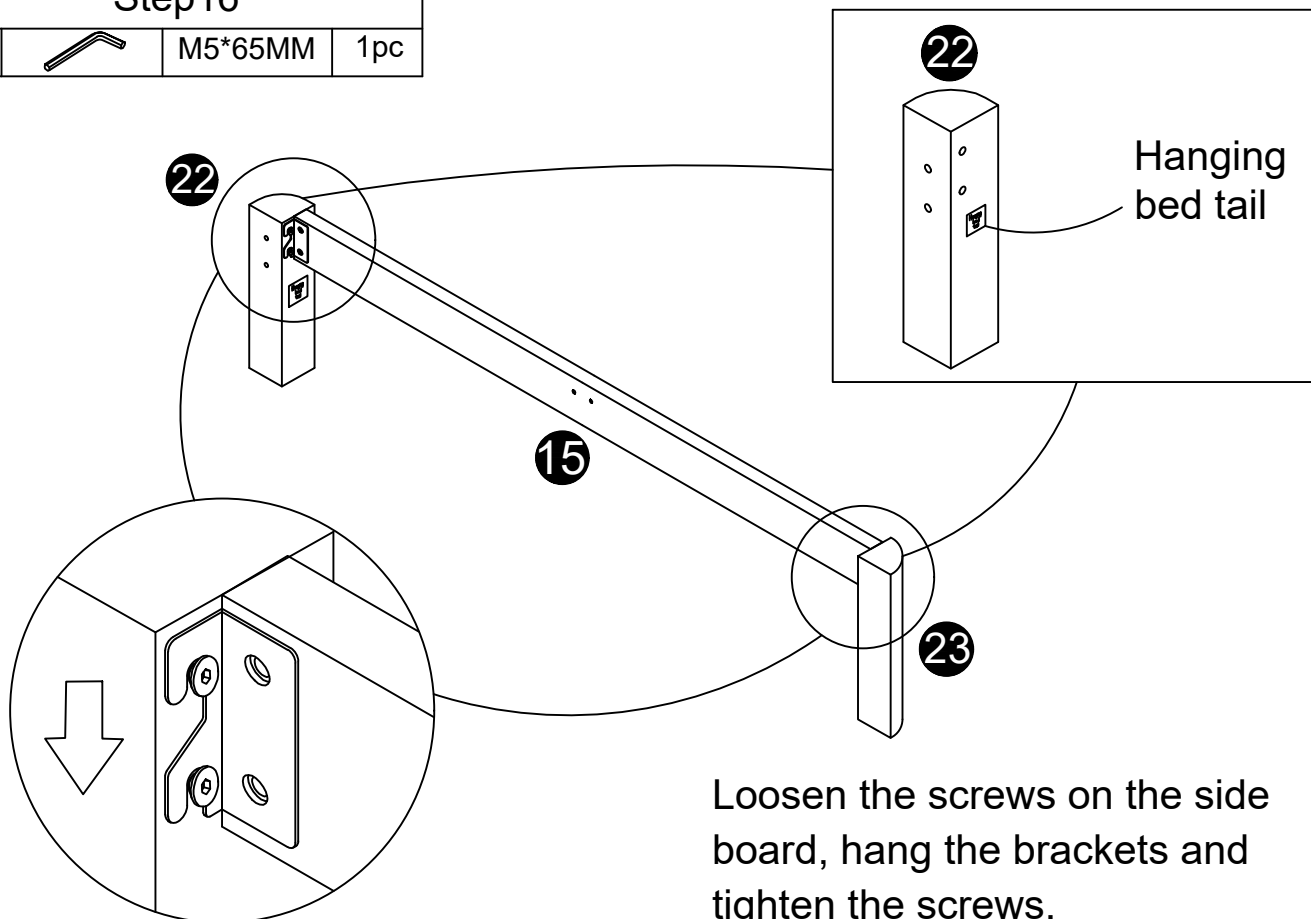

Loosen the screws on the side board, hang the brackets and tighten the screws.

Step17


C		M8*15mm	2pcs
G		M5*65MM	1pc

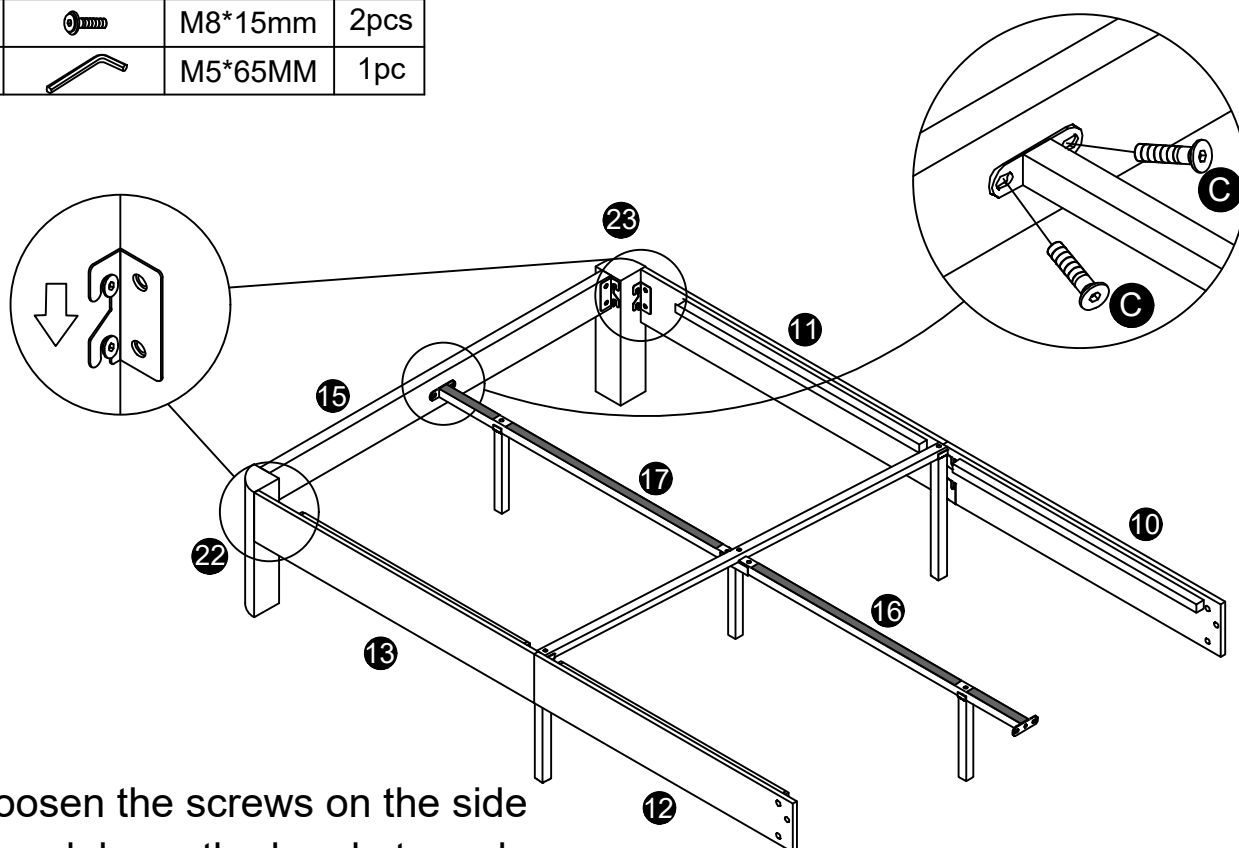


Loosen the screws on the side board, hang the brackets and tighten the screws.

Step18


B		M8*35mm	6pcs
C		M8*15mm	2pcs
G		M5*65MM	1pc

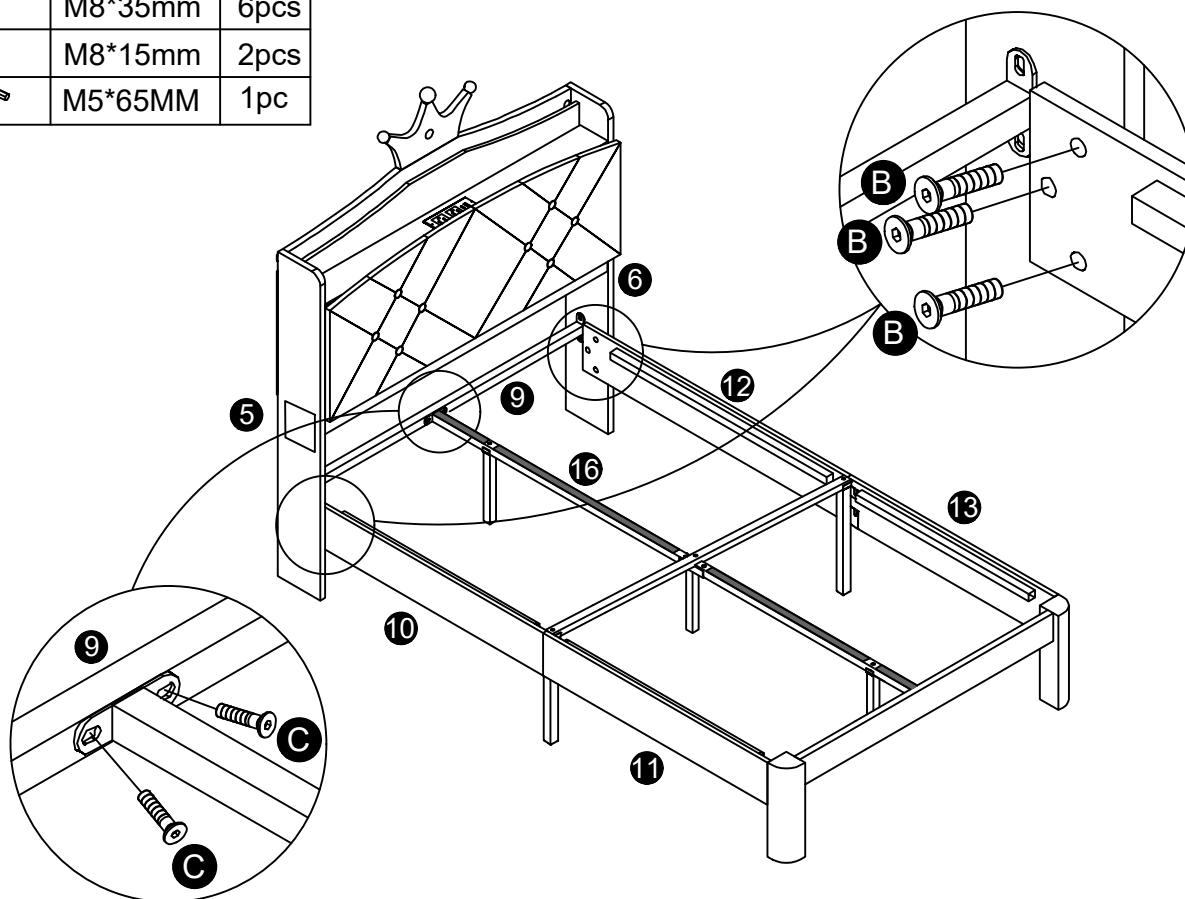


Step 19

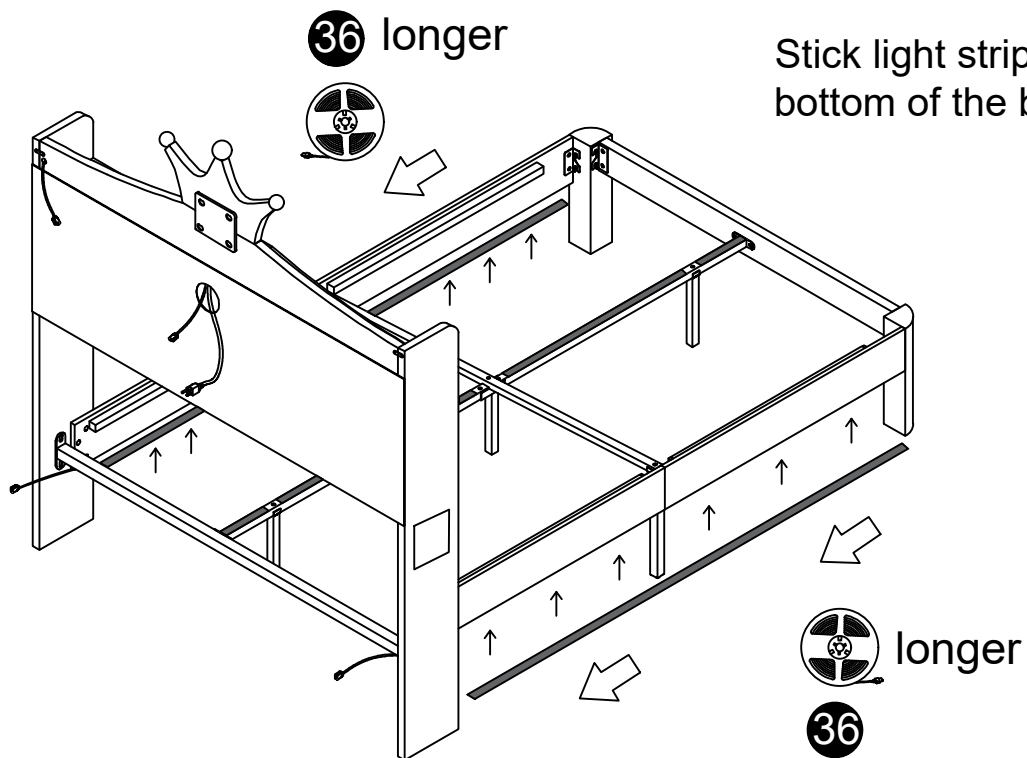


Step20

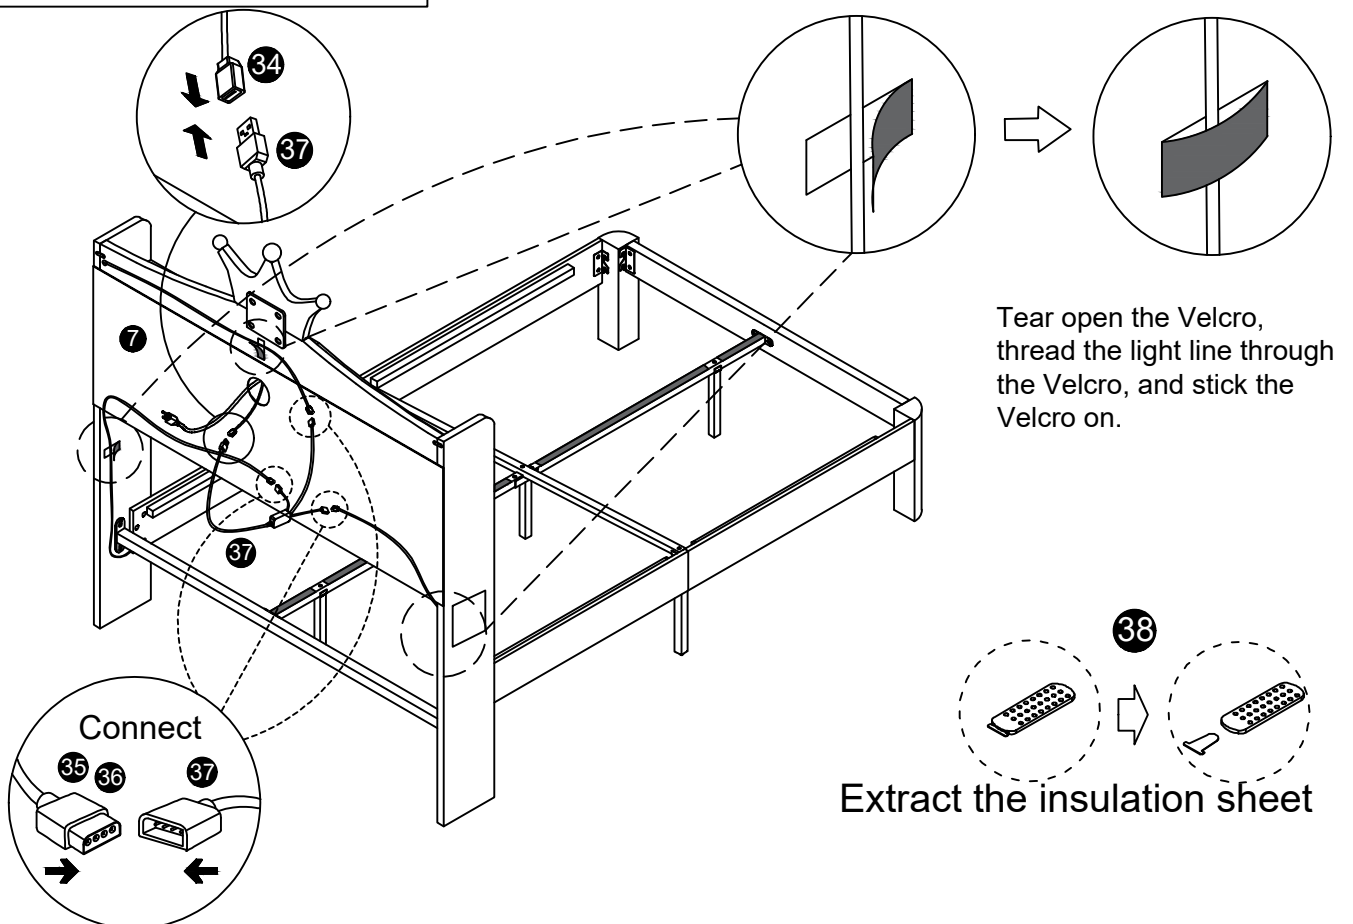


Step21

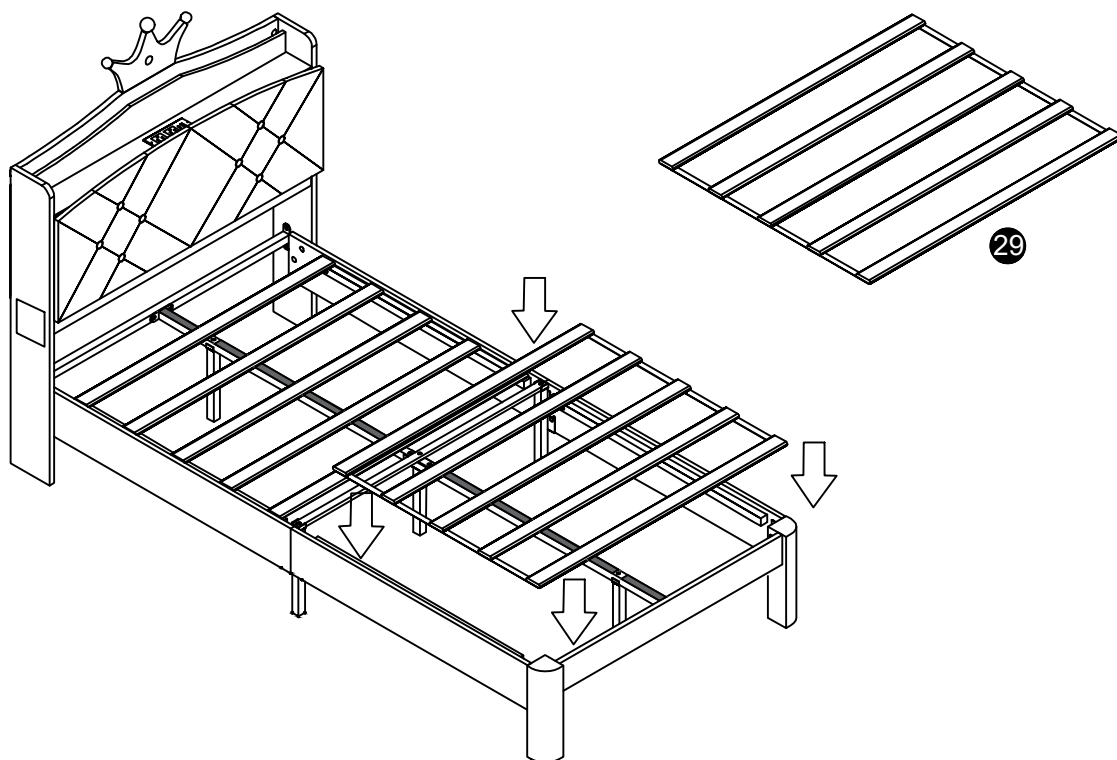

Step22

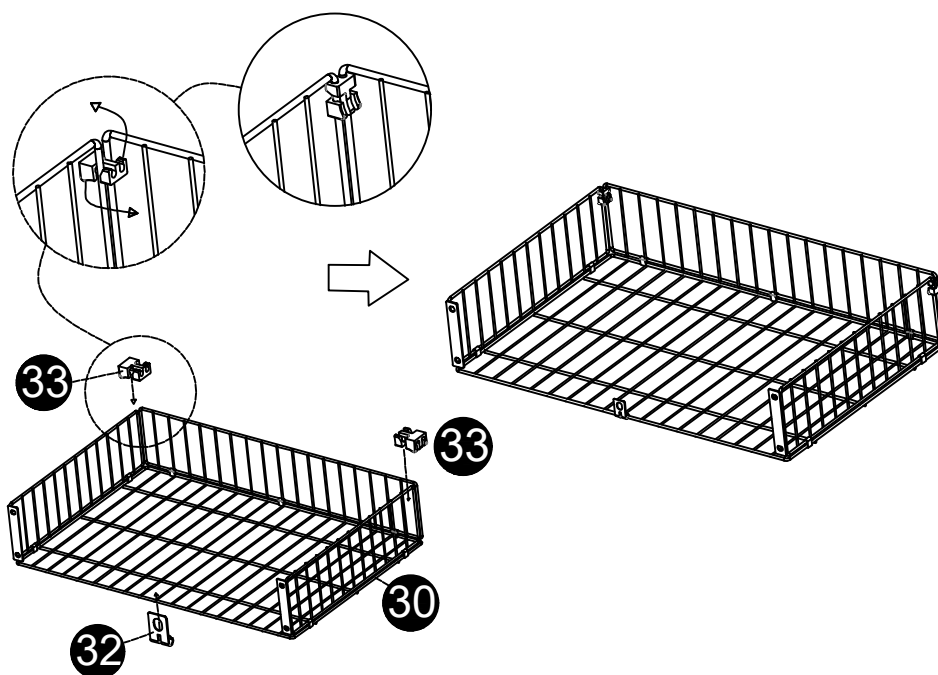


Step23

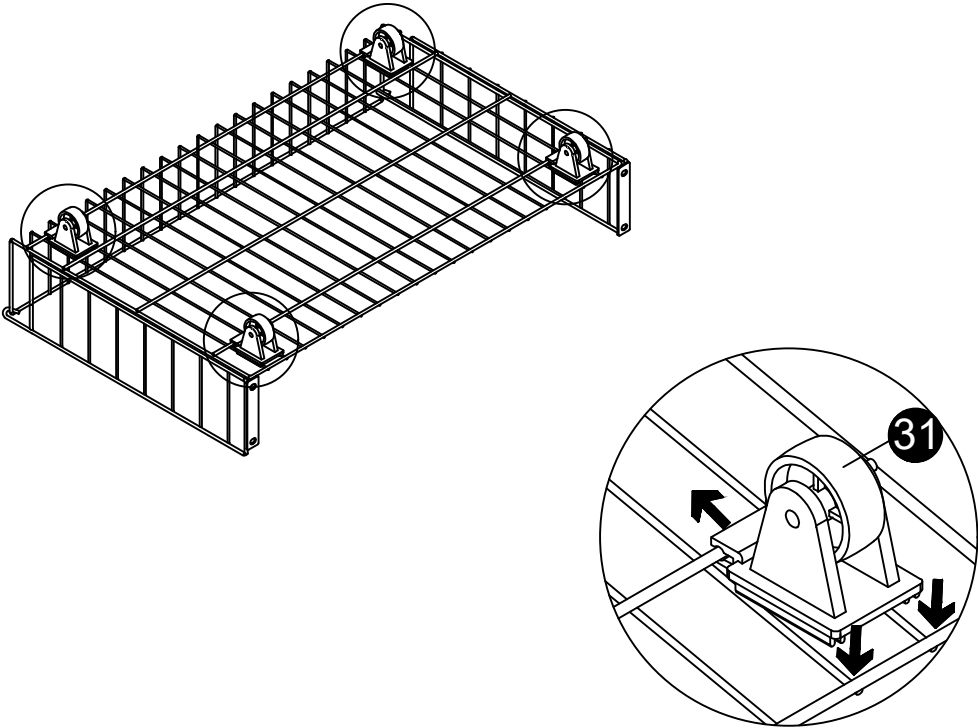


Step24

E		M6x12mm	5pcs
H		M4x65mm	1pc

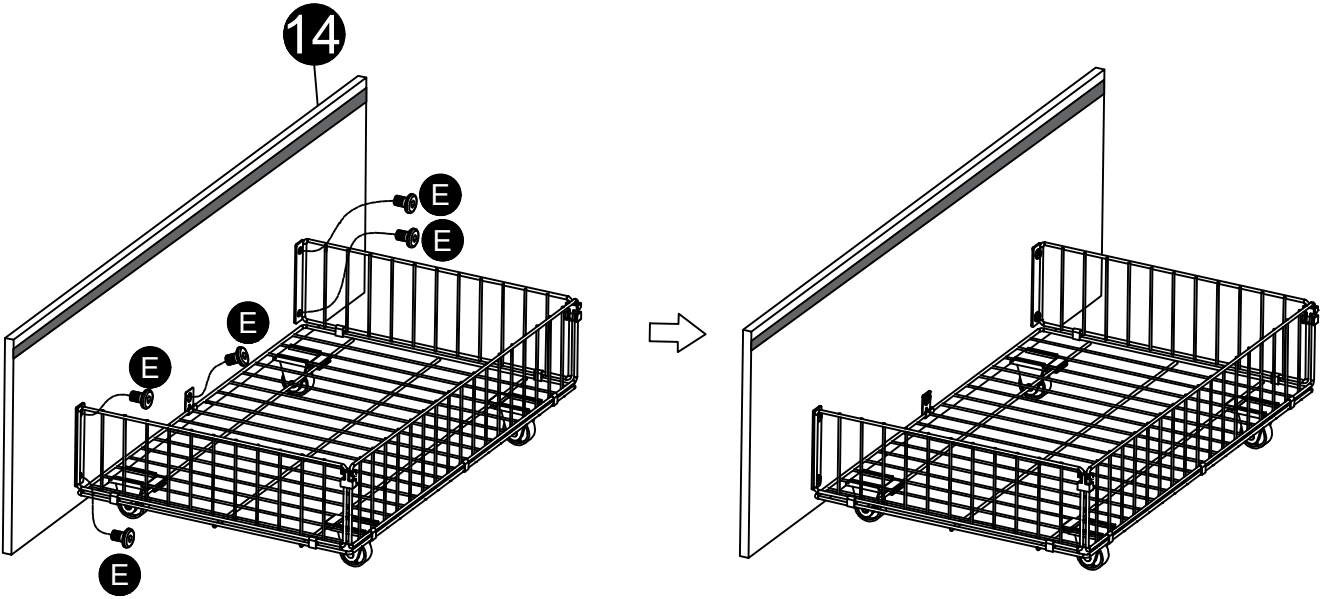

Step25

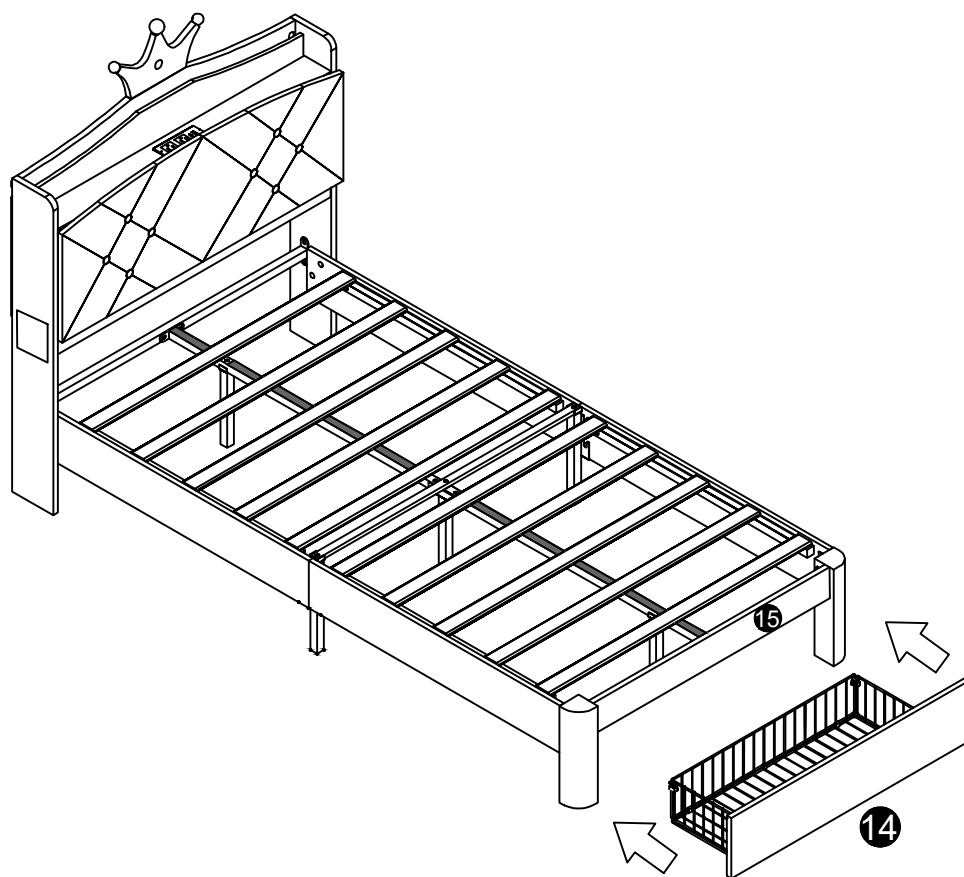

Step26

