

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- * Do not tighten bolts until completely.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly (included): Allen key (included) & Phillips head screwdriver (not included)

CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.


UPHOLSTERY CARE: To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis.

Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.

SAFAVIEH C O U T U R E

Model# SFV2131

Product Dimensions: 19-1/4"W x 22-1/2"D x 40"H

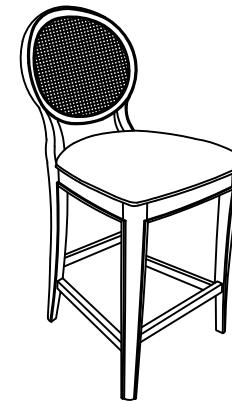

Weight Capacity : 275 lbs

WARNING : DO NOT SAND ON THE PRODUCT

WARNING : DO NOT OVER TORQUE BOLTS

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QTY
A	L/FRONT LEG		1 X
B	R/FRONT LEG		1 X
C	CHAIR BACK		1 X
D	SEAT CUSHION WITH FRAME		1 X
E	L/STRETCHER		1 X
F	R/STRETCHER		1 X
G	FRONT STRETCHER		1 X

PIECE	DESCRIPTION	PICTURE	QTY
HW1	Hex Socket Bolt	Ø5/16-18"*3"	4 X
HW2	Hex Socket Bolt	Ø5/16-18"*2"	5 X
HW3	Allen Key	M4	1 X
HW4	Wood Screw	Ø8*40MM	6 X


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly (included): Allen key (included) & Phillips head screwdriver (not included)
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

1

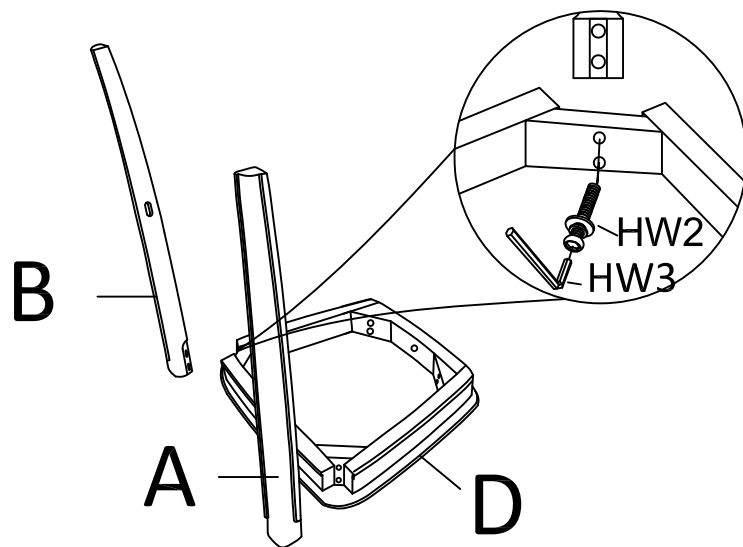

2

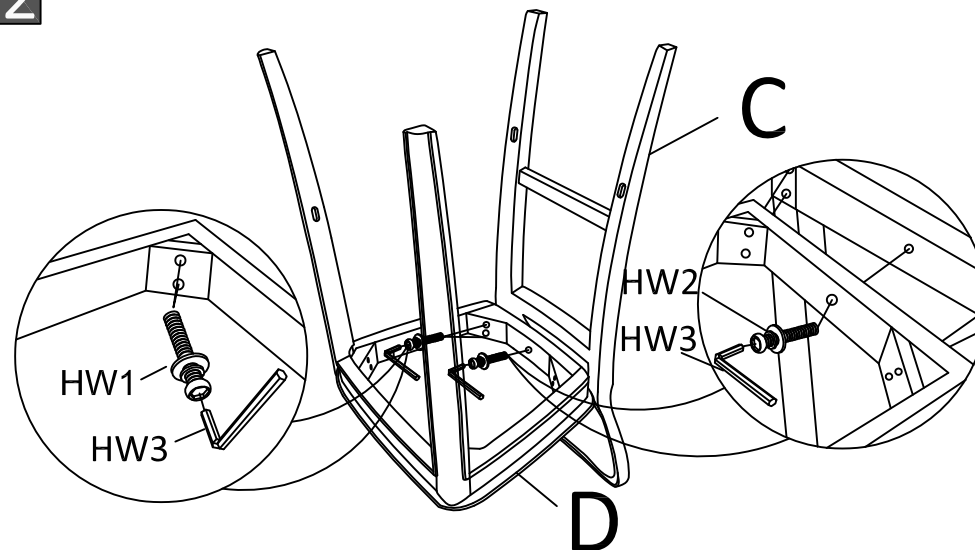

*** **NOTE** : Please make sure to use the correct bolt, so as not to damage the product.

Step 1

Assemble Front Legs (A & B) to the "Seat cushion with frame"(D), Using Allen key (HW3) to lock with 4*Hex Socket Bolt (HW2).

Step 2


Attach Chair back (C) with the assembled seat frame / legs (as step1).
Left and Right sides : Use Allen Key (HW3) to lock with 4*Hex Socket bolts (HW1).
Center hole of seat frame : Use Allen Key (HW3) to lock with 1*Hex Socket bolts (HW2).

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 20 minutes.
- * Tools Required for Assembly (included): Allen key (included) & Phillips head screwdriver (not included)
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

3

Philips head screwdriver

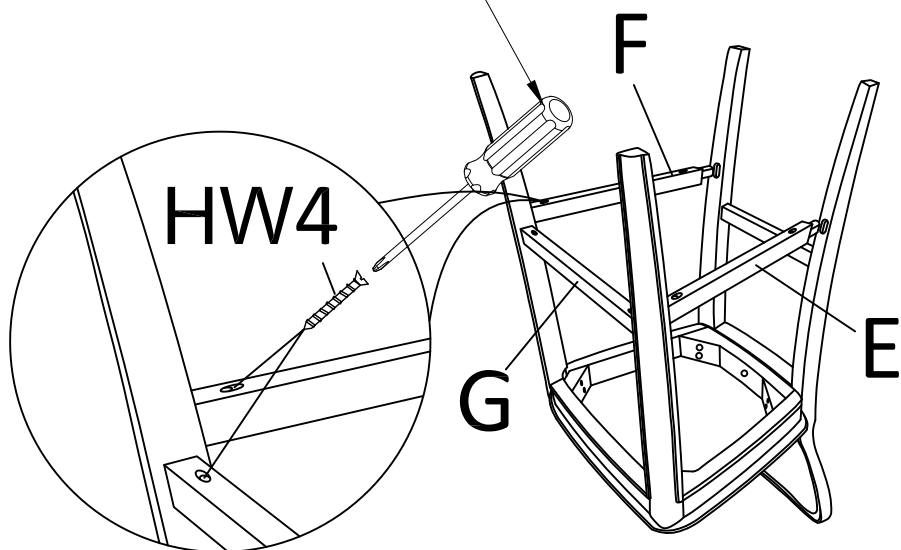

4

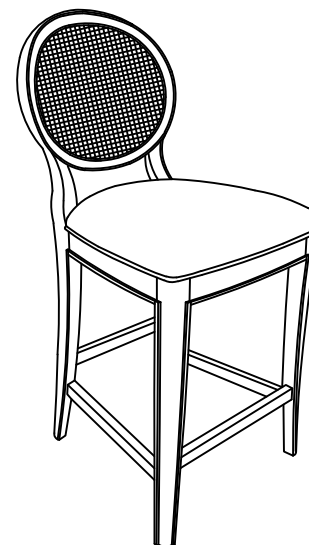

Step 3

Assemble 3*stretchers (E, F, G) with legs, By using a Phillips head screwdriver (not included) to lock with 6*Wood Screws (HW4).

Step 4

Straighten up the assembled product, Assembly is completed.