











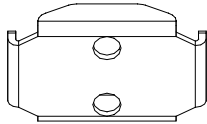
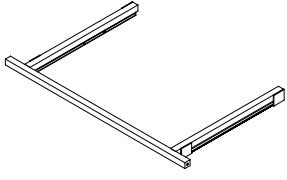
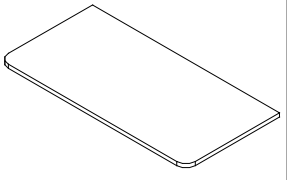
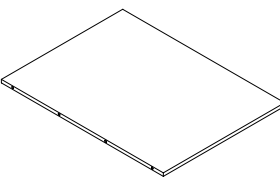
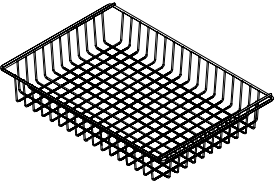
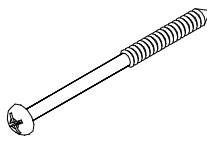
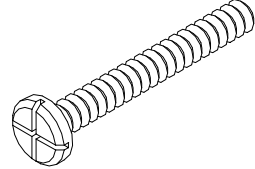

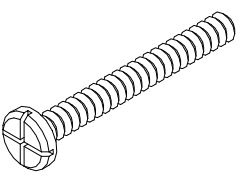
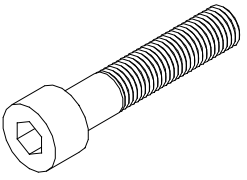
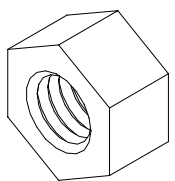
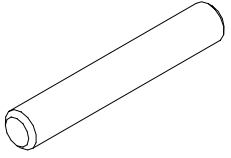

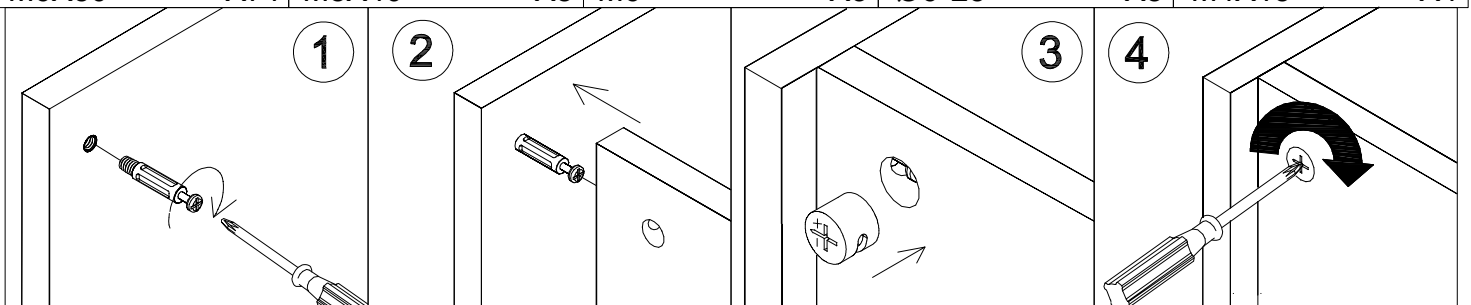
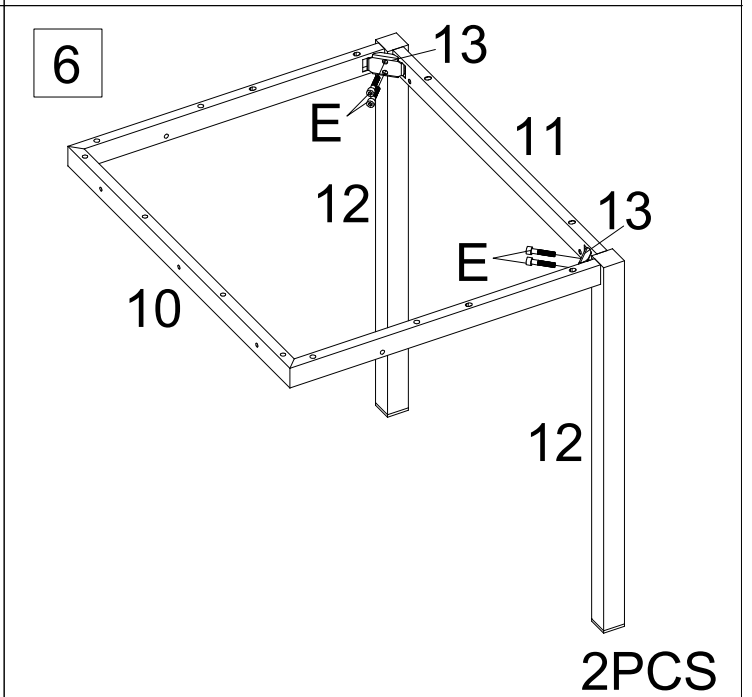
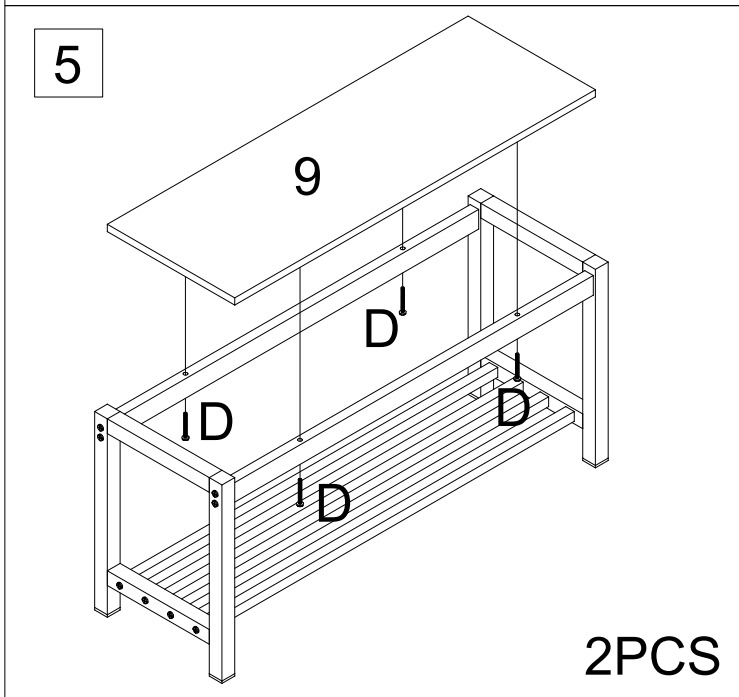
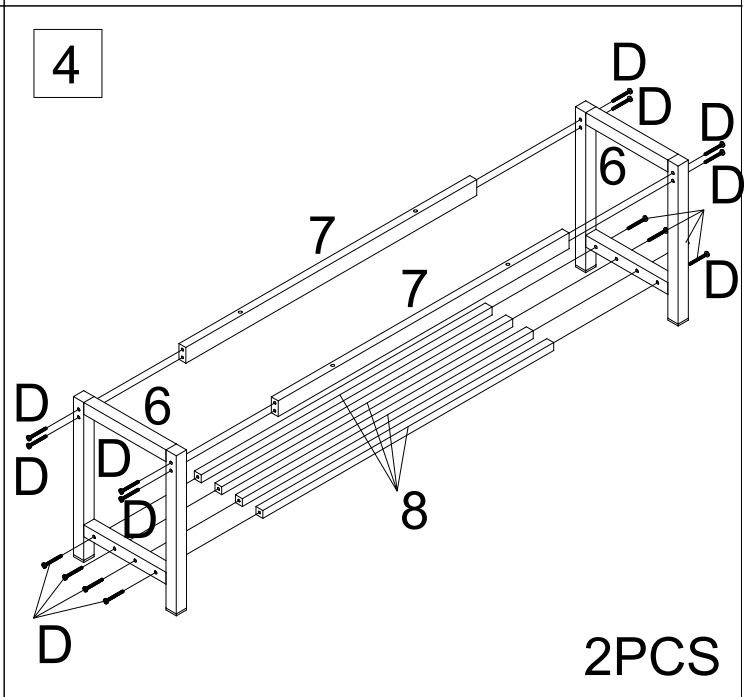
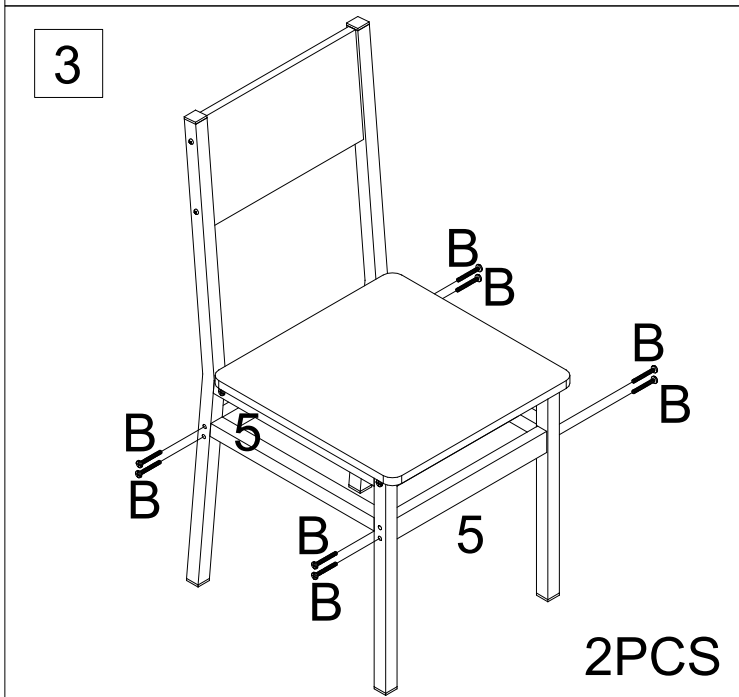
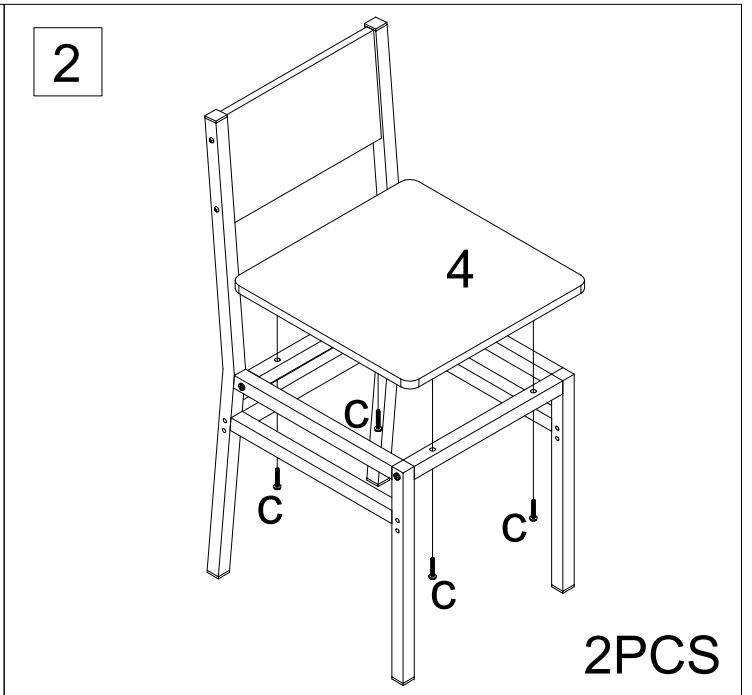
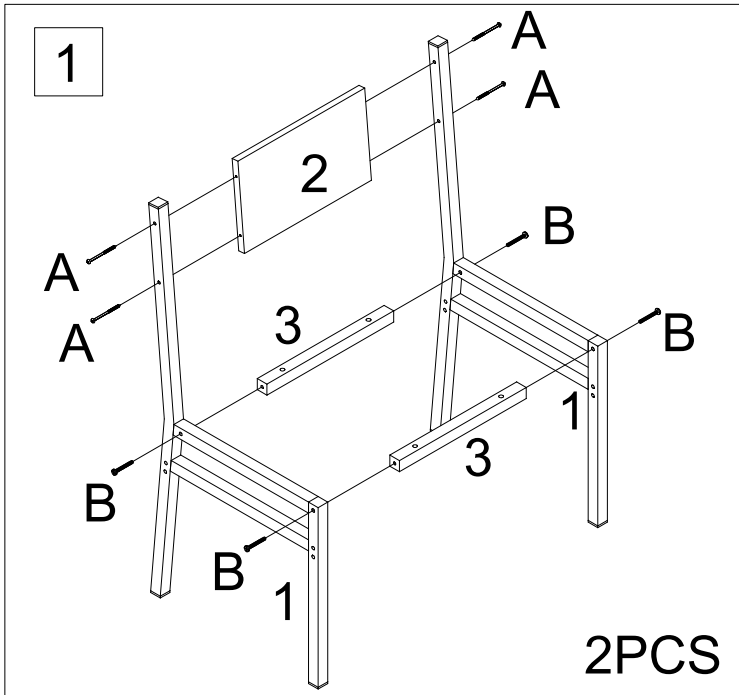


Assembly Instructions


Attention: Do not tighten the screws until you have completed assembly.

1  X4	2  X2	3  X4	4  X2	5  X4
6  X4	7  X4	8  X8	9  X2	10  X2
11  X2	12  X4	13  X4	14  X2	15  X2
16  X1	17  X2	A  M6X70 X8	B  M6X45 X32	C  M6X32 X8
D  M6X50 X71	E  M8X40 X8	F  M6 X3	G  Ø6*25 X8	H  M4X15 X4

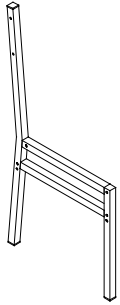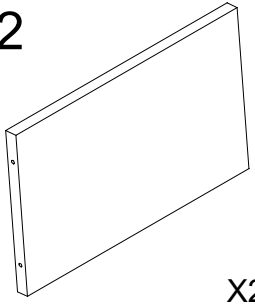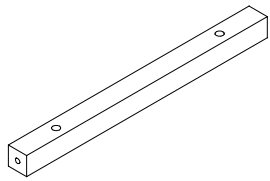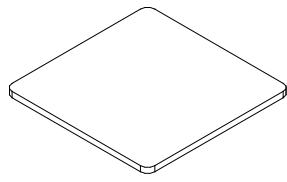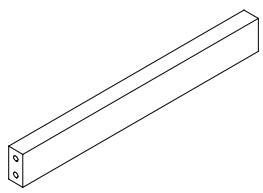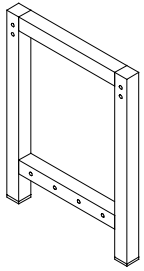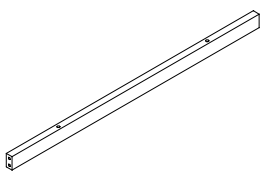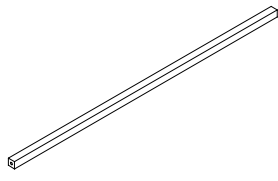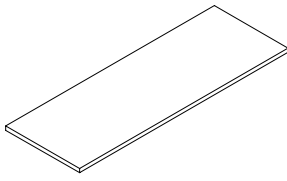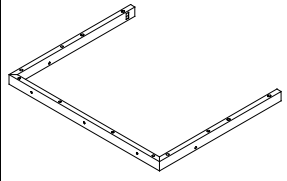

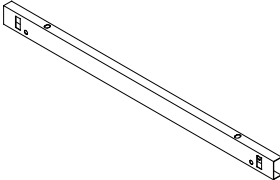


7

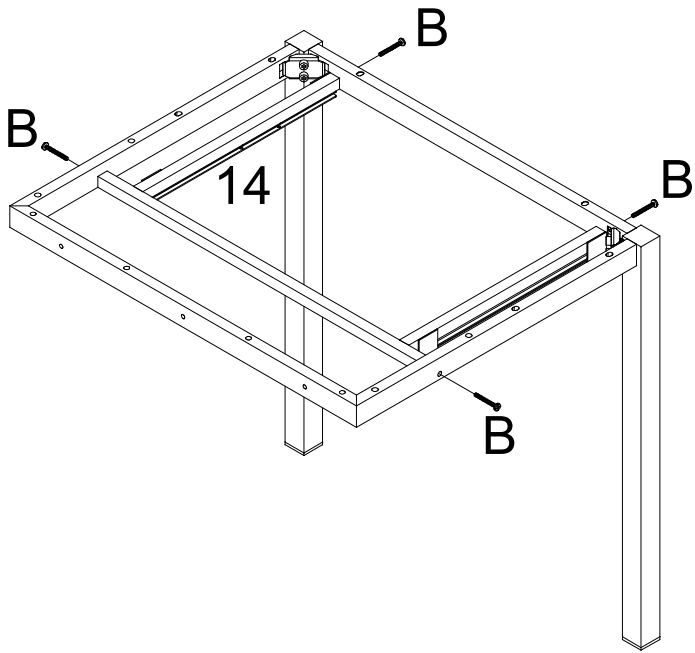


2PCS


8

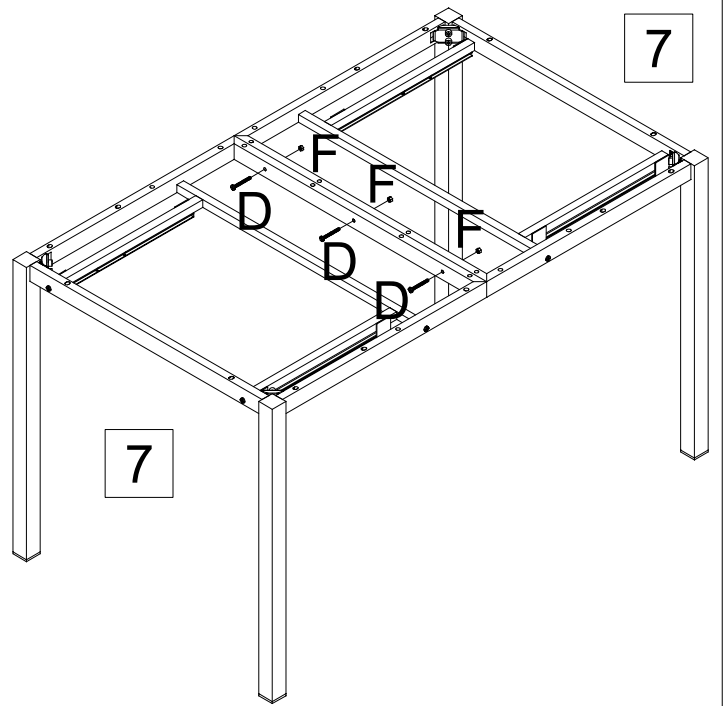


9

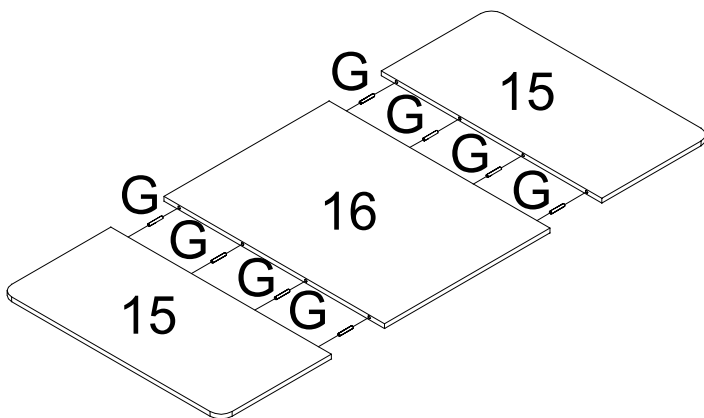

10

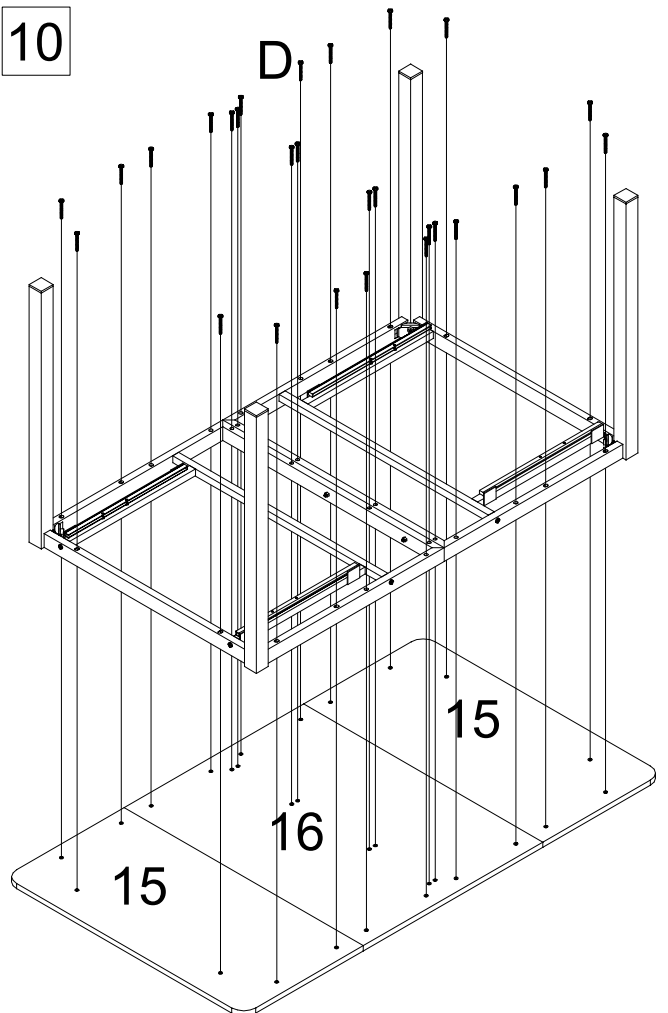

11

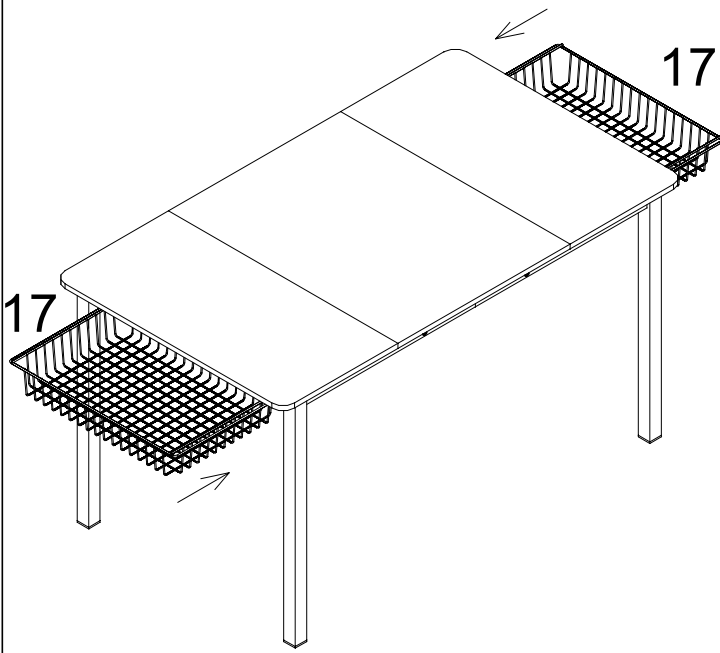

12

