

ASSEMBLY INSTRUCTION

(Box 1)

BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L,R)	2 pcs
D	Bed Slats	4 pcs
E	Bed Slats Support	4 pcs

(Box 2)

BOX OF SIDE RAIL


No	ITEM	Qty
F	Side Rail	2 pcs

(Box 1)


HARDWARE LIST

No	ITEM	Qty
1	Csk M4 x 22mm	8 pcs
2	JCBC No. 110mm	6 pcs
3	SPRING WASHER 1/4" Rb	6 pcs
4	Flat Washer 1/4" ID x 13mm OD Blk	6 pcs
5	ALLEN KEY m3x65m n Blk	1 pc
6	ALLEN KEY m2x65m n Blk	1 pc

STEP 1 : Attach Head Board Leg (B) to Head Board (A) as shown using JCBC BOLT (2) with Spring Washer (3), Flat washer (4) and securing with ALLEN KEY (5).

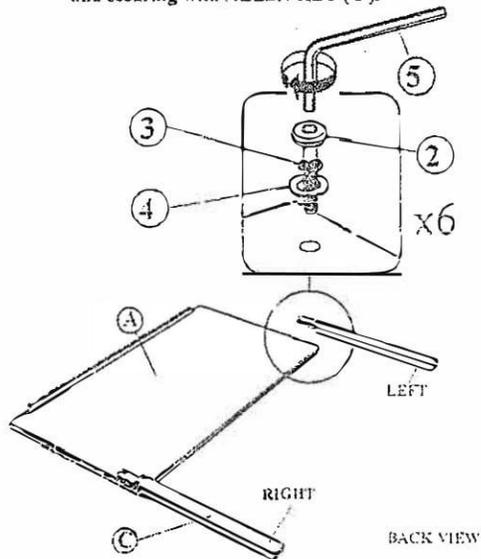


STEP 2 : Hook SIDE RAIL (F) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

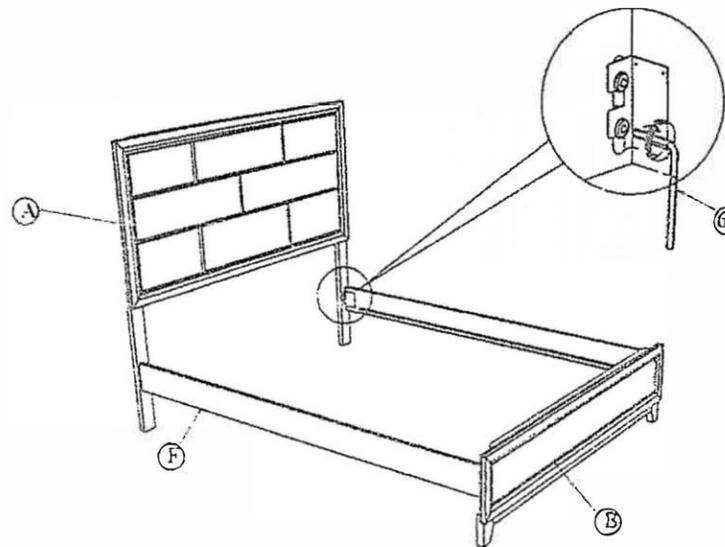

STEP 3 : Tighten the 4 Corner with Allen Key (5). Fix the Bed Slat Support Leg (E) to Bed Slat (D) as shown . Install the bed slat (D) to side rail (F) and tighten with Csk Screw (1) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

STEP 3.2 :

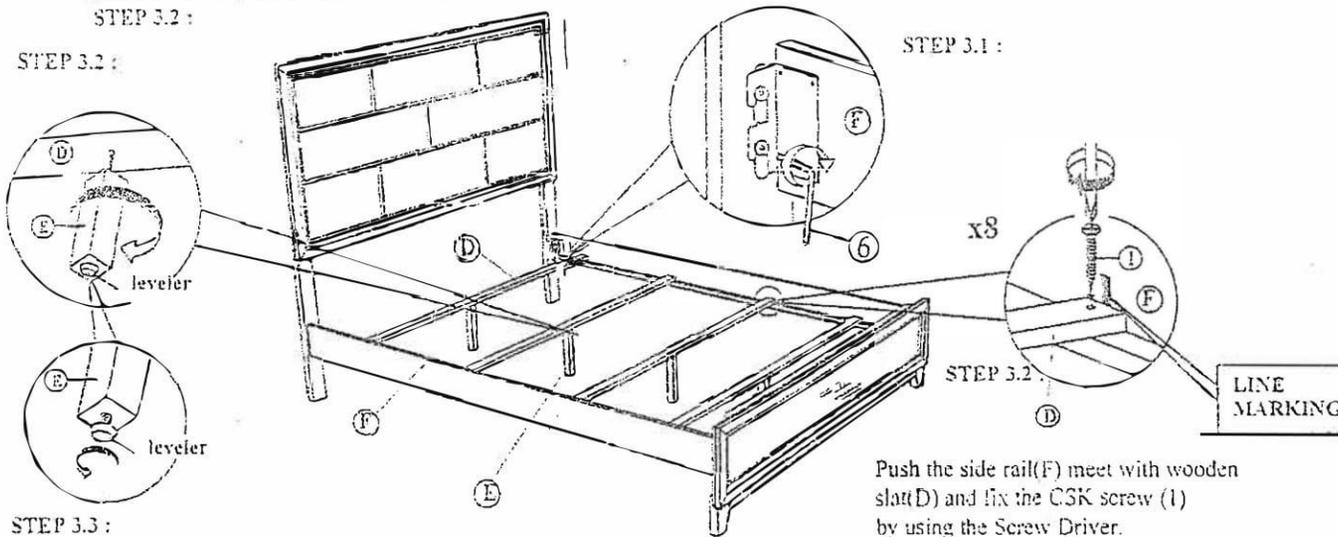

Push the side rail(F) meet with wooden slat(D) and fix the CSK screw (1) by using the Screw Driver.