


# Queen Poster Headboard


## IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

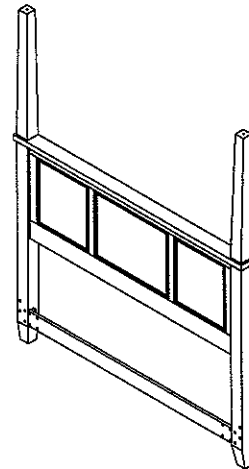

## Part List

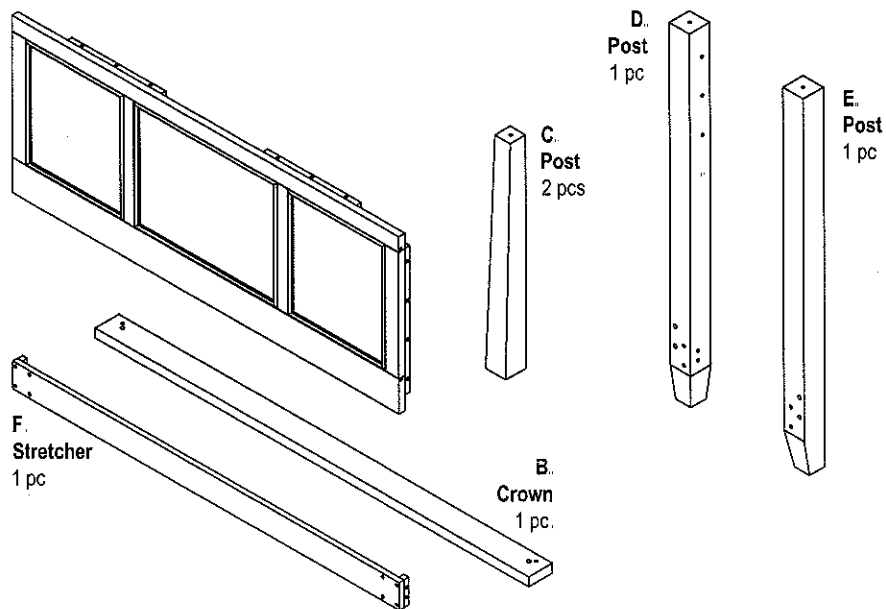


## Hardware List



Head Cap Bolt  
18 pcs. (+1 extra)



Flat Washer  
18 pcs. (+1 extra)



Key Wrench  
1 pc.



Small Key Wrench  
1 pc.



Bolt  
2 pcs. (+1 extra)



Square Washer  
2 pcs. (+1 extra)



Nut  
2 pcs. (+1 extra)



Wrench  
1 pc.



Wooden Dowel  
2 pcs. (+1 extra)


## Assembly Instructions 2/3

### IMPORTANT


- \* Do not tighten up all the bolts until each part is properly assembled.
- \* You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future.

### STEP 1


Attach Posts (D) and (E) to Headboard (A) and Stretcher (F) using Head Cap Bolts and Flat Washers.

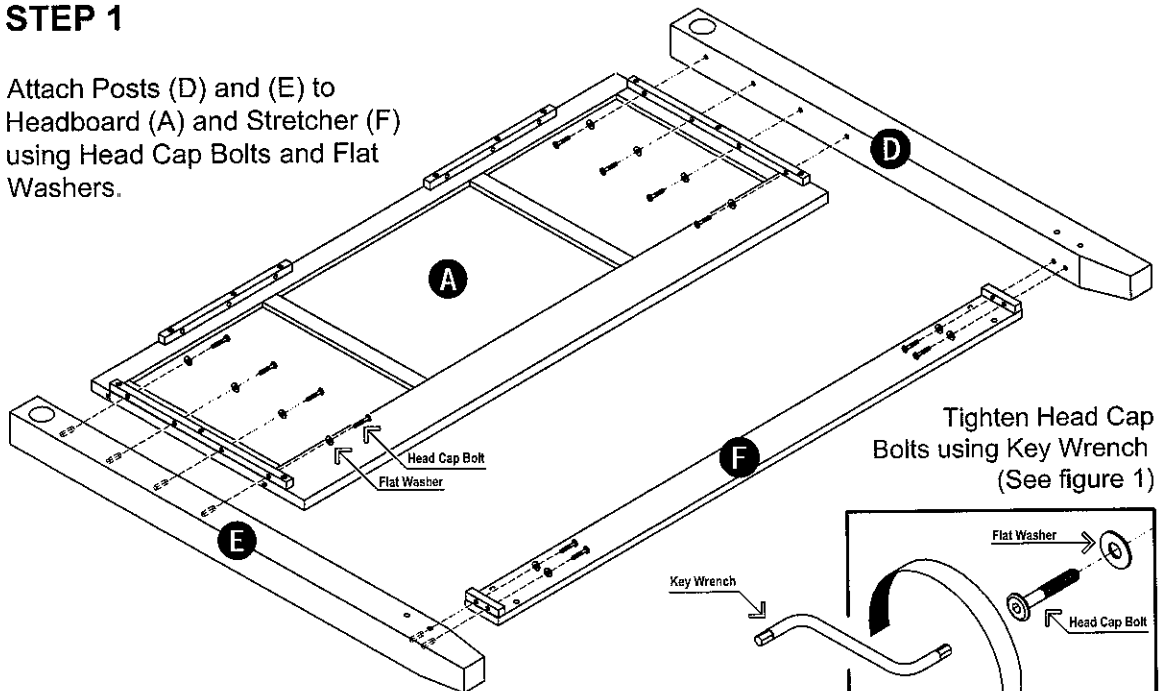

Tighten Head Cap Bolts using Key Wrench  
(See figure 1)

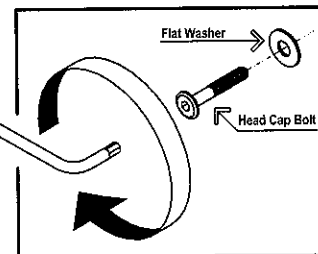

(Figure 1)

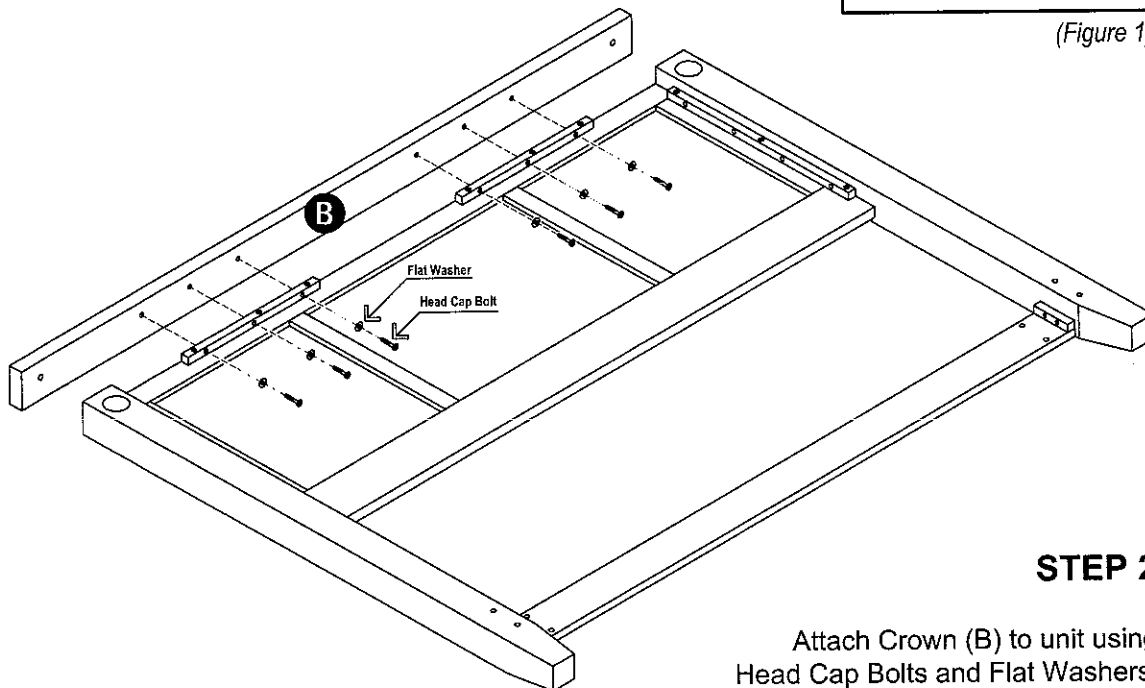


### STEP 2

Attach Crown (B) to unit using Head Cap Bolts and Flat Washers.

## Assembly Instructions 3/3

### STEP 3


Insert Bolts into Posts (C).

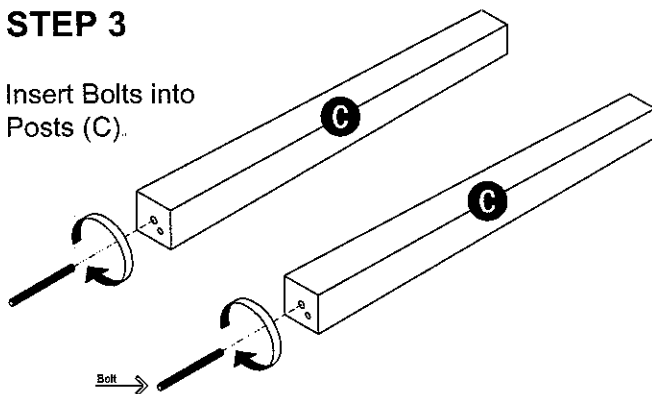


### STEP 4

Attach Posts (C) to unit using Square Washers, Nuts and Wooden Dowel.

Tighten the Bolts with Wrench (See figure 2)

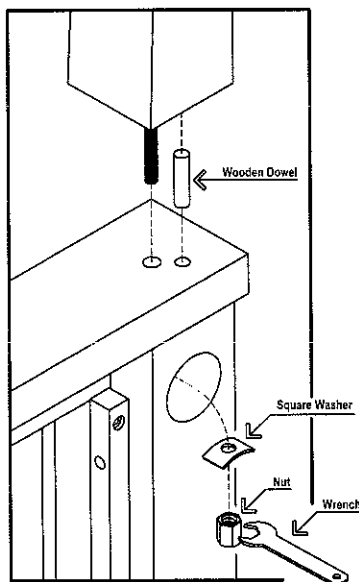

(Figure 2)

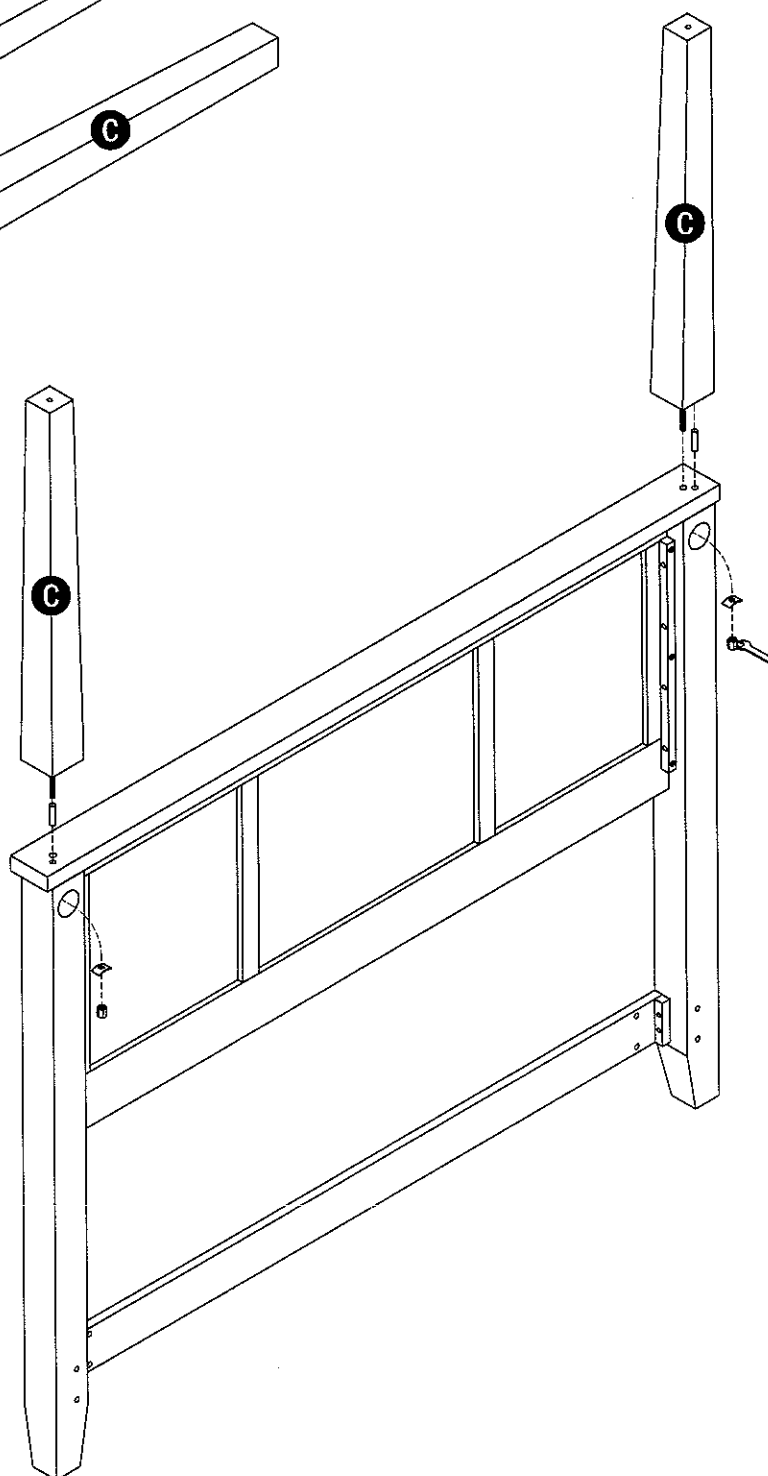

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON  
FINISHED FURNITURE. AMMONIA  
WILL CHEMICALLY ATTACK THE  
LACQUER

### NEVER

ALLOW LIQUIDS OF ANY KIND TO  
REMAIN ON THE FURNITURE.  
ABSORPTION CAUSES WOOD TO WARP  
AND SPLIT AND FINISHES TO DELAMINATE

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE



**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL  
POLISH OR LUKEWARM SOAP AND WATER,  
THEN BUFF WITH A DRY CLEAN CLOTH




# Queen Poster Footboard


## IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

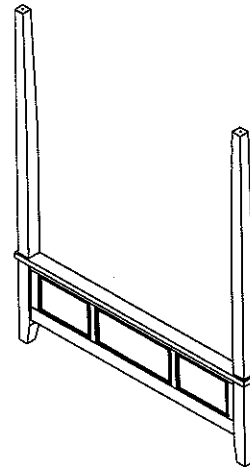

## Part List

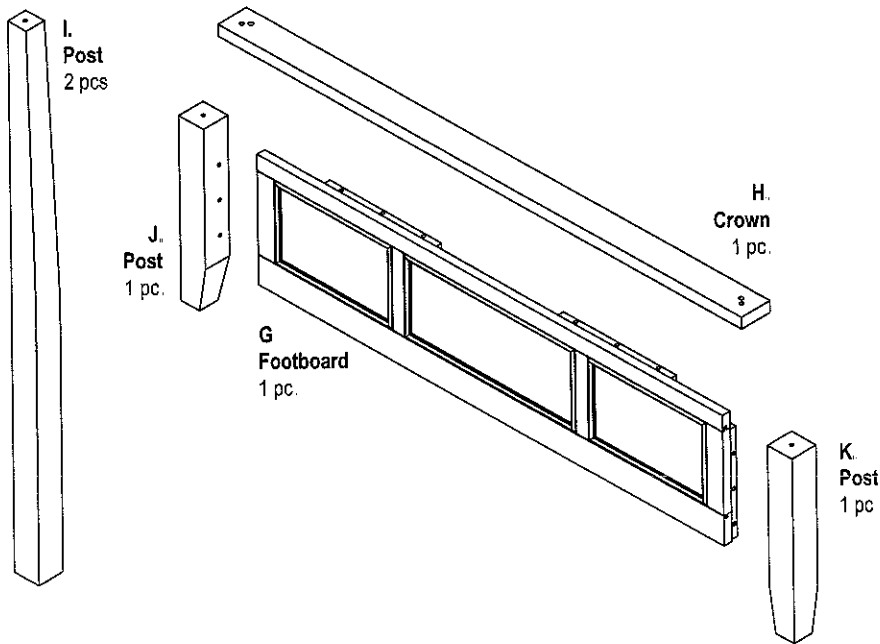


## Hardware List



Head Cap Bolt  
12 pcs. (+1 extra)



Flat Washer  
12 pcs. (+1 extra)



Key Wrench  
1 pc.



Small Key Wrench  
1 pc.



Bolt  
2 pcs. (+1 extra)



Square Washer  
2 pcs. (+1 extra)



Nut  
2 pcs. (+1 extra)



Wrench  
1 pc.



Wooden Dowel  
2 pcs. (+1 extra)



## Assembly Instructions 2/3

### IMPORTANT

- \* Do not tighten up all the bolts until each part is properly assembled.
- \* You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future

### STEP 1

Attach Posts (J) and (K) to Footboard (G) using Head Cap Bolts and Flat Washers.

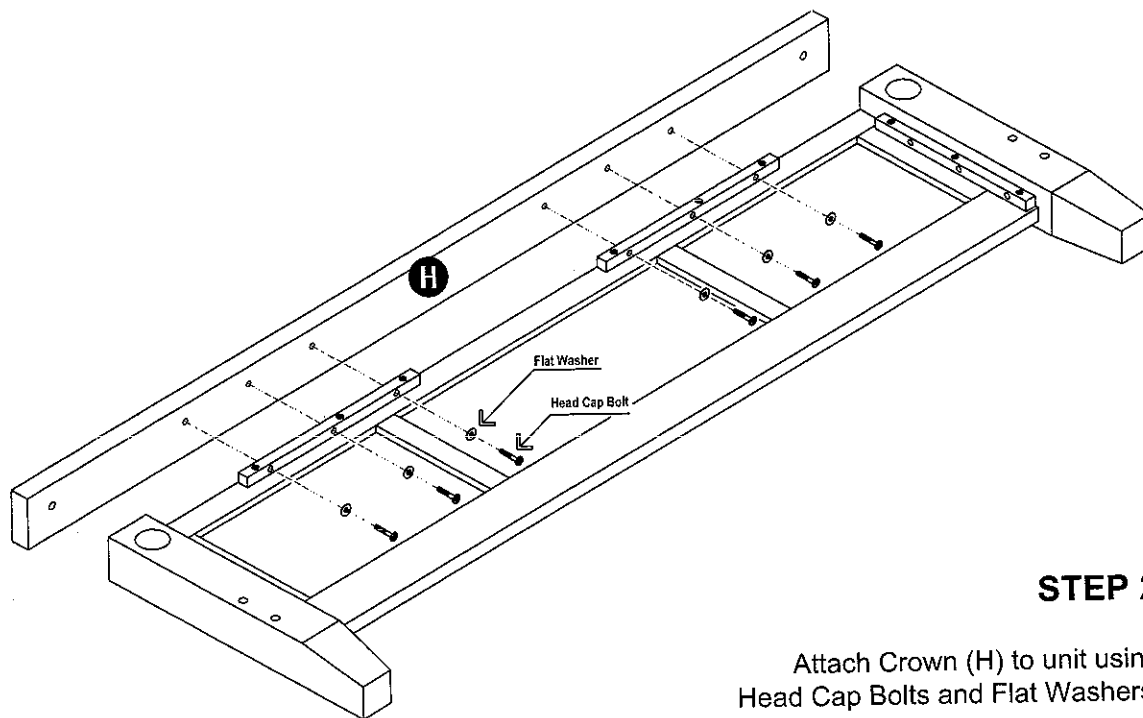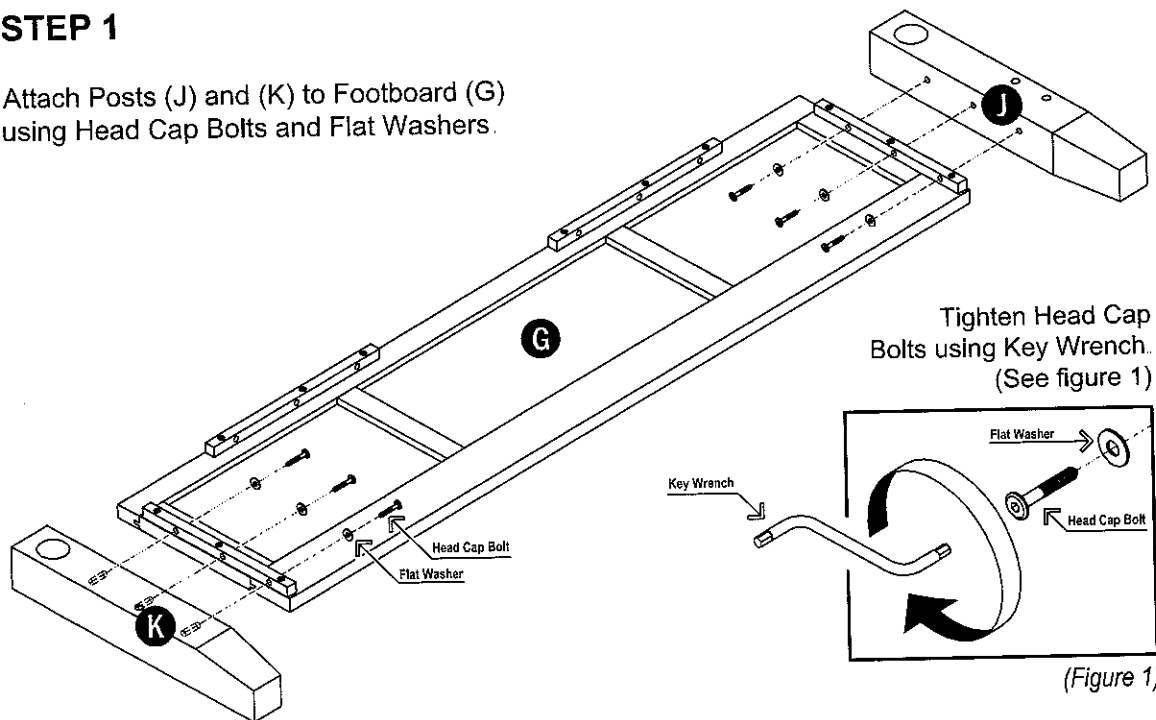


### STEP 2

Attach Crown (H) to unit using Head Cap Bolts and Flat Washers.

## Assembly Instructions 3/3

### STEP 3


Insert Bolts into Posts (I).

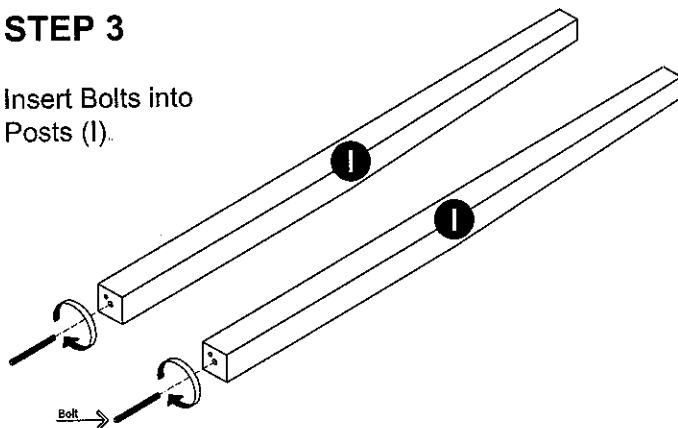


### STEP 4

Attach Posts (I) to unit using Square Washers, Nuts and Wooden Dowel.

Tighten the Bolts with Wrench (See figure 2)

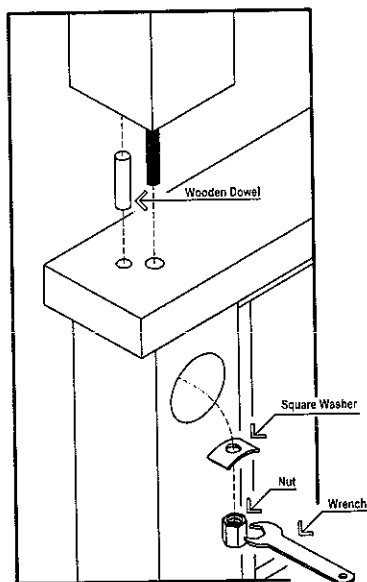

(Figure 2)

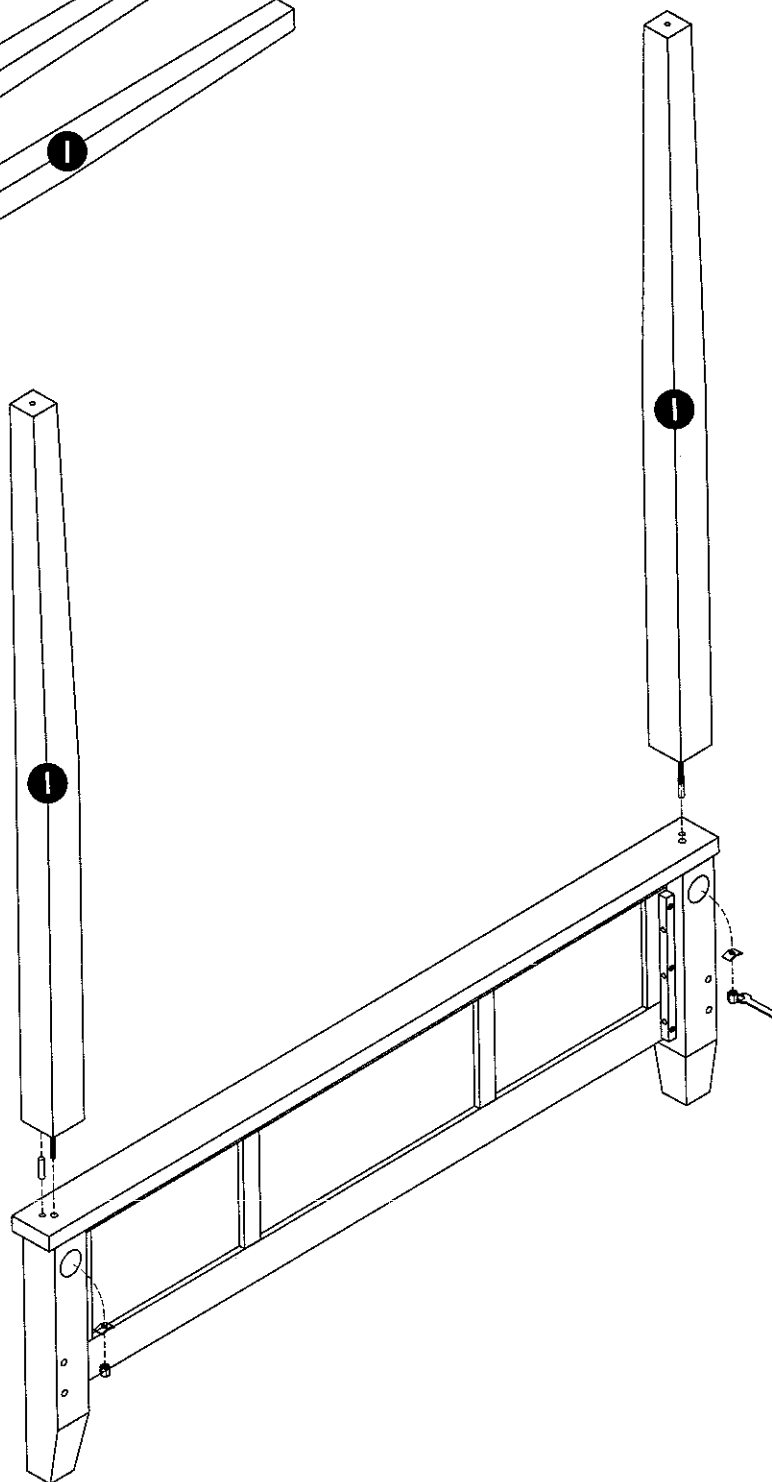

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON  
FINISHED FURNITURE. AMMONIA  
WILL CHEMICALLY ATTACK THE  
LACQUER

### NEVER

ALLOW LIQUIDS OF ANY KIND TO  
REMAIN ON THE FURNITURE.  
ABSORPTION CAUSES WOOD TO WARP  
AND SPLIT AND FINISHES TO DELAMINATE

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE



**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE



**PREVENT  
FINISH DAMAGE**


DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL  
POLISH OR LUKEWARM SOAP AND WATER,  
THEN BUFF WITH A DRY CLEAN CLOTH

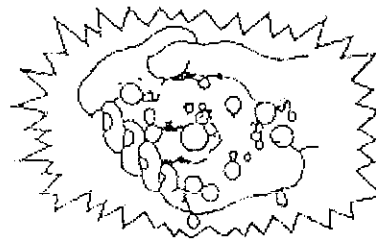


# Queen Poster Bed Rails with Slats


## IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

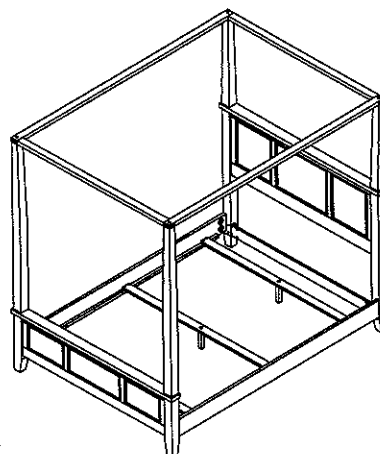

## Part List

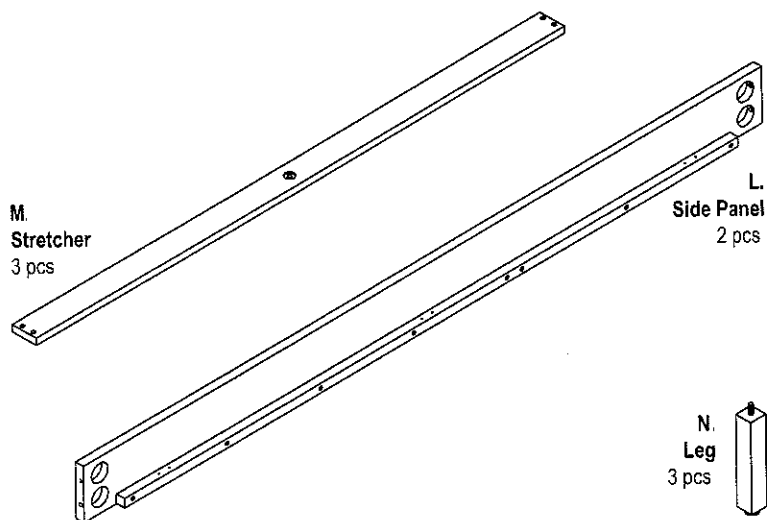

## Hardware List



Bolt  
8 pcs. (+1 extra)




Square Washer  
8 pcs. (+1 extra)



Nut  
8 pcs. (+1 extra)



Wrench  
1 pc.



Wood Screw  
12 pcs (+1 extra)

Also need the Parts and Hardware in carton

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level


## Assembly Instructions 2/2

### IMPORTANT

- \* Do not tighten up all the bolts & screws until each part is properly assembled
- \* You should keep Wrench in a safe place as you may need to tighten up the Nuts in the future
- \* After assembly, item must be level to work properly Use the included adjustable levellers to level

### STEP 1

Insert Bolts into the pre-drilled holes of Headboard and Footboard.

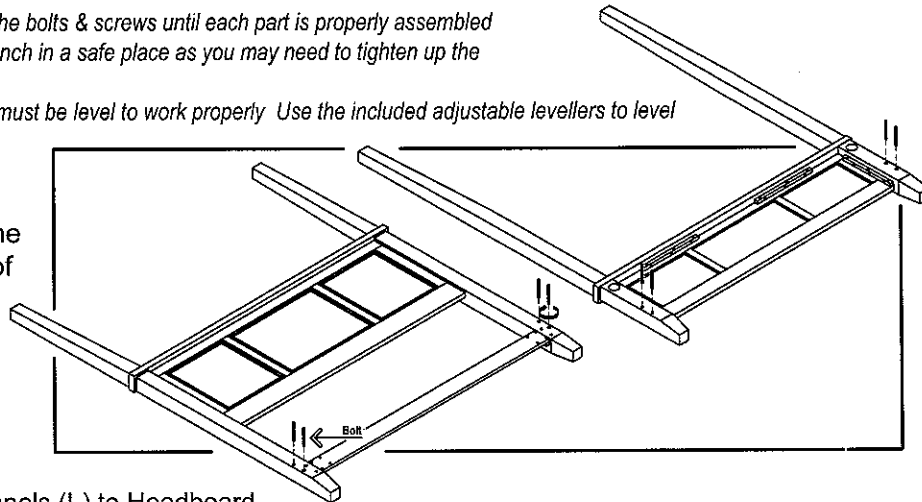

### STEP 2

Assemble Side Panels (L) to Headboard and Footboard using Square Washers and Nuts. Tighten all the Bolts with Wrench. (See figure 1)


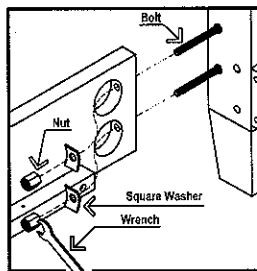


Figure 1

Insert Leg (N) into pre-drilled holes of Stretchers (M) and tighten.

Attach Stretchers (M) to the unit with Wood Screws.

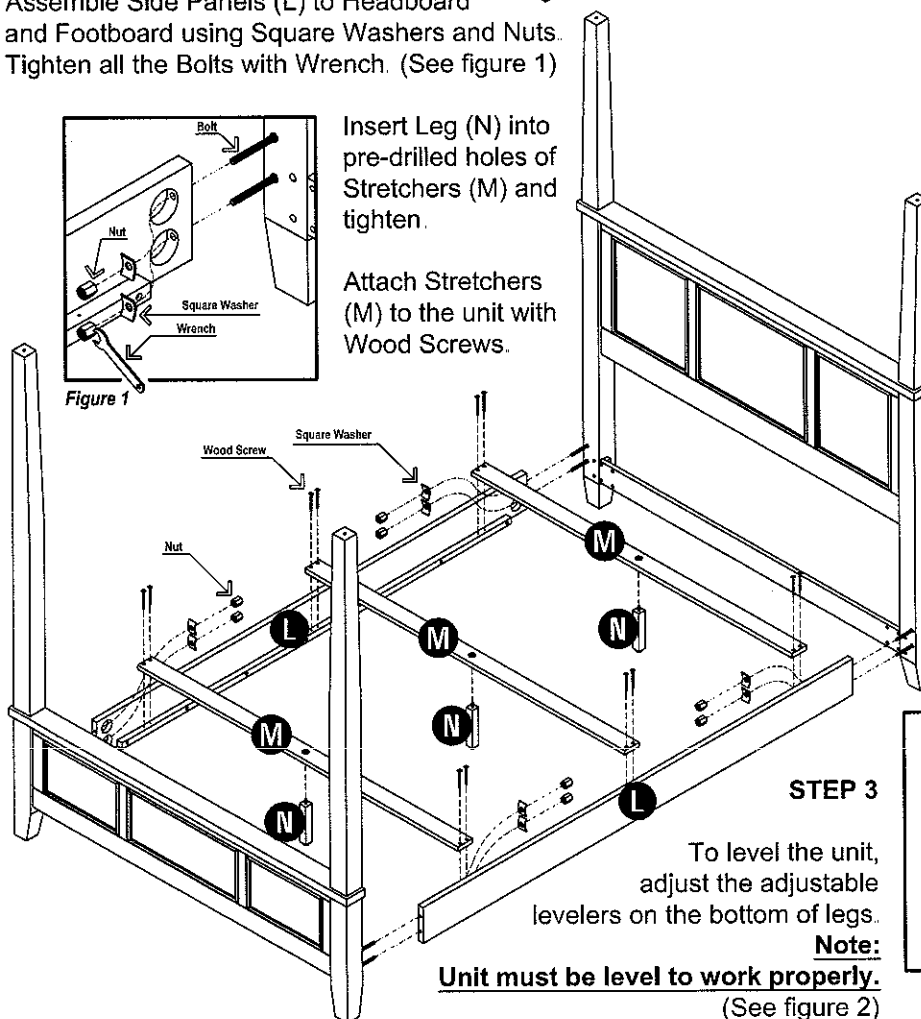

### STEP 3

To level the unit, adjust the adjustable levellers on the bottom of legs.

**Note:**

**Unit must be level to work properly.**

(See figure 2)

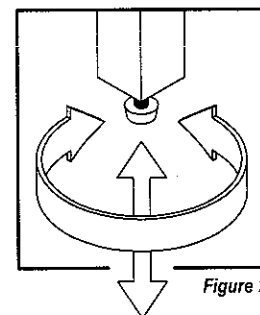


Figure 2

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON  
FINISHED FURNITURE. AMMONIA  
WILL CHEMICALLY ATTACK THE  
LACQUER

### NEVER

ALLOW LIQUIDS OF ANY KIND TO  
REMAIN ON THE FURNITURE.  
ABSORPTION CAUSES WOOD TO WARP  
AND SPLIT AND FINISHES TO DELAMINATE

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE



**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL  
POLISH OR LUKEWARM SOAP AND WATER,  
THEN BUFF WITH A DRY CLEAN CLOTH




# Queen Canopy Rails


## IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

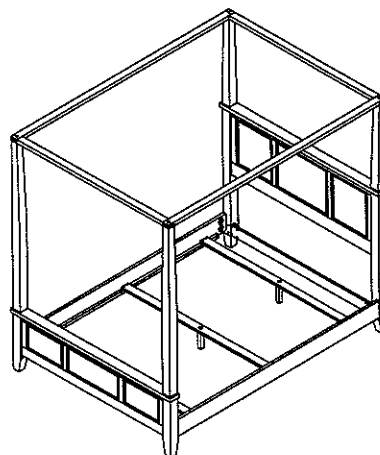

## Part List

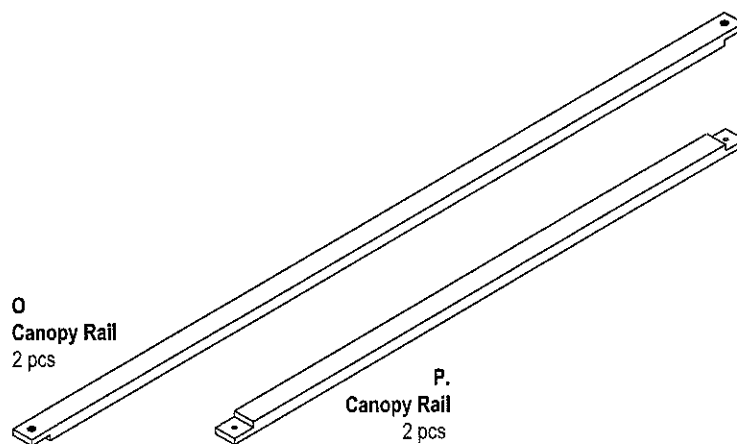


## Hardware List



Head Cap Bolt  
4 pcs. (+1 extra)



Flat Washer  
4 pcs. (+1 extra)



Key Wrench  
1 pc.



Small Key Wrench  
1 pc.

Also need the Parts and Hardware in carton



## Assembly Instructions 2/2

### IMPORTANT

- \* Do not tighten up all the bolts until each part is properly assembled.
- \* You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future

### STEP 1

Attach Canopy Rails (O) & (P) to unit using Head Cap Bolts and Flat Washers.

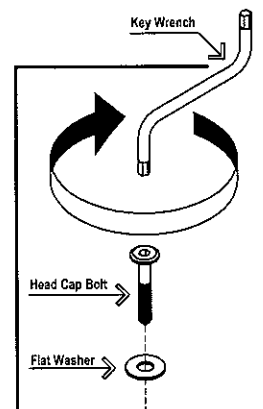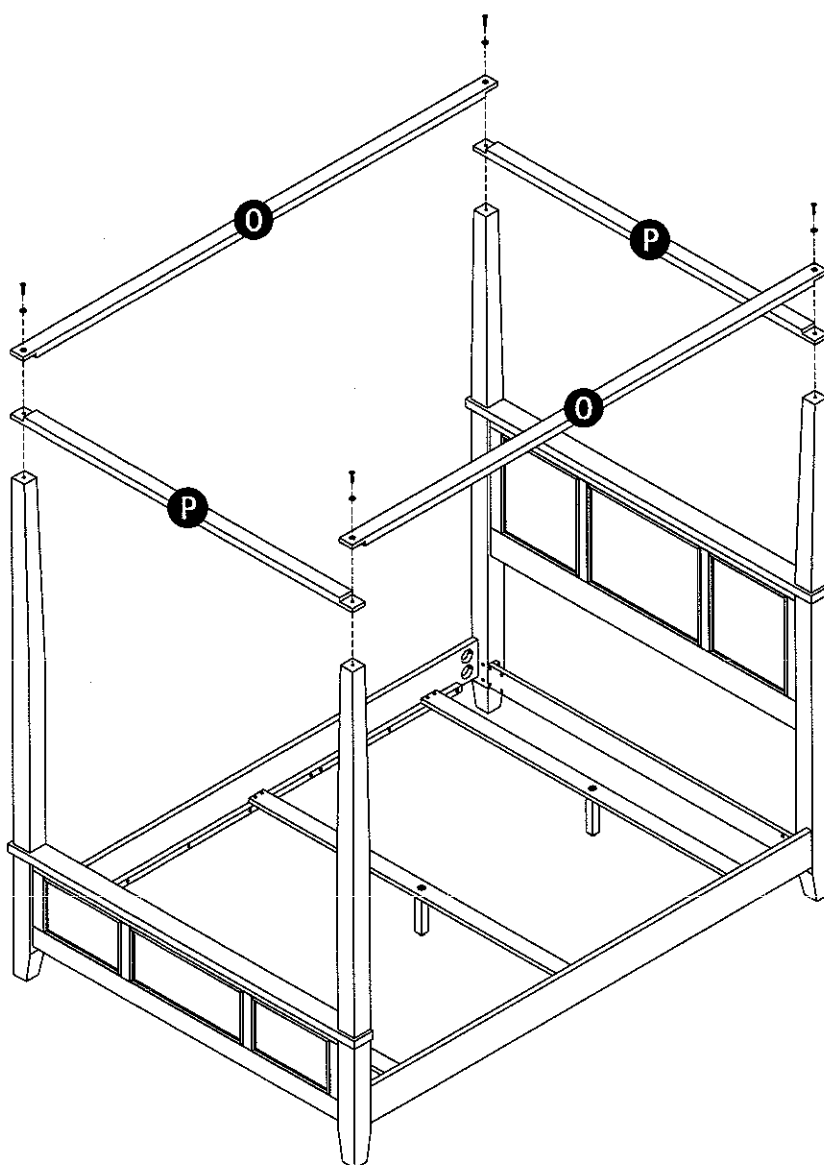

(Figure 1)

Tighten Head Cap  
Bolts using Key  
Wrench.  
(See figure 1)

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON  
FINISHED FURNITURE. AMMONIA  
WILL CHEMICALLY ATTACK THE  
LACQUER

### NEVER

ALLOW LIQUIDS OF ANY KIND TO  
REMAIN ON THE FURNITURE.  
ABSORPTION CAUSES WOOD TO WARP  
AND SPLIT AND FINISHES TO DELAMINATE

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.



**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL  
POLISH OR LUKEWARM SOAP AND WATER,  
THEN BUFF WITH A DRY CLEAN CLOTH

