





INSTALLATION
Product Manual

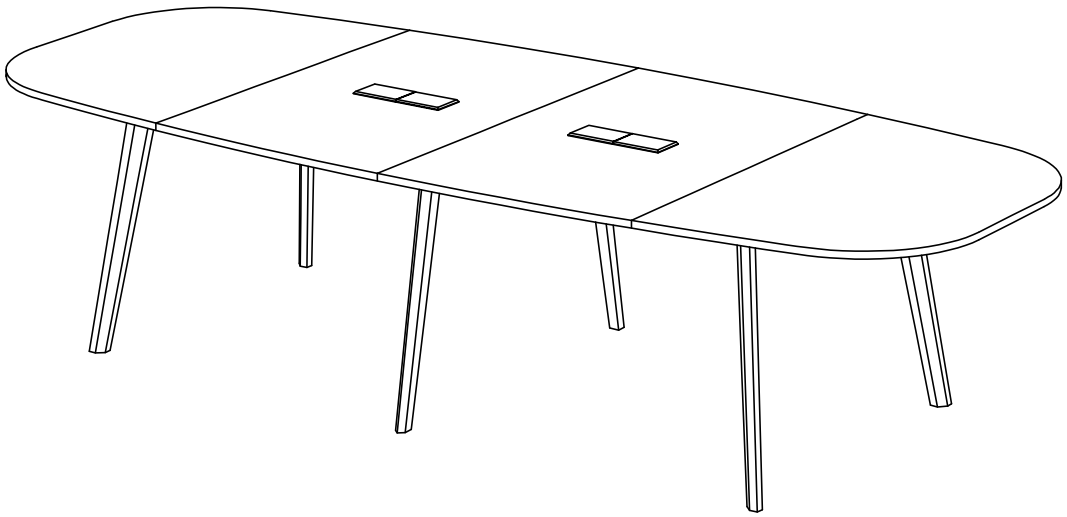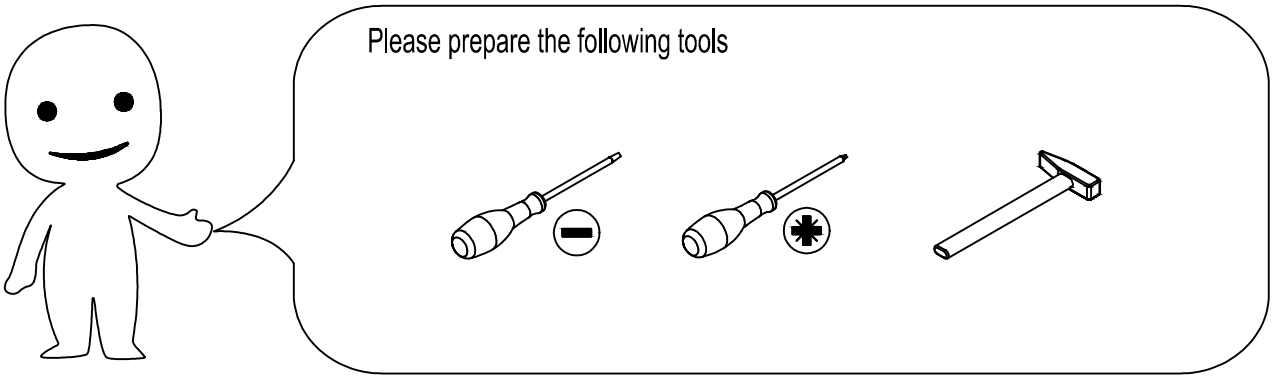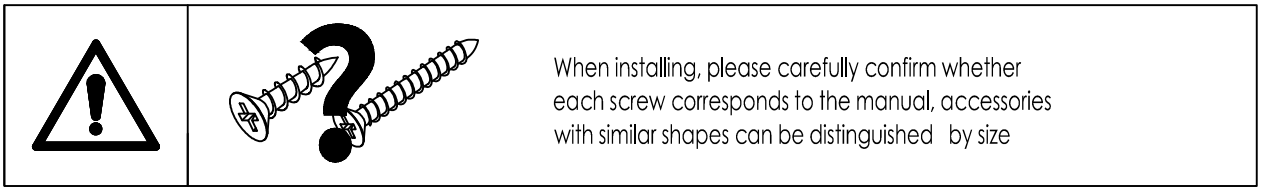



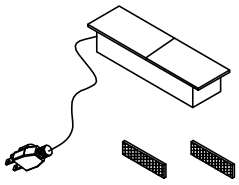


Ax44	**Bx42**	**Cx6**	**Dx2**
 M4x10	 M6x20		


Ex1	**Fx2**Sets
	 Sponge Block

Note:

Bolt installation should be carried out in two steps: initial tightening and final tightening. One-time locking is strictly prohibited. Final tightening must be performed after the overall structure is corrected and all bolts are in place.

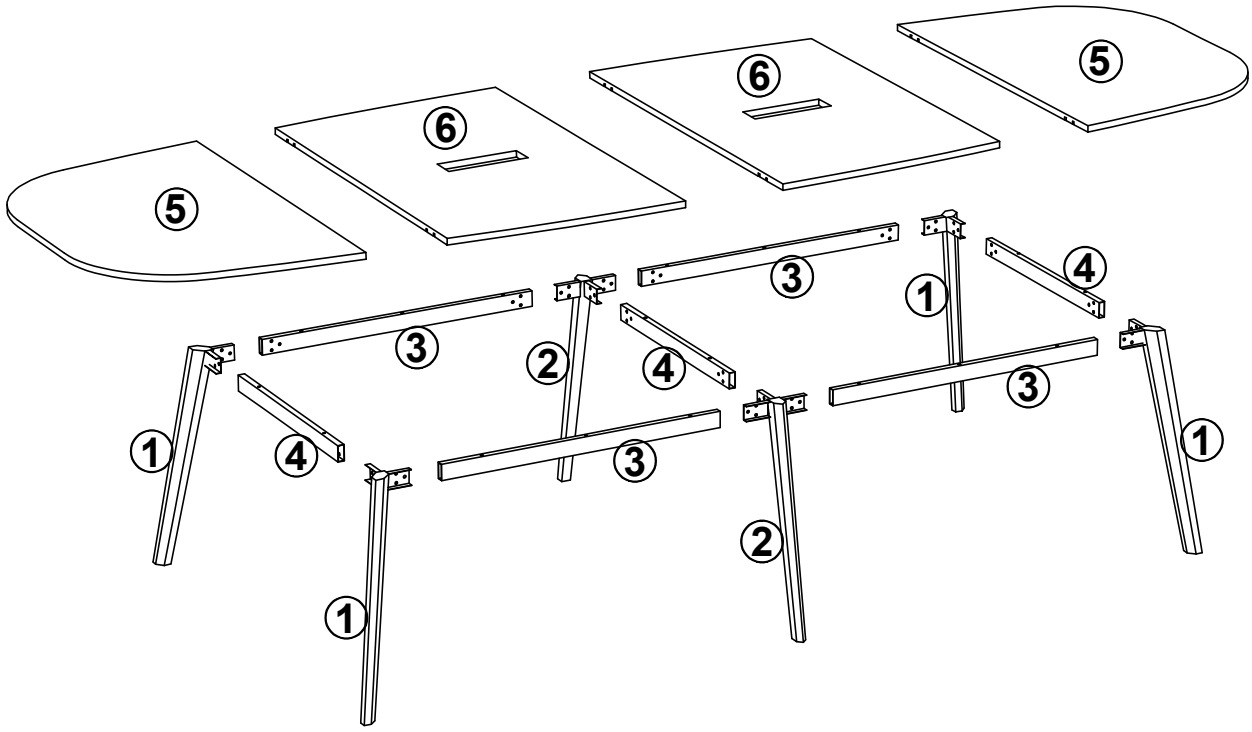

5
6
6
5
3
4
1
3
2
4
3
1
4
3
1
2
1

1

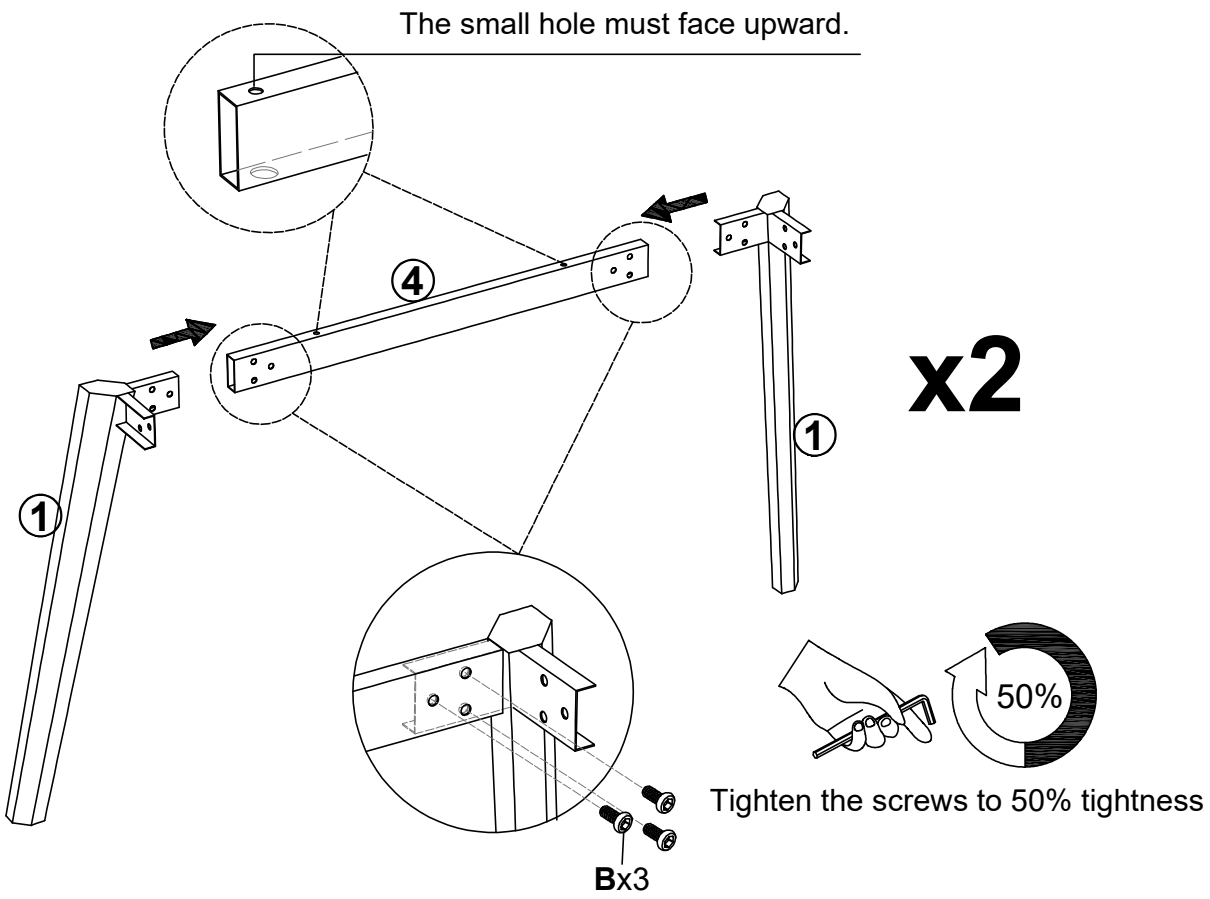
The small hole must face upward.
4
1
1
x2
50%
Tighten the screws to 50% tightness
Bx3


Bx12

2

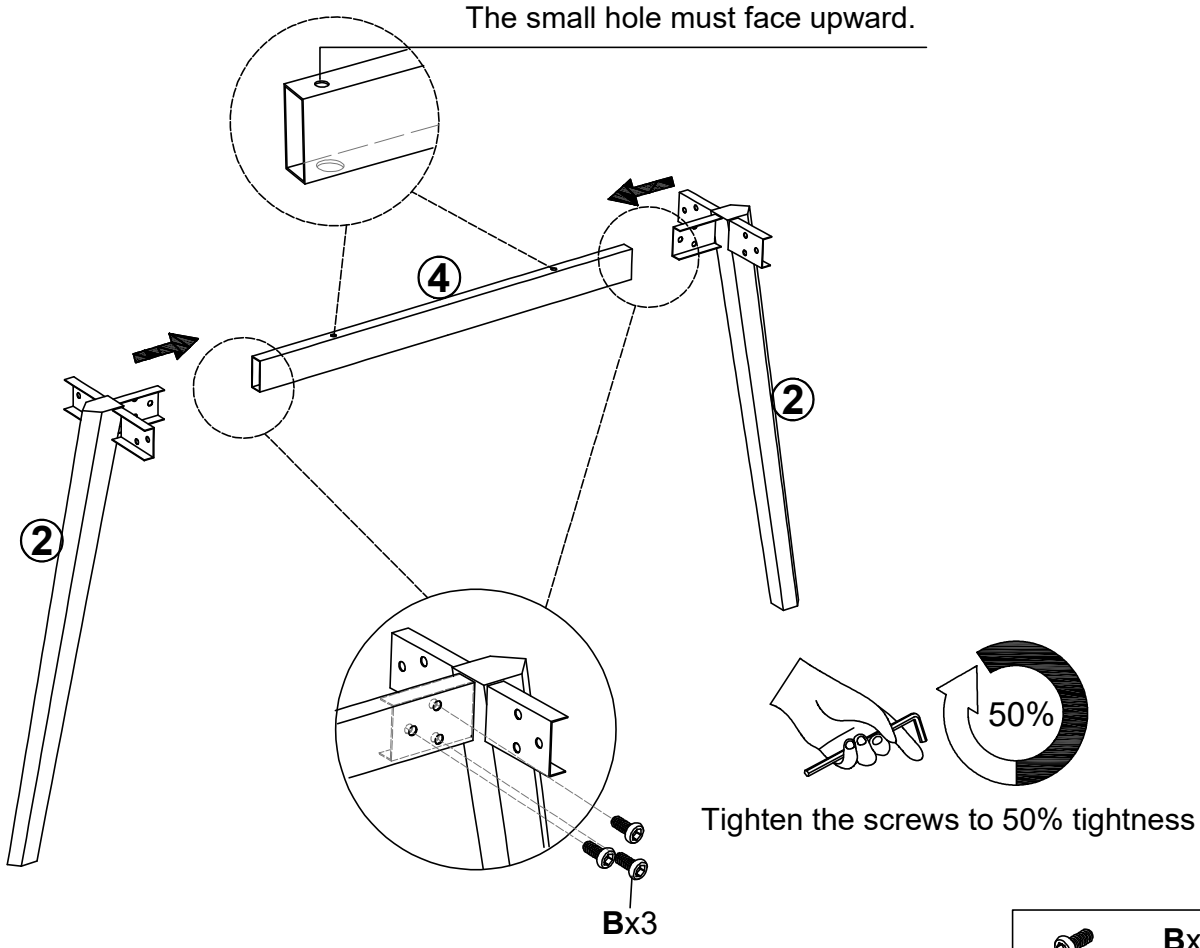
The small hole must face upward.
4
2
2
50%
Tighten the screws to 50% tightness
Bx3

Bx6


3

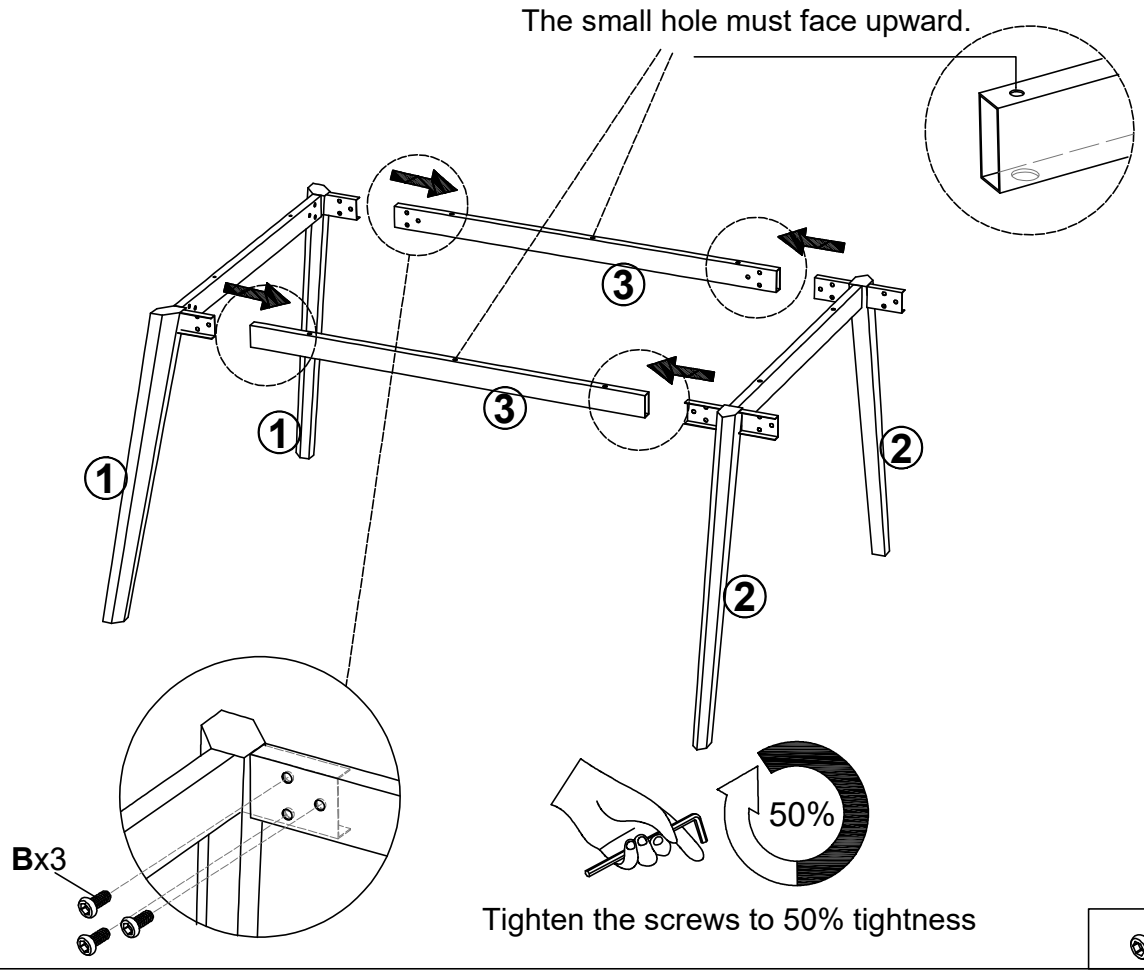

Tighten the screws to 50% tightness

Bx12


4

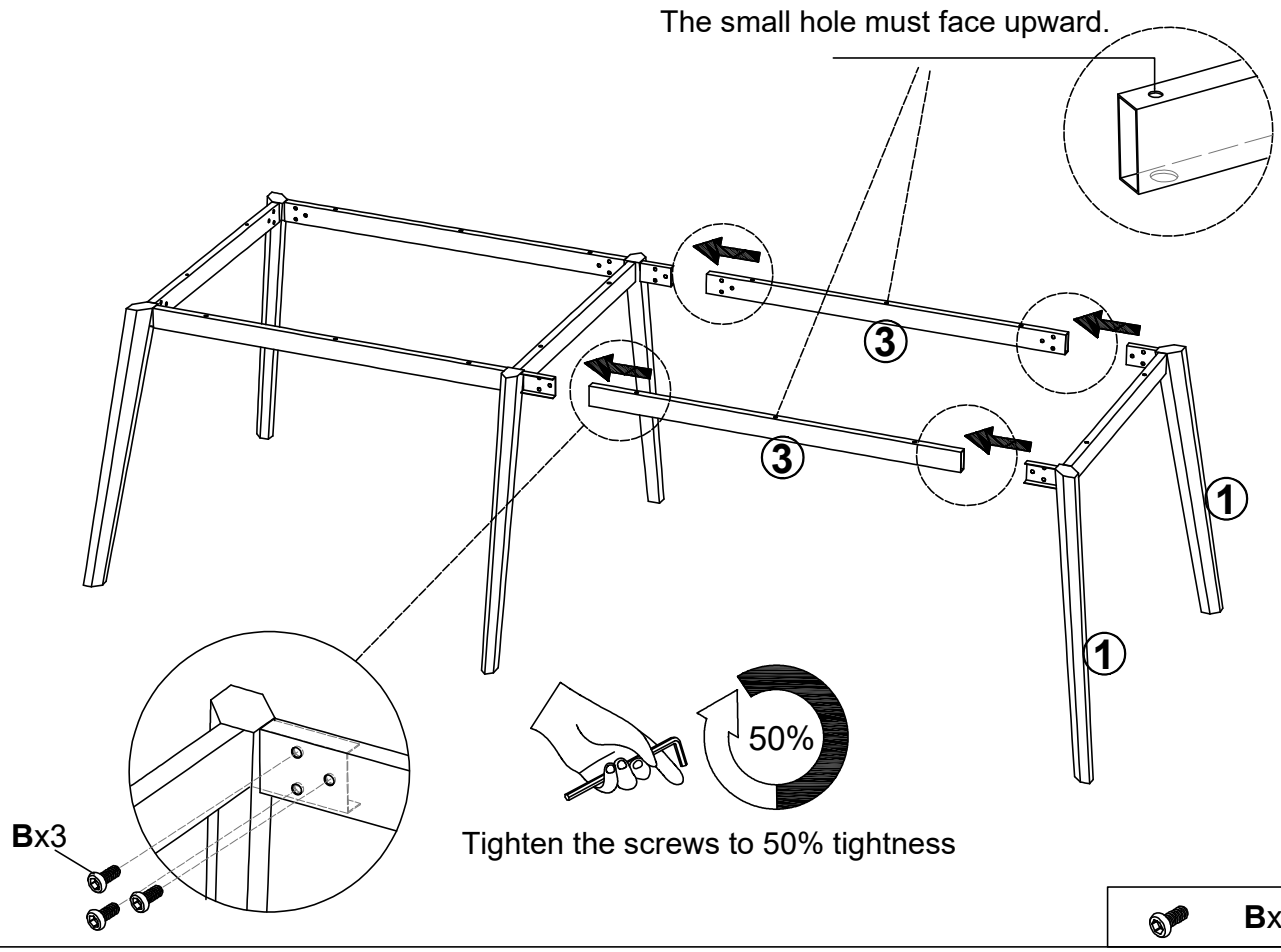


Tighten the screws to 50% tightness

Bx12


5

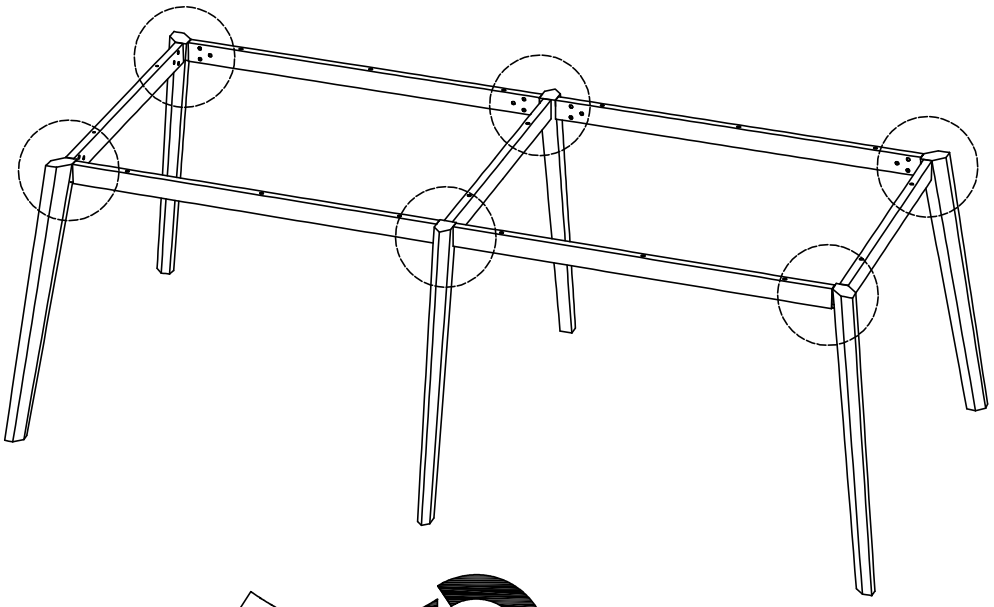


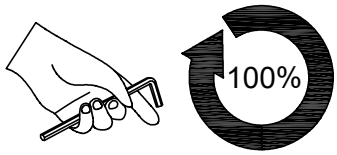


Tighten the screws to 100% tightness

6

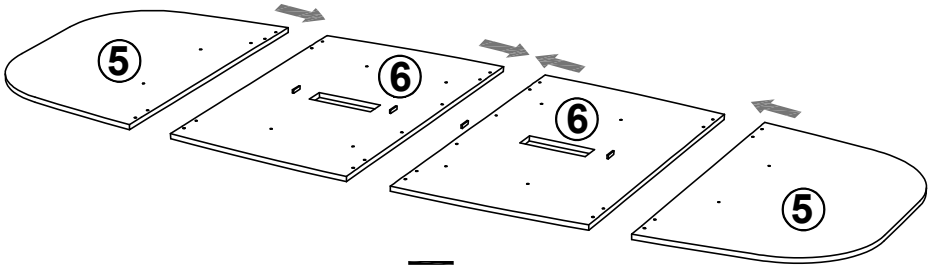


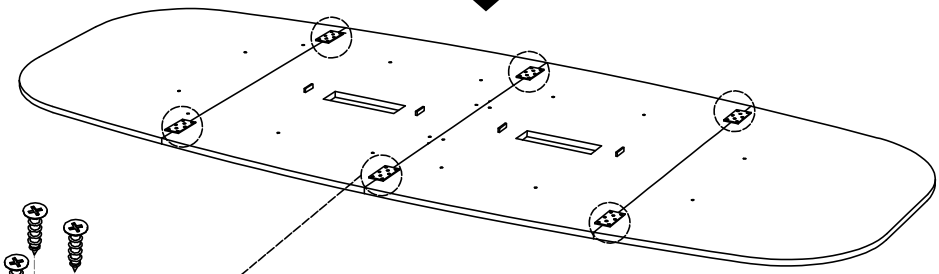

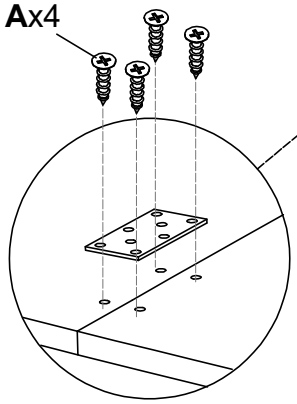


Ax24	Cx6

7

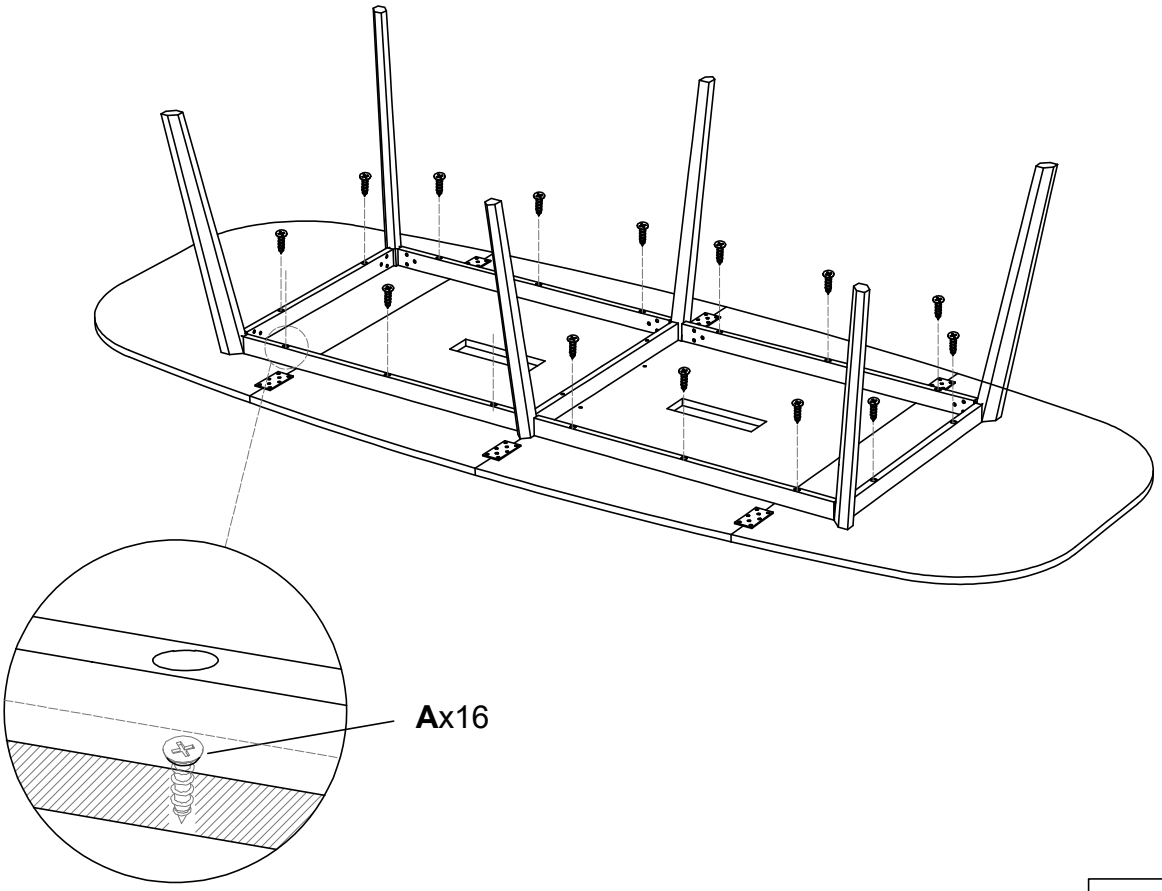


Ax16


8

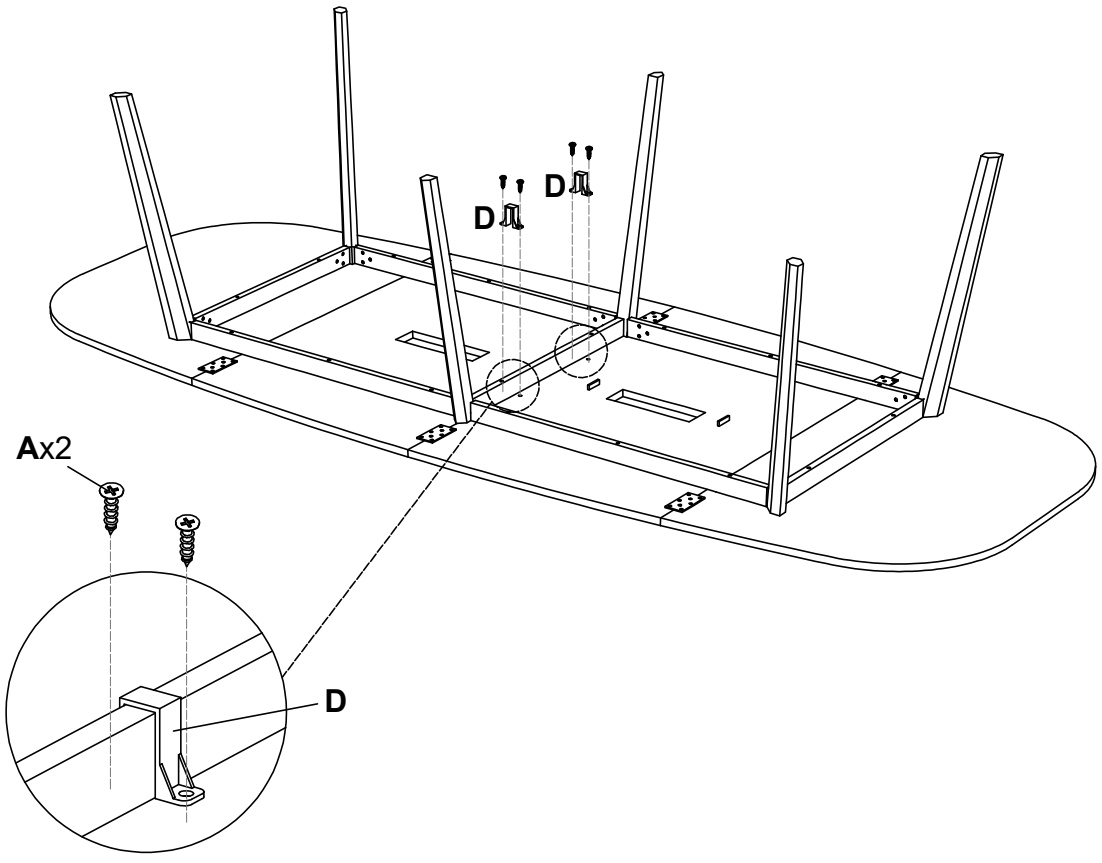


Ax4 Dx2


9

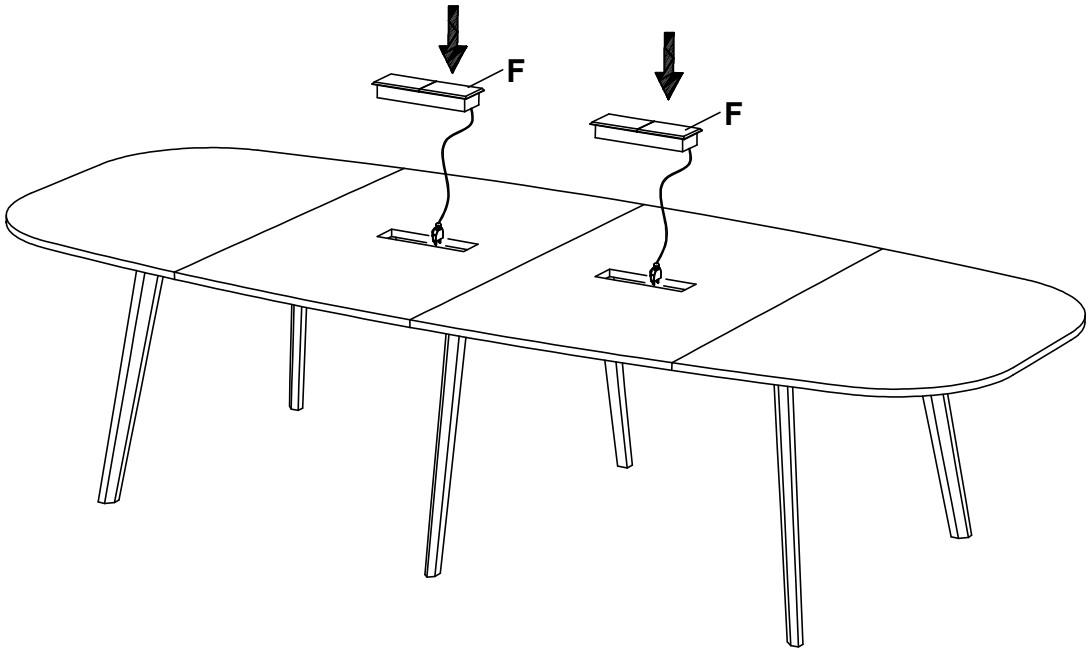

 Fx2

10

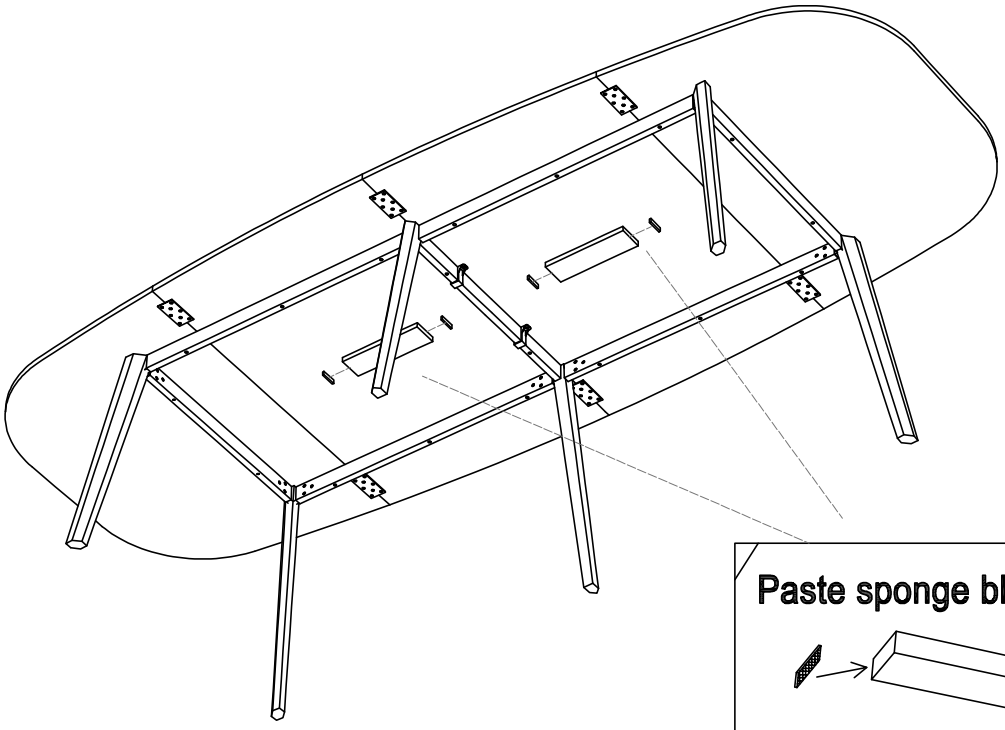

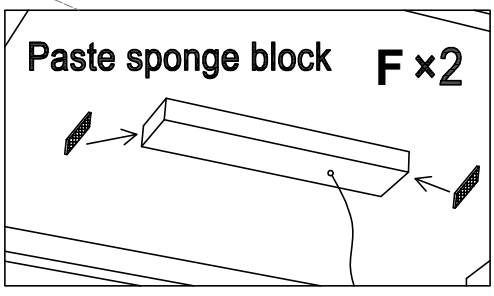

 Fx4