


Installation Instruction

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.




HARDWARE LIST

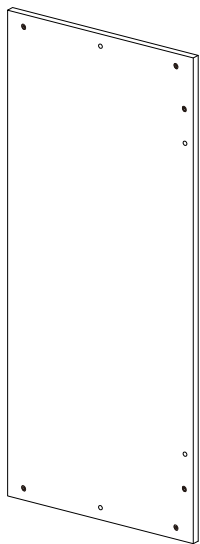


①
1PC



②
1PC




③
1PC

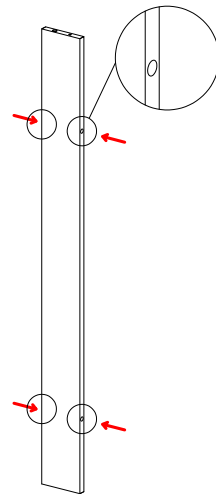


④
1PC




⑤
1PC

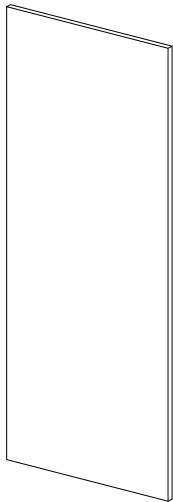


⑥
1PC

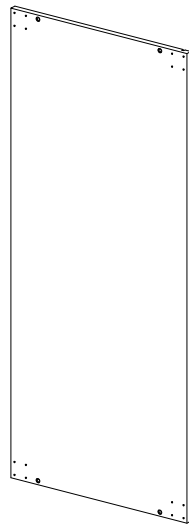


⑦
1PC

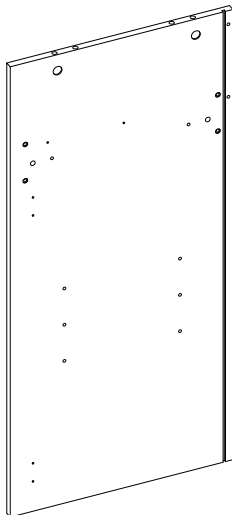


⑧
1PC

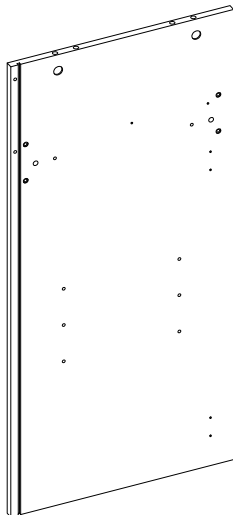


⑨
1PC

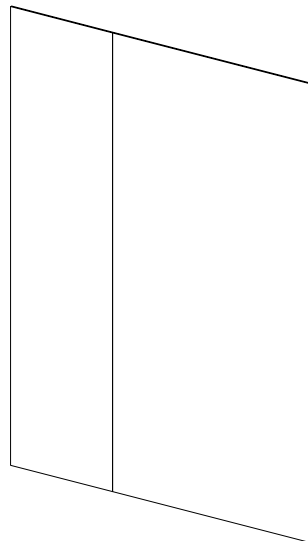

⑩
1PC

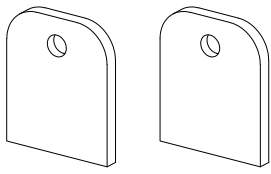

11
2PCS



12
1PC




13
1PC



14
1PC



15
2PCS



16
1PC



17
1PC




18
1PC



19
1PC






20
1PC

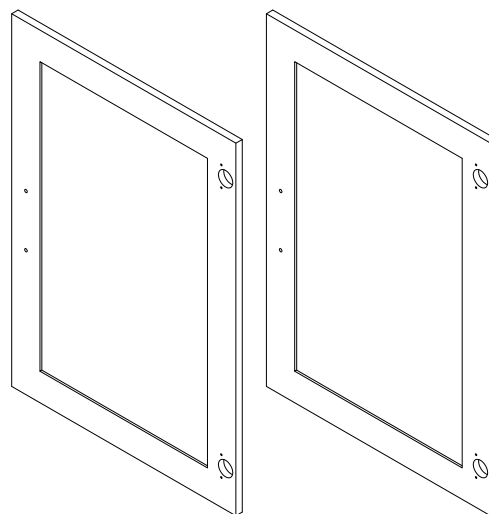







21
2PCS

PARTA LIST

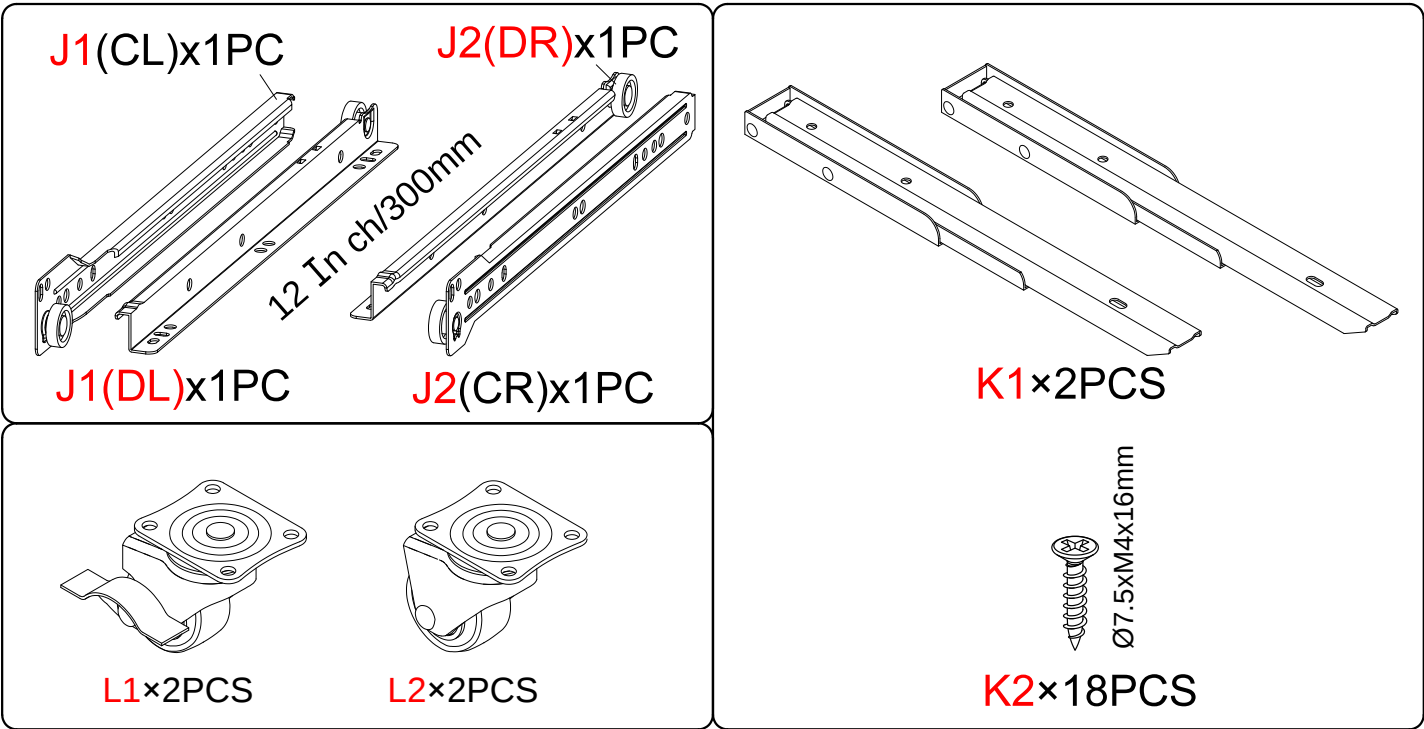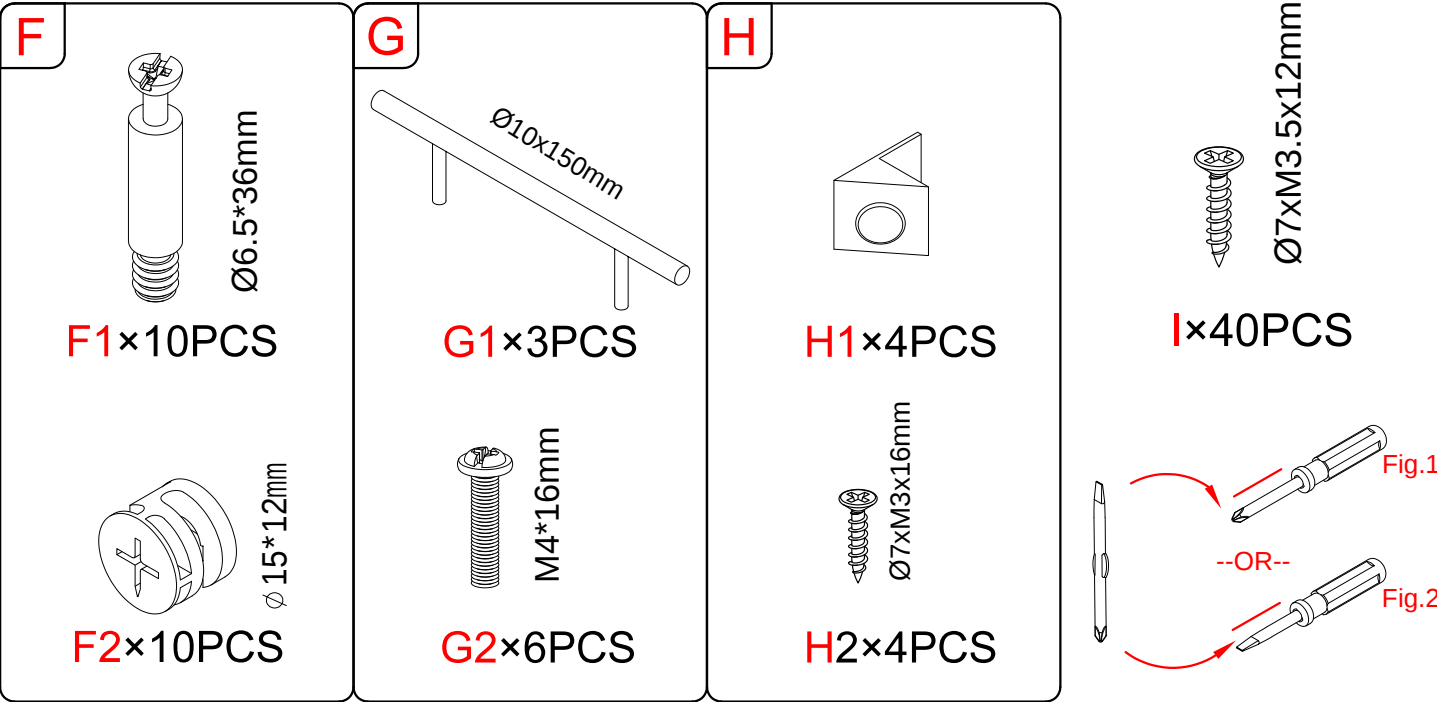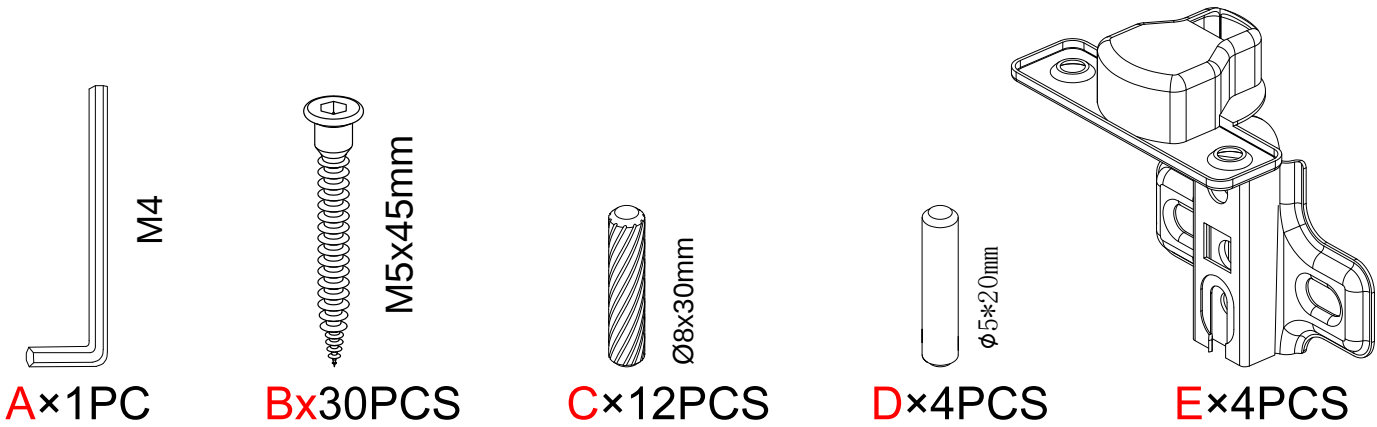


1

- I×4PCS
- J1(CL)x1PC
- J2(CR)x1PC
- 8×1PC
- 9×1PC

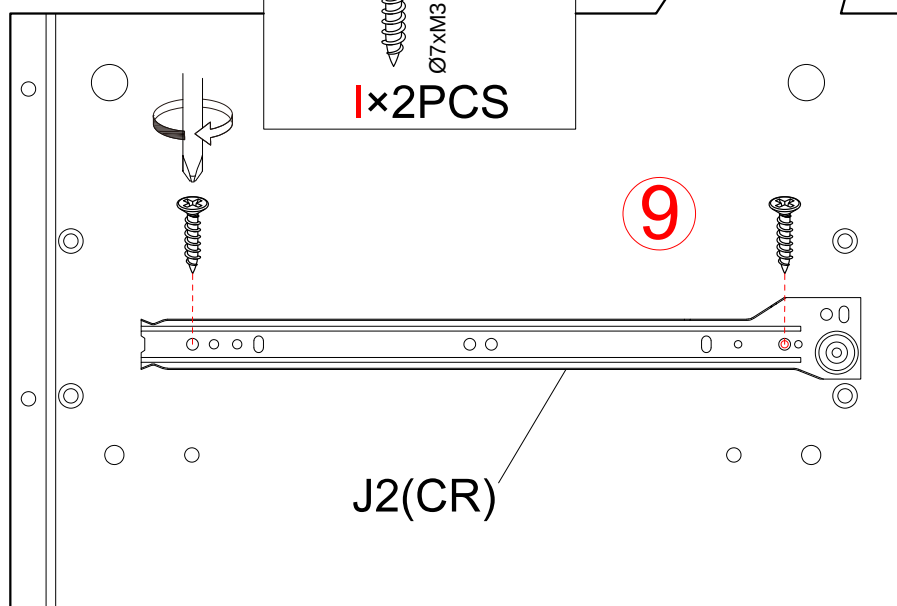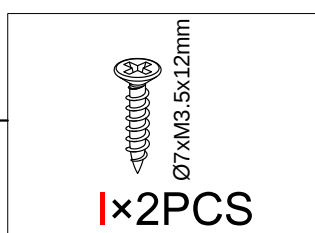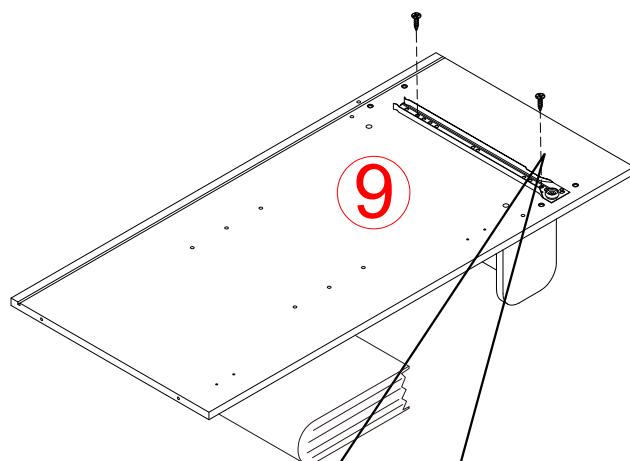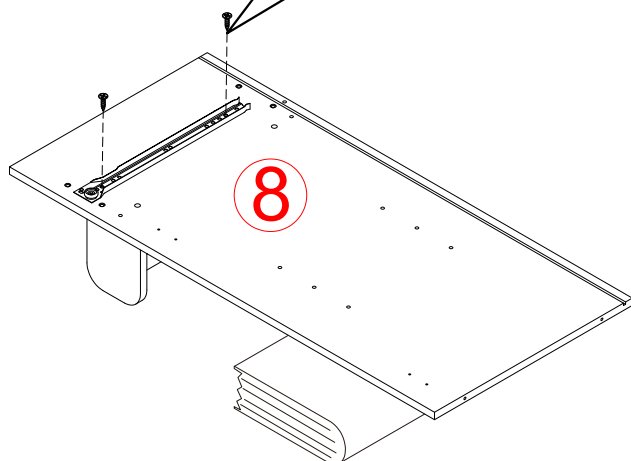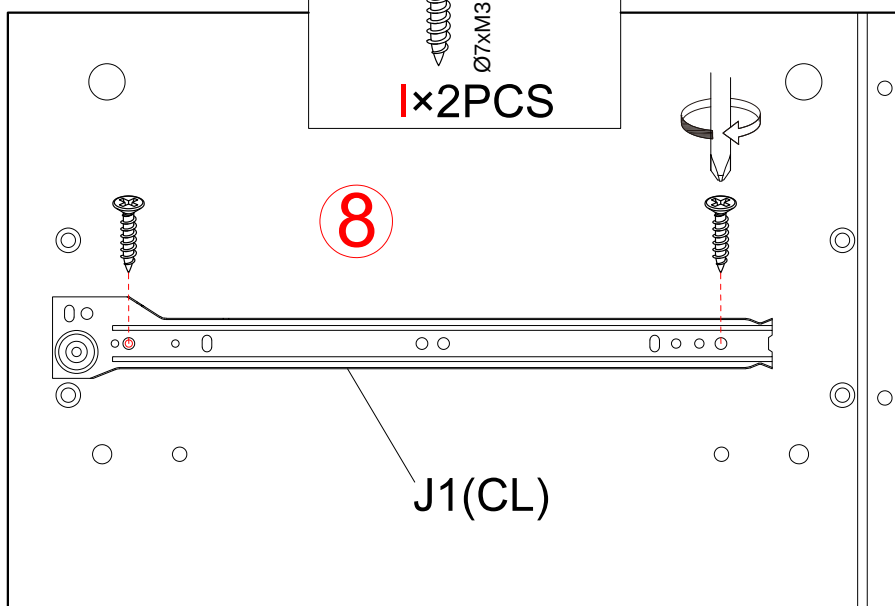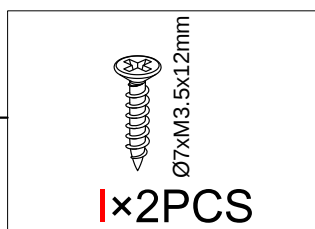

2


- I×16PCS
- L1×2PCS
- L2×2PCS
- ⑦×1PC

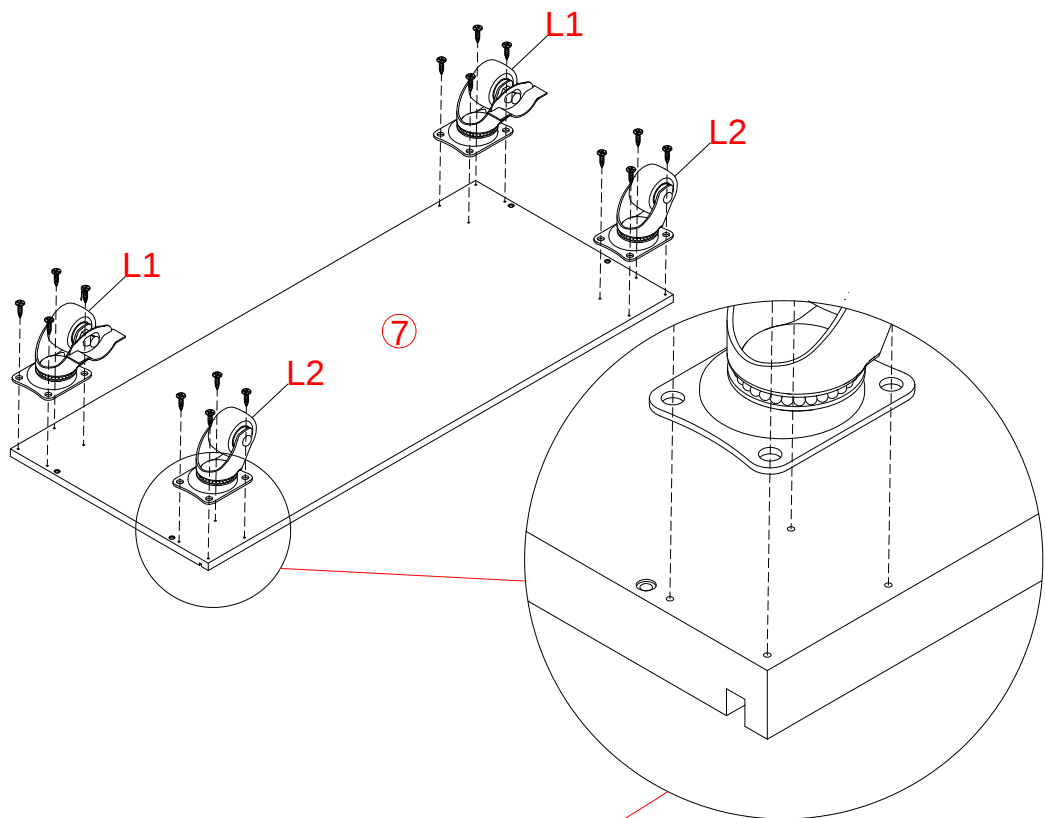

Note: "L2" wheels are mounted on one side of the slot

3


- B×2PCS
- ⑦×1PC
- ⑧×1PC

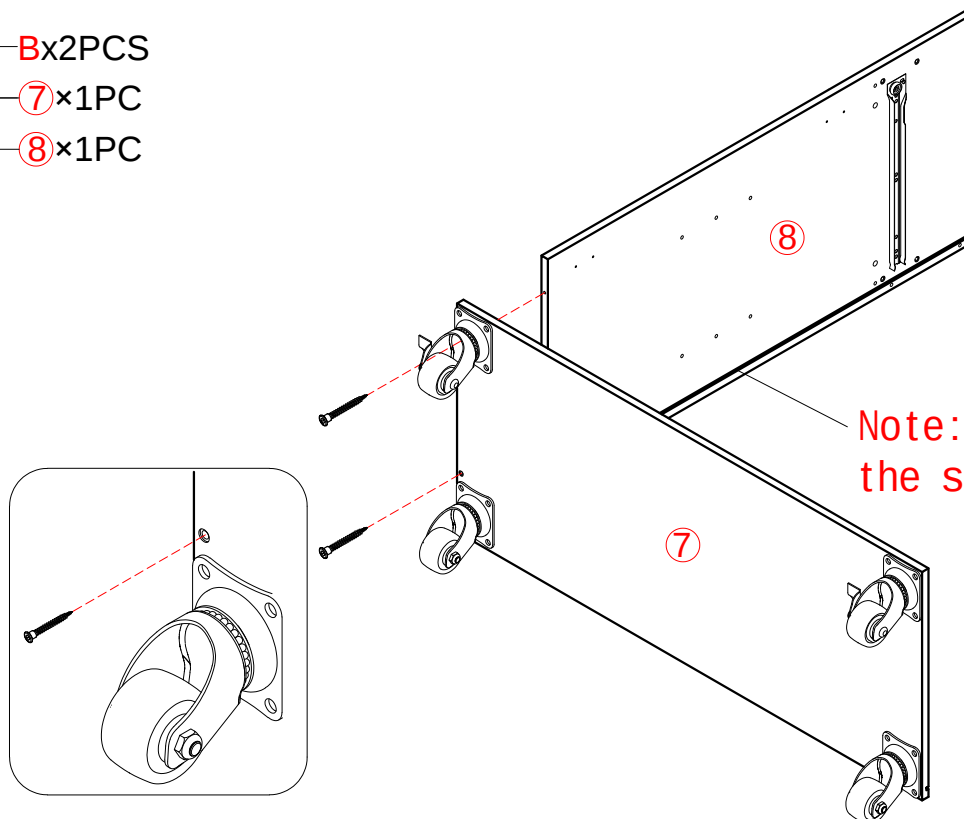

Note: Be careful to align the slots of the two boards

4


- Bx2PCS
- Cx2PCS
- ④x1PC
- ⑤x1PC

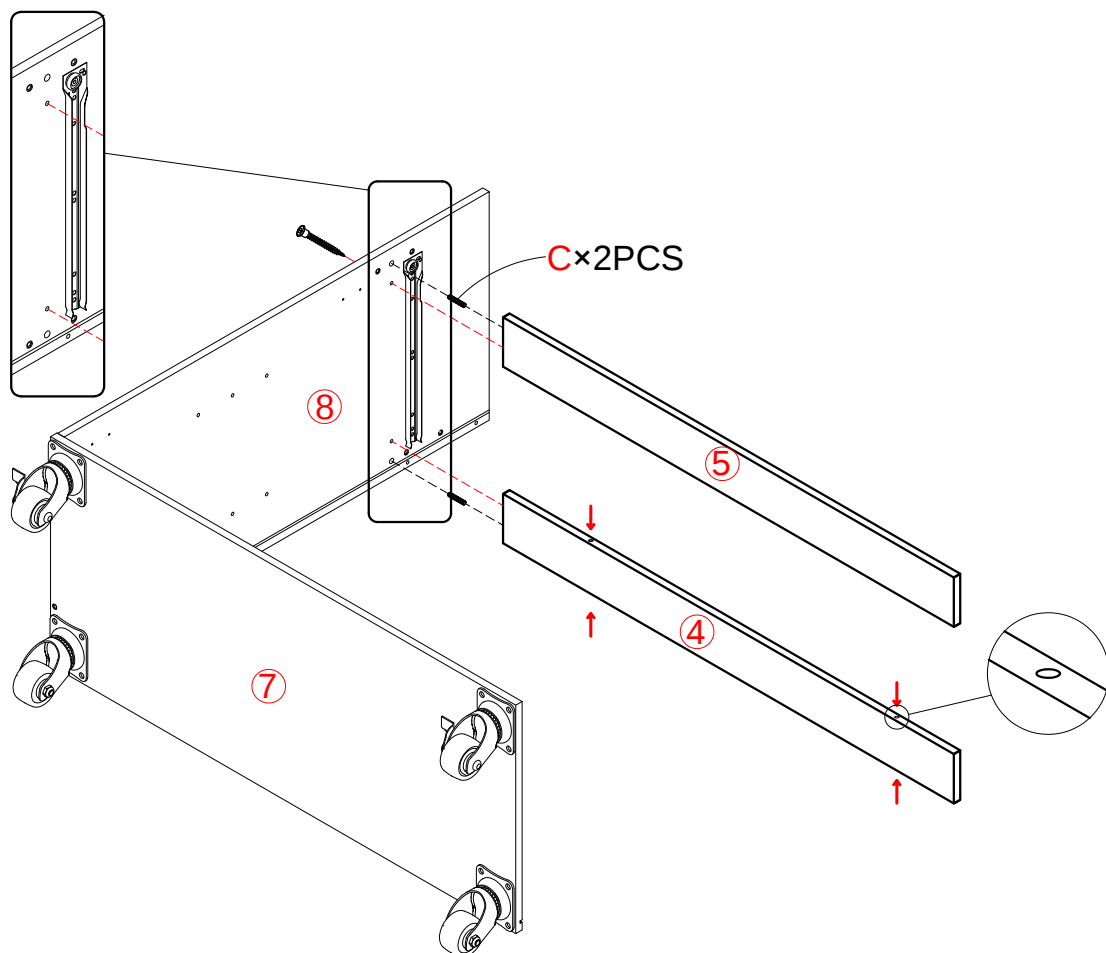

Note: Be careful to align the slots of the two boards


5

- Bx4PCS
- Cx2PCS
- ⑨x1PC

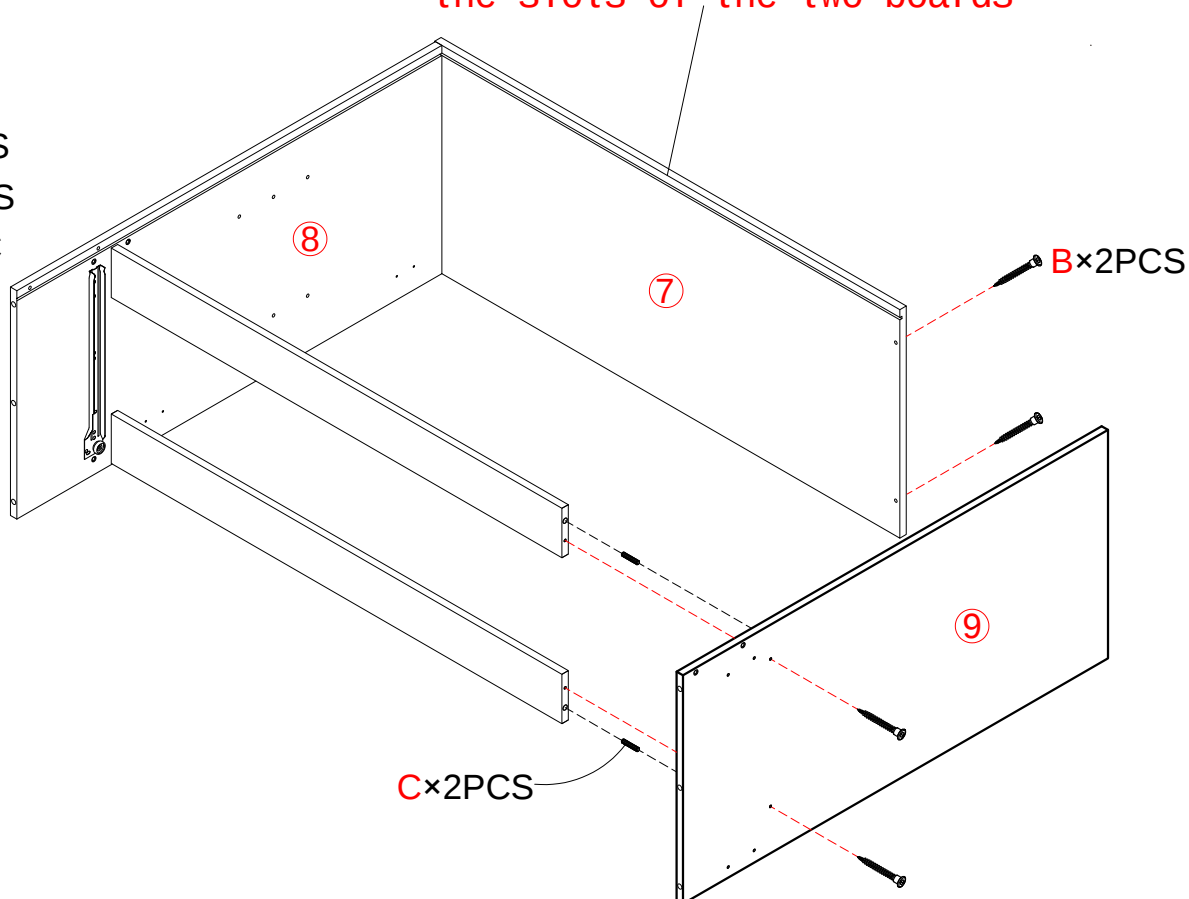


6

- Bx4PCS
- ⑧×1PC
- ⑪×2PCS
- ⑮×1PC

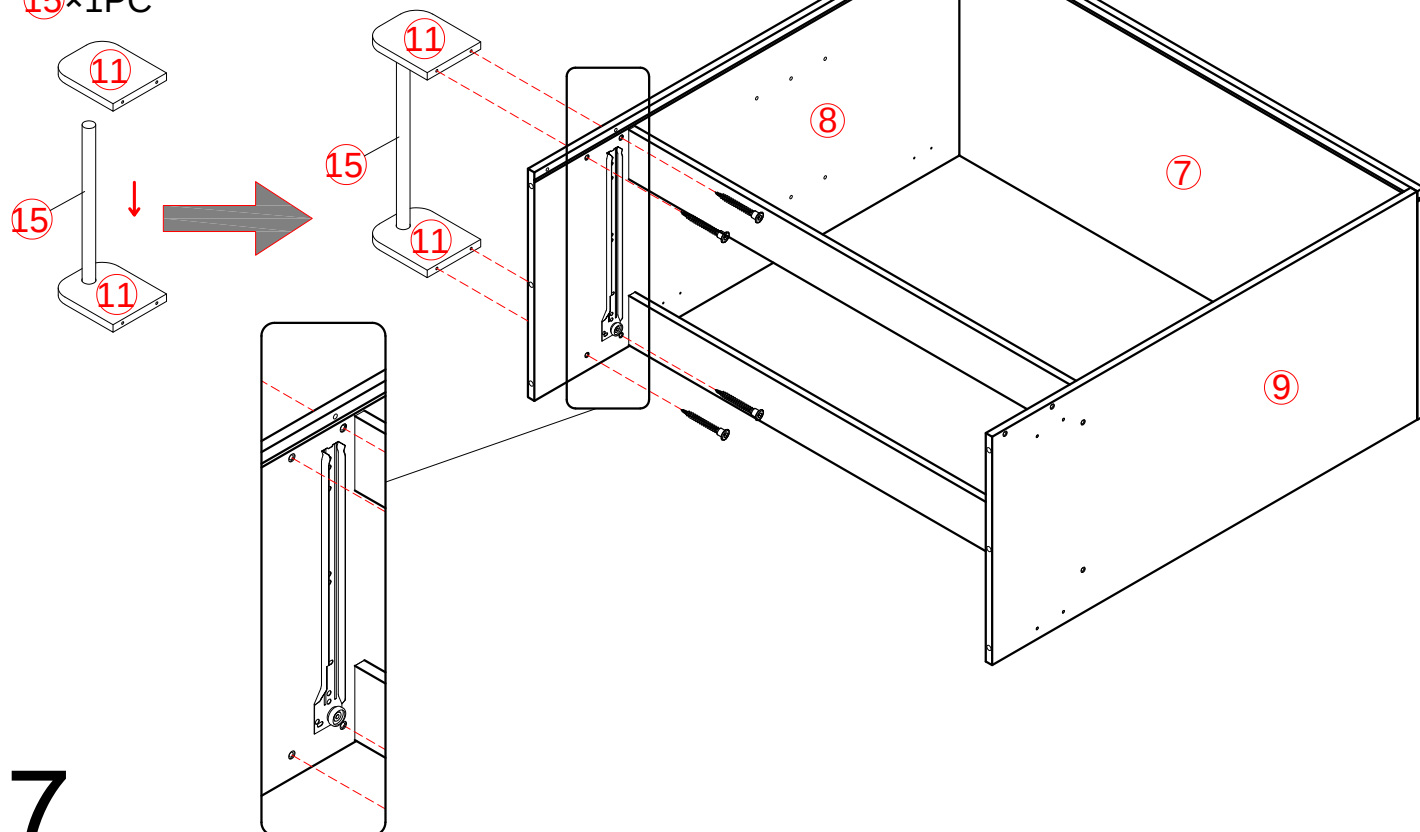


7

- Bx4PCS
- ⑫×1PC
- ⑬×1PC
- ⑭×1PC
- ⑮×1PC

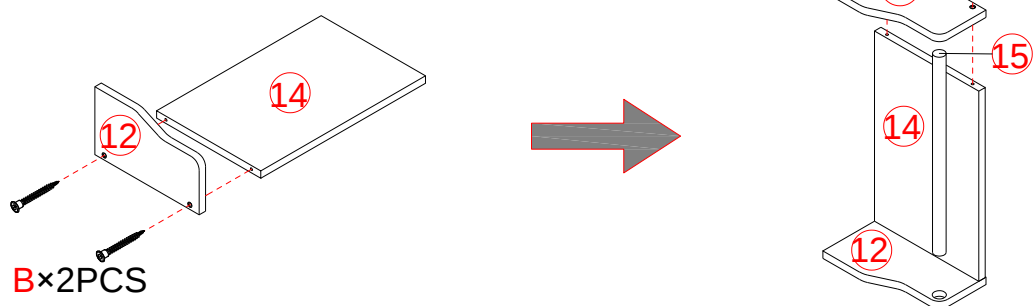

8


Bx4PCS

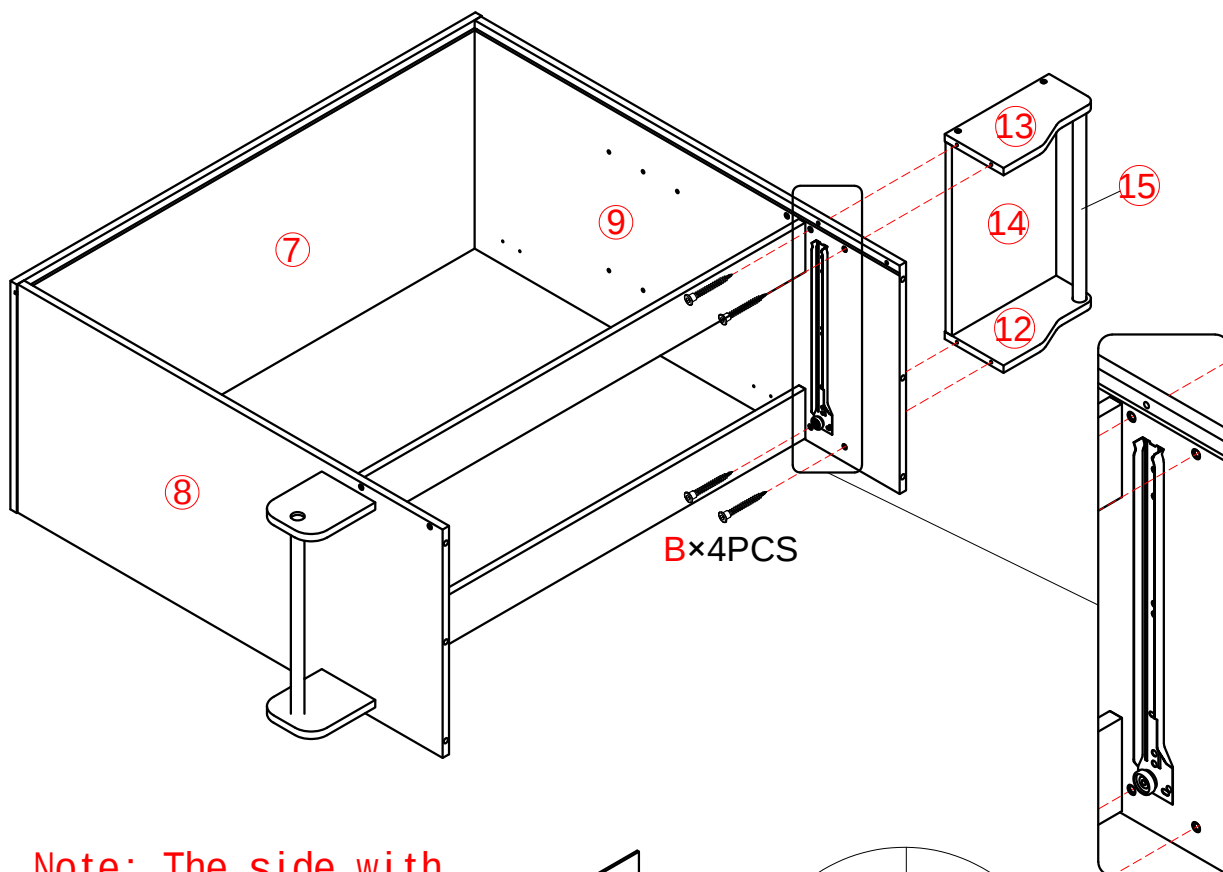

9


Note: The side with holes is on top

10x1PC

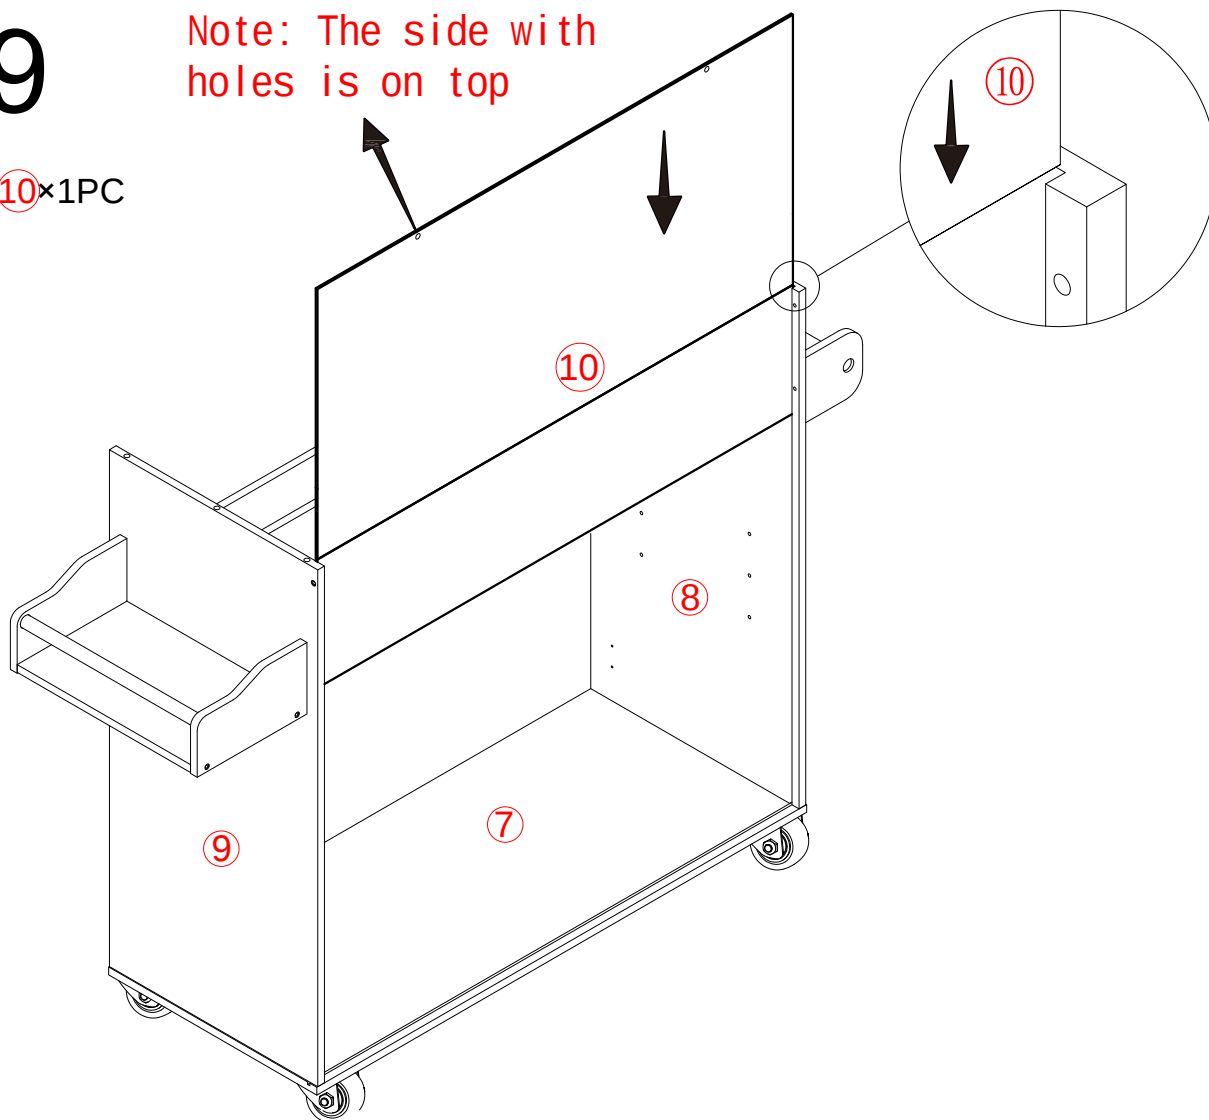


10

K1x2PCS
K2x12PCS
③x1PC

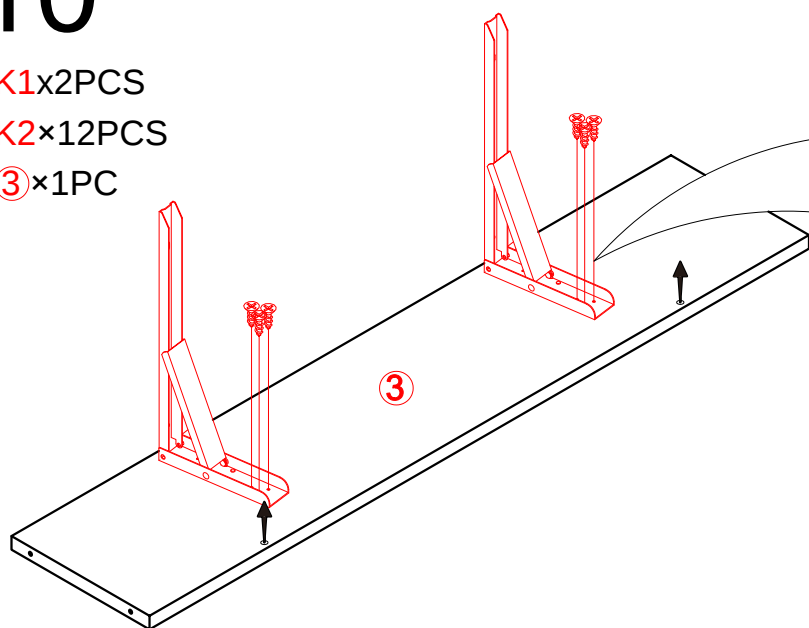

K2x6PCS

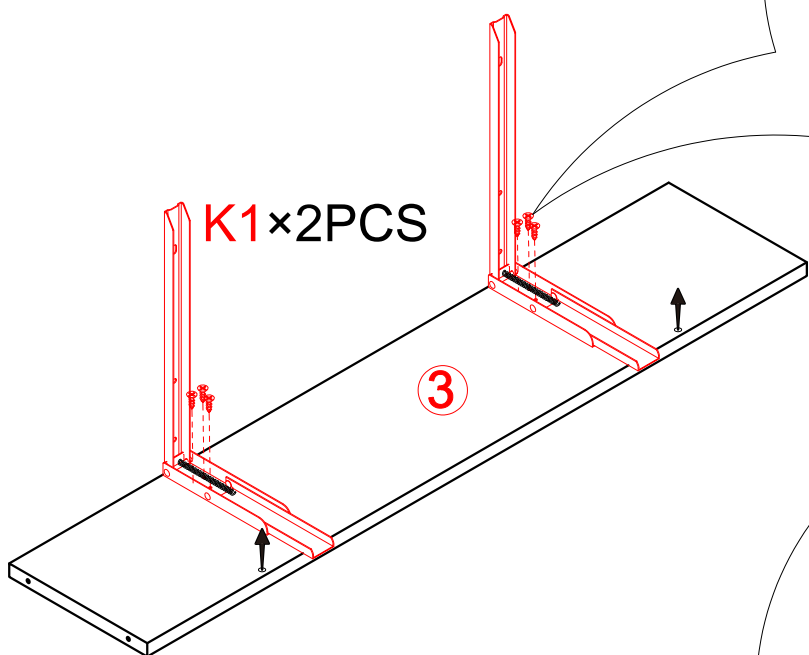


K1x2PCS

K2x6PCS

⚠ Attention

When installing the "K2" screw, wiggle the spring slightly and then install the screw.

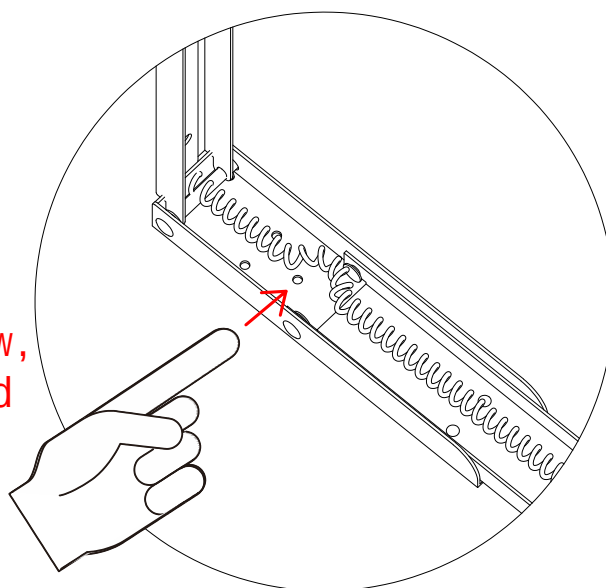

11






Attention


K2×12PCS


②×1PC

Note: Press and hold with your thumb.

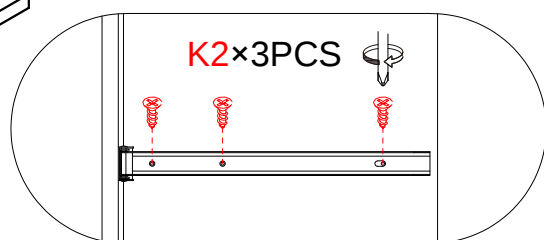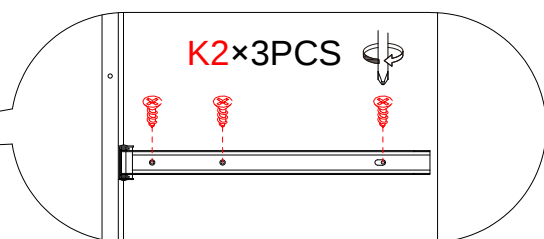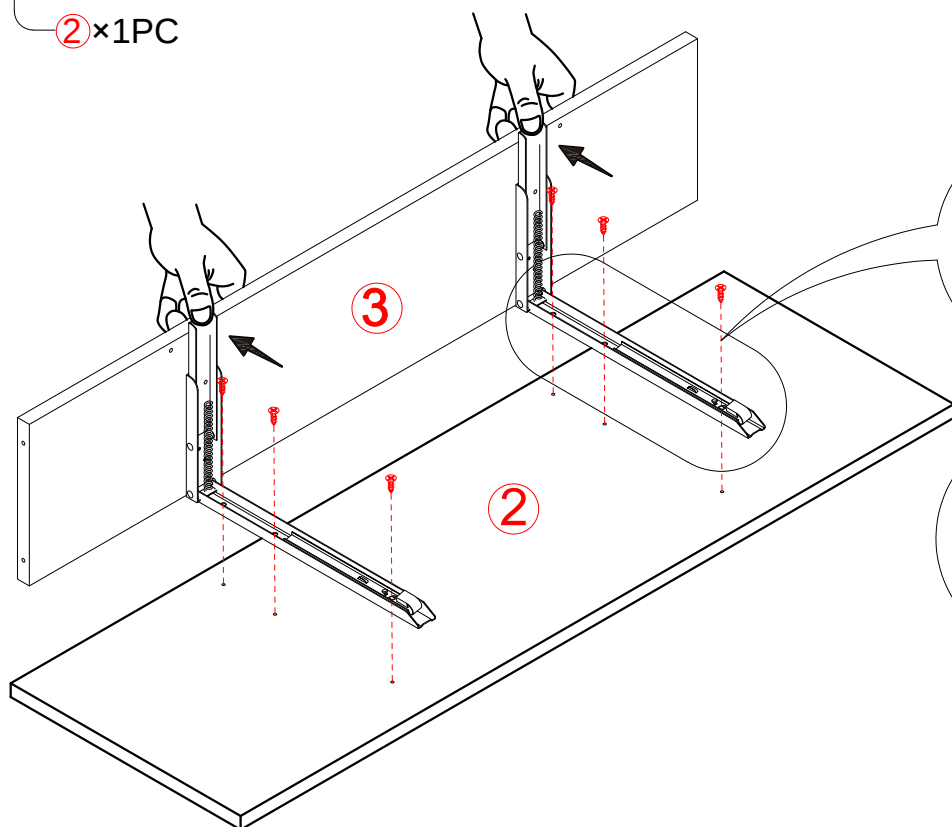


Note: Pinch the support bracket and slowly put it into the card slot.

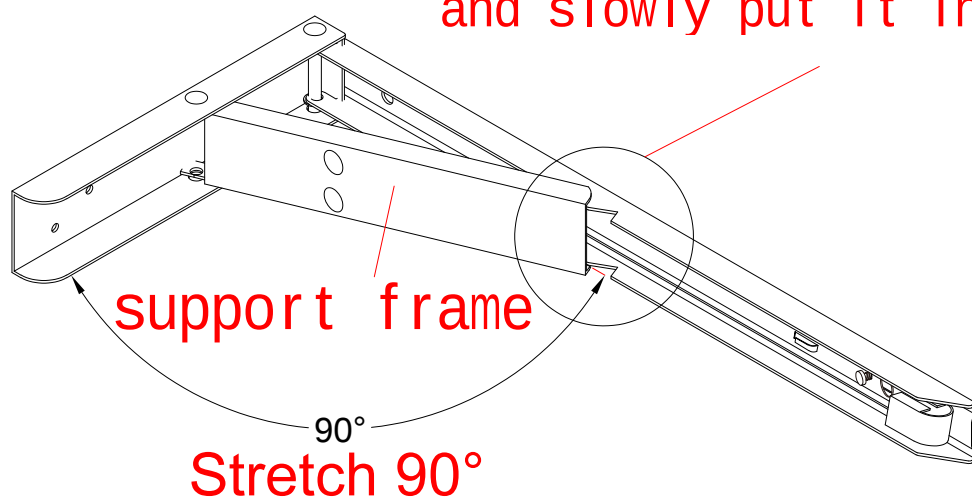

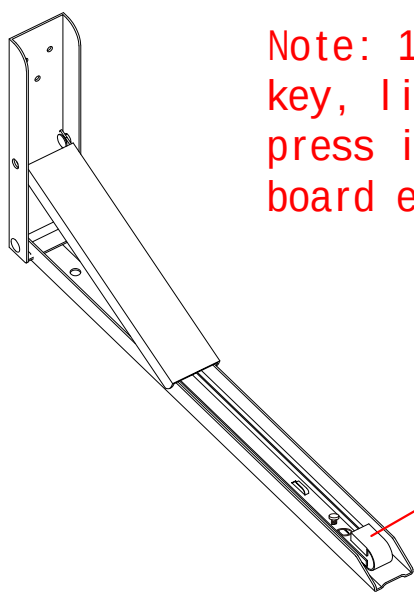


Note: 1. While holding down the A key, lift it up slightly, then press it down to make the No. 2 board extend and retract

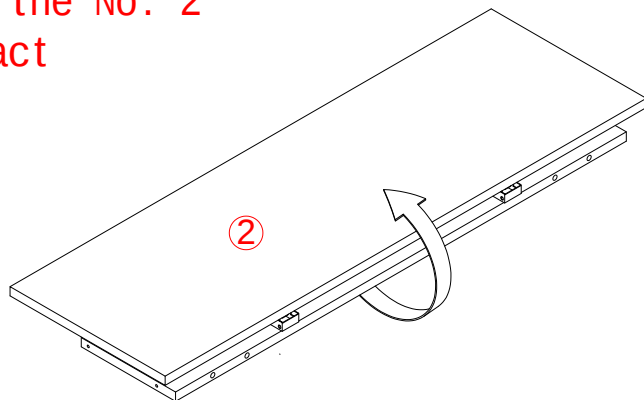


12

Bx4PCS
②×1PC
③×1PC

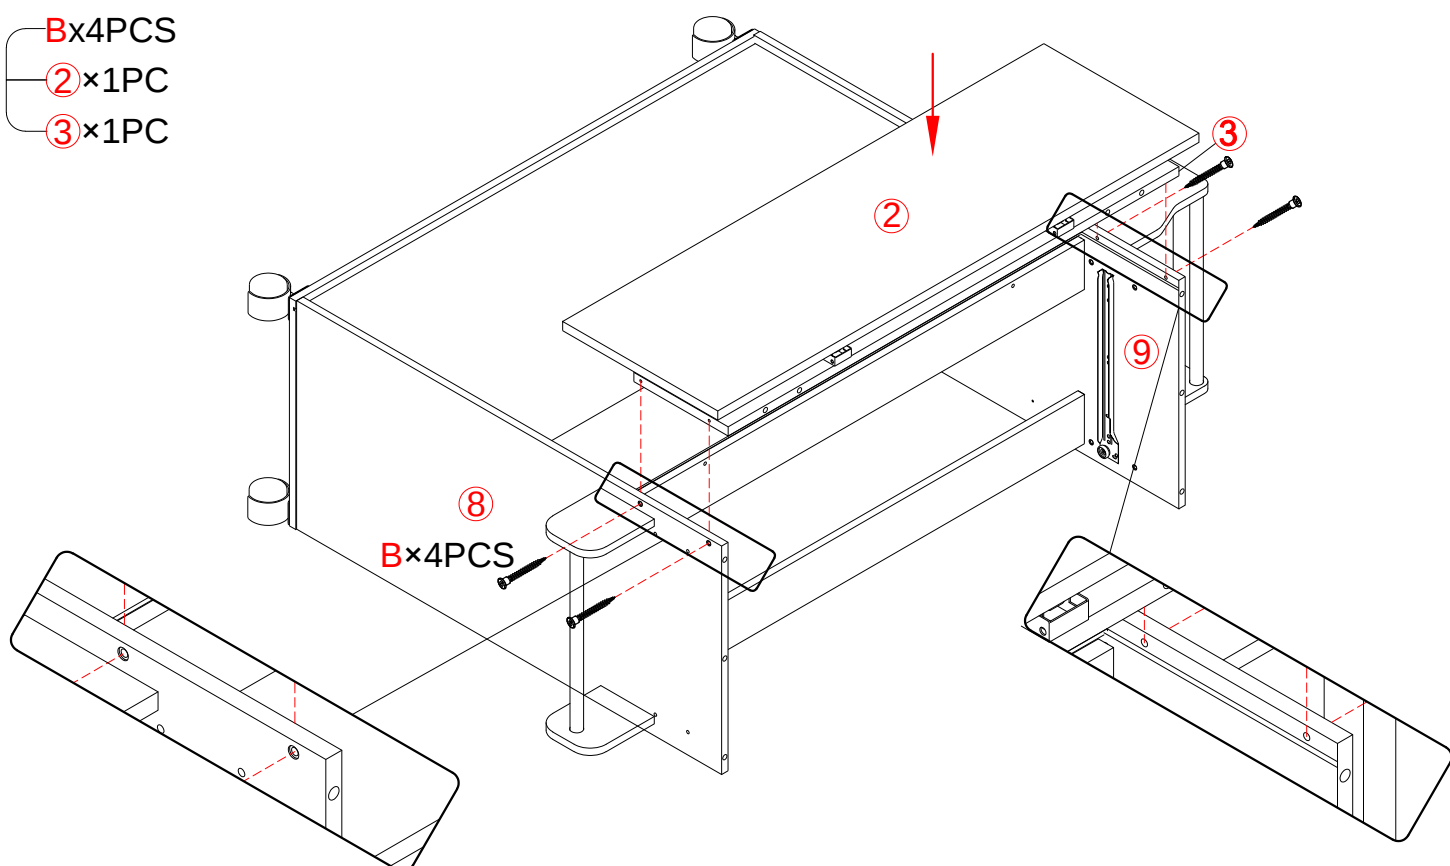

13


B×2PCS

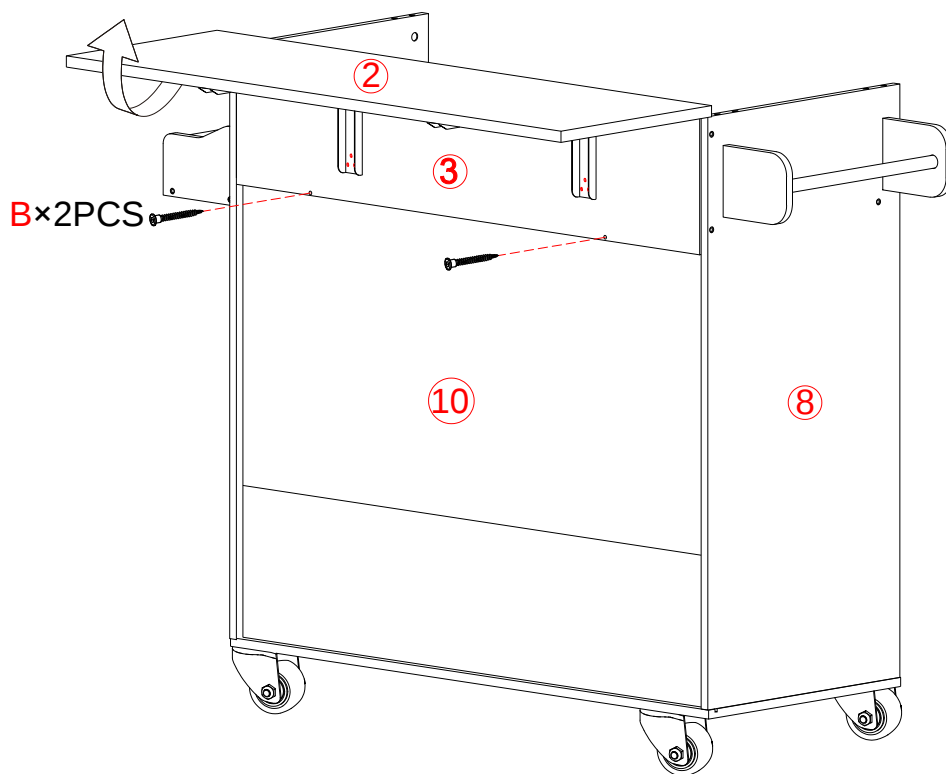


14

H1×4PCS



H2×4PCS

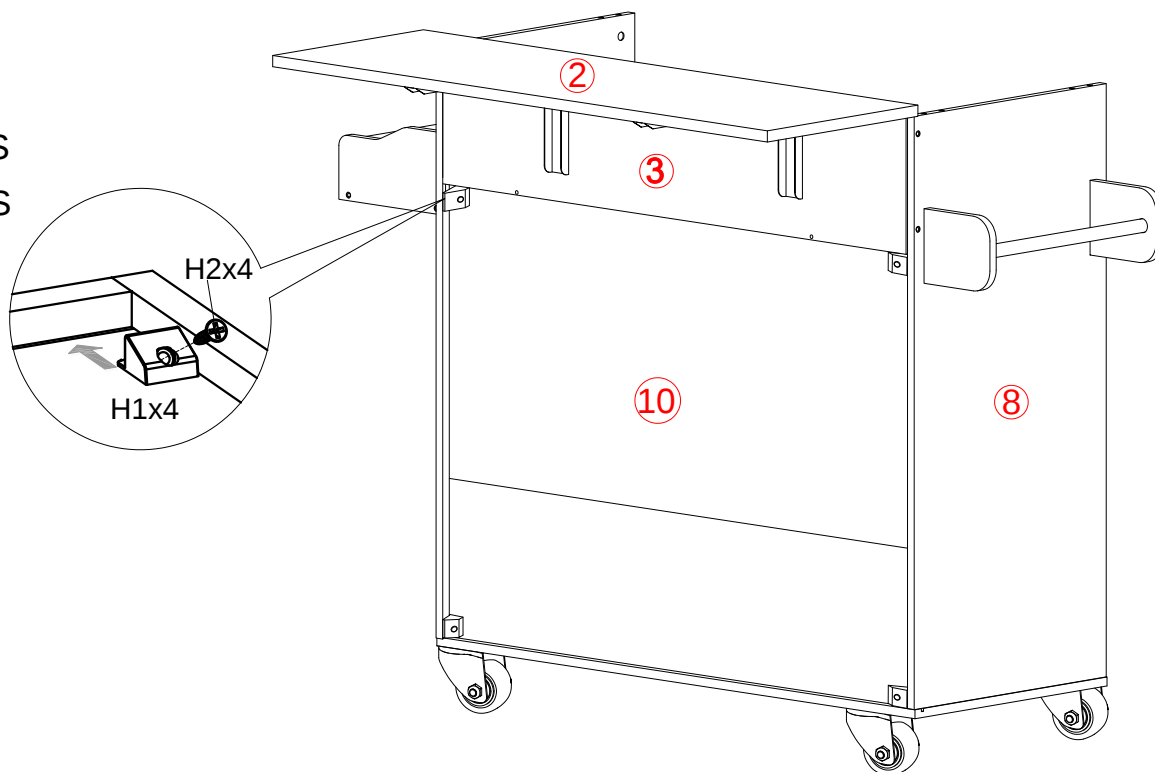

Note: First, insert the thin edges of the fitting "H1" into the four corners of the rear panel, then tighten them firmly with the screws "H2".

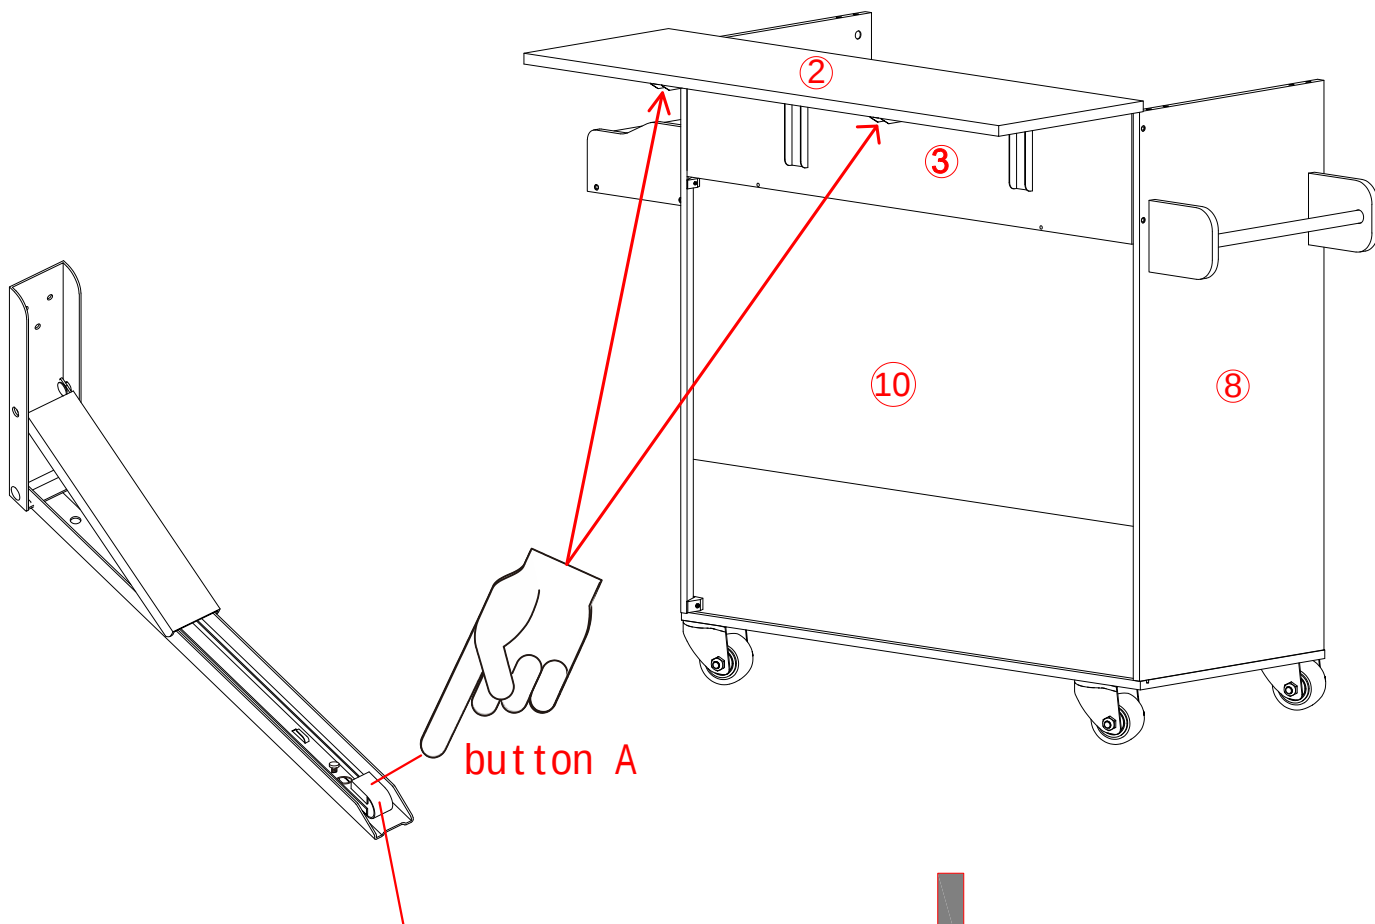


Note: 1. While holding down the A key, lift it up slightly, then press it down to make the No. 2 board extend and retract

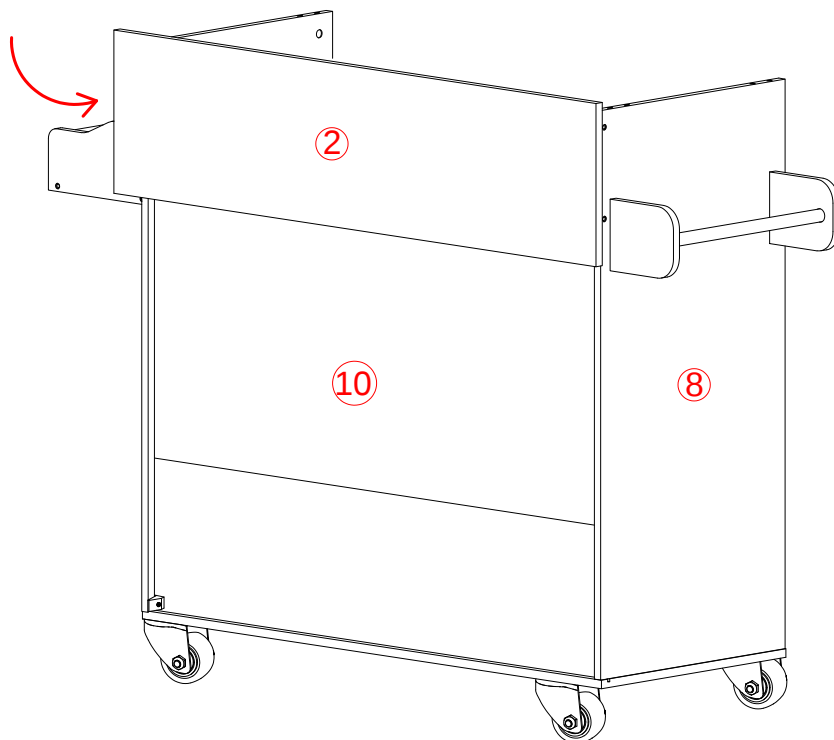

15


C×6PCS

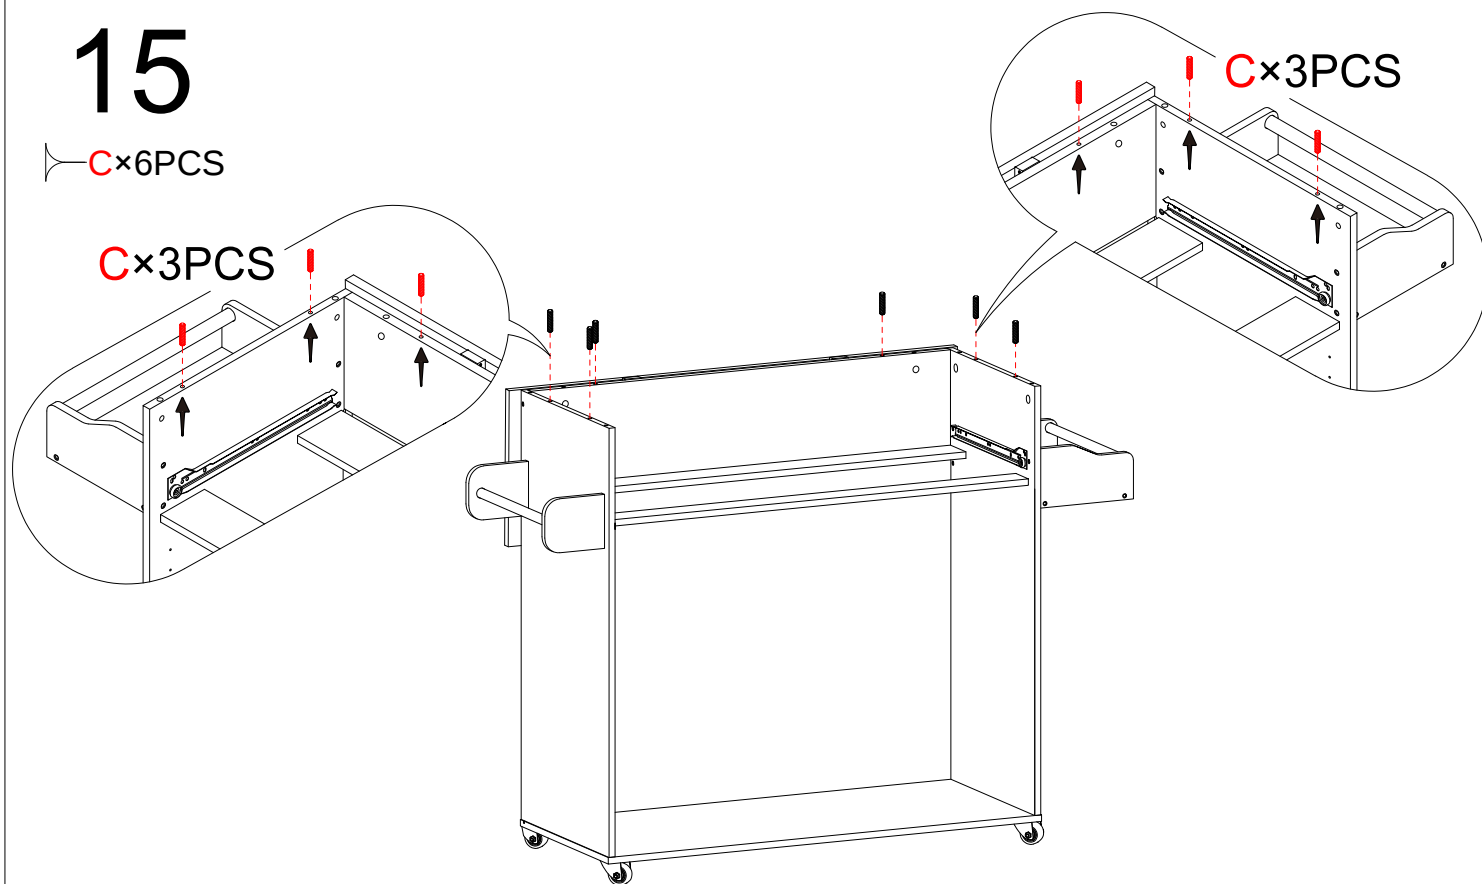

16


F1×6PCS

①×1PC

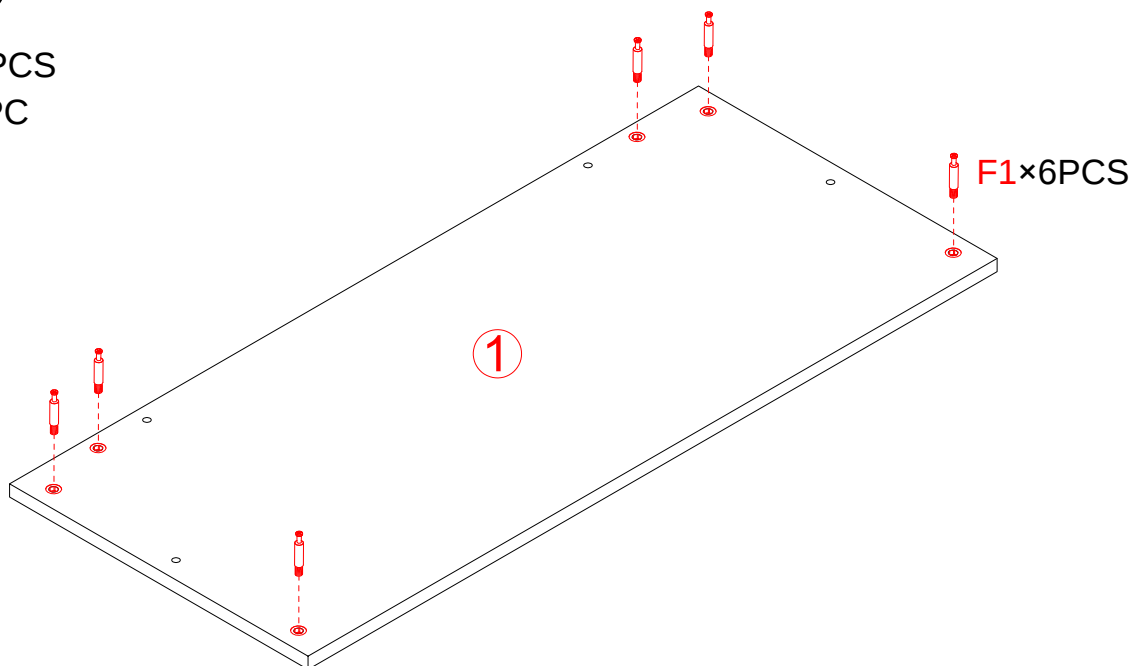


17

F2×6PCS
①×1PC

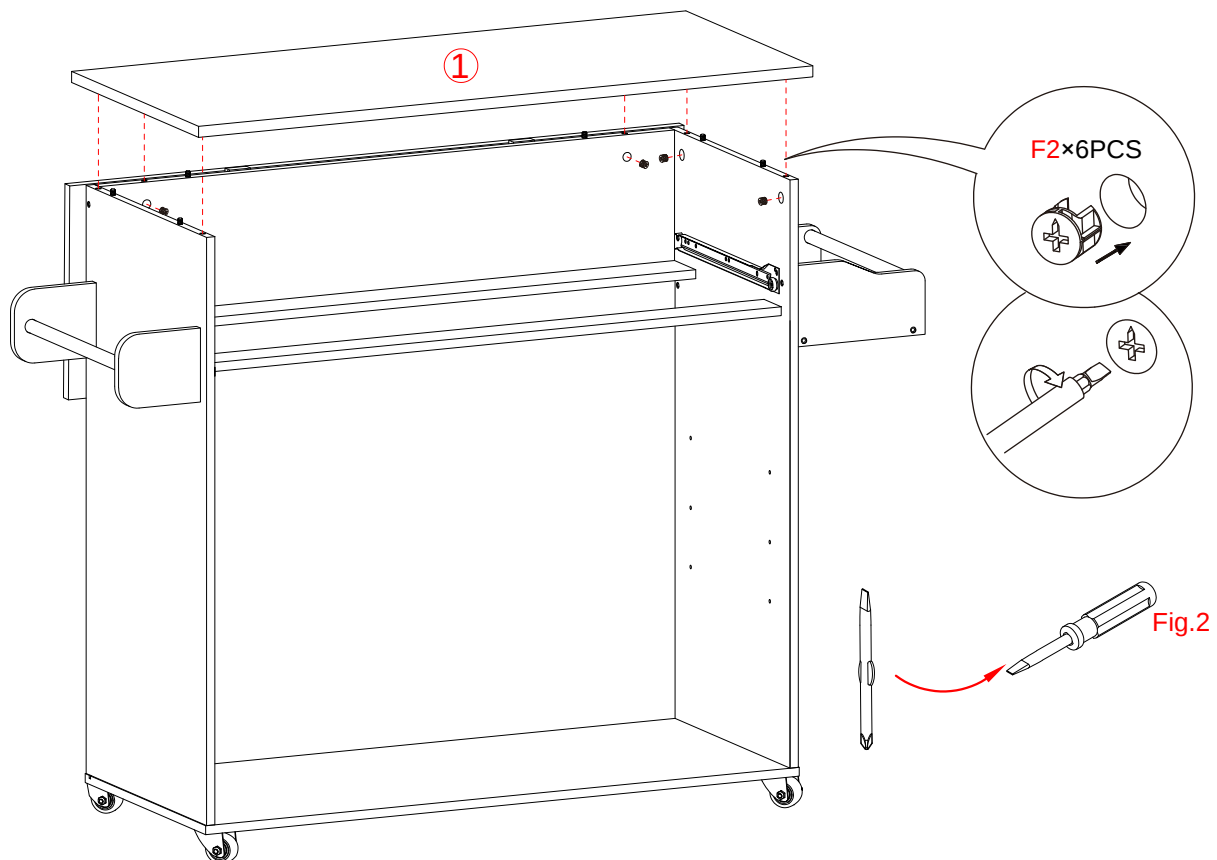

18

D×4PCS
⑥×1PC

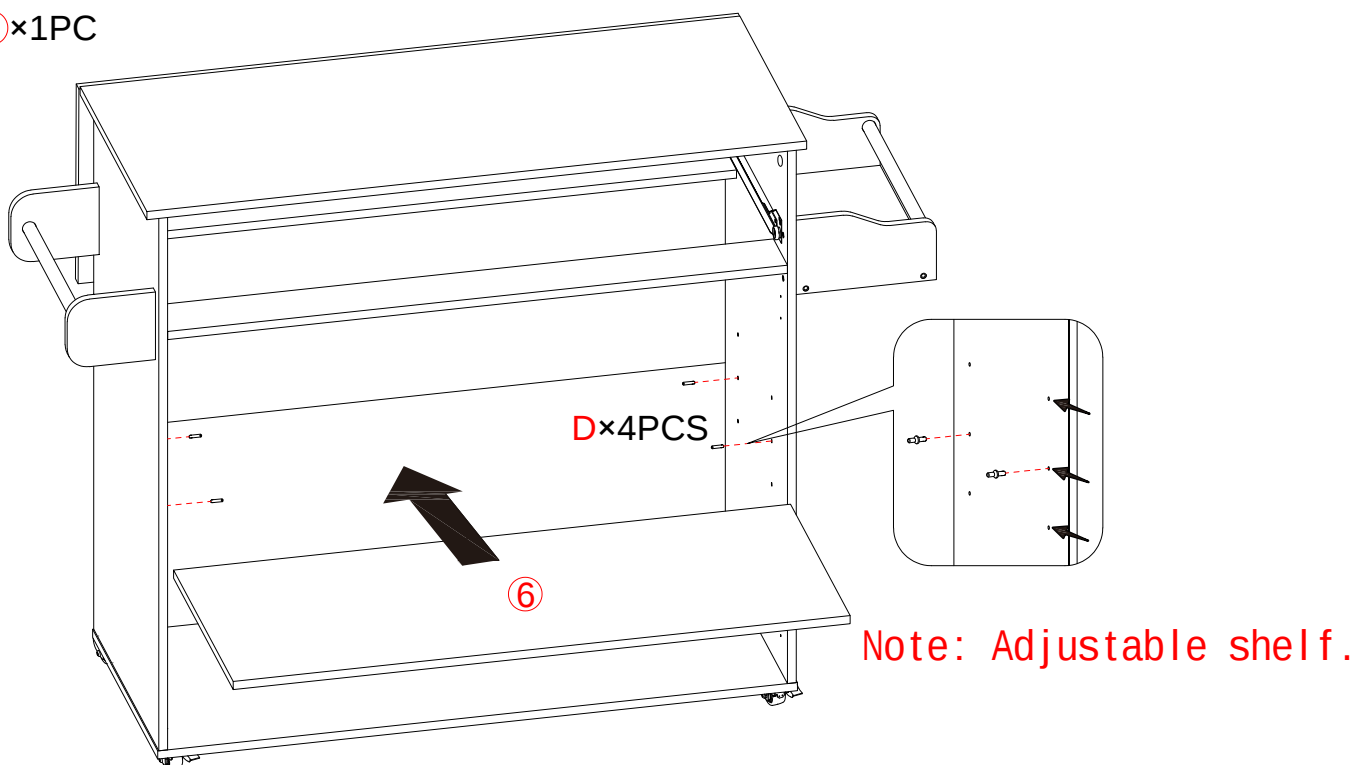

19


E×4PCS

I×8PCS

G1×2PC



G2×4PCS

21×2PC

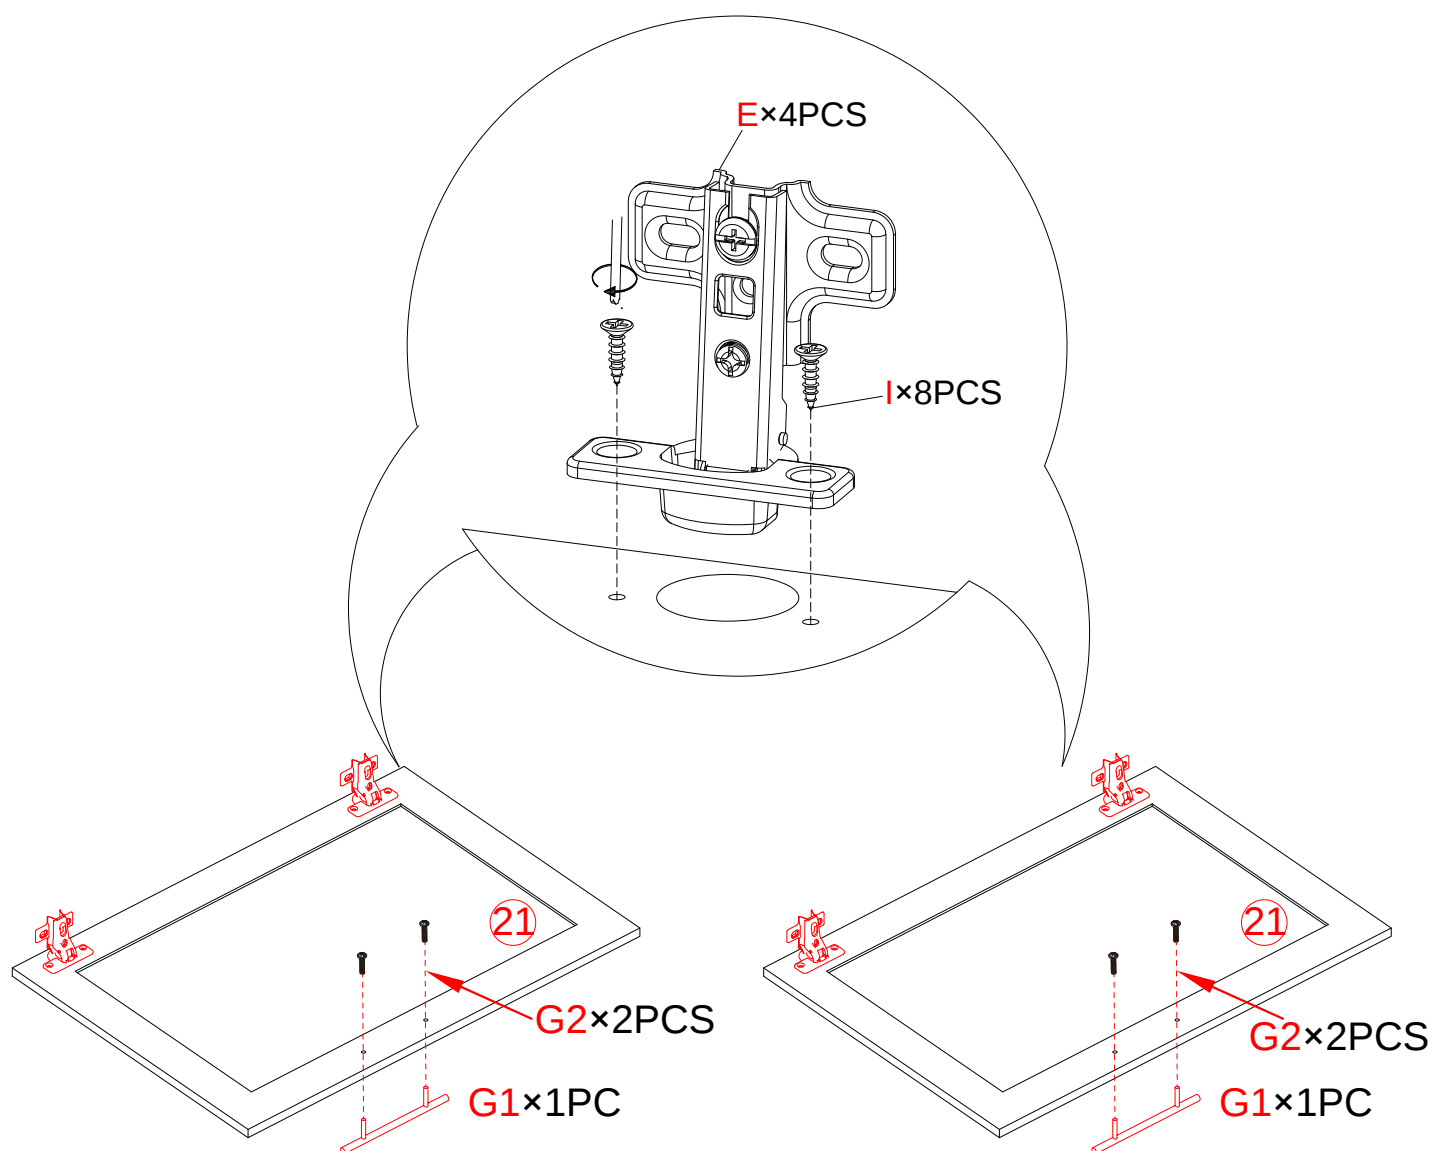


20


1×8PCS
21×2PC

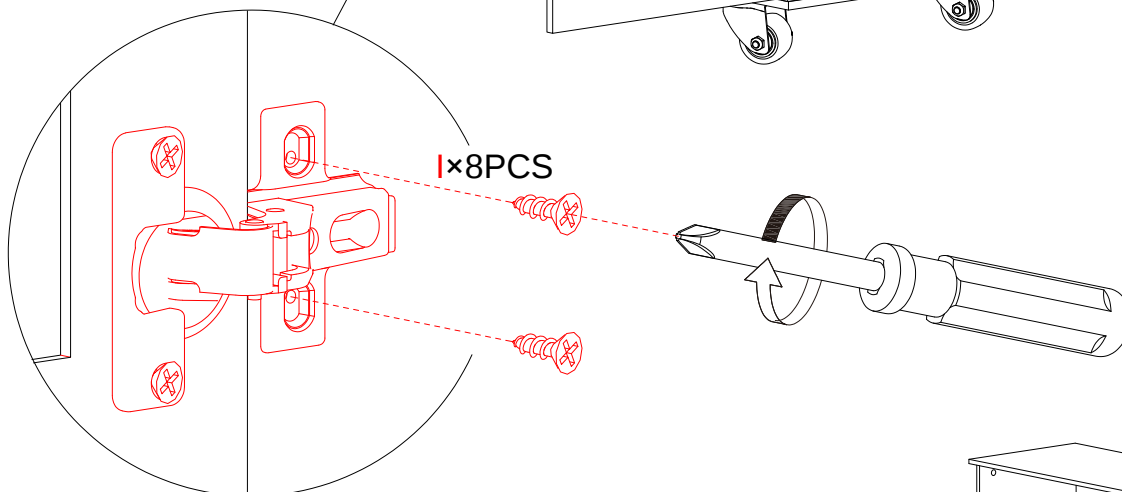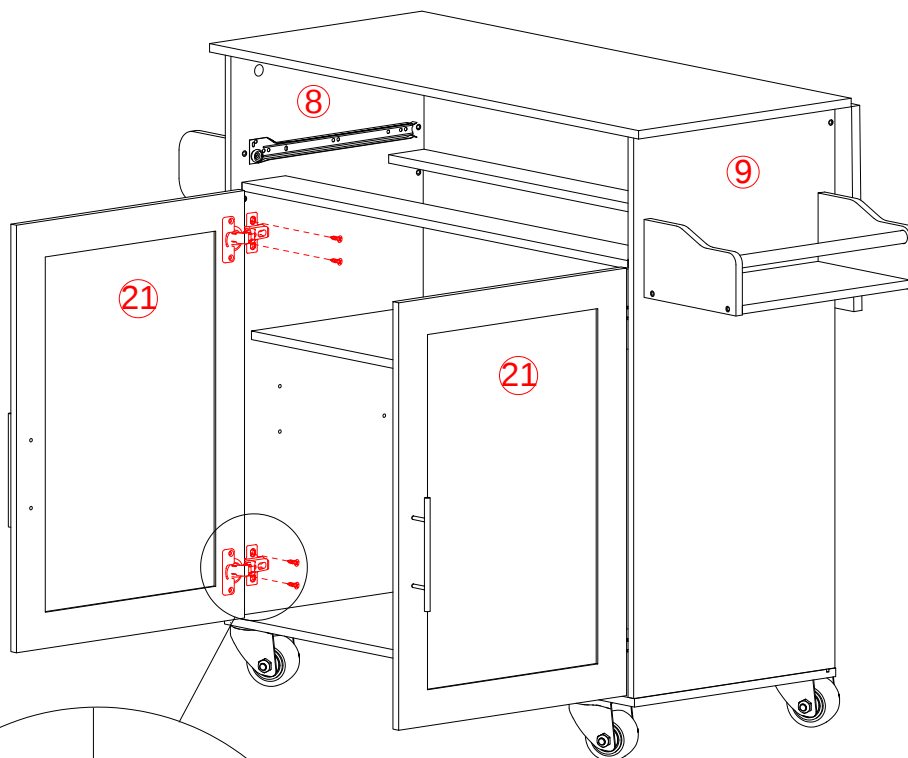

3. Adjust this screw to make the door go up or down

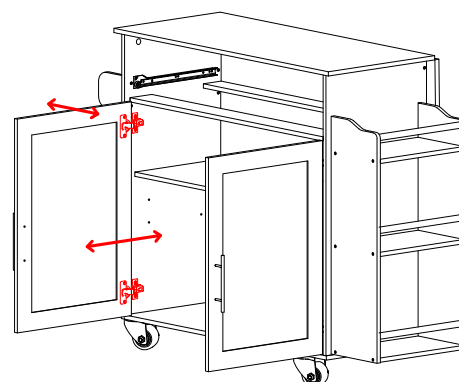

2. Adjust this screw to make the door forward or backward

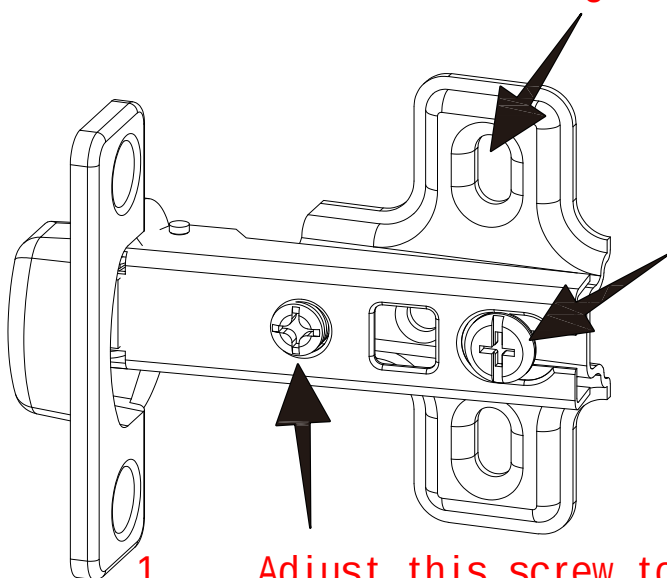


1. Adjust this screw to make the door turn left or right


Note: After the door panel is installed, if the gap of the door is too large or too small, you can adjust this screw to adjust the gap of the door.

21

I×4PCS
J1(DL)x1PC
J2(DR)x1PC

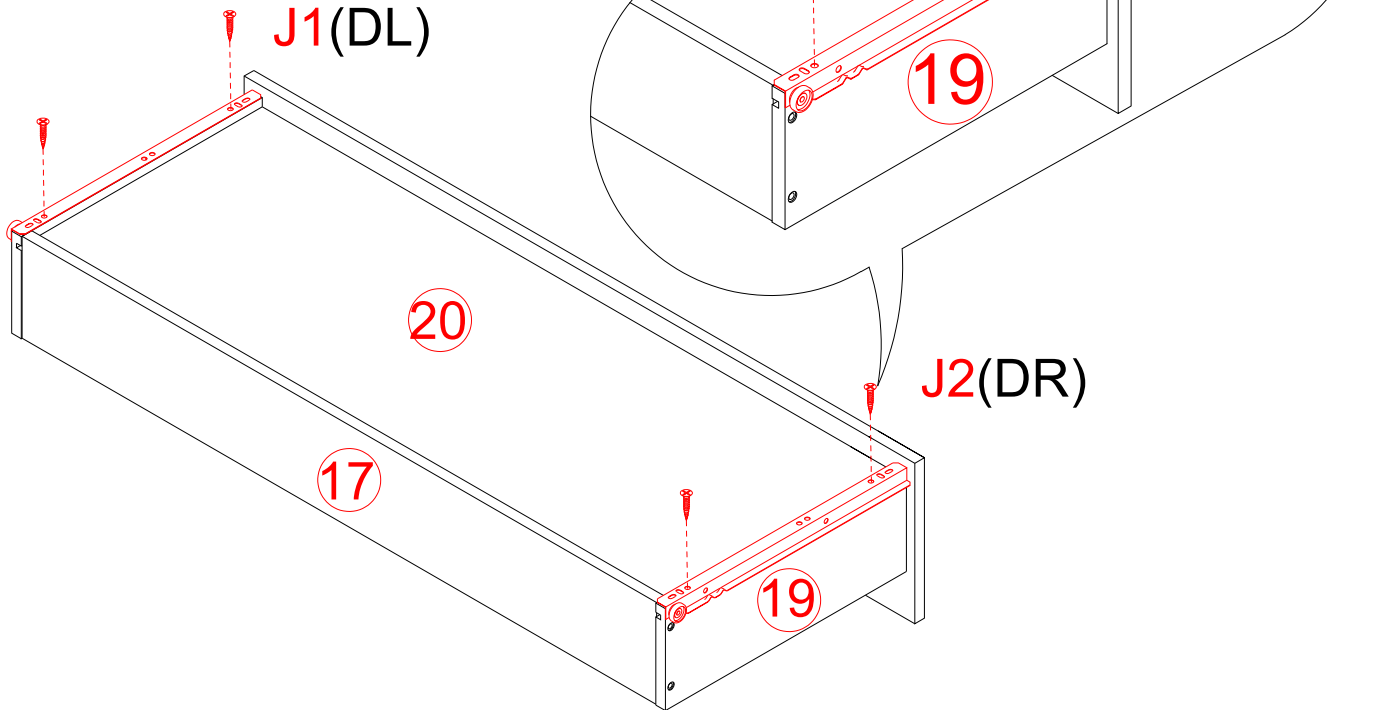


22

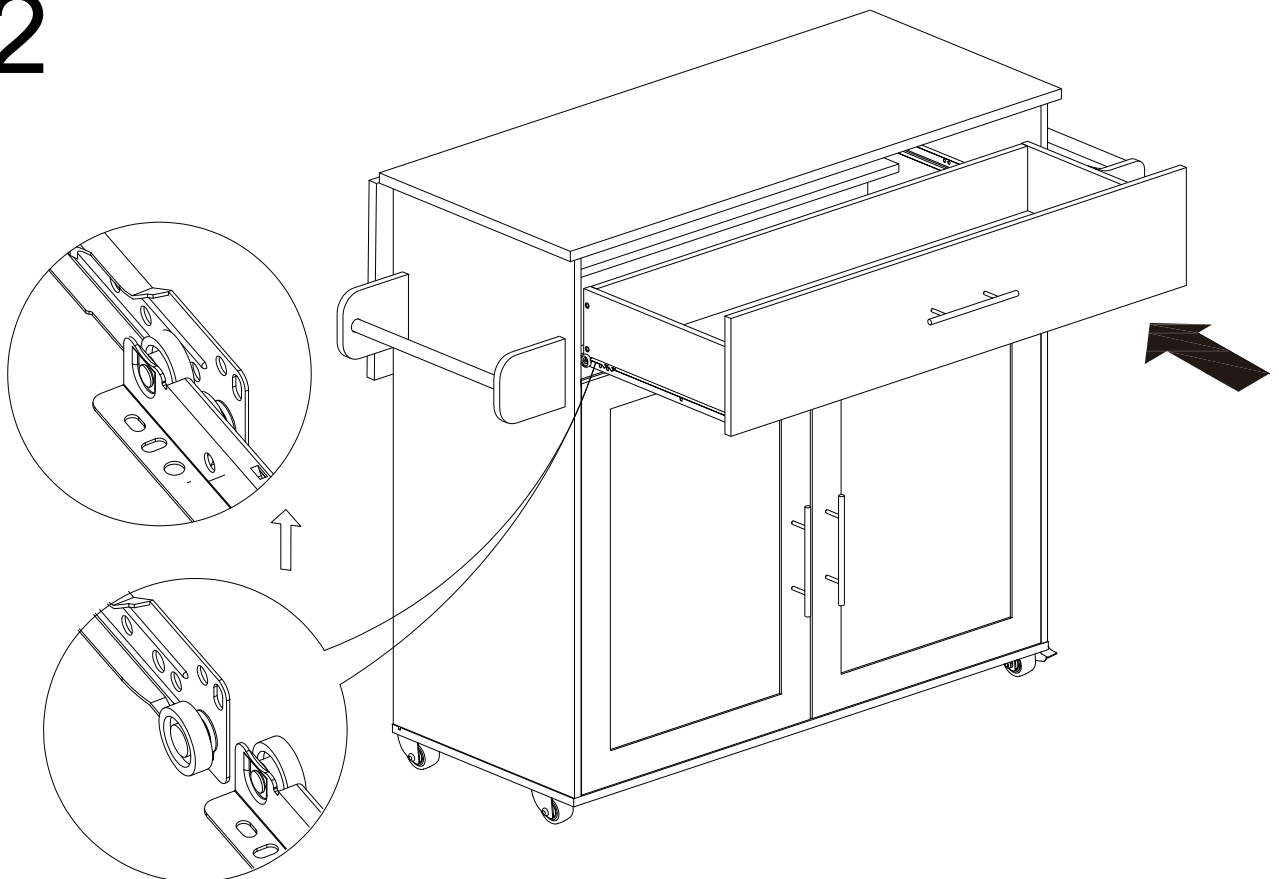

23



24

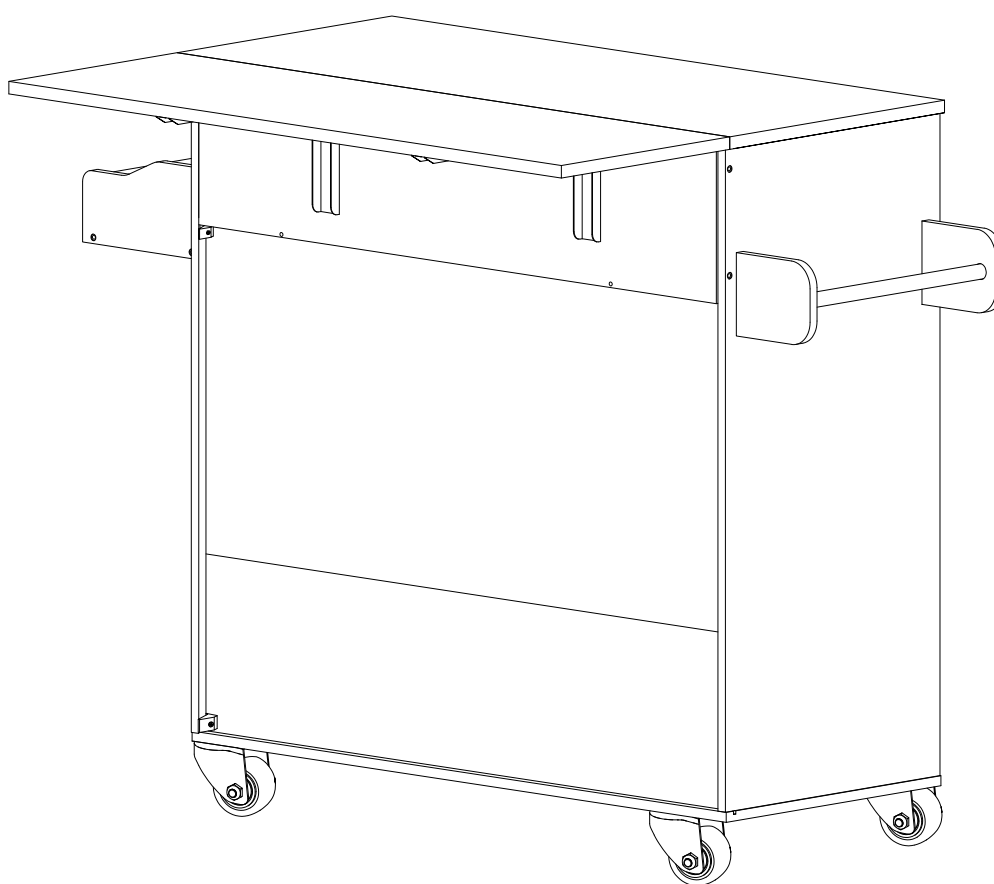

P20/20