
FIREPLACE MANTEL

ASSEMBLY INSTRUCTION

MT567E

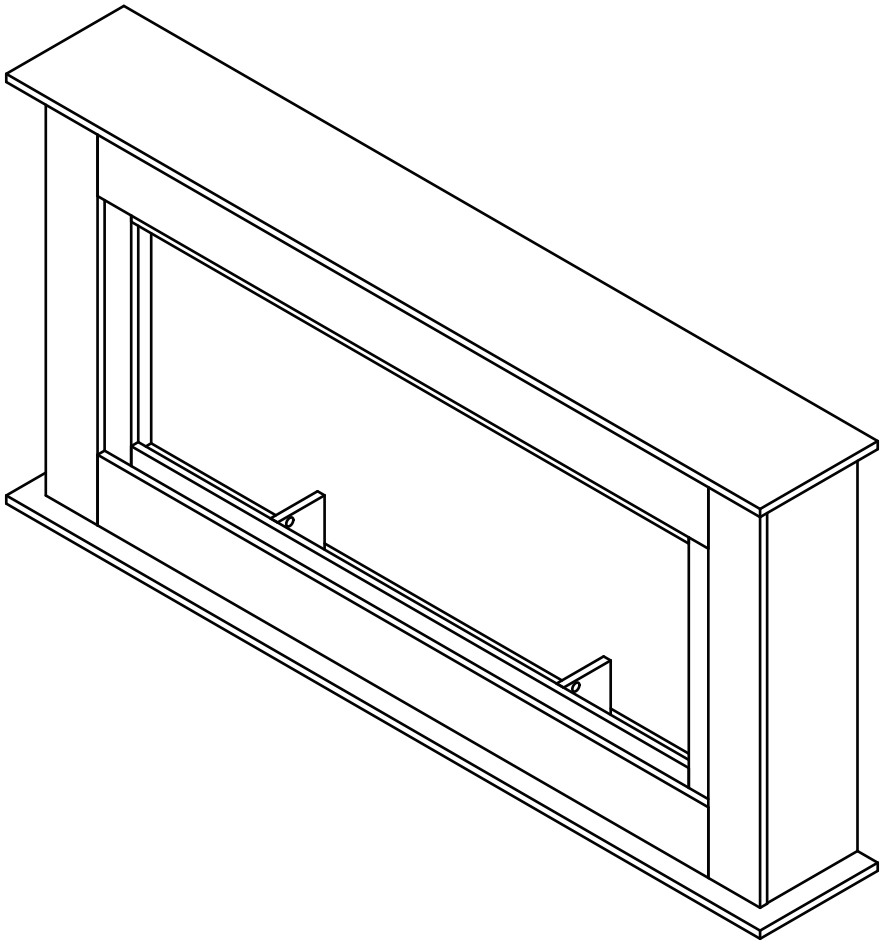


If you have a problem with this product, DO NOT RETURN

Call our customer service: 909-206-6608

or email: service2@richenchina.com


PARTS LIST





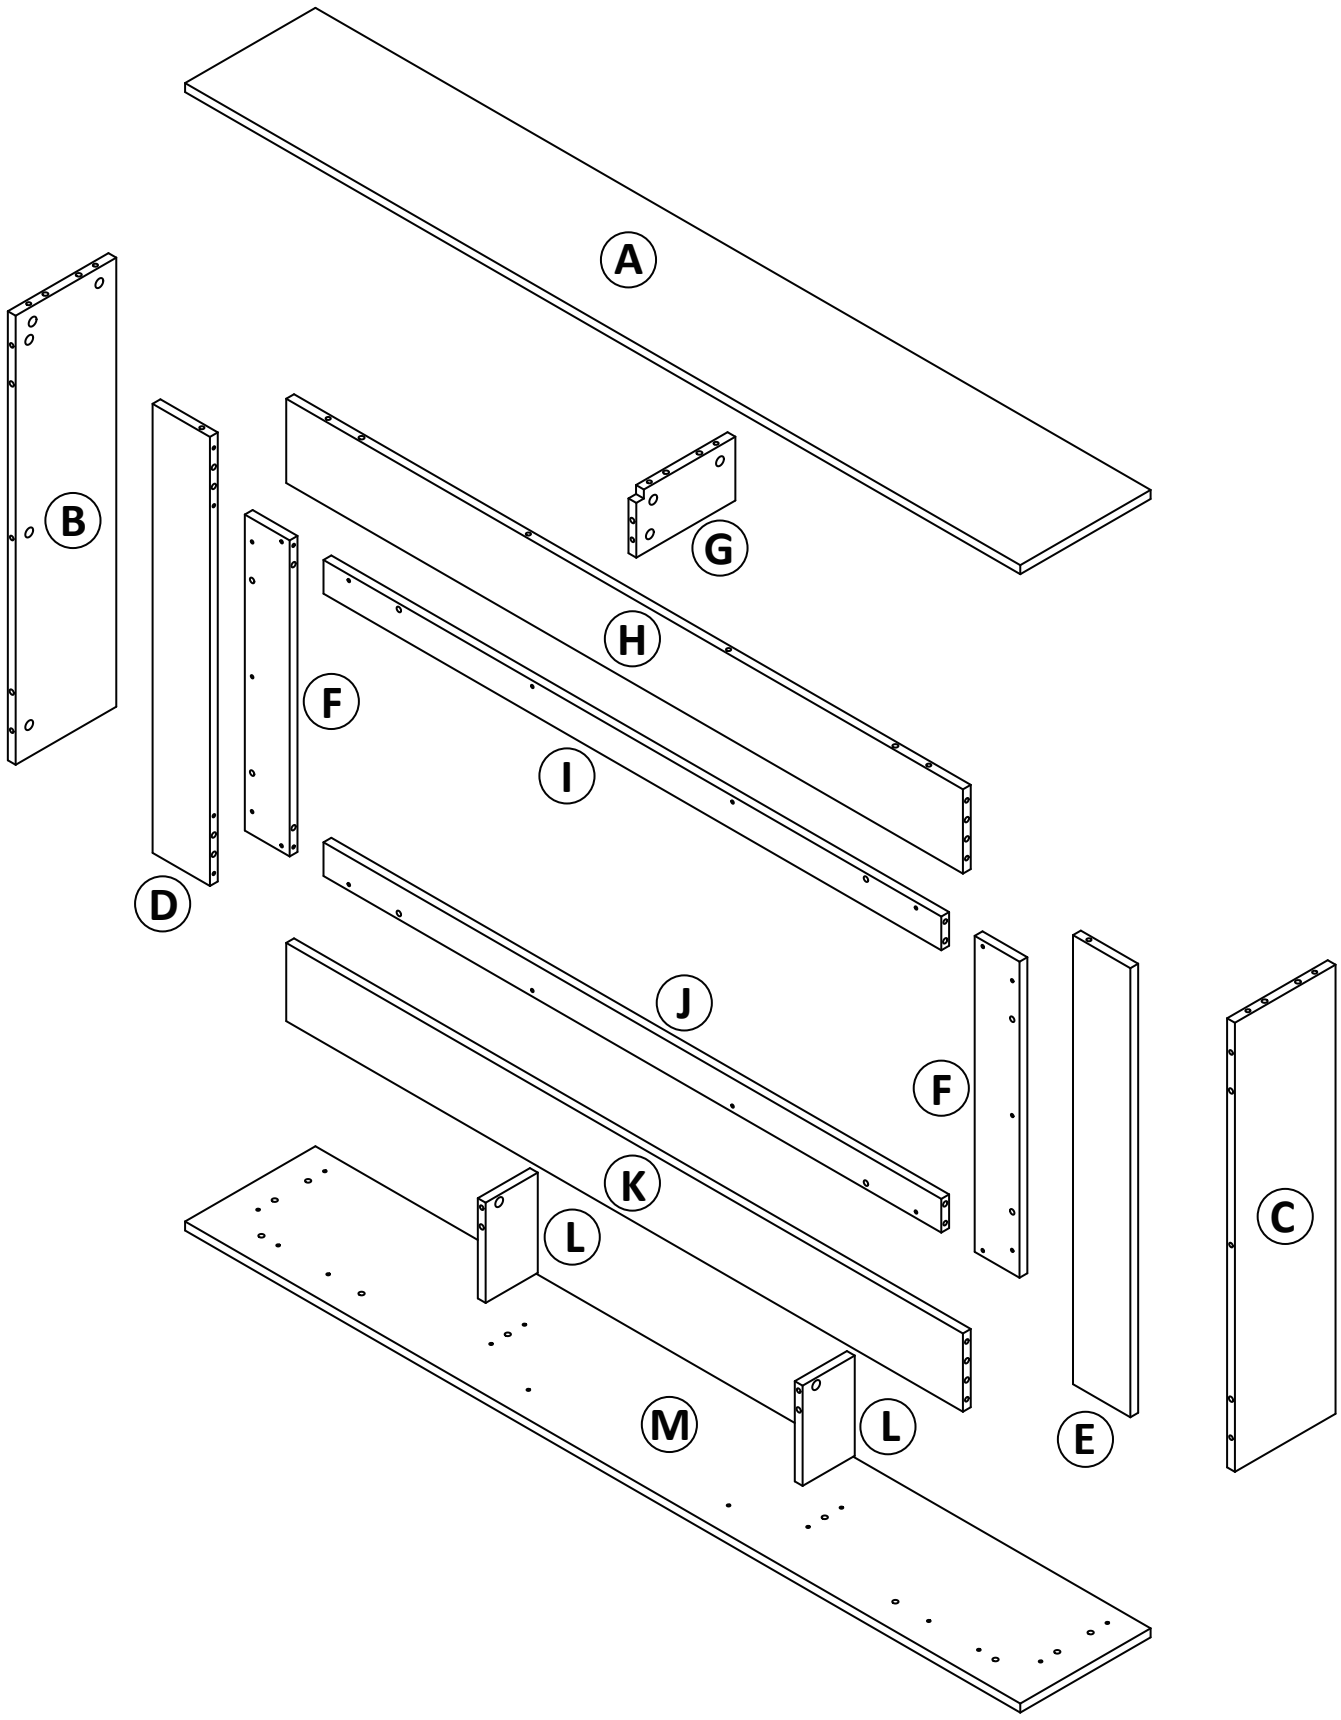


PARTS AND ACCESSORIES


Tools required:


A screwdriver will be needed.

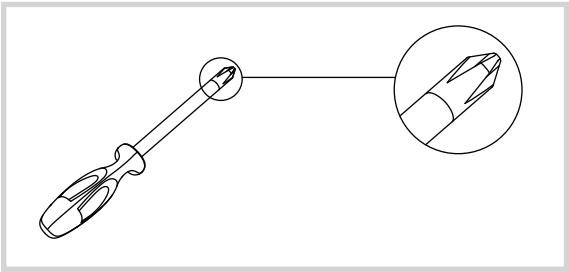

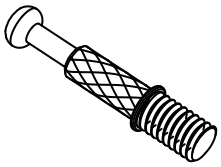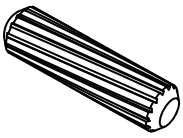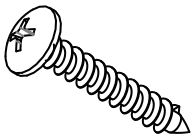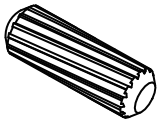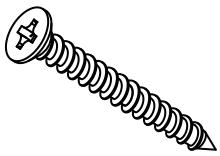 x33+1	 x33+1	 x37+1
Cam Bolt	Cam Lock	Wood Dowel 8*30
 x18+1	 x6+1	 x8+1
Screw ST4*25	Rubber Feet	Wood Dowel 8*20
 x14+1		
Screw ST4*40		


CAM LOCK FASTENING SYSTEM

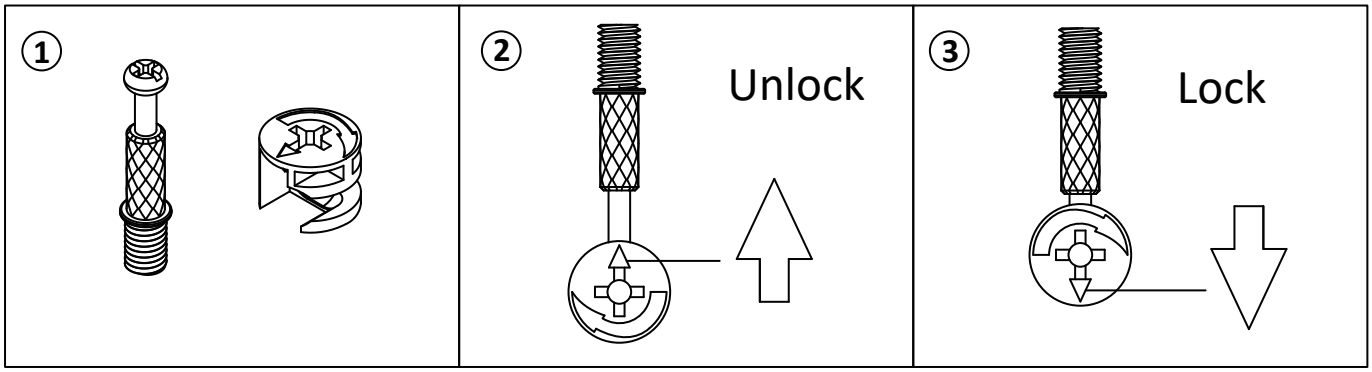

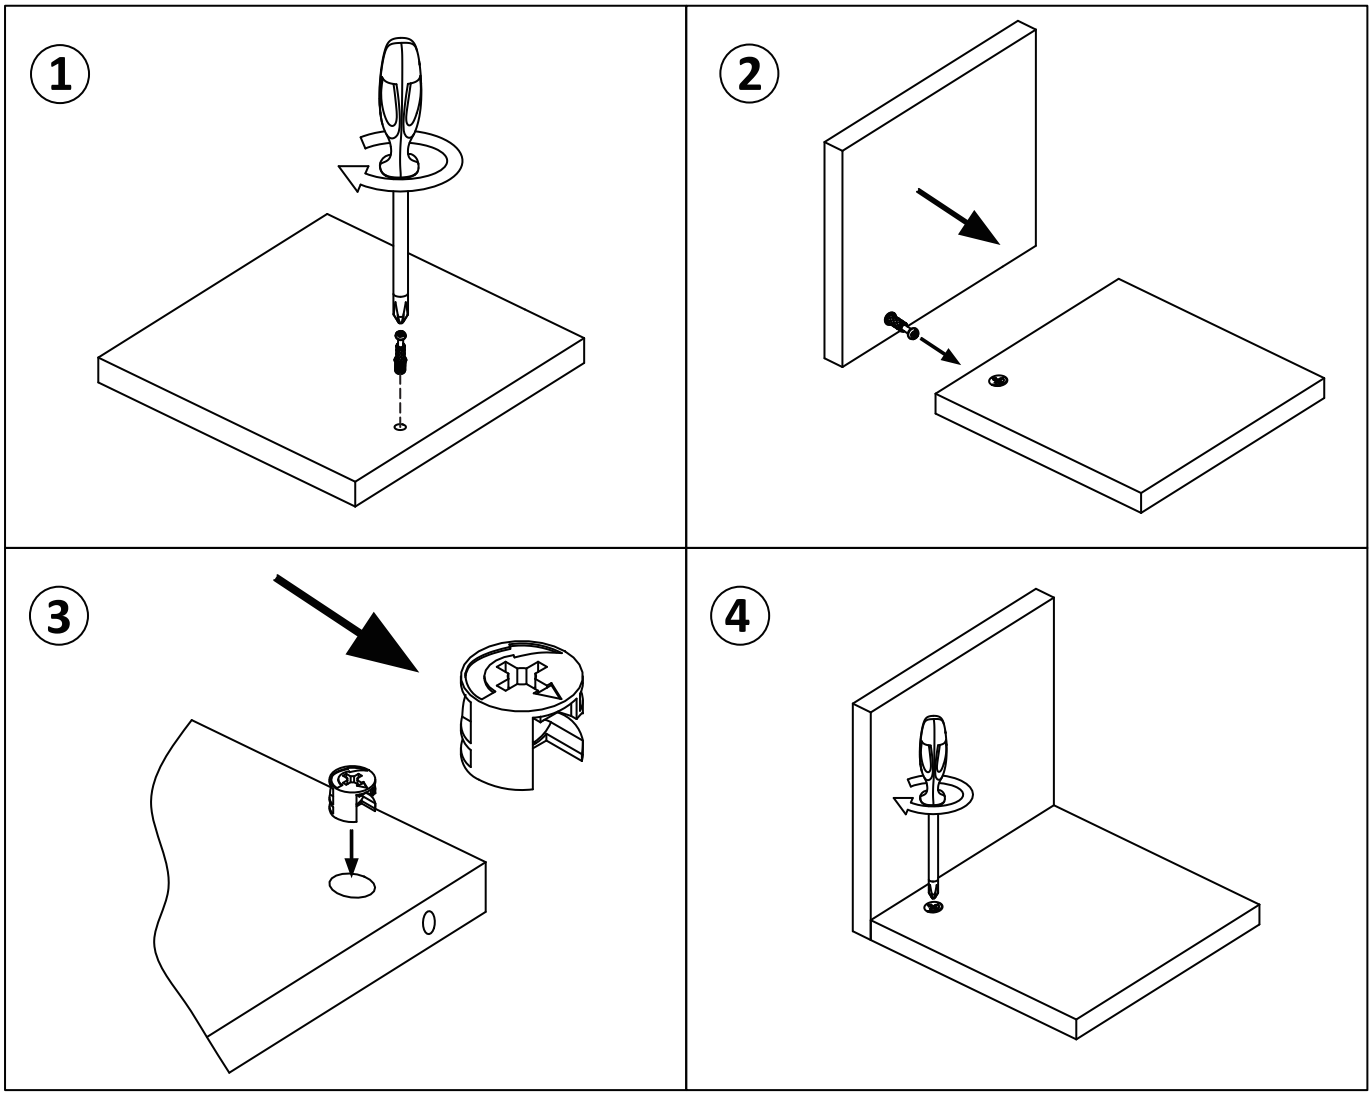


ASSEMBLY INSTRUCTIONS

01

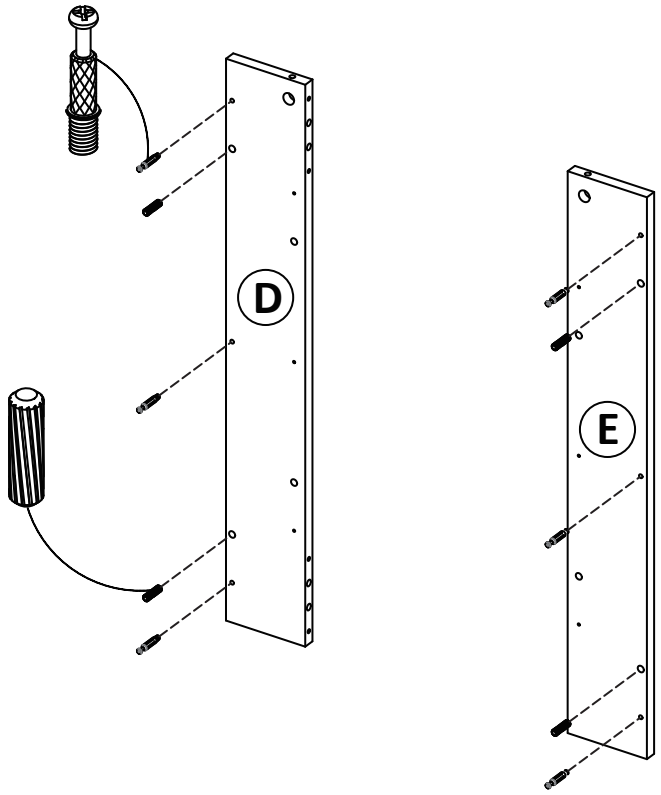

x4




Wood Dowel 8*30


x6



Cam Bolt

02

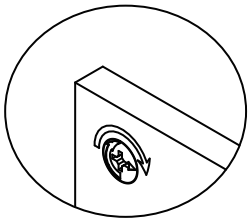

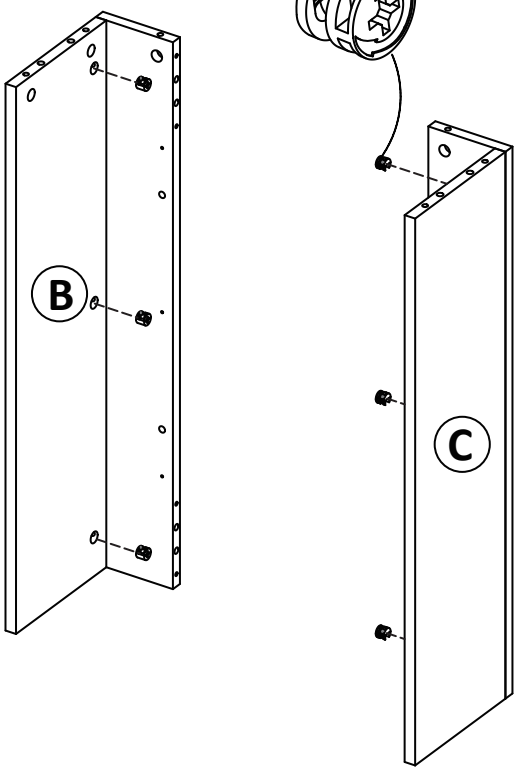



x6




Cam Lock

03

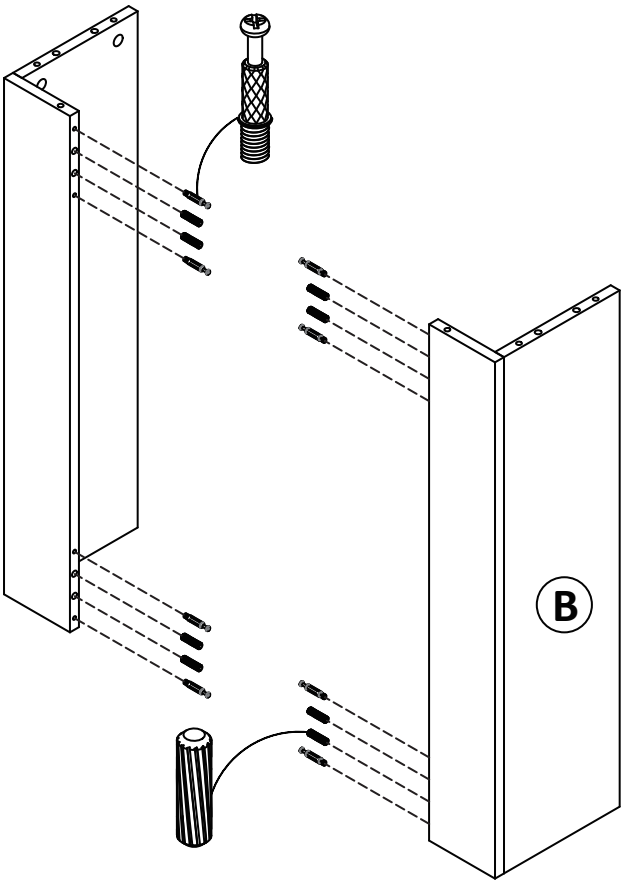


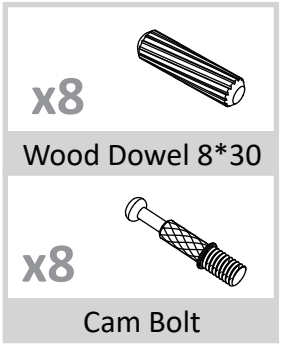


04

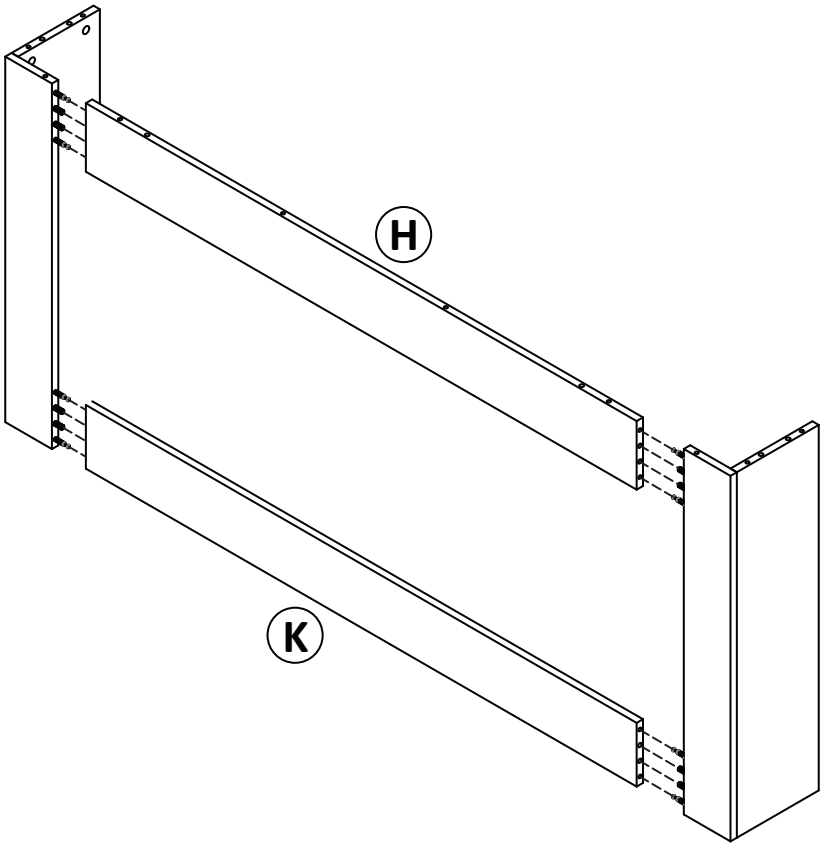

05

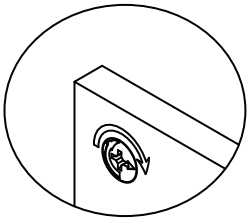

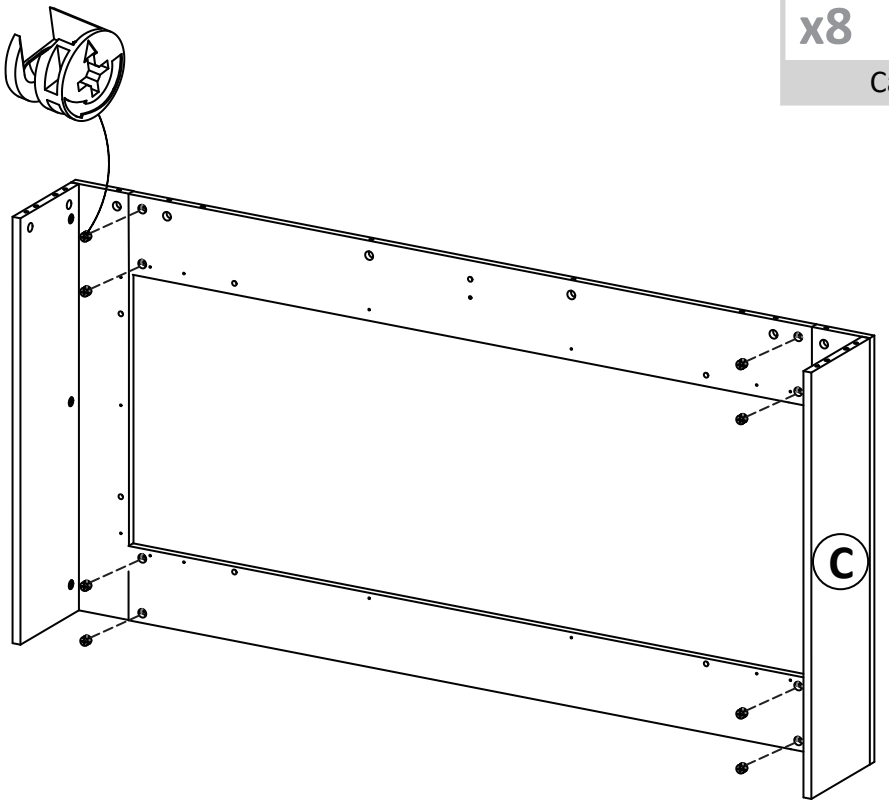


x8




Cam Lock

06

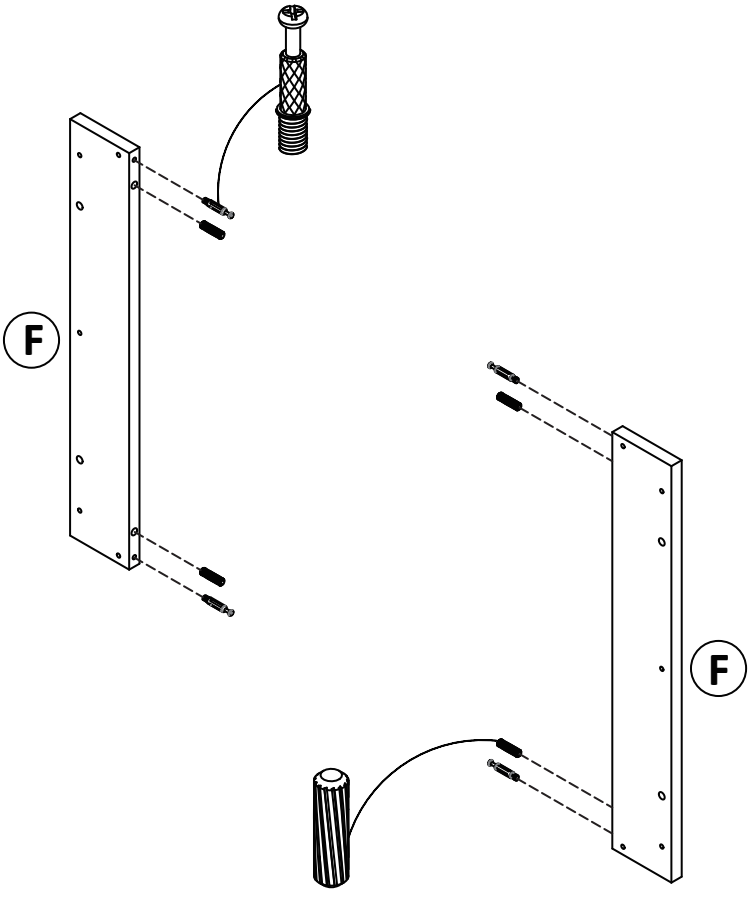

x4




Wood Dowel 8*30

x4




Cam Bolt

07

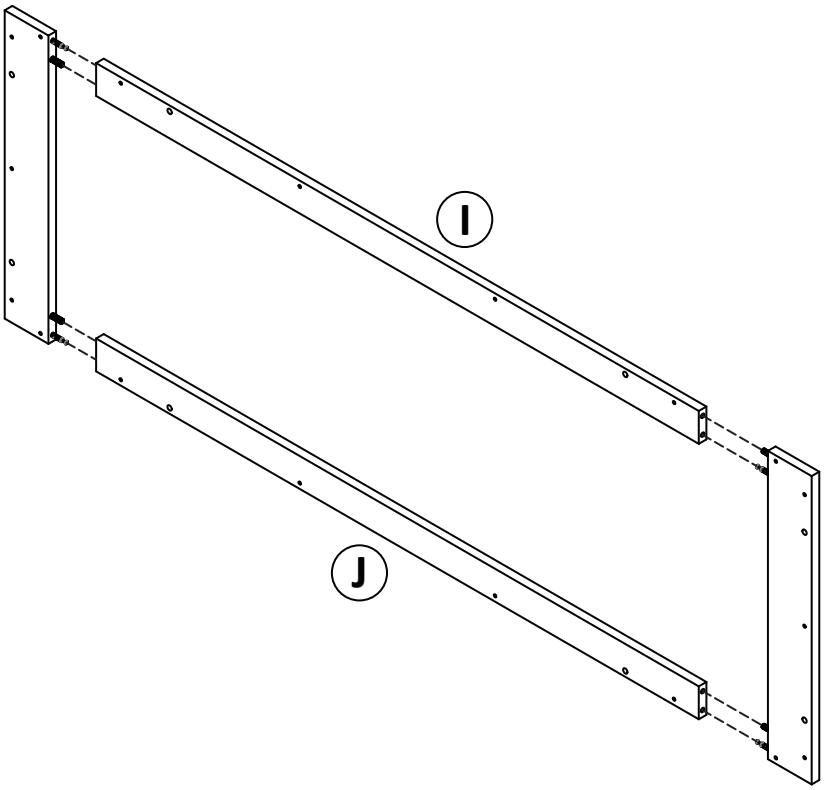


08


x4

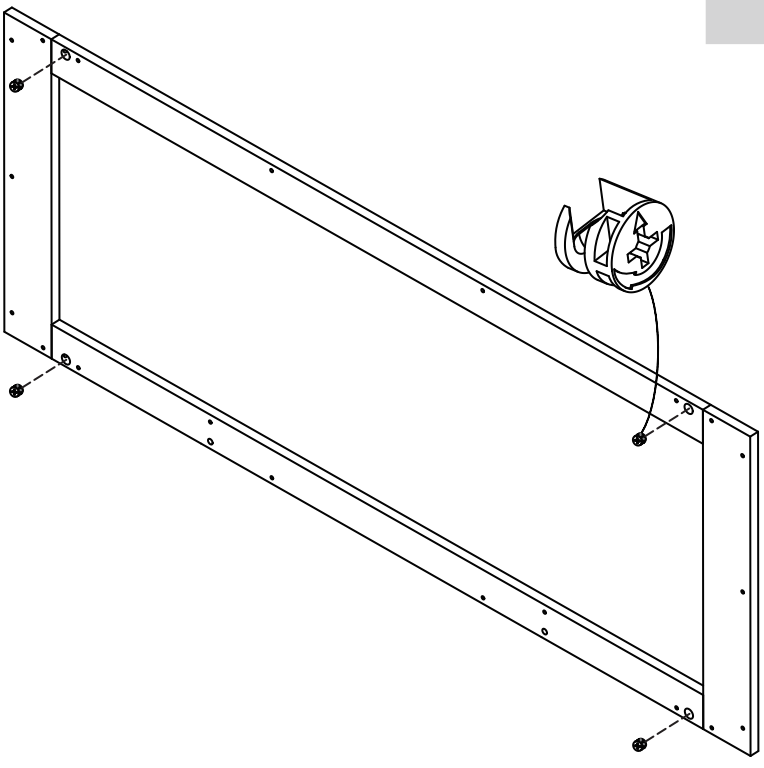


Cam Lock

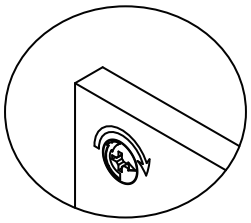

09

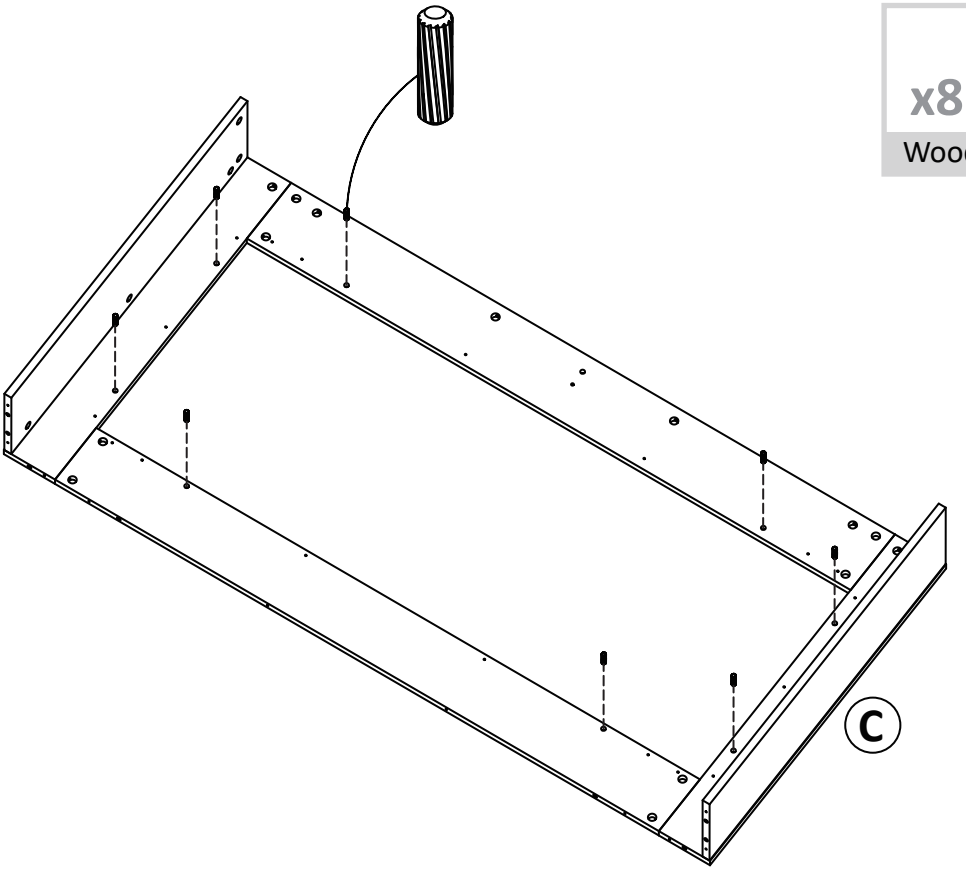


x8



Wood Dowel 8*20

10

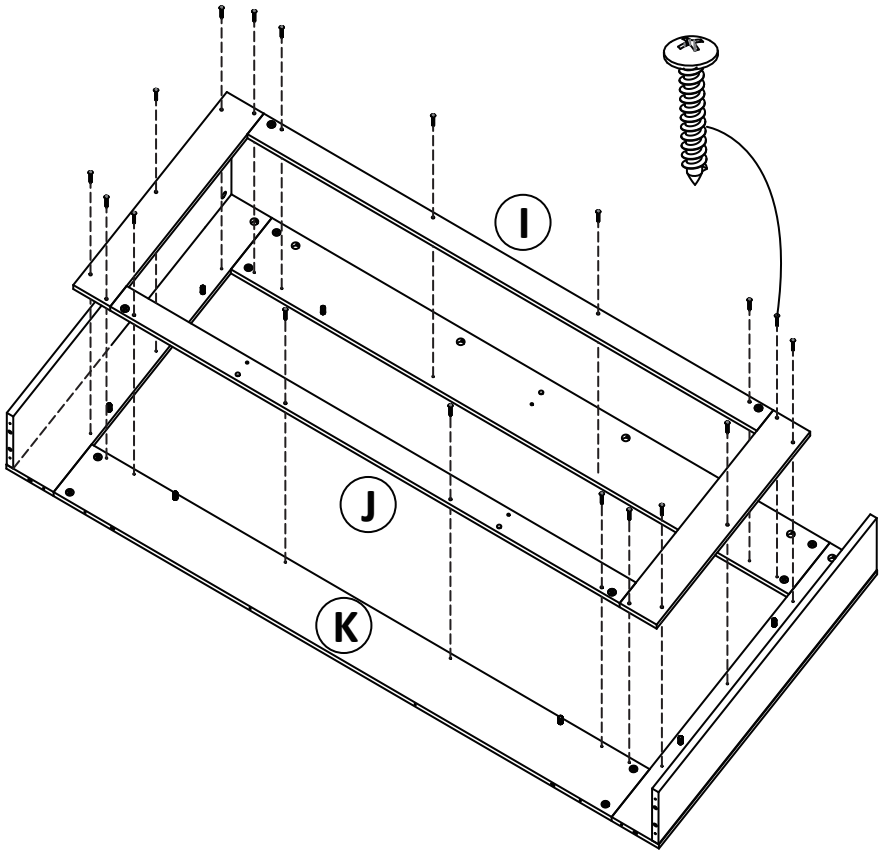


x18




Screw ST4*25

11

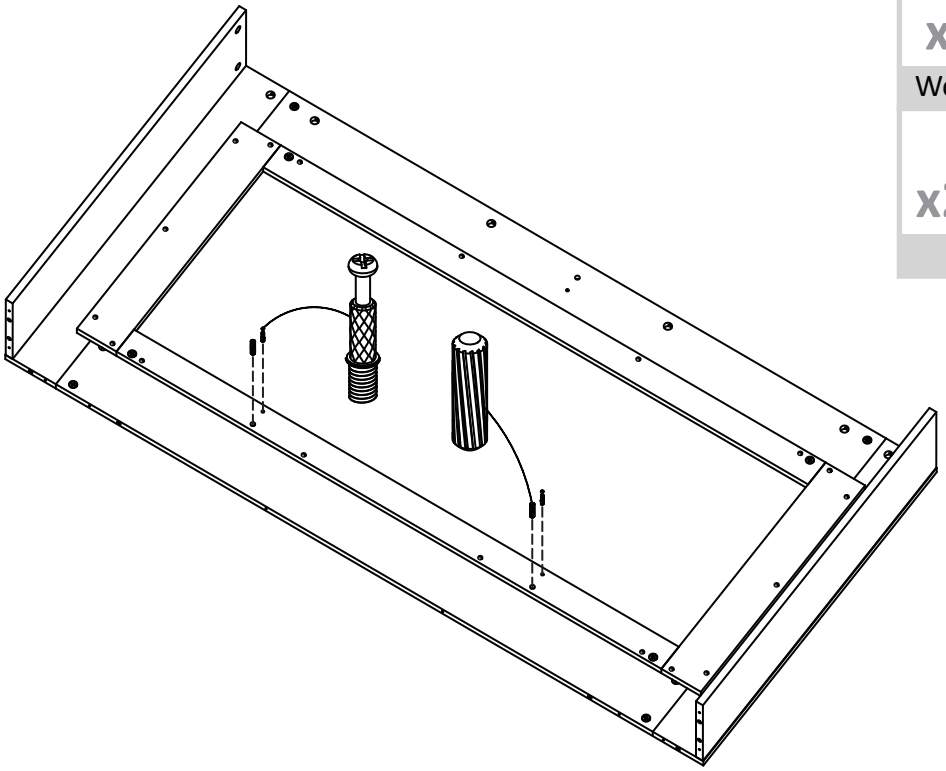

x2




Wood Dowel 8*30

x2



Cam Bolt

12

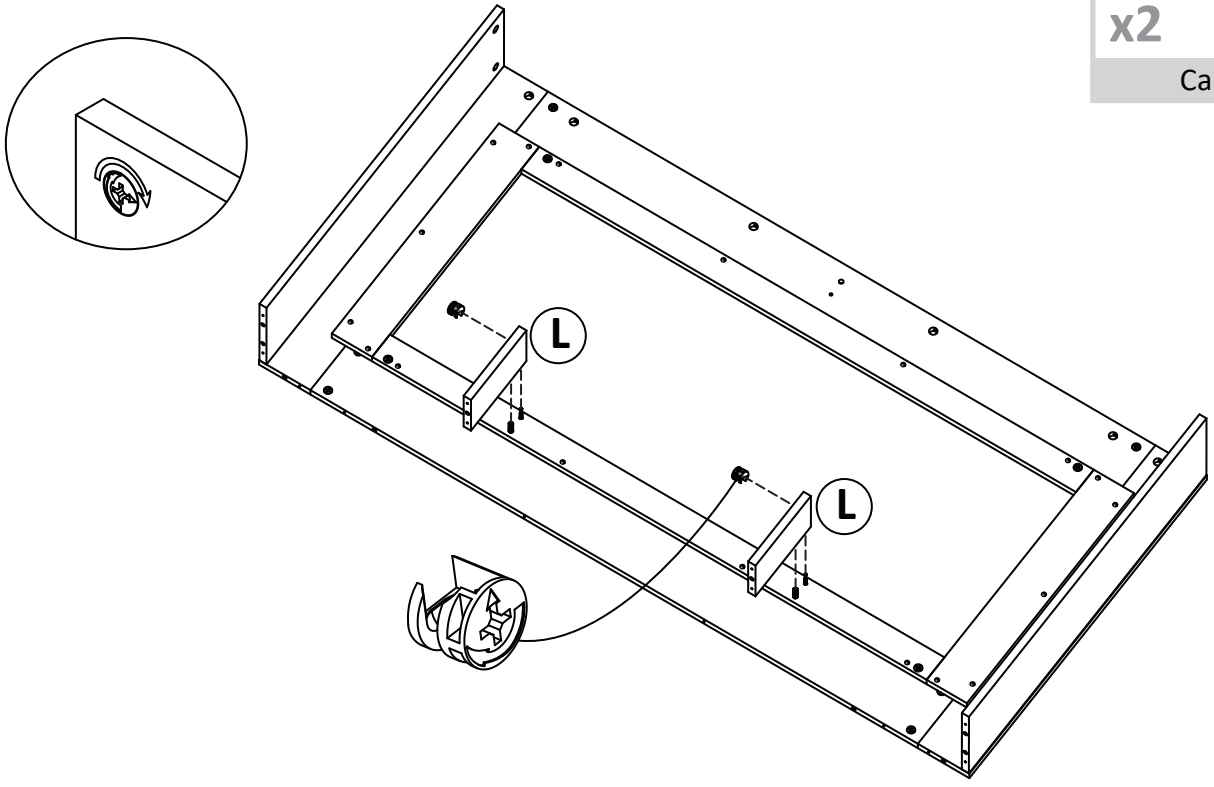


x2




Cam Lock

13

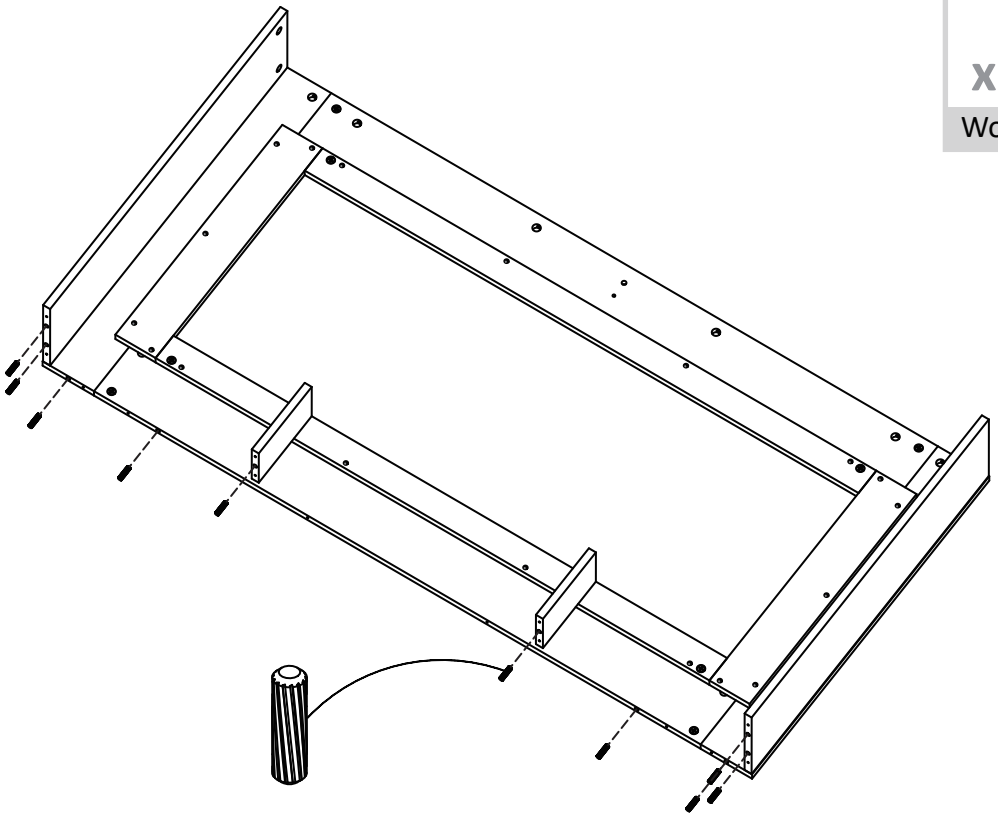


x10



Wood Dowel 8*30

14

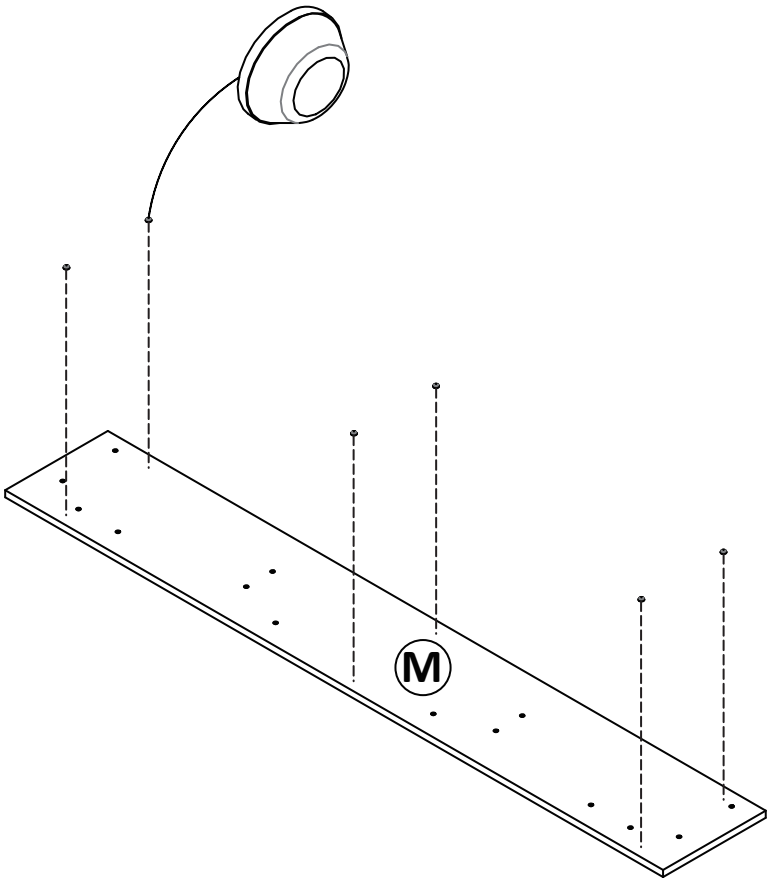


x6




Rubber Feet

15

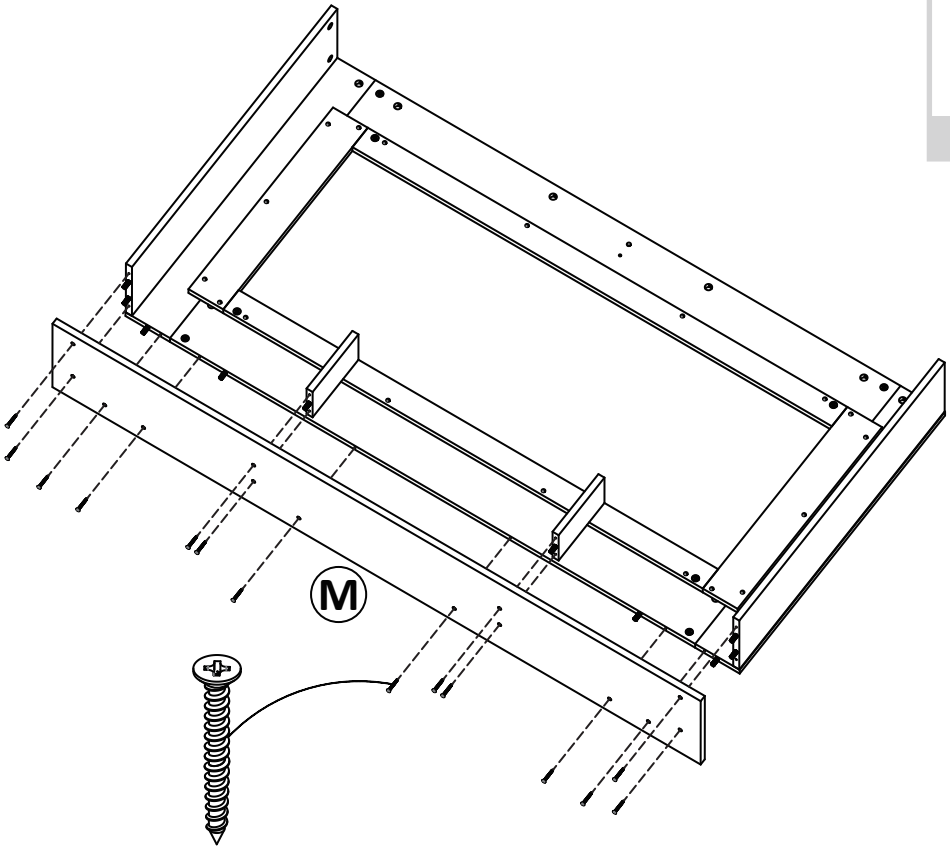



x14



Screw ST 4*40

16

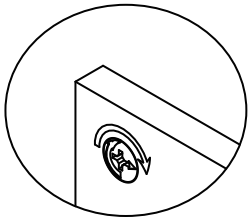

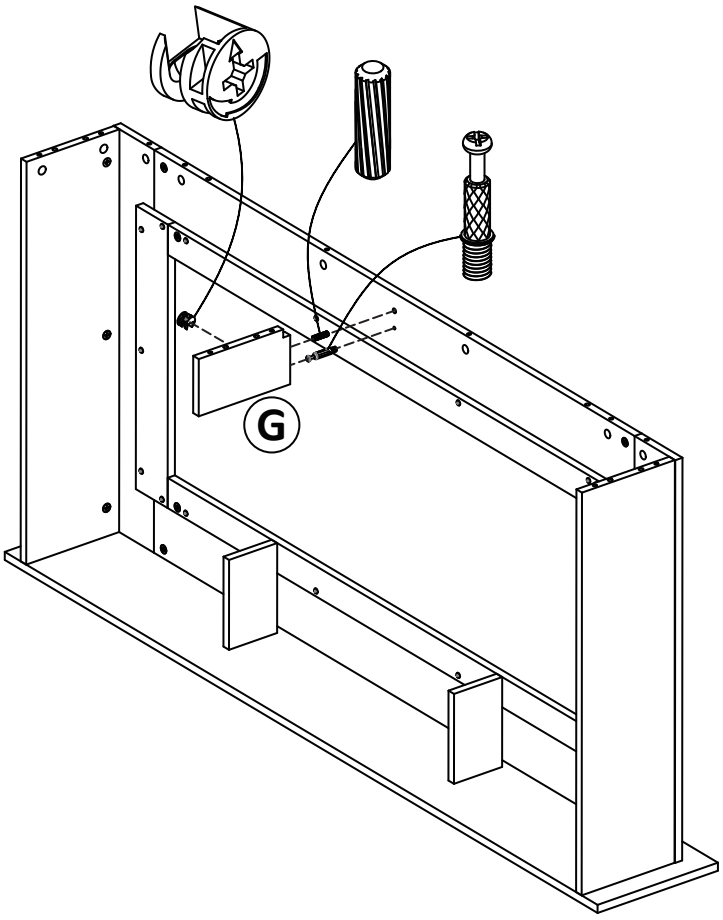


x1



Cam Lock

x1




Wood Dowel 8*30

x1




Cam Bolt

17

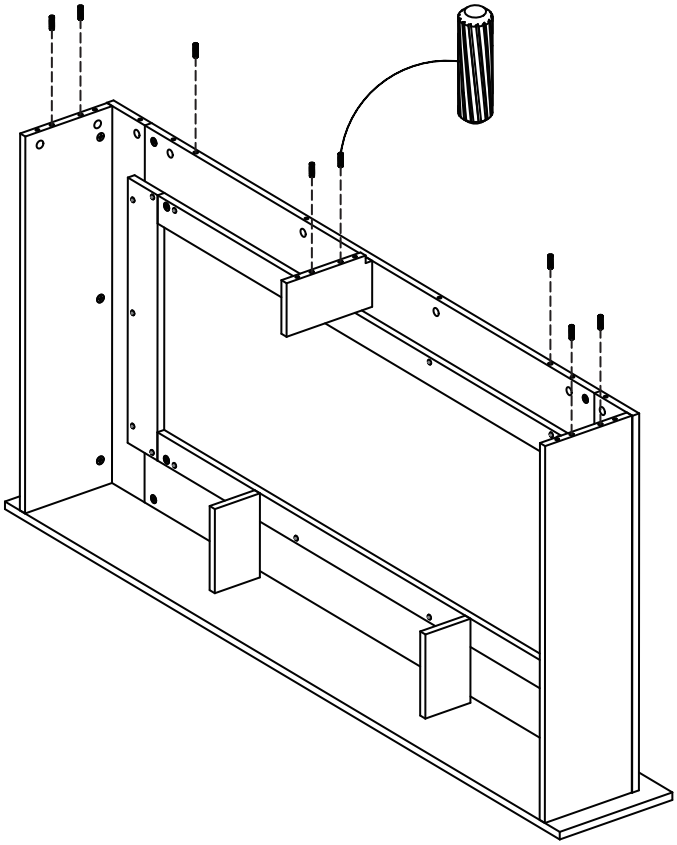


x8



Wood Dowel 8*30

18

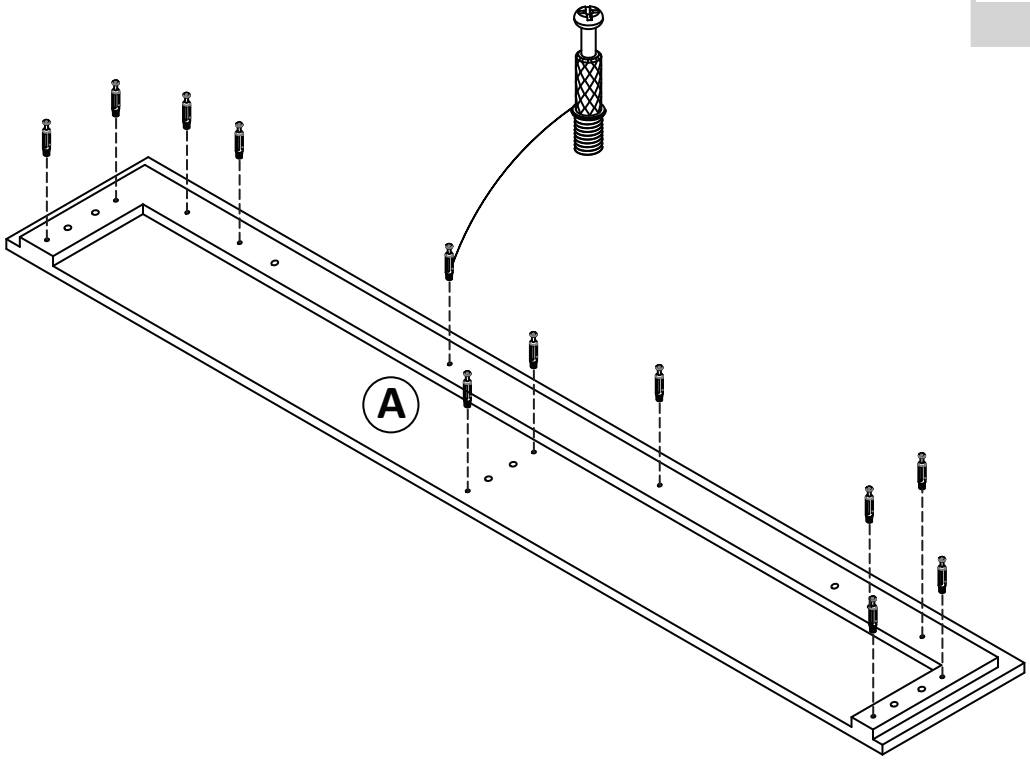


x12



Cam Bolt

19

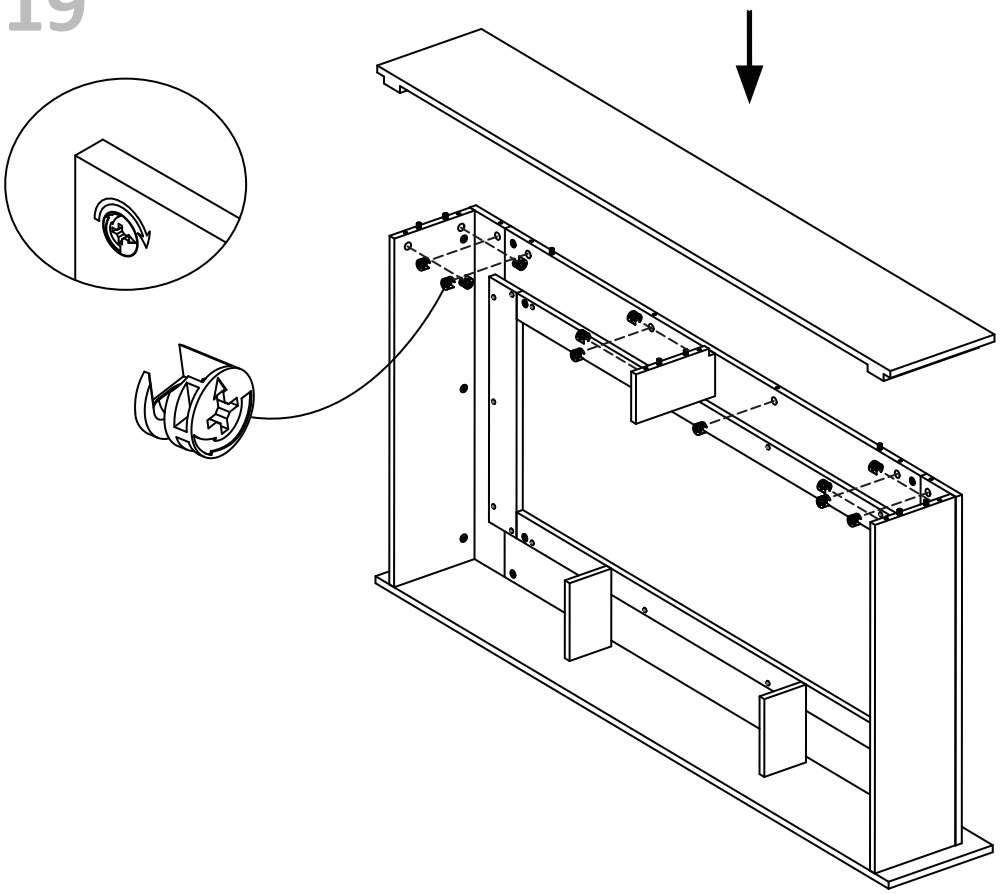


x12




Cam Lock


20

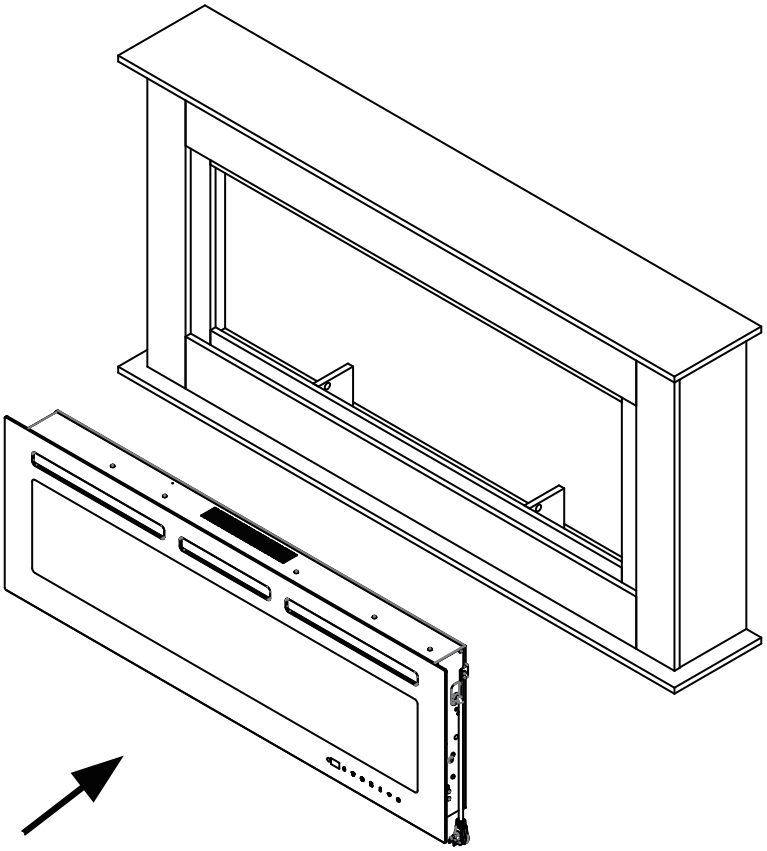

21

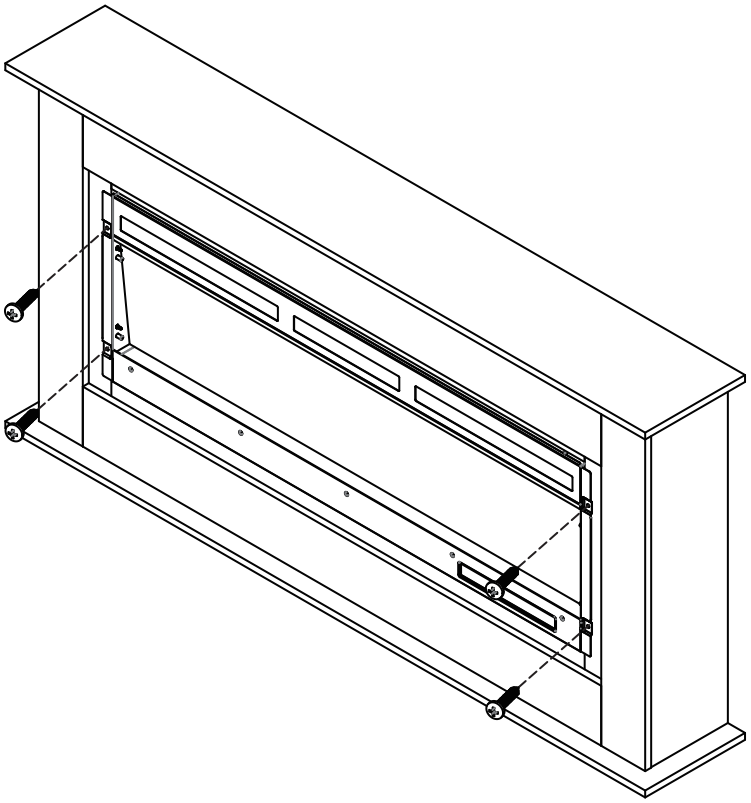


x4



Screw ST4*12


The screws used in this installation step are included in the fireplace product pack, not in the mantel pack.

22

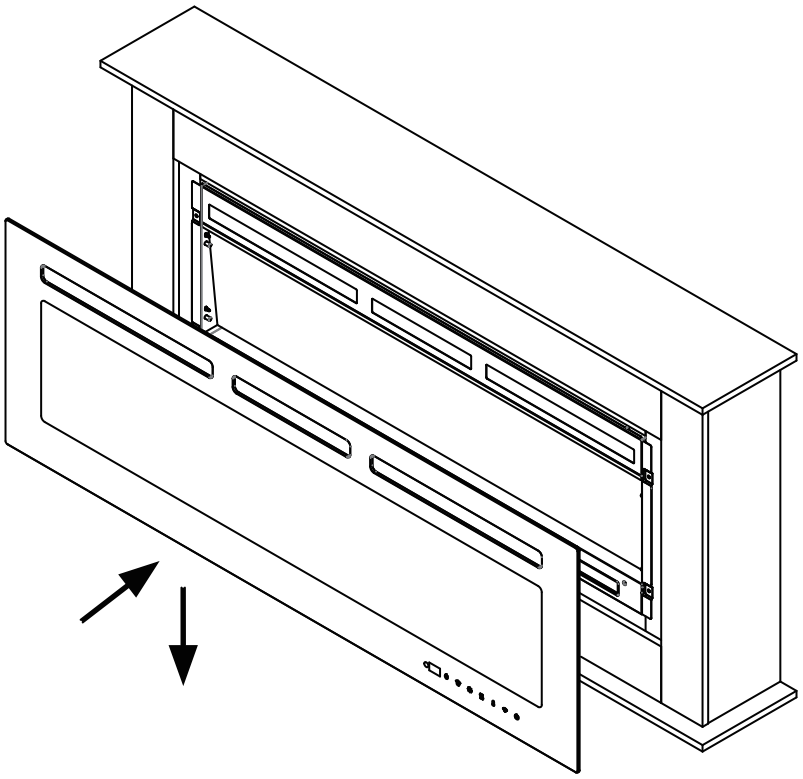

Push the glass panel toward the firebox first, then hang it down into place.

23

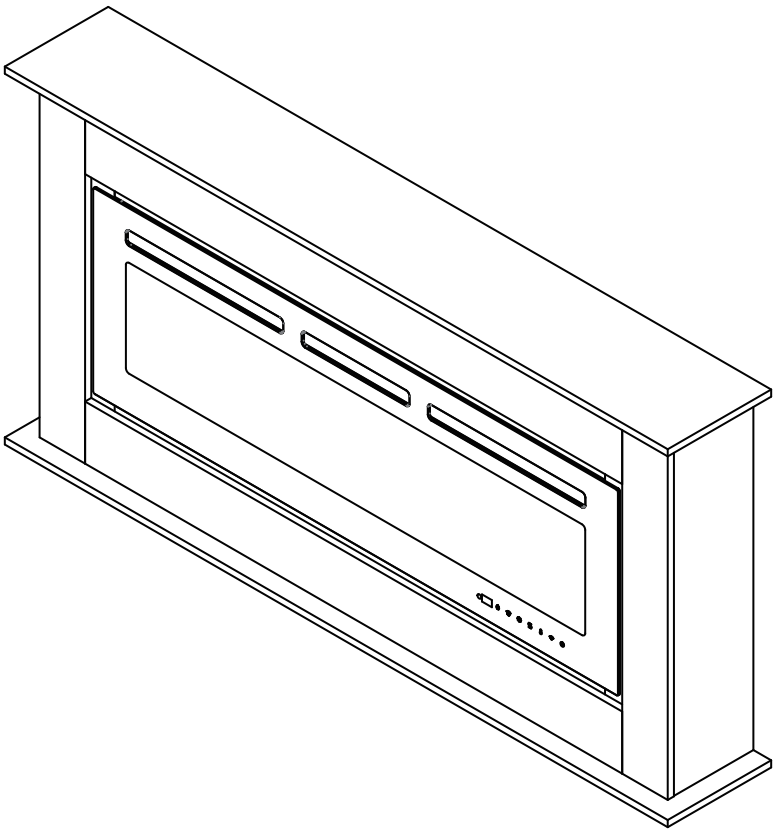

Ningbo Richen Electrical Appliance Co., Ltd.

Address: No.19, Yongdinghe Road, Xiapu, Beilun, Ningbo, Zhejiang, P.R.China

3.MT.567.05.118 A0