
## **Assembly Instructions for Small Weathervane**

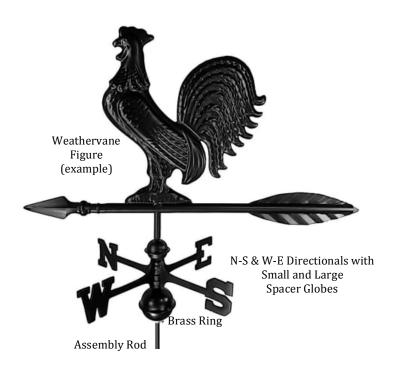

## **Your Weathervane Includes:**

- (1) Weathervane Figure
- (1) Black Steel Assembly Rod with Brass Retaining Ring
- (1) Small Spacer Globe
- (1) Large Spacer Globe
- (1) Set N-S & W-E Directionals

## **Assembly Steps**

Screwdriver required

- 1. **Large Spacer Globe**: Slide Large Globe down Assembly Rod about 2/3rds of the way down. It can rest on the Brass Ring for now.
- 2. **Directionals**: Combine the "N & S" onto "W & E" Directionals by interlocking the center prongs on each directional set so that the joined set makes an "X" shape. The "N & S" section should be on top of the "W & E" section when joined with the "W" facing to the left of the "N" (like compass points on a map). Slide the joined set of Directionals down Assembly Rod until they rest on the Large Globe (you may have to loosen the tightening screw in the center of each Directional in order to fully slide down the rod). Be sure all the letters are facing upright. **Do not retighten screws yet**.
- 3. **Small Spacer Globe**: Slide Small Globe down Assembly Rod so that it rests on Directionals. Large Globe and Directionals can be adjusted to rest below Small Globe so that all components are touching (see image above). Leave enough room at the top of the rod so that the weathervane figure can slide down fully on the rod until it comes to a stop. The Globes and Directionals can then rest just below the weathervane figure (see image above).
- 4. **Brass Ring**: Adjust Brass Ring so that it acts as a stopper for Large Globe. Adjust all components so that they appear where you want them to be on the Assembly Rod. **GENTLY** tighten screw on side of ring to hold everything in place. **DO NOT OVER-TIGHTEN!** You can now tighten the screws on each Directional set to fix them into place. Note: Threads on bottom of Assembly Rod are only for connecting additional lengths of rod if necessary to get into cupola or other rooftop structure.

Your Weathervane components are now assembled. We recommend that you install the components into your roof mount or cupola before adding the weathervane figure (it's lighter and easier to maneuver this way). Once installed, the "N" should face towards general North. The Weathervane figure slides onto the Assembly Rod and rests freely so that it can turn easily in the wind to indicate direction. Congratulations! Your fully functional weathervane is now installed. Enjoy!