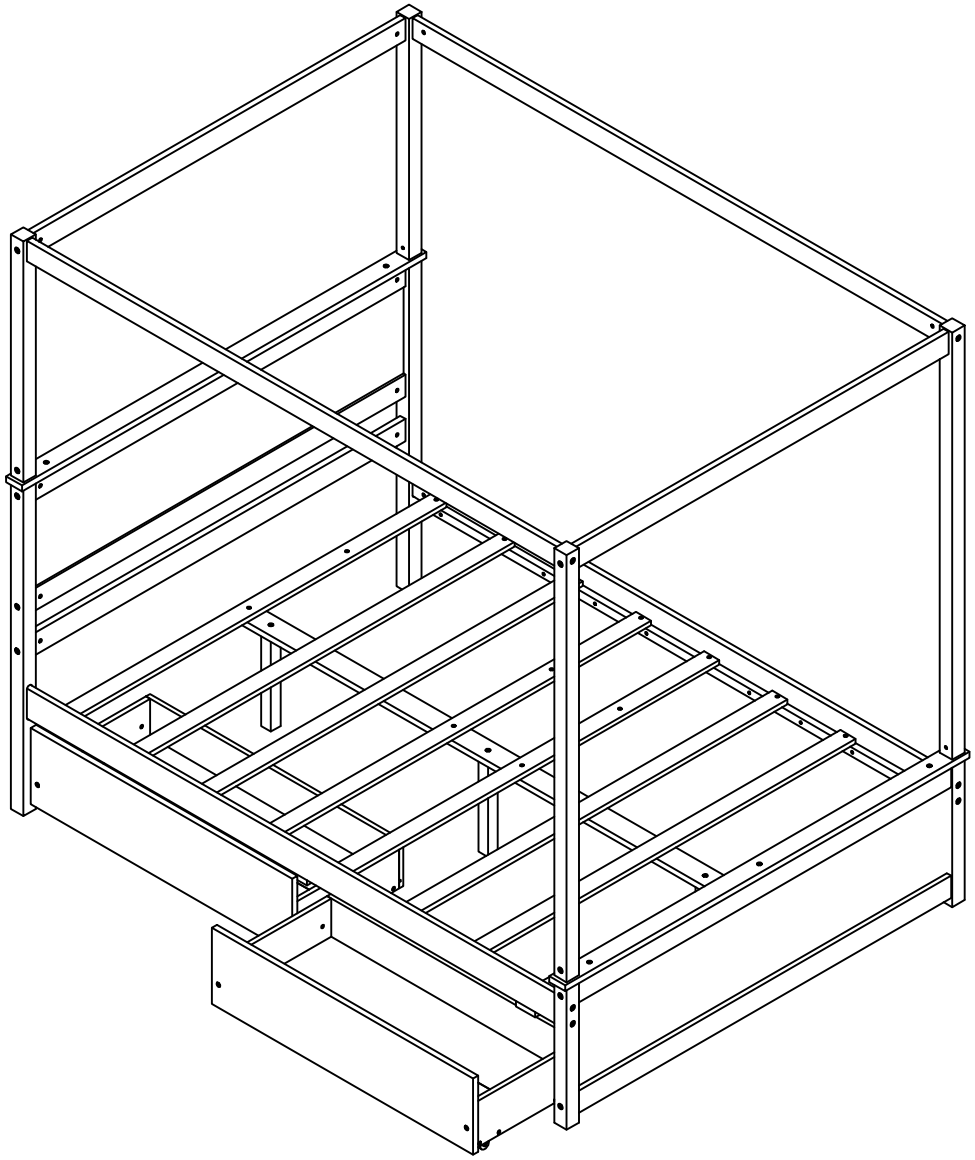
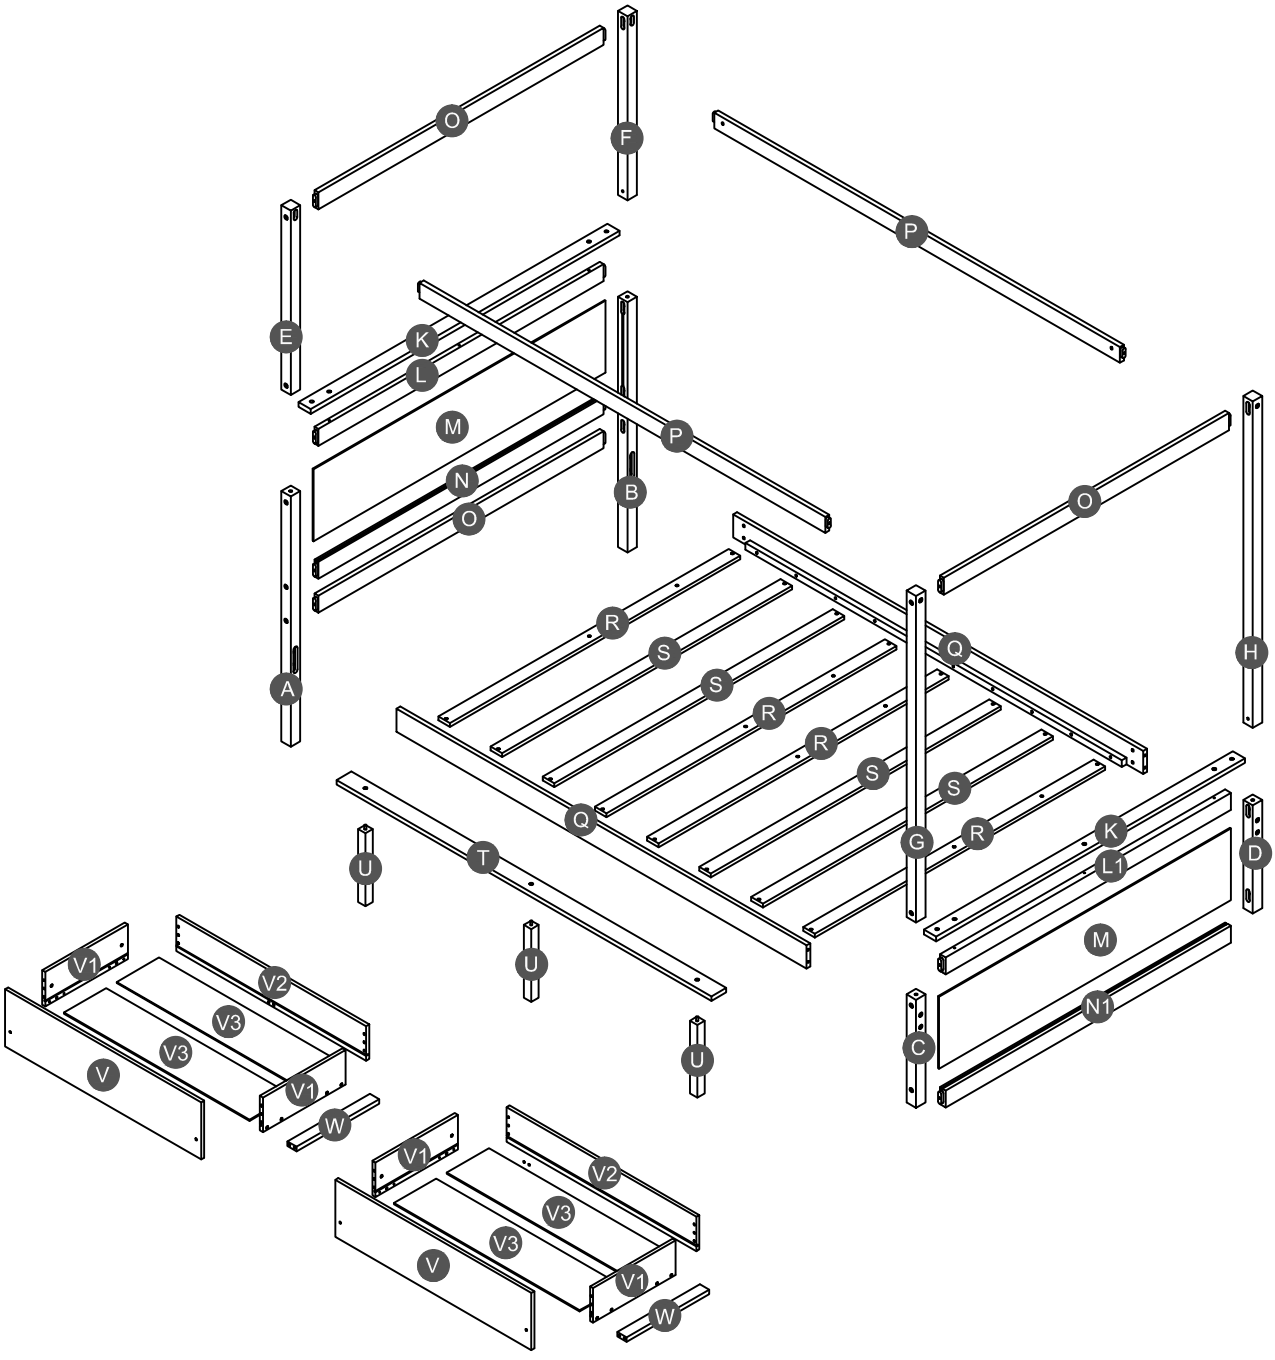
ASSEMBLY INSTRUCTIONS




















FULL BED WITH 2 DRAWERS











Detail View


O
F
P
E
K
L
M
N
O
P
B
O
R
S
S
R
R
S
S
R
Q
Q
H
A
T
U
U
U
G
K
L1
D
M
N1
C
V1
V2
V3
V3
V
V1
W
V1
V2
V3
V3
V
V1
W


Part List

A  Lower leg left front - 1pc	**B**  Lower leg left back - 1pc	**C**  Lower leg right front - 1pc
D  Lower leg right back - 1pc	**E**  Upper leg left front - 1pc	**F**  Upper leg left back - 1pc
G  Upper leg right front - 1pc	**H**  Upper leg right back - 1pc	**K**  Cap for lower HB&FB - 2pcs
L  Horizontal bar HB - 1pc	**L1**  Horizontal bar FB - 1pc	**M**  Lower side panel HB-FB - 2pcs
N  Horizontal bar HB- 1pc	**N1**  Horizontal bar FB- 1pc	**O**  Horizontal bar - 3pcs
P Upper horizontal bar - 2pcs	**Q**  Side rail - 2pcs	**R**  Slats - 4pcs
S  Slats - 4pcs	**T**  Lower support slat - 1pc	**U**  Leg support - 3pcs
V  Front drawer panel - 2pcs	**V1**  Left / right drawer panel - 4pcs	**V2**  Back drawer panel - 2pcs
V3  Drawer bottom - 4pcs	**W**  Support drawer - 2pcs	

Hardware List

1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	**2**  (Ø15)1/4"*80mm Hex-Head bolts (14pcs)	**3**  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)
4  (Ø12)1/4"*30mm Hex-Head bolts (4pcs)	**5**  1/4"*15 (9.5mm) Horizontal-Hole bolts(34pcs)	**6**  (Ø12)1/4"*40mm Hex-Head bolts (6pcs)
7  (Ø10)1/4*95mm Connecting bar (4pcs)	**8**  Ø4*30mm Wood screws (42pcs)	**9**  (1/4")4.5*58mm Allen key (1pc)
10  100*20*54mm Wheels (8pcs)	**11**  70*35*19 mm Drawer stopper (3pcs)	**12**  Ø8*30mm Wood dowel (24pcs)
13  Ø10*20mm Wood dowel (8pcs)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

 (Phillip head screwdriver)





DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

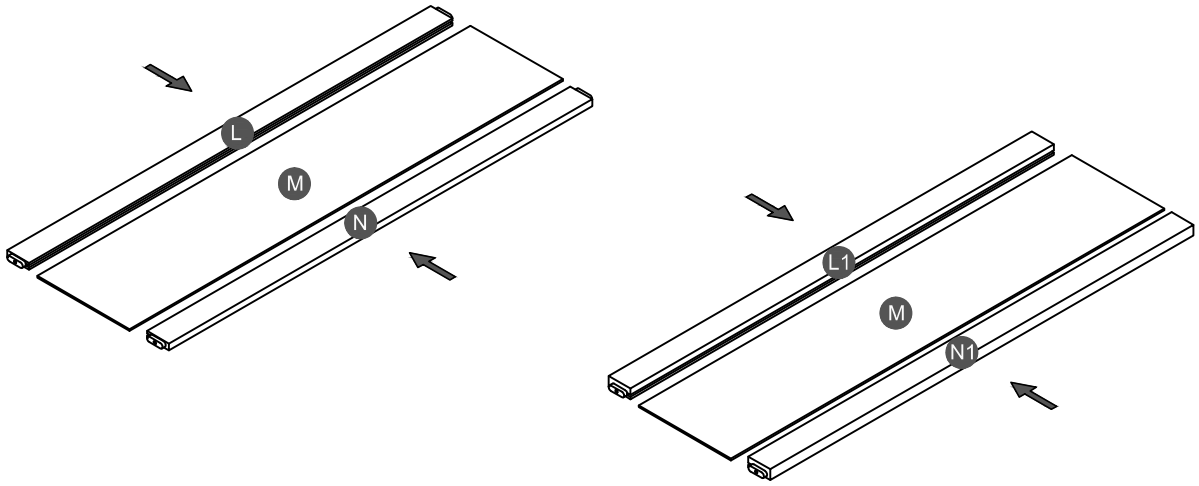
STEP 1:



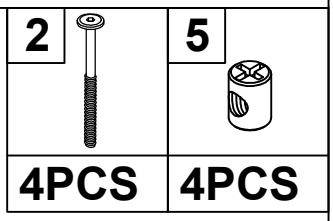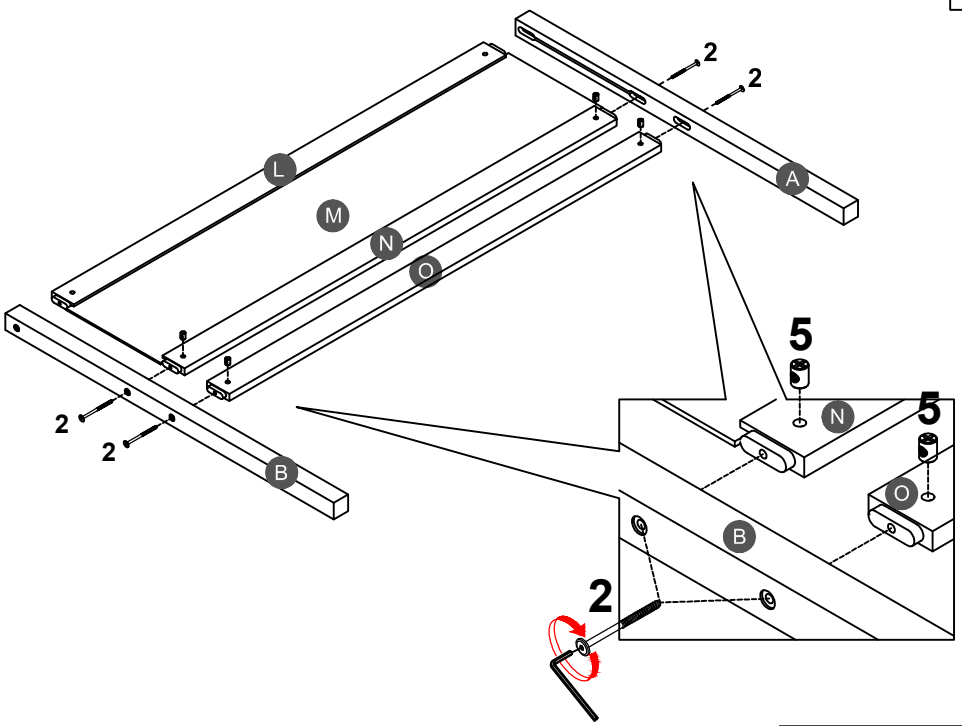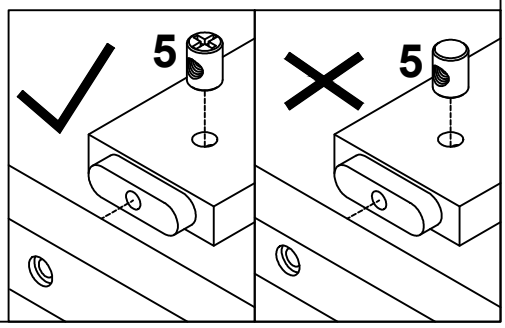STEP 2:








Note:Part 5 will face up with the "x" mark on it,
otherwise it cannot be tightened


STEP 3:


2	5	6	7
2PCS	2PCS	3PCS	2PCS

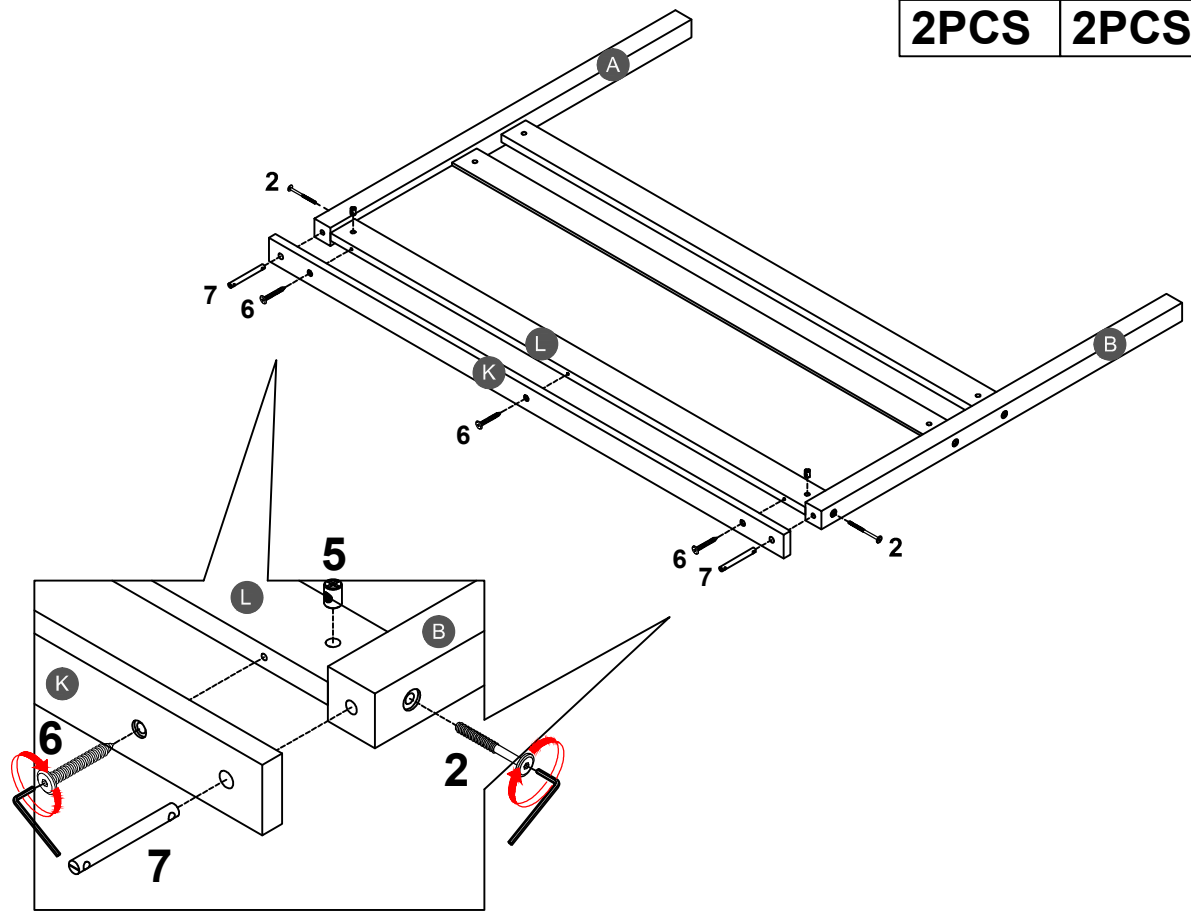

STEP 4:

2	5
2PCS	2PCS

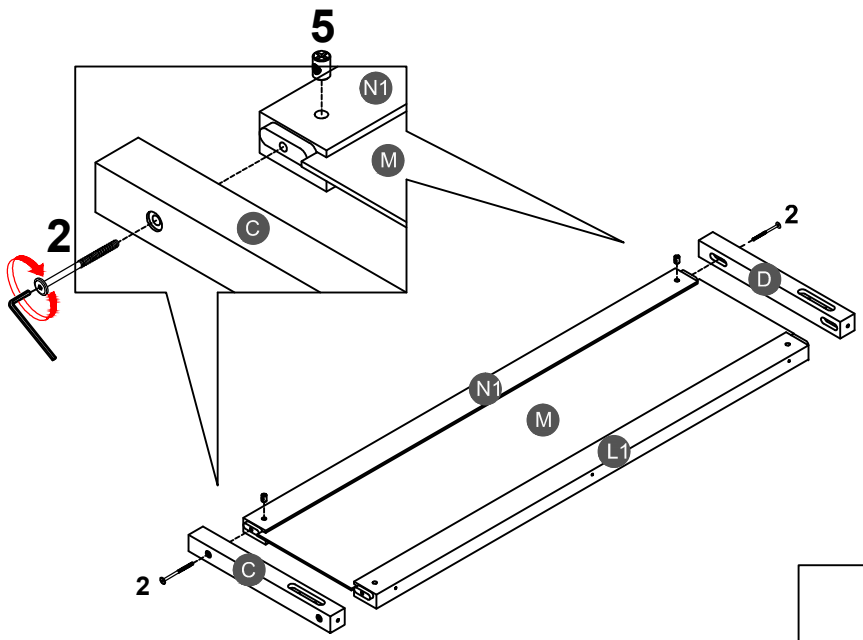


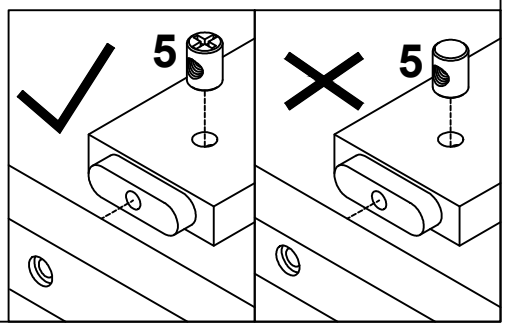

Note:Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 5:

2	5	6	7
2PCS	2PCS	3PCS	2PCS

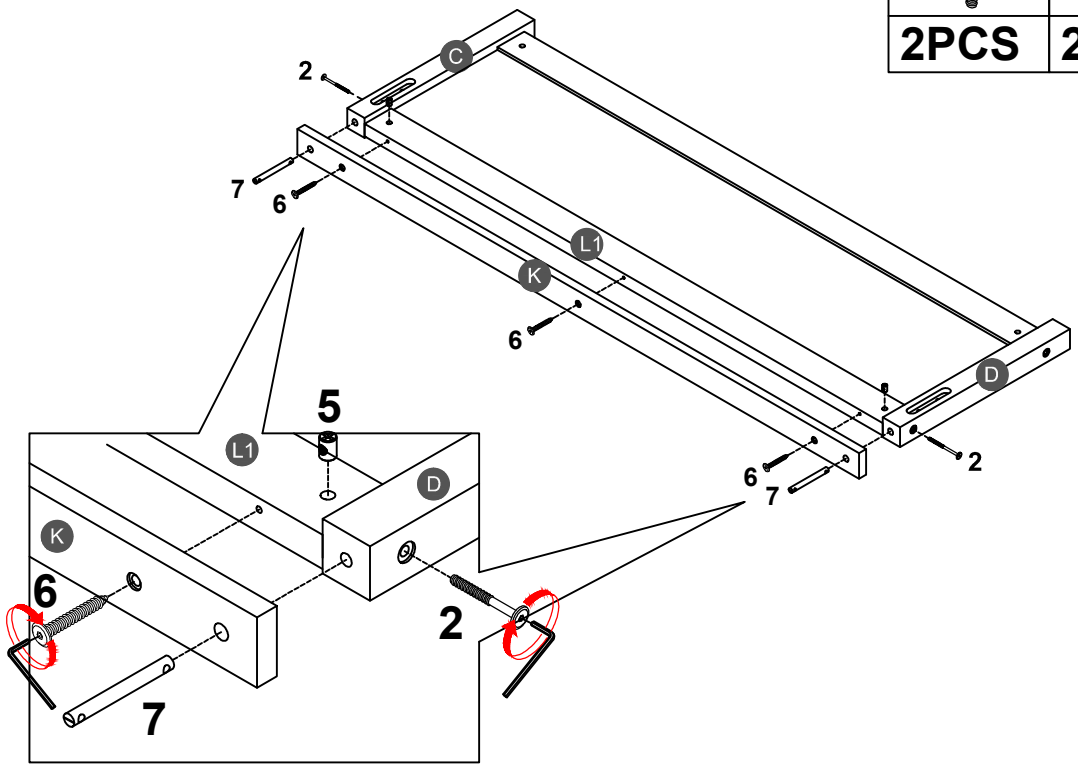

STEP 6:


8	11
6PCS	3PCS

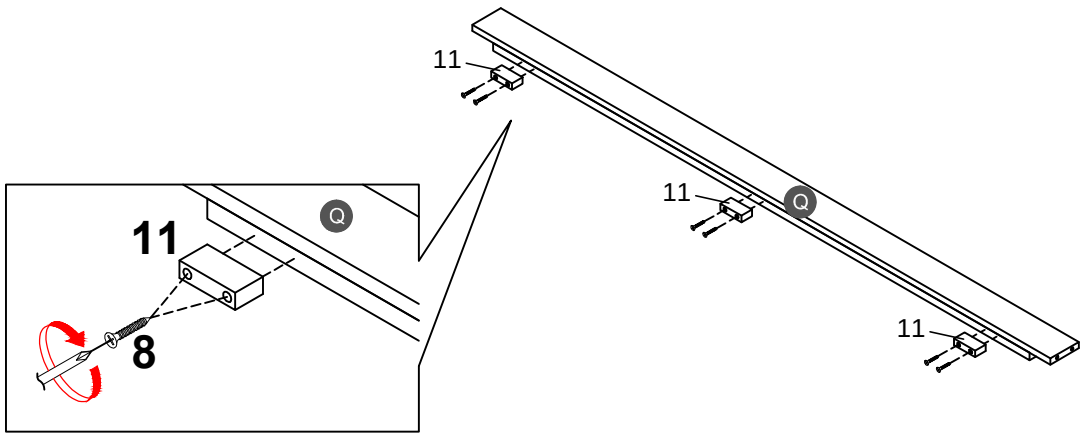

Drawer stopper (11) with lower side rail front (Q) by using screw (8).


STEP 7:

1	5
8PCS	8PCS

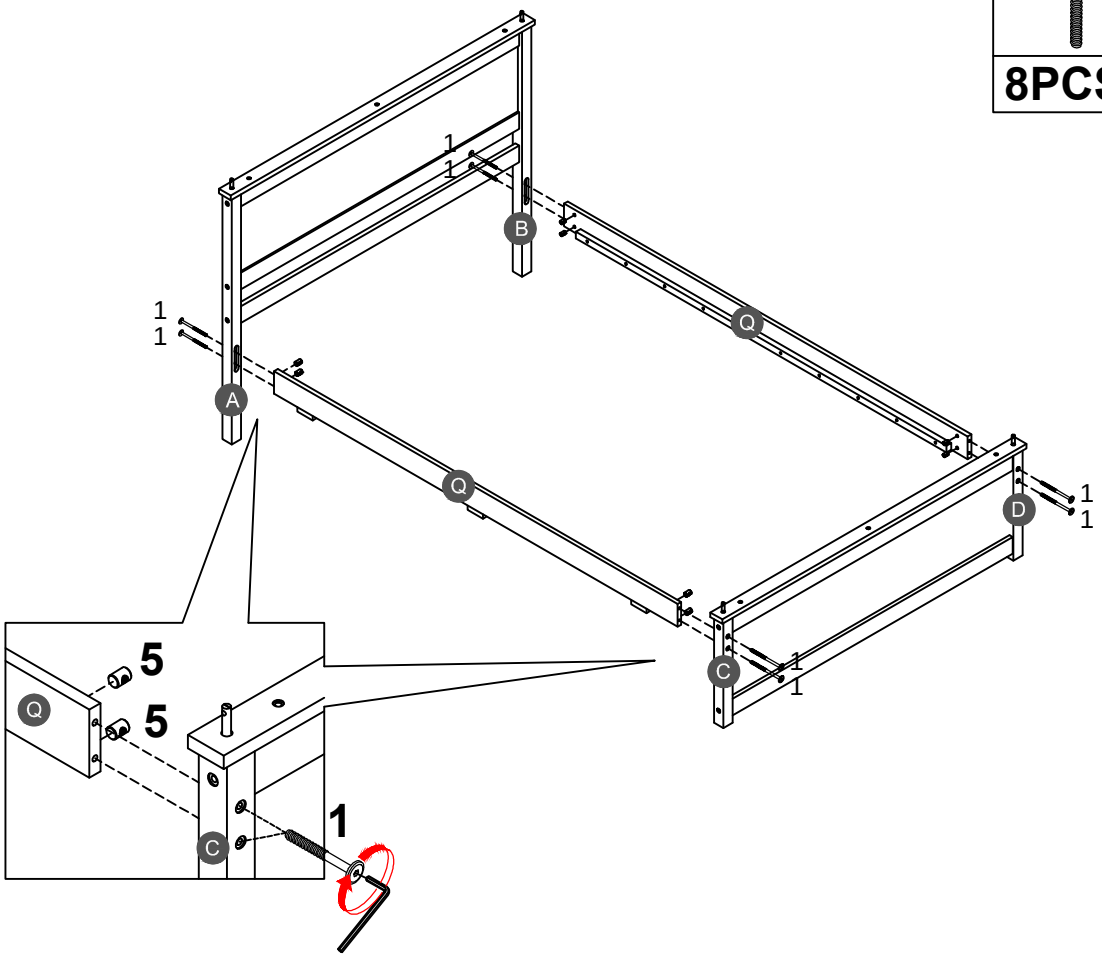


STEP 8:

2	5
2PCS	2PCS

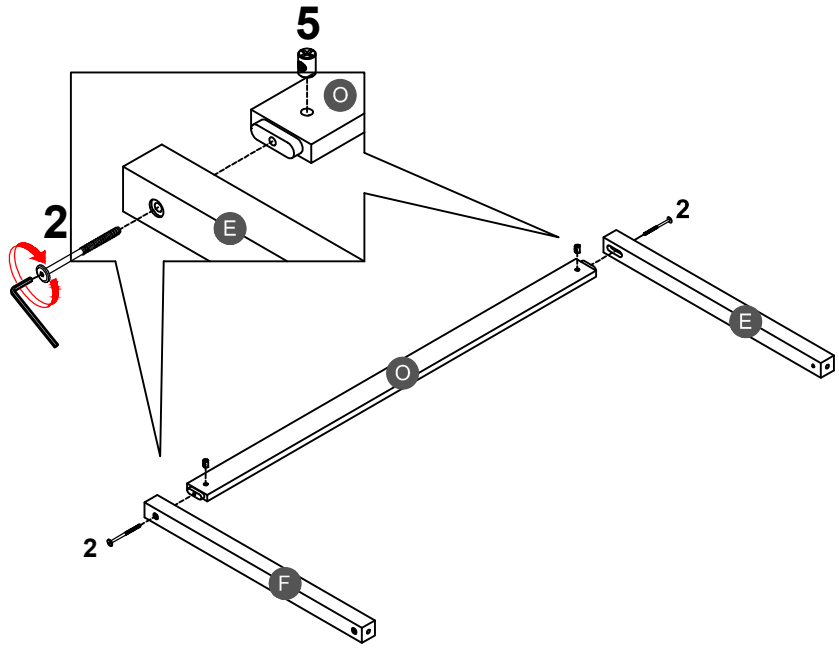


STEP 9:

2	5
2PCS	2PCS

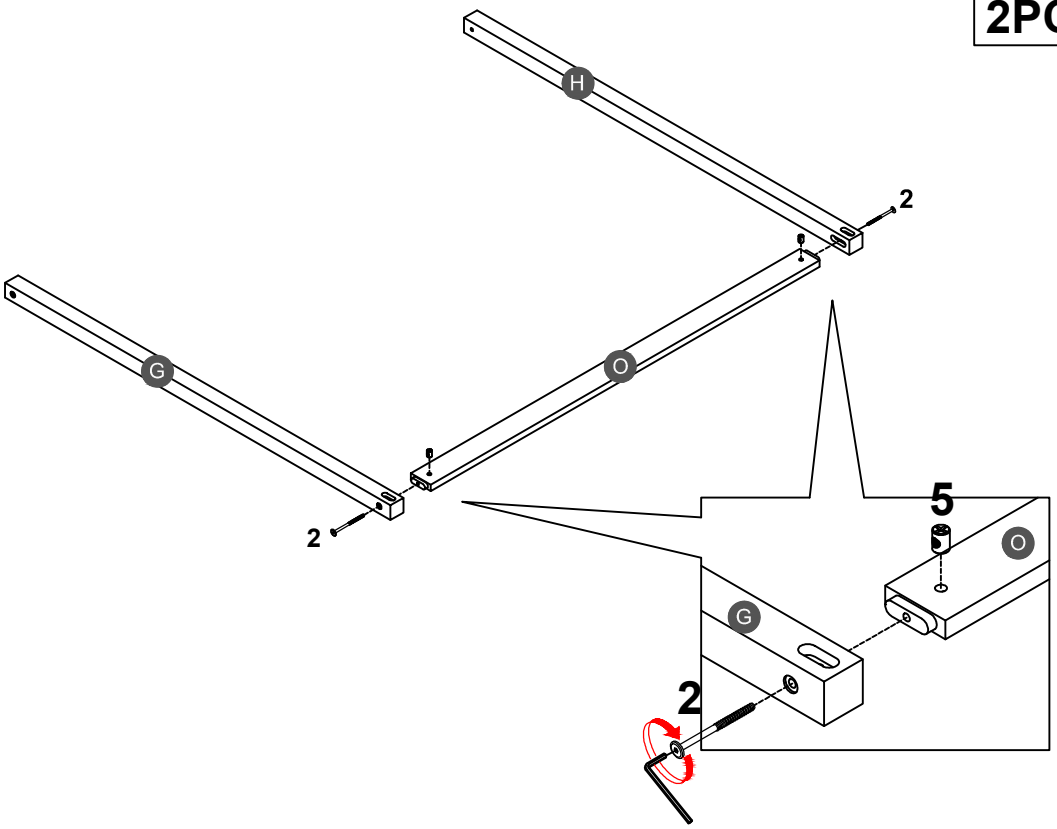


STEP 10:


1	5
4PCS	4PCS

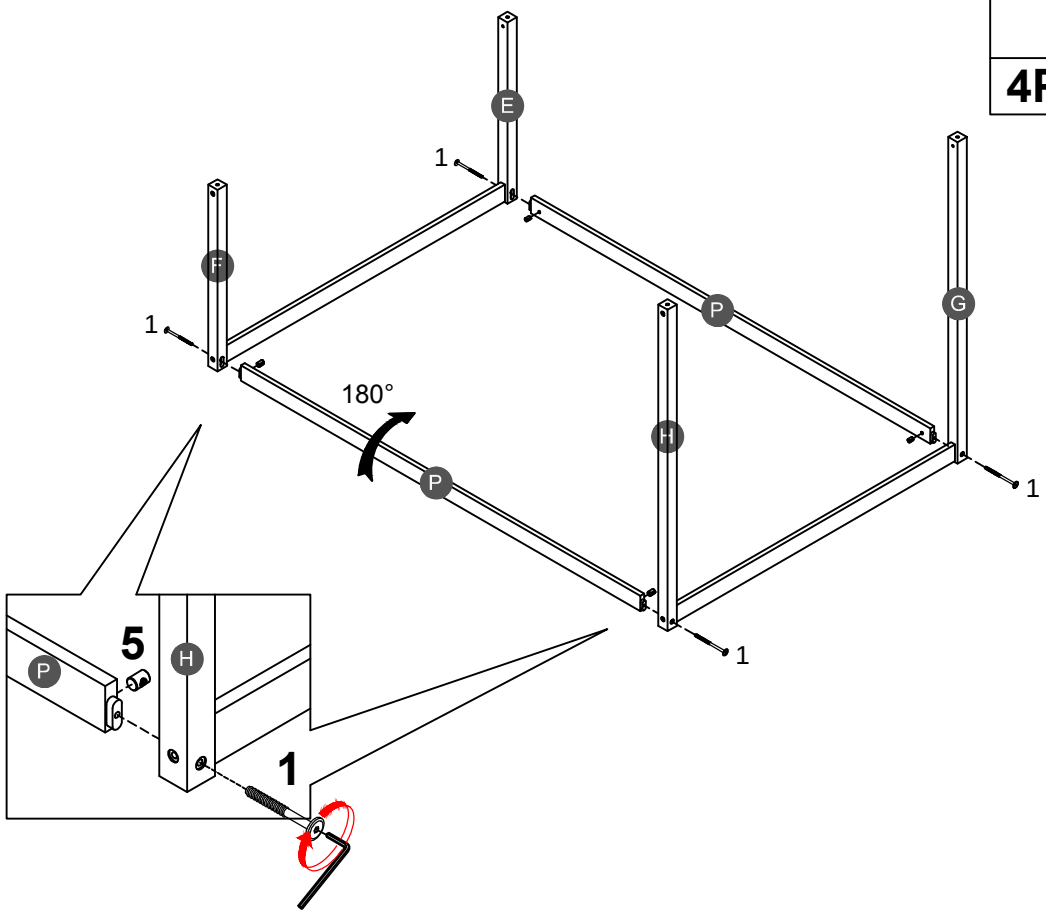

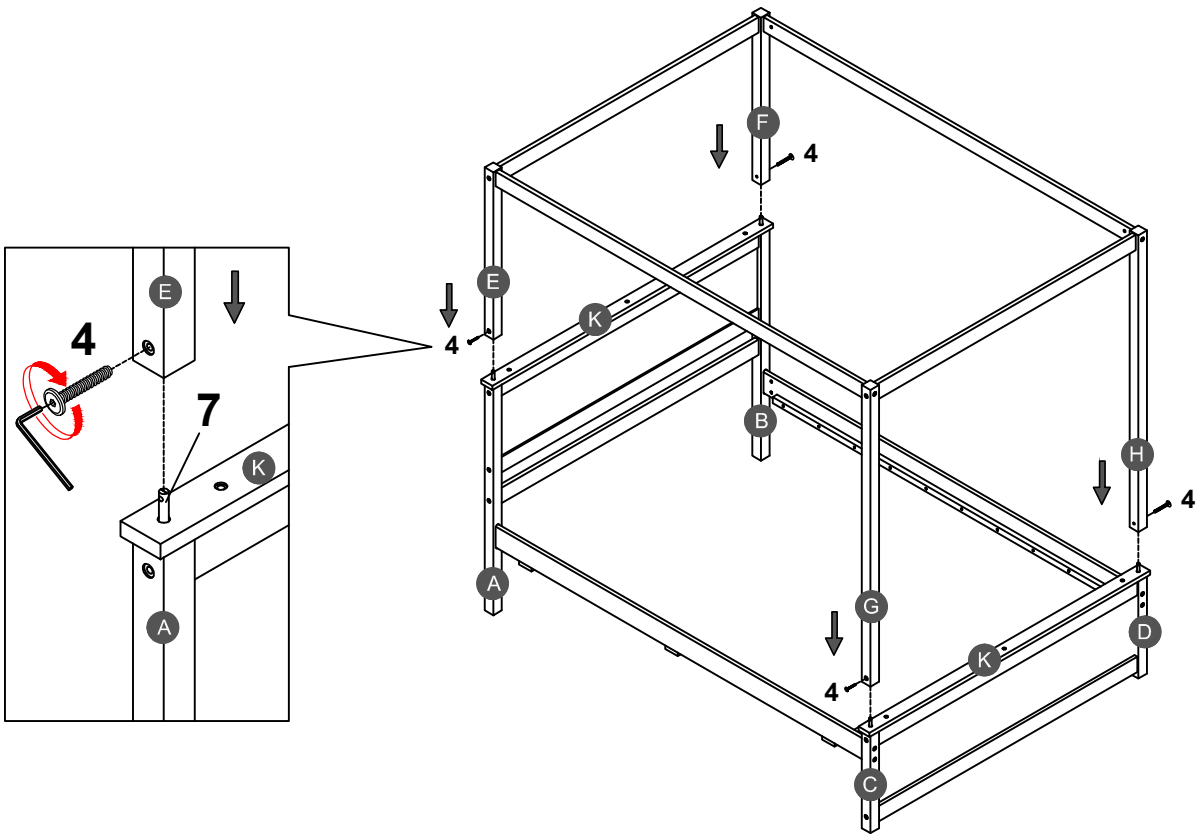STEP 11:




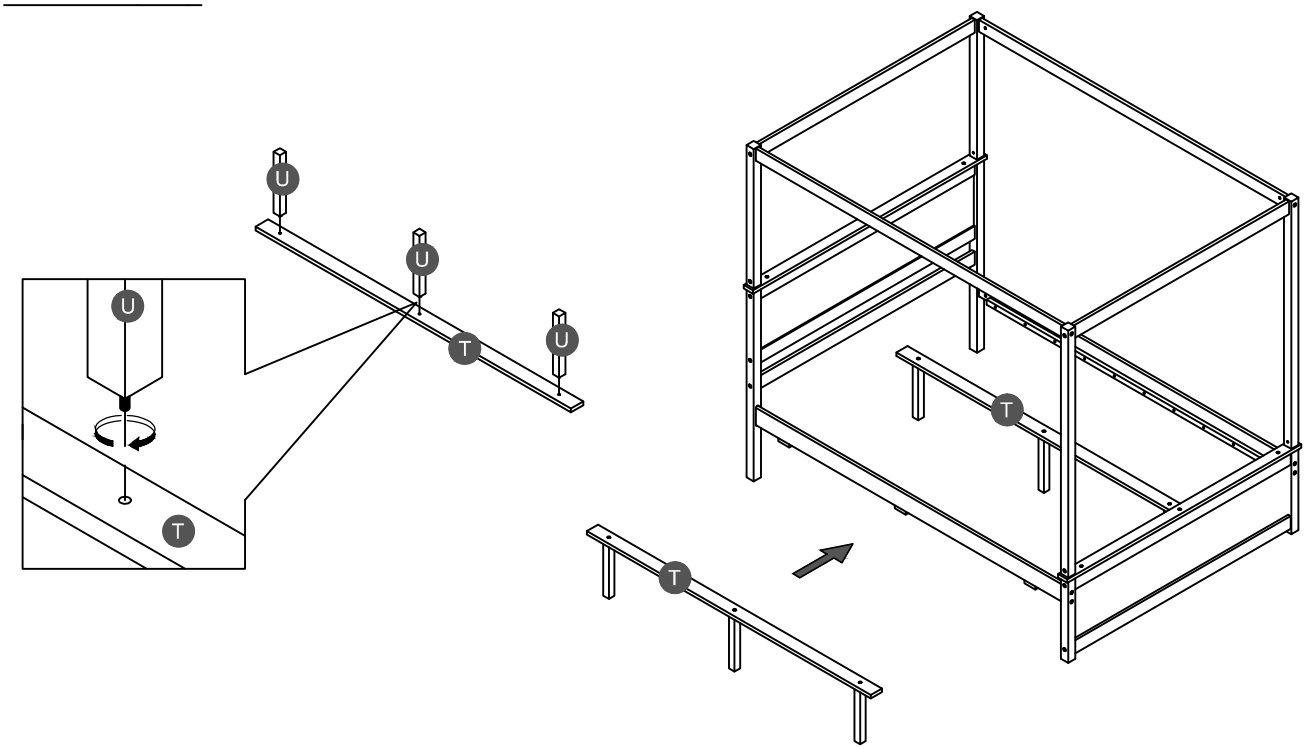STEP 12:




Assembling leg support (U) with lower support slat (T) later rotate, Move support slat inside Full bunkbed.

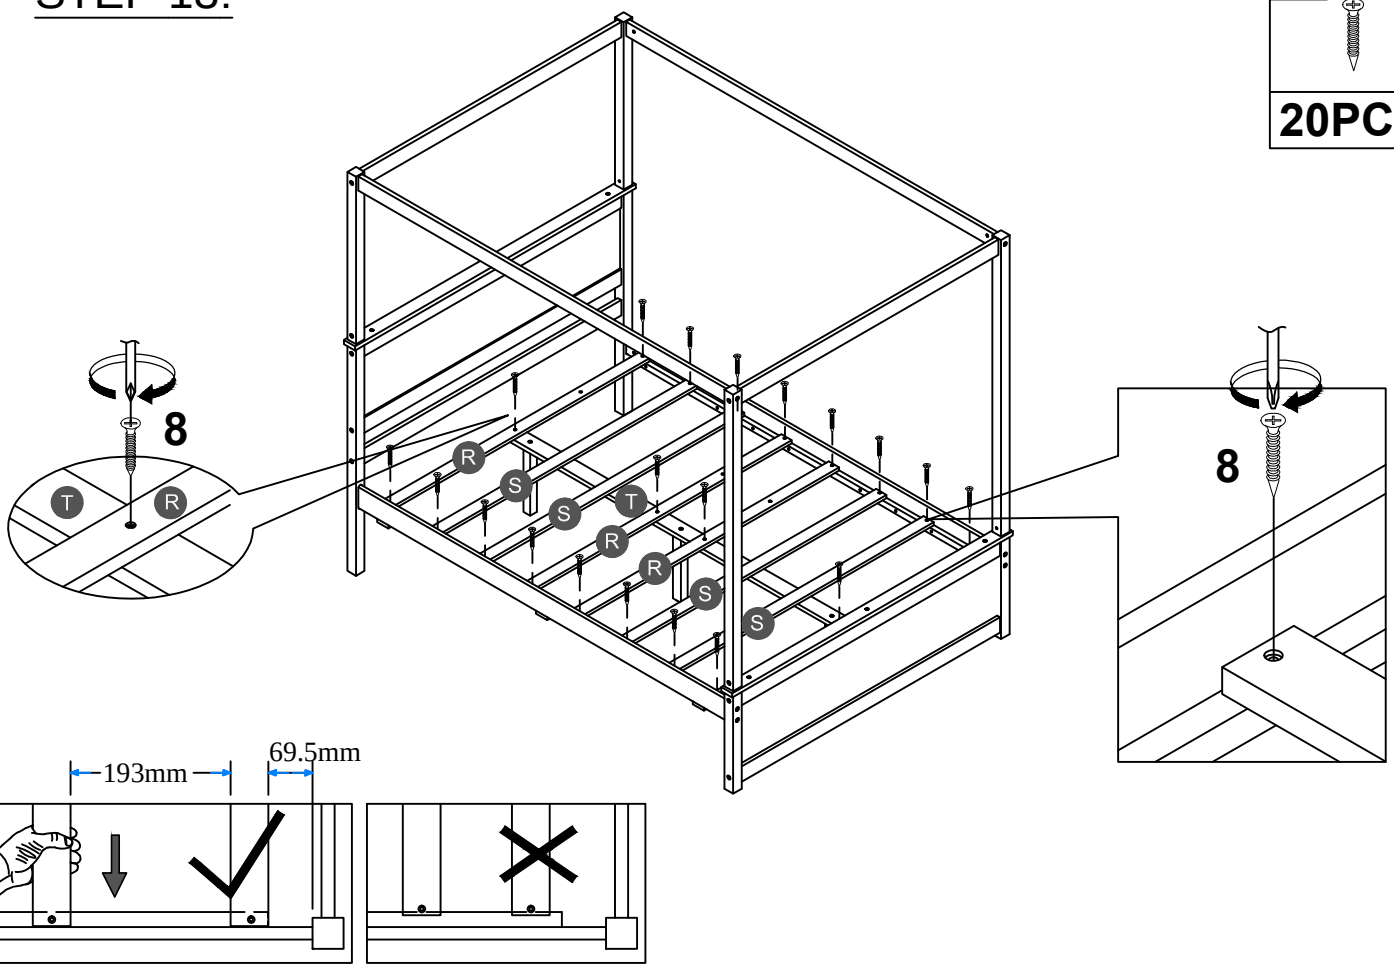
STEP 13:



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

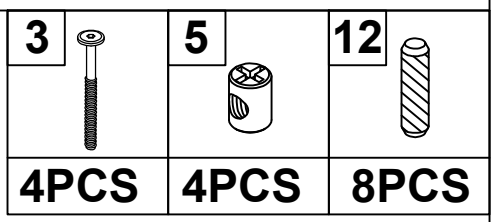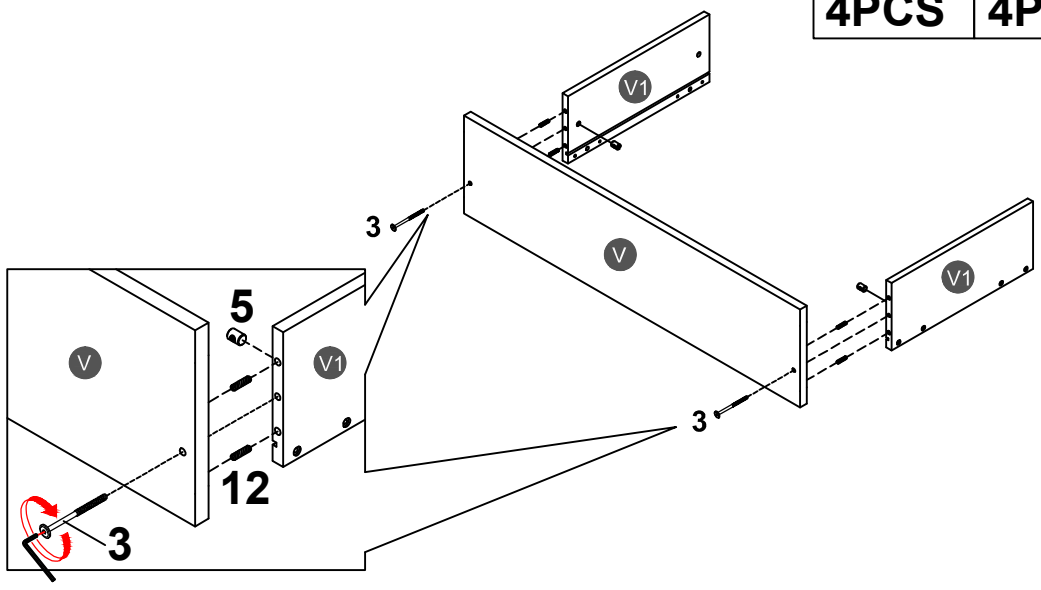STEP 14:






2pcs

STEP 15:


3	5	12
4PCS	4PCS	16PCS

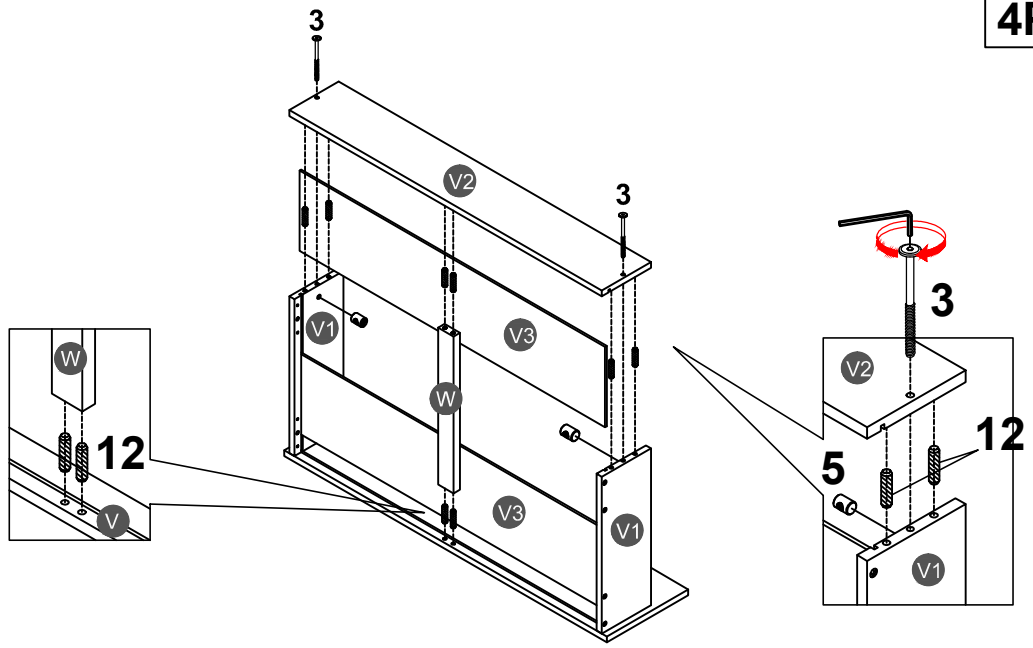

2pcs


STEP 16:

8	10	13
16PCS	8PCS	8PCS

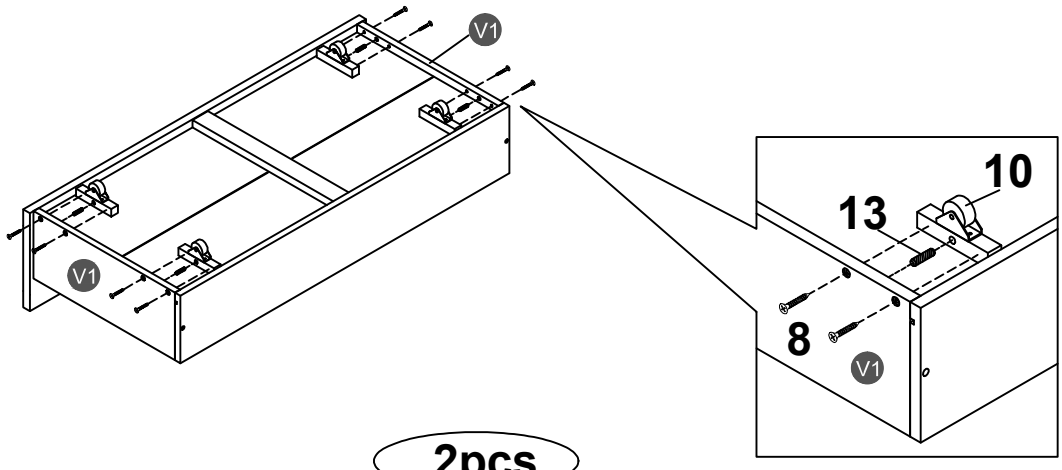

2pcs

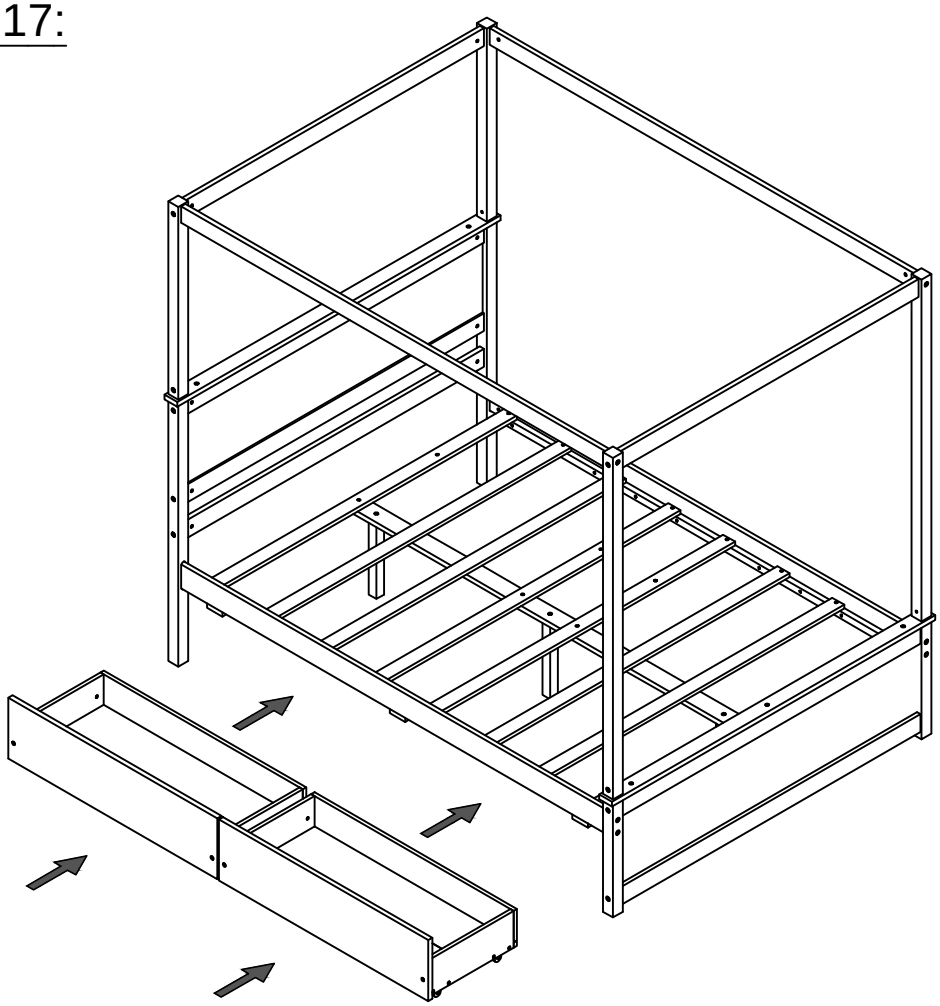STEP 17:



Push Drawer under the bottom of Bunkbed.

