




ASSEMBLY INSTRUCTIONS

DRESSER





(BOX 1)

BOX OF DRESSER


| NO | ITEM | QTY |
|----|---|-------|
| A | DRESSER  | 1 pc |
| B | BUN FOOT  | 4 pcs |
| C | BOTTOM SUPPORT  | 1 PC |

(BOX 1)



HARDWARE LIST

| NO | ITEM | QTY |
|----|--|-------|
| 1 | JCBC M6 x 50mm  | 4 PCS |
| 2 | Spring Washer 1/4" Rbw  | 4 PCS |
| 3 | Flat Washer 1/4"ID x 19mmOD Blk  | 4 PCS |
| 4 | ALLEN KEY m4x65mm Blk  | 1 pc |

STEP 1 : Pull the drawer and take out the Bunfoot carton (B). Attach the Bunfoot (B) at the bottom Night Stand (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Wrench (4).

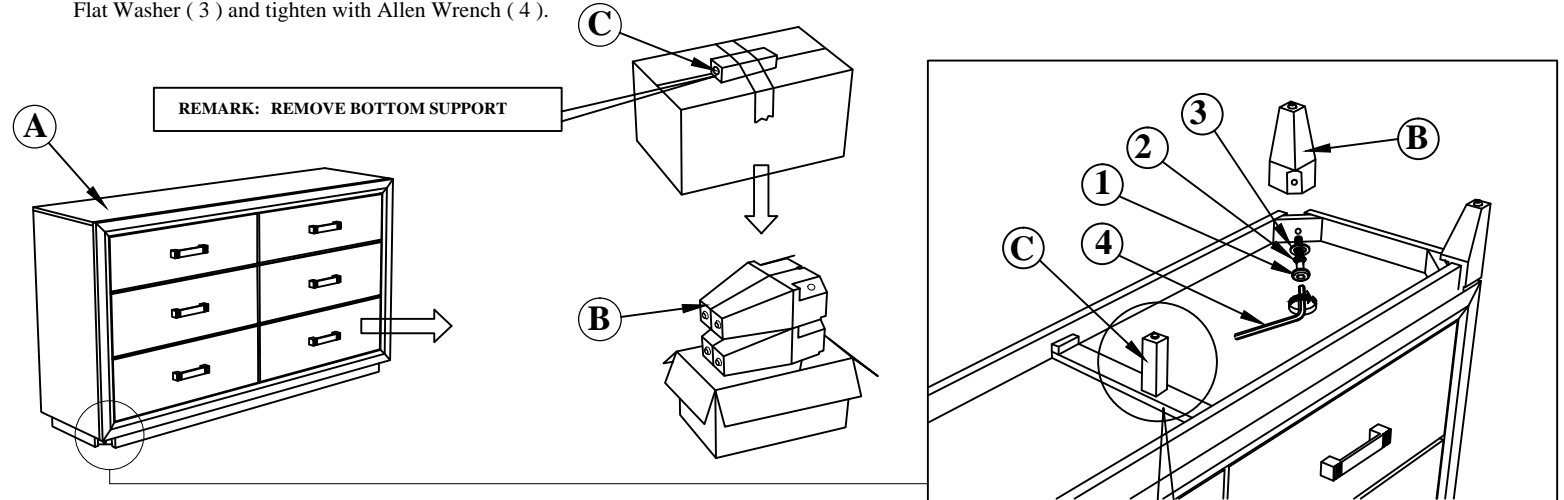

LEVELER ADJUSTER

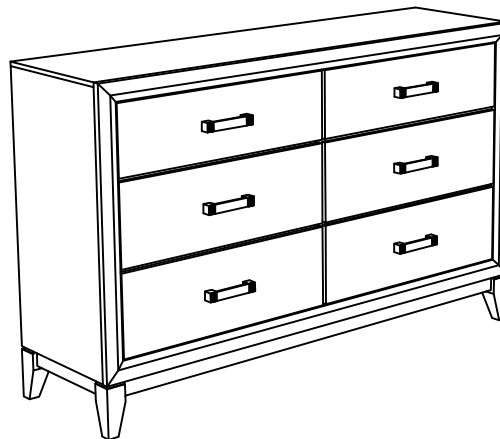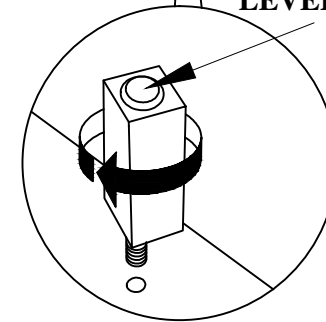

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.