



# INSTALLATION GUIDE

**STOP, please make sure the cabinet is level before installing the countertop**


| COMPONENTS                                                                                                                                                                                                        | TOOLS                                                                                                                                    | HARDWARE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>• Base cabinet</li><li>• Hardware</li><li>• Countertop*</li><li>• Sink basin*</li><li>• Backsplash*</li></ul> <p><small>*Not included in Base Cabinet products.</small></p> | <ul style="list-style-type: none"><li>• Permanent marker</li><li>• Caulking gun</li><li>• Power Drill</li><li>• Drywall Screws</li></ul> | <div><div><div>A</div><div>Bolts (4)</div></div><div><div>C</div><div>Washers (4)</div></div><div><div>B</div><div>Wing nuts (4)</div></div><div><div>D</div><div>Undermount clips (4)</div></div></div> |

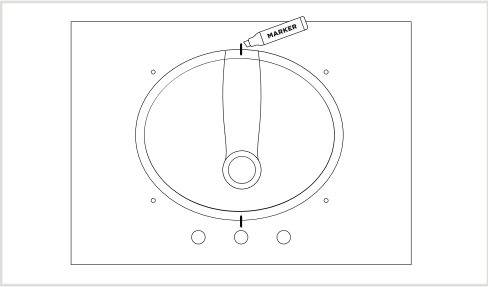


**STEP 1 - PLACE & TRACE**  
Place the sink basin on the bottom of the countertop, making sure to center over the opening. Draw guide lines on the countertop and the basin in two locations.

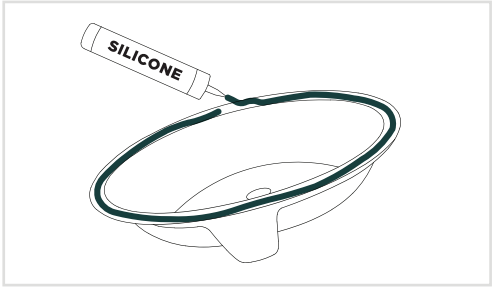

**STEP 2 - PREPARE SINK BASIN**  
Using a caulk gun, apply a heavy amount of silicone of your choice on the top side of the sink basin edge.

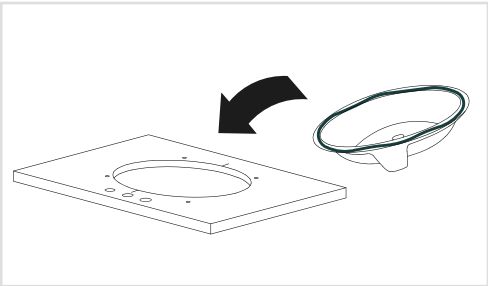


**STEP 3 - FLIP & SET IN PLACE**  
Carefully flip the sink basin over and place it so the guide lines match up in both locations.

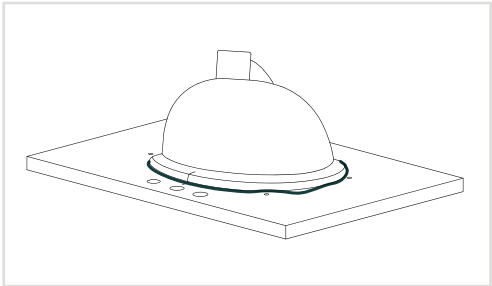


**STEP 4 - DRY & SET**  
Press down on the sink basin to seal the silicone. Remove any excess. Follow dry time recommendation found on your product, typically 12 to 24 hours.

# INSTALLATION GUIDE

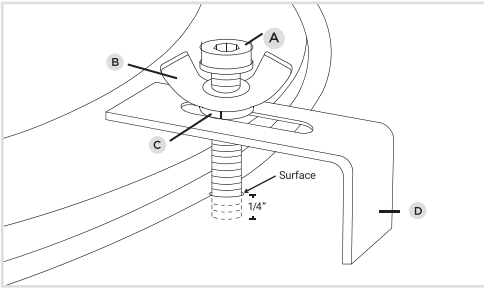


## STEP 5 - ATTACH UNDERMOUNT CLIPS

Please tighten Bolt (A) into wing nut (B) slide on washer (C) and guide through Under-mount clip (D) opening into threaded bolt hole in the countertop. ONLY-Hand Tighten Bolt (A) to a depth of about 1/4" below counter-top surface. Then secure the Sink with the under-mount clip (D) by Tightening wing nut (B) only

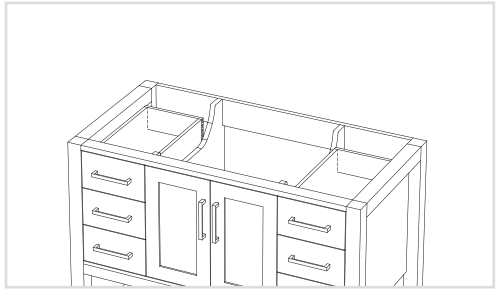


## STEP 6 - ATTACH BASE CABINET TO WALL

Place cabinet in desired location and determine where the wall studs are.

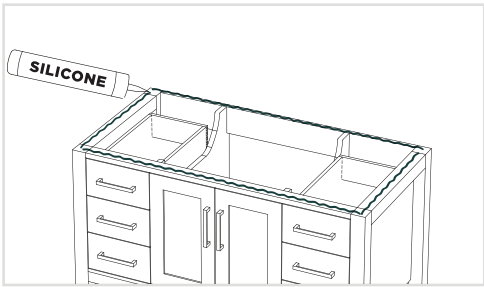


## STEP 7 - PREPARE BASE CABINET

Using a caulking gun, apply silicone around the top of the base cabinet.

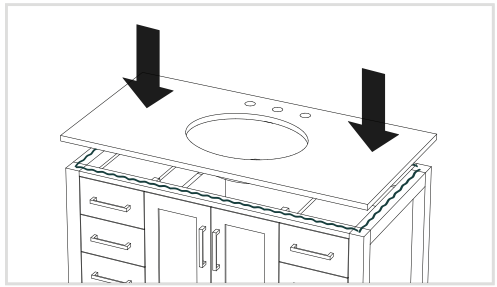

## STEP 8 - SET COUNTERTOP IN PLACE

Carefully place the countertop, with the sink attached, onto the cabinet and press down firmly. Wipe away any excess silicone immediately.

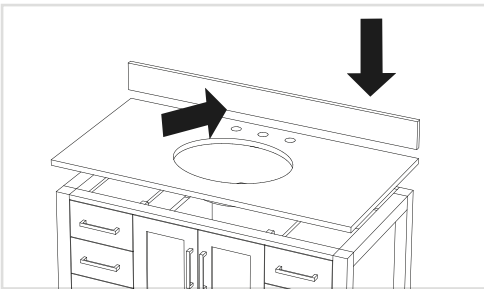

## STEP 9 - SET BACKSPLASH

After the vanity is in place, use a caulking gun to apply silicone to the back and bottom unfinished sides of the backsplash. Press firmly down and back to set in place. Remove any excess silicone.