


HOW TO INSTALL YOUR BALUSTER


WROUGHT IRON PANEL - FORGE COLLECTION

IMPORTANT - PLEASE READ ALL INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION.

- These instructions are for a metal panel.
- Refer to your local building code for current regulations.

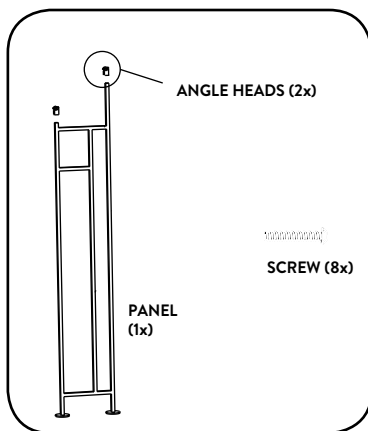


Parts included

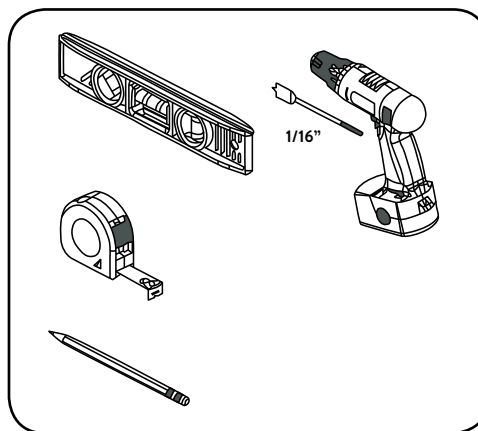


Recommended tools


1. Panel installation

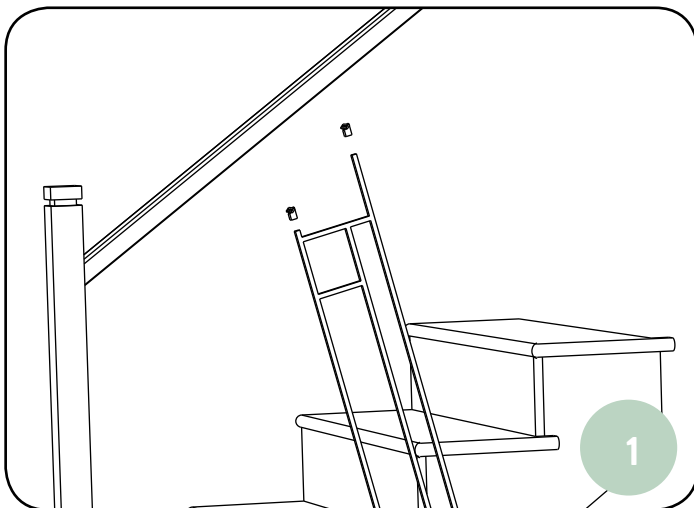


Insert the angle heads on top of the panel.

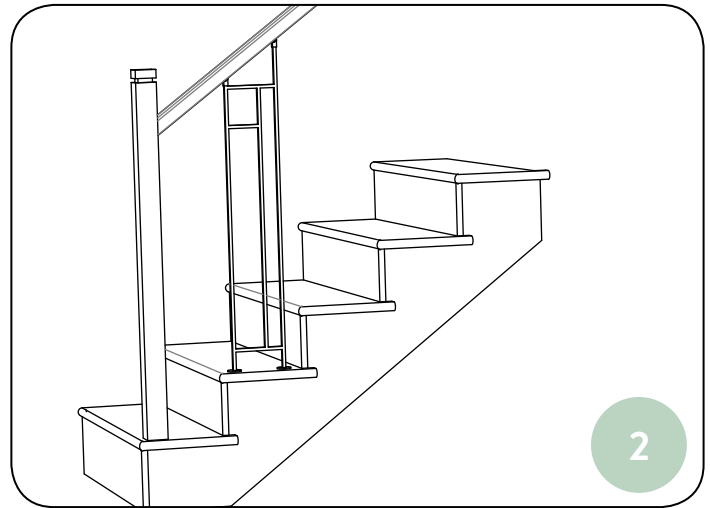


Make sure the panel is centered on the tread

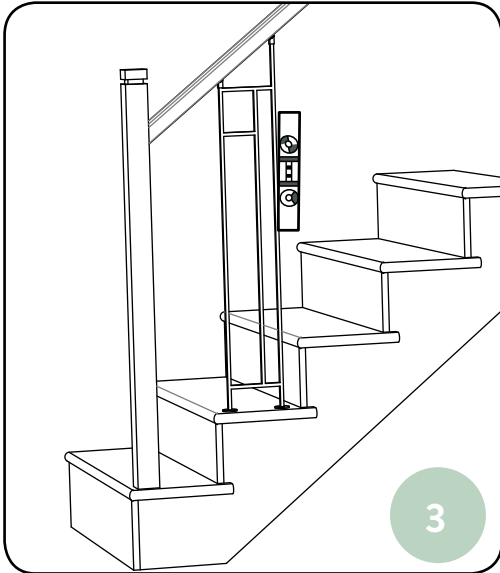


Using a level, make sure the panel is straight.

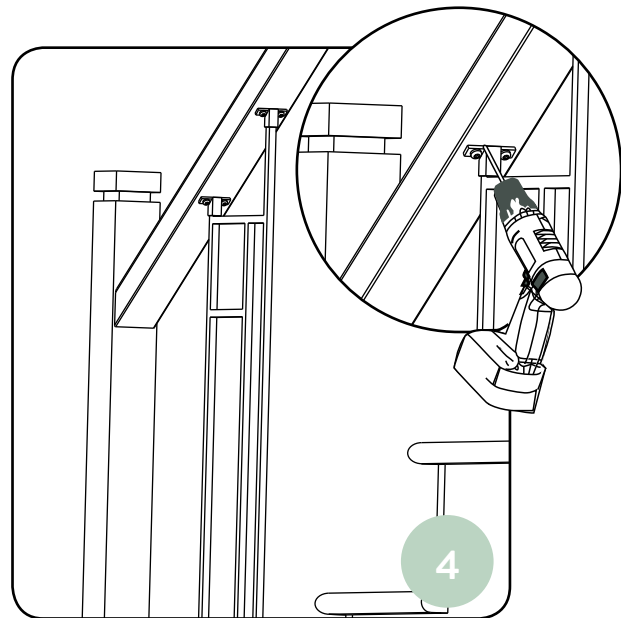

Drill 1/16" pilot holes. Then fix the panel to the bottom of the handrail.

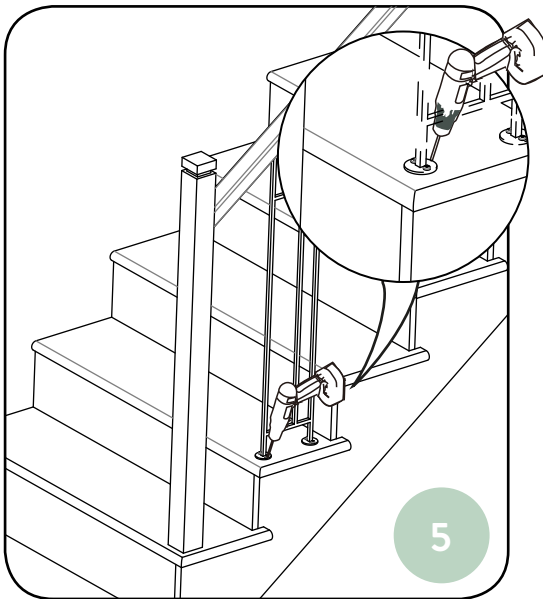

Drill 1/16" pilot holes.

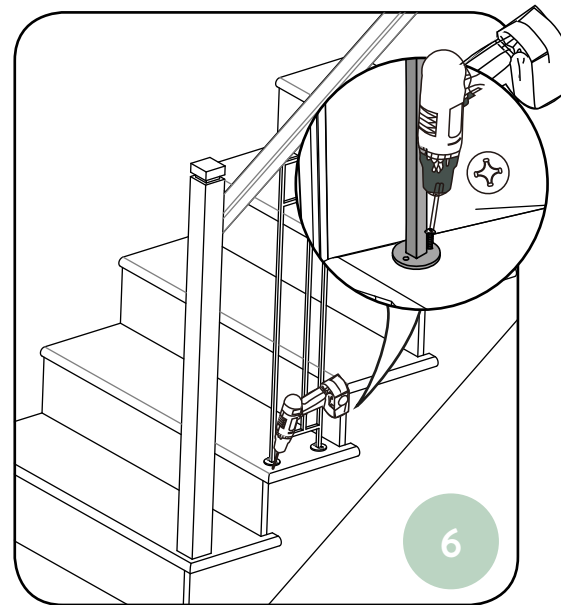

Fix the panel bases to the tread

DO NOT RETURN TO RETAILER

If you have any questions, please contact our customer service at:
info@colonialelegance.com or call toll free at: 1-800-361-2030

VISIT OUR WEB SITE

www.colonialelegance.com

***1 year limited warranty**