




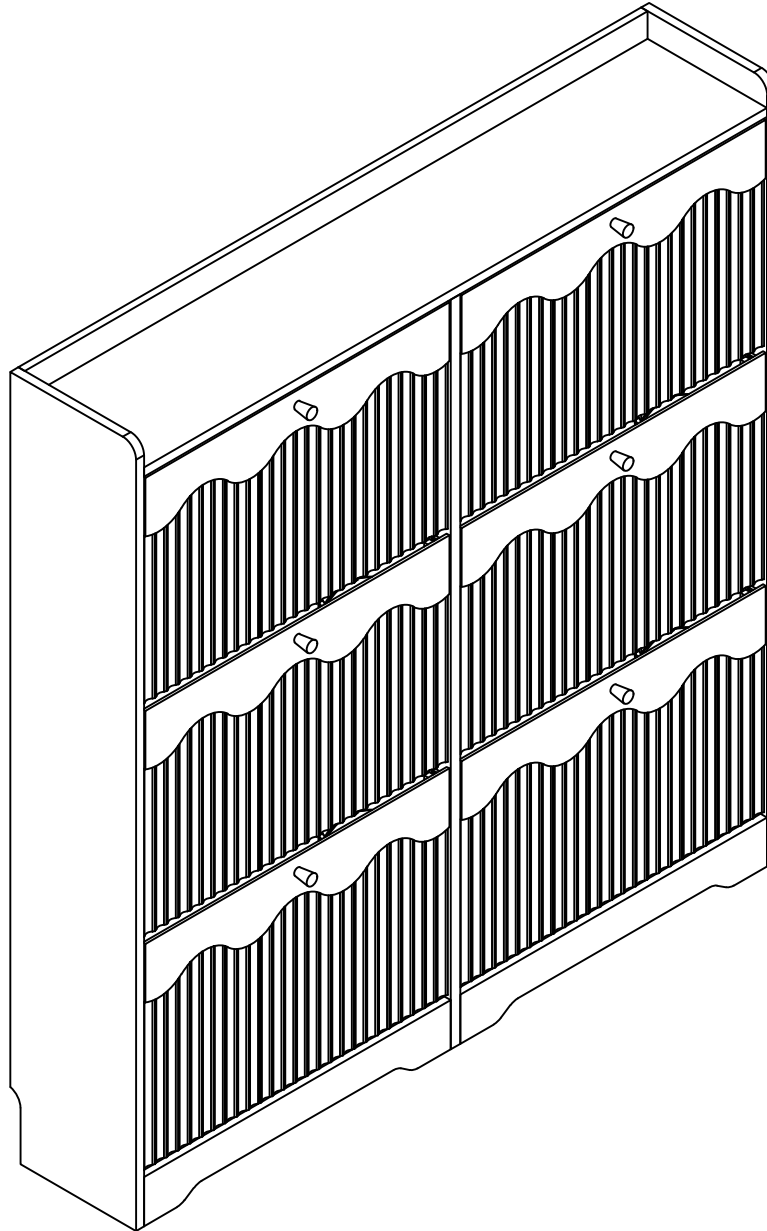


Please note: Items cannot be returned once assembled.

Installation & Assembly




IT IS RECOMMENDED
TO USE POWER TOOLS

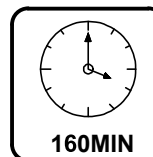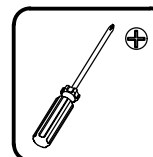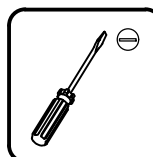


160MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

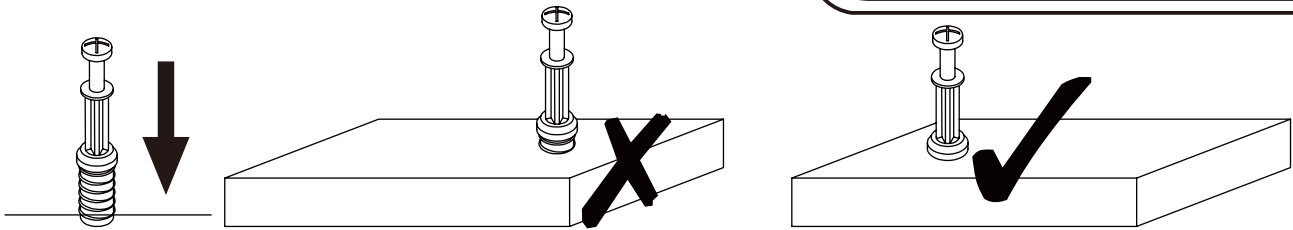


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

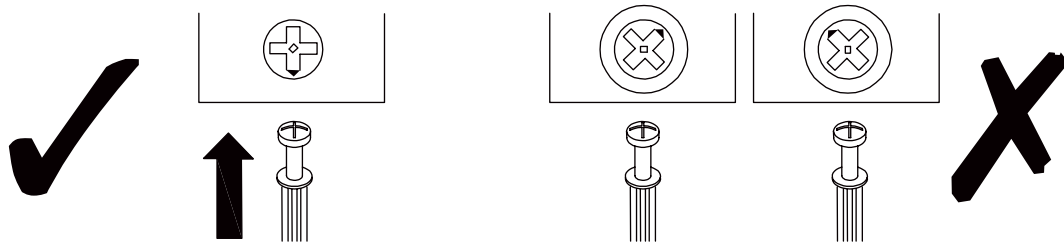











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

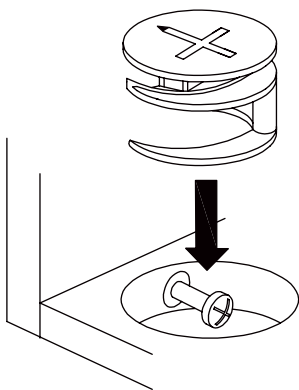




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.







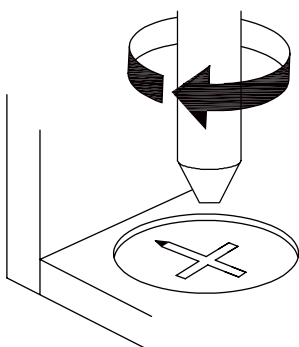


EN_Turn cam lock clockwise to tighten.

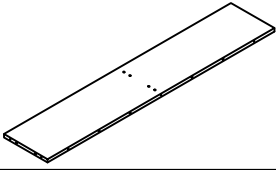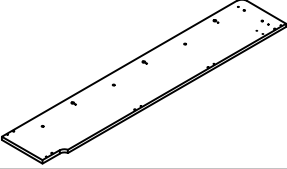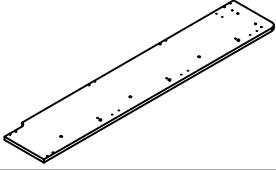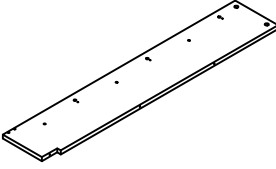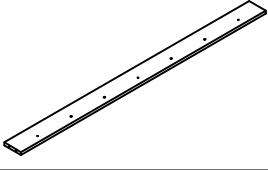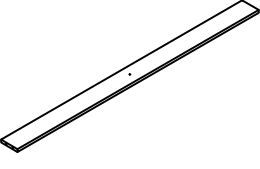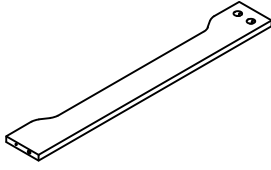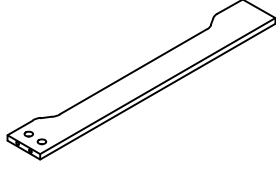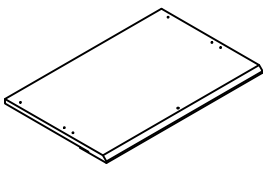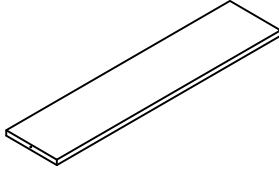NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x3	
⑦		x1	
⑧		x1	
⑨		x6	
⑩		x6	

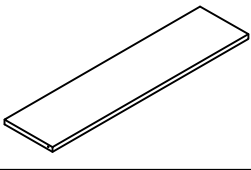
NO.	PARTS	QTY	SPARE
⑪		x12	
	 Hardware Kit	x1	

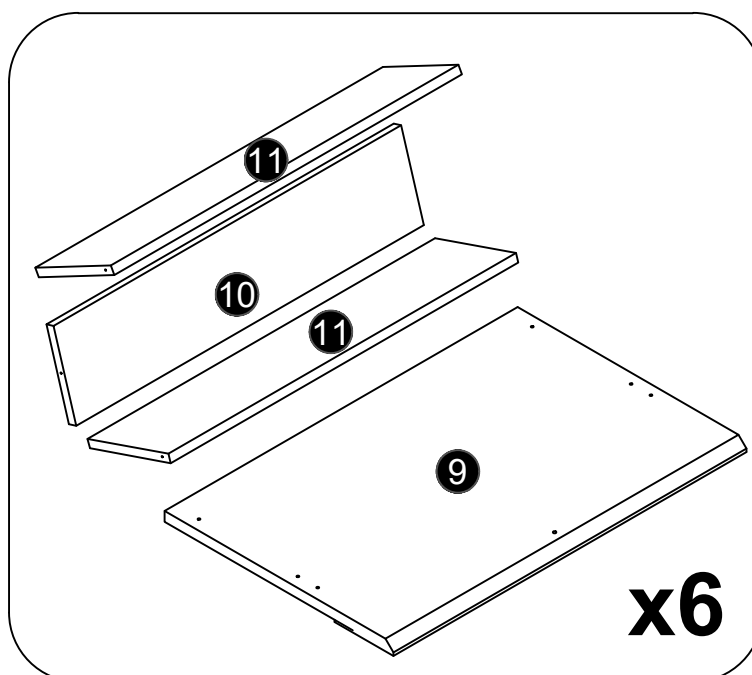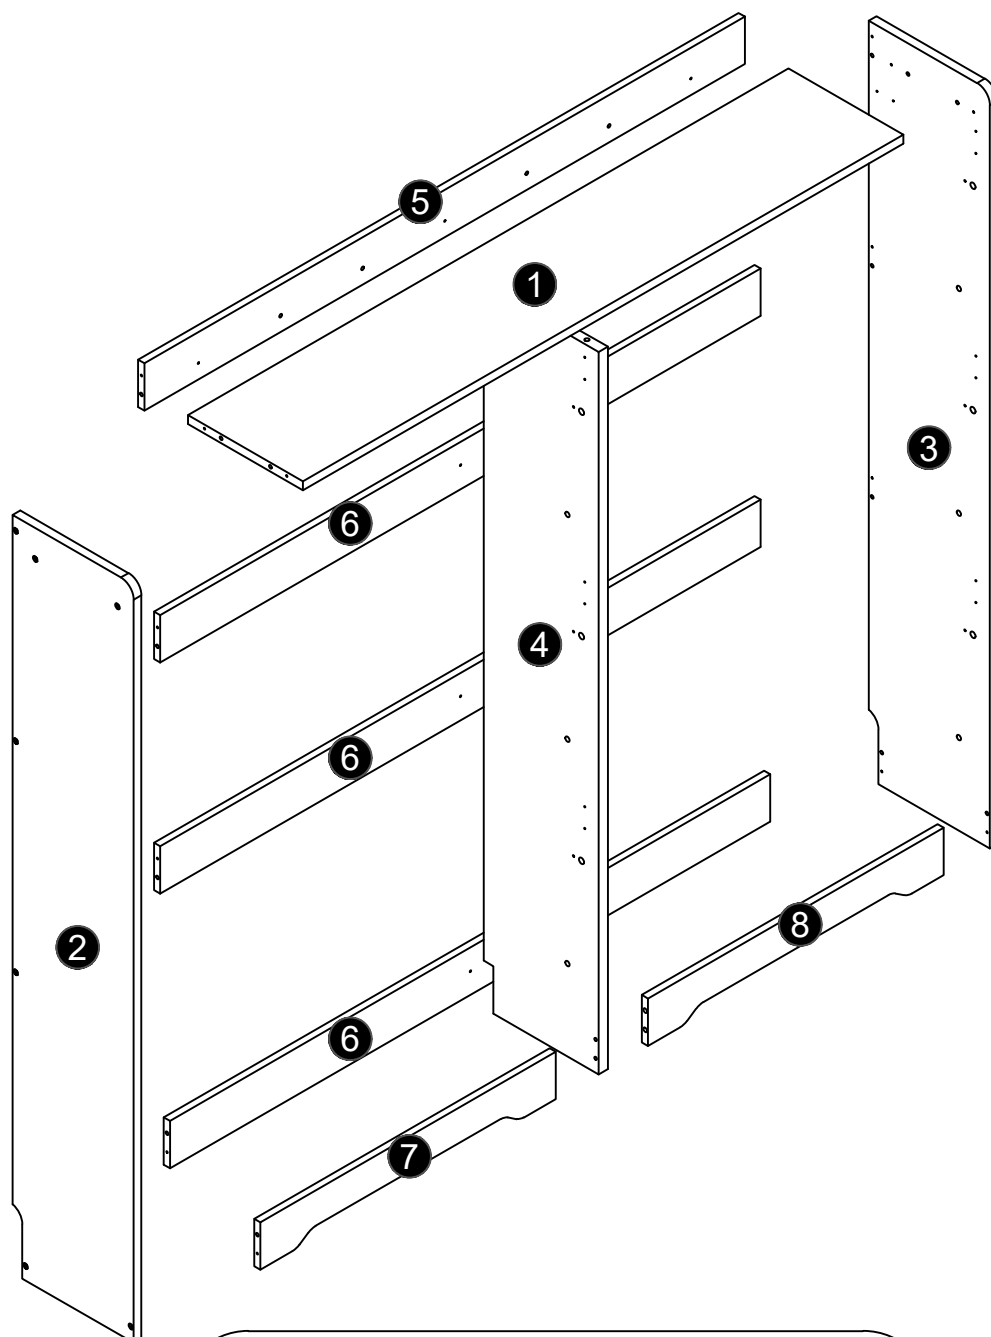

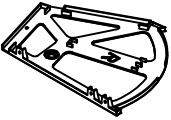
A x6 Ø6x35mm 	B x6 Ø15x10mm 	C x20 Ø6x30mm +2(spare) 	D x22 Ø4x35mm +2(spare) 	E x72 Ø3.5x12mm +4(spare) 	F x12 +1(spare) 
G x12 +1(spare) 	H x6 +1(spare) 	I x1 	J x6 J-1 J-2  	K x6 K-1 K-2  	L x6 
M x14 +2(spare) 	N x2 Ø6x30mm 	O x6 O-1 O-2  	P x2 P-1 P-2  	Q x12 Ø4x10mm +2(spare) 	R x6 
S x6 +1(spare) 					

F x3 	P x1 P-1 P-2  	Q x3 
--	---	--

01

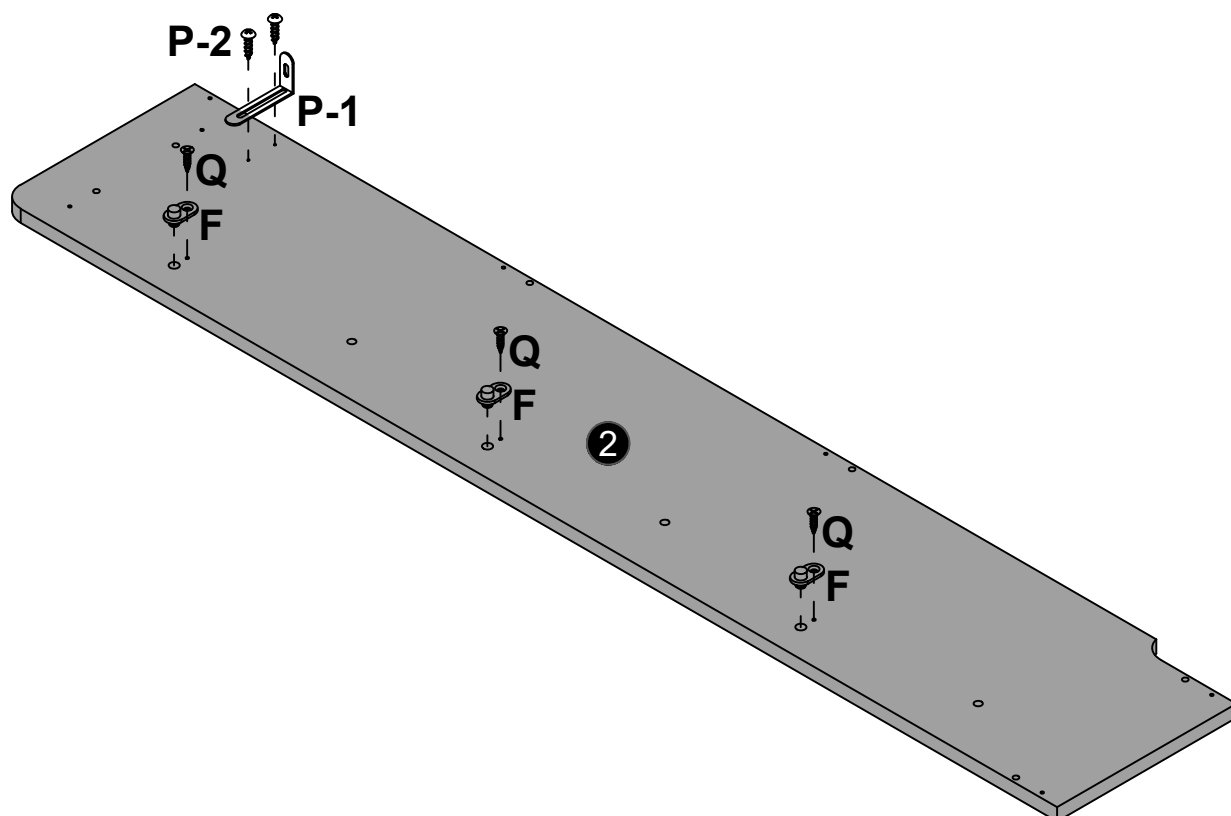

F x3



J x3



J-1




J-2

P x1




P-1




P-2


Q x3

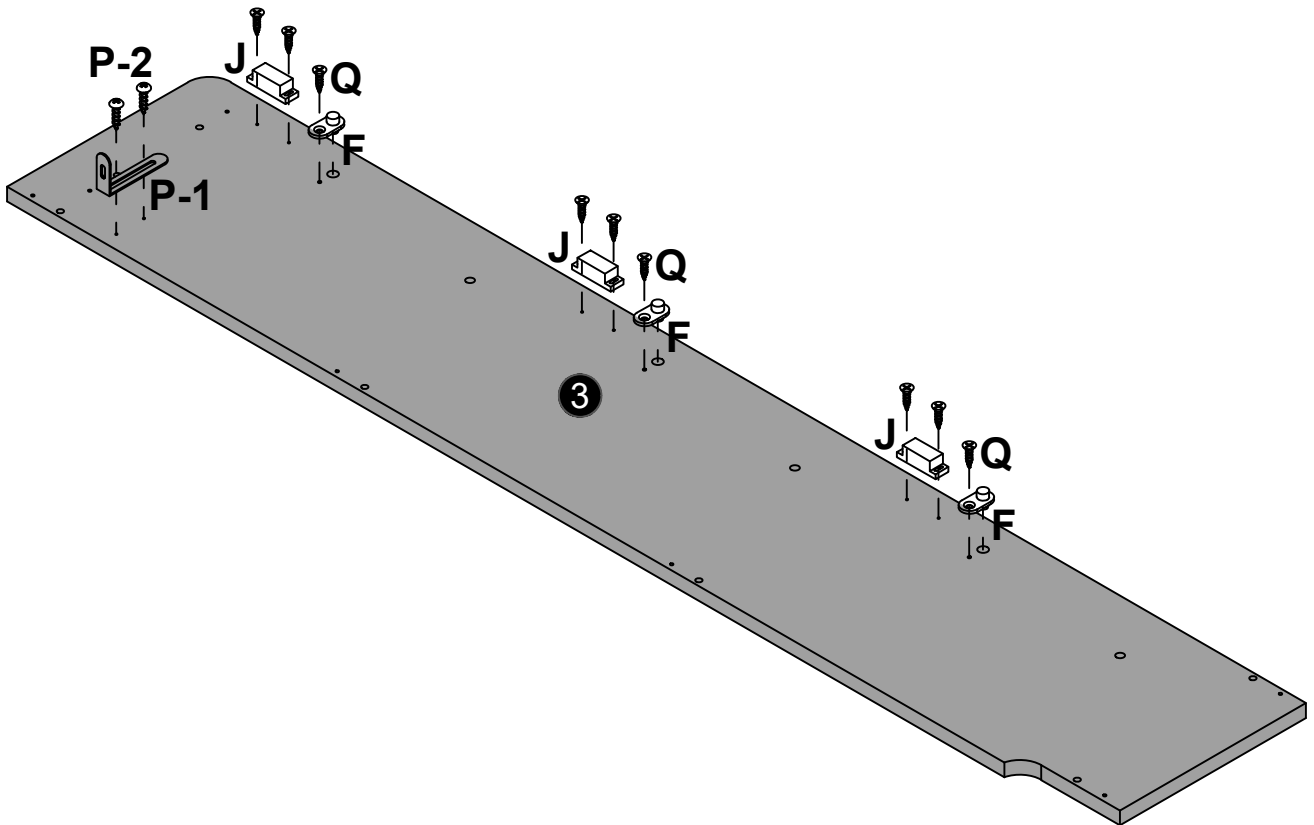

A x4



F x6



J x3




J-1




J-2


Q x6

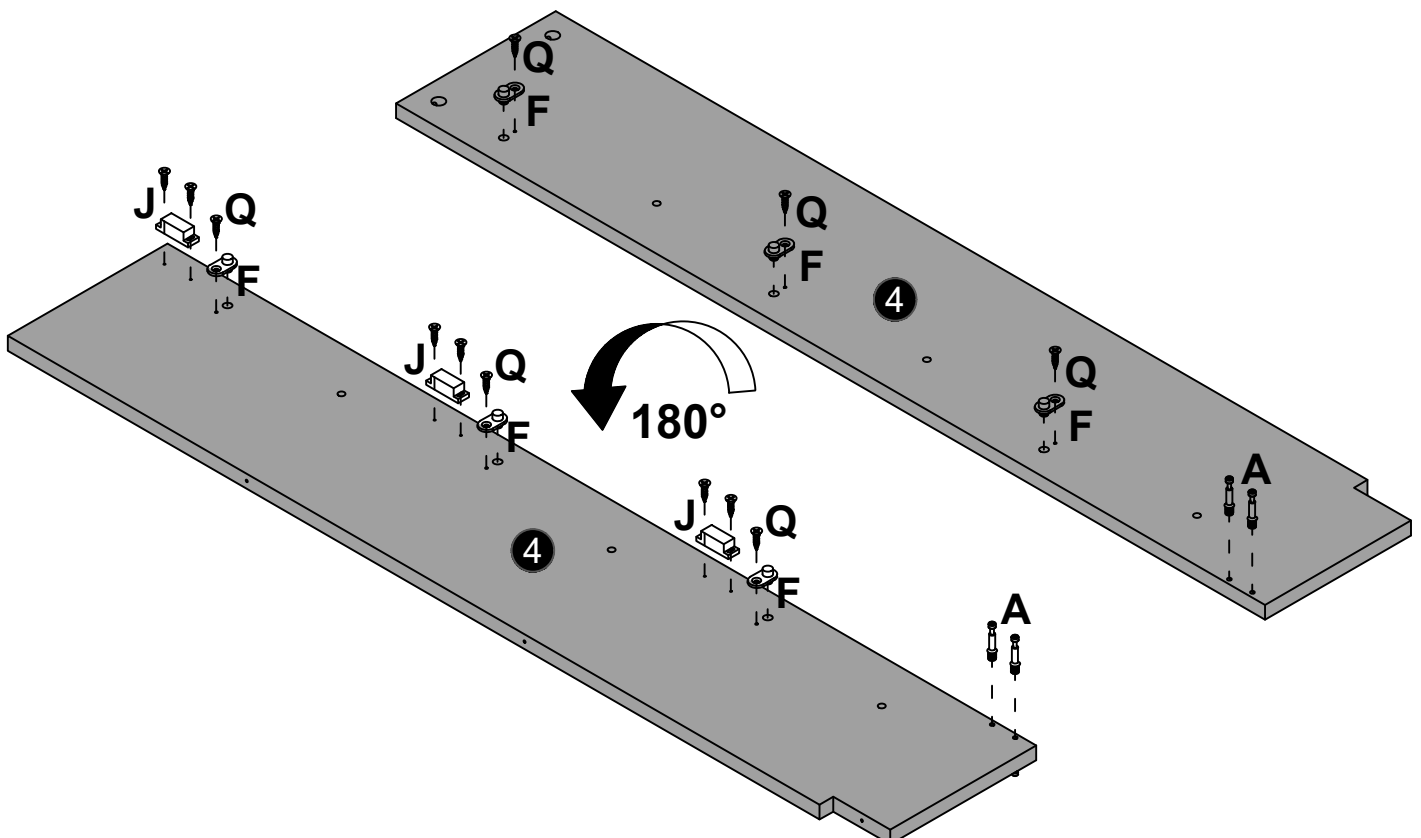

A x2




04

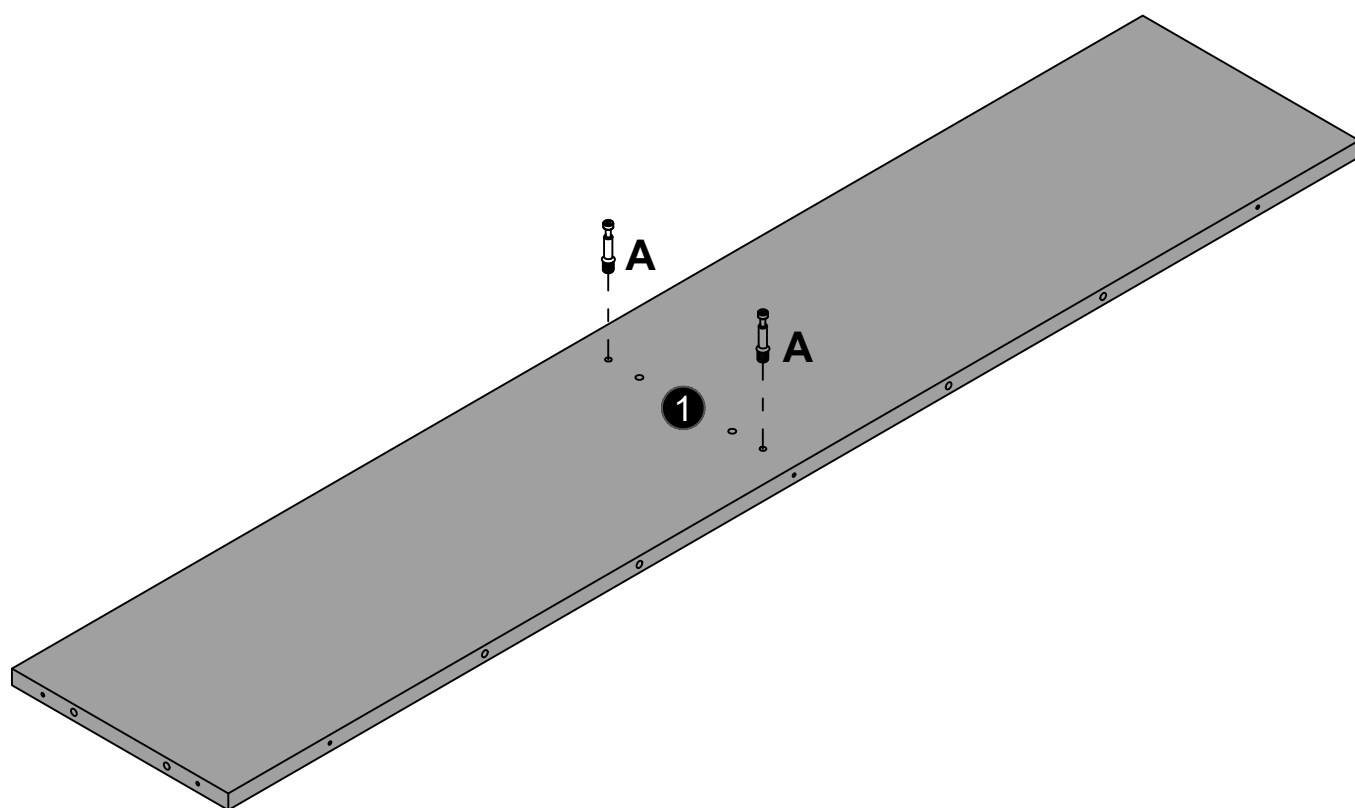


C x4



D x3



05

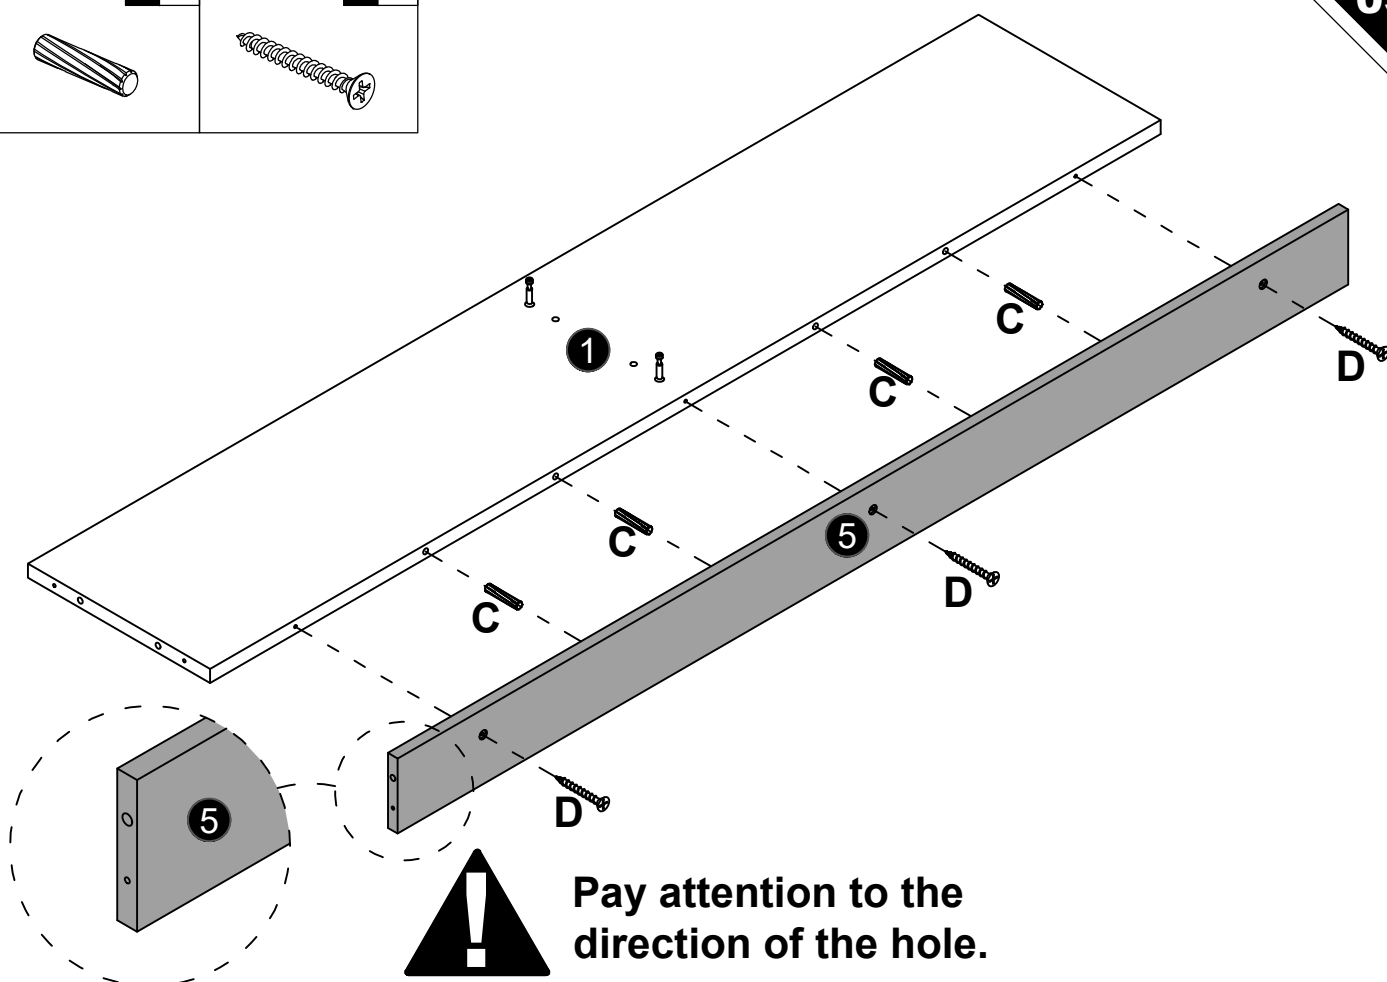


06

B x2




C x2

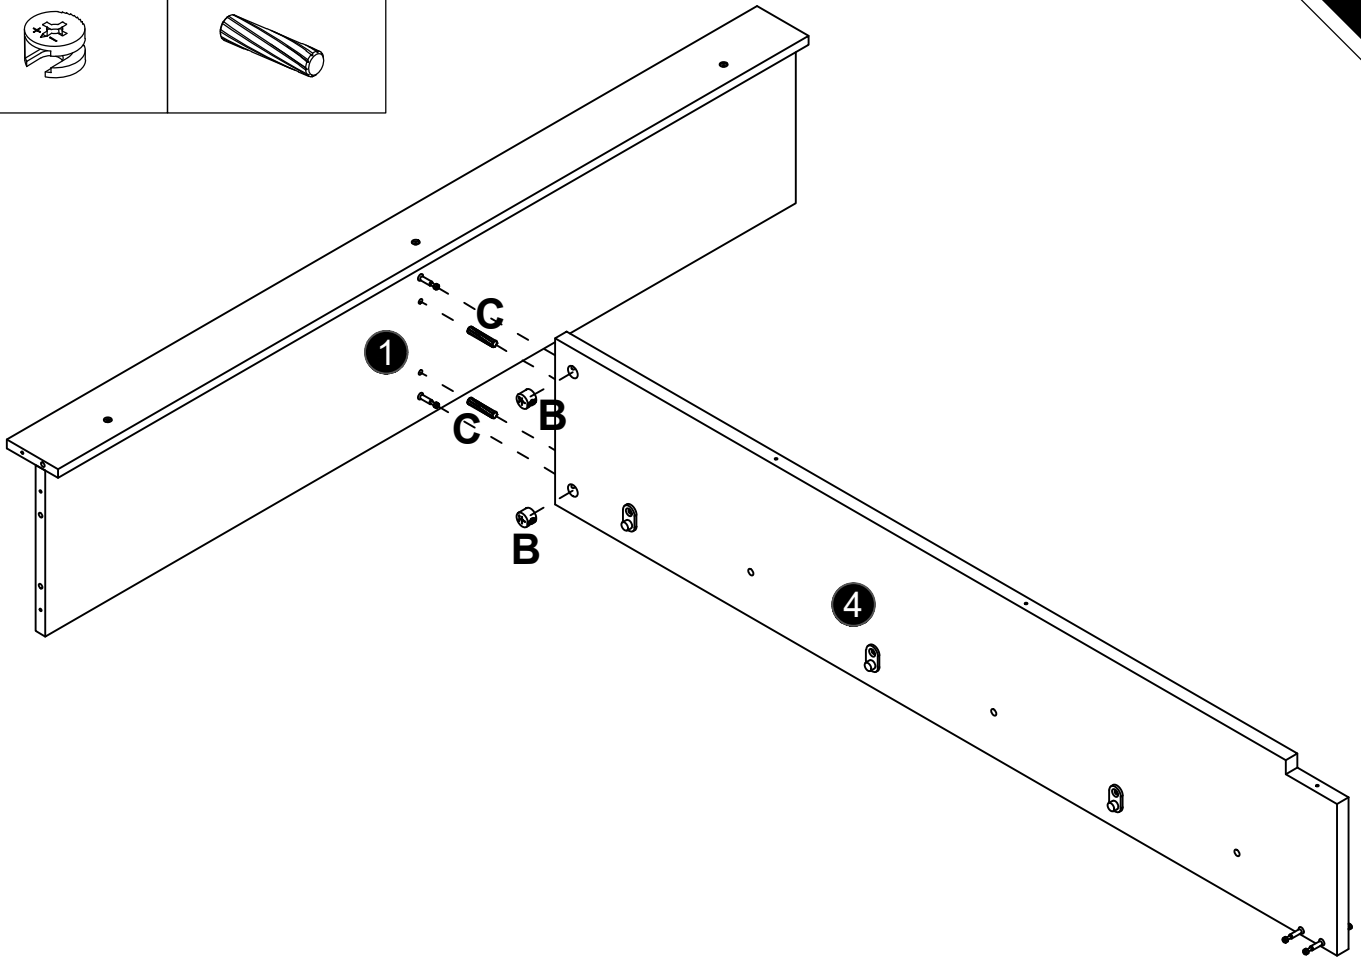

07




B x2

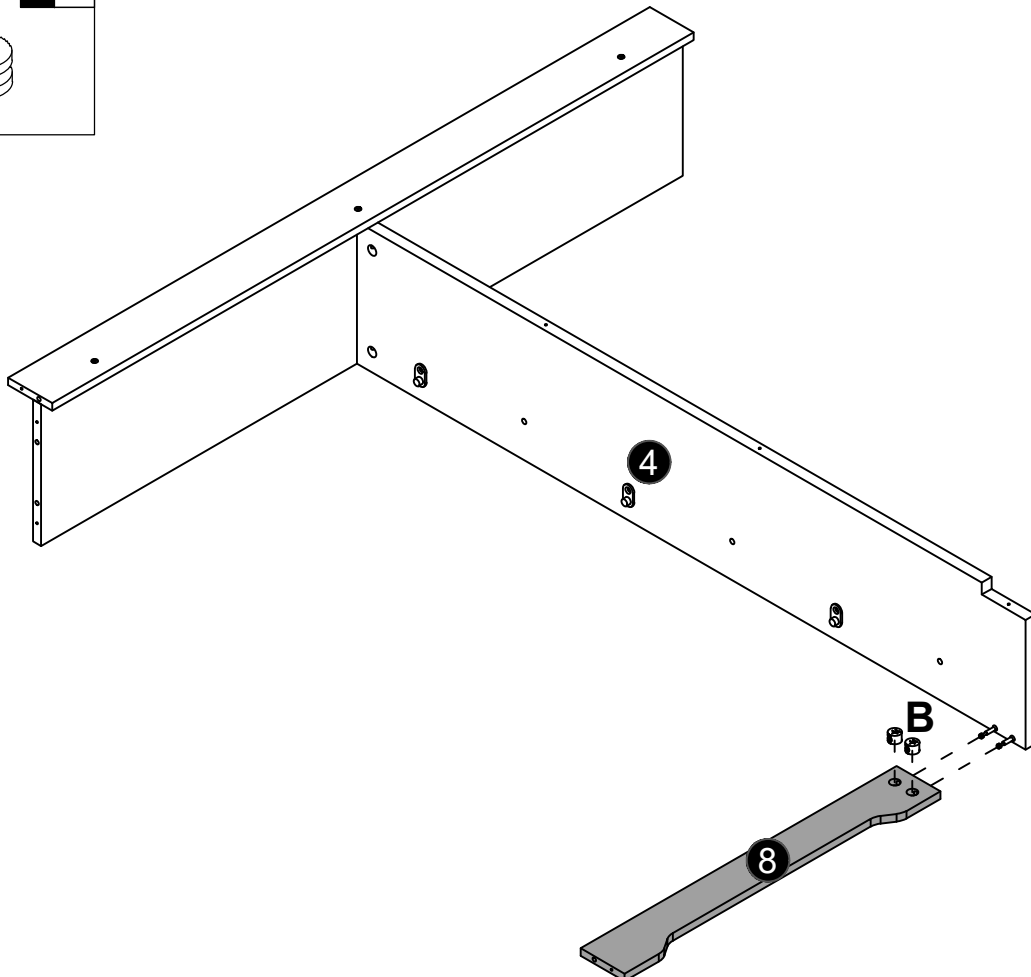

08

C x4



D x4

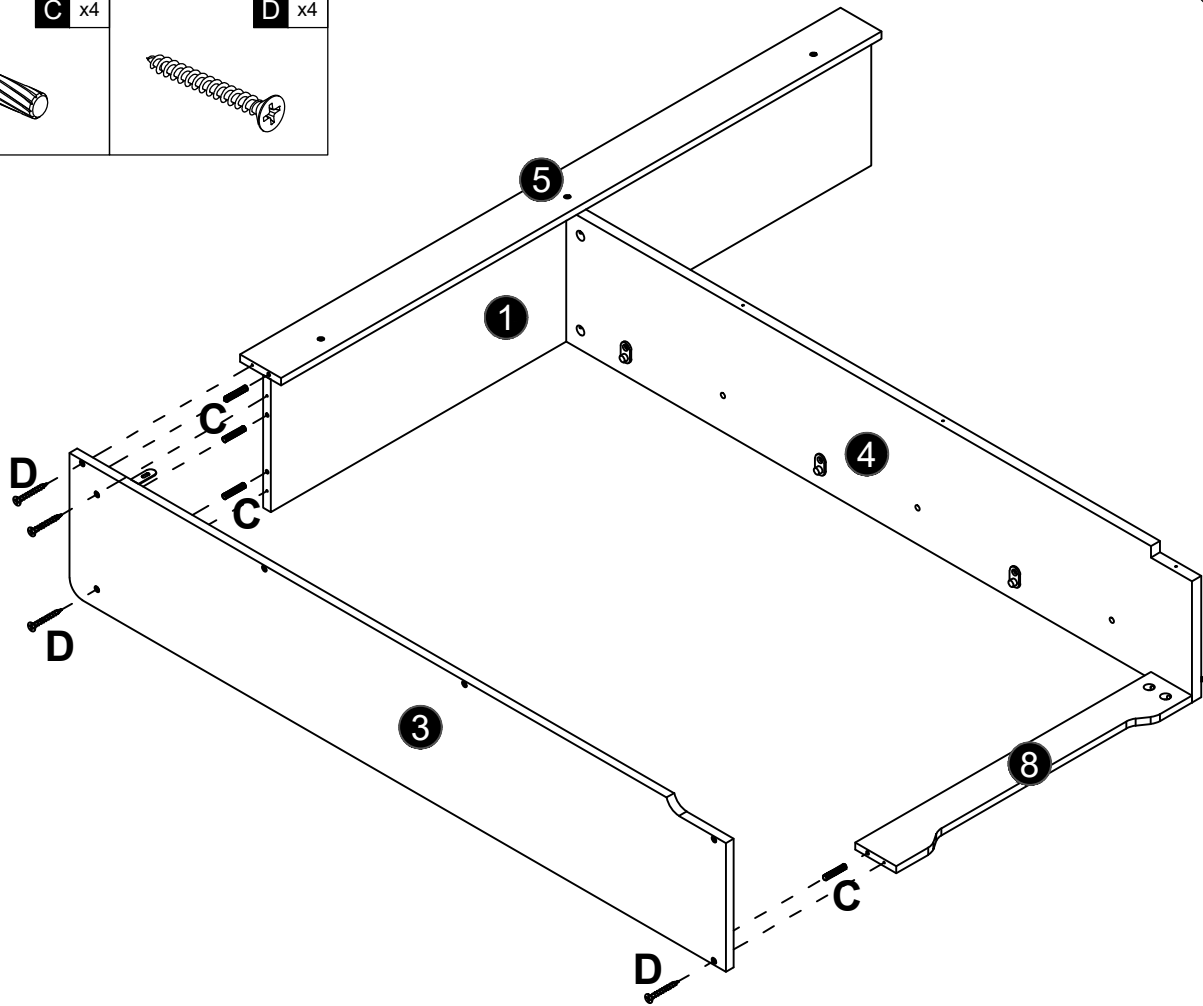


09

C x3


D x3

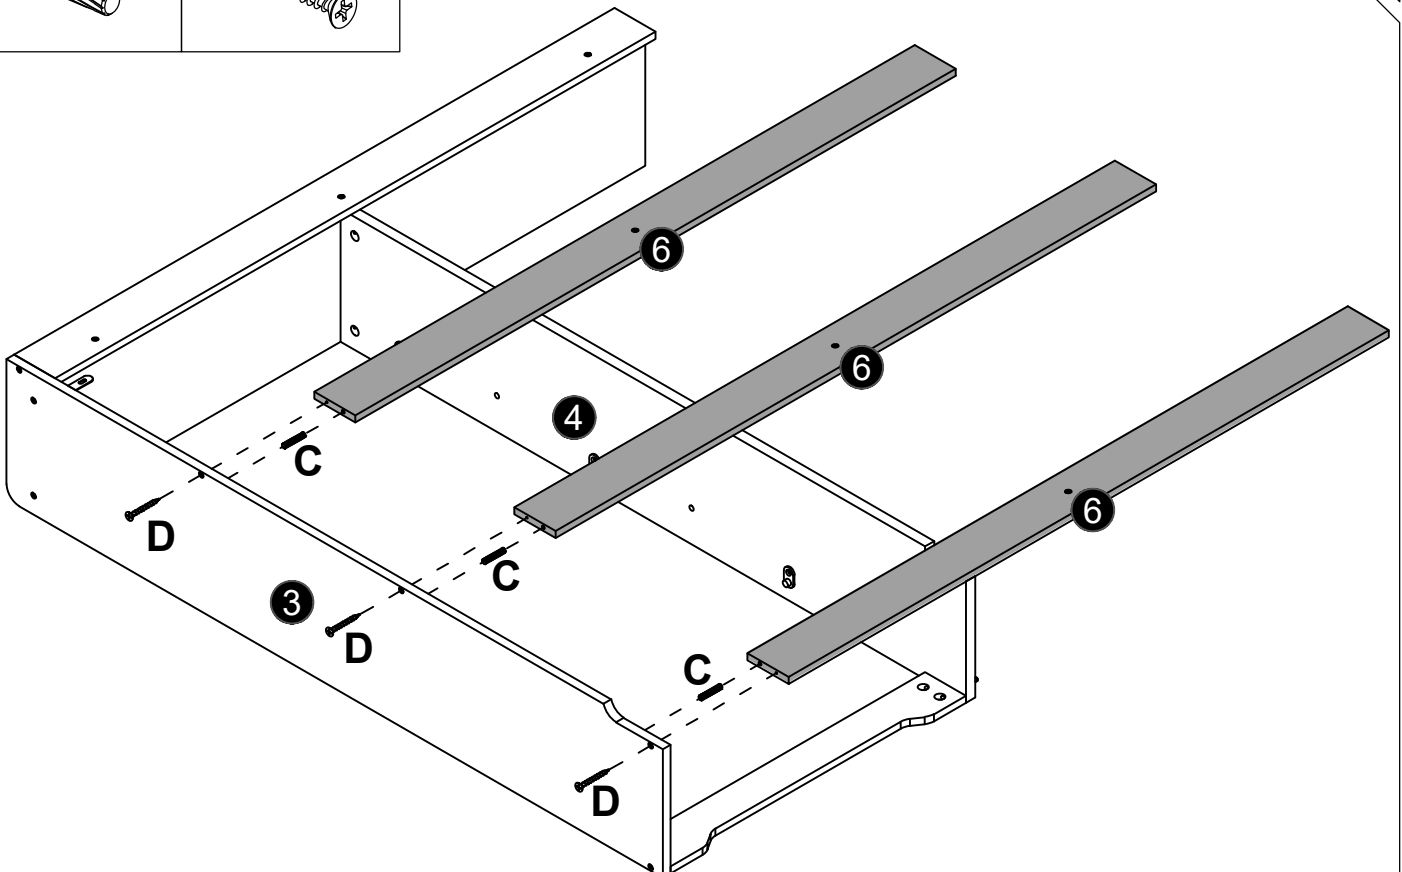

D x3



10


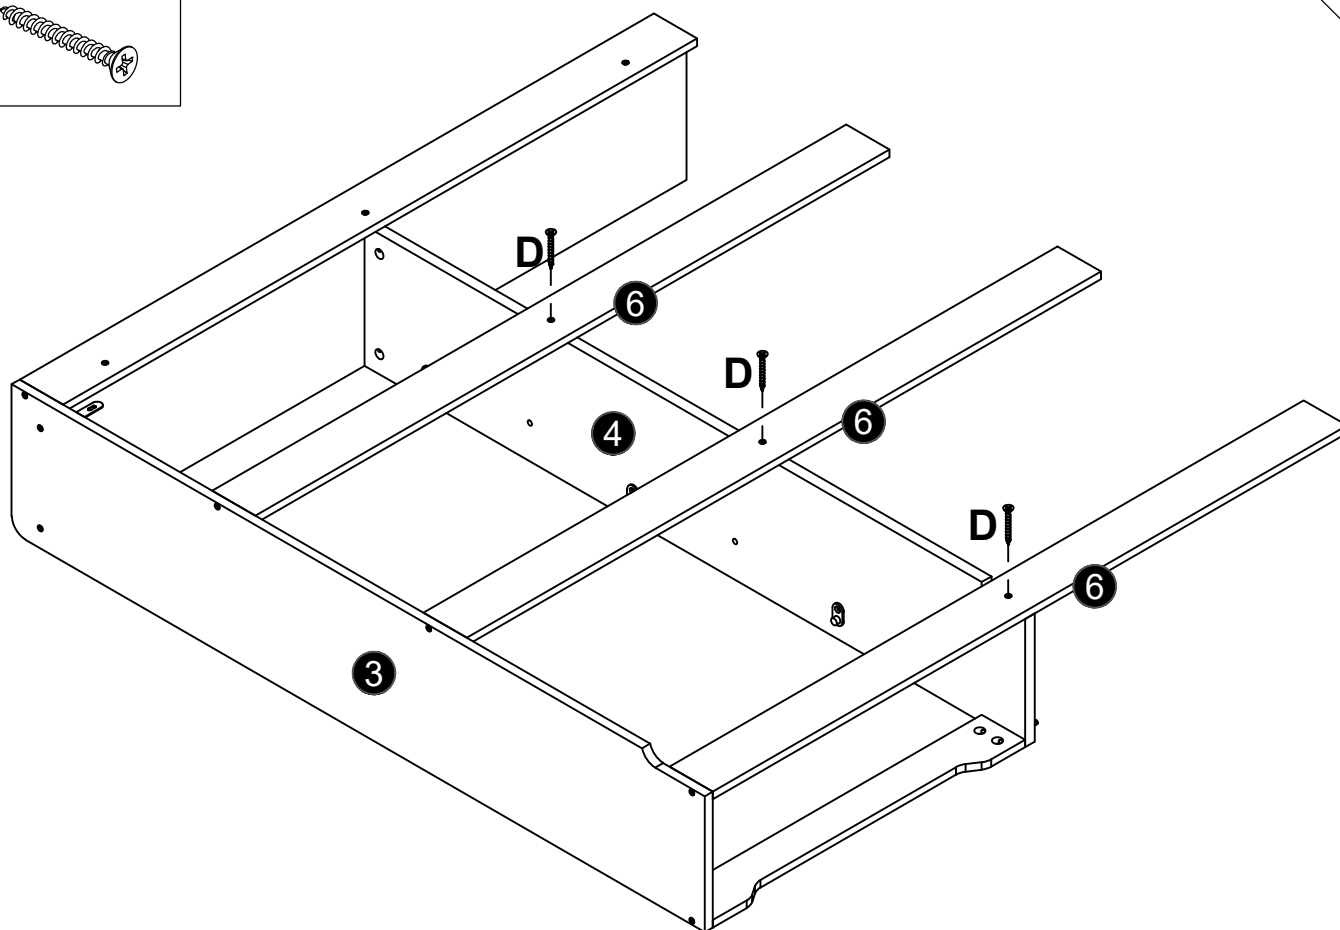


B x2


C x7

D x7


11

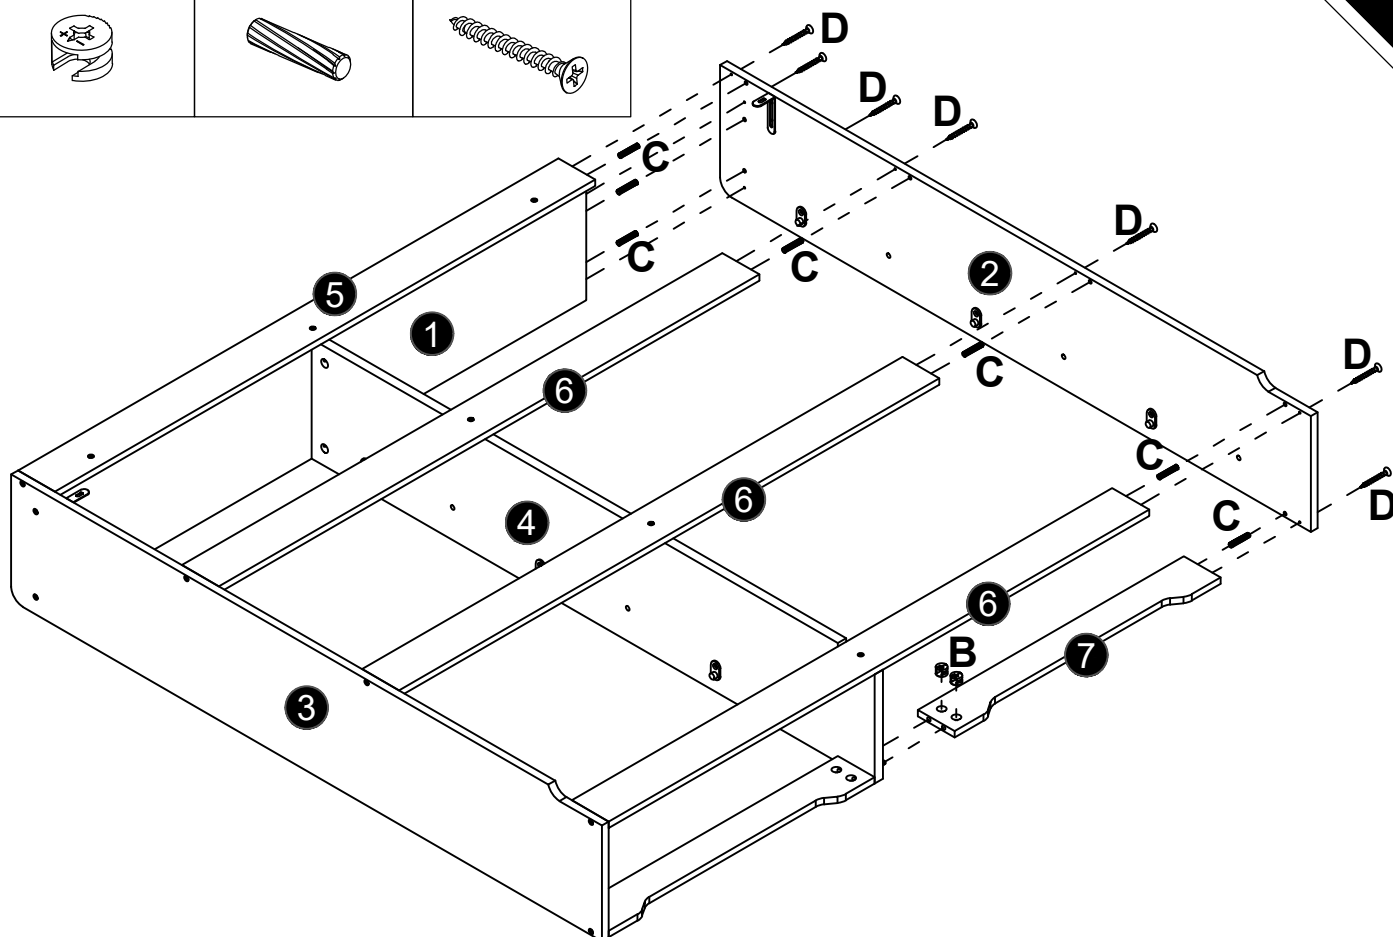

D x2



N x2

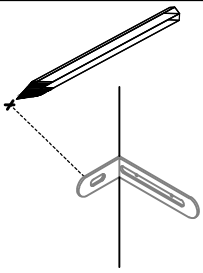

(1)x2

WALL




(2)x2

First fix the anti-rewind screw in the reserved hole of the product.


Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

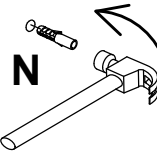

(3)x2

WALL

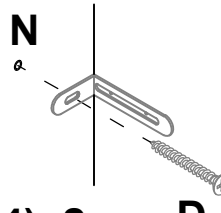




(4)x2

D

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

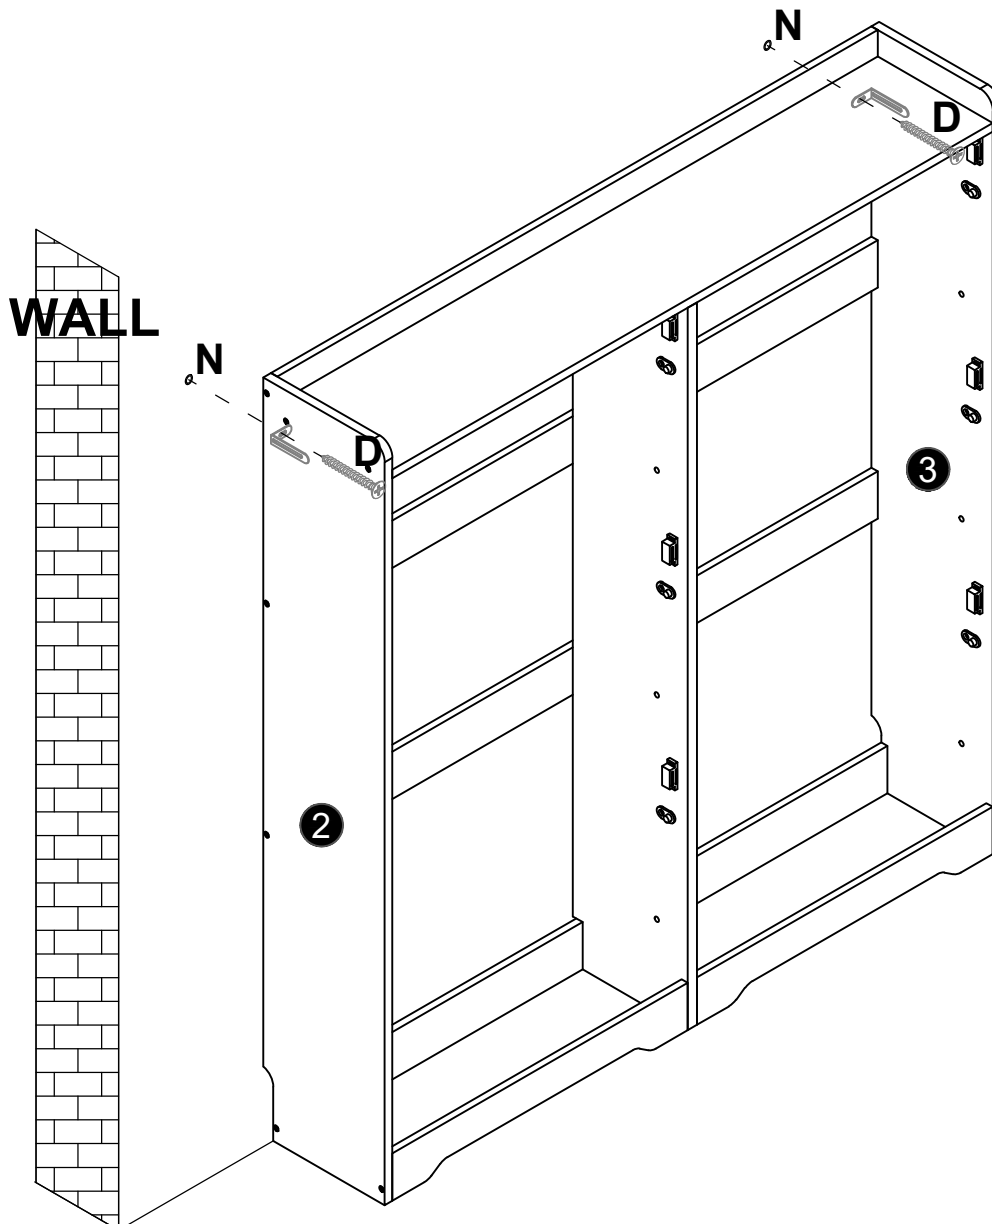


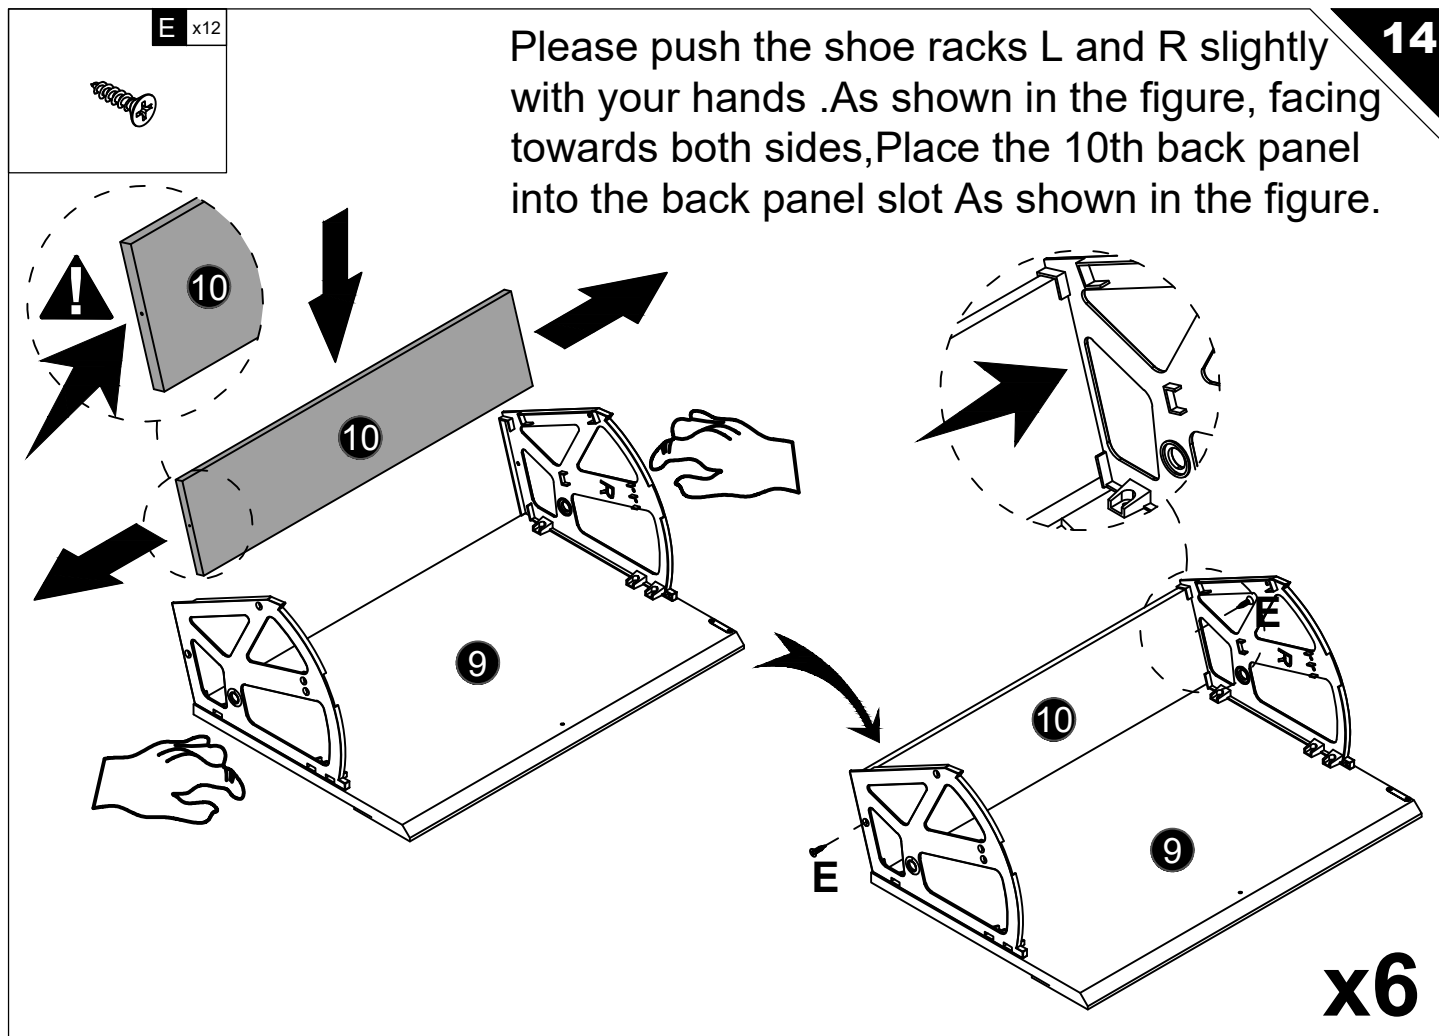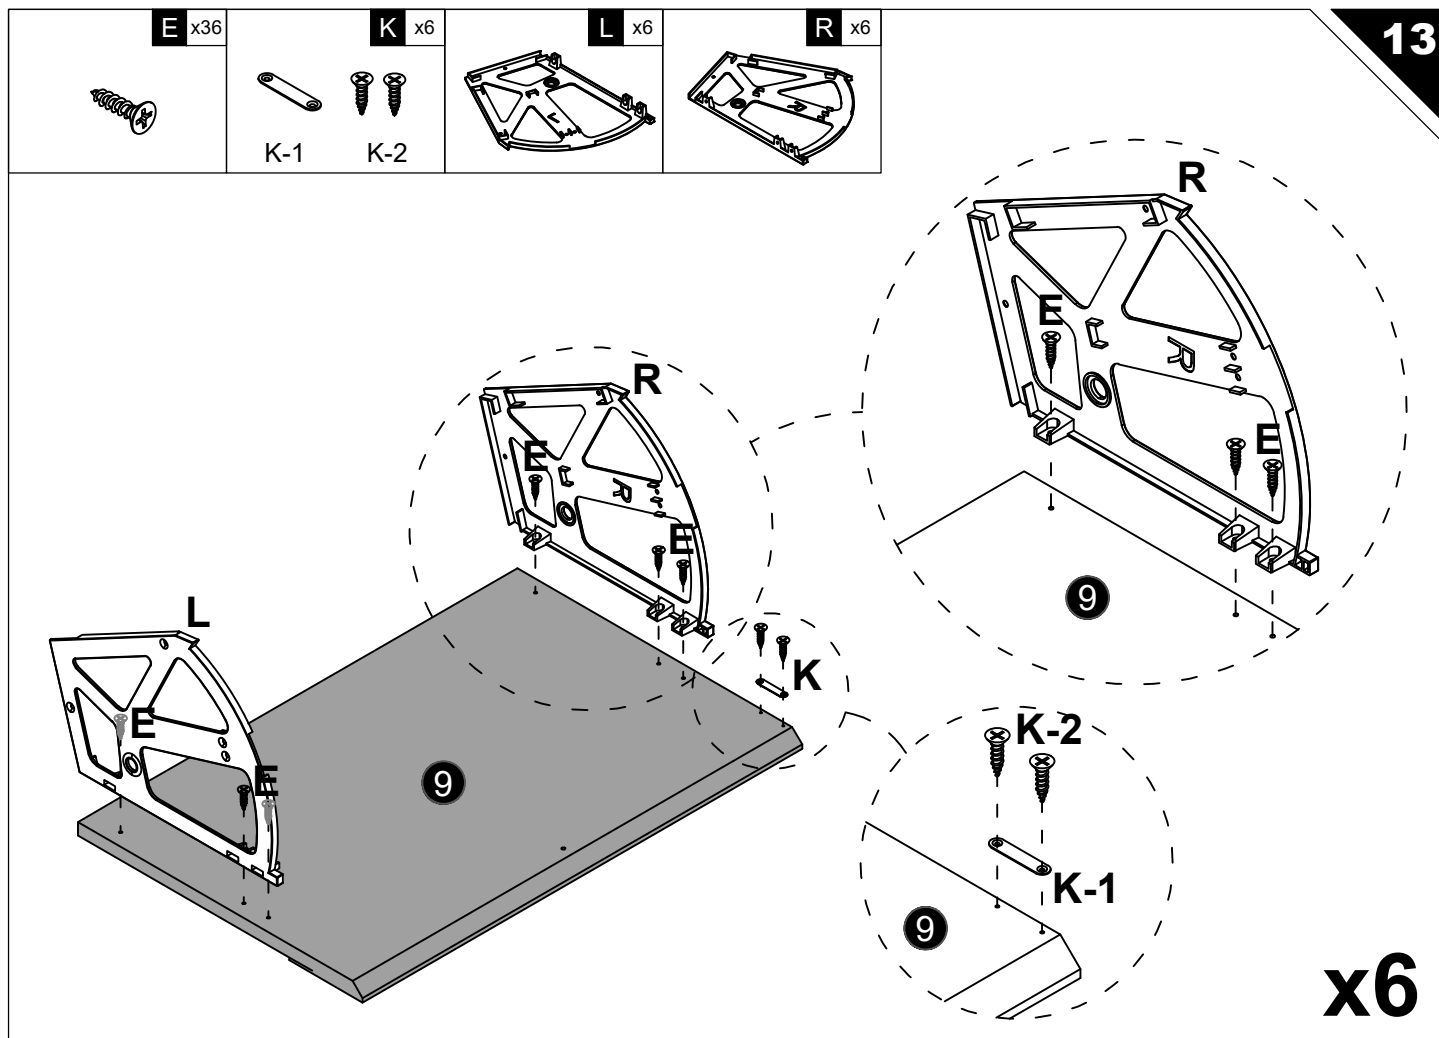

E x12

15

Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 11th back panel into the back panel slot As shown in the figure.

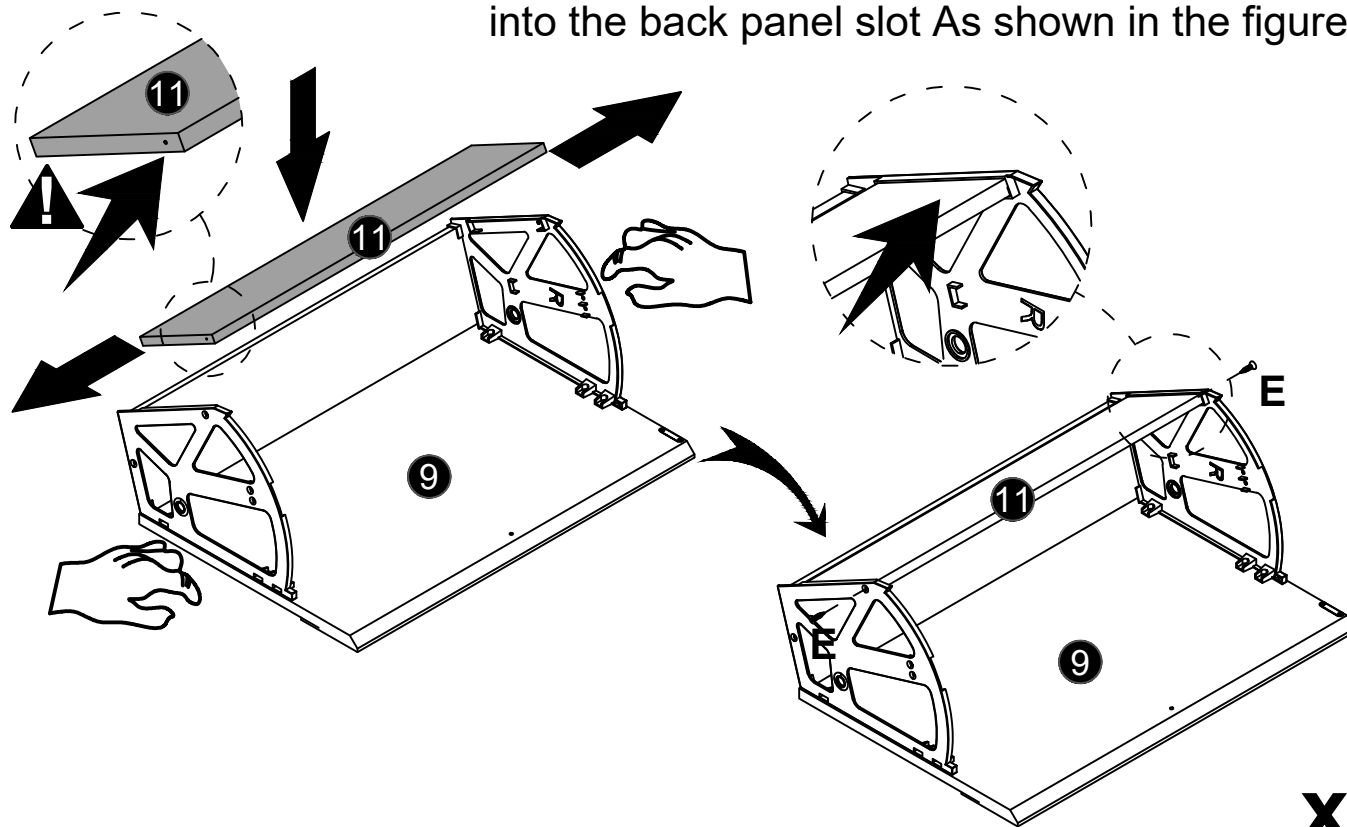

O x6


16



O-1



O-2

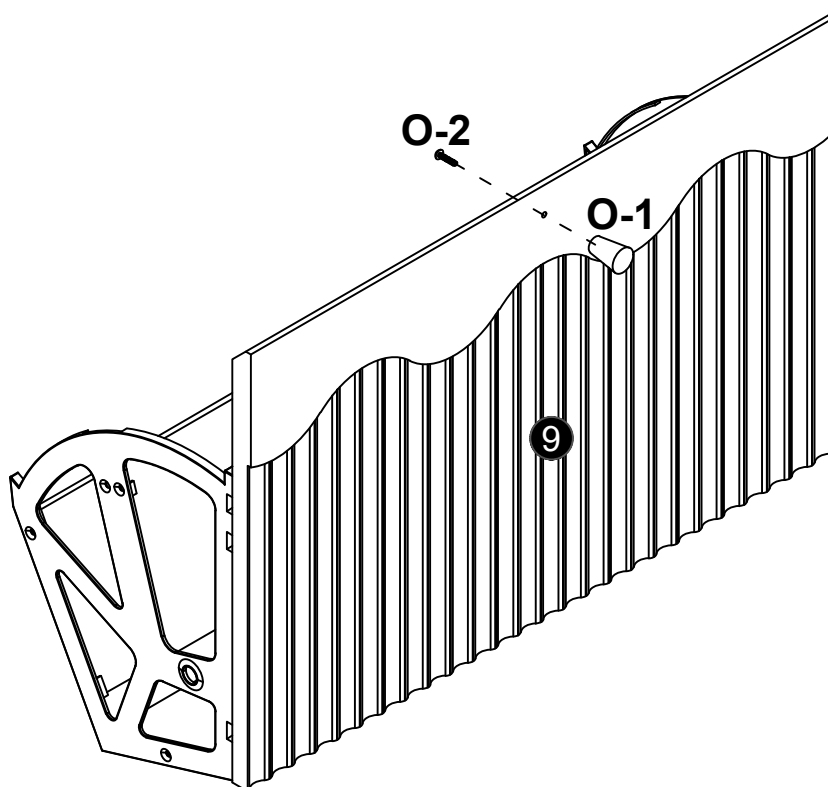


x6


G x6




H x3





I x1




S x3

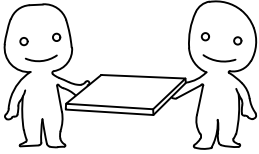


Need Two or More
People To Complete

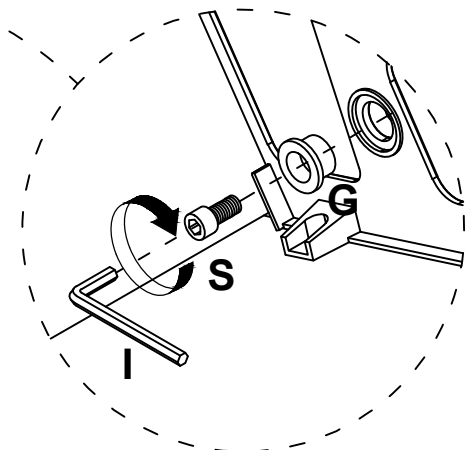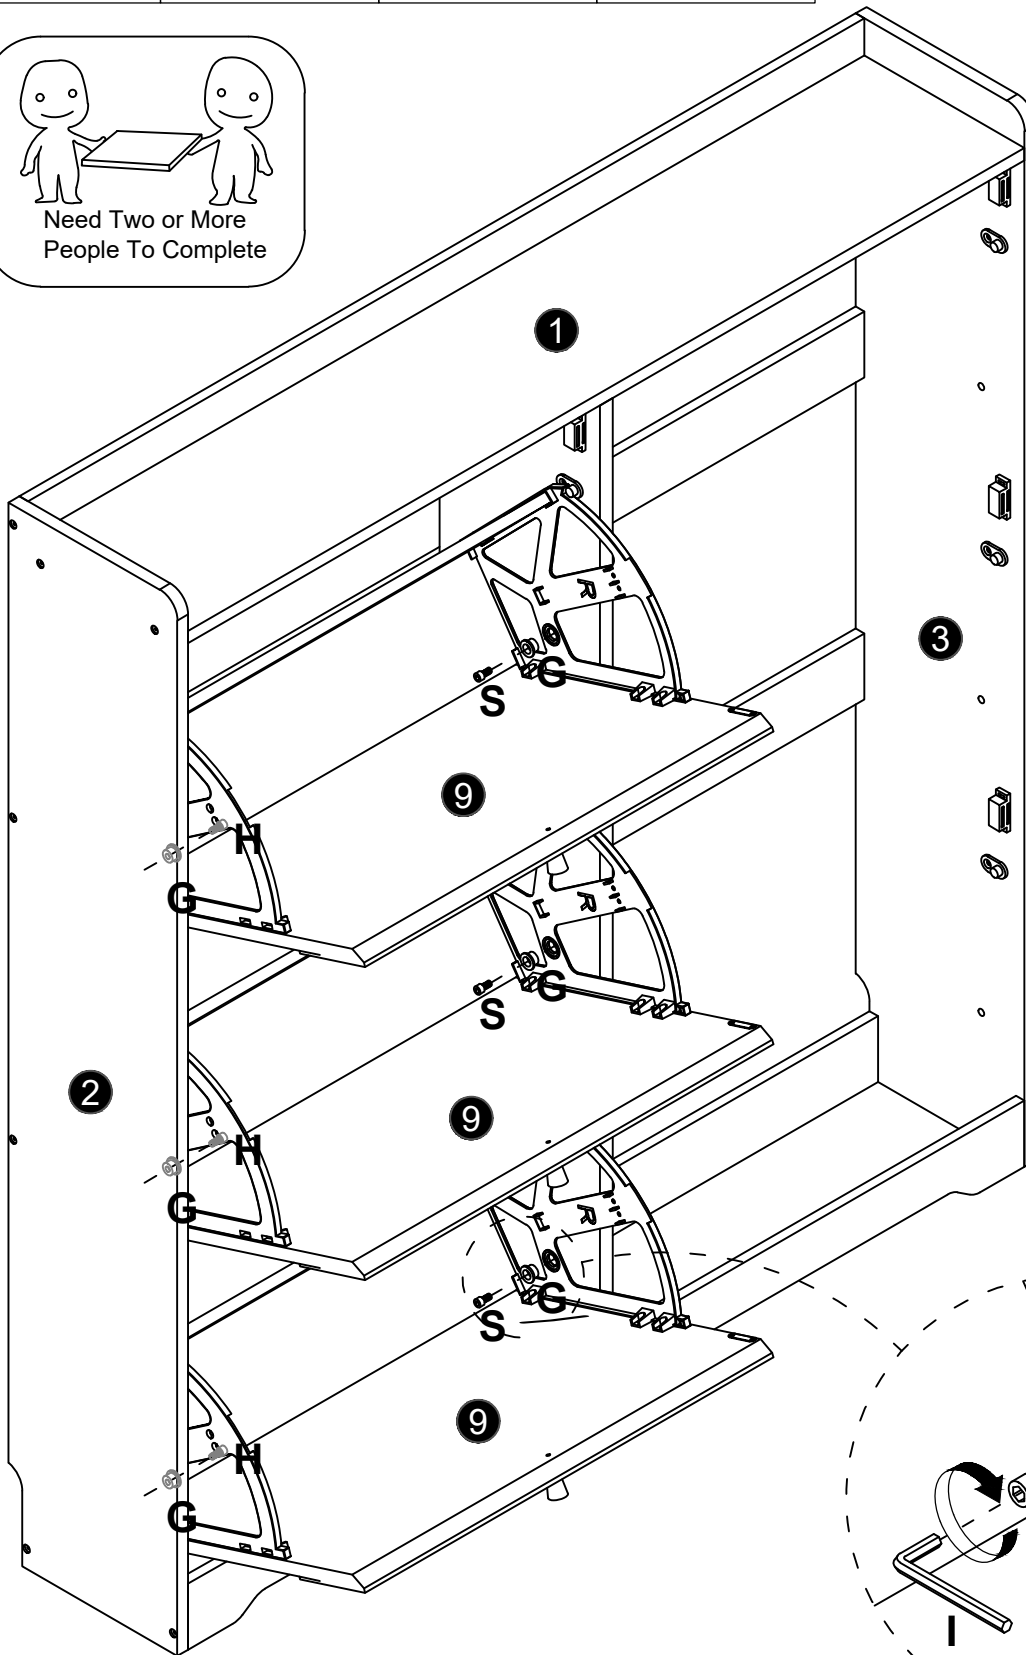


Note: When installing H or S, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

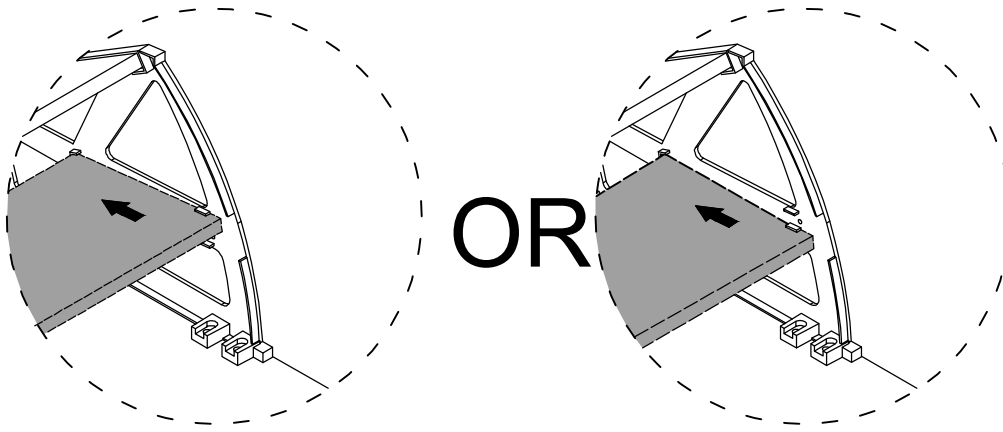

Adjustments can be made
according to your own needs.

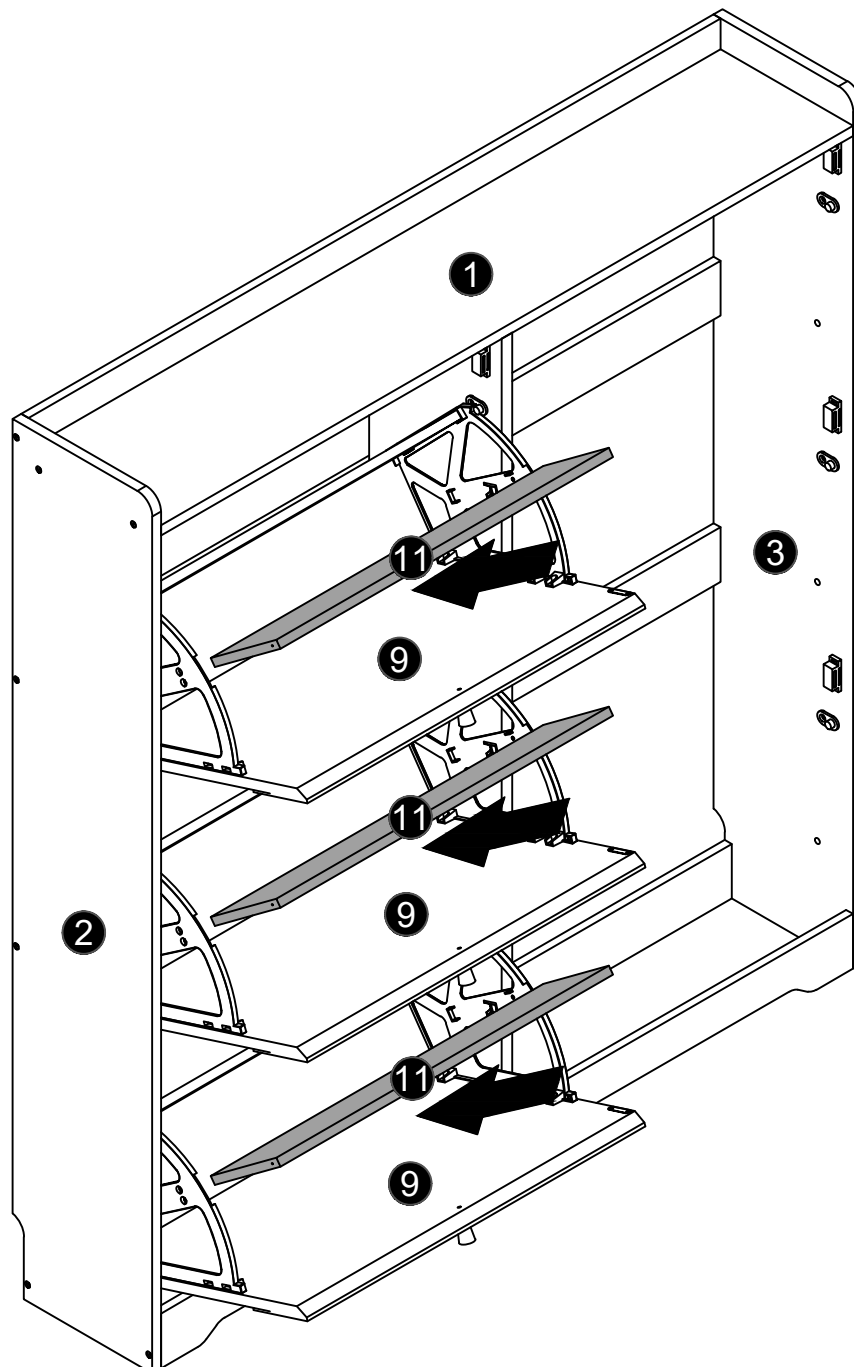


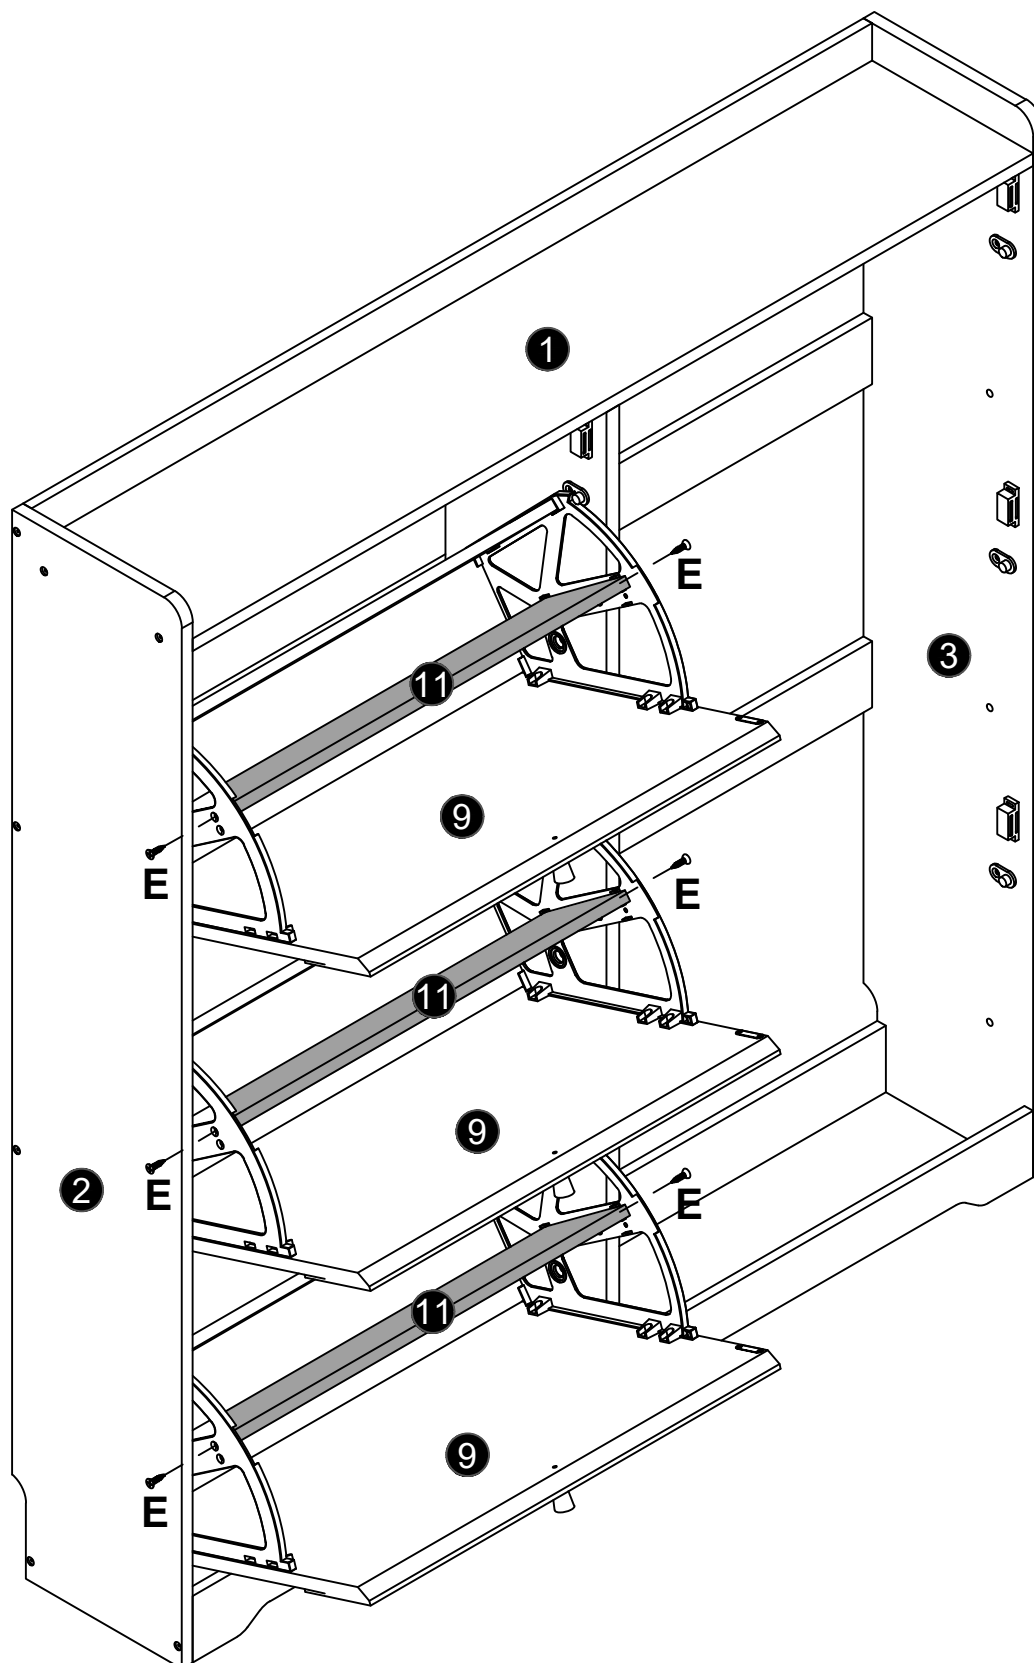


G x6




H x3




I x1




S x3

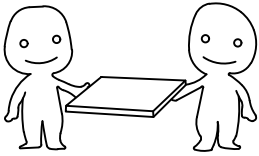


Need Two or More
People To Complete

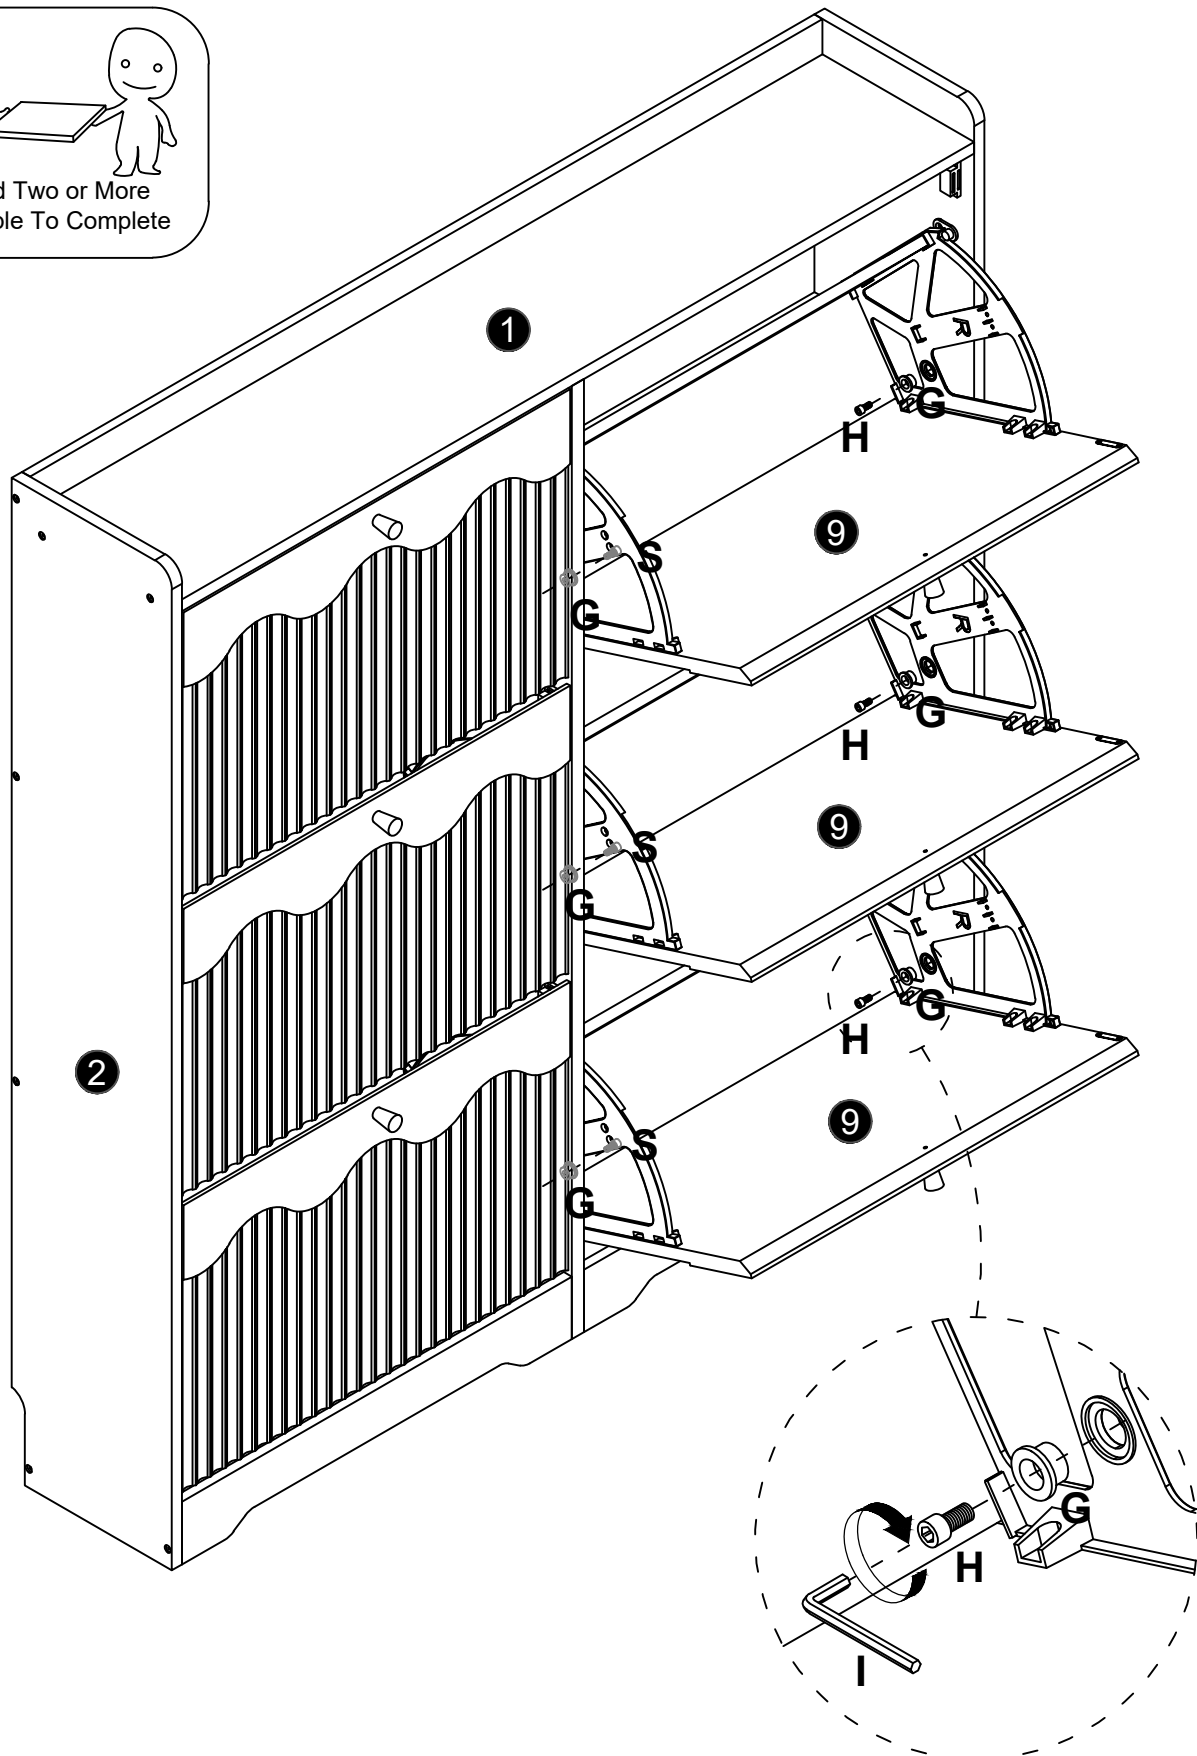


Note: When installing H or S, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

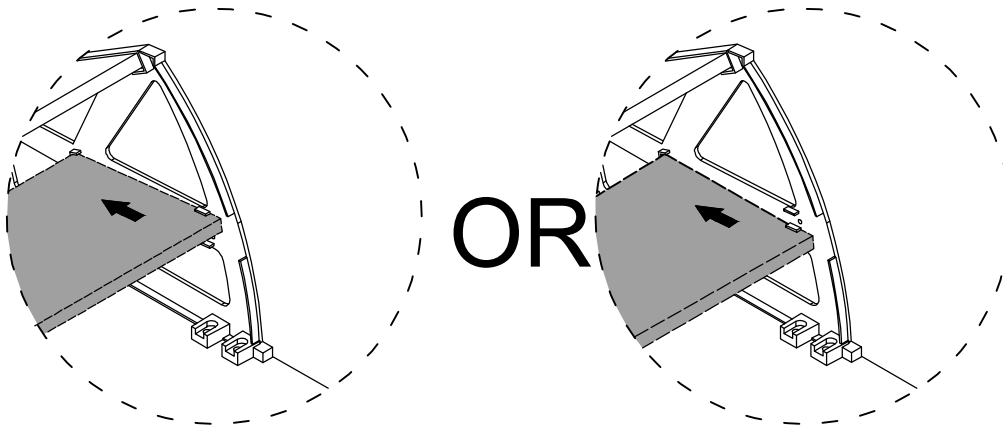

Adjustments can be made
according to your own needs.

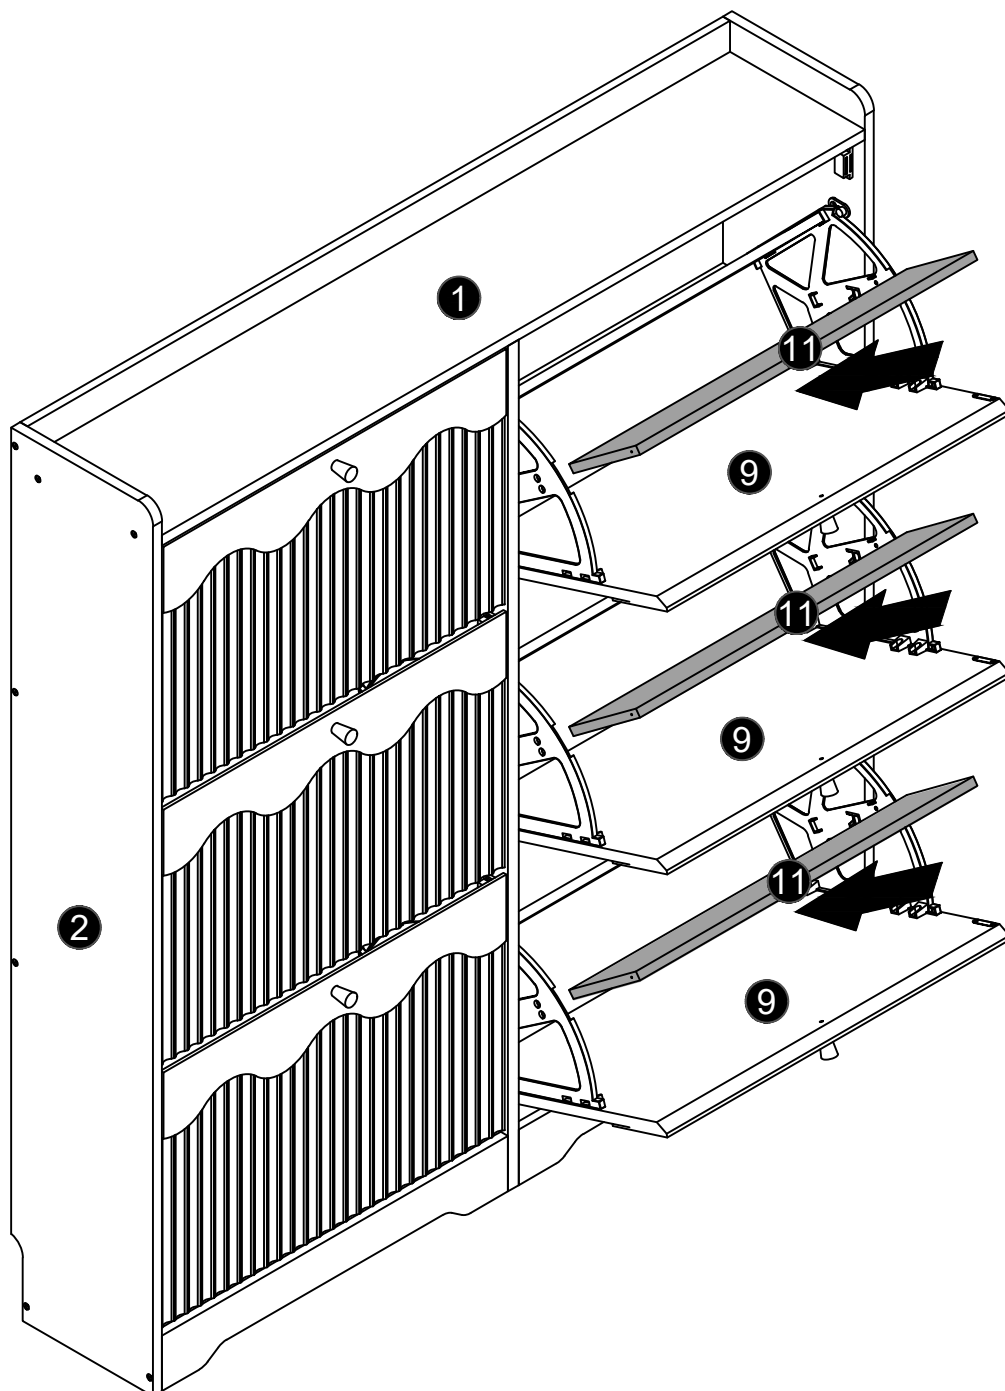

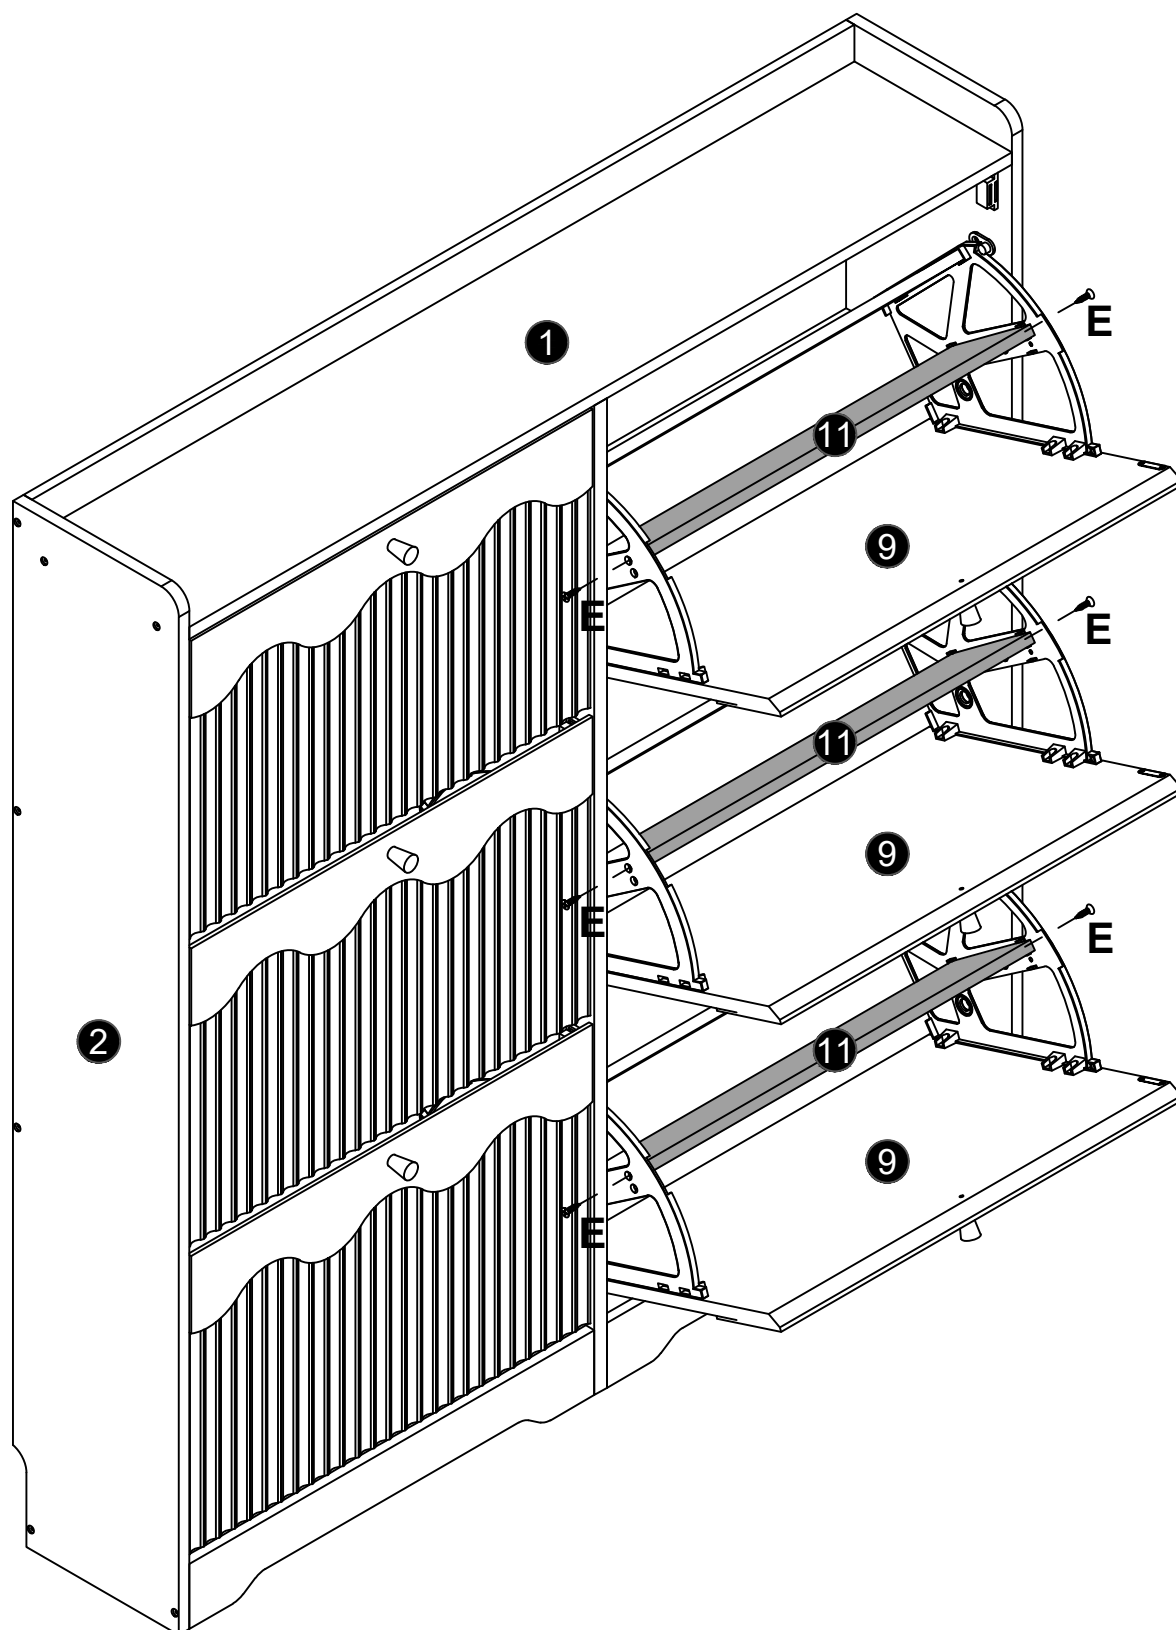

M x14

Done

