
What’s in the Box

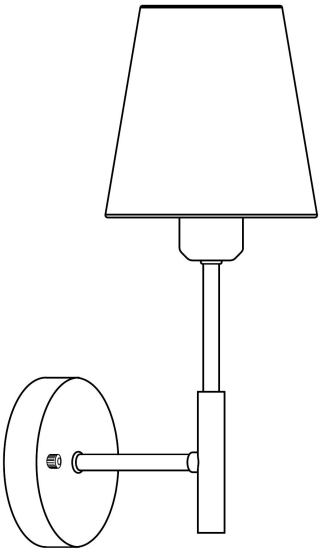

Cordless Rechargeable Wall Sconce


T-Arm · Fabric Shade · Set of 2

Read all instructions before installing or using this product.
Keep this manual for future reference

Assembly & Installation


Four steps, repeated for each of the two sconces. Before you start, charge the bulb, pull the plastic tab out of the remote, and put on the gloves.

STEP 1 Mount the wall plate

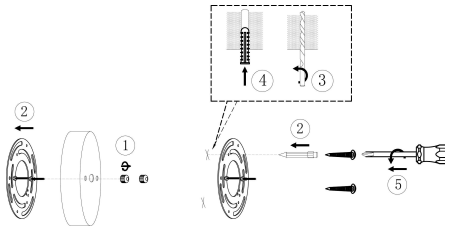


Unscrew the decorative cap and lift the mounting plate off the canopy. Hold the plate against the wall, check it with a level and mark the holes. Drill, tap a wall anchor into each hole until flush, then screw the plate to the wall.

STEP 2 Assemble the arm

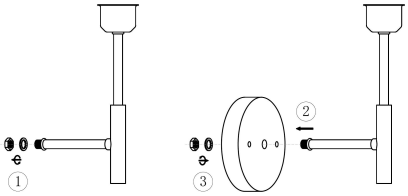


With the supplied wrench, remove the hex nut and toothed washer from the threaded end of the arm. Pass the arm through the hole in the canopy, refit the washer and nut, and tighten firmly.

STEP 3 Hang the sconce

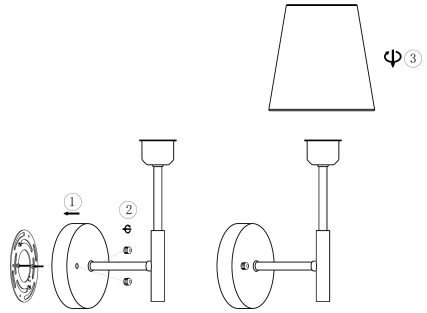

Line the canopy up with the holes in the mounting plate on the wall and push it on. Screw the decorative cap back in and tighten it. Screw the shade onto the lamp cup at the top of the arm.

STEP 4 Fit the bulb

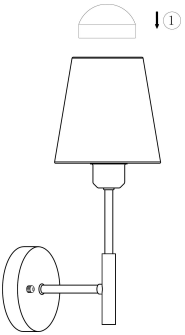

Lower the bulb into the shade until the magnetic disc holds it. The bulb is held **magnetically** — do not try to screw it in.

Check before you finish. Give the sconce a gentle downward tug. If there is any movement at the wall, take it down and check that the anchors are seated firmly and the decorative cap is fully tightened.