


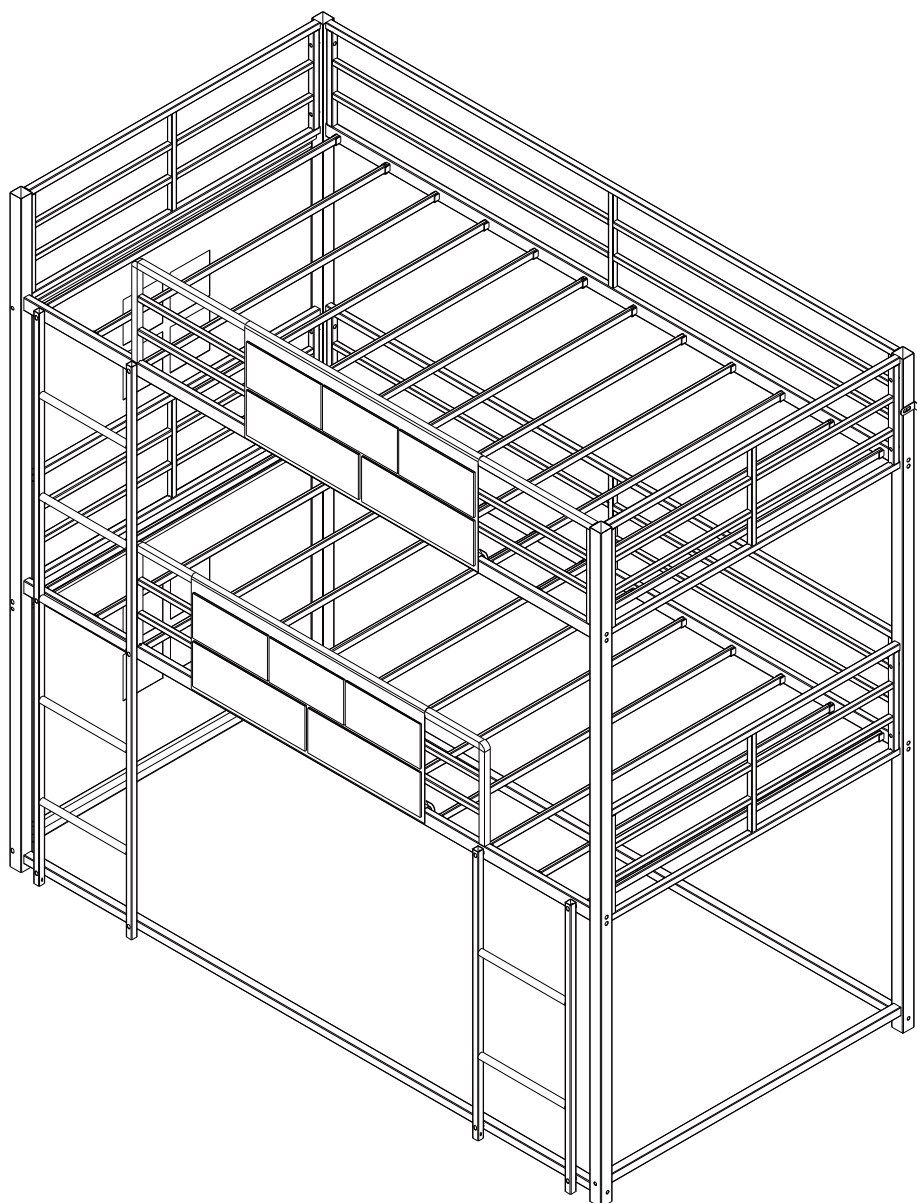




If the wall nails are not locked, there is a risk of the bed overturning

CAUTION: When tightening the screws, tighten sequentially. Do not tighten any screws fully and then towards the next one. When every part is OK, then tighten all the screws.



AJ-DJ505553





Version : 1.0

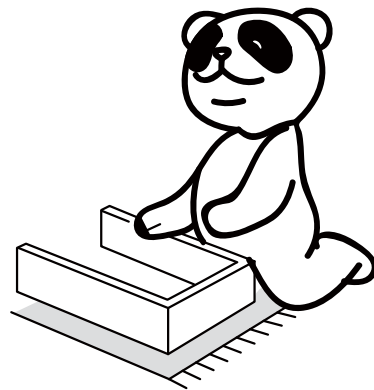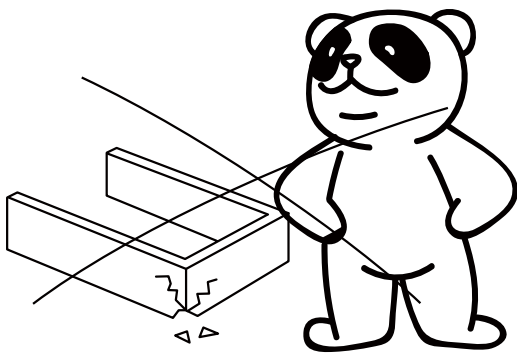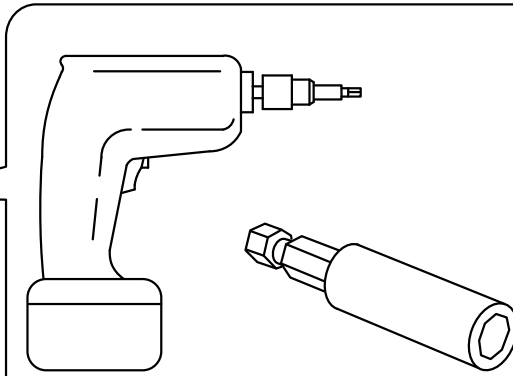

Violent installation is prohibited

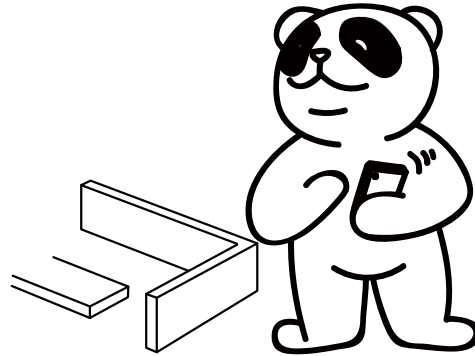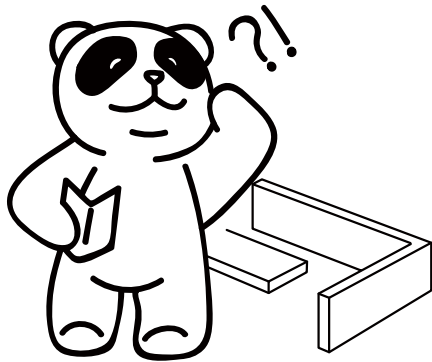

Please call if you need help

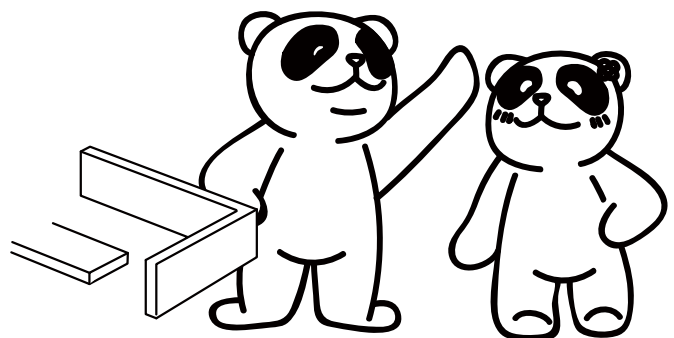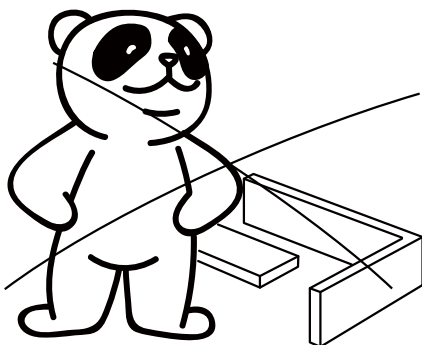

Multi-person cooperation is recommended

# Assembly Instruction



1  
X1




2  
X1




3  
X1




4  
X1

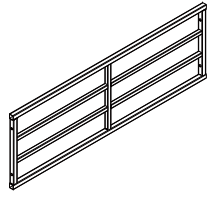


5  
X4

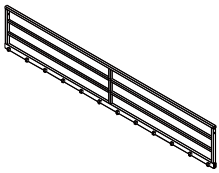


6  
X2

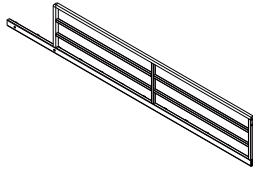


7  
X1

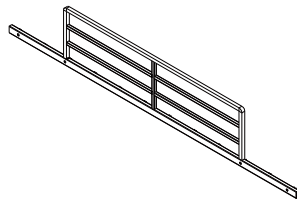


8  
X1

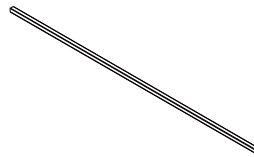


9  
X1

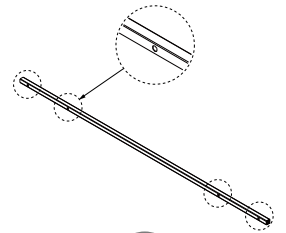


10  
X1

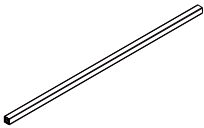


11  
X1




12  
X1




13  
X1

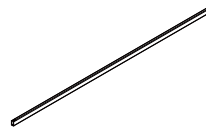


14  
X8

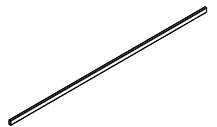


15  
X16




16  
X2

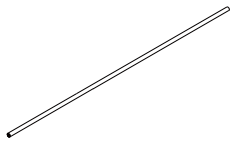


17  
X4

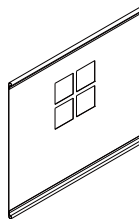

18  
X1

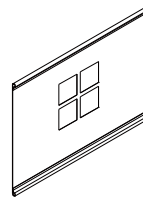


19  
X1

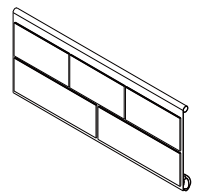


20  
X2

# Assembly Instruction

## Hardware parts




**A**  
M8\*55  
X22




**B**  
M8\*35  
X31



**C**  
M8\*15  
X2



**D**  
M6\*55  
X8



**E**  
M5\*25  
X16



**F**  
M6\*50  
X2



**G**  
S10,S13  
X1




**H**  
S4  
X2


# Assembly Instruction

Note:


- 1.should be assembled on flat ground to keep balance.
- 2.Before completing the installation,do not tighten the screws.

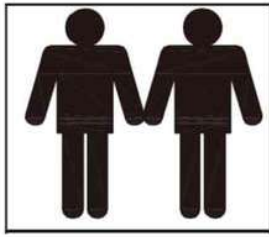

It needs at least two people to install.

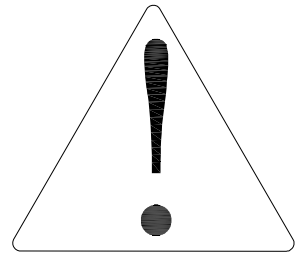

Before starting the assembly,you must read the whole manual and follow the instructions

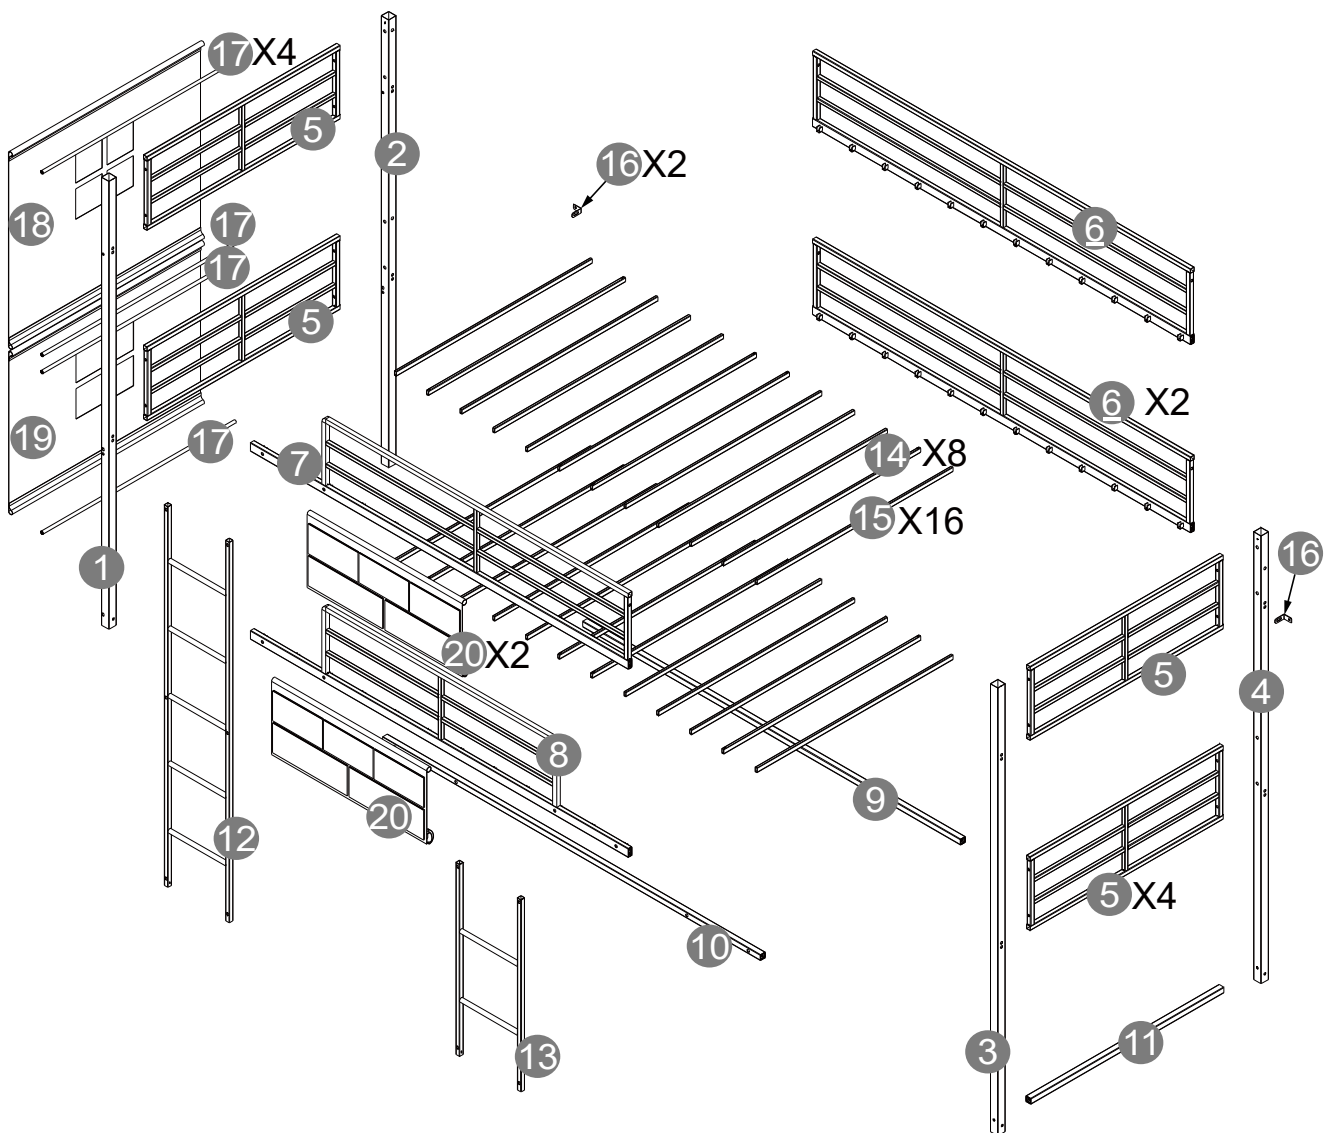


# Assembly Instruction

1

B M8\*35 X8


H S4 X1

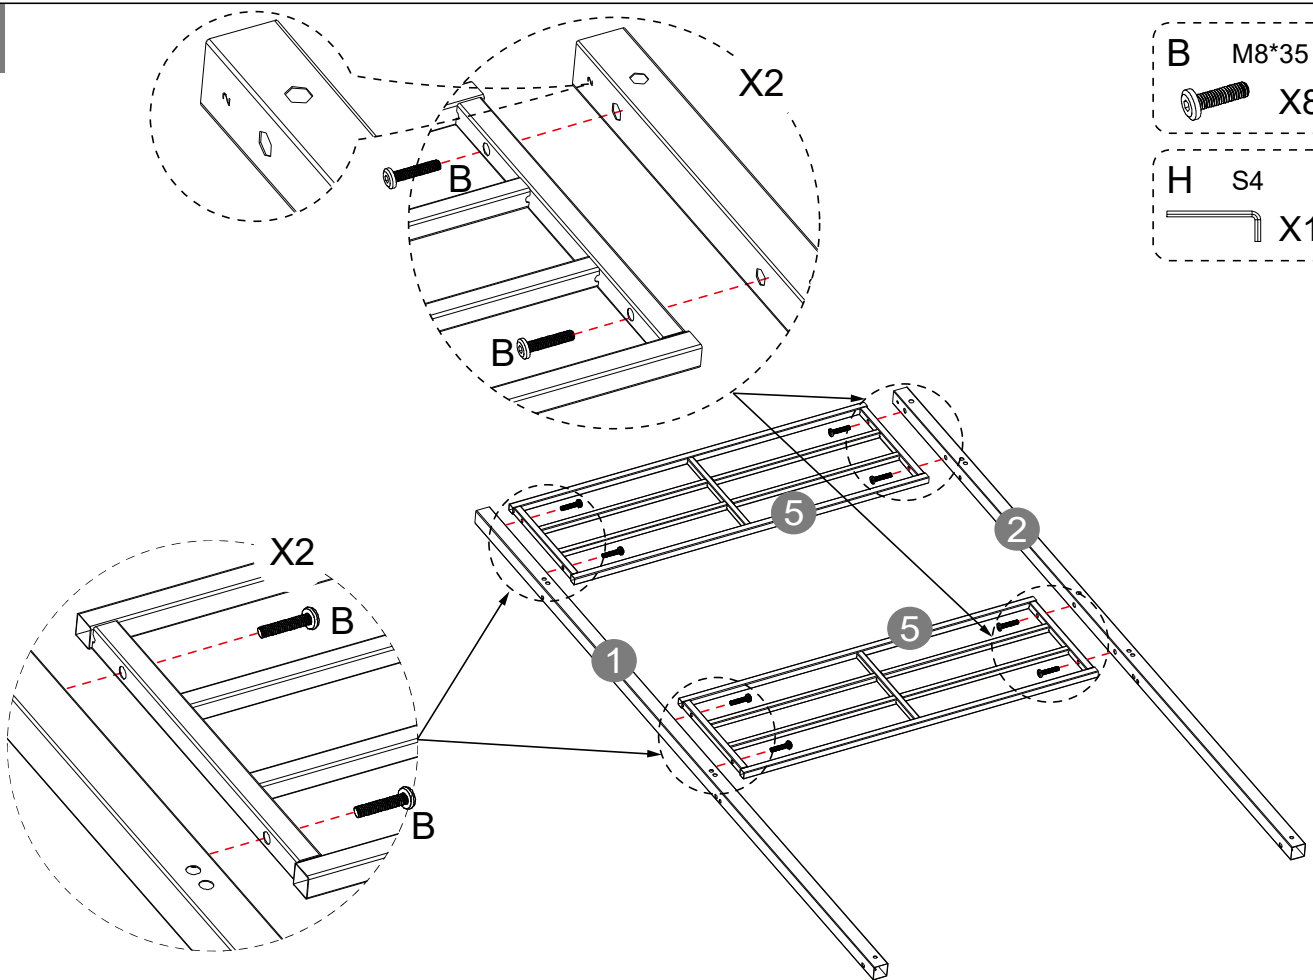

2


B M8\*35 X8

H S4 X1

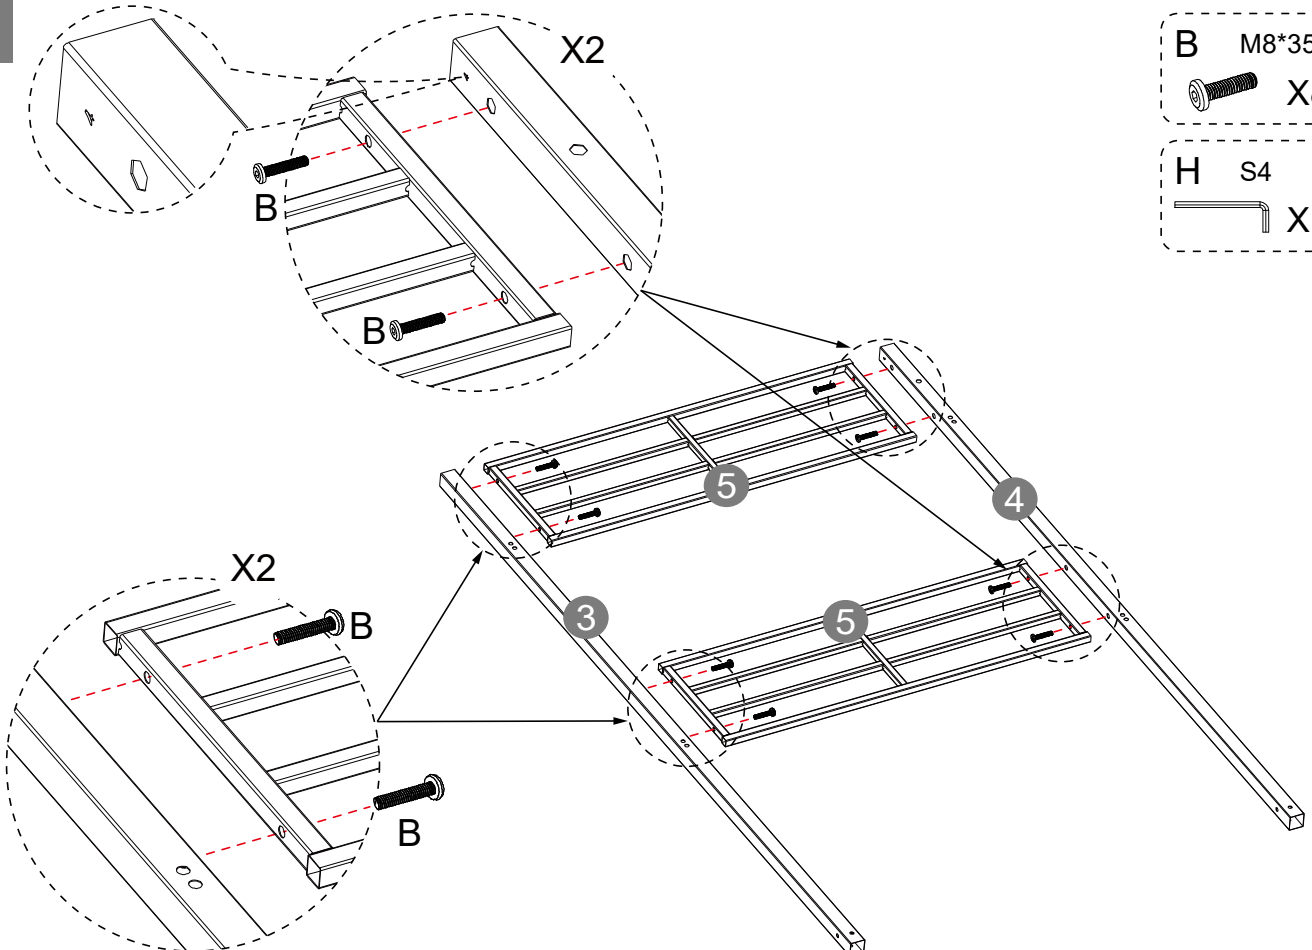


# Assembly Instruction

3

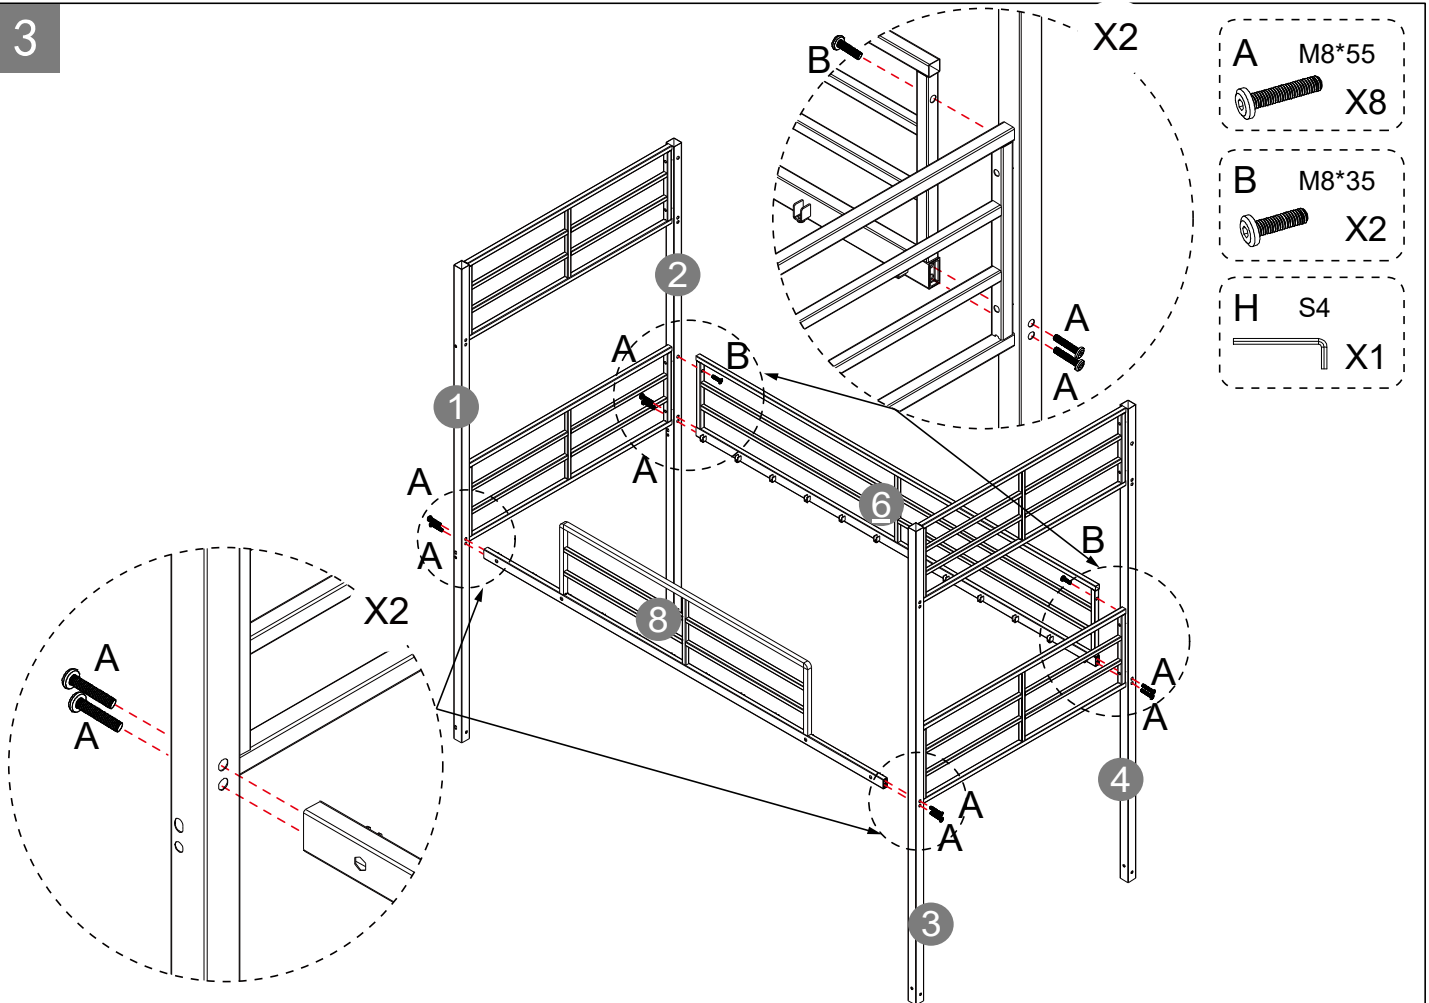


4

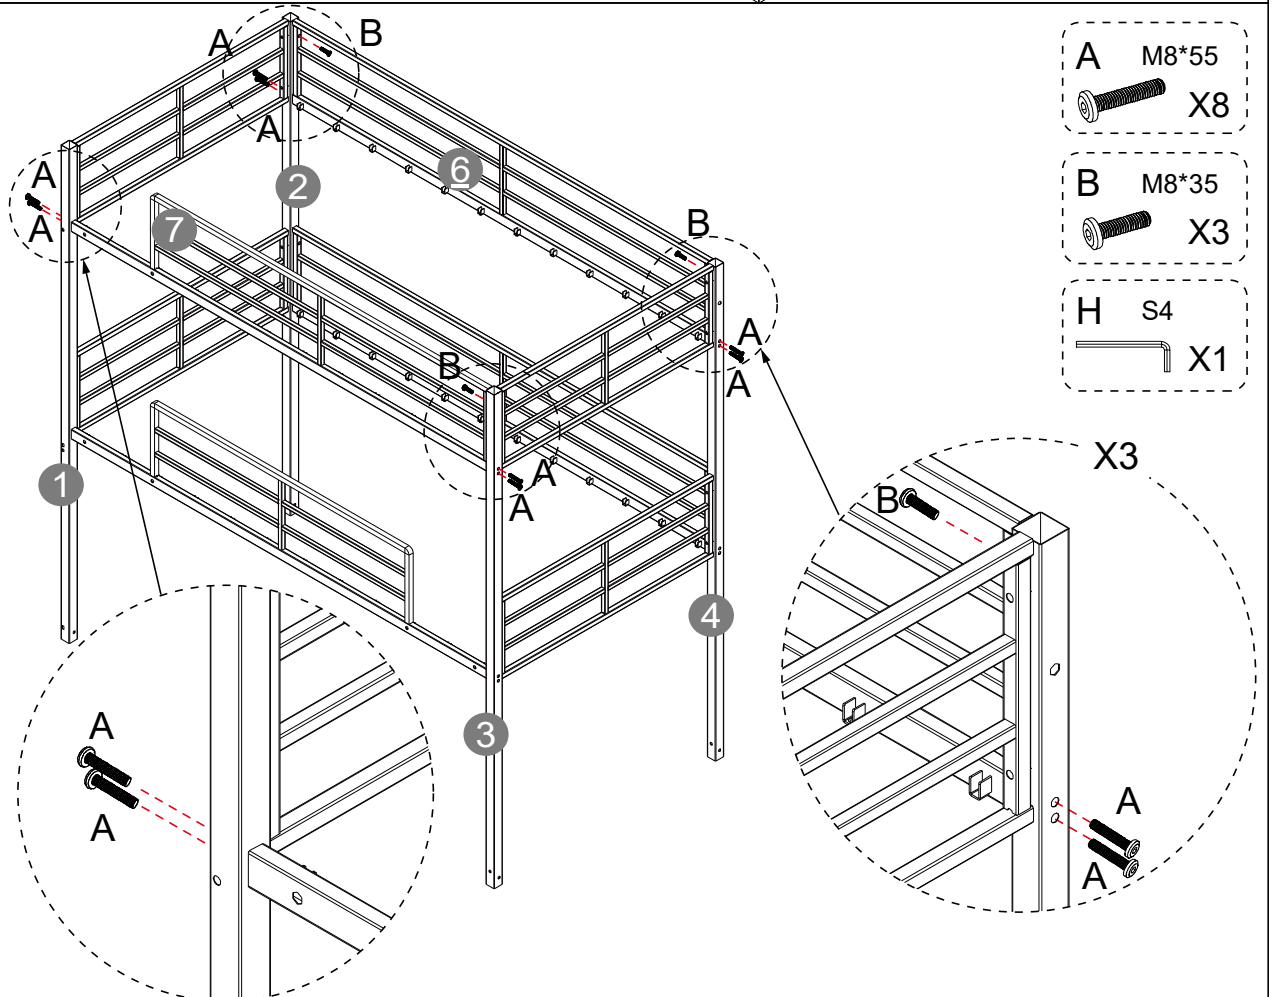




# Assembly Instruction

5

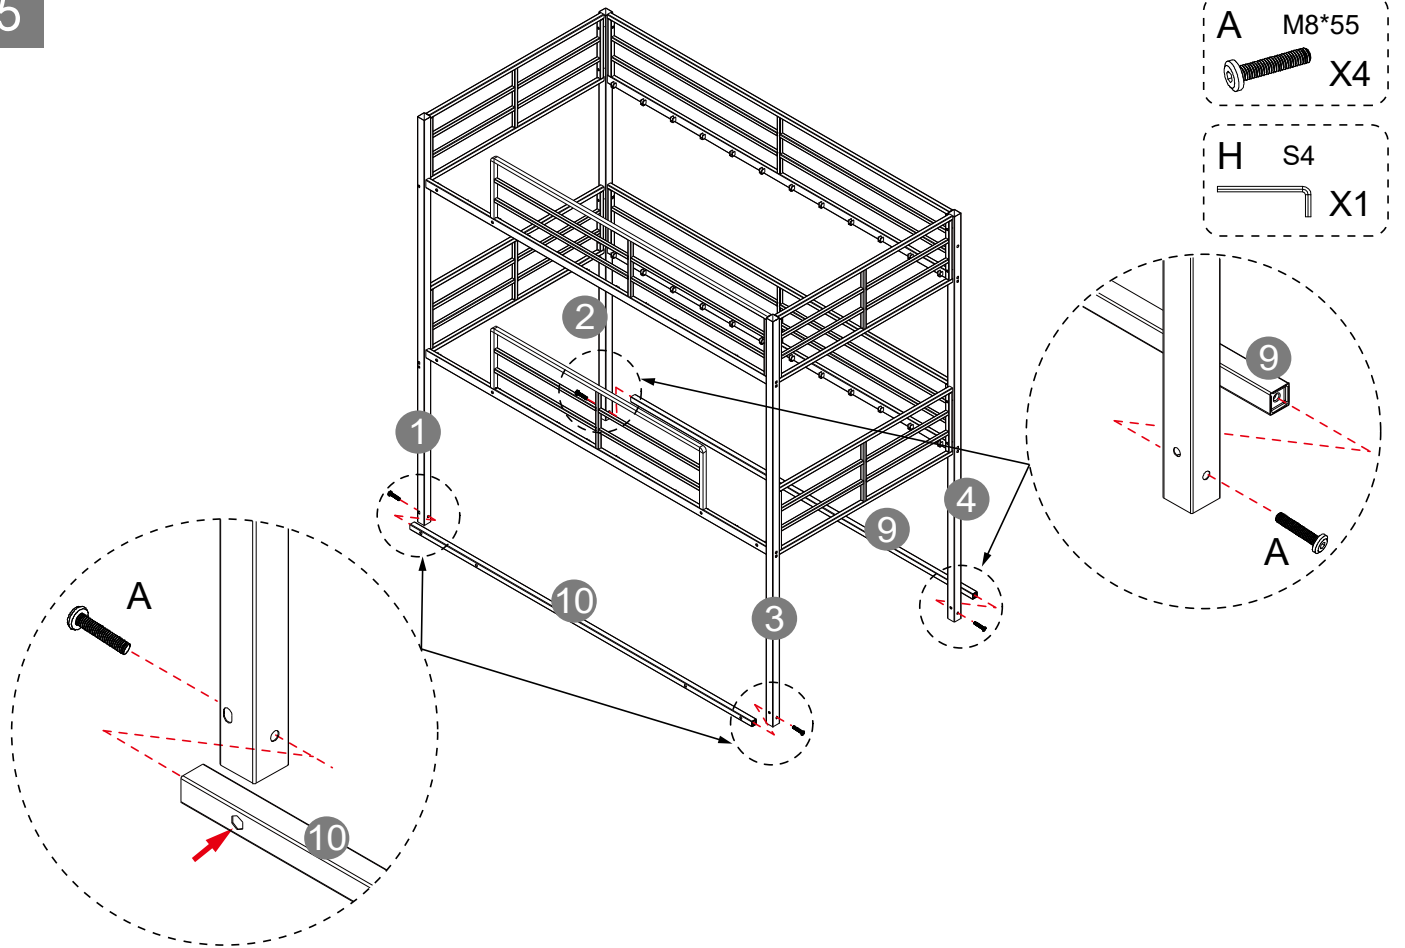


6

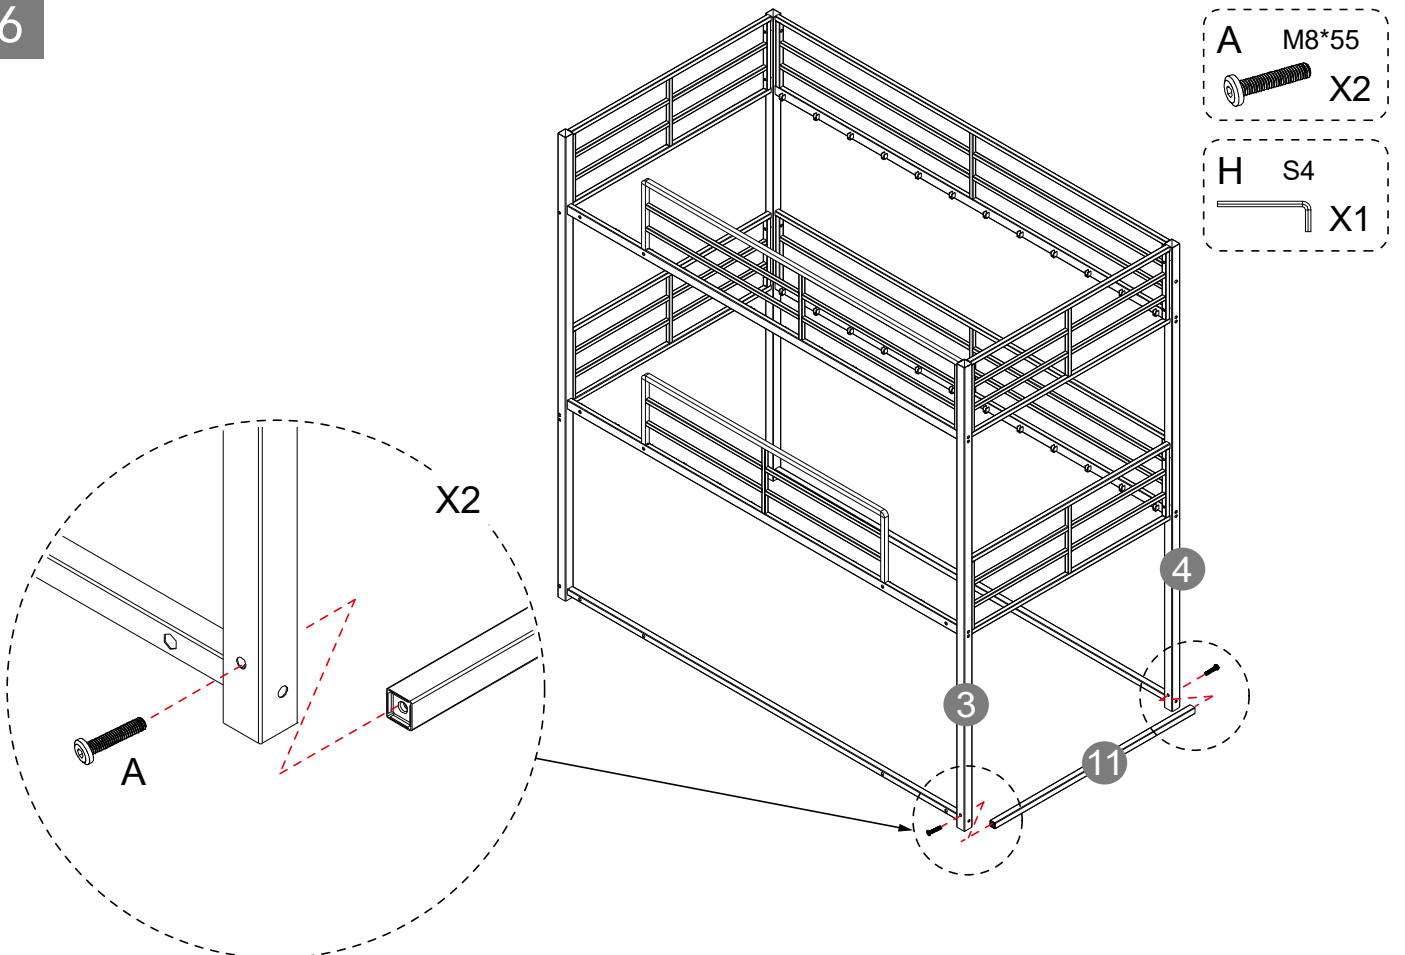




# Assembly Instruction

7

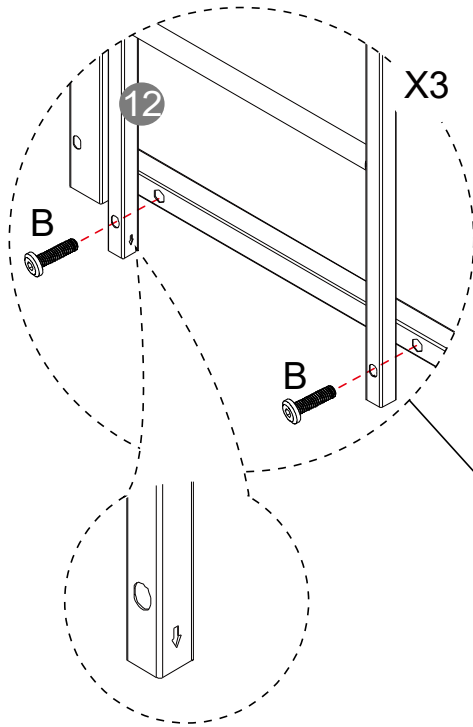


B M8\*35  
X6

H S4  
X1

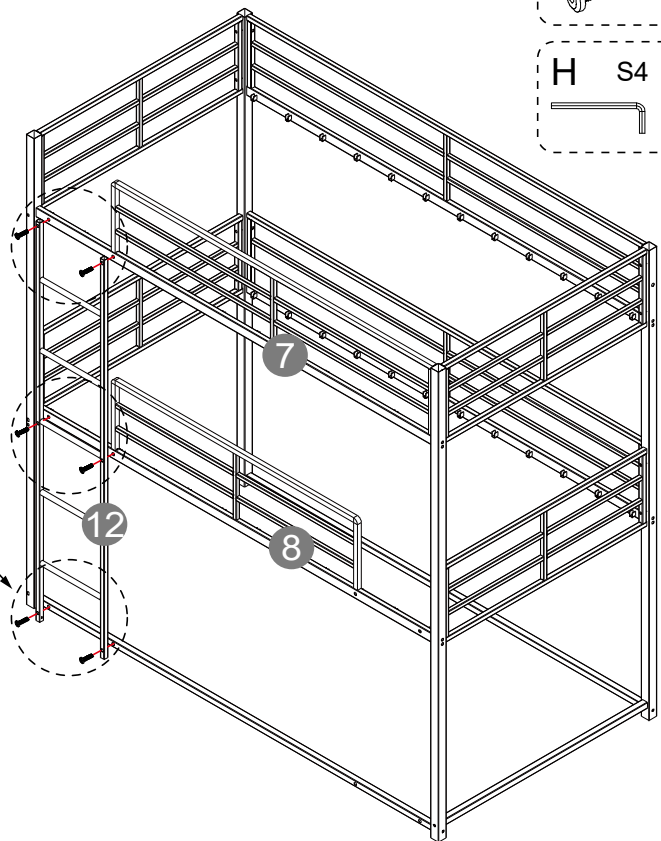


8

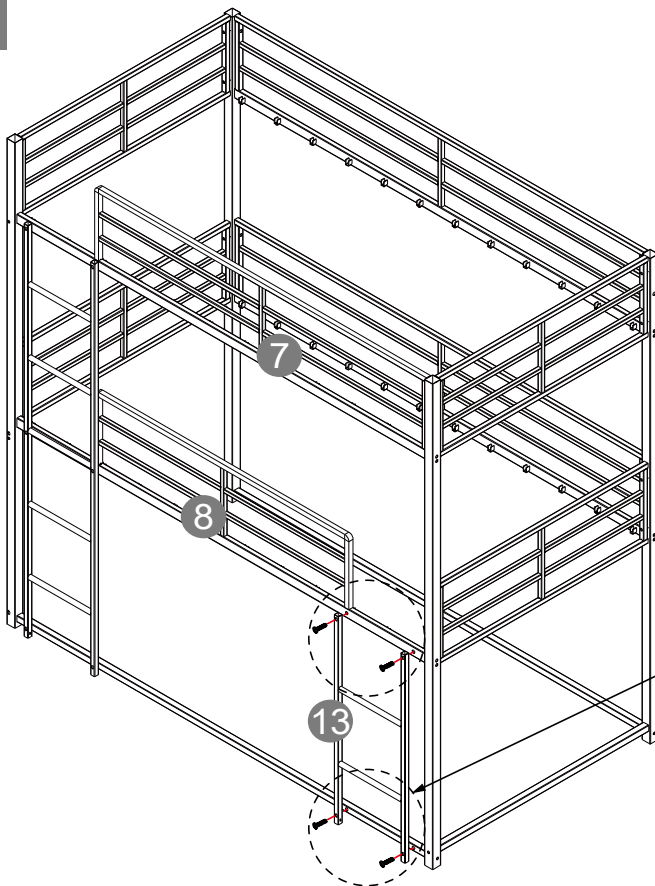


B M8\*35  
X4

H S4  
X1

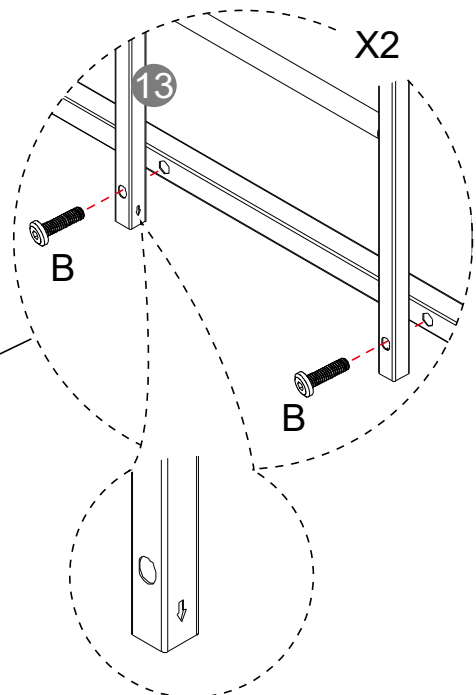


# Assembly Instruction

9

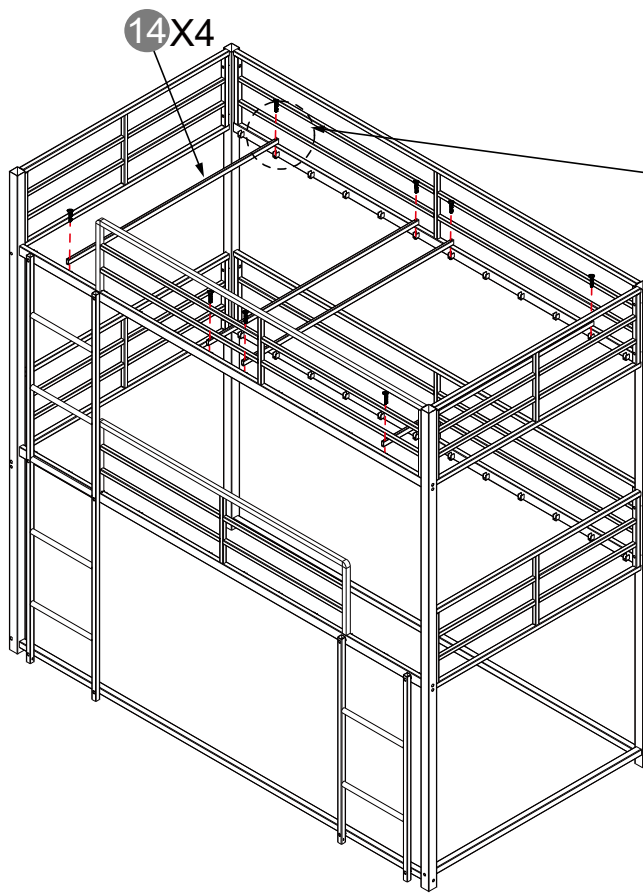


E M5\*25 X8

H S4 X1

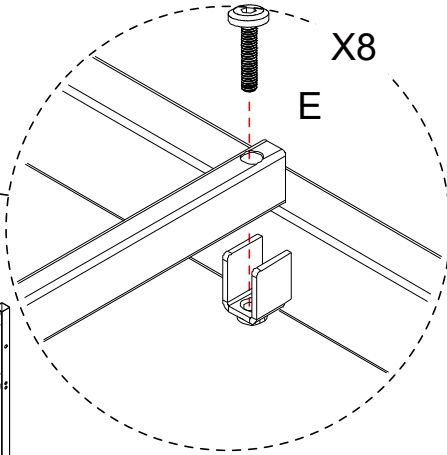


10

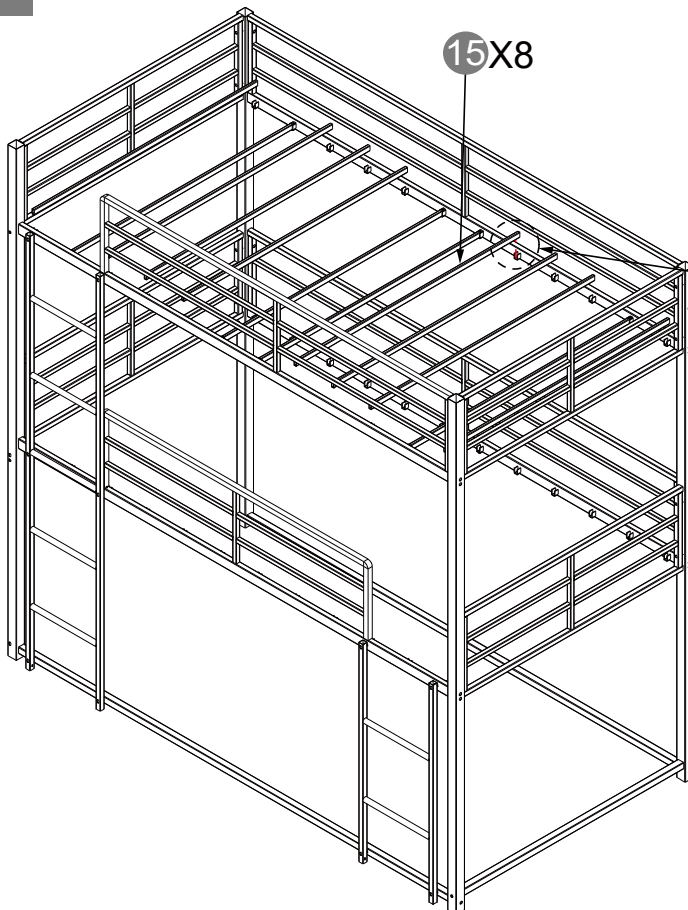


15X8

X8

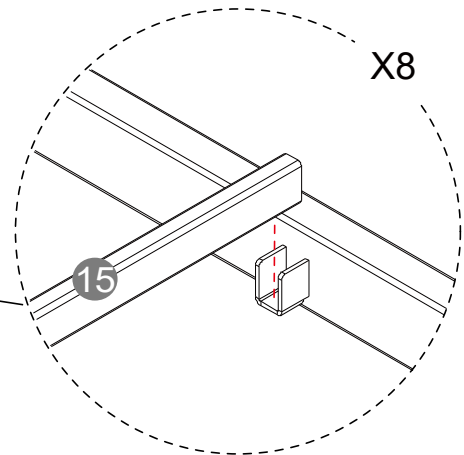

# Assembly Instruction


11

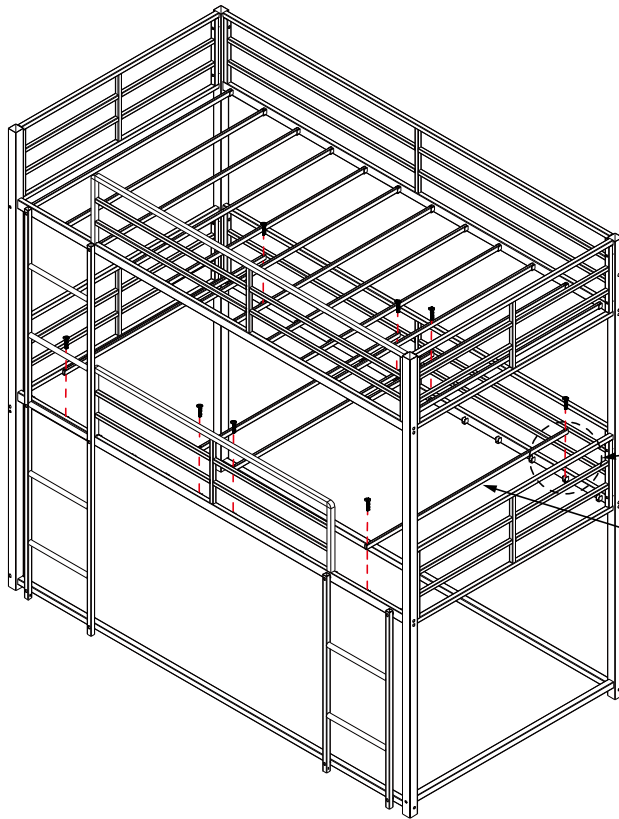


14X4

E M5\*25  
X8


H S4  
X1

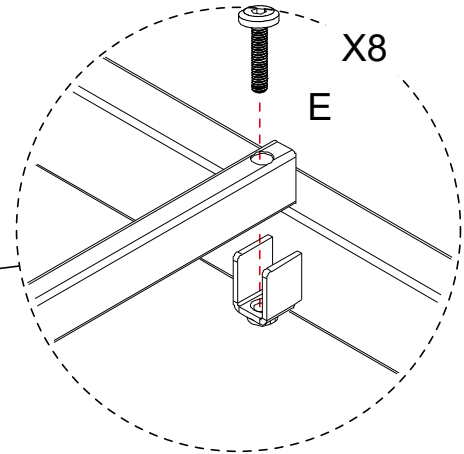

12

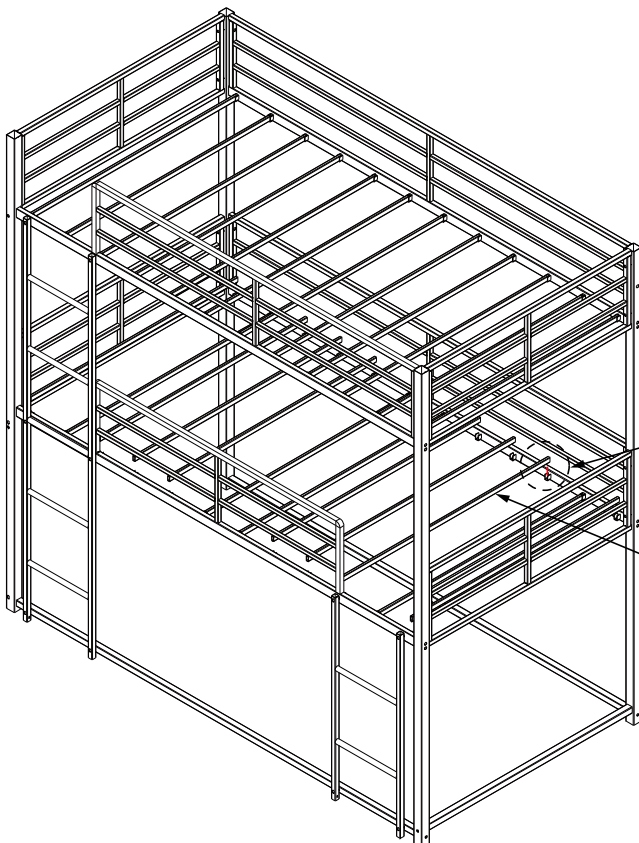


15X8

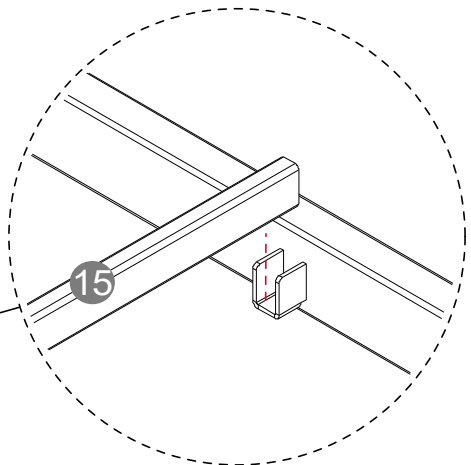


# Assembly Instruction

13

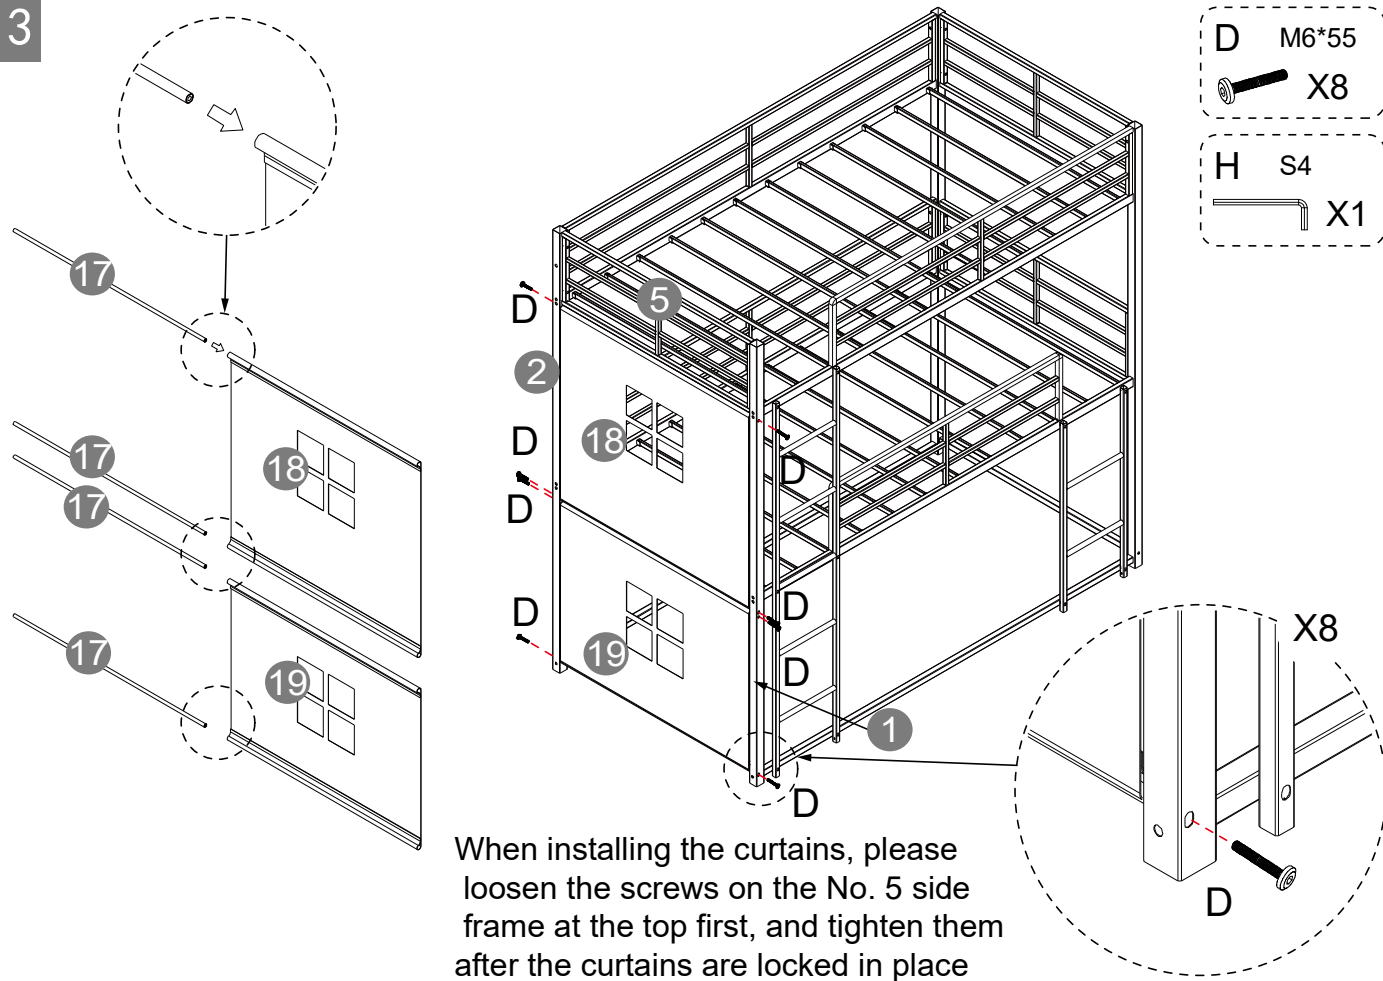

14


The cloth bag can be freely moved and installed

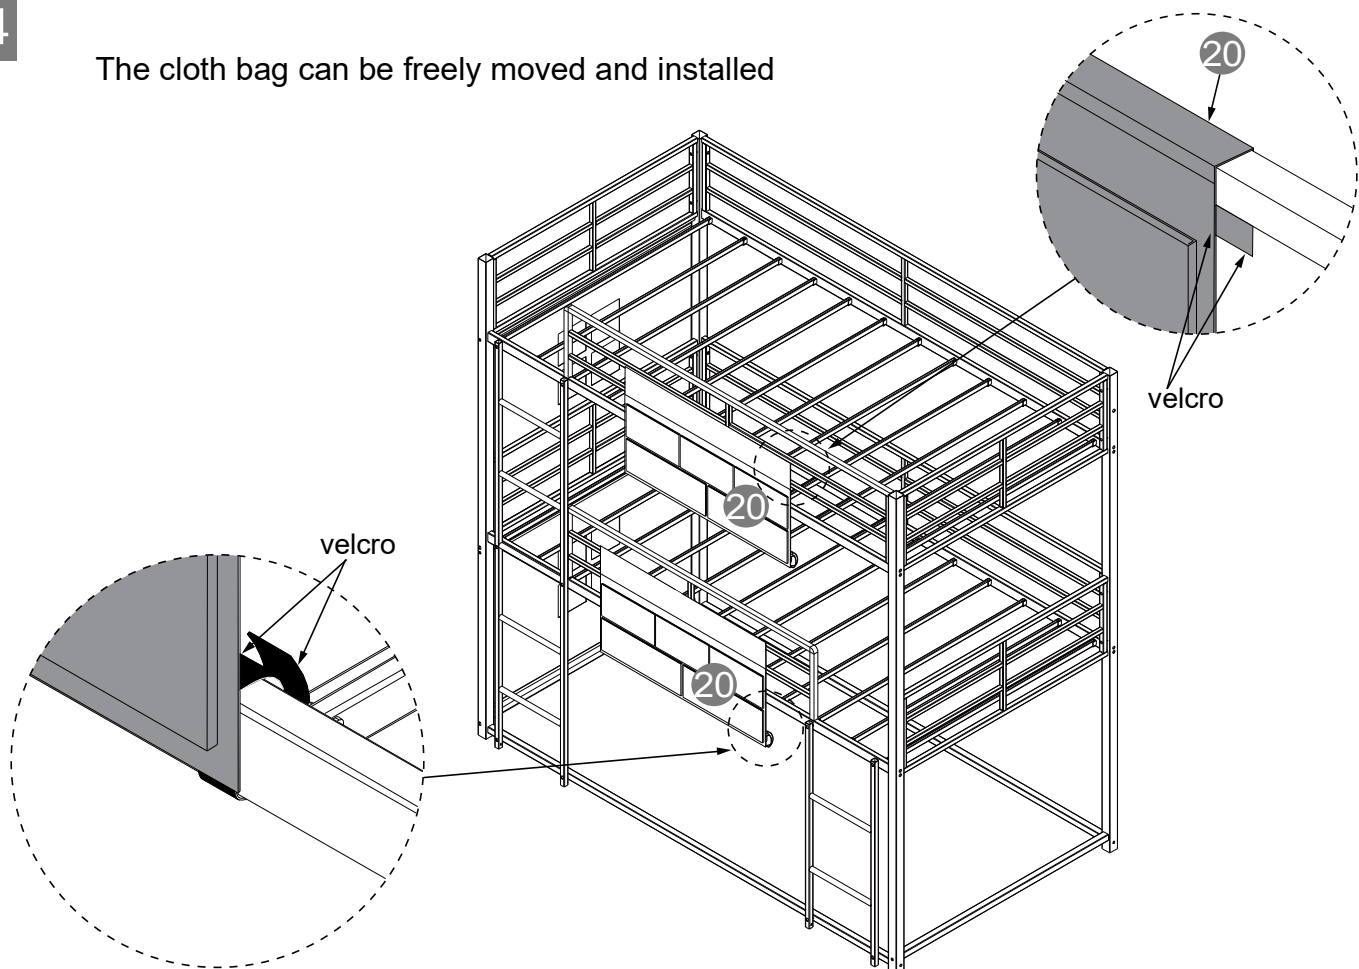




# Assembly Instruction

15



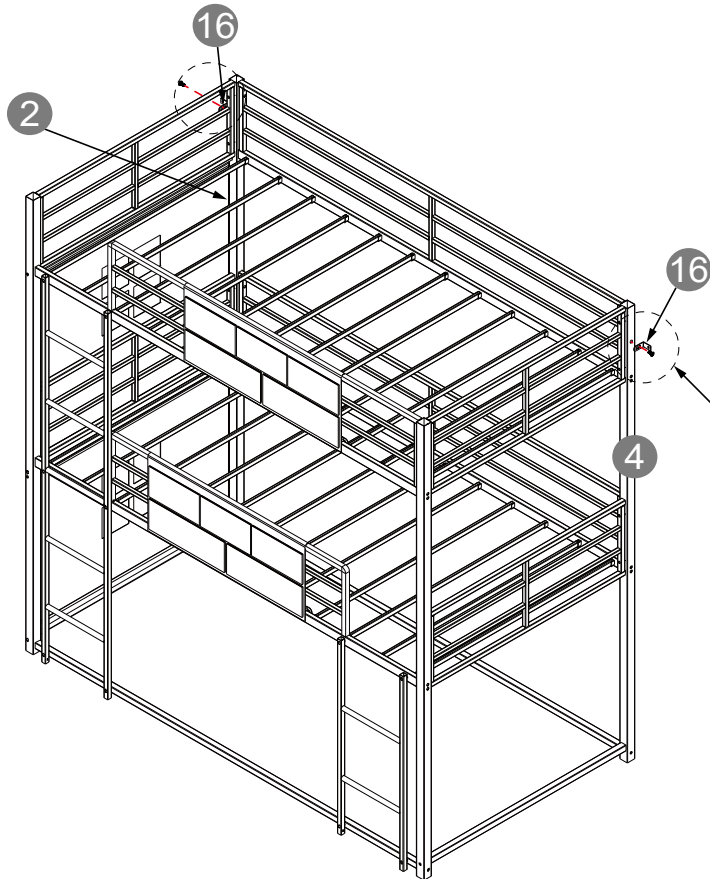


C M8\*15  
X2

H S4  
X1



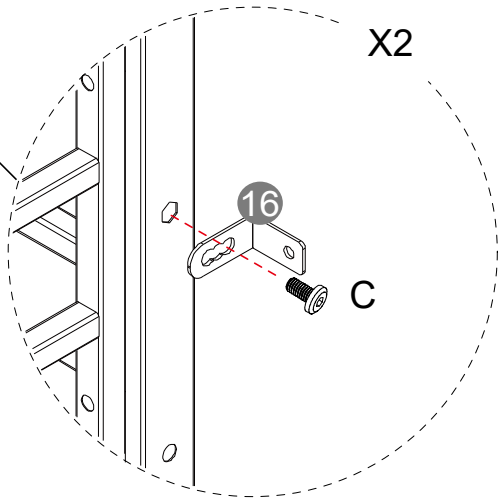


16

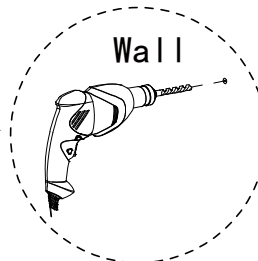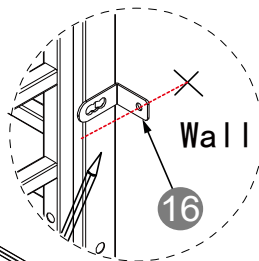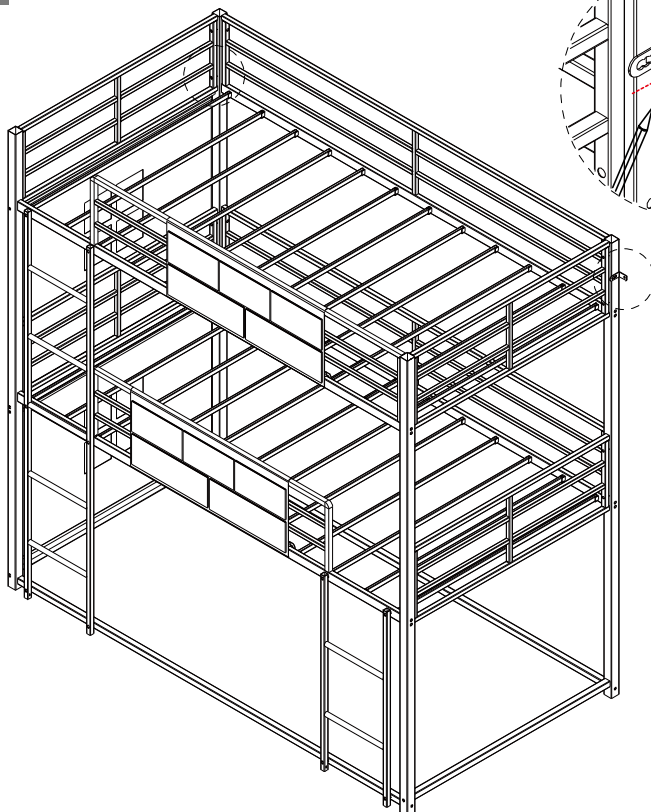

F M6\*50  
X2

G S10,S13  
X1

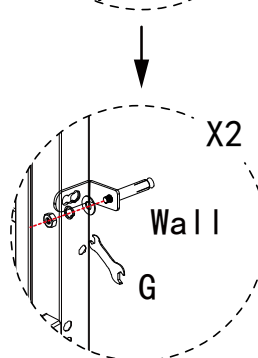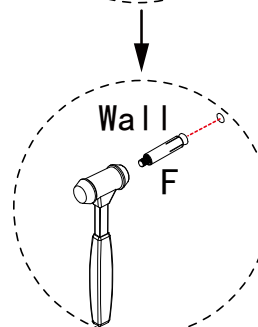

# Assembly Instruction

17

