




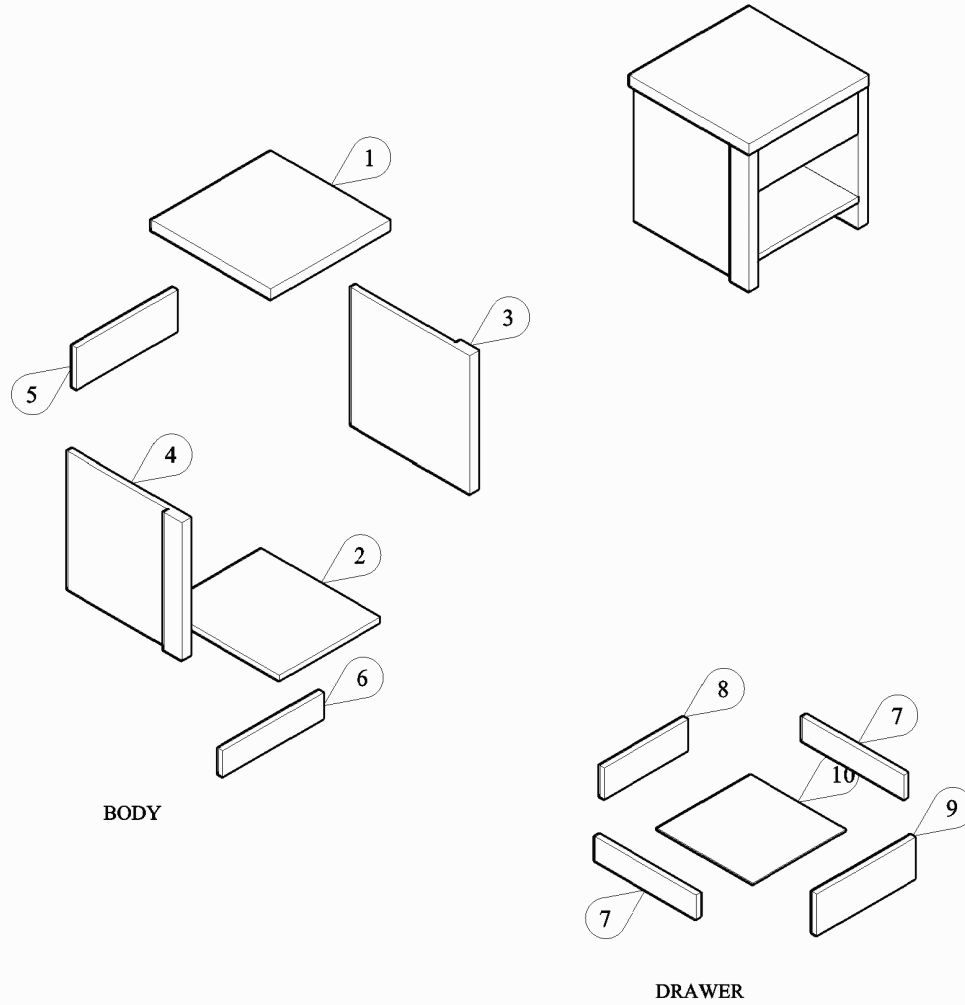


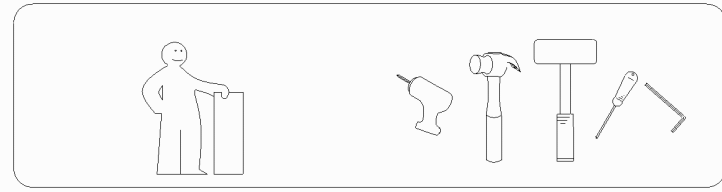
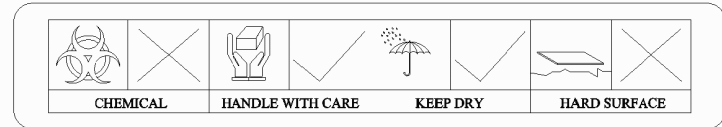



PANEL POSITION




	ACCESSORIES	QUANTITY
A	 DRAWER SLIDE 14" SCREW 3.5x12MM	1 SET 12 PCS
B	 WOOD DOWEL M3x80MM	16 PCS
C	 MINIFIX M5x24MM	4 PCS
D	 MINIFIX CASING	4 PCS
E	 RECTANGLE LEG SCREW 3.5x16MM	4 PCS 8 PCS
F	 SCREW M4x38MM	8 PCS
G	 ALLEN KEY	1 PC






START ASSEMBLY


STEP 1

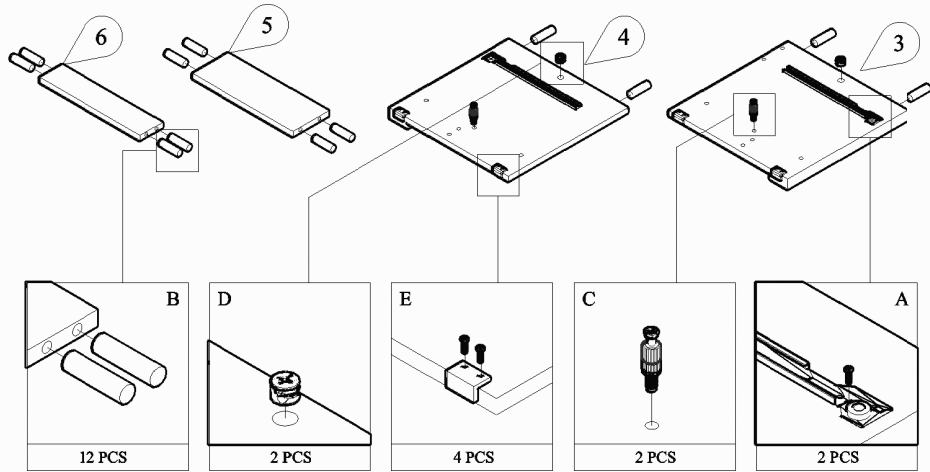


STEP 2

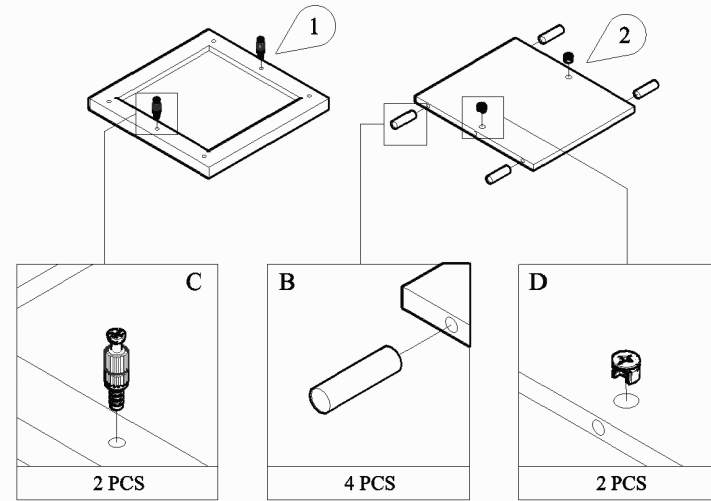


STEP 3

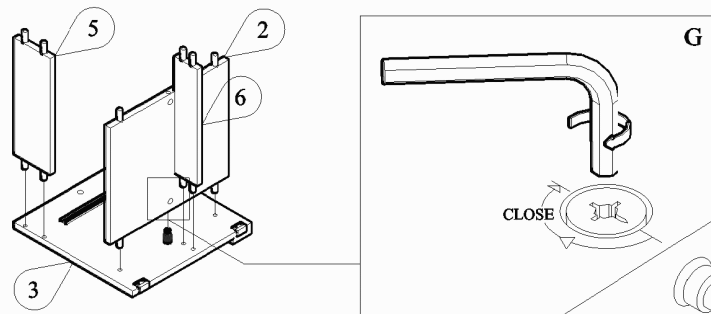


STEP 4

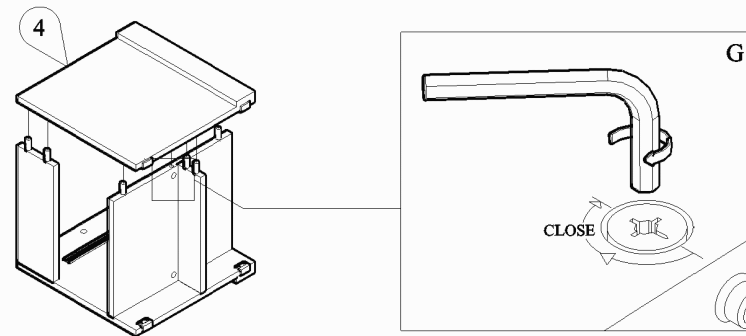


STEP 5

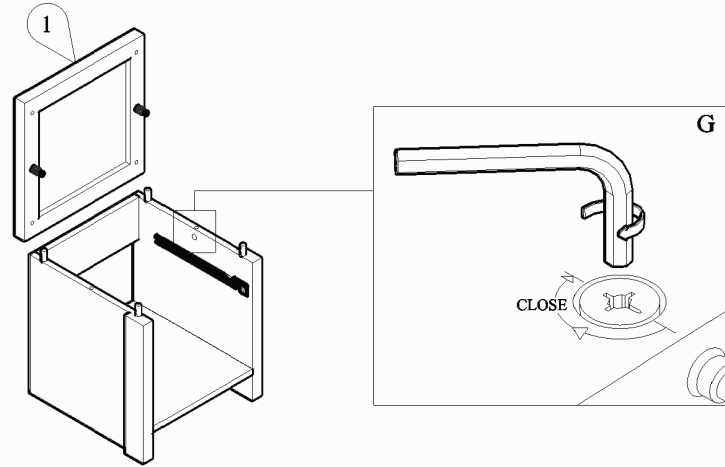


STEP 6

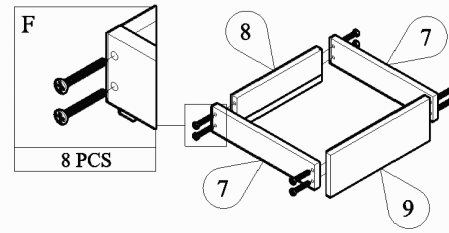


STEP 7

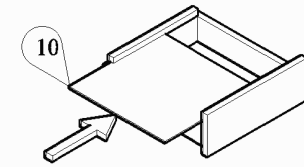


STEP 8

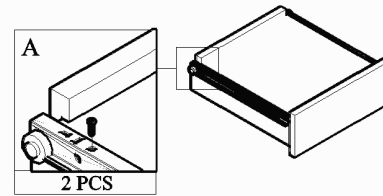

COMPLETED

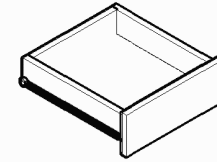

STEP 9

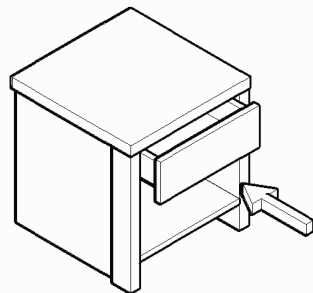

COMPLETED

