


Assembling Instruction

Item#: PDBL6075

Generating Drawings

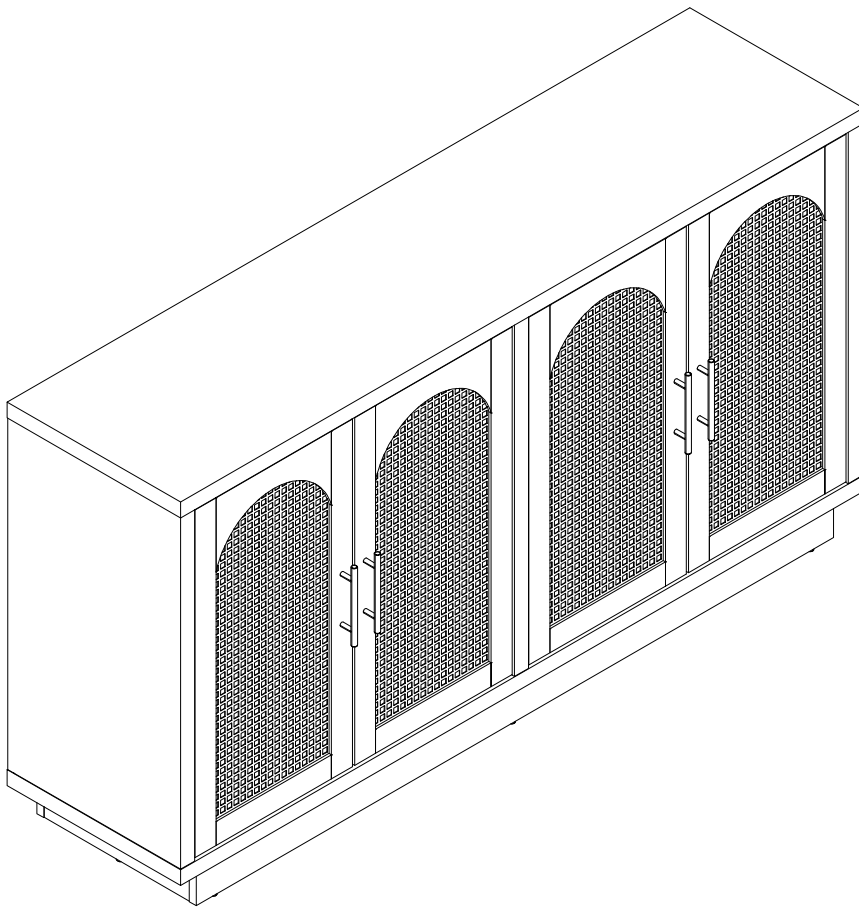

ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions.

We will send replacement to you asap. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.


Customer service **E-mail: cservice7@yeah.net**

Please attach your Oder ID so that we can assist you better.




General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- VI . A Phillips head screwdriver is required for the assembly of this product .

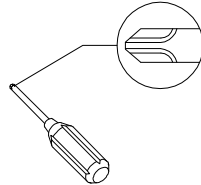


- VII . Power tools should not be used to assemble this product .


















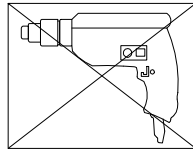



- VIII . Concealed hinges are three-way adjustable.

Parts List

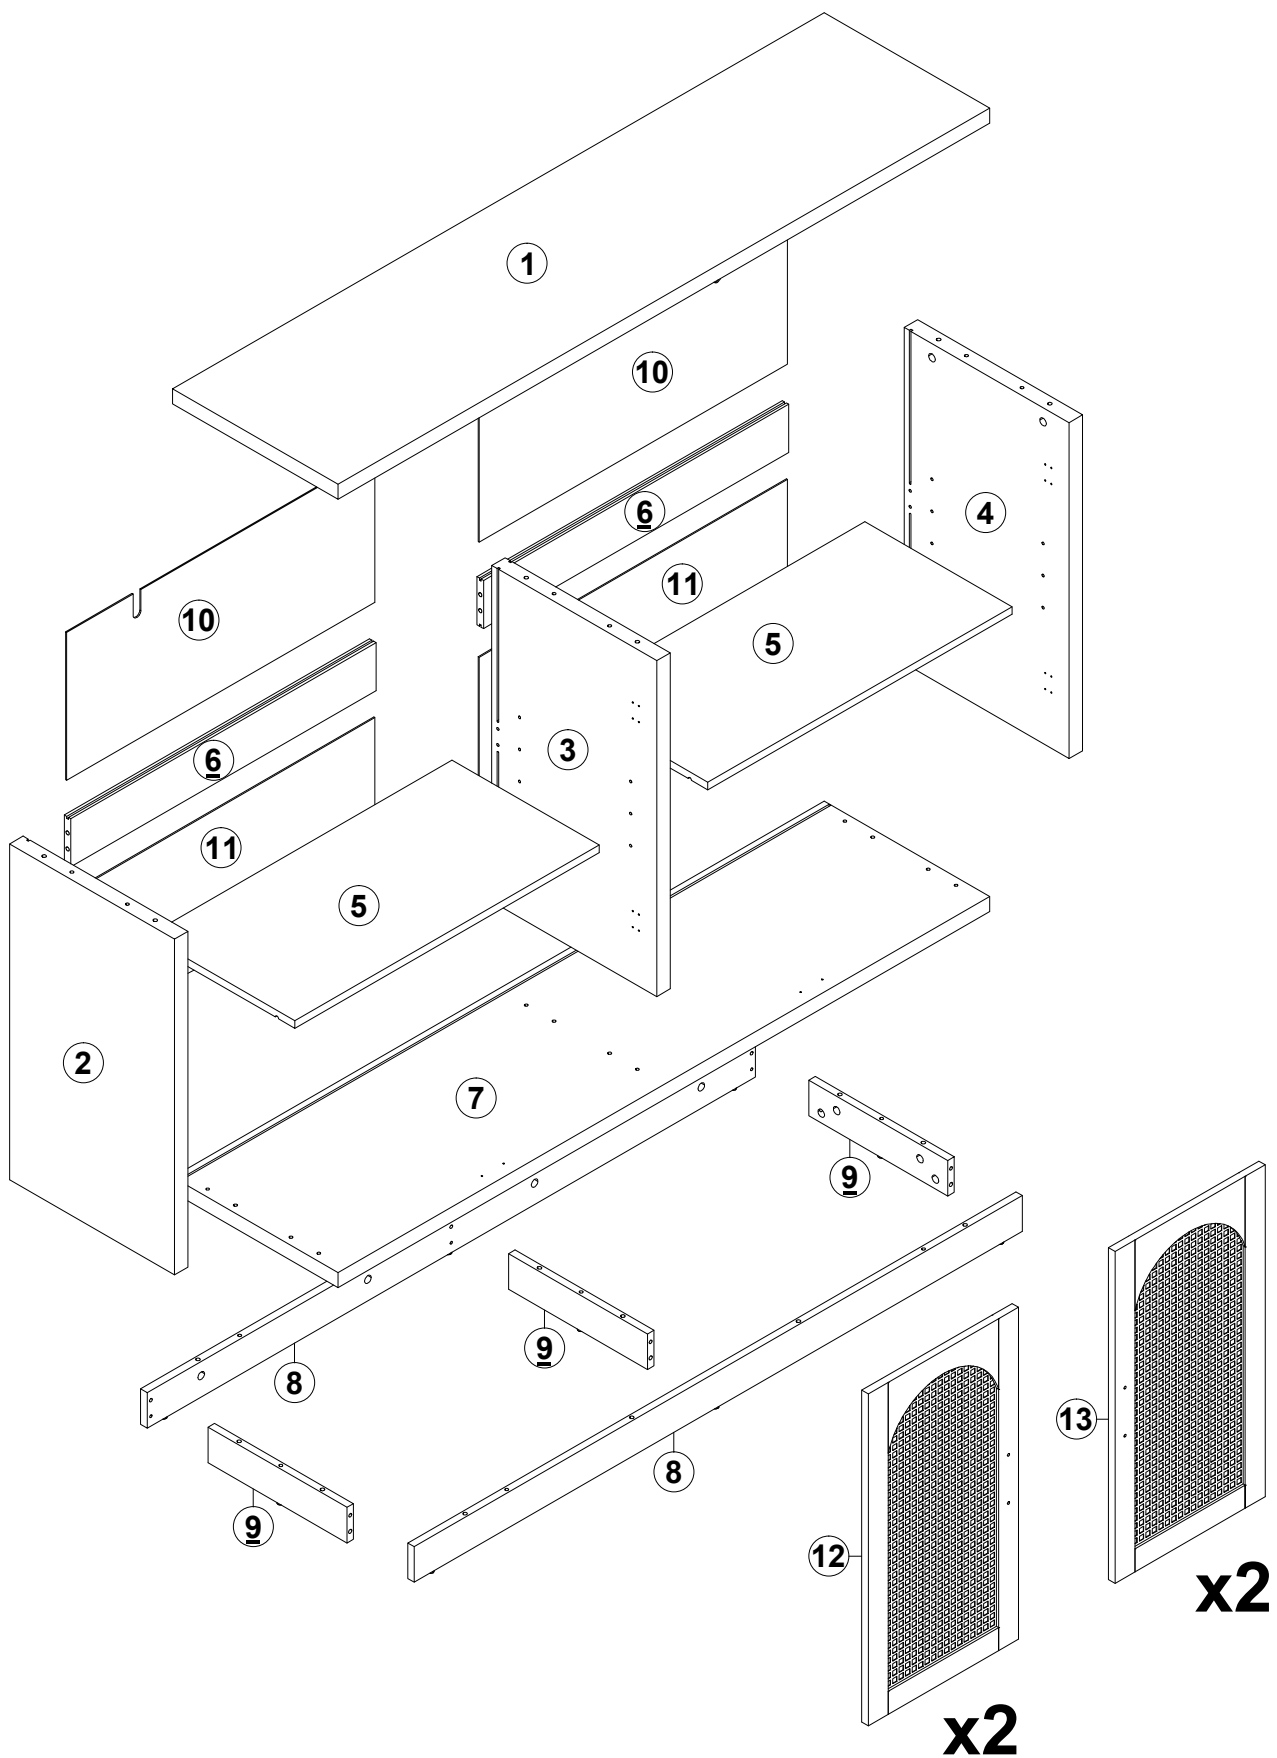

HARDWARE PACK CONTENT

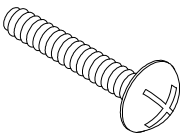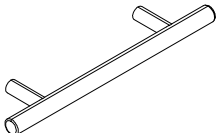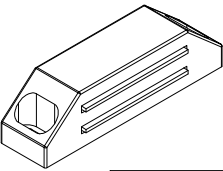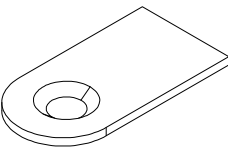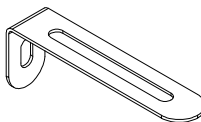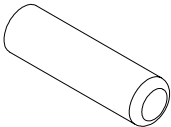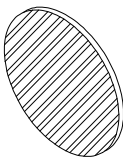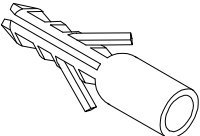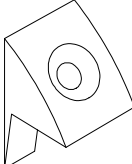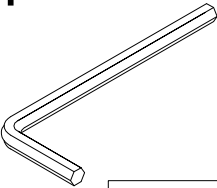
A  M6x35mm 34+4PCS	B  Ø15x9mm 34+4PCS	C  M4x40mm 2PCS	D  Ø6x30mm 25+4PCS	E  M3x12mm 8+1PCS
F  M4x16mm 8+1PCS	G  96mm 4PCS	H  4PCS	I  8+1PCS	J  M3x14mm 24+3PCS
K  Buffer Ø35mm 8PCS	L  M3.5x12mm 48+6PCS	M  M5x55mm 6+1PCS	N  M4x12mm 4+1PCS	O  2PCS
P  Ø5x20mm 8+1PCS	Q  Ø20mm 6+1PCS	R  Ø6x30mm 2PCS	S  16+2PCS	T  M4mm 1PC
U  9+2PCS				

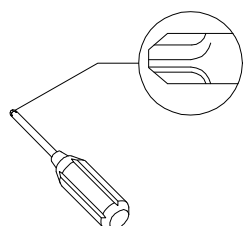




Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

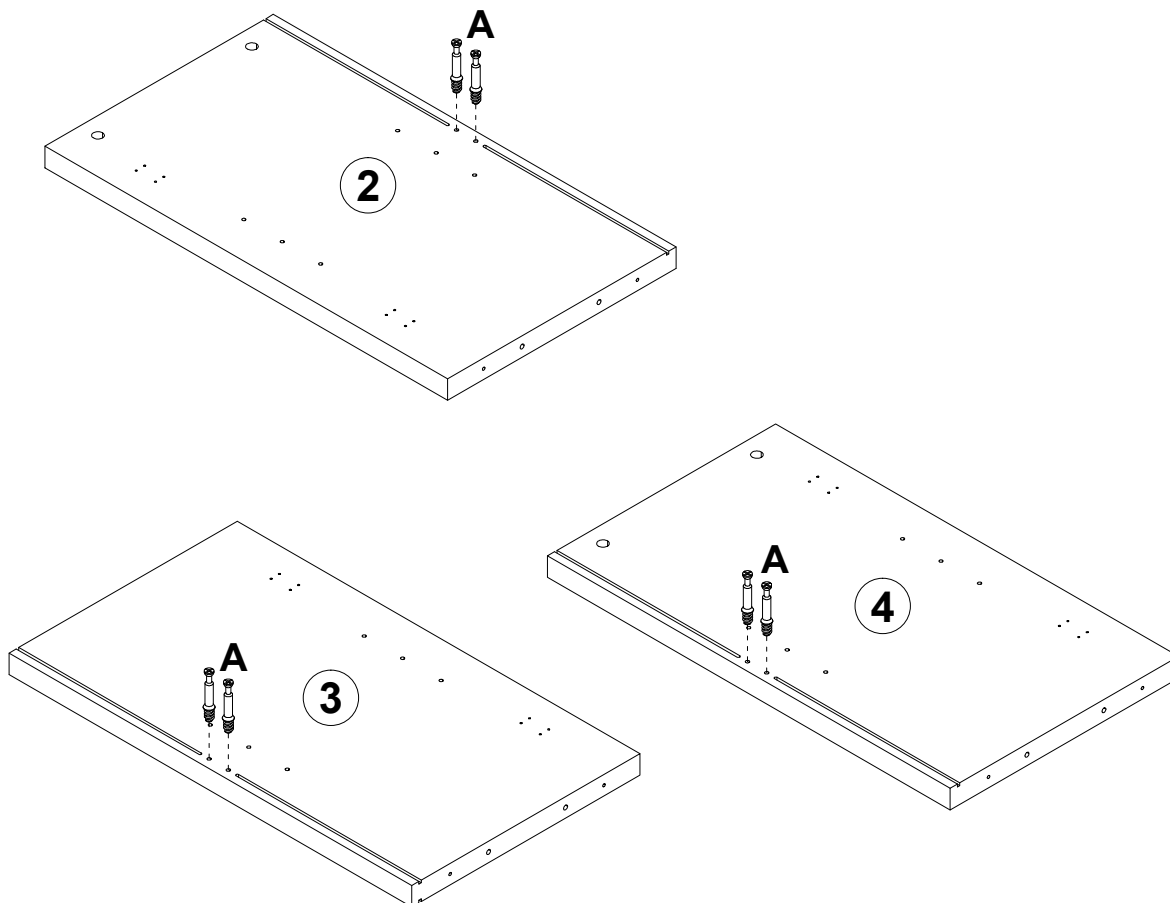


Note: The side of panel #3 without cam lock holes facing upward.

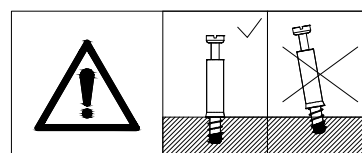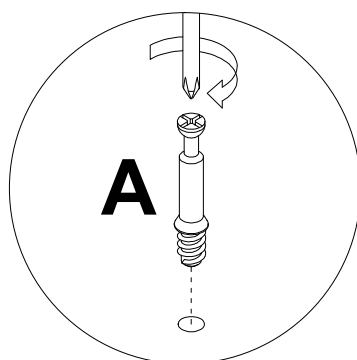

A x 6PCS


Step 2

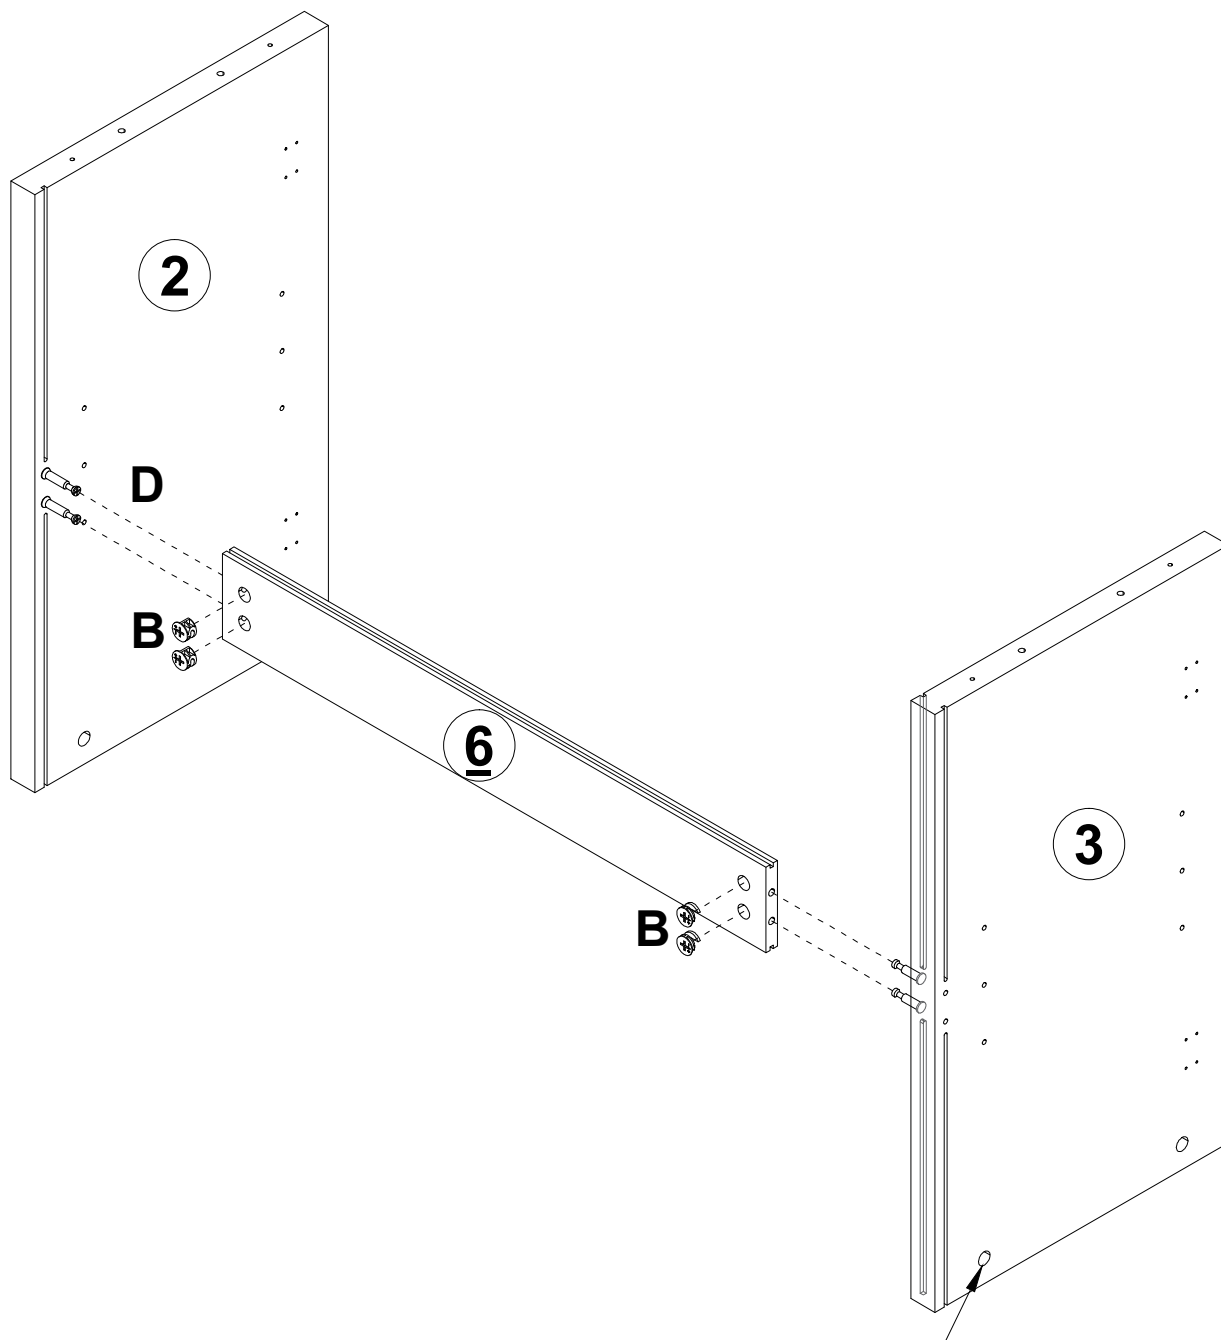





Note: The cam lock holes are located below.


Ø15x9mm

B x 4PCS


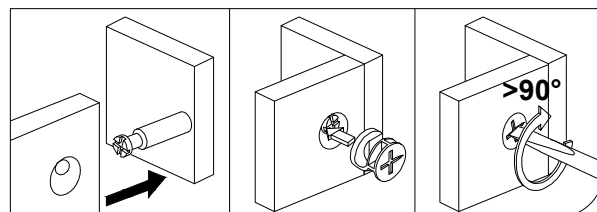


Step 3

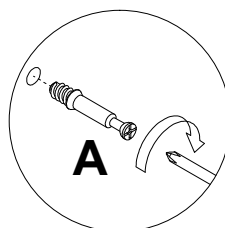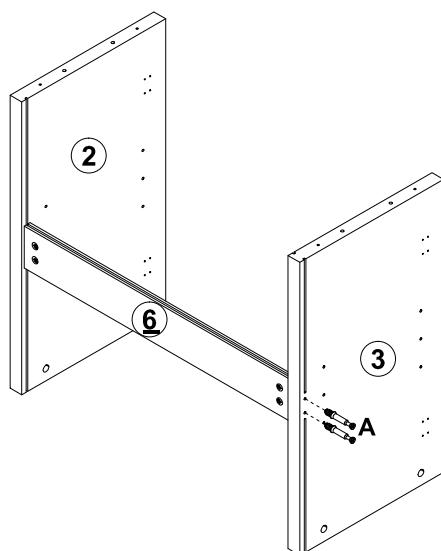


A x 2PCS

Step 4

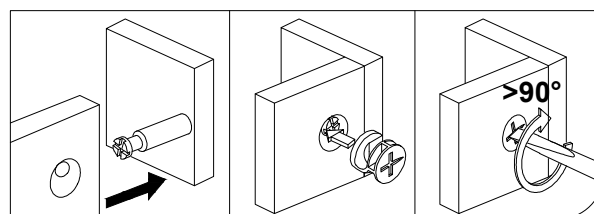
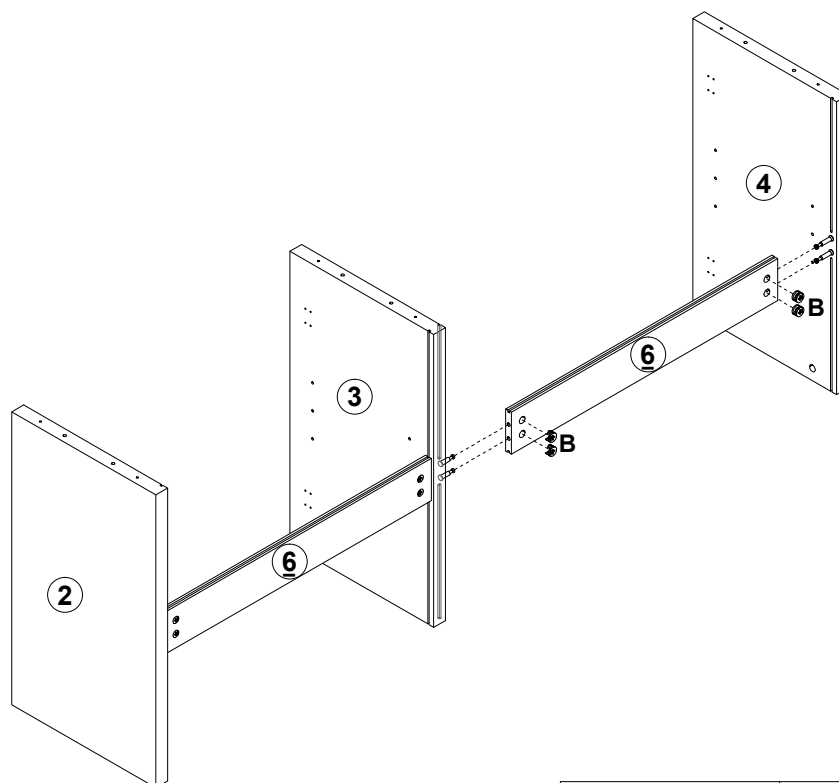


B x 4PCS


Step 5

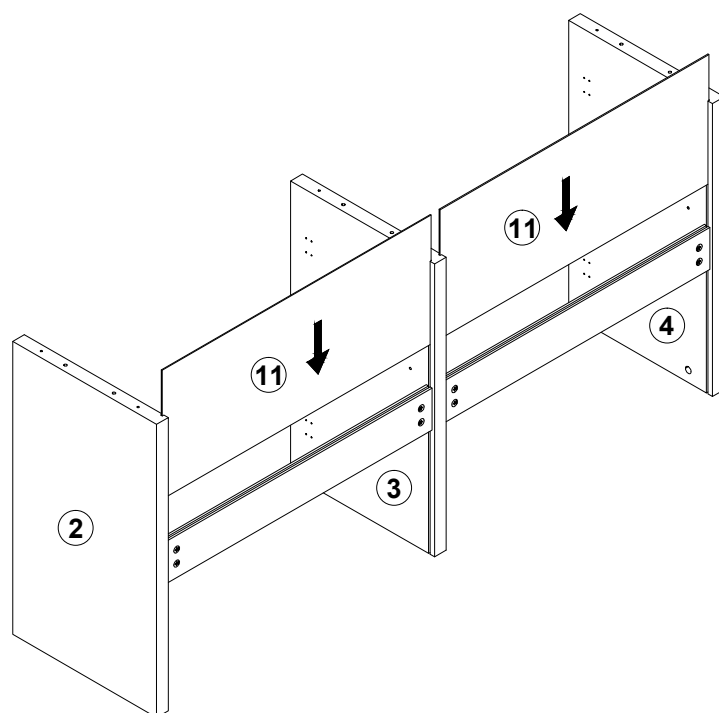

Step 6

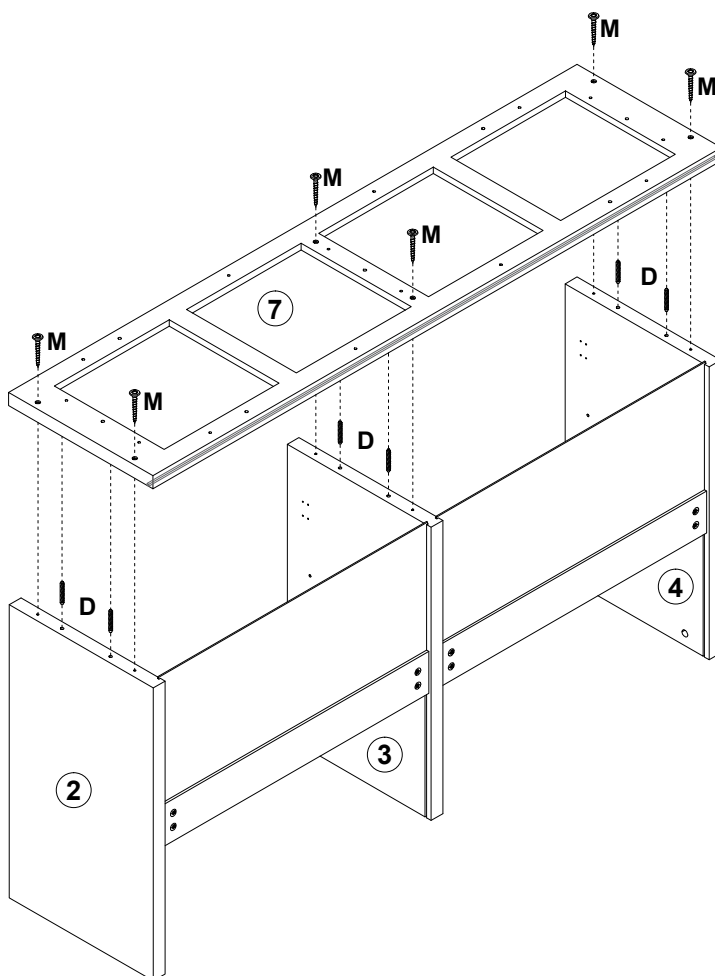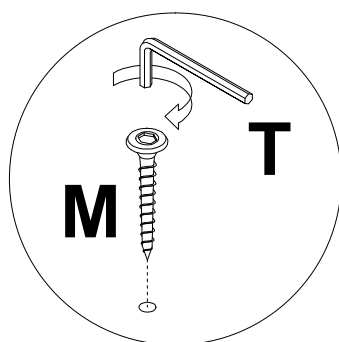

D x 6PCS







M x 6PCS







T x 1PC

Step 7

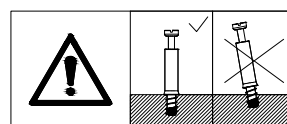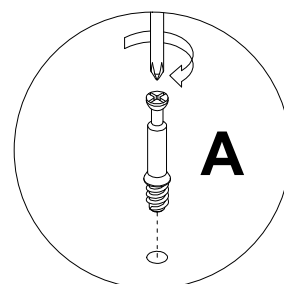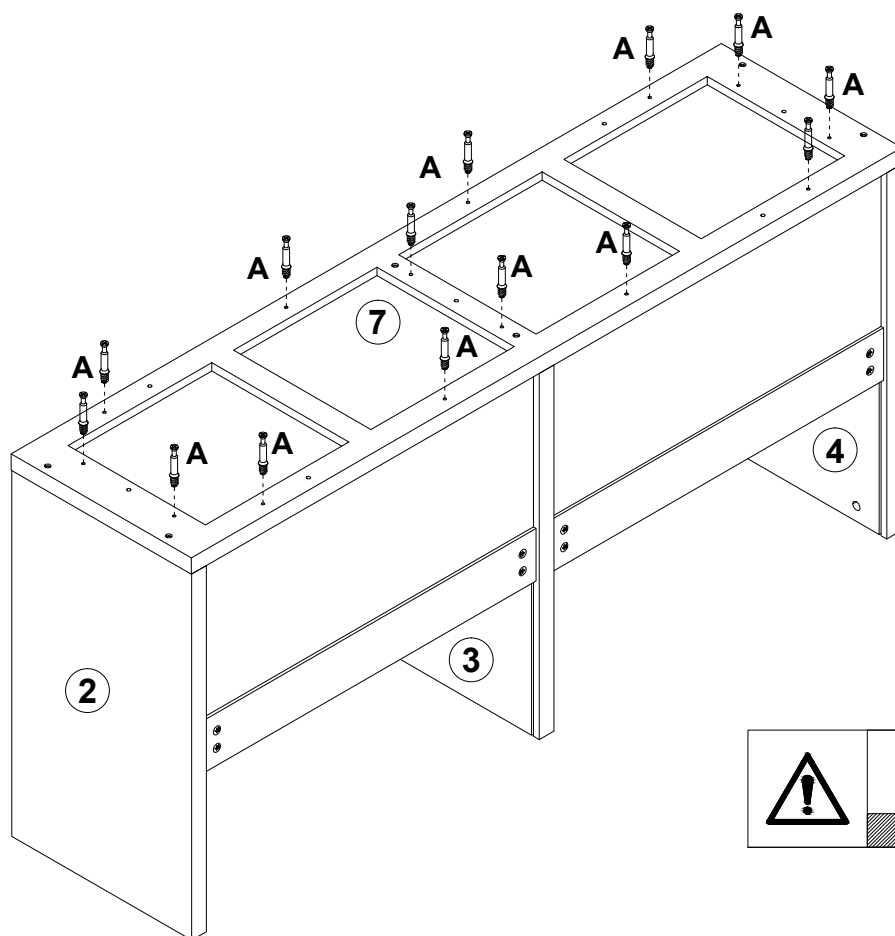

A x 14PCS


Step 8

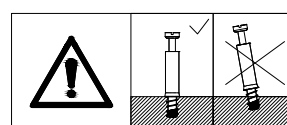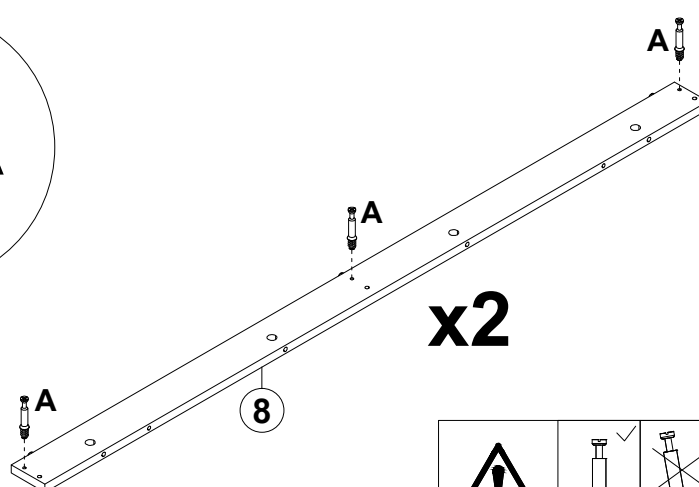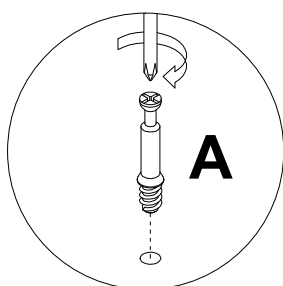

A x 6PCS

Step 9

NOTE: The cam lock holes on panel #9 should be face inward.

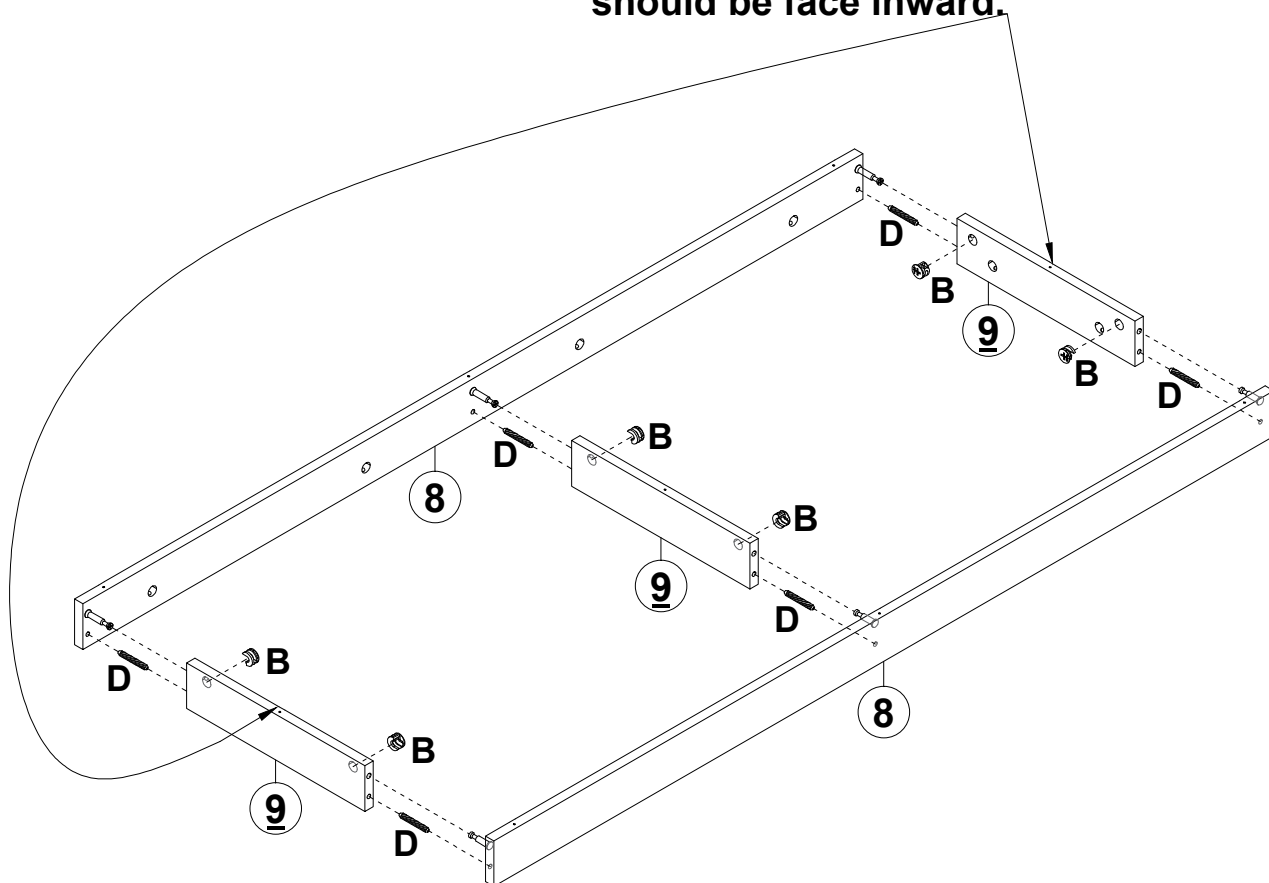



Ø15x9mm



B x 6PCS


Ø6x30mm

D x 6PCS

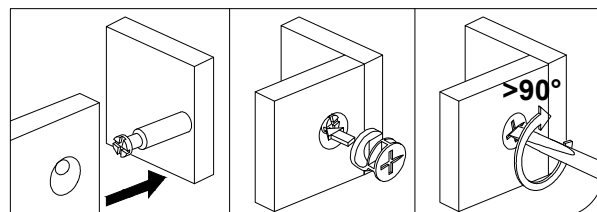


Step 10

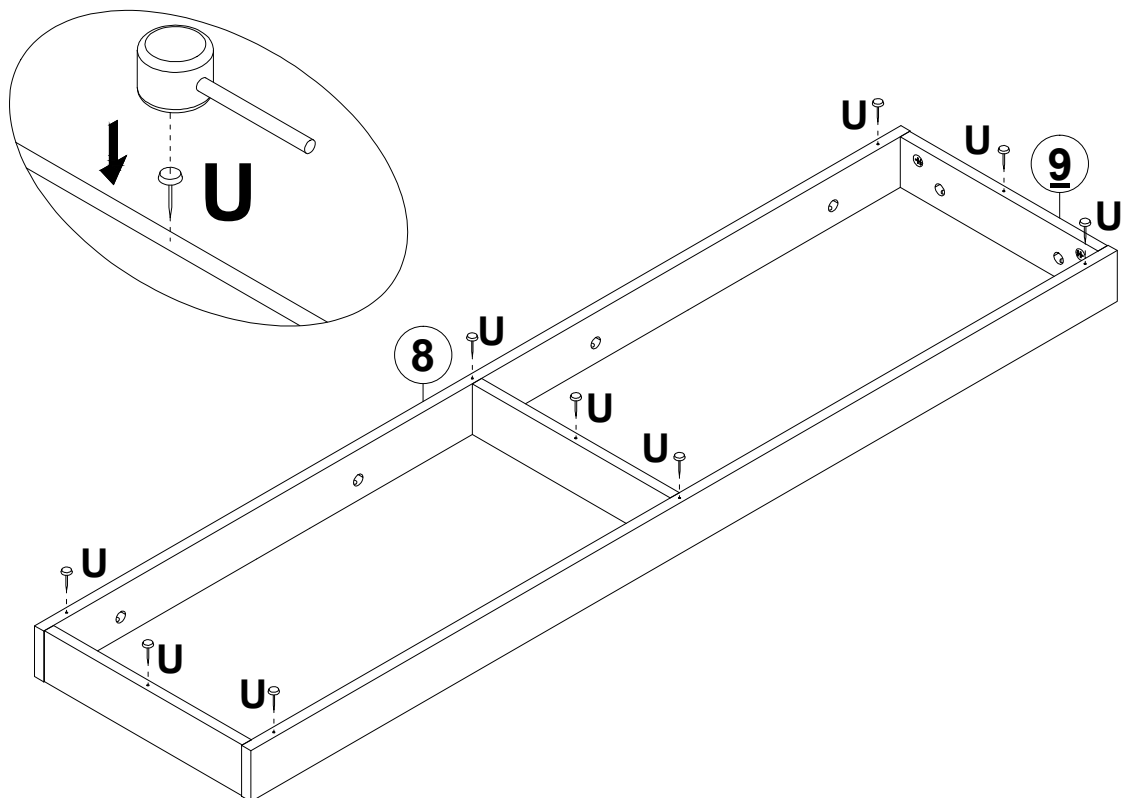

U x 9PCS

Step 11

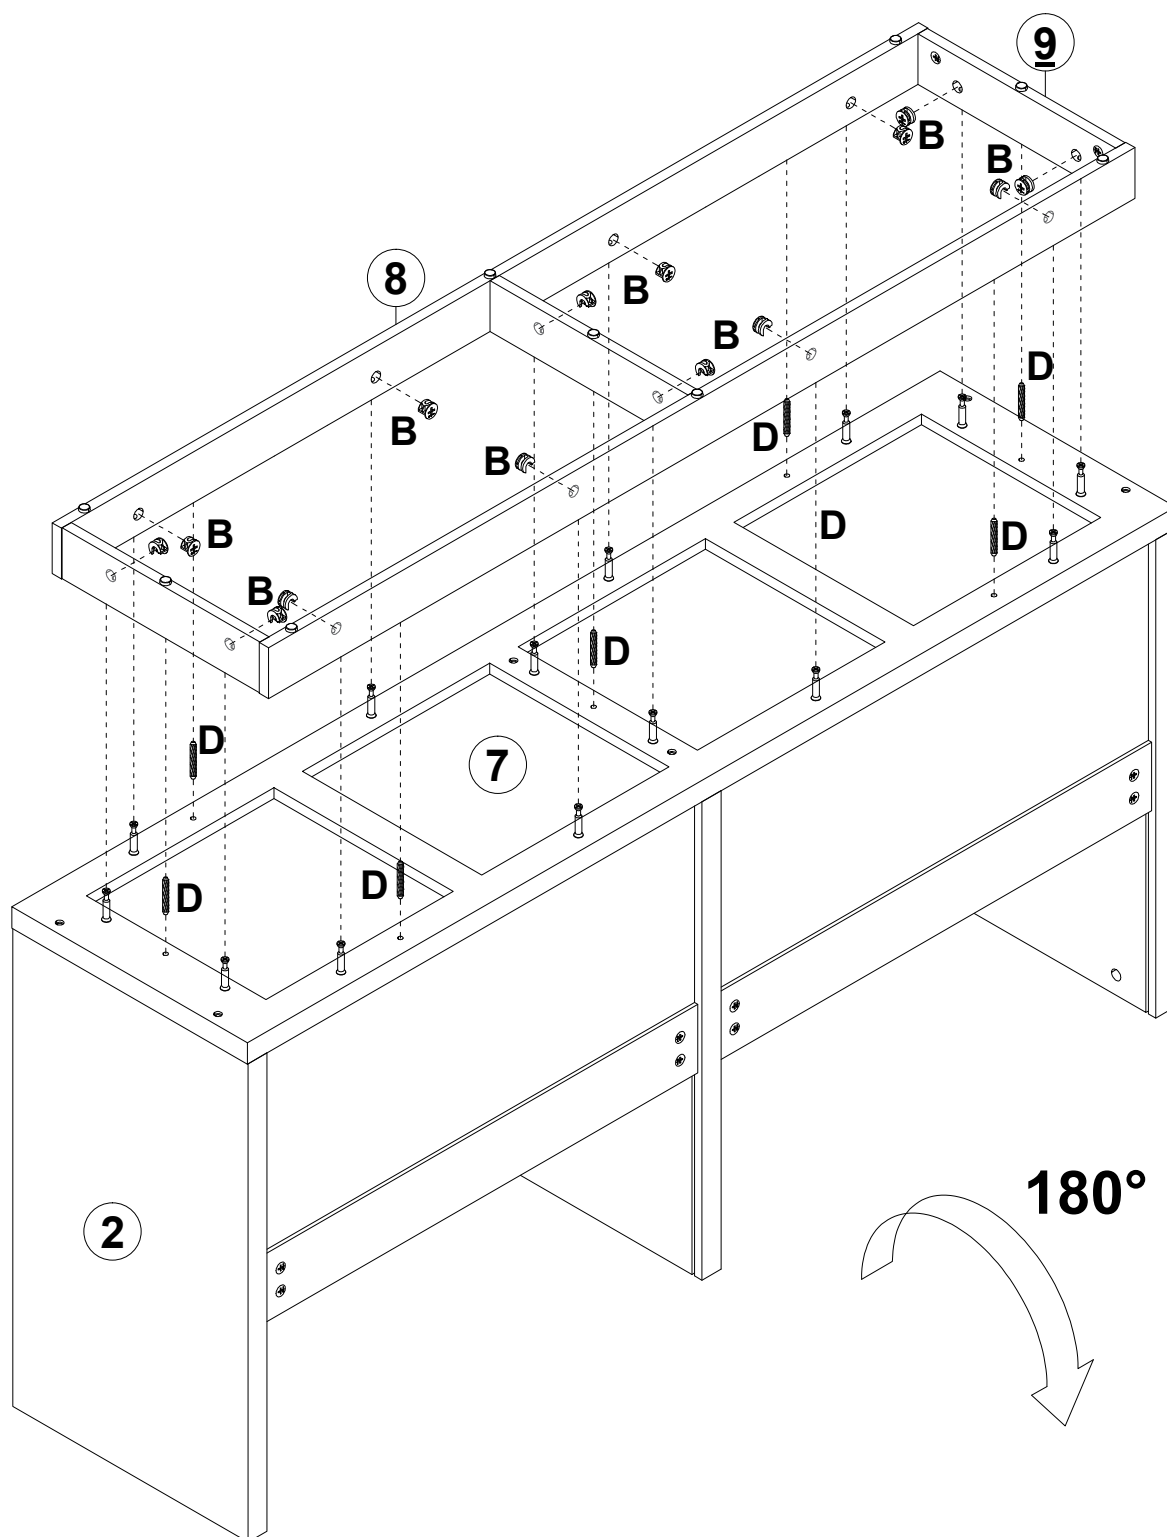


Ø15x9mm

B x 14PCS

Ø6x30mm




D x 7PCS

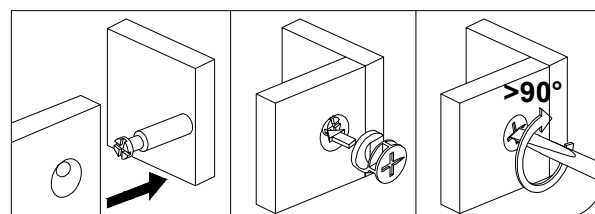

Step 12



Note: Ensure the U-notch on the #10 back plate are at the top.

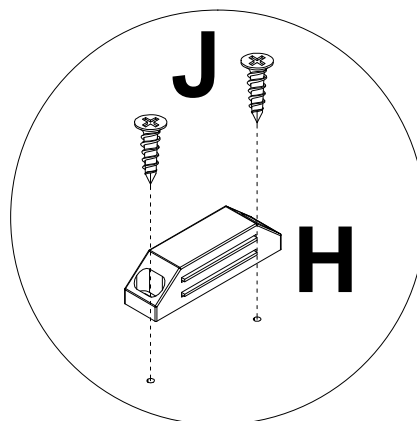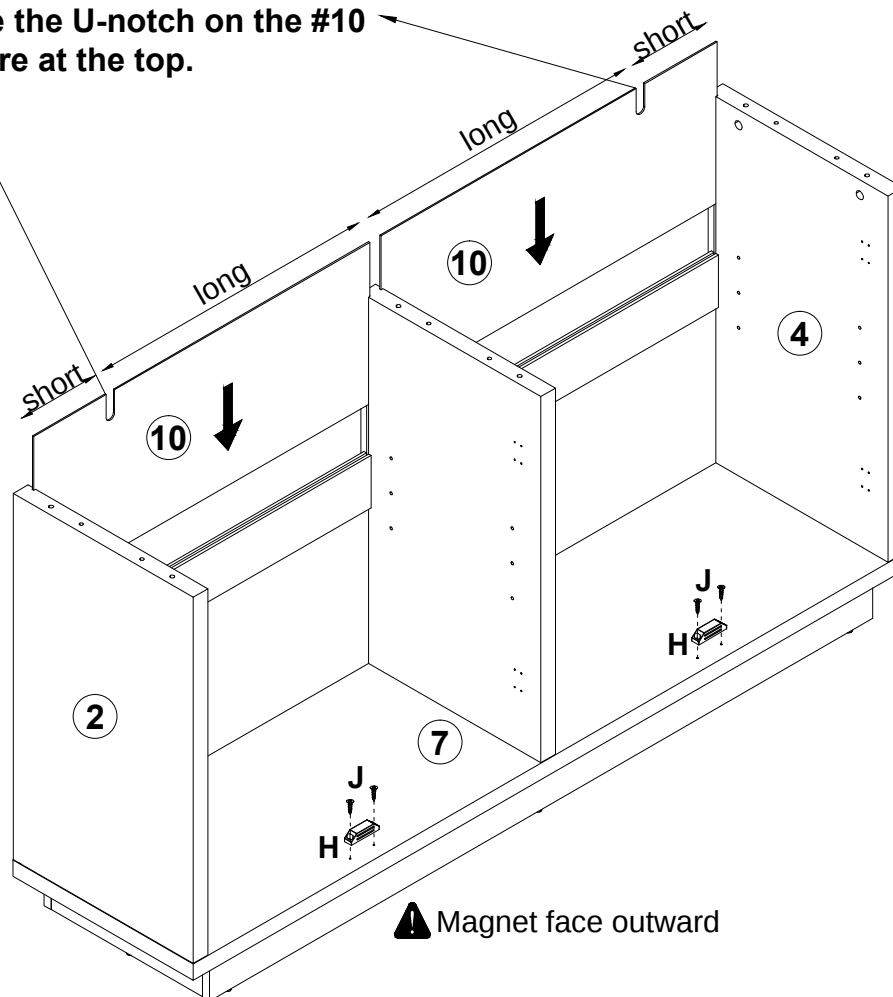

H x 2PCS






M3x14mm


J x 4PCS

Step 13


 Magnet face outward

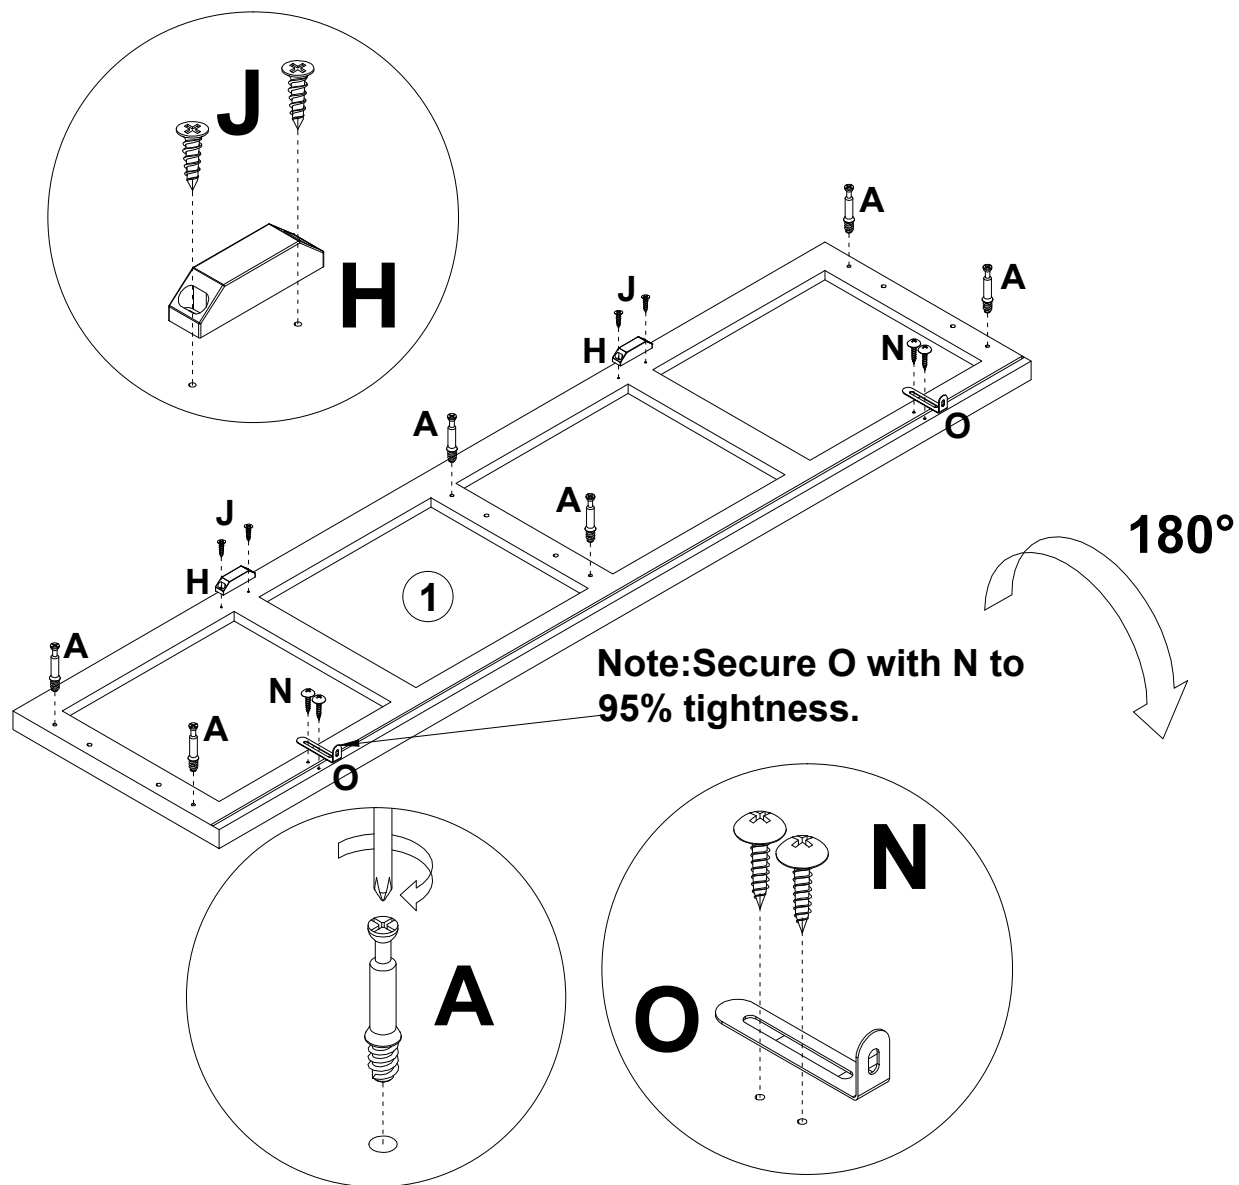

 M6x35mm	A x 6PCS
	H x 2PCS
 M3x14mm	J x 4PCS
 M4x12mm	N x 4PCS
	O x 2PCS

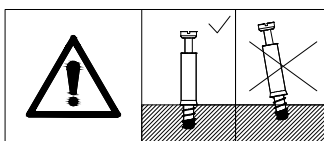


Step 14

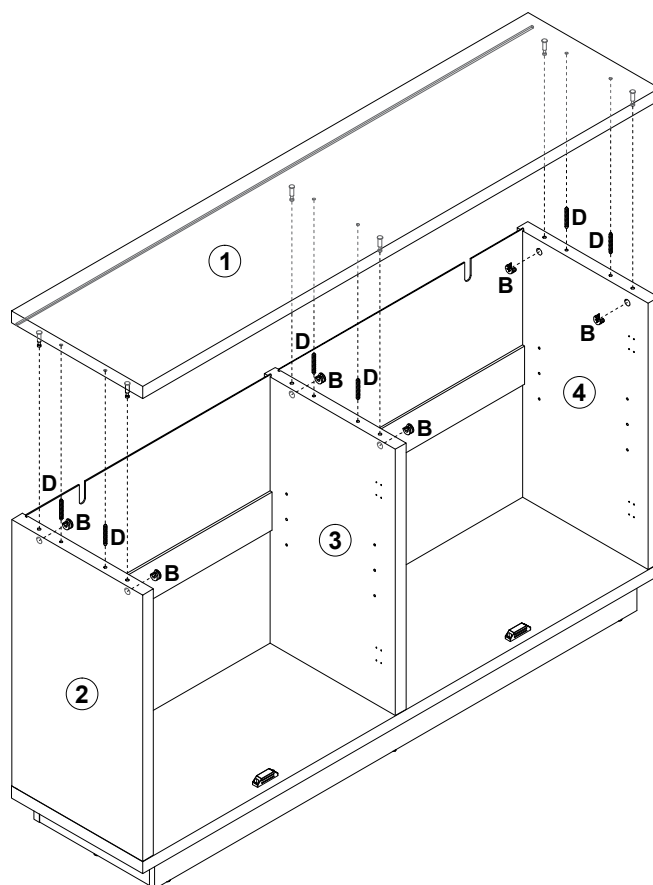



B x 6PCS



D x 6PCS


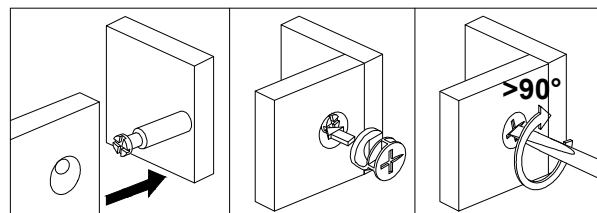


Step 15

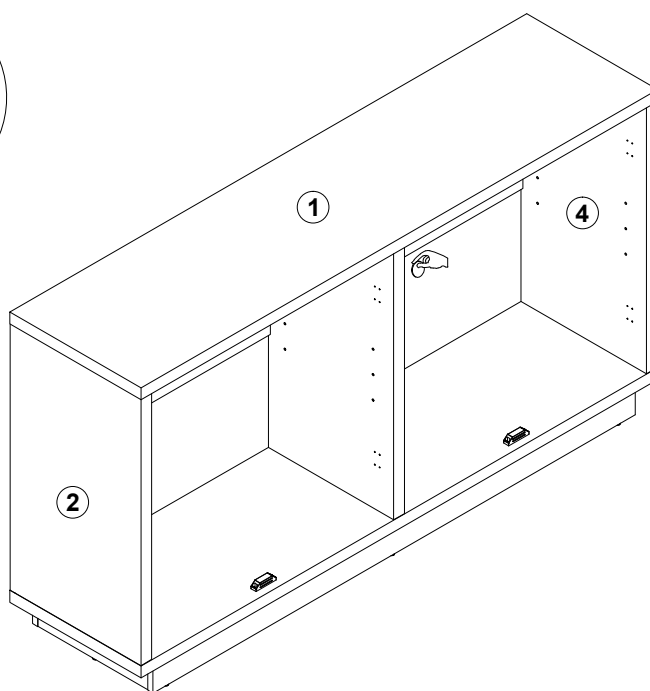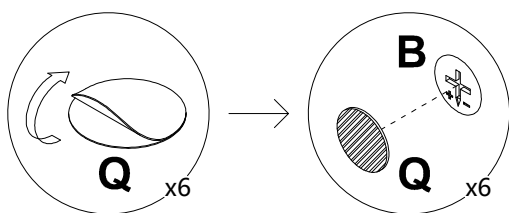

Q x 6PCS

Step 16

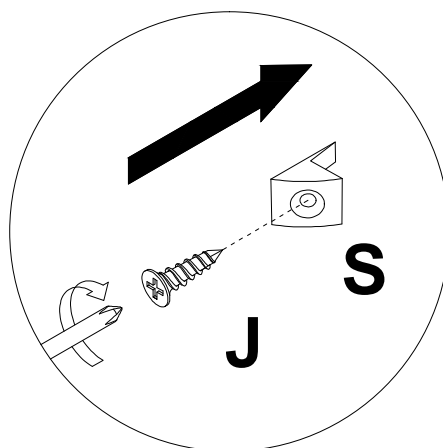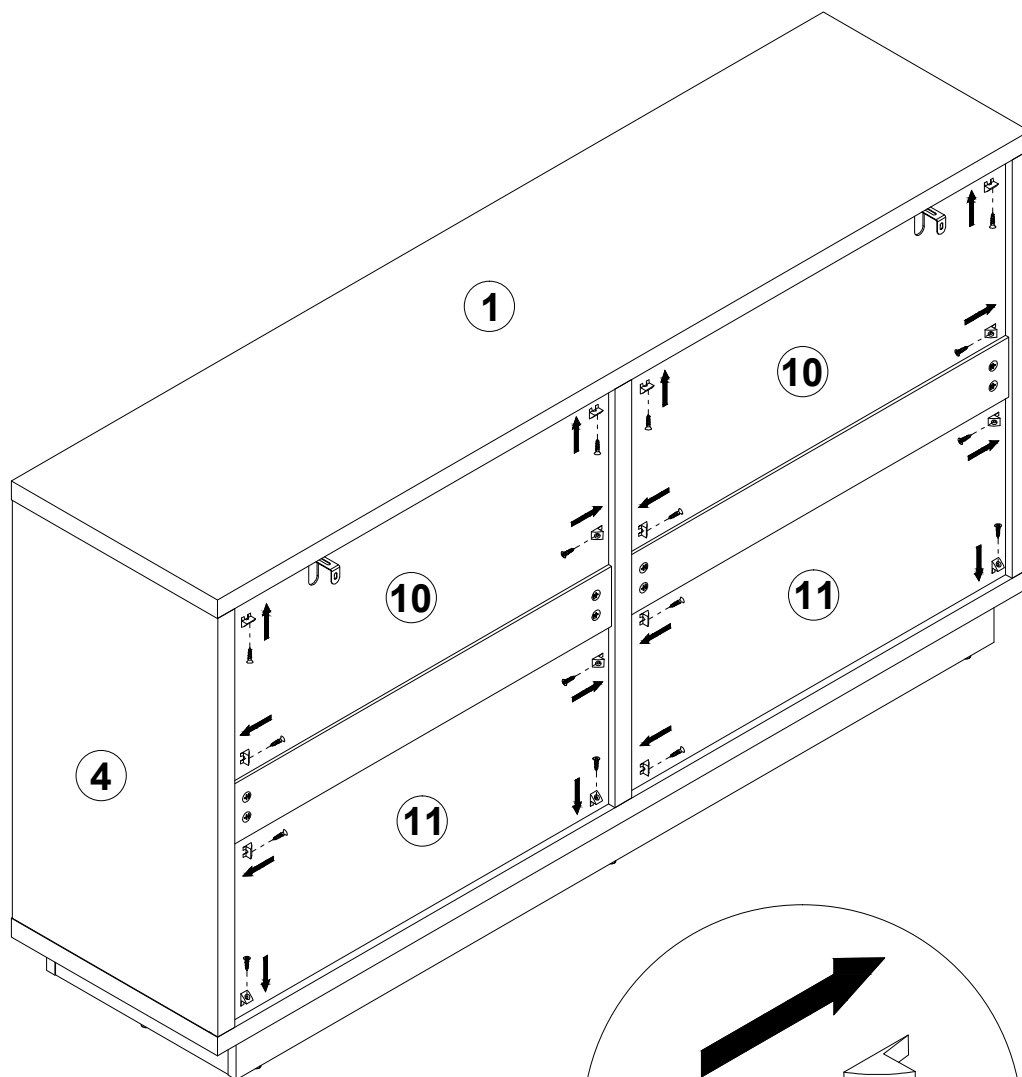


M3x14mm

J x 16PCS



S x 16PCS



Step 17

Drill 2 holes on the wall at the required position for anti-falling device installation.

WALL

R

R

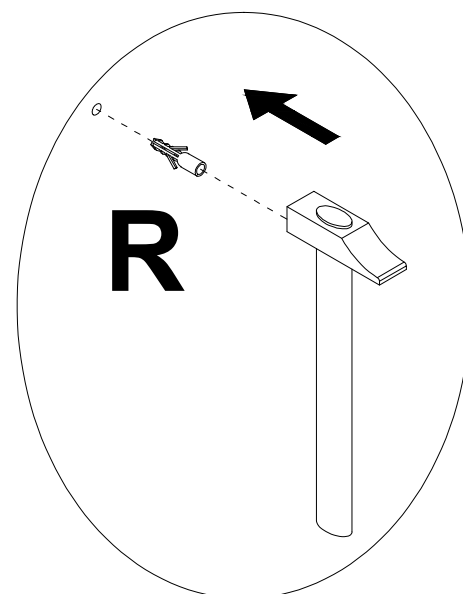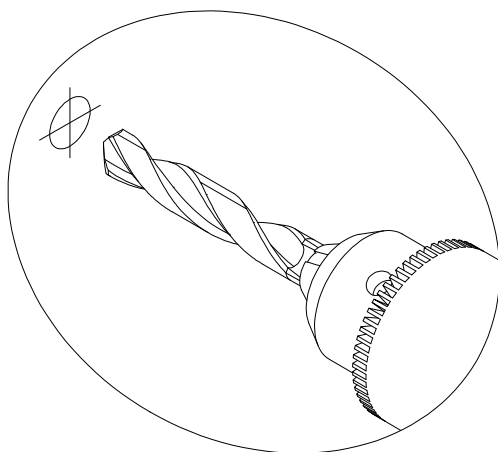



Ø6x30mm



R x 2PCS

Step 18

WALL

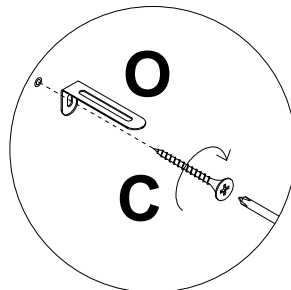

Note:According to the distance between the cabinet and the wall,adjust the #O fitting to the appropriate position,and tighten all the screws on the #O fiiting.


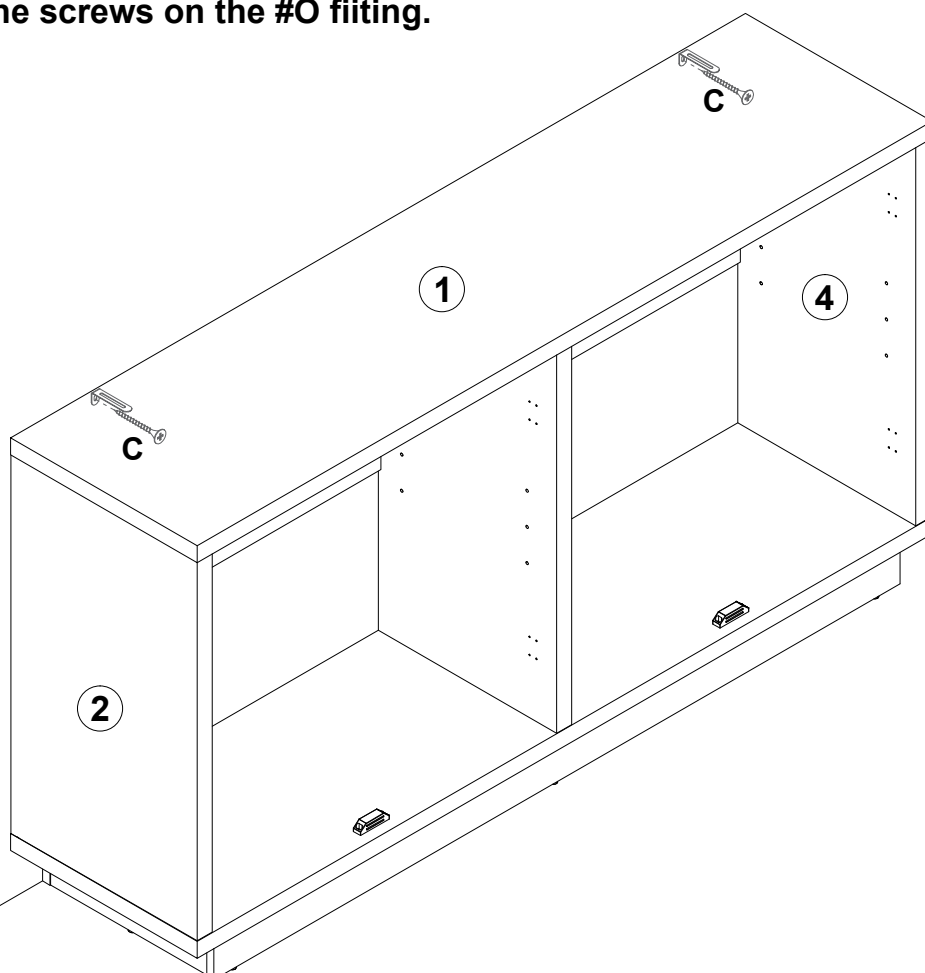


M4x40mm

C x 2PCS


Step 19

NOTE: Please insert #5 boards before installing the door.

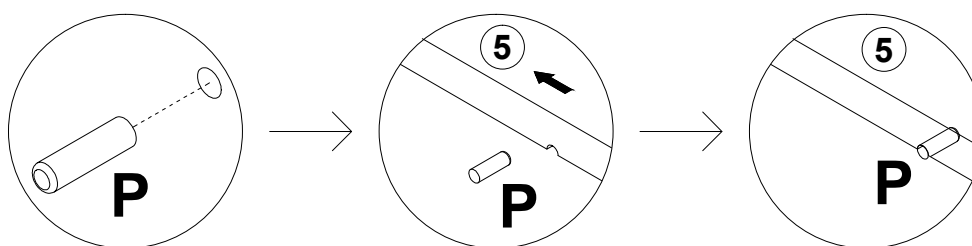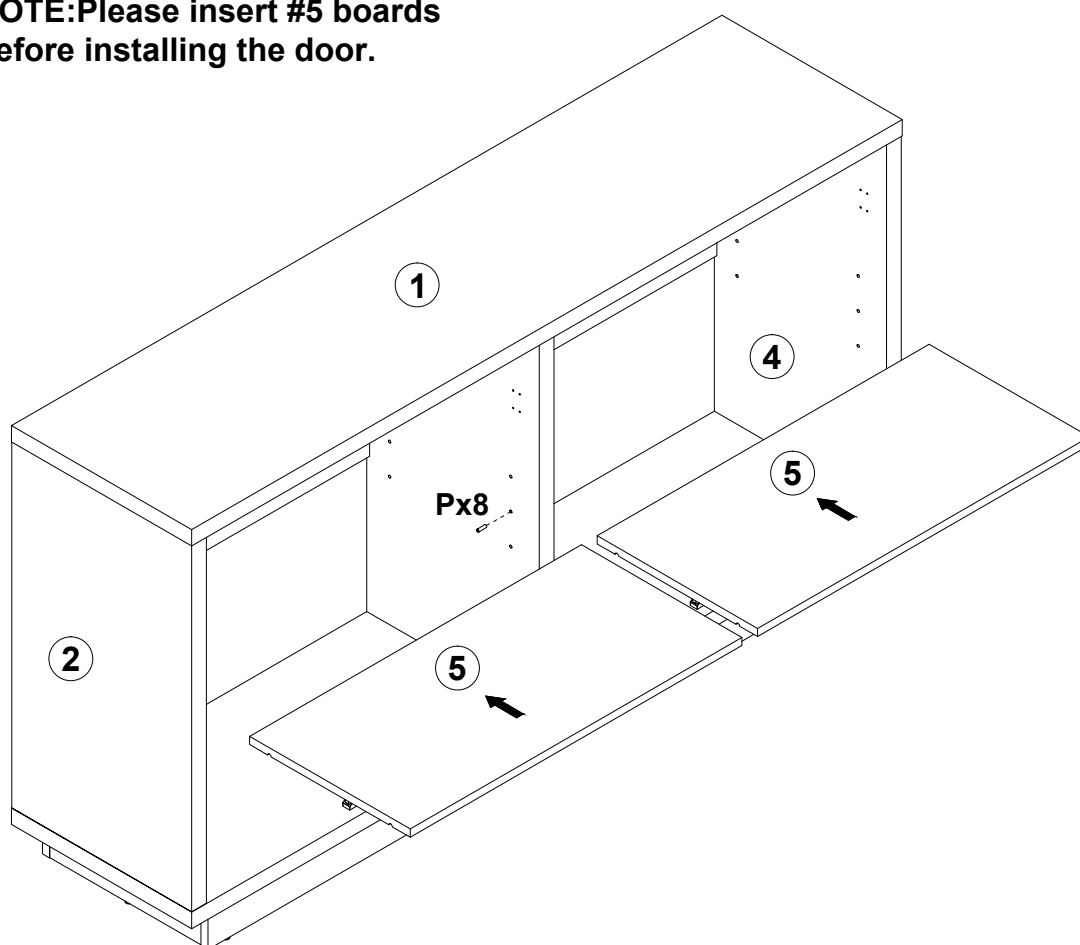




P x 8PCS

Step 20

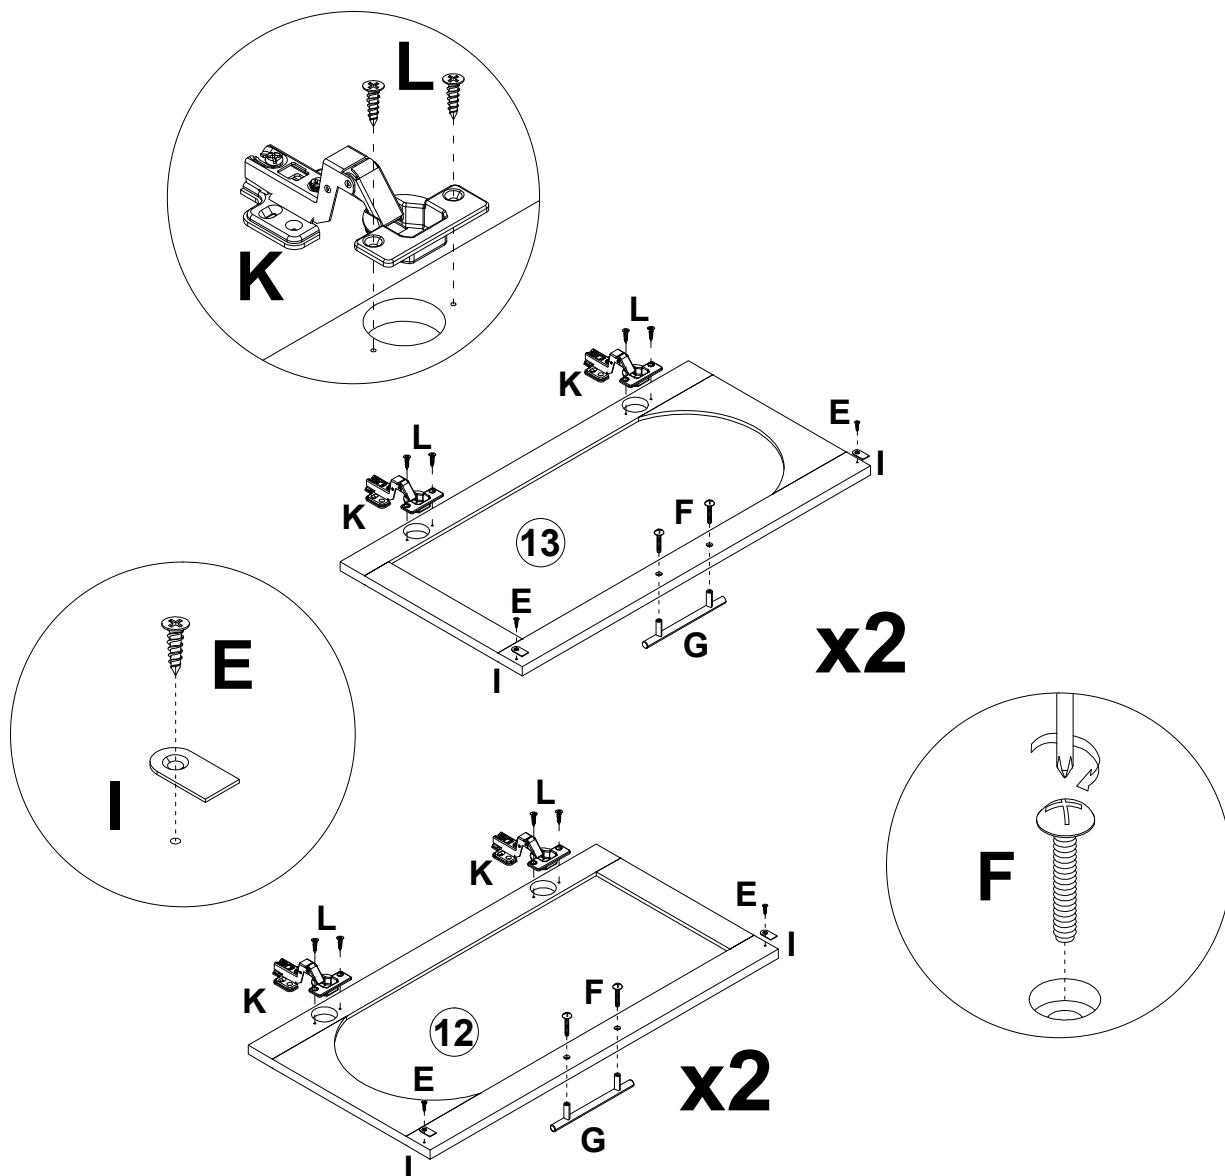



 M3x12mm	E x 8PCS
 M4x16mm	F x 8PCS
 96mm	G x 4PCS
 I x 8PCS	
 Ø35mm	K x 8PCS
 M3.5x12mm	L x 16PCS

Step 21 YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

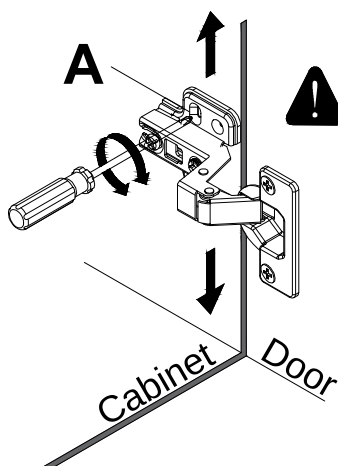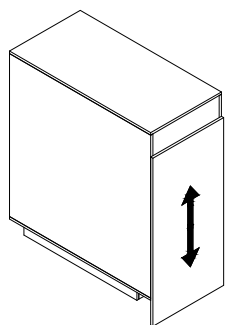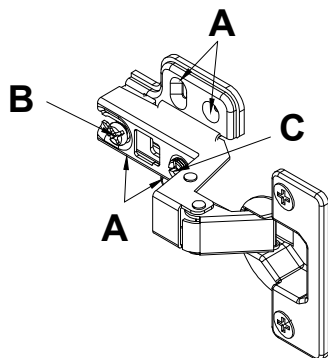






If you find a large gap above or below the door.

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows
you to adjust up or down by a few mm. Then tighten
back up.

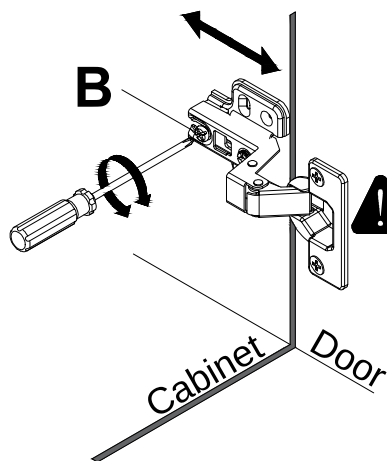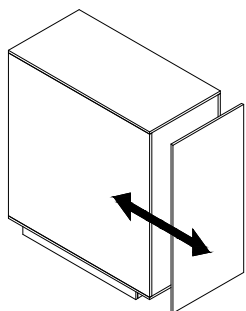

If you find the door is too protruding or too inside.


To adjust depth.
Loosen screw "B" on both hinges and move the door to
suit. If the door doesn't move, turn screw "C" on both
hinges 1-2 turns and try again. Finally, tighten both
screw "B" and reset both screw "C".

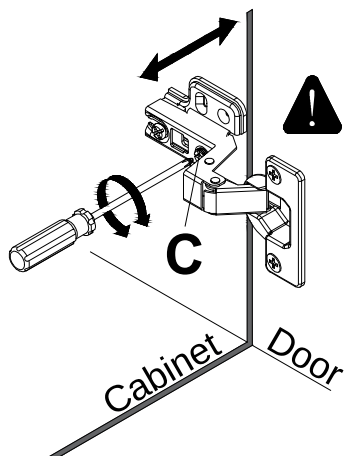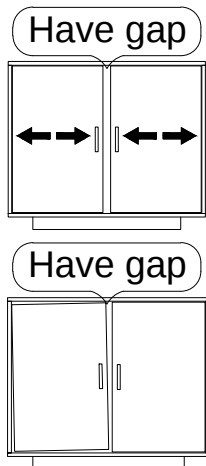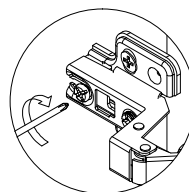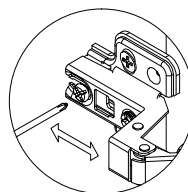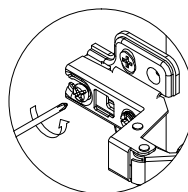



**If you find a large gap between or beside the doors.
Don't worry, it's not the problem with product.**

To adjust side ways.
Turn screw "C" clockwise or counterclockwise on
both hinges until the door is in the desired position.


Step 22

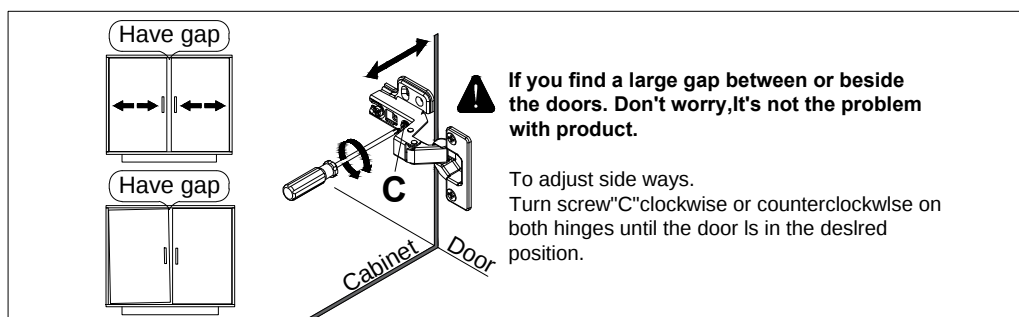


NOTE: The left door is #12 and the right door is #13.

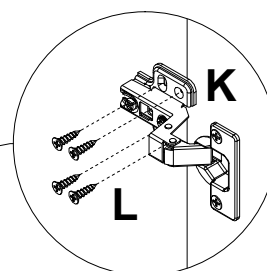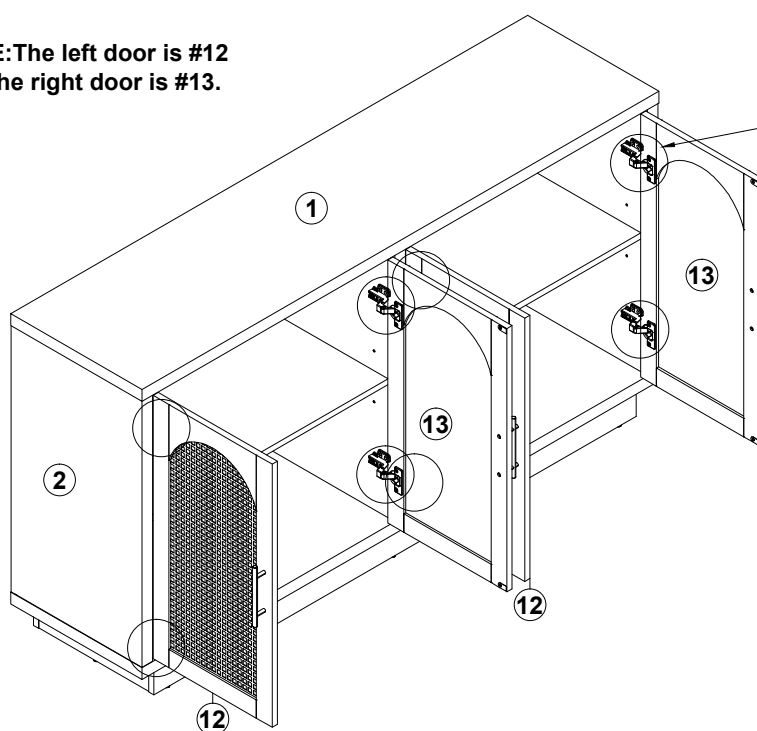


step1

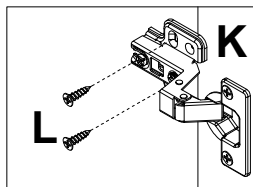


step2

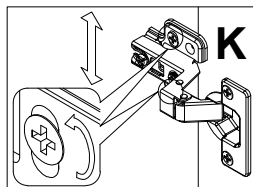


step3

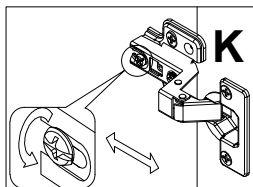

step4

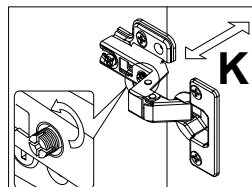

step5

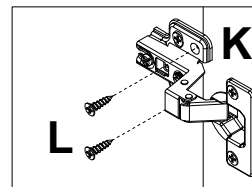


M3.5x12mm

L x 32PCS

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **ALWAYS** install Anti-tip device provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on any drawers, doors, or shelves.
- **NEVER** open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

***This is a permanent label.
Do not remove!***