


Computer Desk

User Manual



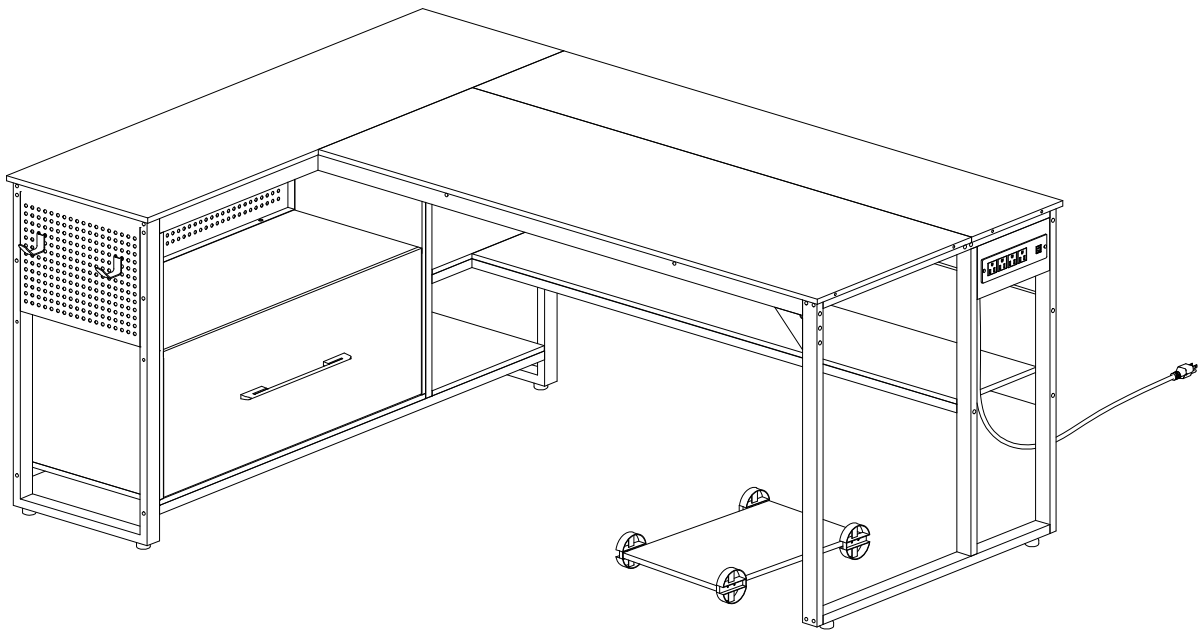


Thank you for your purchase!
Your order ships in 2 separate boxes (Box A and Box B).
If you receive only one box, please don't worry.
The other is on the way.


AJ-DJ505248

Version: 1.0
















ASSEMBLY INSTRUCTION

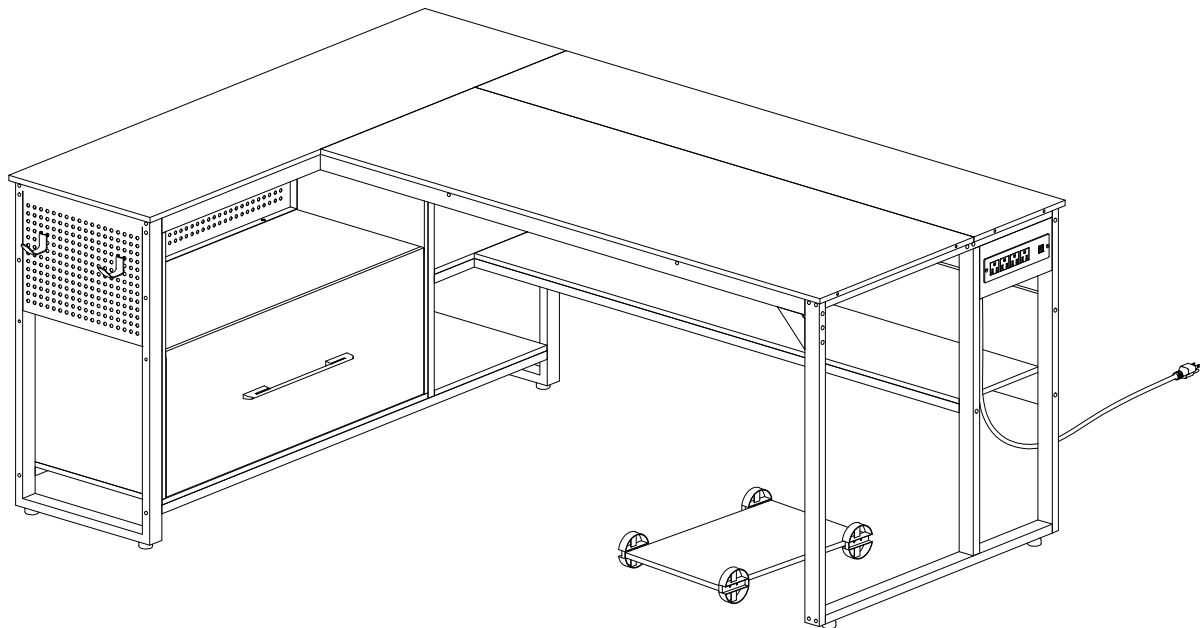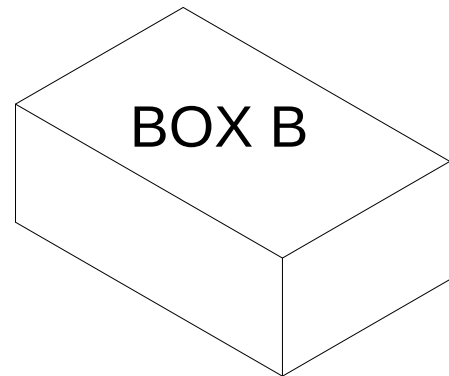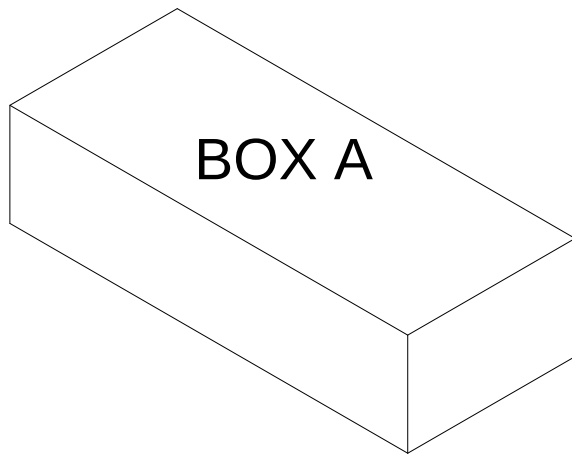





This product has two packages, box A and box B. Only the parts in the two packages can complete the entire table. Please be sure to start the installation after the two packages arrive

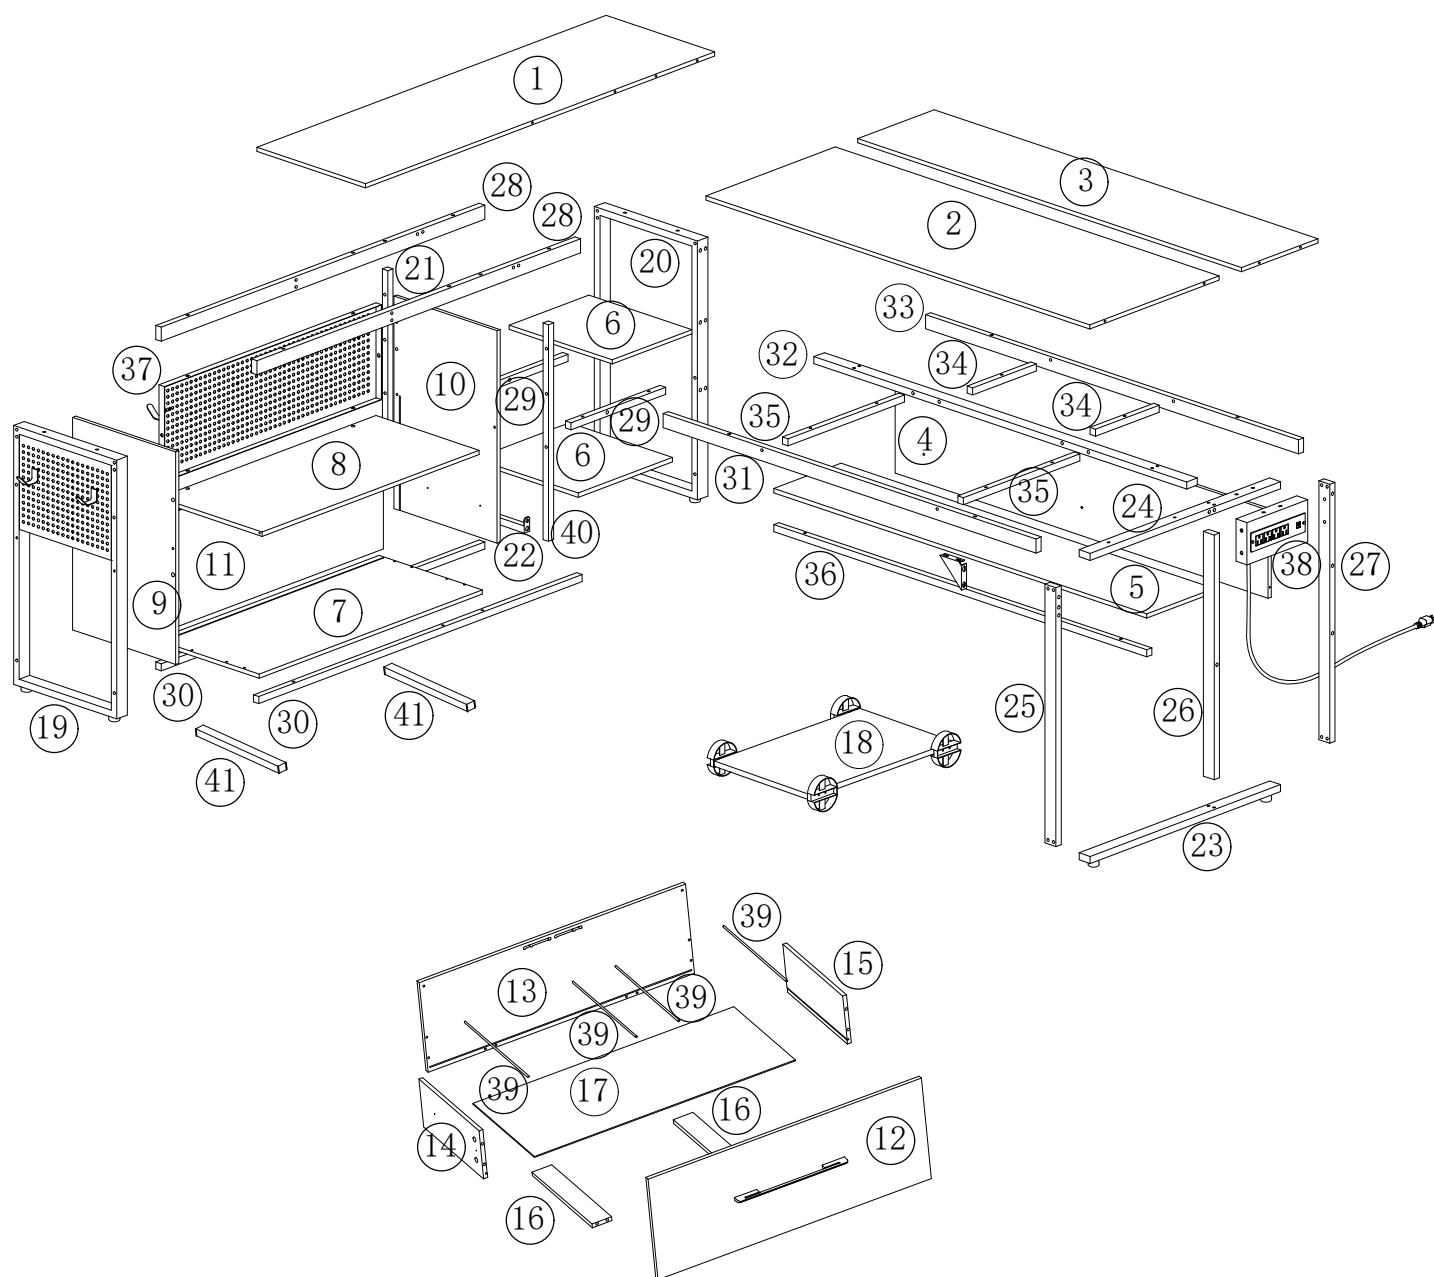















BOXA

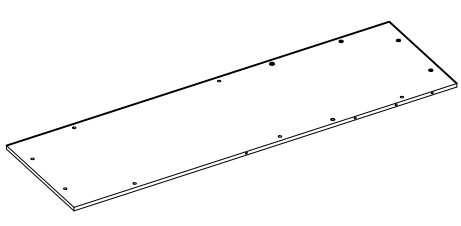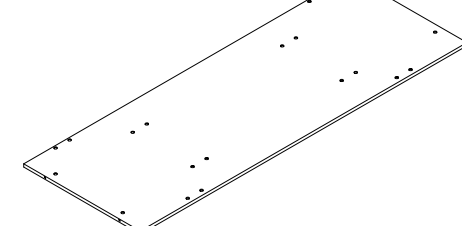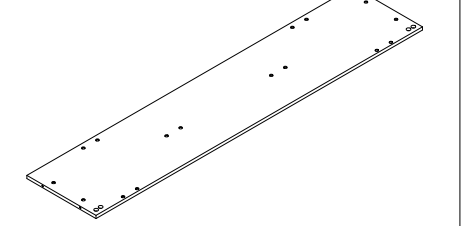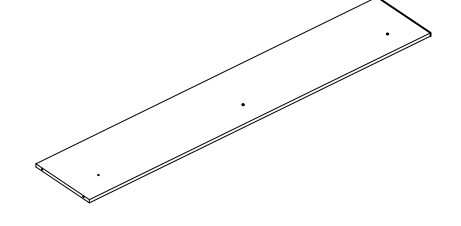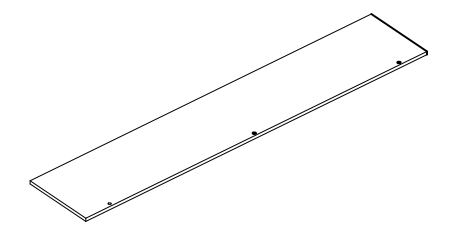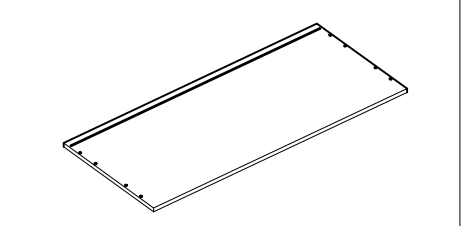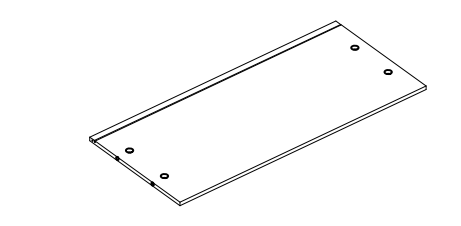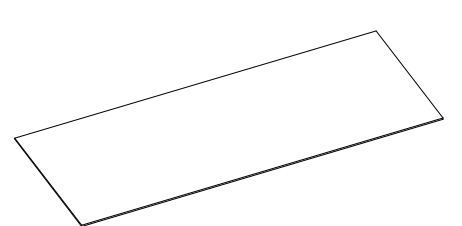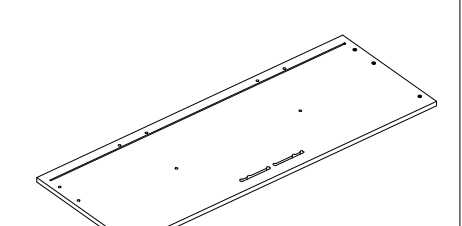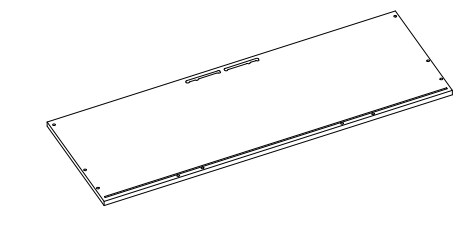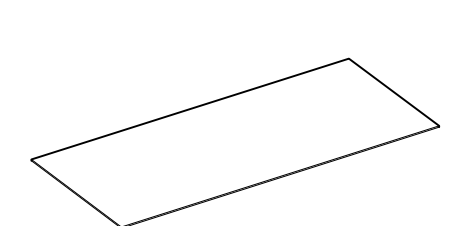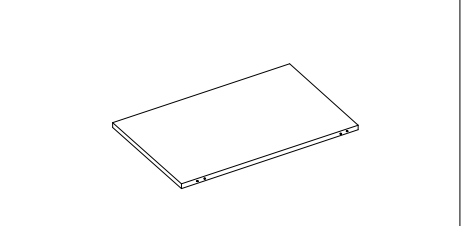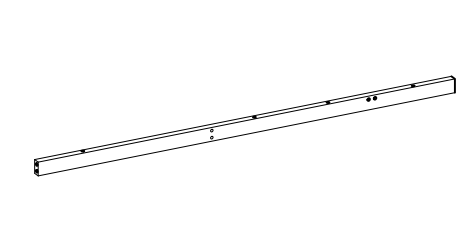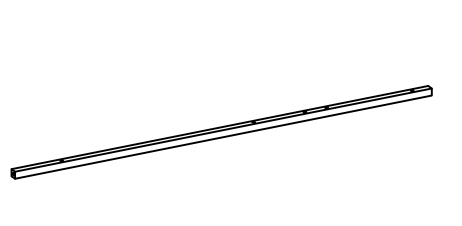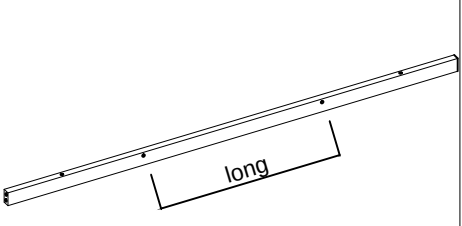①  X1	②  X1	③  X1
④  X1	⑤  X1	⑦  X1
⑧  X1	⑪  X1	⑫  X1
⑬  X1	⑰  X1	⑱  X1
⑳  X2	㉓  X2	㉔  X1


BOXA

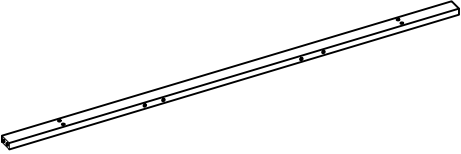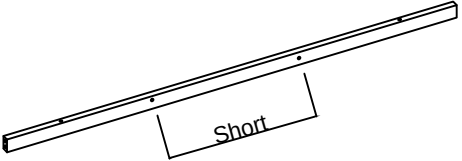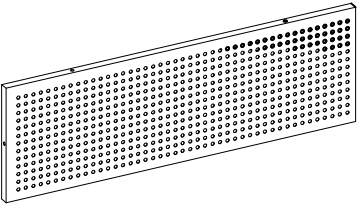32  X1	33  X1	36  X1
37  X1		










BOXB

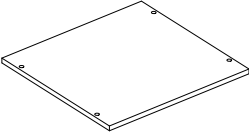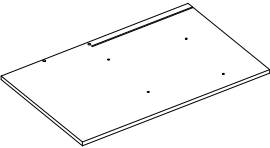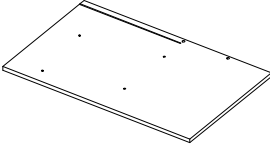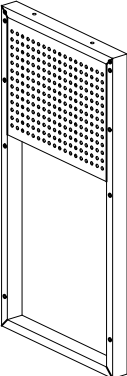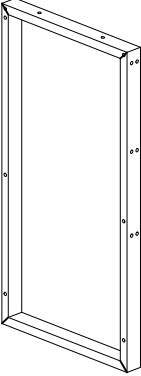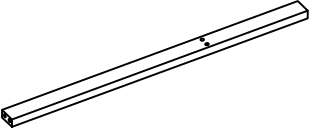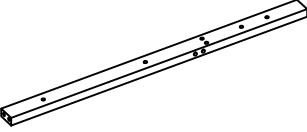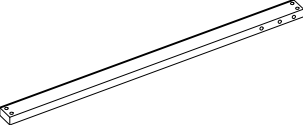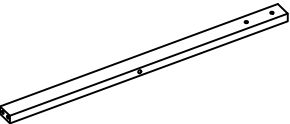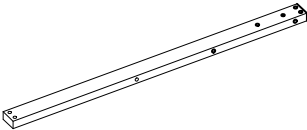6  X2	9  X1	10  X1
14  X1	15  X1	16  X2
19  X1	20  X1	21  X1
22  X1	23  X1	24  X1
25  X1	26  X1	27  X1

BOXB

29  X2	34  X2	35  X2
38  X1	39  X4	40  X1
41  X2		


ASSEMBLY INSTRUCTION

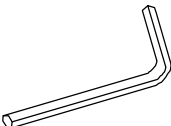A M6x10mm  X9	B M6x28mm  X34	C M6x40mm  X31	D M6x50mm  X13
E M6x60mm  X25	F M3.5x12mm  X16	G Ø6x40mm  (K) X16	H Ø15x9mm  X16
I M5x40mm  X13	J M4x8mm  X2	K M4x16mm  X2	L M5x70mm  X4
M M8  X6	N M6  X4	O Ø6x50mm  X8	P  X1
Q  X4	R Ø12mm  X12	S  X1	T  X6
U  X2	V  X1	X  X5	
	Y  	M4 	M3  X1

ASSEMBLY INSTRUCTION


Install styles according to requirements

I

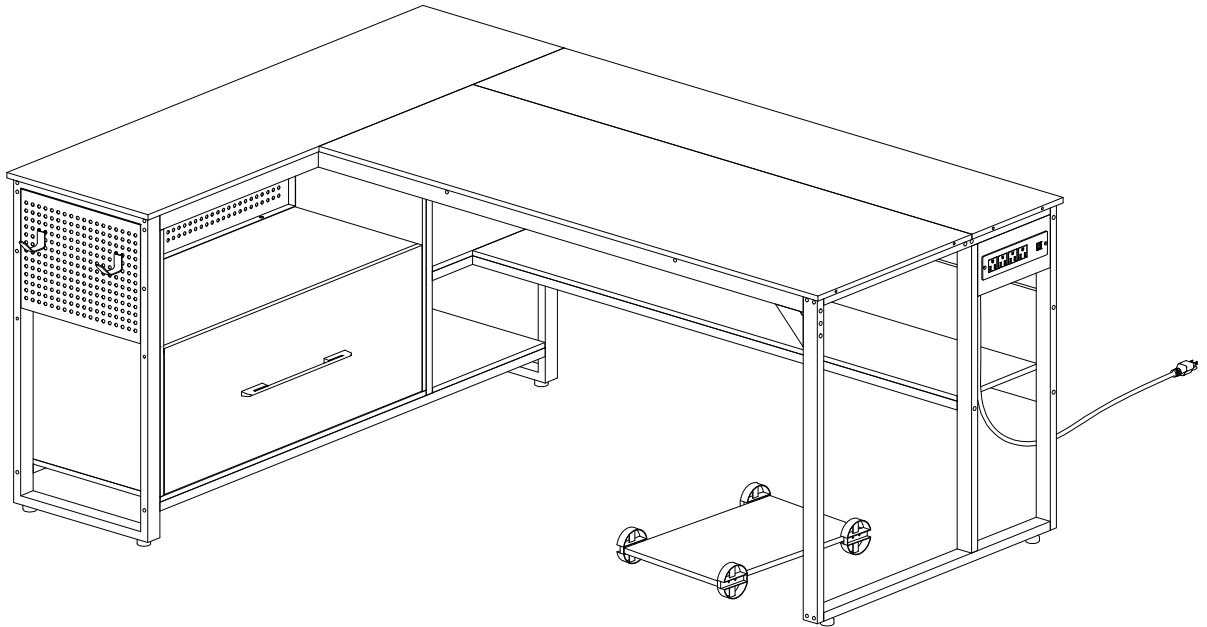

Page:8-28



II

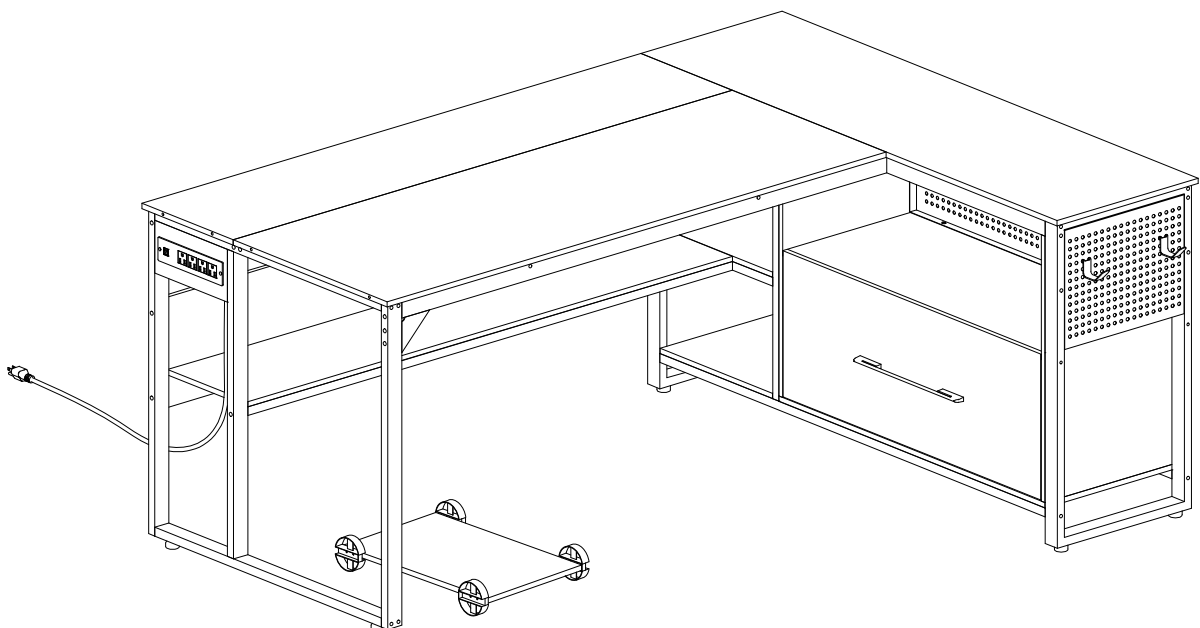



Page:8-15 29-42

ASSEMBLY INSTRUCTION

STEP 1

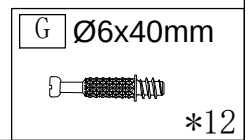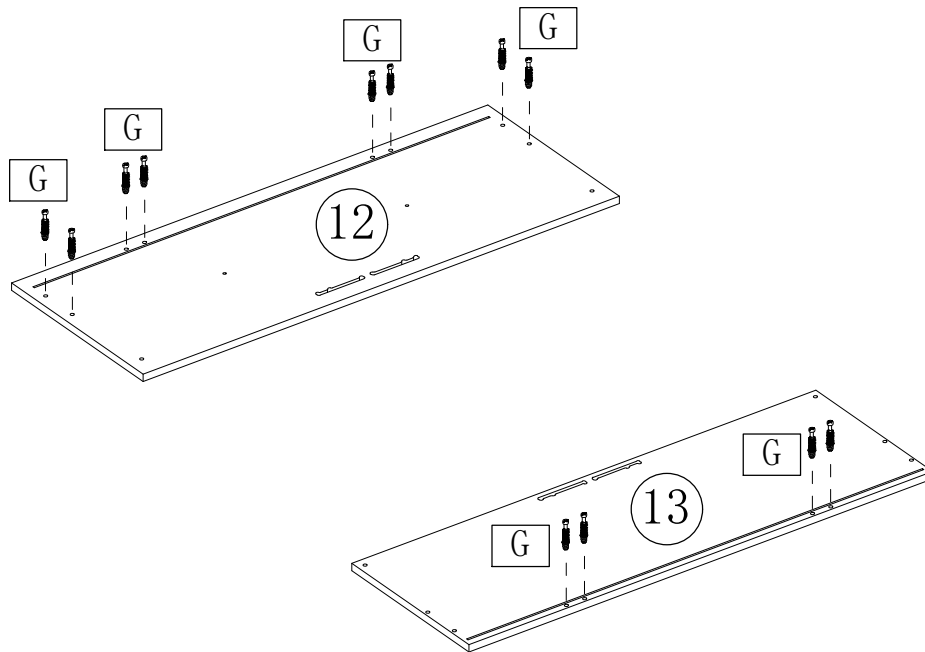


STEP 2

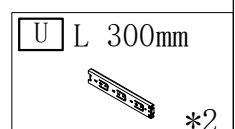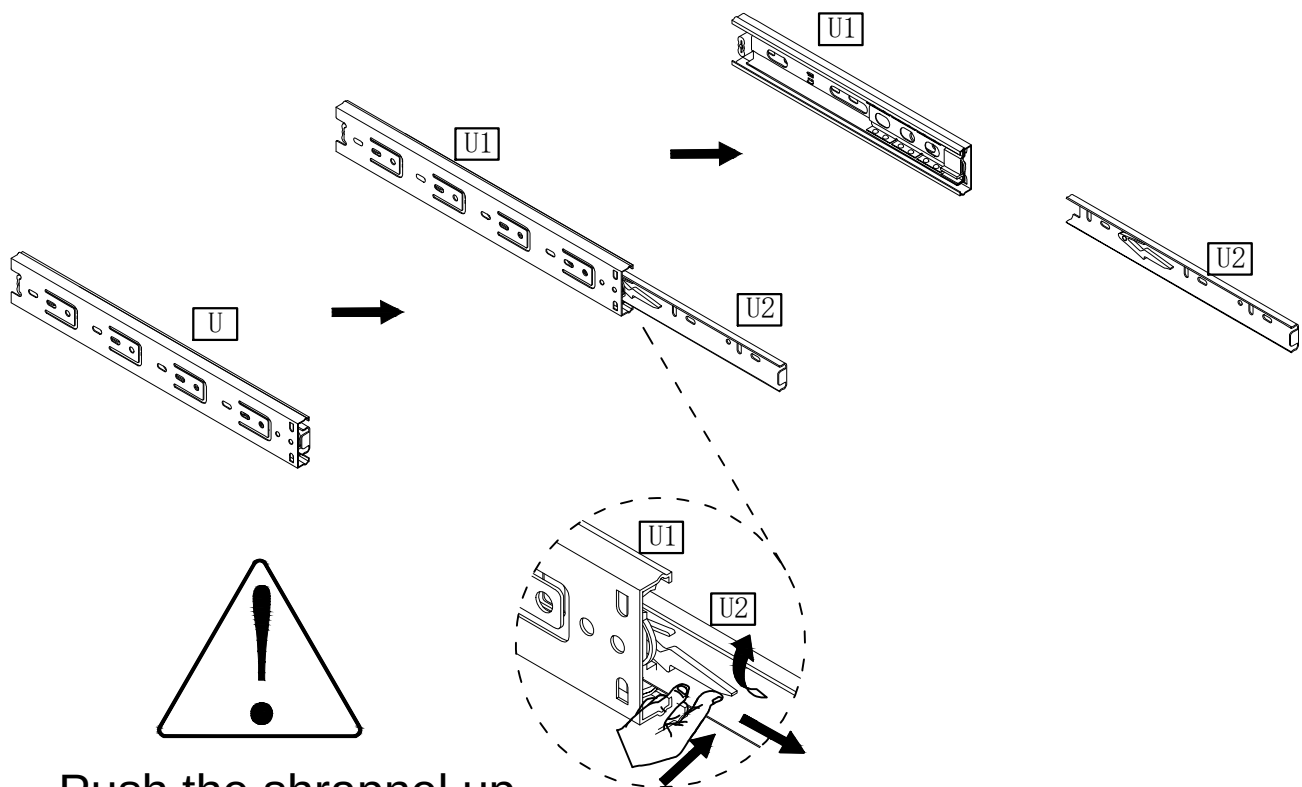


ASSEMBLY INSTRUCTION

STEP 3

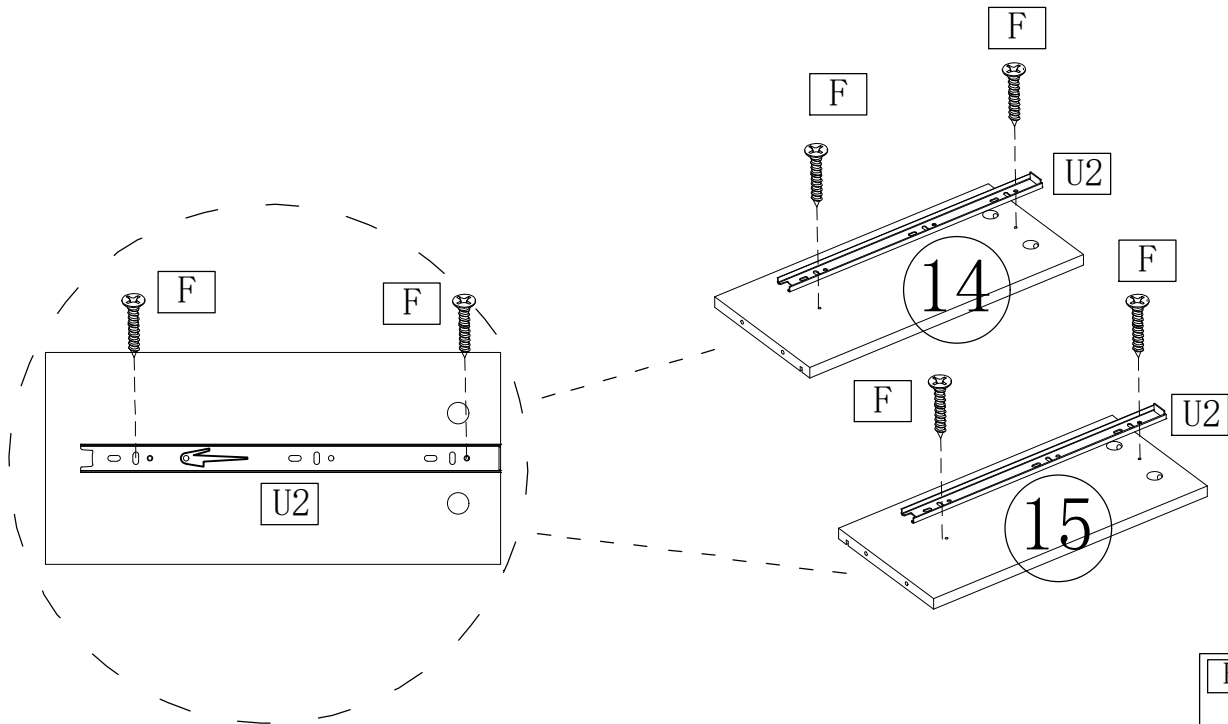

F	M3.5x12mm
	*4
U2	
	*2


STEP 4

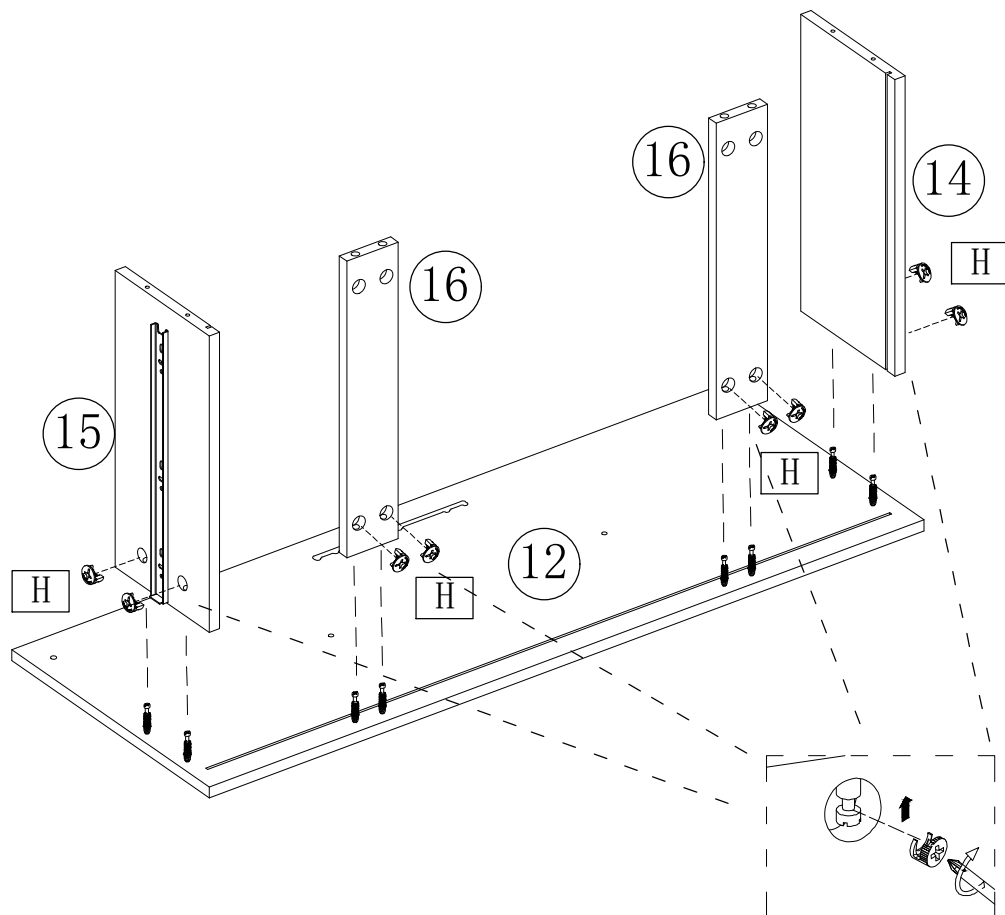


H	Ø15x9mm
	*8

ASSEMBLY INSTRUCTION

STEP 5

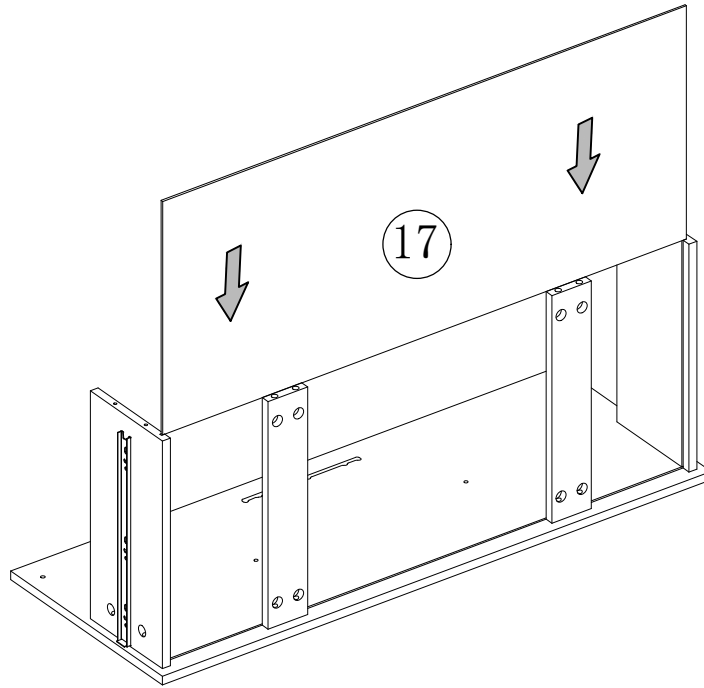


STEP 6

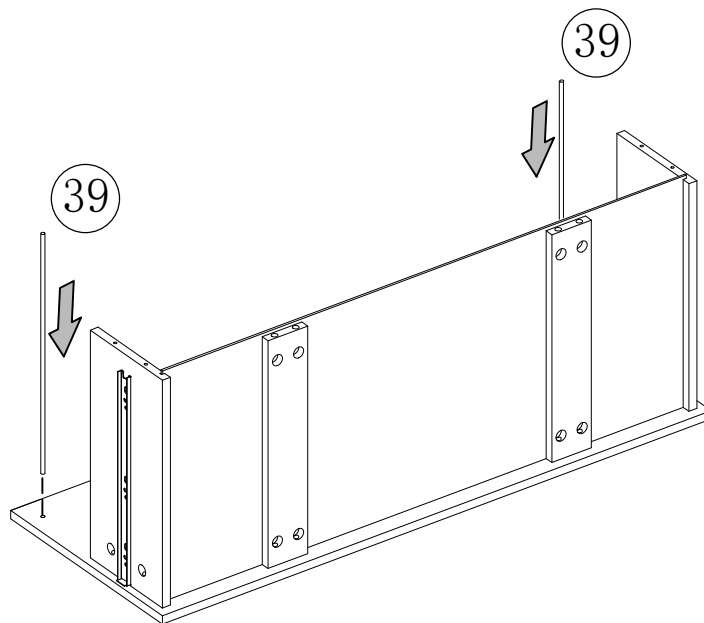


ASSEMBLY INSTRUCTION

STEP 7

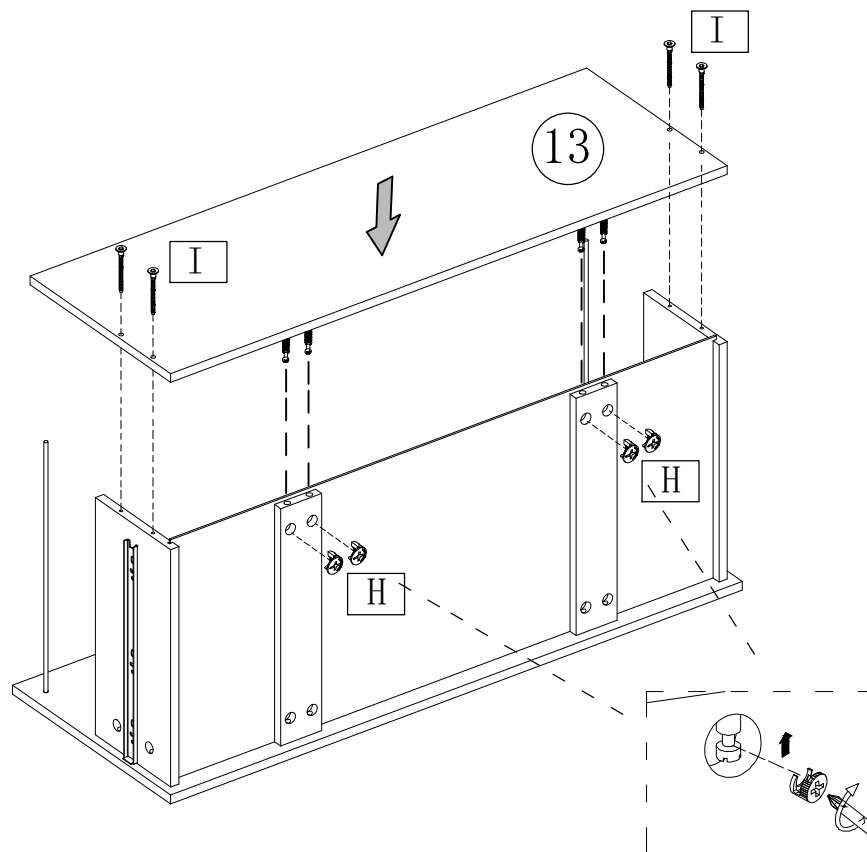

H	Ø15x9mm
	*4
I	M5x40mm
	*4


STEP 8

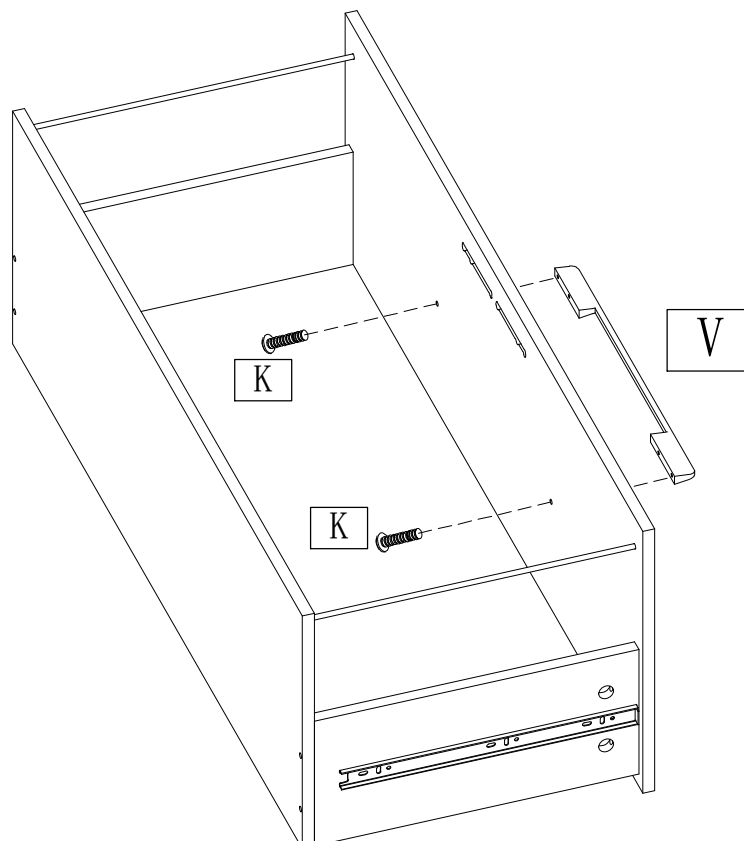


V		*1
K	M4x16mm	
		*2

ASSEMBLY INSTRUCTION

STEP 9

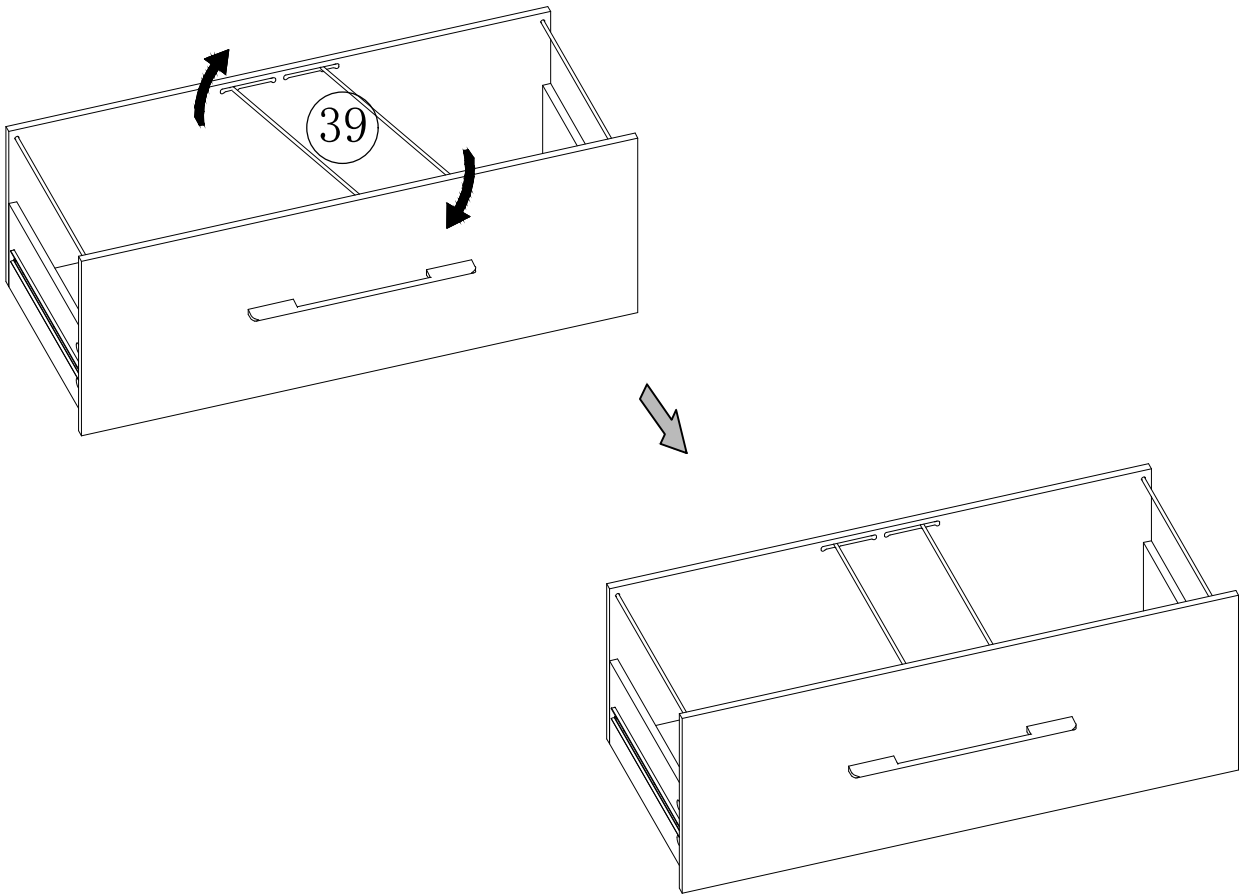


STEP 10

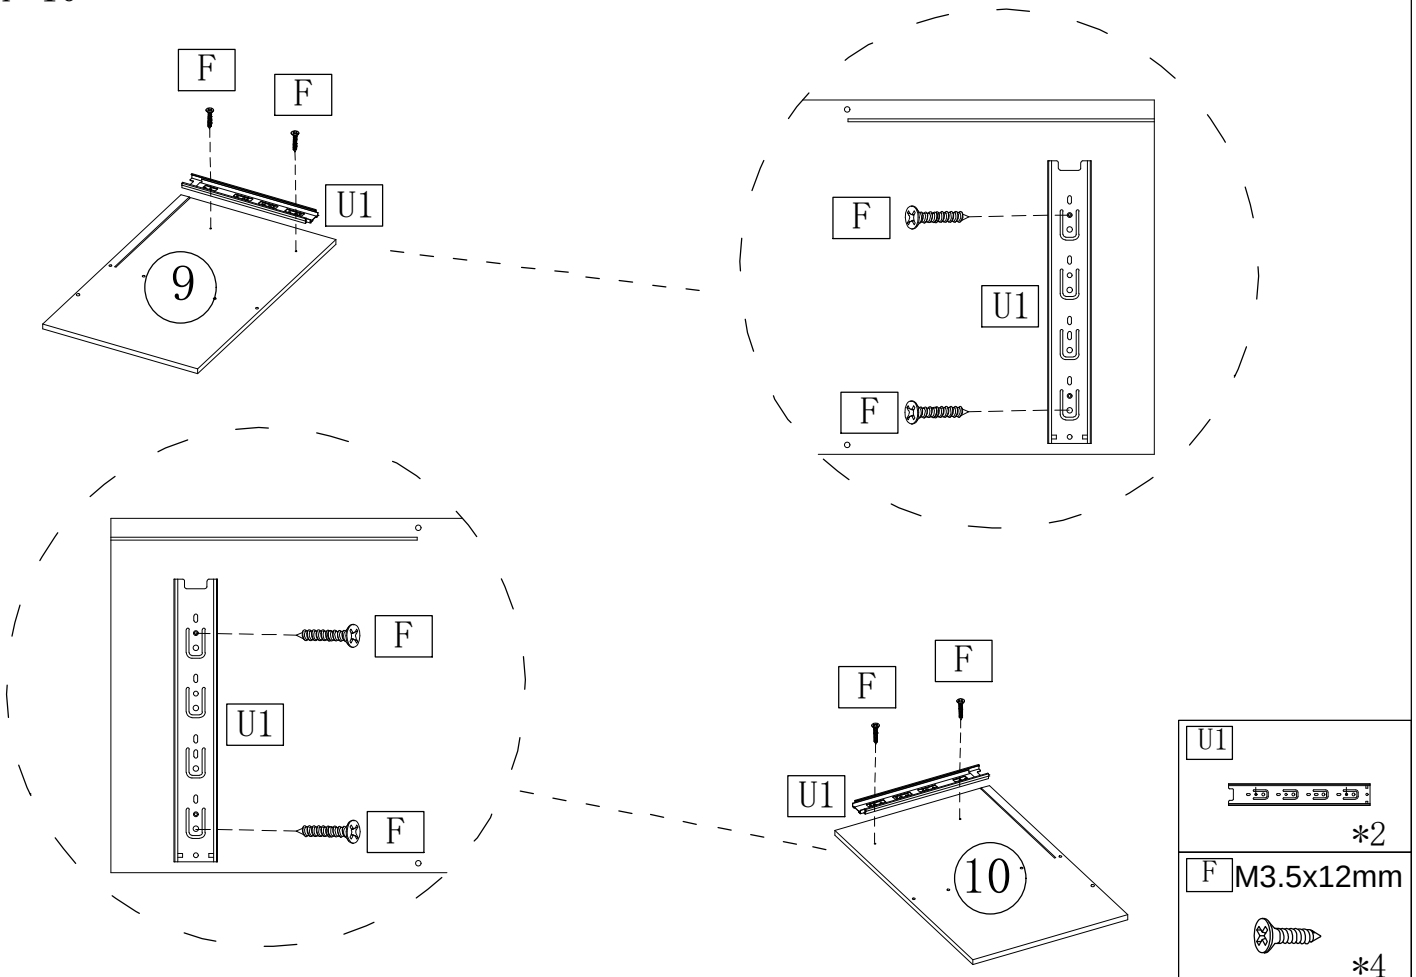


ASSEMBLY INSTRUCTION

STEP 11

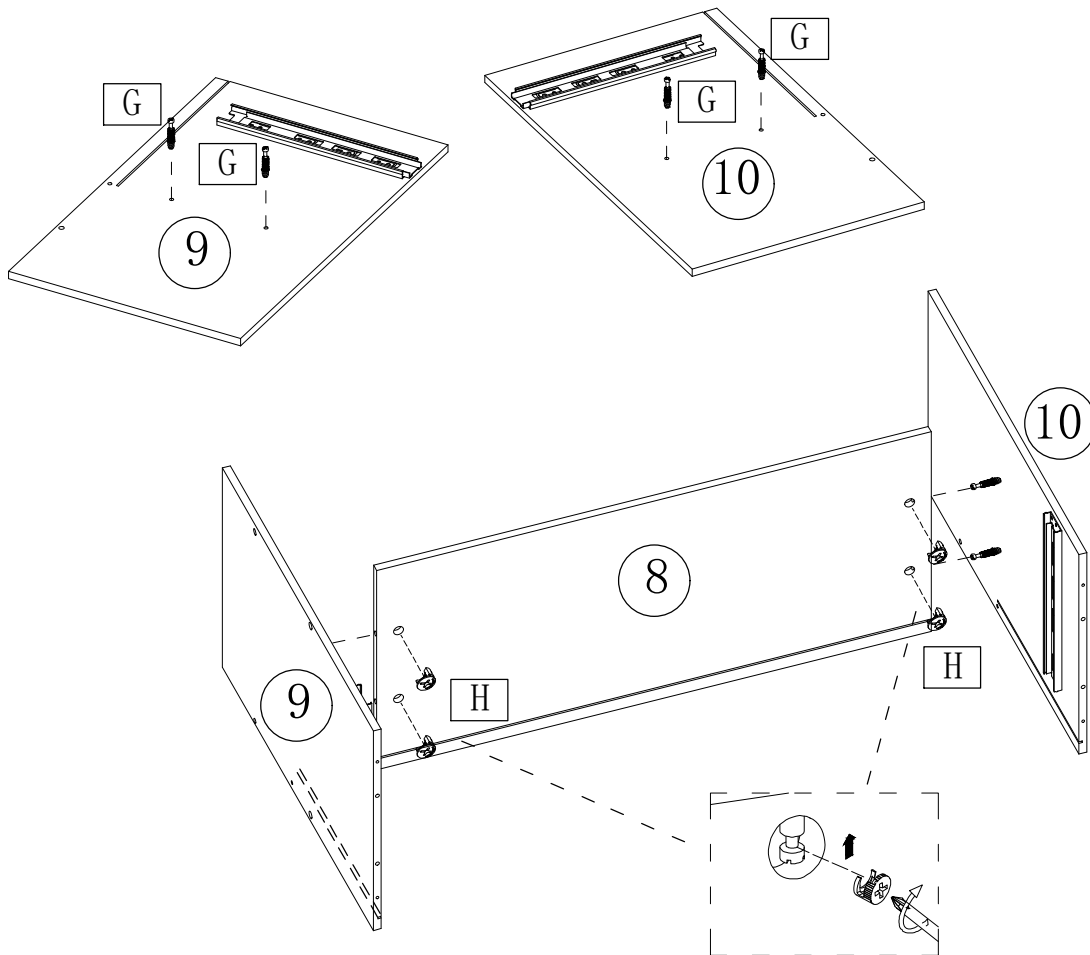


STEP 12

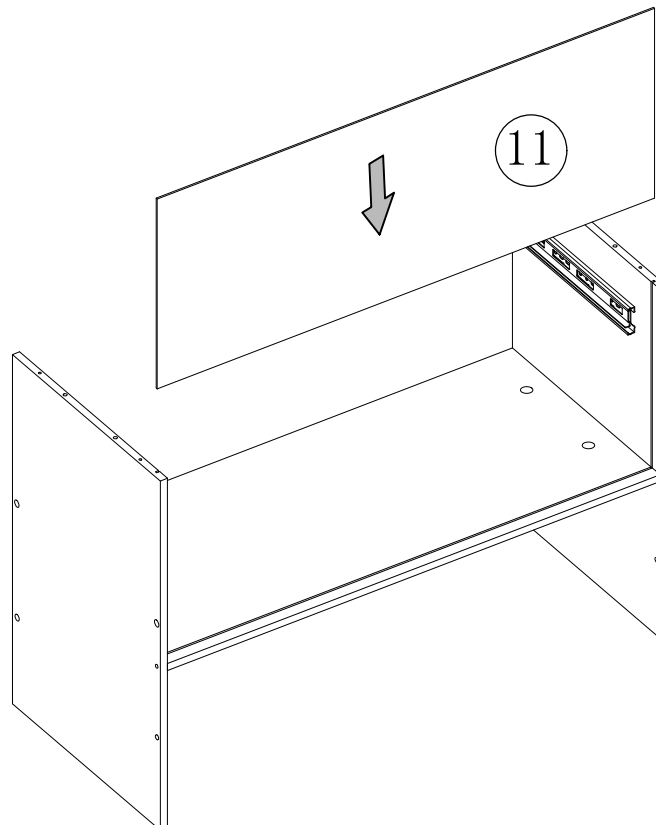


ASSEMBLY INSTRUCTION

STEP 13

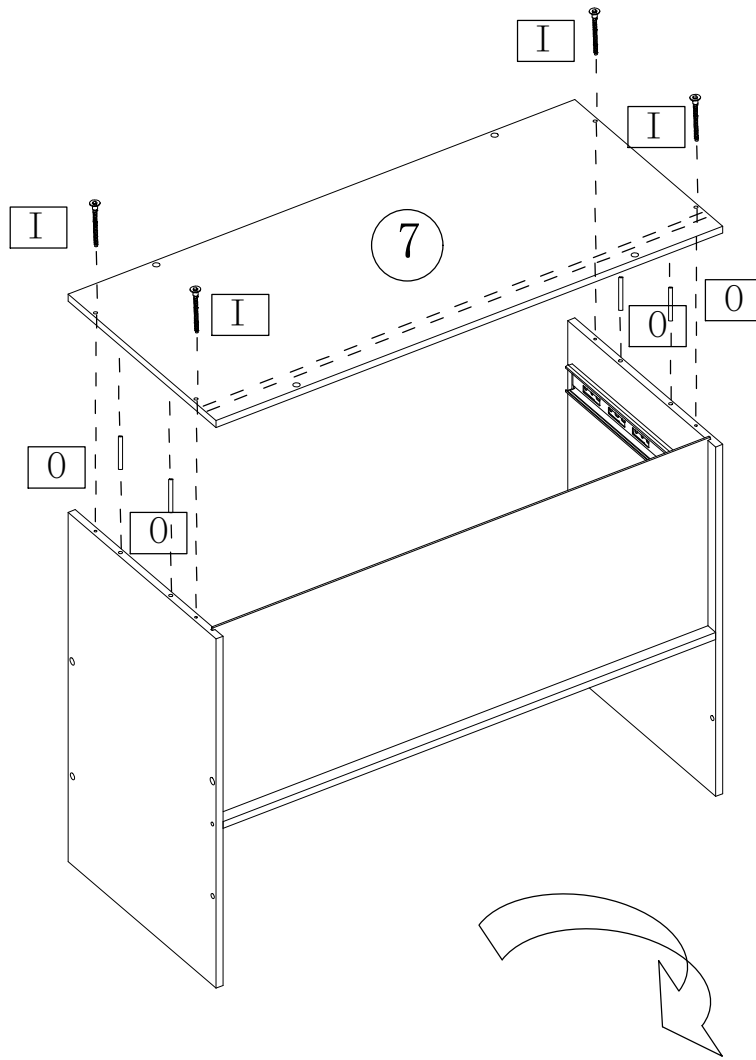


Flip 180°

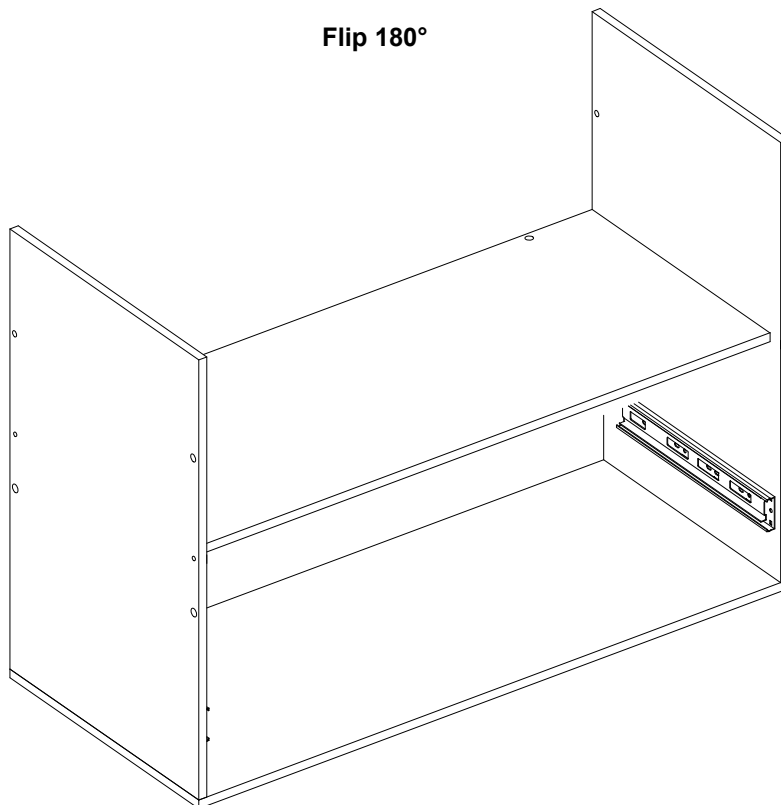

O	M6x50mm
	*4
I	M5x40mm
	*4


ASSEMBLY INSTRUCTION

STEP 14

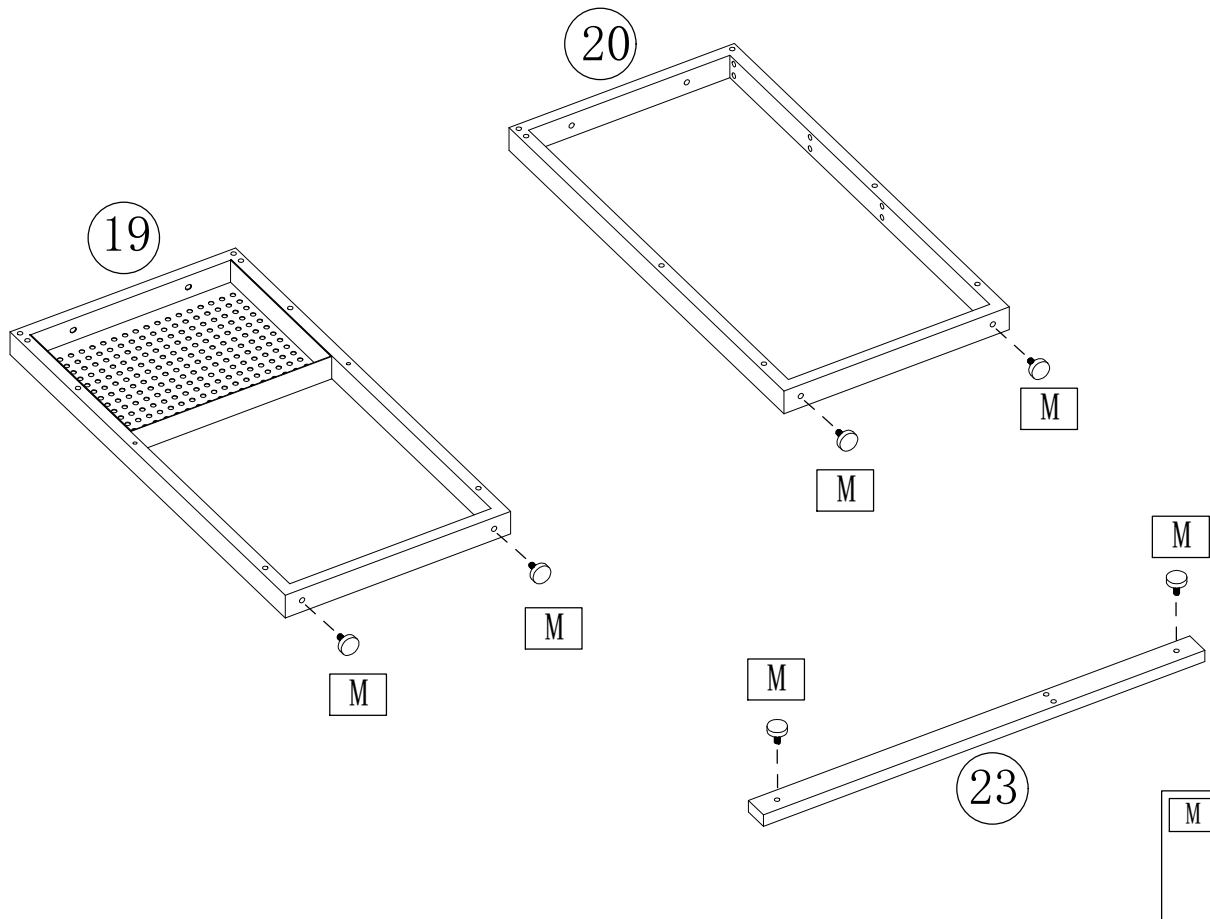

STEP 15


I

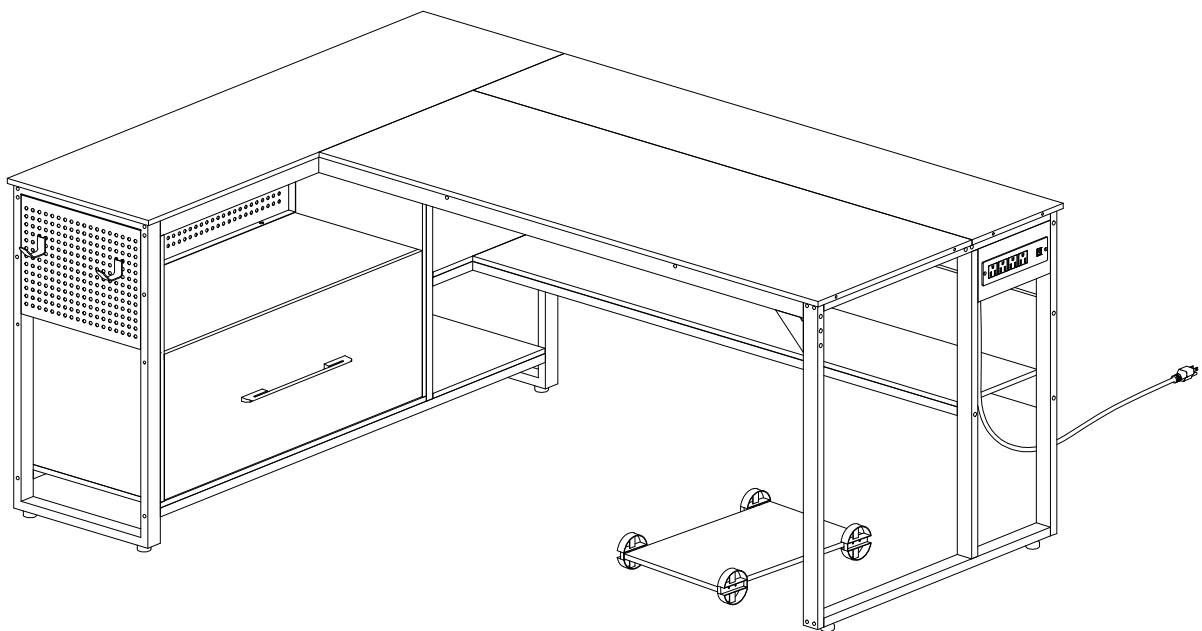

ASSEMBLY INSTRUCTION


STEP 16

I

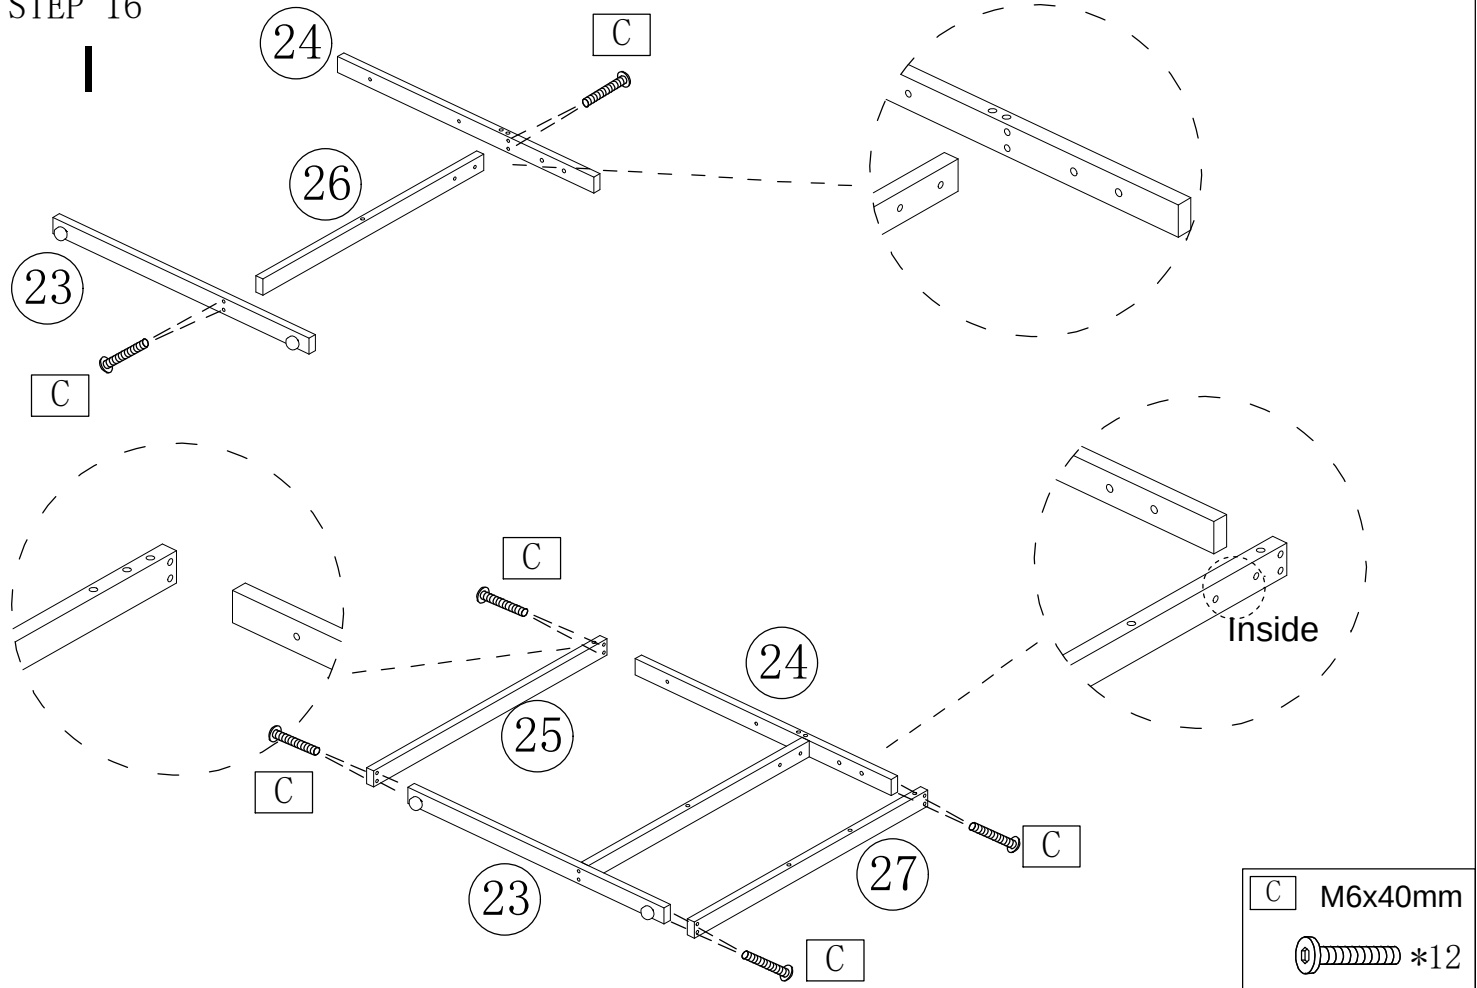


STEP 17

I

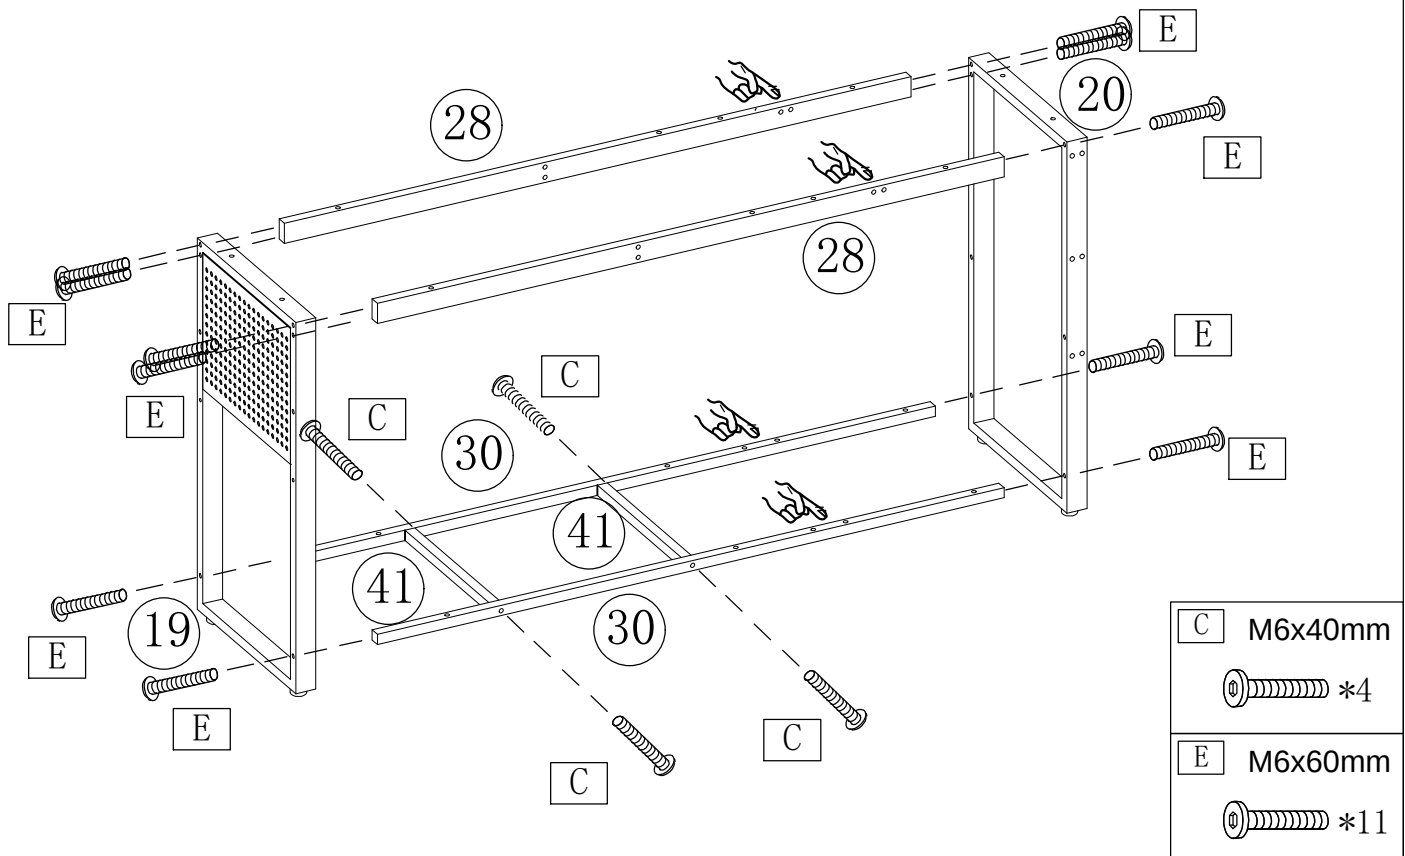


ASSEMBLY INSTRUCTION

STEP 18

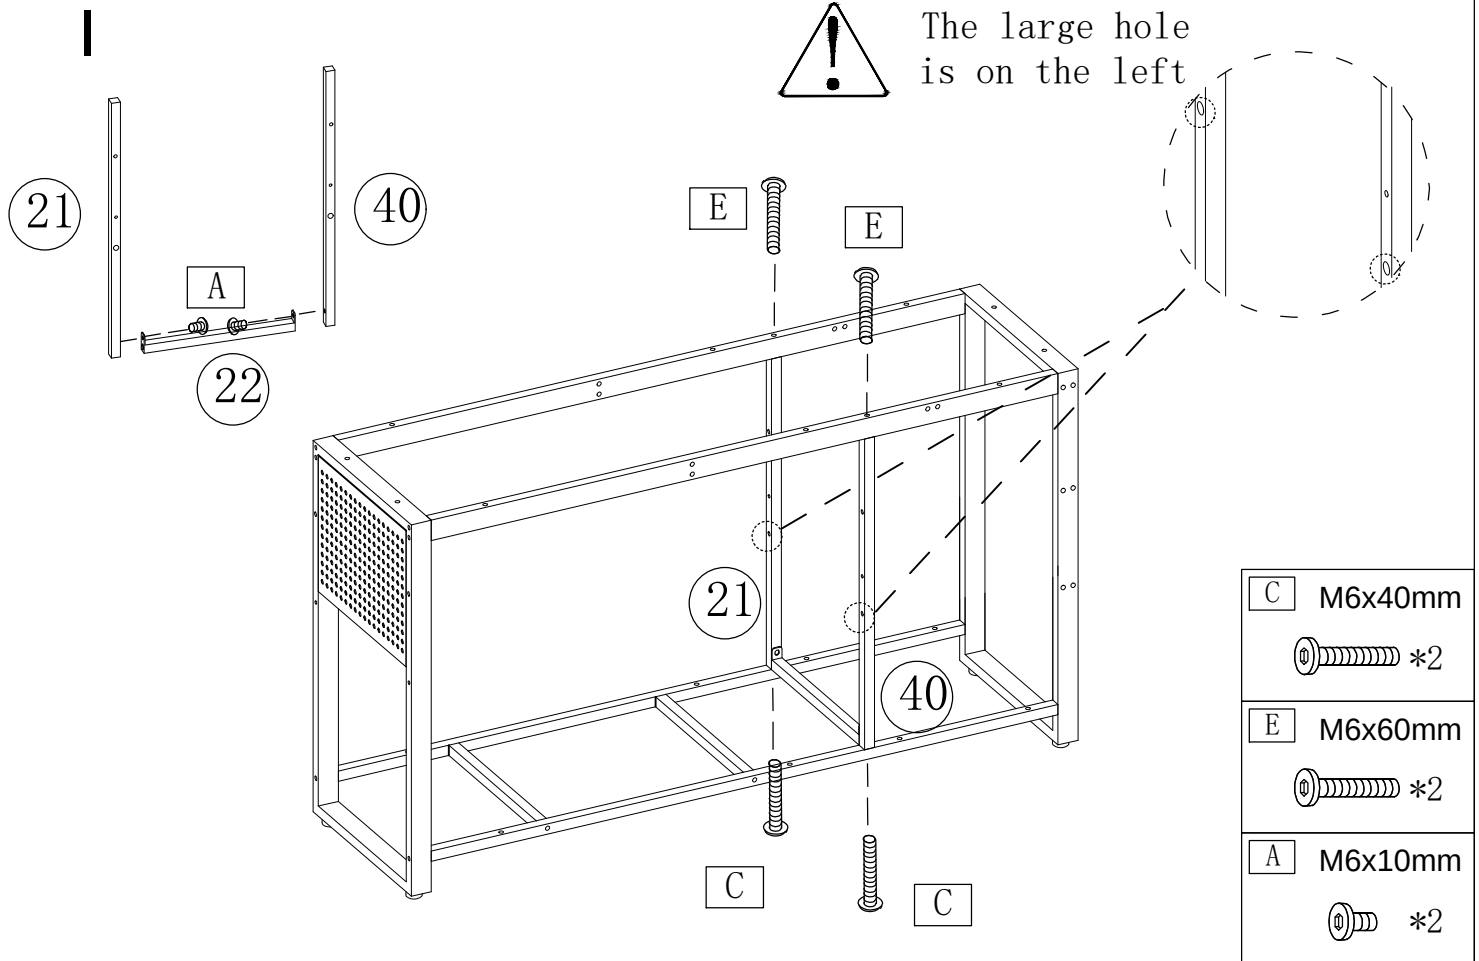


STEP 19

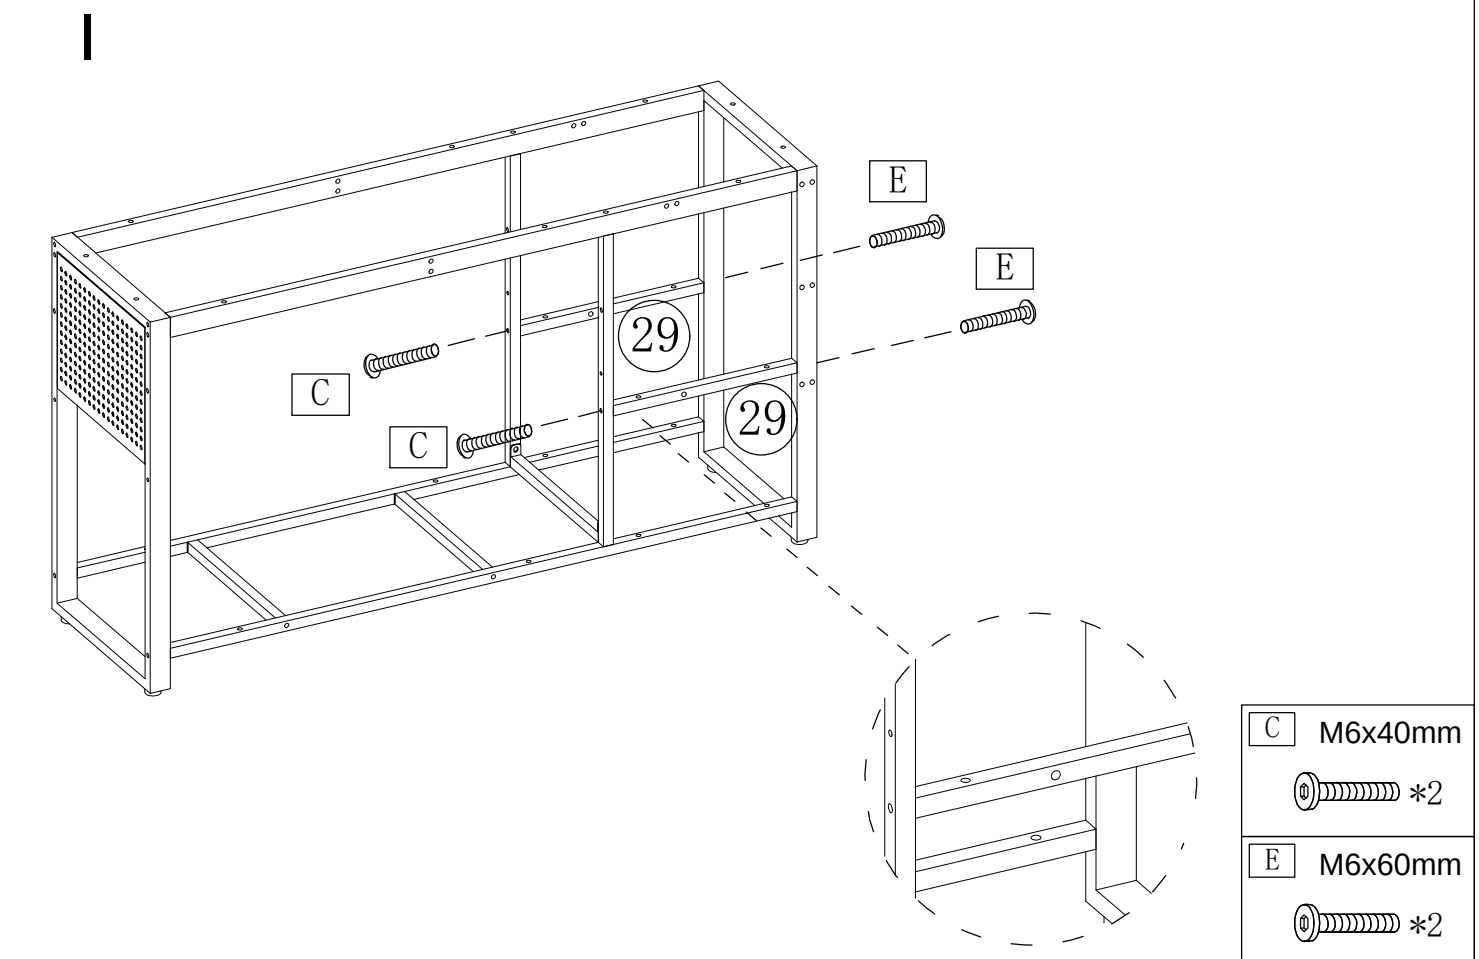

ASSEMBLY INSTRUCTION


STEP 20

I

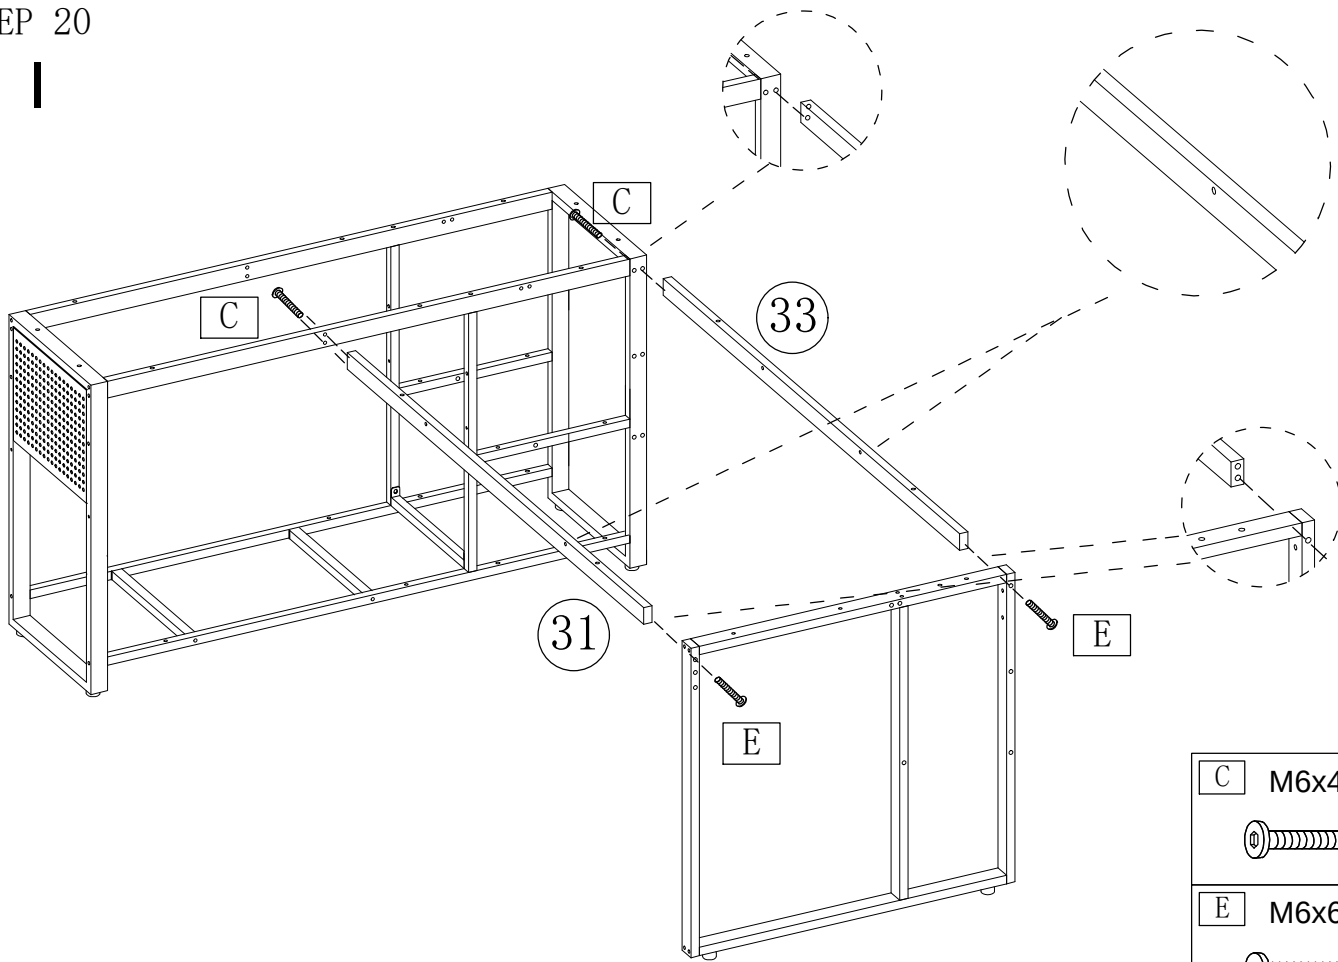

STEP 21


I

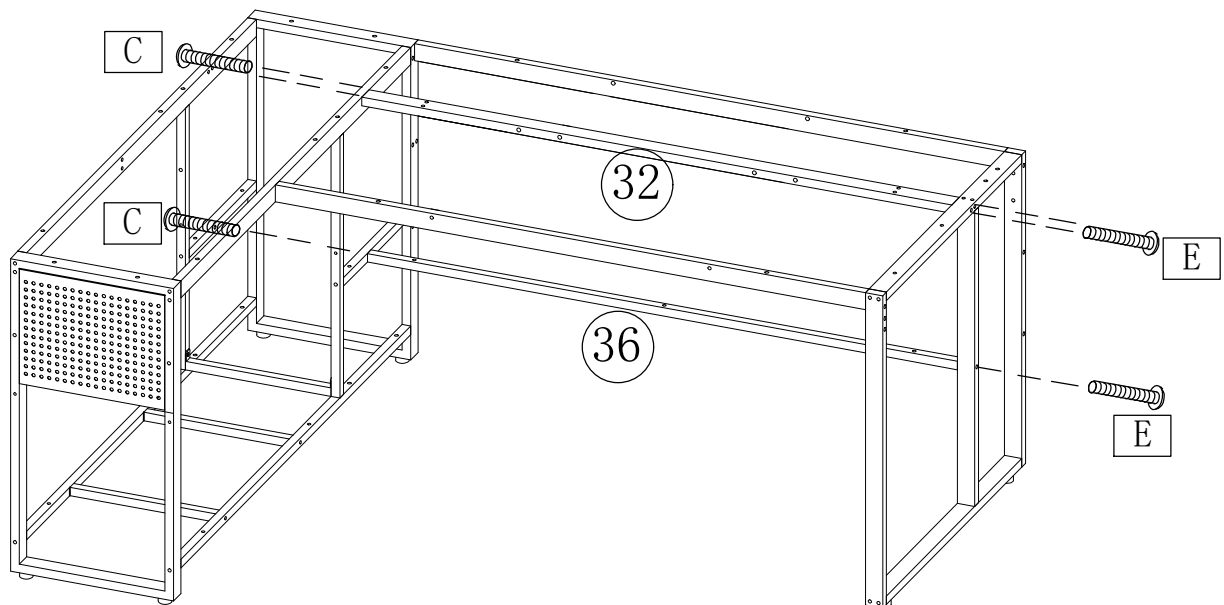

ASSEMBLY INSTRUCTION

STEP 22


I

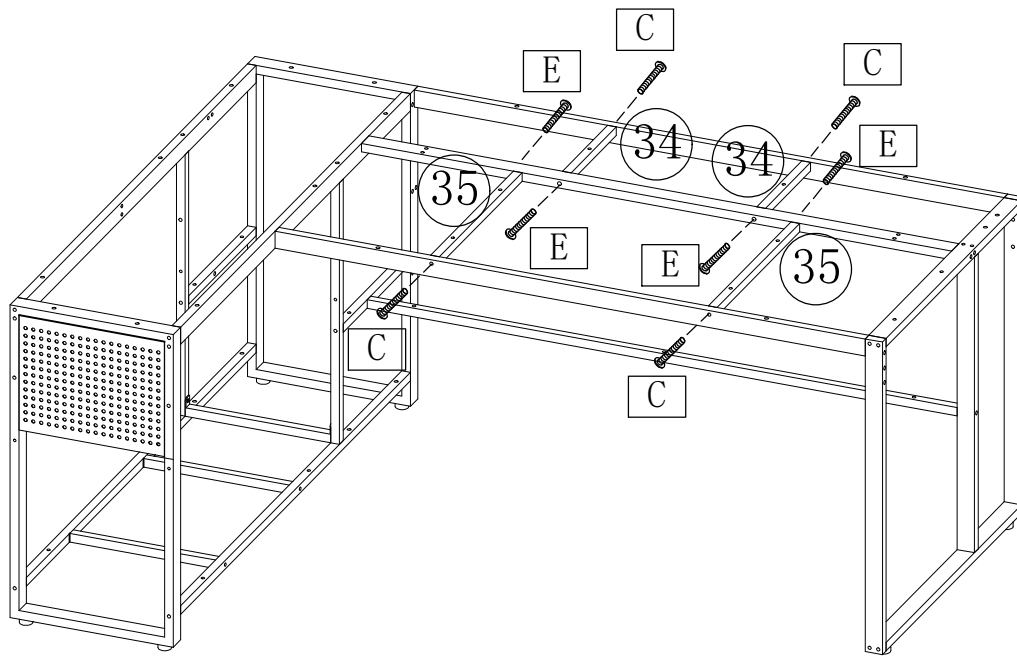

C	M6x40mm
	*4
E	M6x60mm
	*4

STEP 23

I


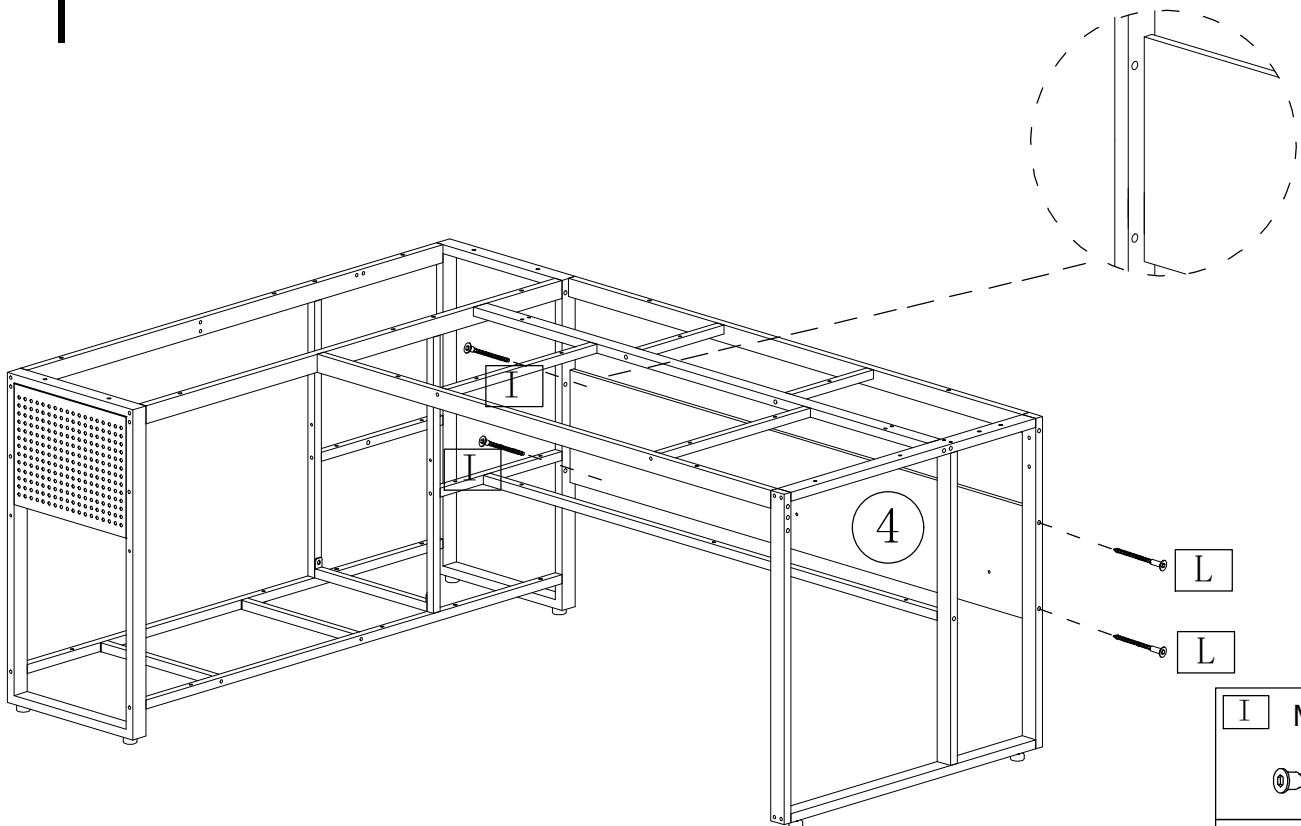



I	M5x40mm
	*2
L	M5x70mm
	*2

ASSEMBLY INSTRUCTION

STEP 24


I

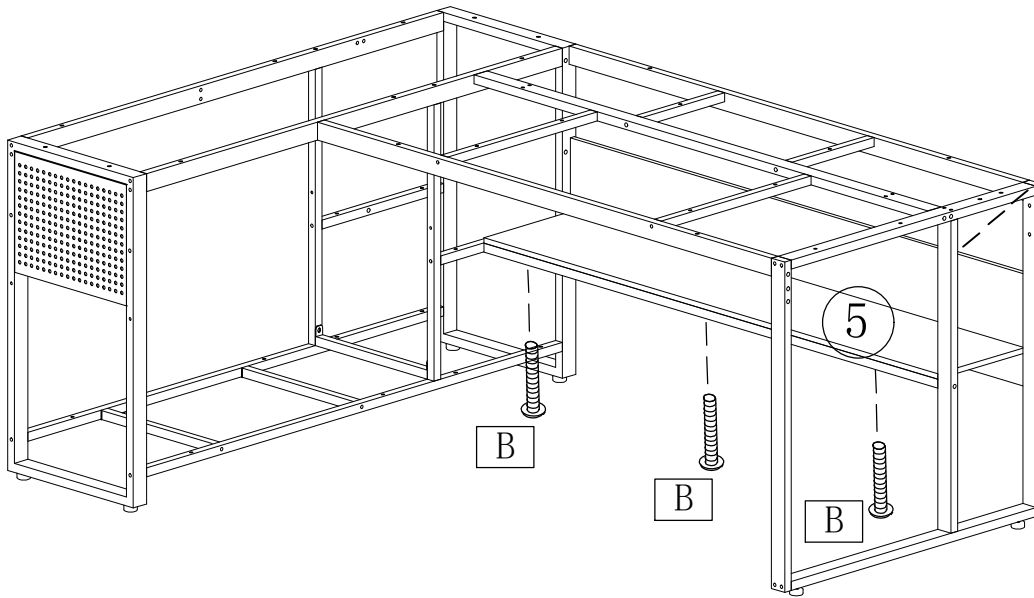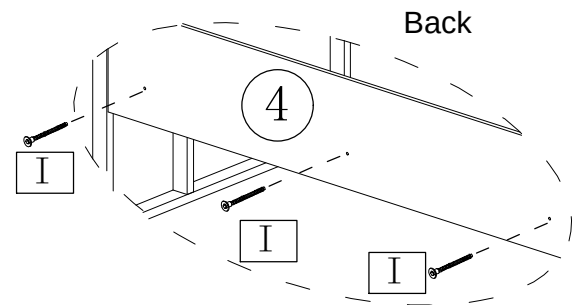


I	M5x40mm
	*3
B	M6x28mm
	*3

STEP 25

I

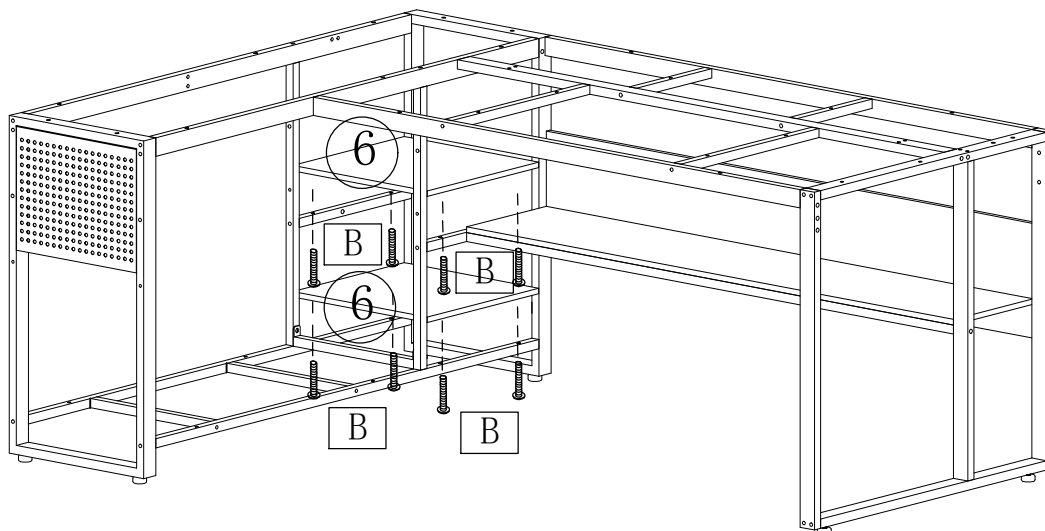


B	M6x28mm
	*8

ASSEMBLY INSTRUCTION


STEP 26

I

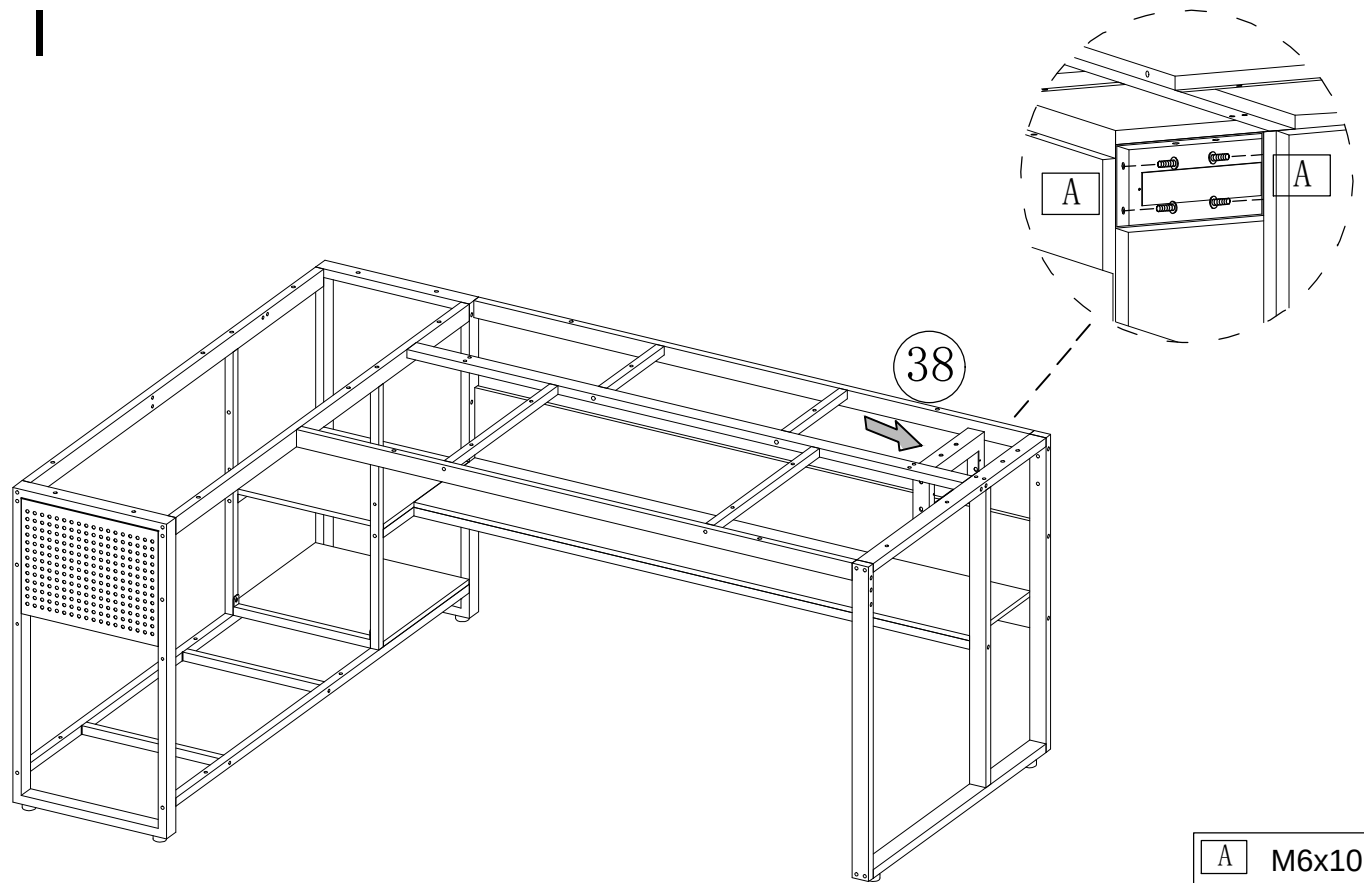


STEP 27

I

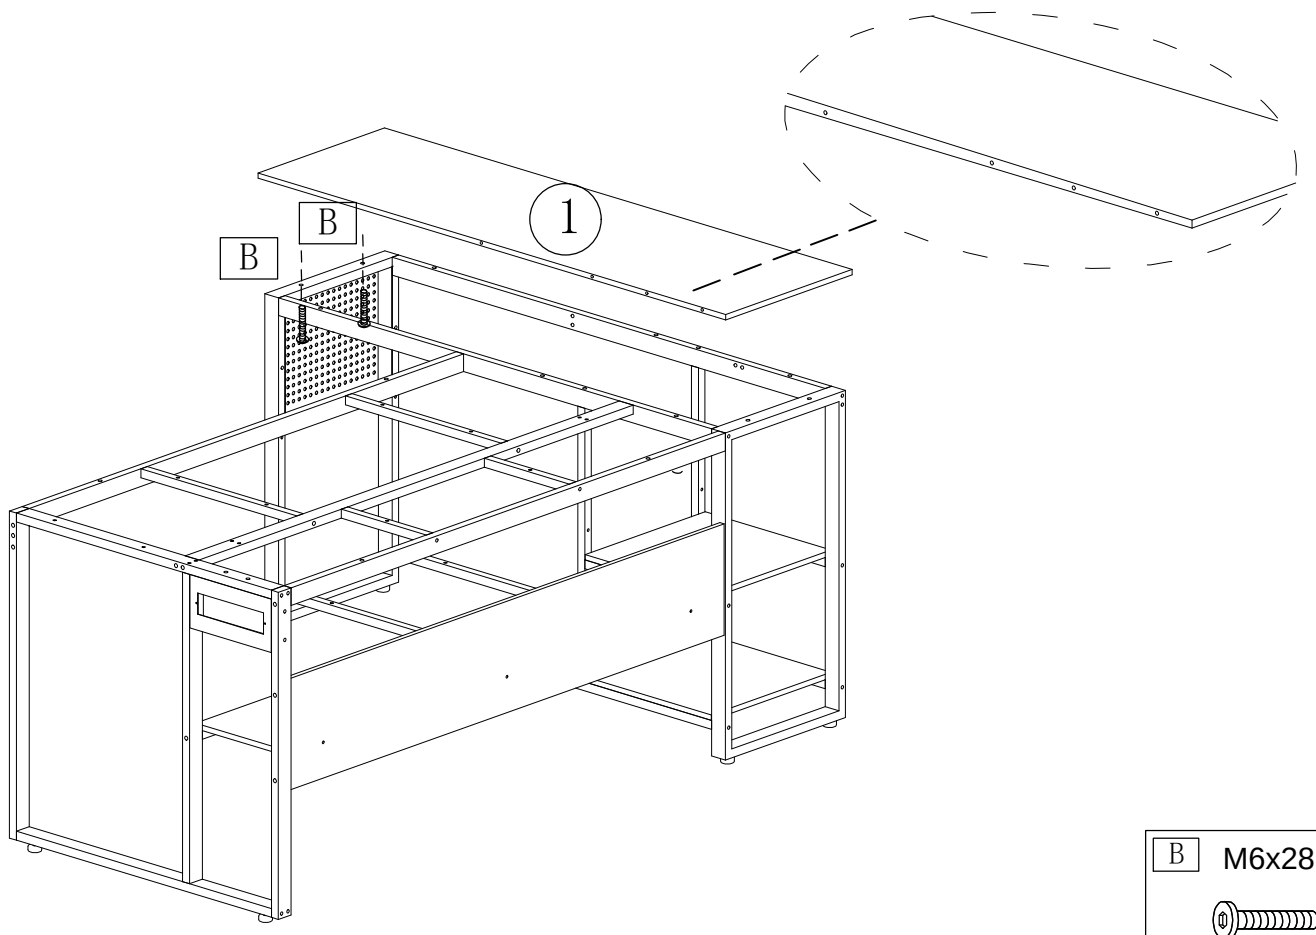


ASSEMBLY INSTRUCTION

STEP 28

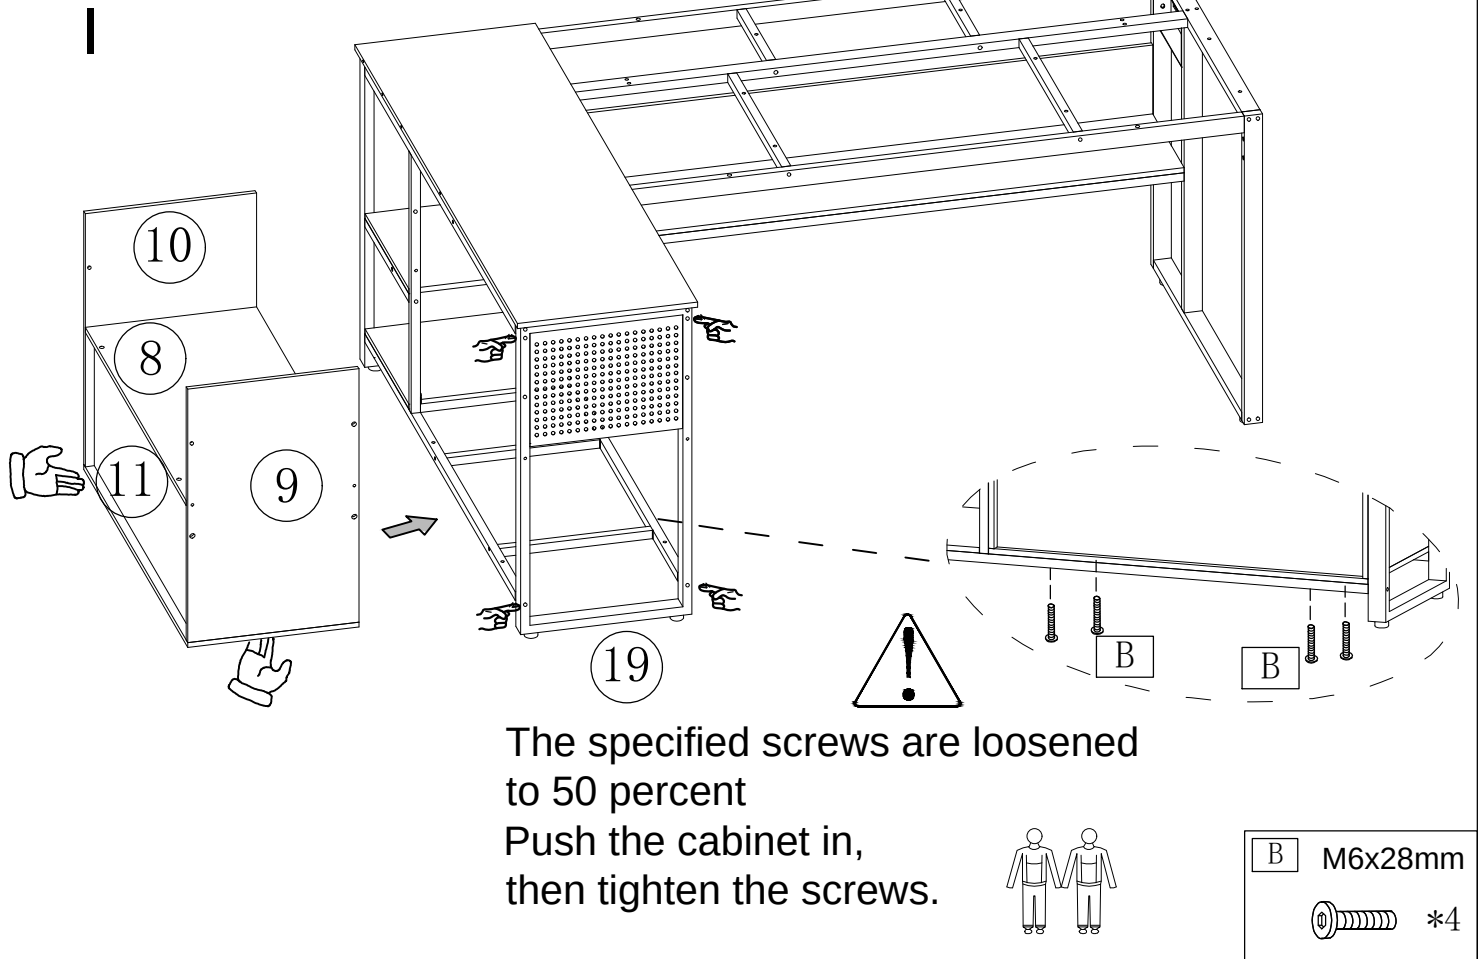


STEP 29

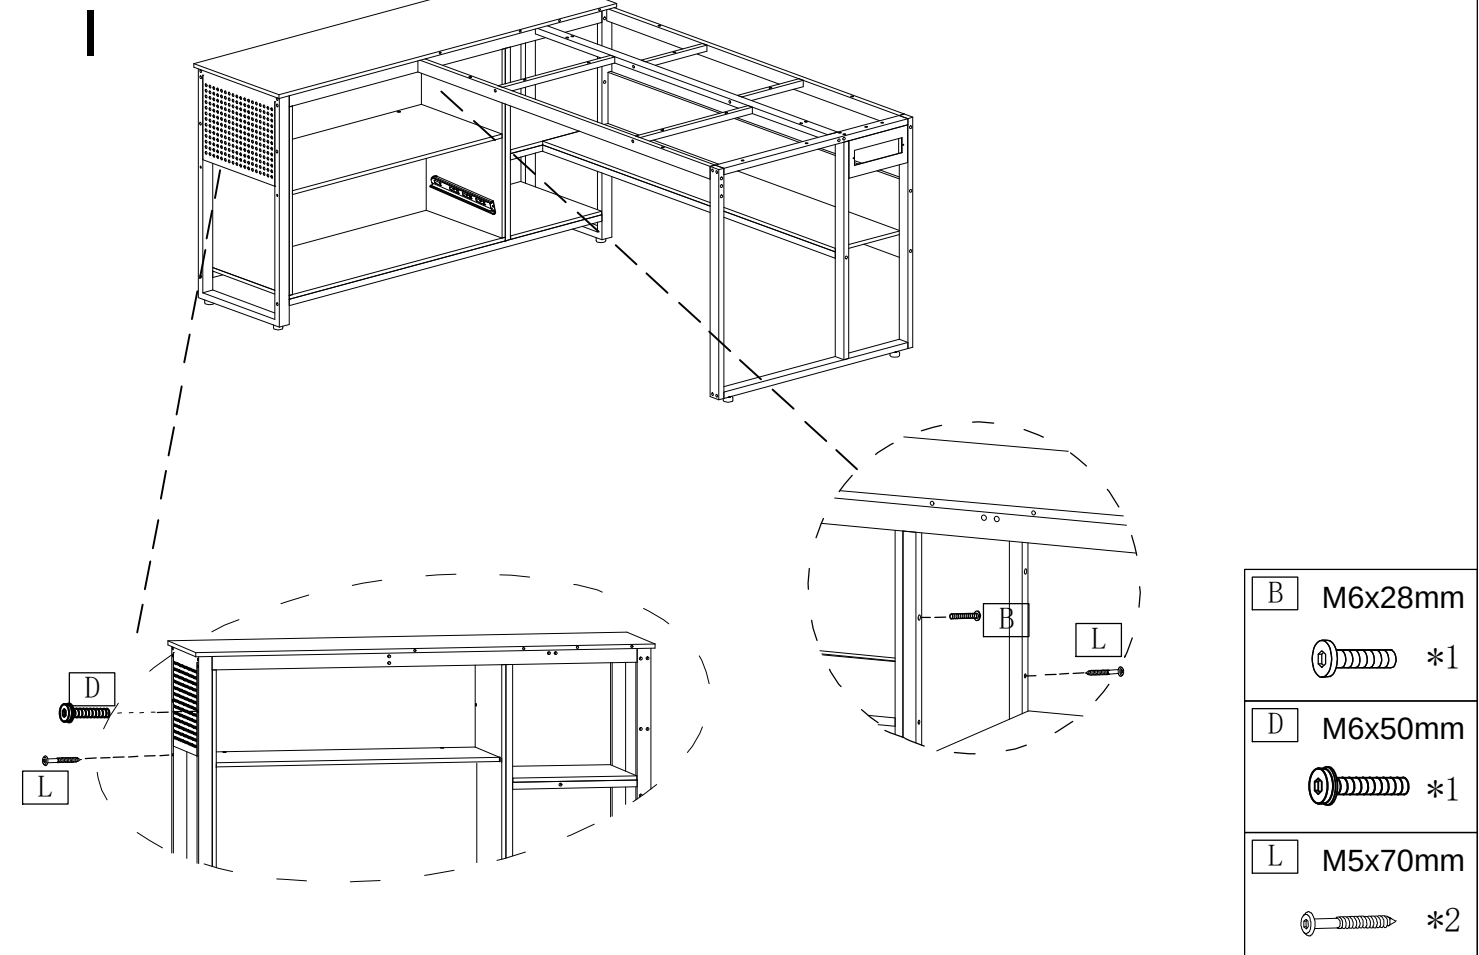

ASSEMBLY INSTRUCTION

STEP 30


I

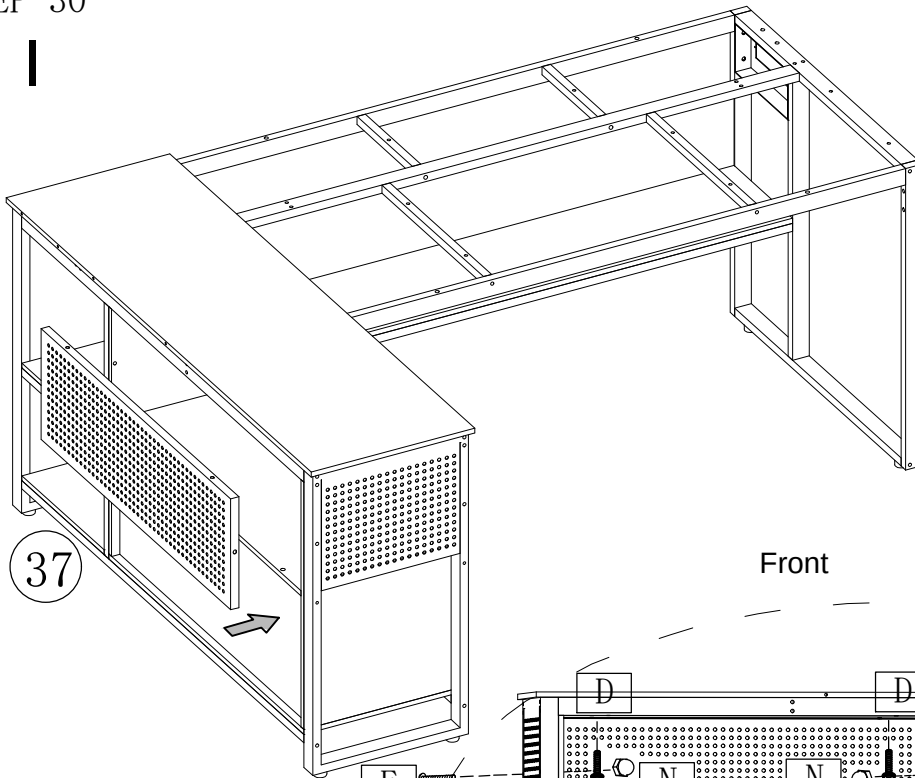

D	M6x50mm
	*2
A	M6x10mm
	*2
C	M6x40mm
	*1
E	M6x60mm
	*1
N	M6
	*2

STEP 31

I

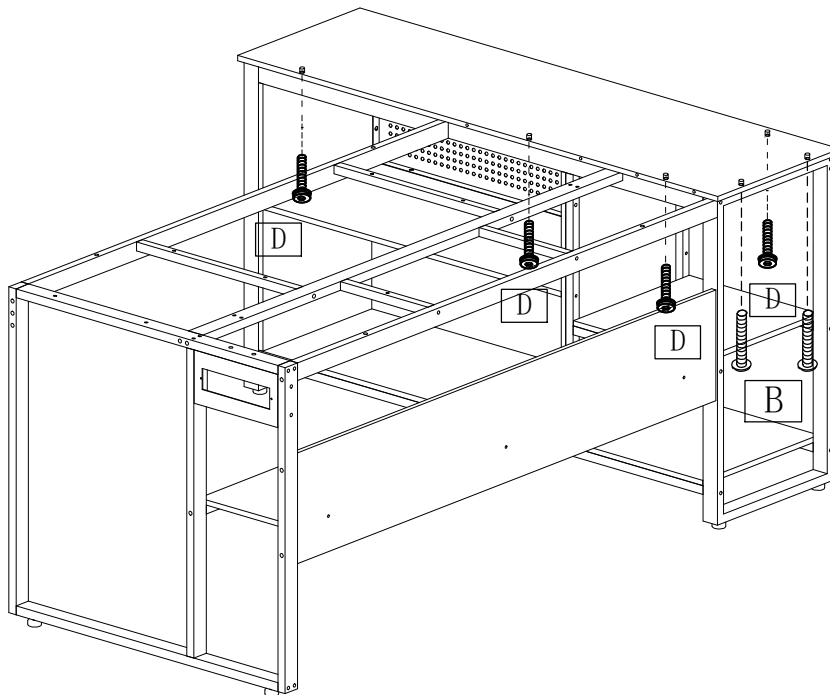


D	M6x50mm
	*4
B	M6x28mm
	*2

ASSEMBLY INSTRUCTION

STEP32


I

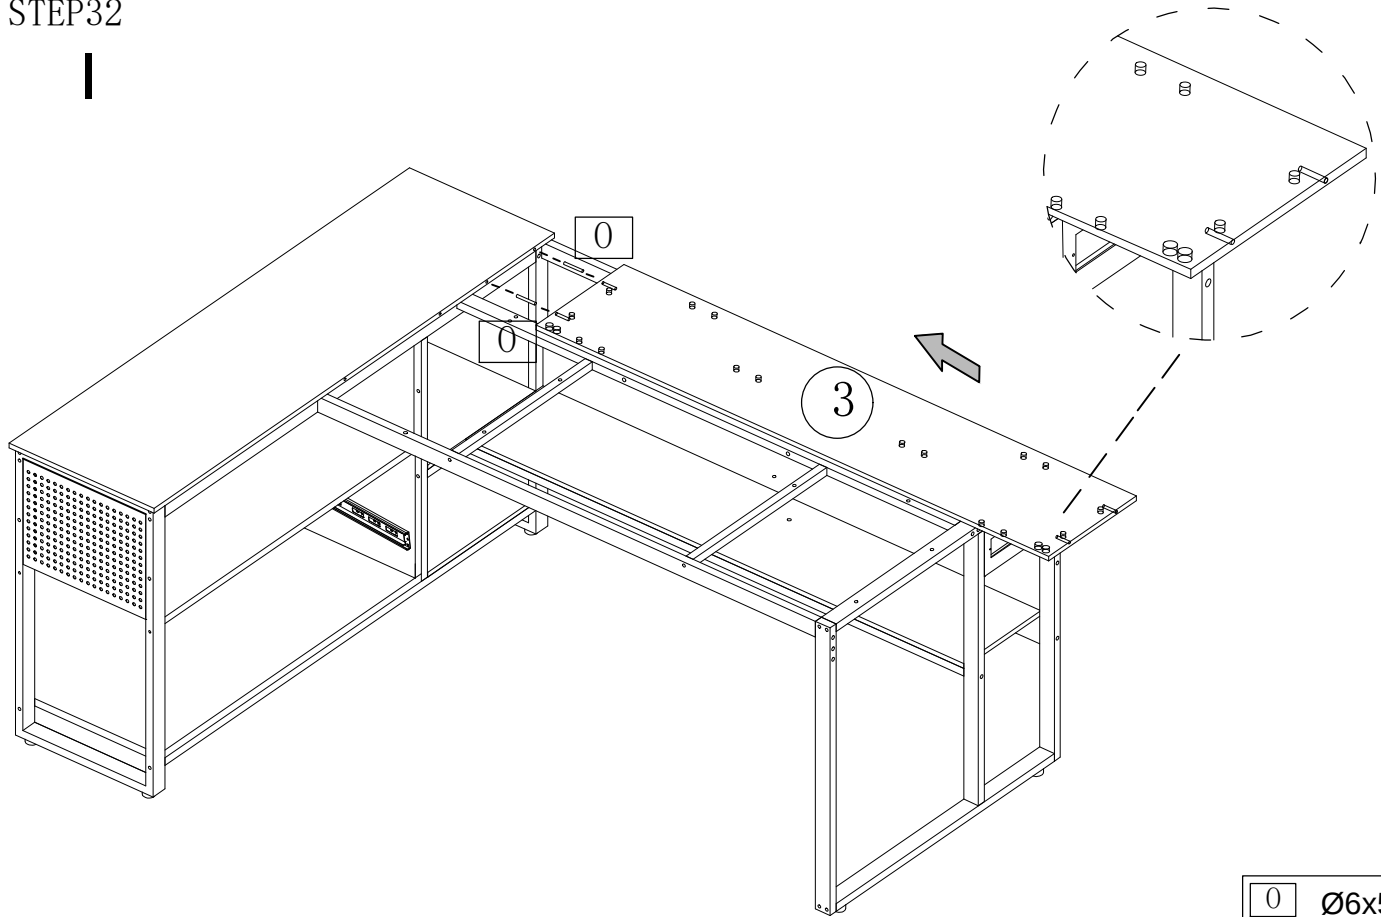

0 Ø6x50mm
*2

STEP 33

I

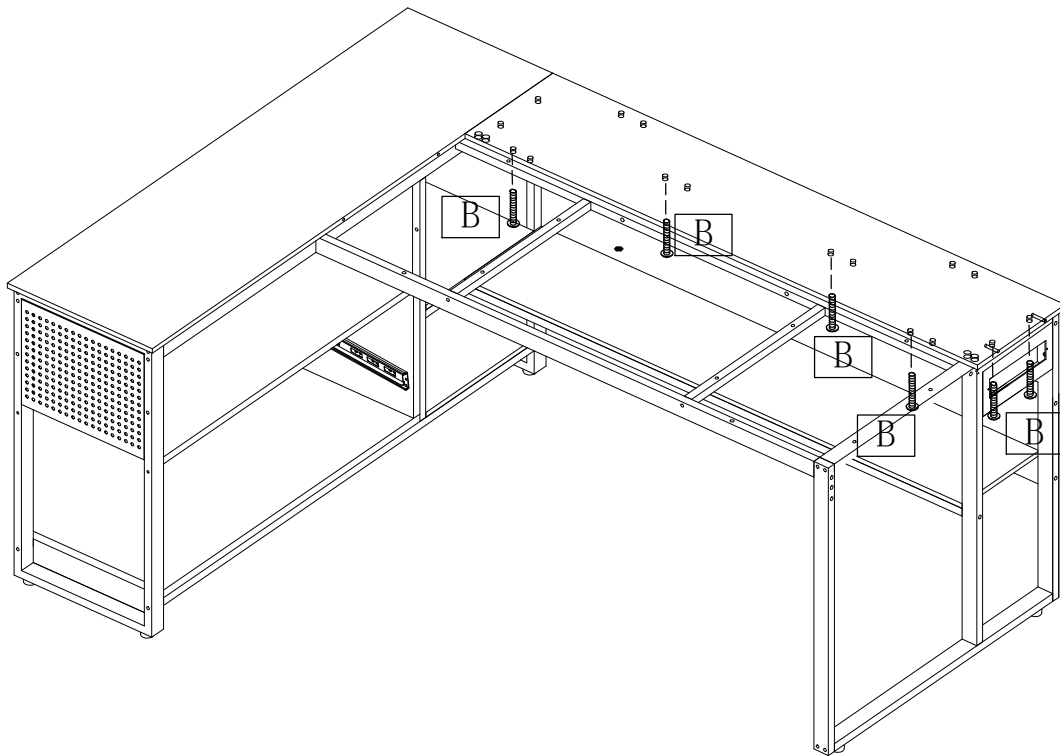


B M6x28mm
*6

ASSEMBLY INSTRUCTION

STEP 34

I

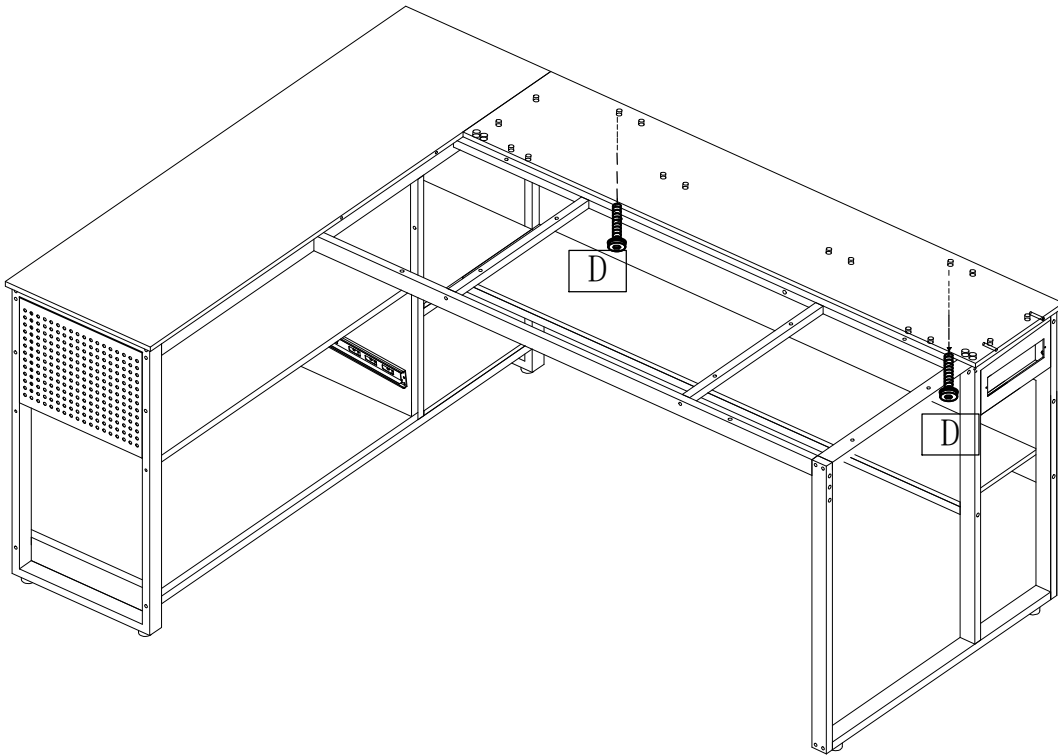


D M6x50mm

 *2

STEP 35

I

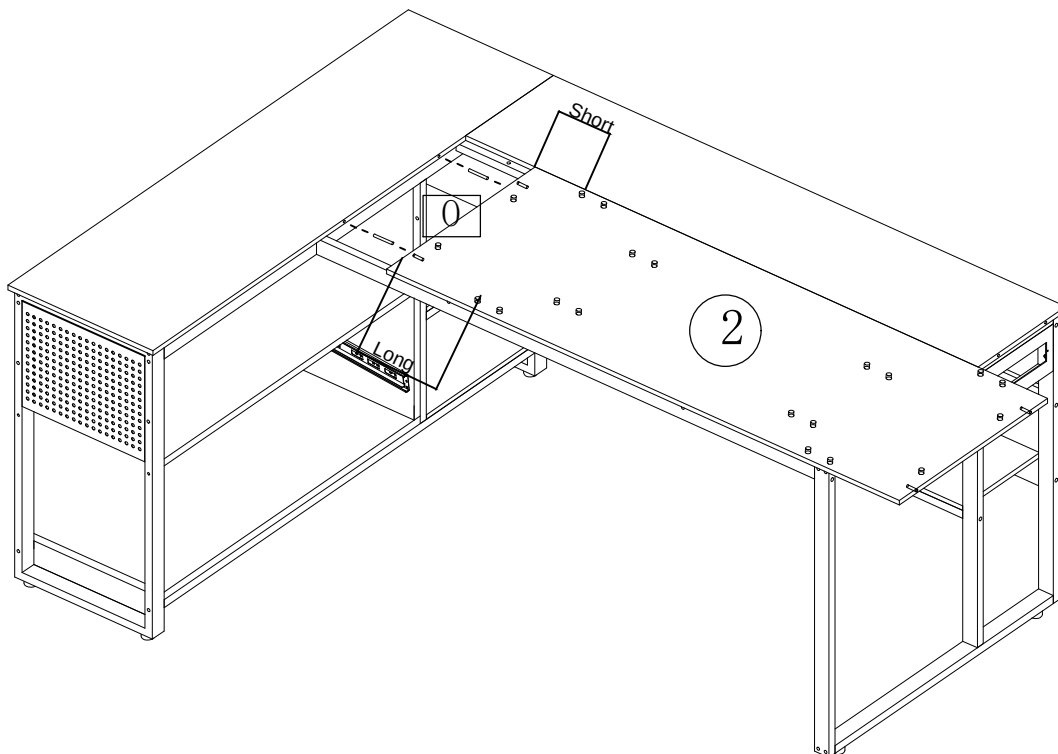


0 Ø6x50mm

 *2

ASSEMBLY INSTRUCTION

STEP 36

I

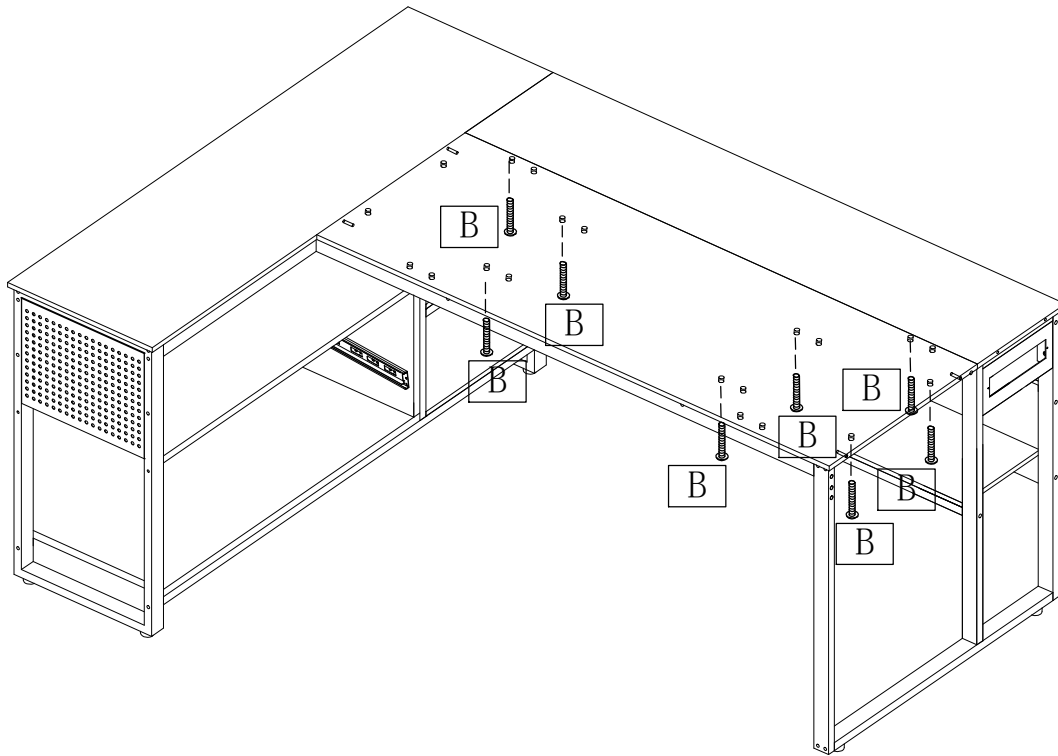


B M6x28mm




STEP 37

I

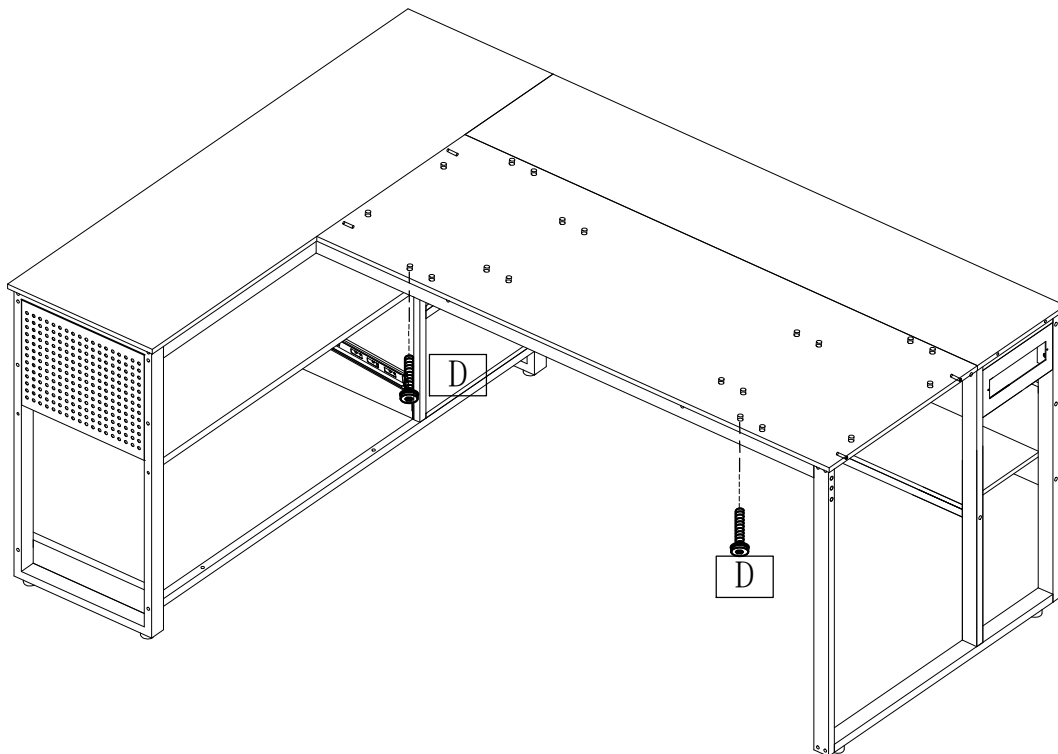


D M6x50mm



ASSEMBLY INSTRUCTION

STEP 38



I

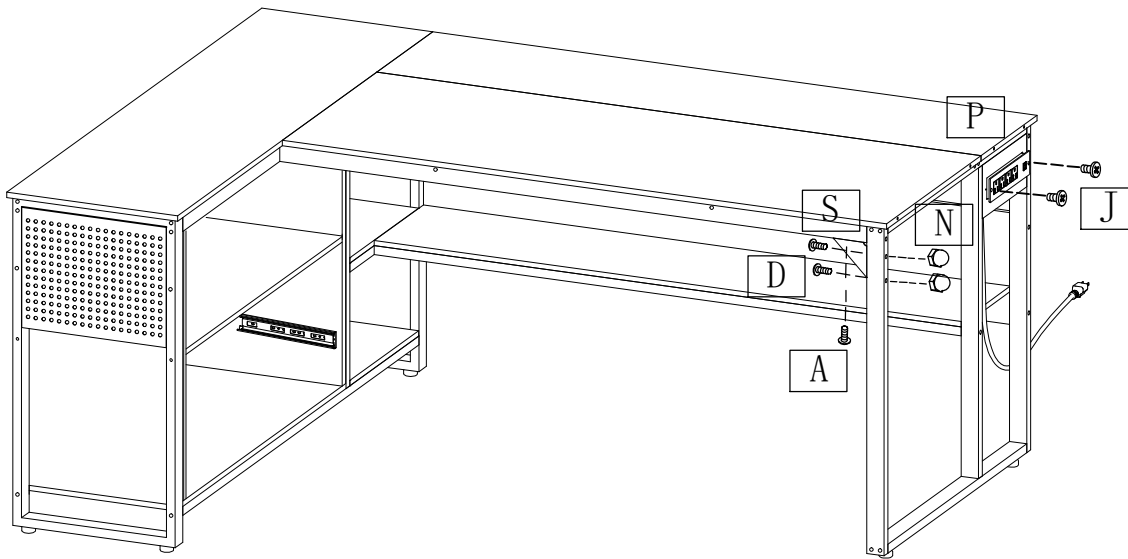


D	M6x50mm
	 *2
N	M6
	 *2
S	
	 *1
J	M4x8mm
	 *2
A	M6x10mm
	 *1
P	
	 *1

STEP 39


I

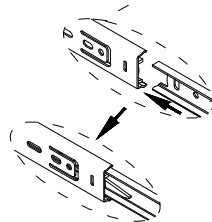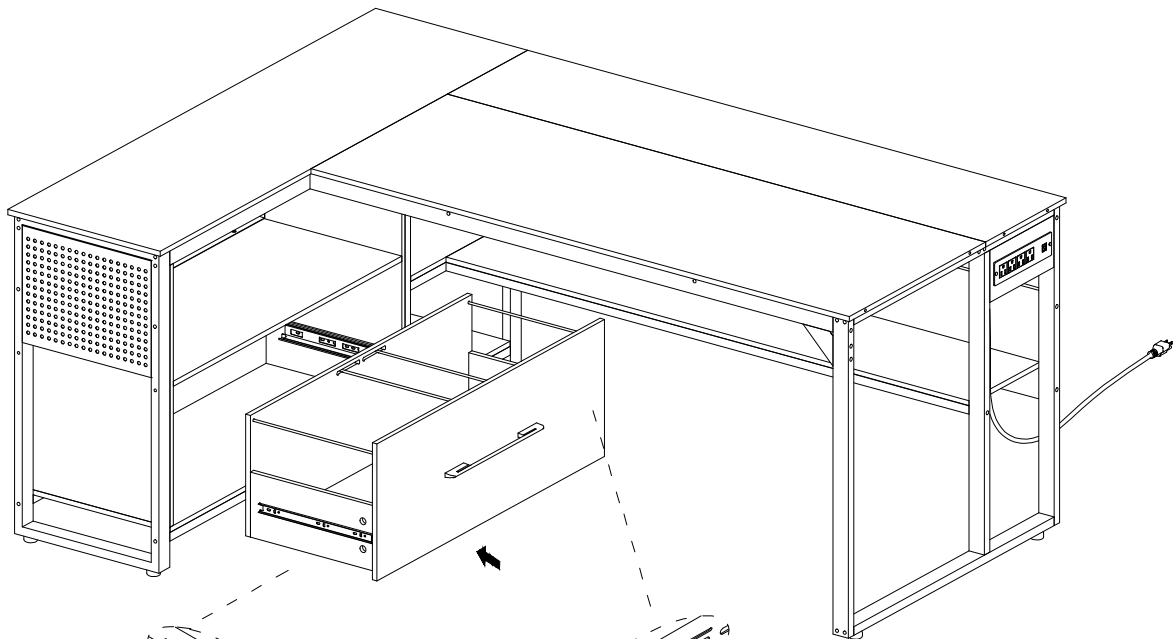

Align, insert



Be careful to pull the guide balls on both sides to the front end

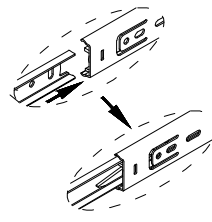


Align, insert



ASSEMBLY INSTRUCTION

STEP 40


I

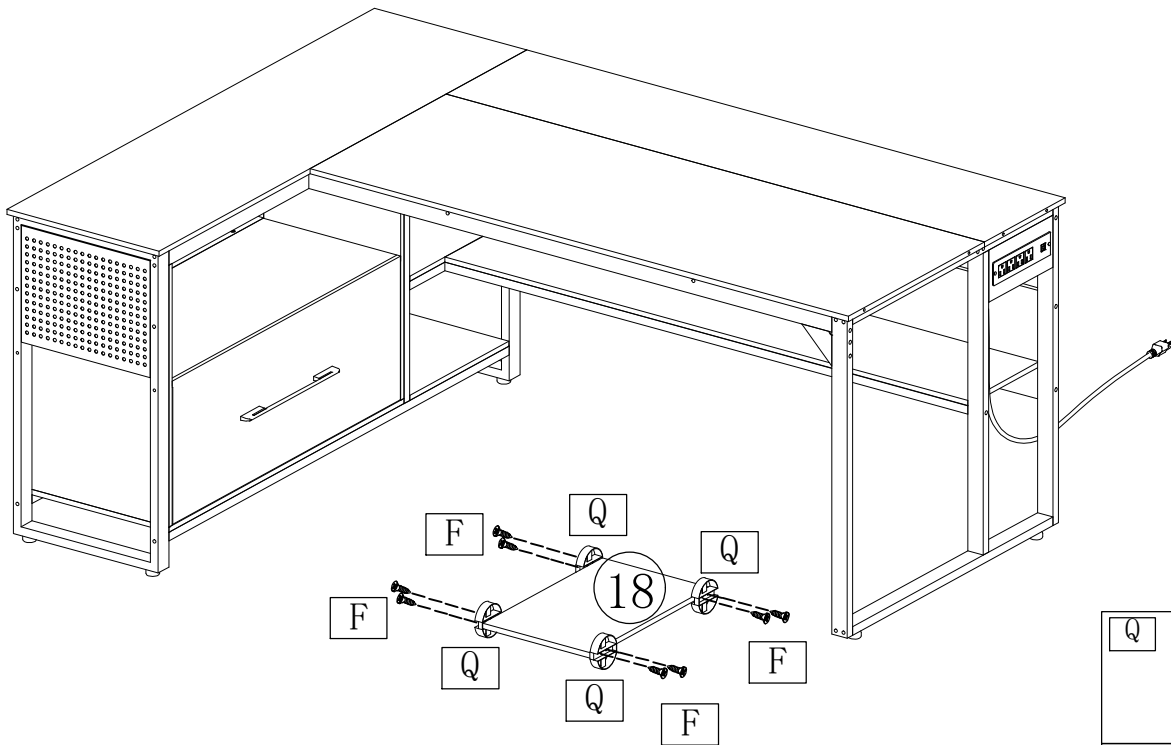


Q		*4
F	M3.5x12mm	
		*8

STEP 41

I

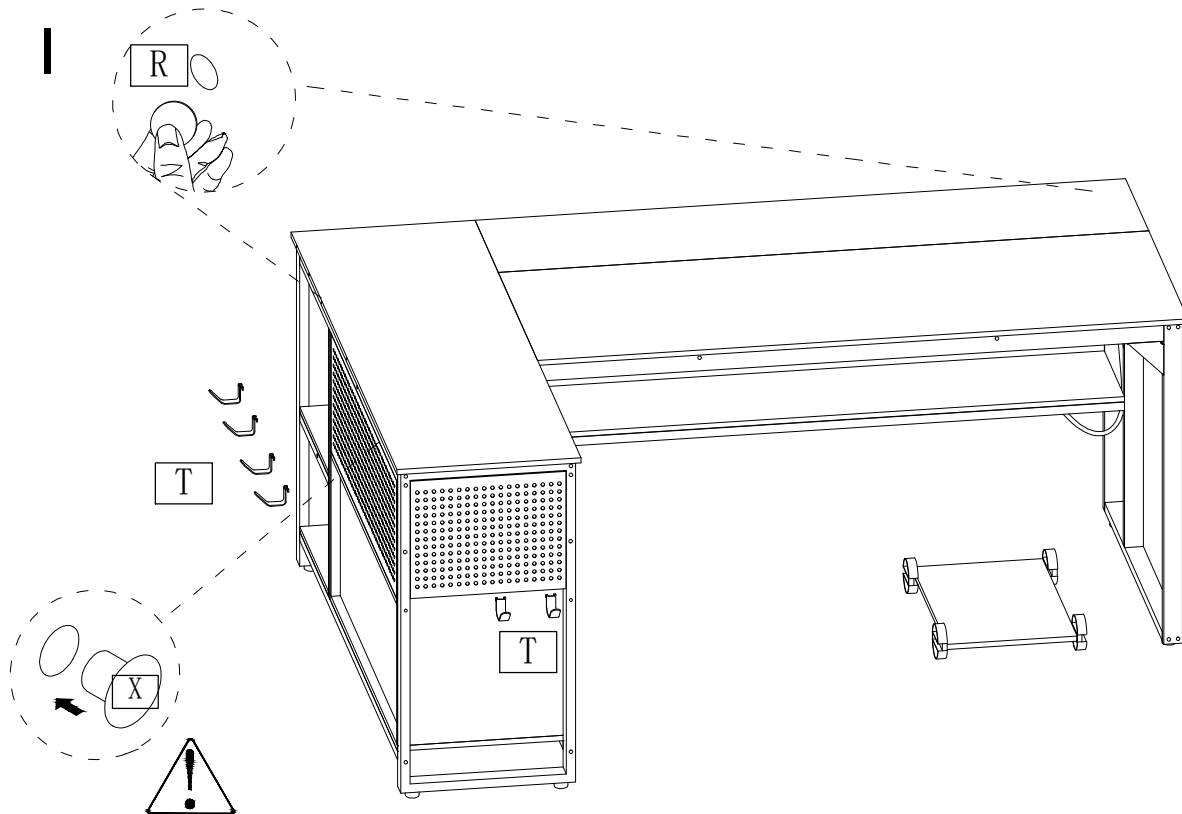


Cover the holes with X as needed

R	Ø12mm	X	T
	*12		
		*5	*6

ASSEMBLY INSTRUCTION


STEP 15

||

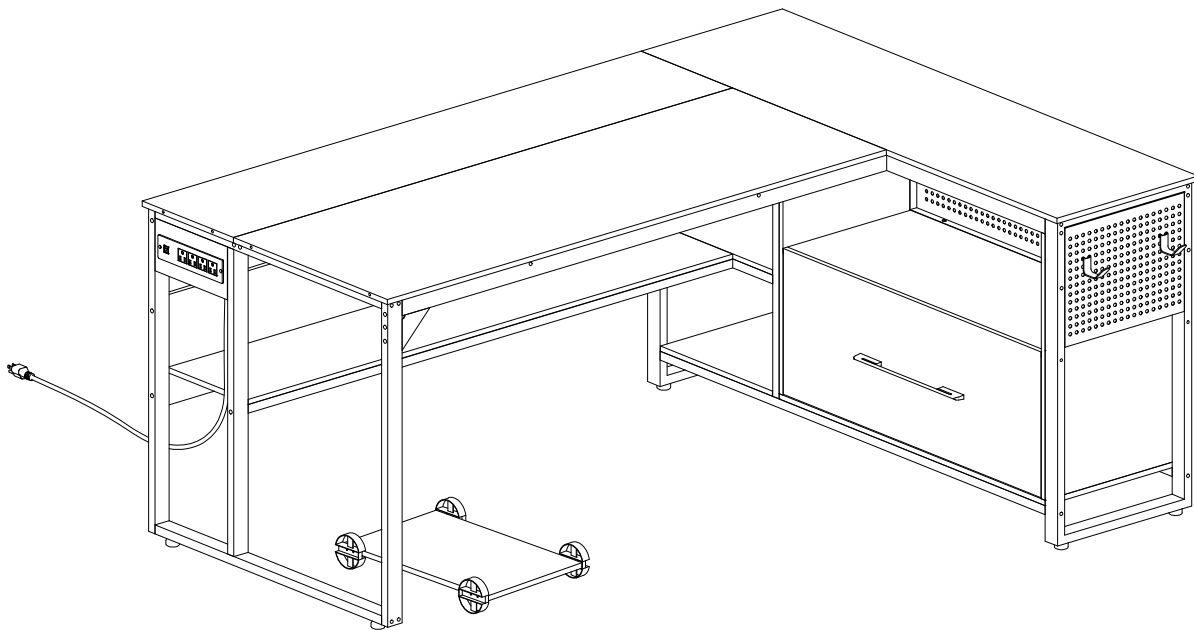


STEP 16

||

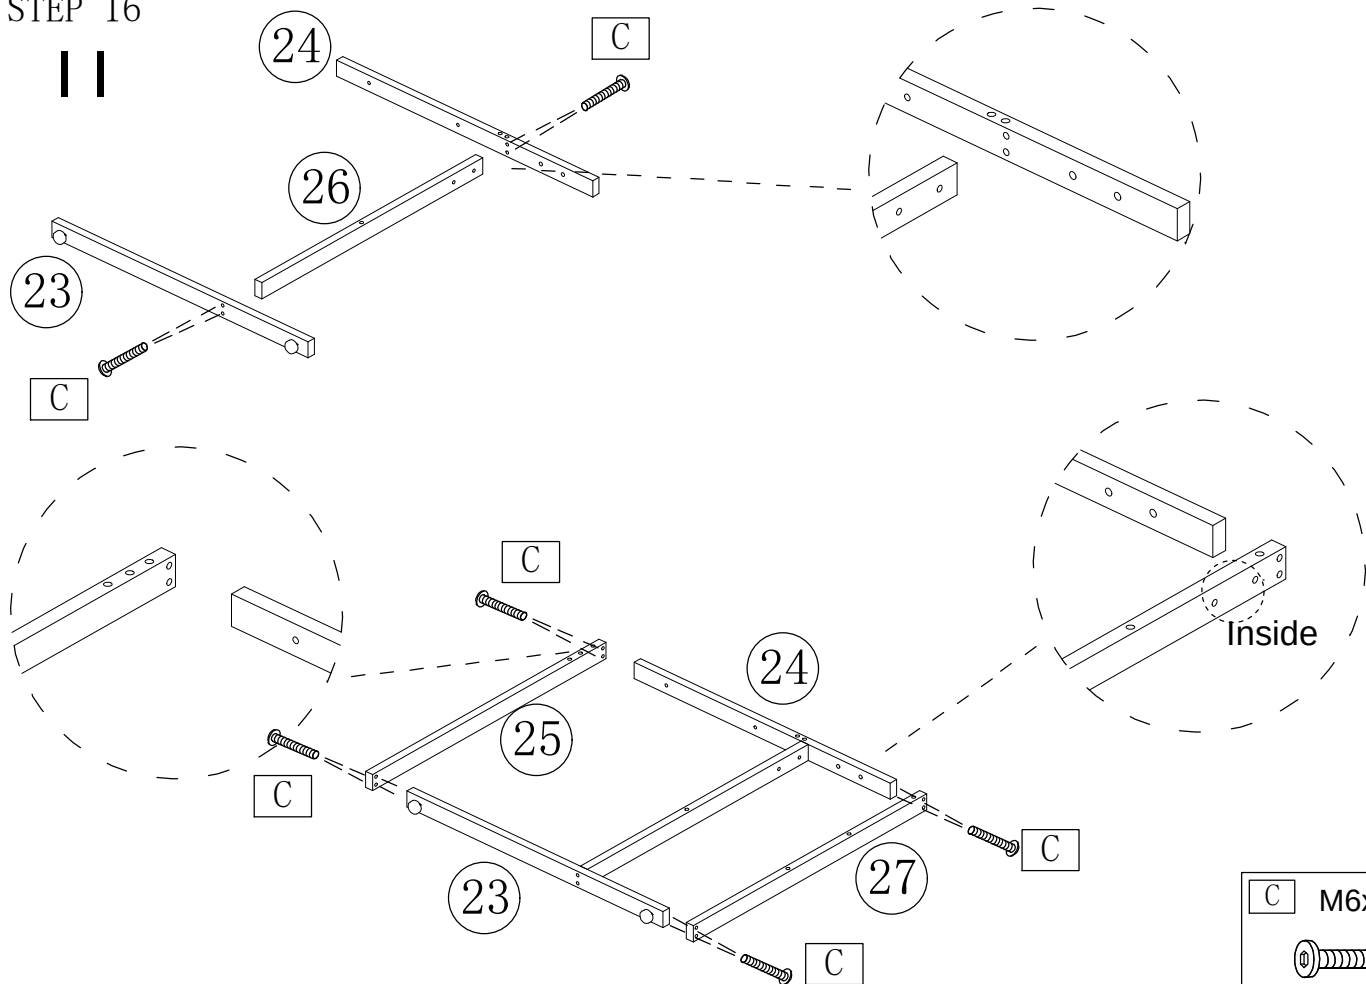

ASSEMBLY INSTRUCTION

STEP 17


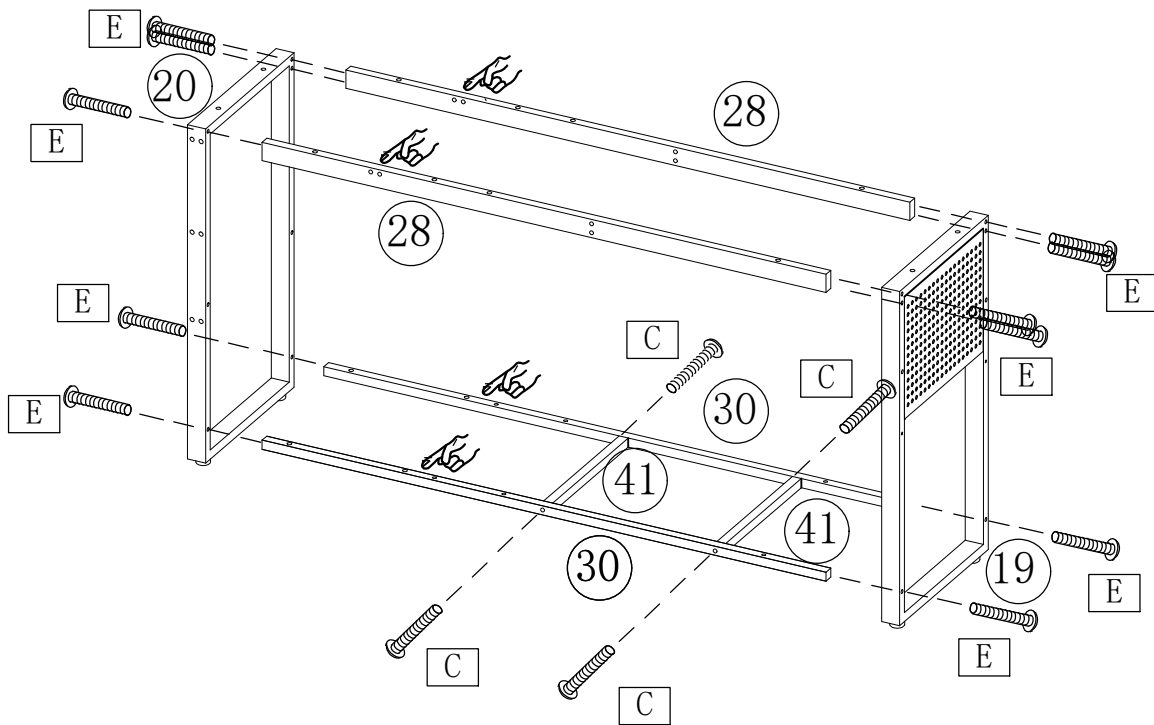


C	M6x40mm
	*4
E	M6x60mm
	*11

STEP 18



The large hole
is on the right

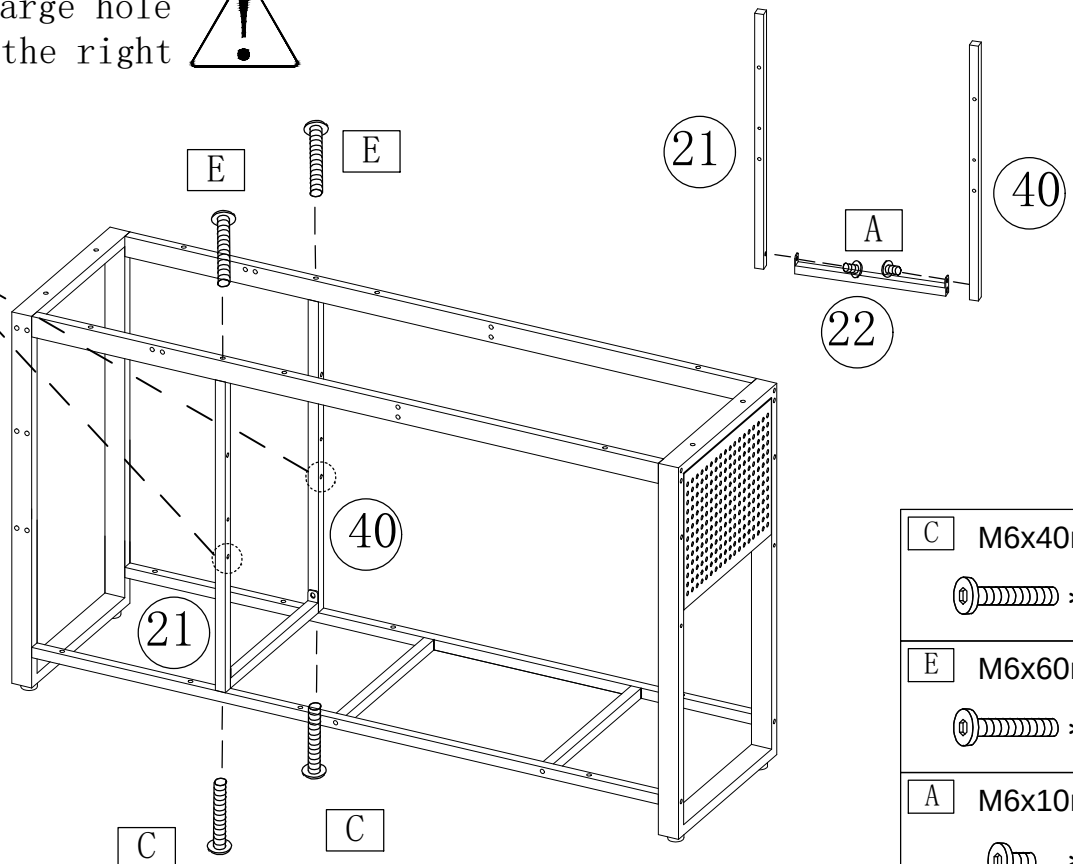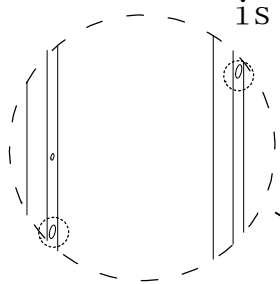


C	M6x40mm
	*2
E	M6x60mm
	*2
A	M6x10mm
	*2

ASSEMBLY INSTRUCTION

STEP 19


||

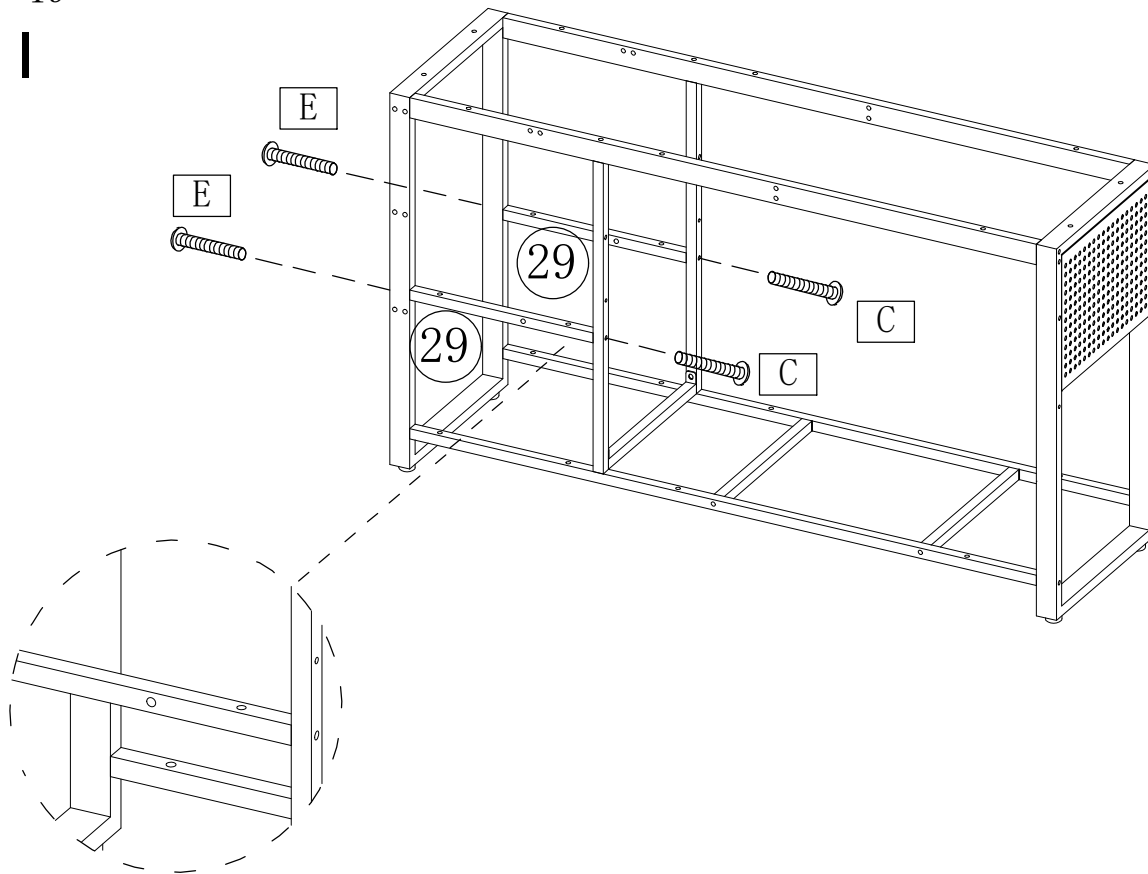

C	M6x40mm
	*2
E	M6x60mm
	*2

STEP 20

||

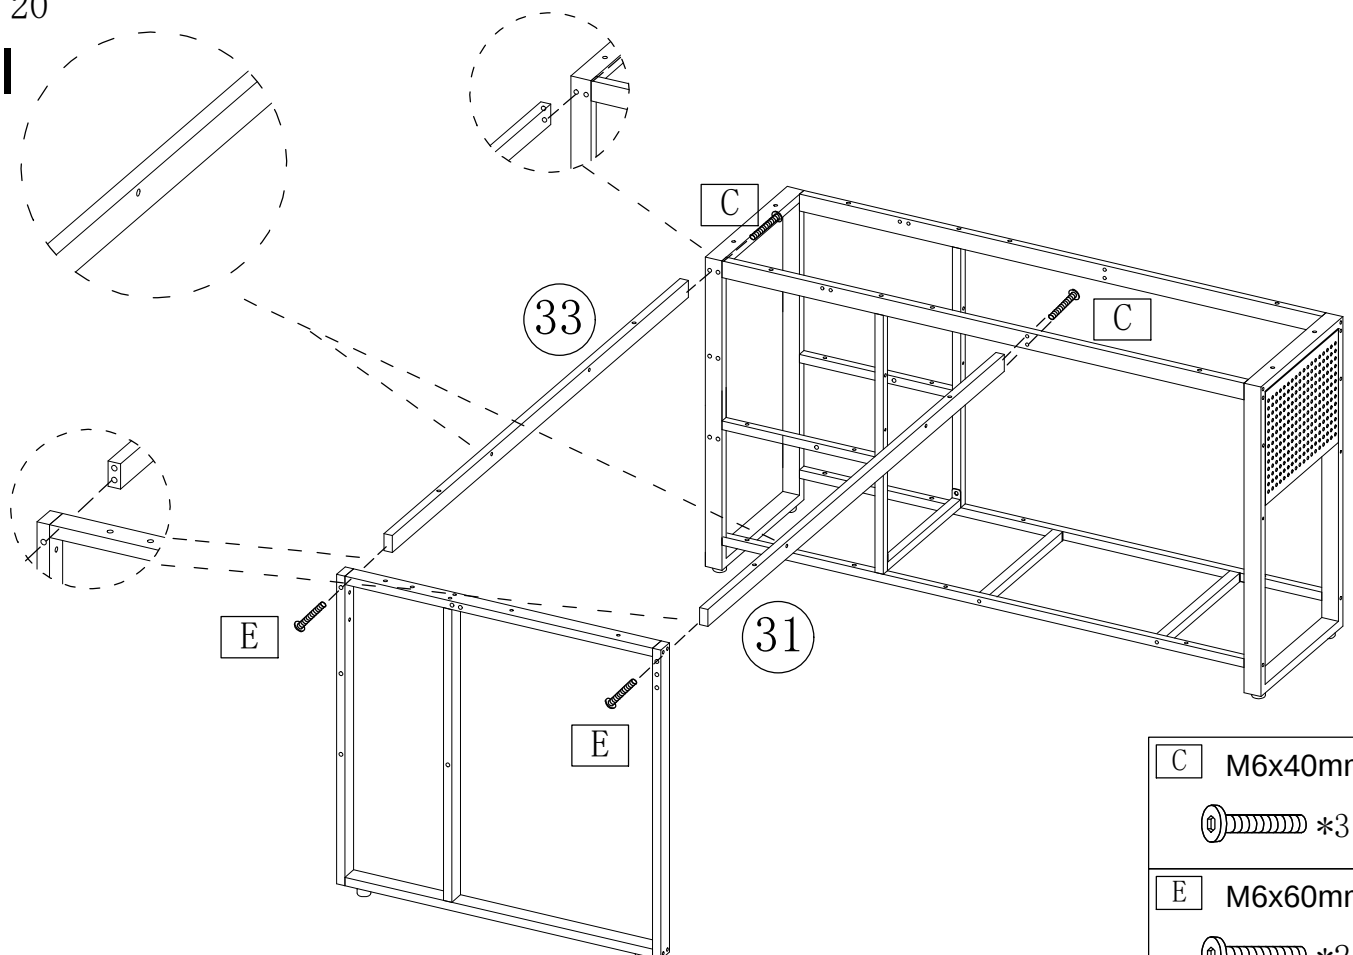


C	M6x40mm
	*3
E	M6x60mm
	*2

ASSEMBLY INSTRUCTION

STEP 21


||

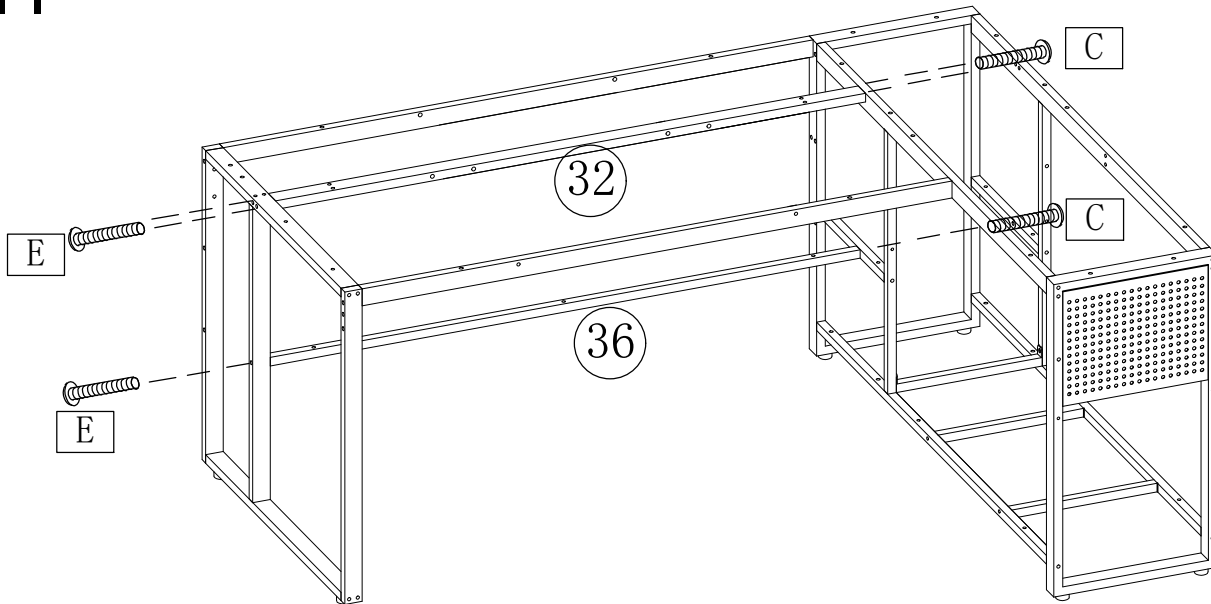

C	M6x40mm
	*3
E	M6x60mm
	*3

STEP 22

||

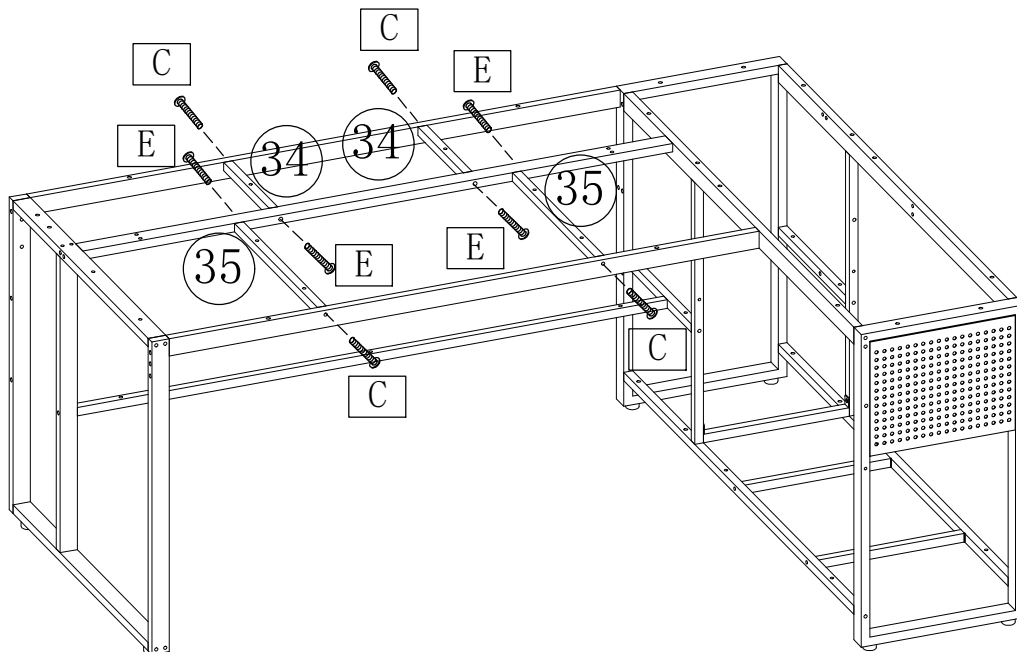


C	M6x40mm
	*4
E	M6x60mm
	*4

ASSEMBLY INSTRUCTION

STEP 23

||

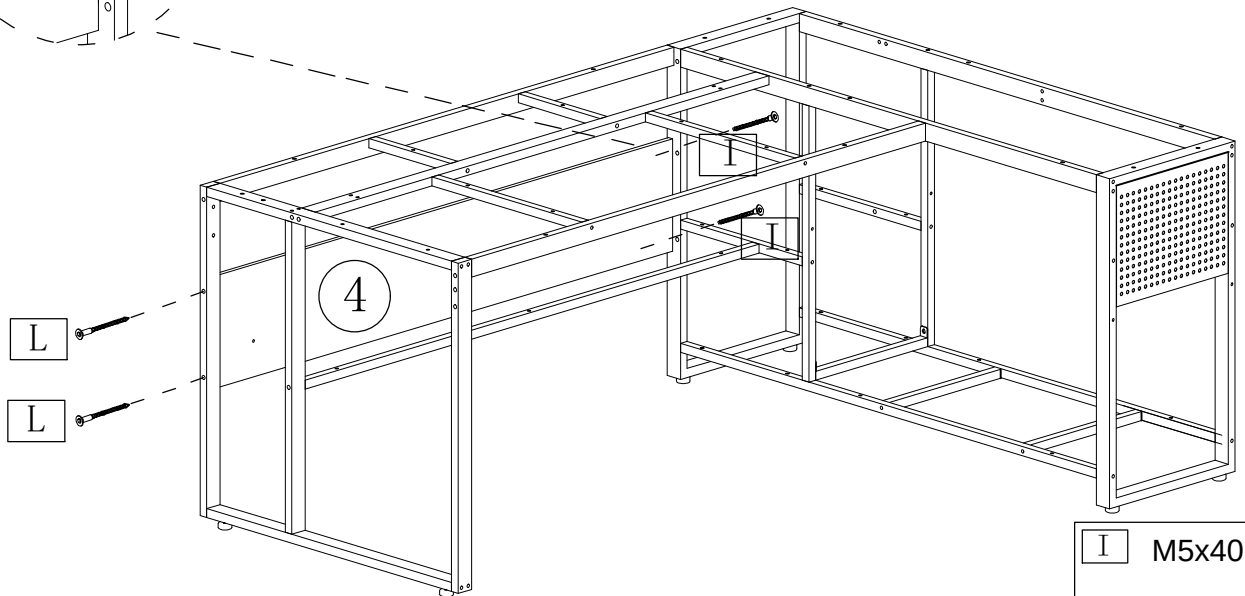

I M5x40mm

*2



L M5x70mm

*2

STEP 24

||

Back

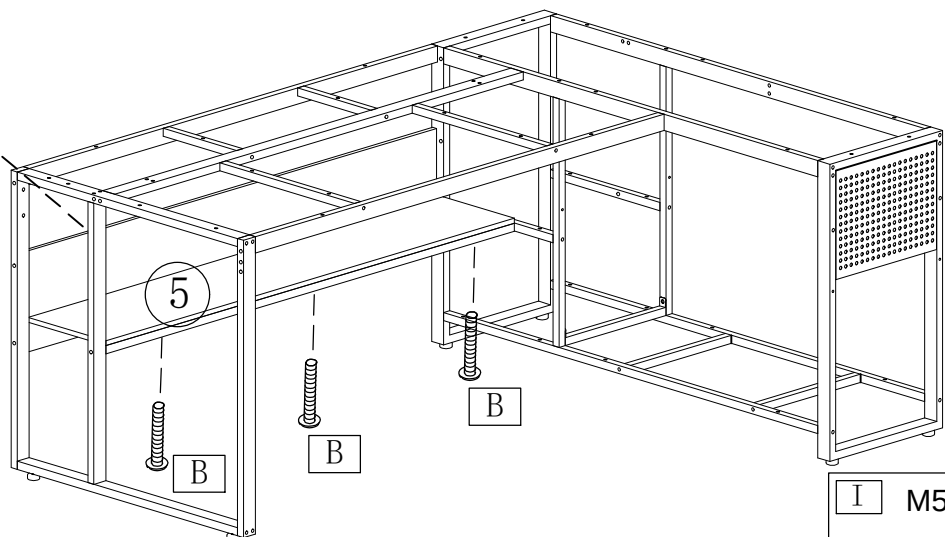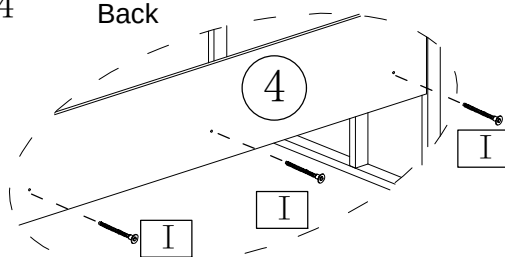

I M5x40mm

*3


B M6x28mm

*3

ASSEMBLY INSTRUCTION

STEP 25



||

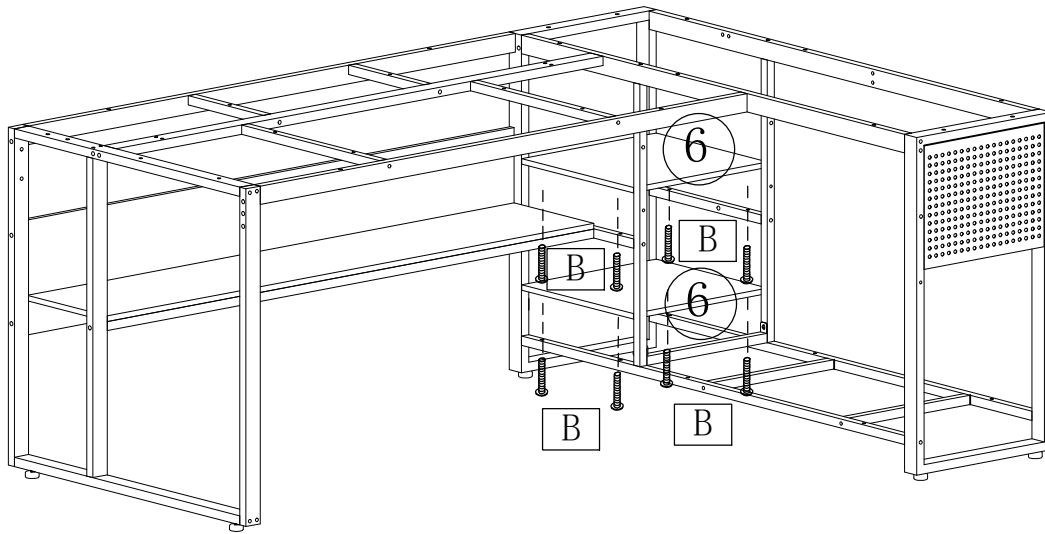

B M6x28mm
 *8

STEP 26

||

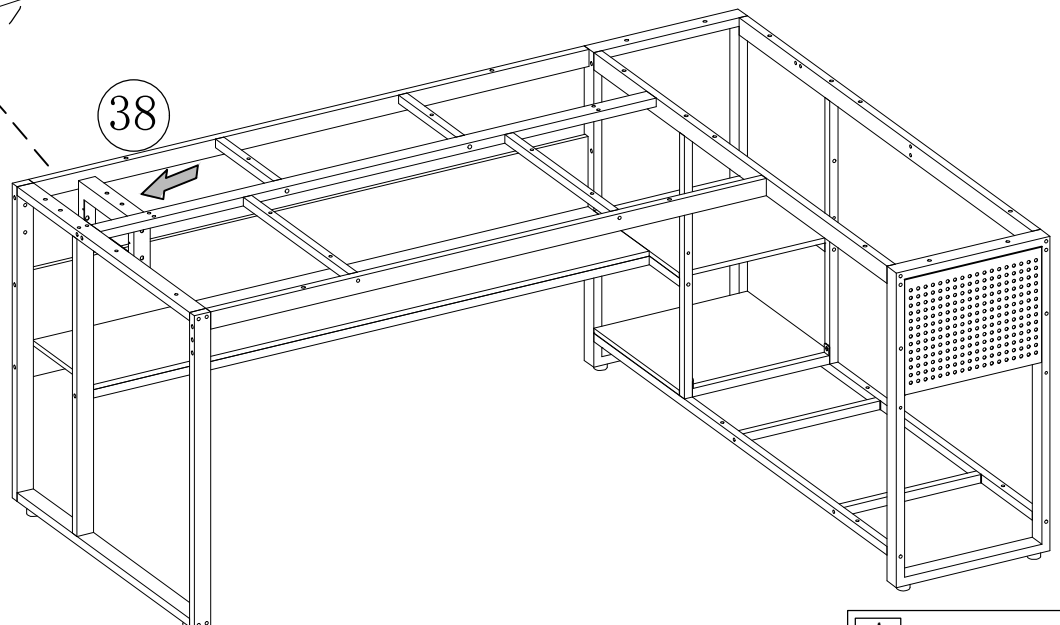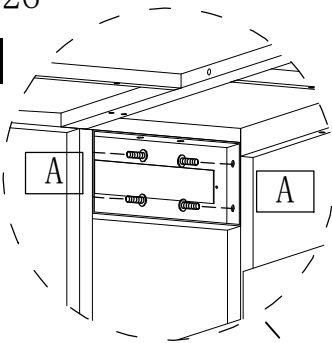


A M6x10mm
 *4


ASSEMBLY INSTRUCTION

STEP 27

||

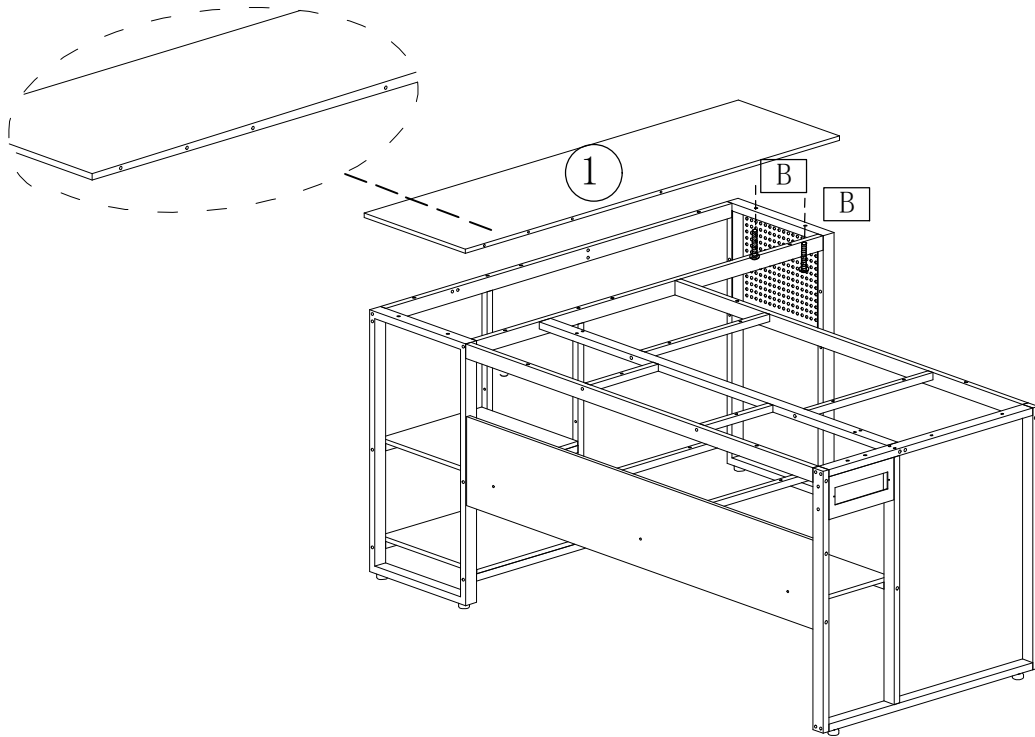


B M6x28mm




STEP 28


||

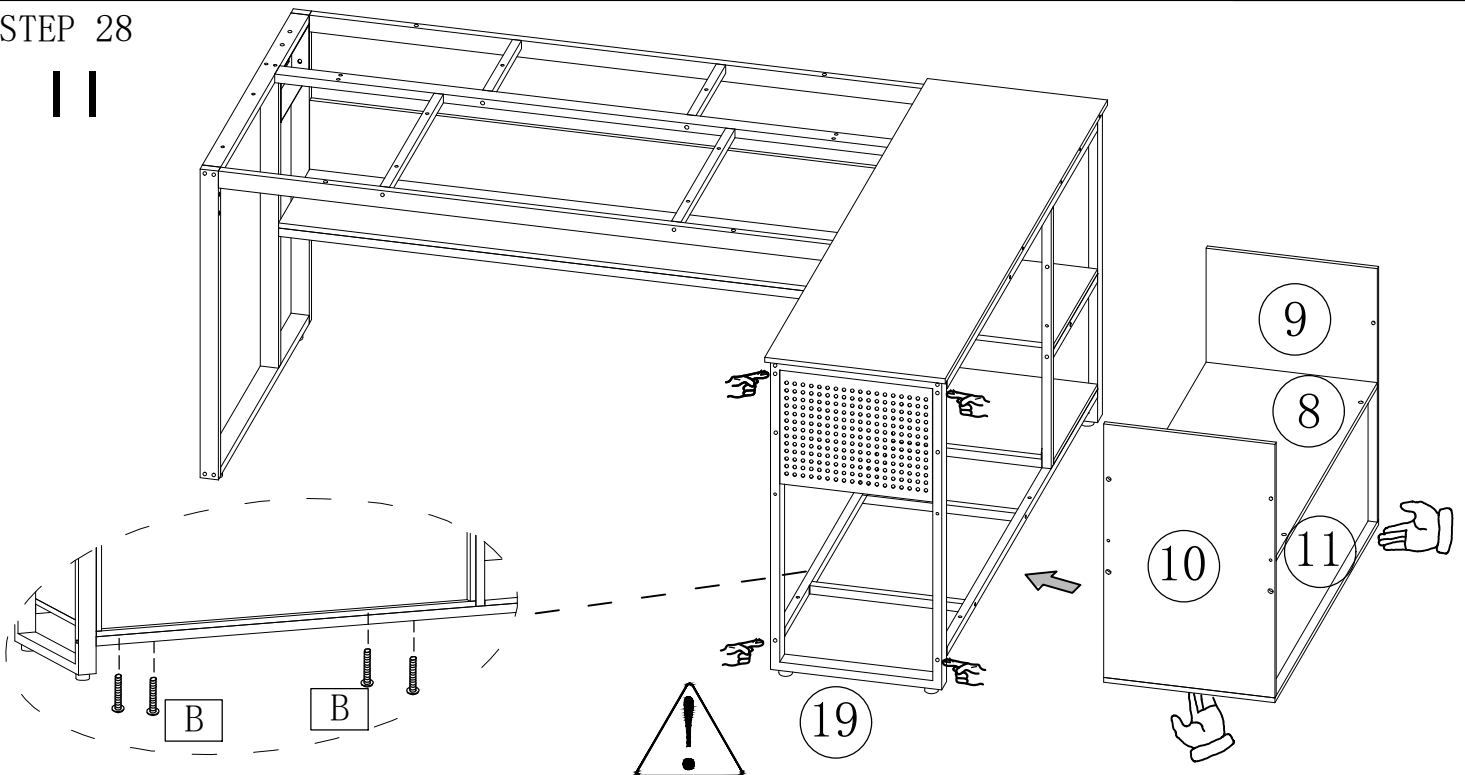

The specified screws are loosened
to 50 percent
Push the cabinet in,
then tighten the screws.




B M6x28mm



ASSEMBLY INSTRUCTION

STEP 29


II

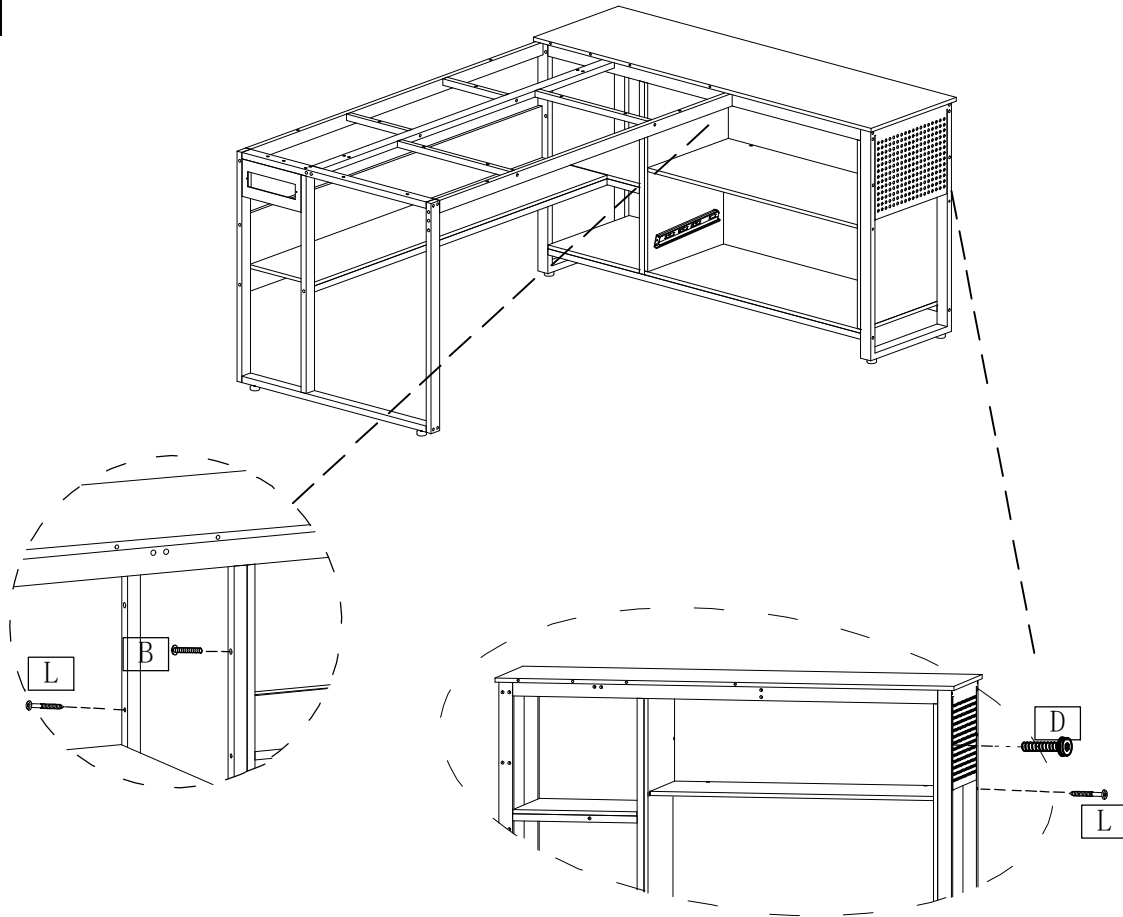

B	M6x28mm
	*1
D	M6x50mm
	*1
L	M5x70mm
	*2

STEP 30

II

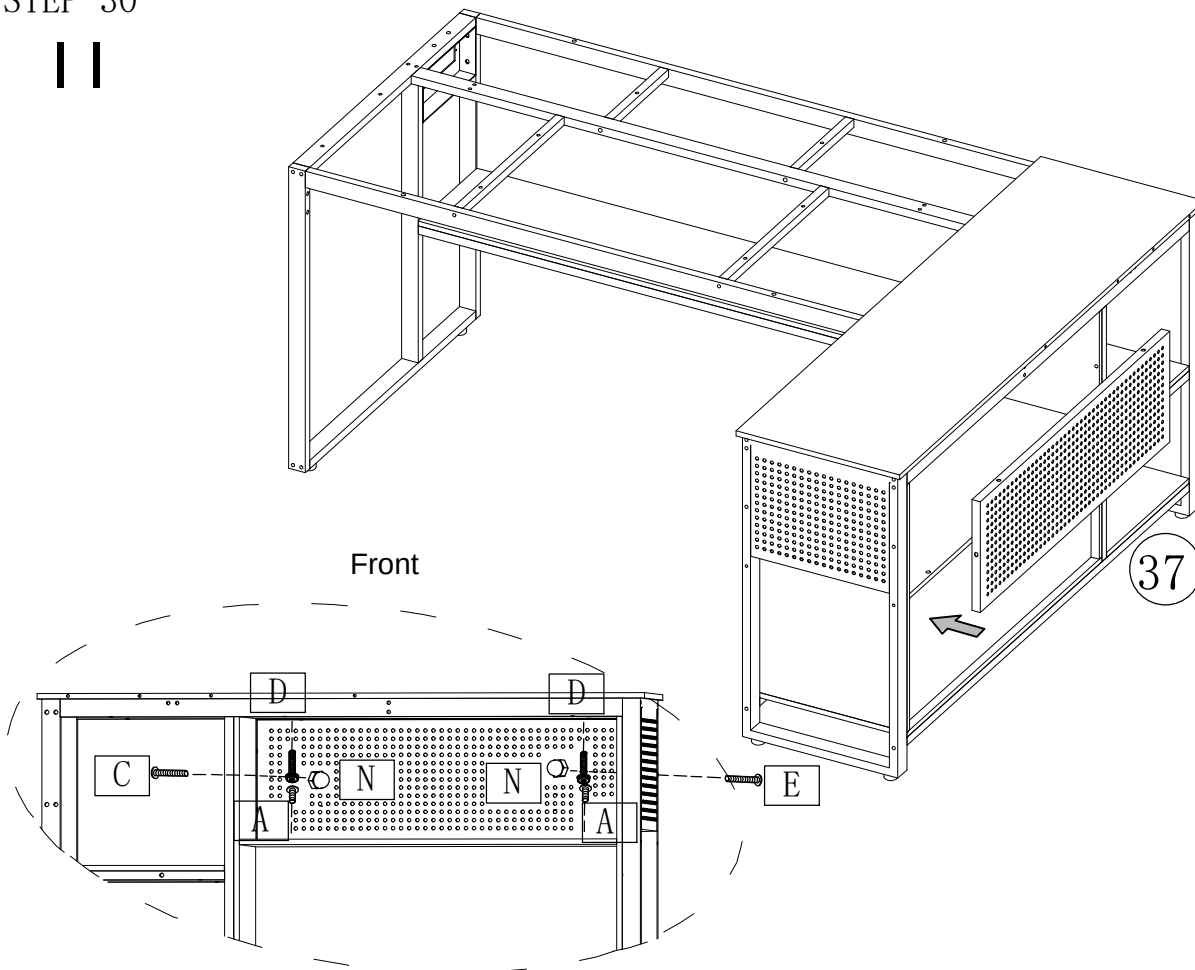


D	M6x50mm
	*2
A	M6x10mm
	*2
C	M6x40mm
	*1
E	M6x60mm
	*1
N	M6
	*2

ASSEMBLY INSTRUCTION

STEP 31


||

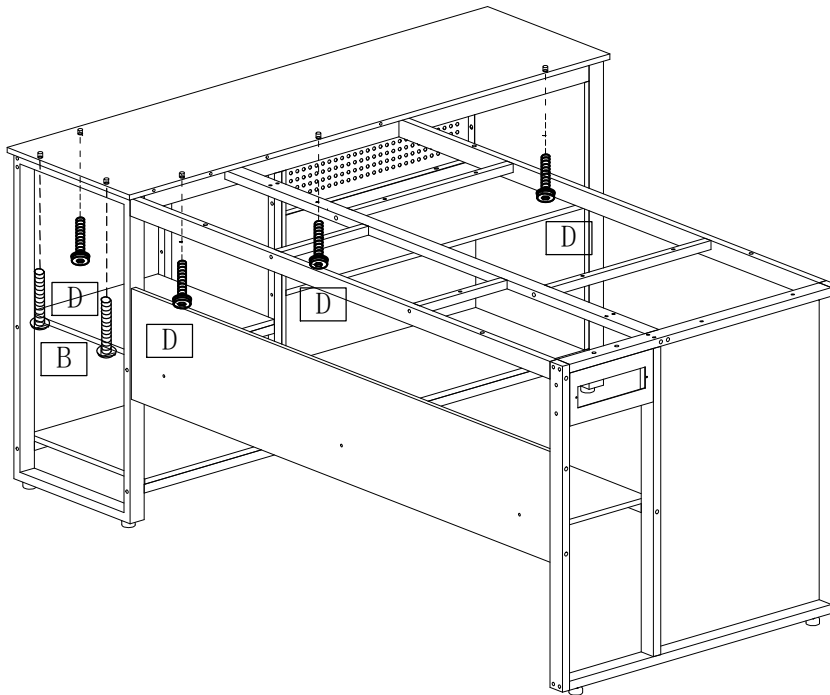

D	M6x50mm
	*4
B	M6x28mm
	*2

STEP32

||

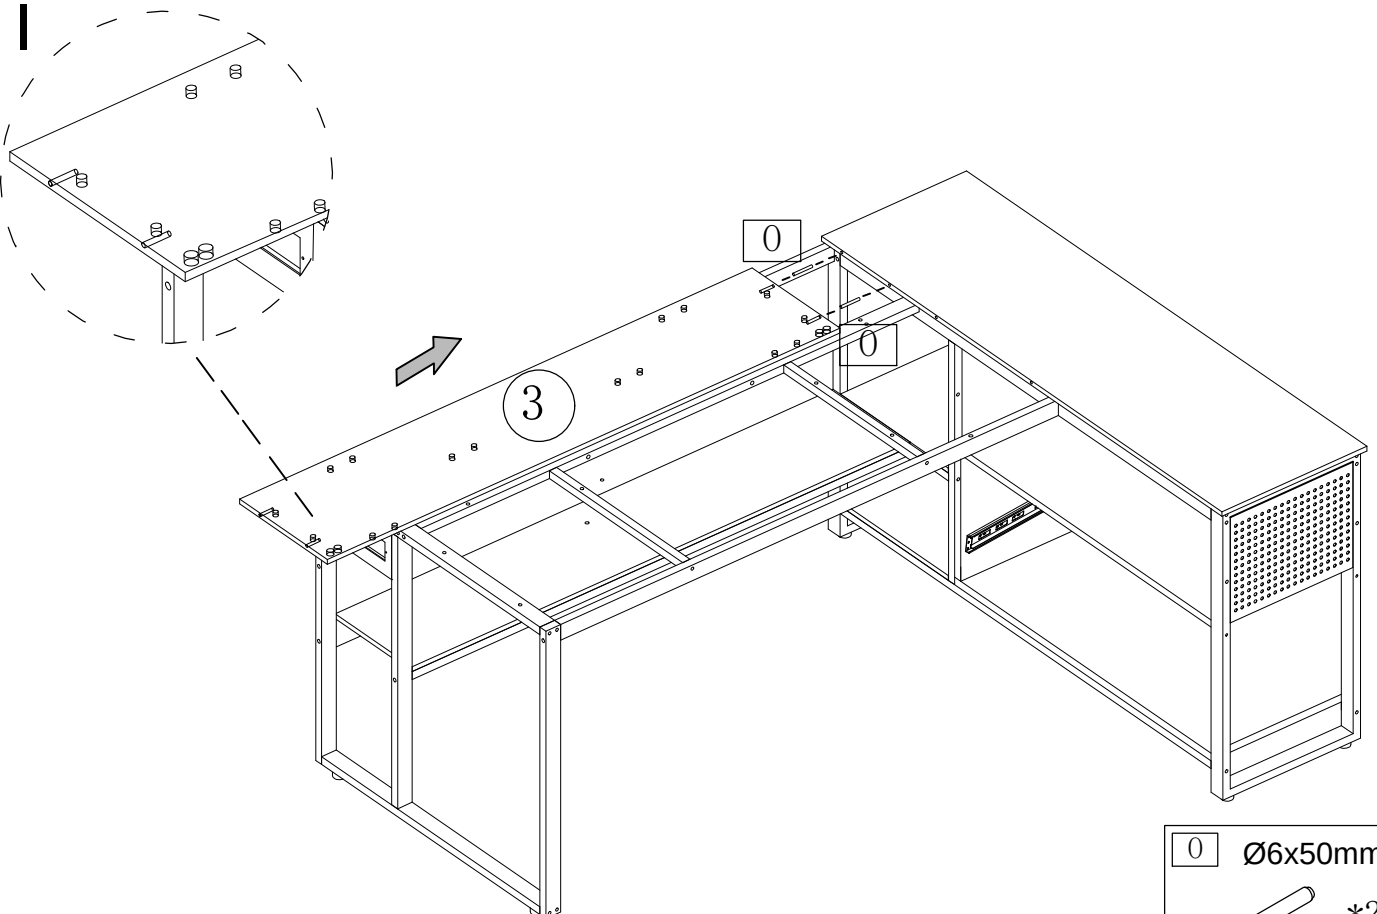


0	Ø6x50mm
	*2

ASSEMBLY INSTRUCTION

STEP 33


||

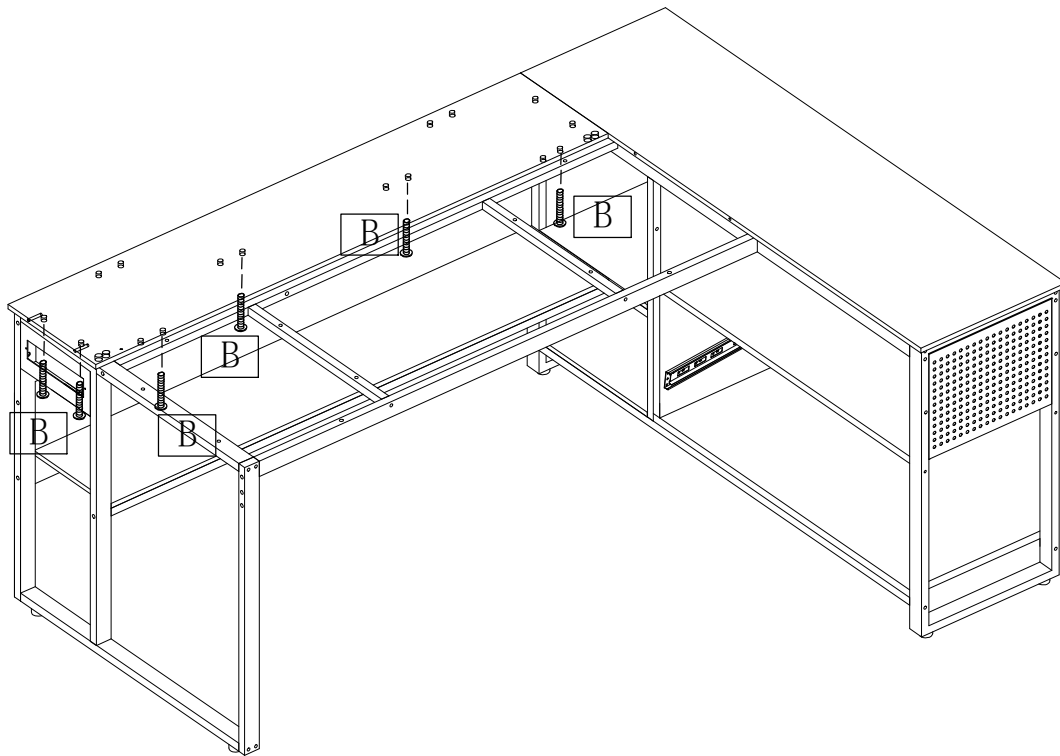

B M6x28mm
 *6

STEP 34

||


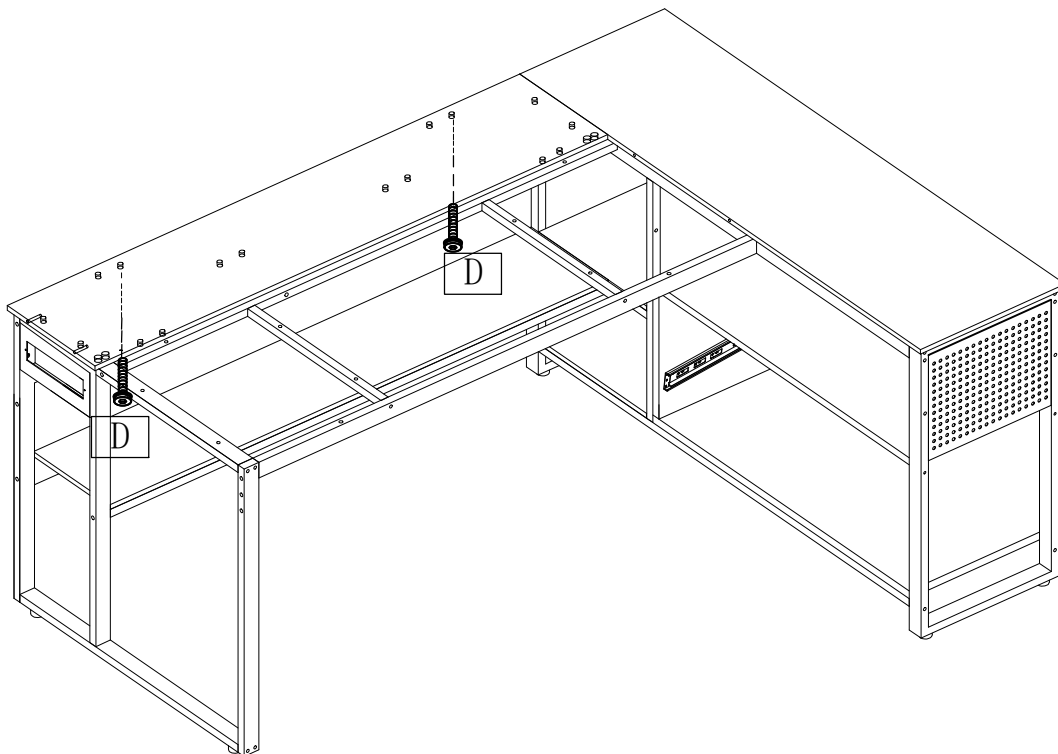


D M6x50mm
 *2

ASSEMBLY INSTRUCTION


STEP 35

||

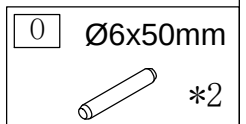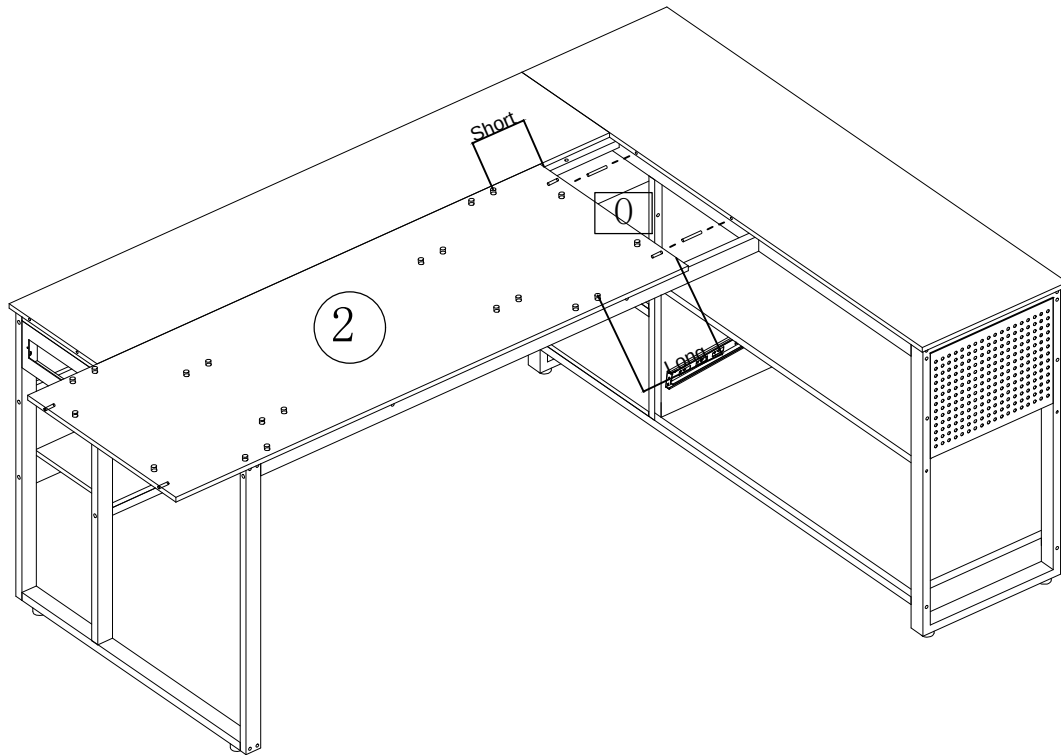

STEP 36


||

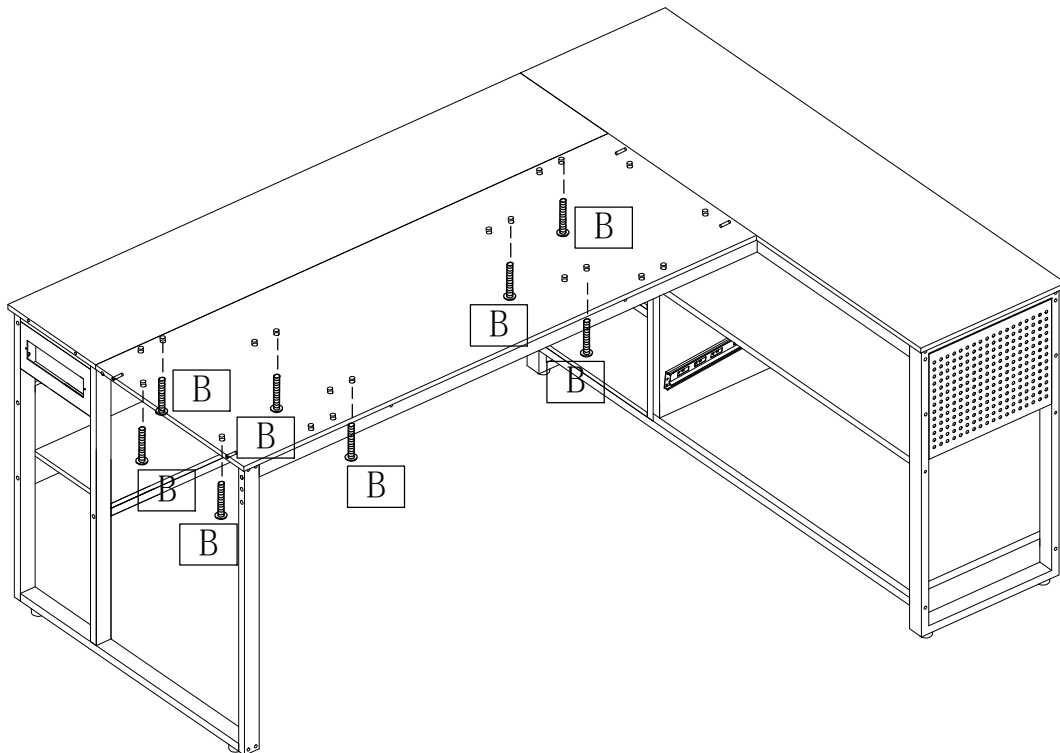

ASSEMBLY INSTRUCTION

STEP 37


||

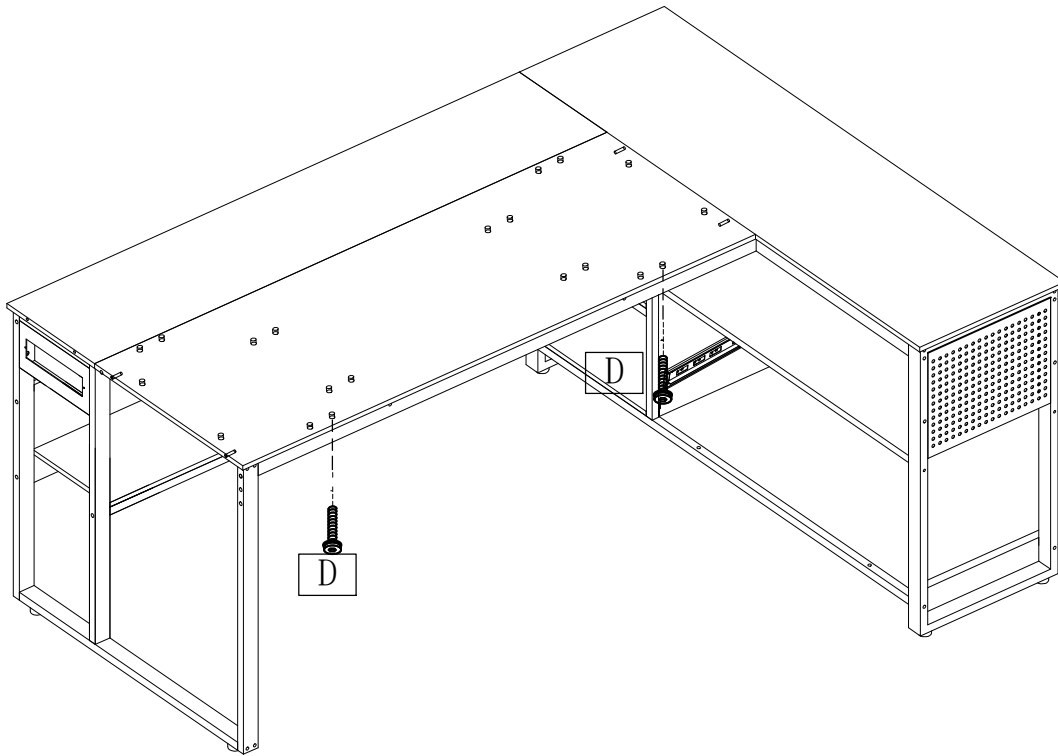

D M6x50mm
 *2


STEP 38

||

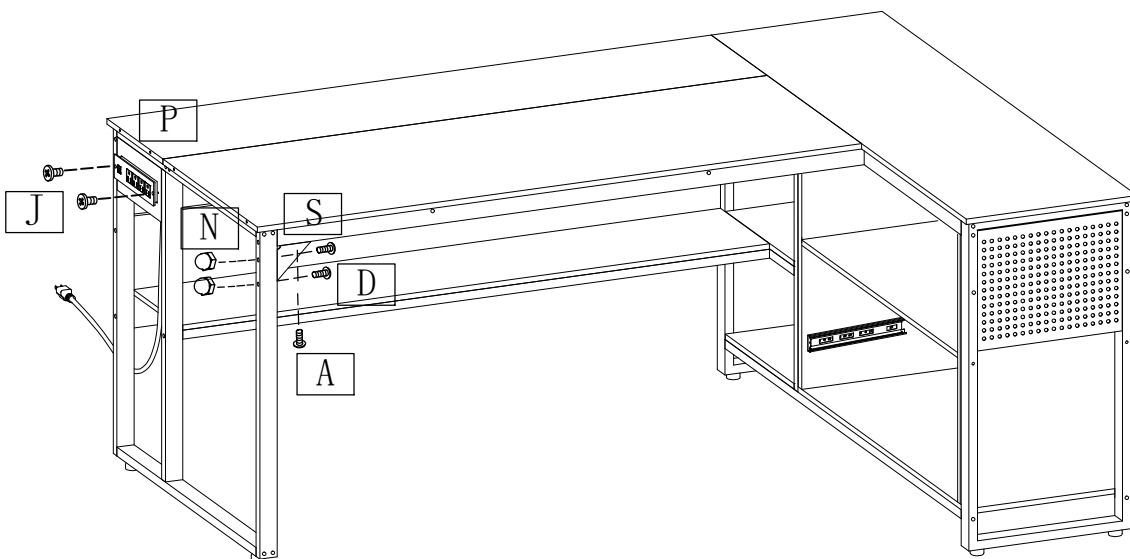

D M6x50mm
 *2

N M6
 *2

S
 *1

J M4x8mm
 *2


A M6x10mm
 *1

P
 *1

ASSEMBLY INSTRUCTION


STEP 39

||

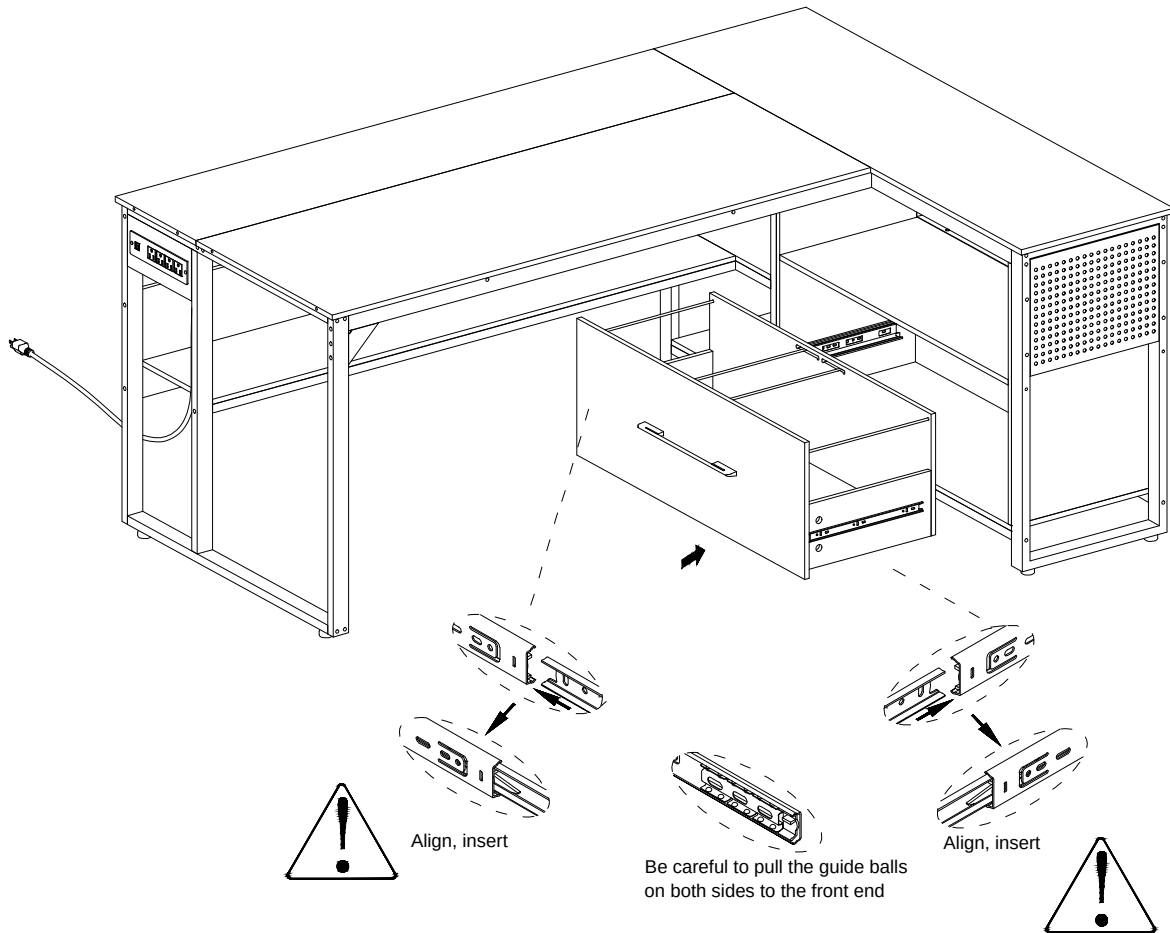

STEP 40

||

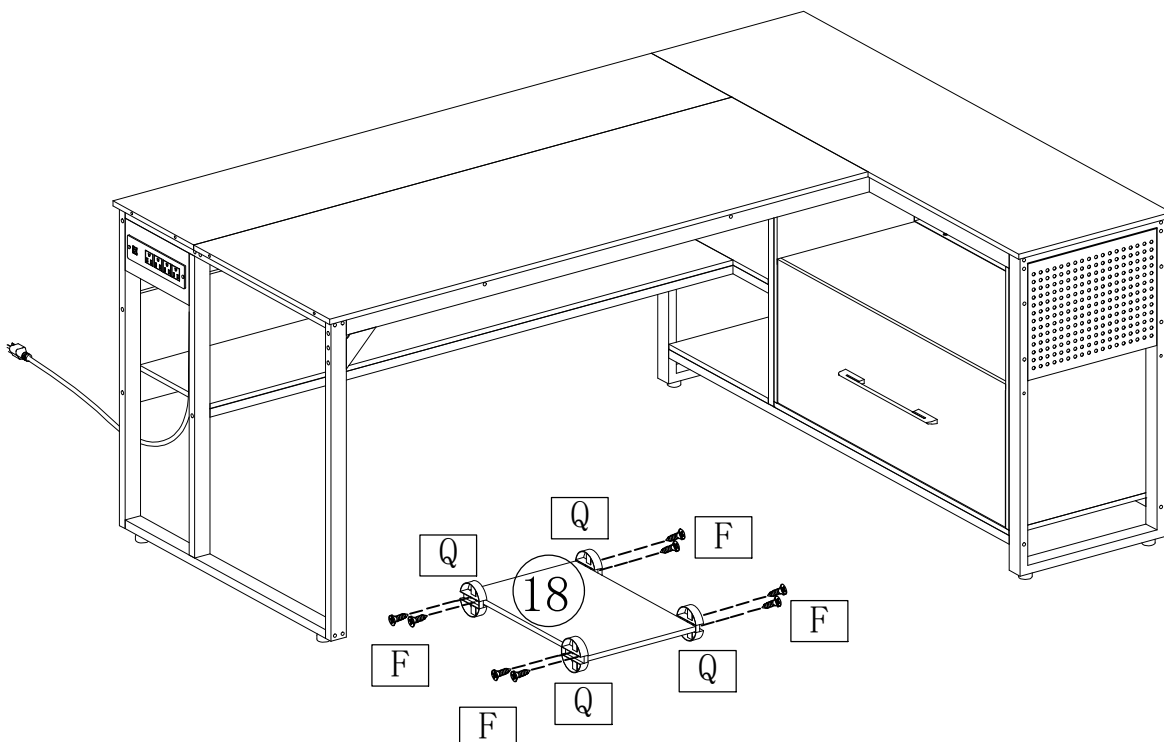


Q		*4
F	M3.5x12mm	
		*8

ASSEMBLY INSTRUCTION

STEP 41

||

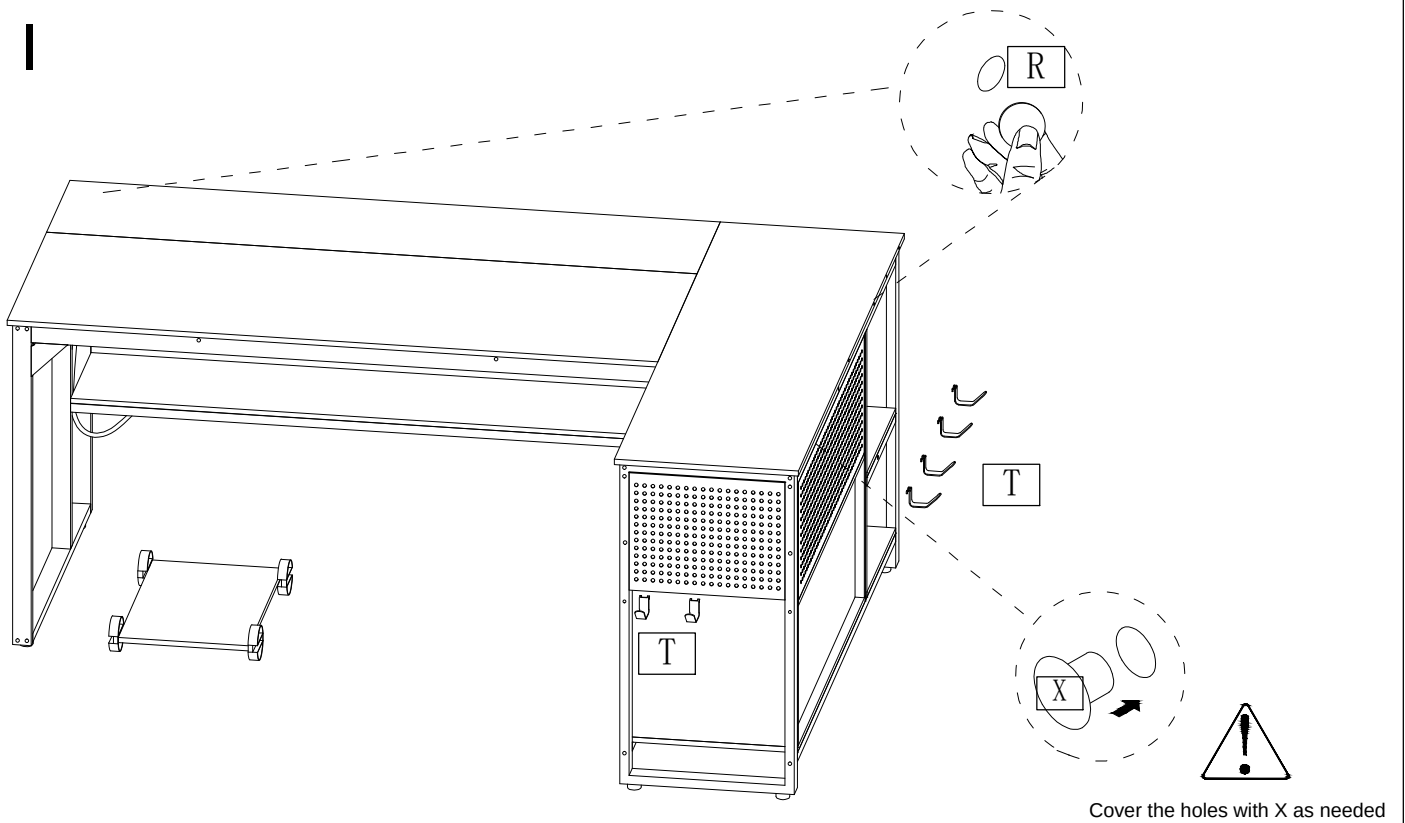

Cover the holes with X as needed

R Ø12mm	X	T
 *12	 *5	 *6

STEP 42

||

