


ASSEMBLY INSTRUCTION

STEP 1


Attach the Headboard Leg (C) to Headboard (A) as shown using JCBC Bolt (3), Spring Washer (4), Flat Washer (5) and fasten with Allen Wrench (1).

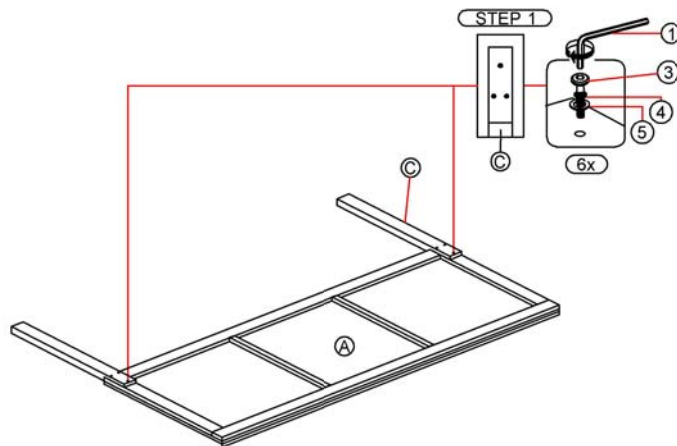

STEP 2

STEP 2:1 Loosen the bolt on Headboard Leg (C) and Hook the Side Rails (F) to Headboard Leg (C) closely and push down to fit.

STEP 2:2 Retighten the bolt using an Allen Wrench (2) as shown. Repeat the same step with other end of rail to hook onto Footboard (B).


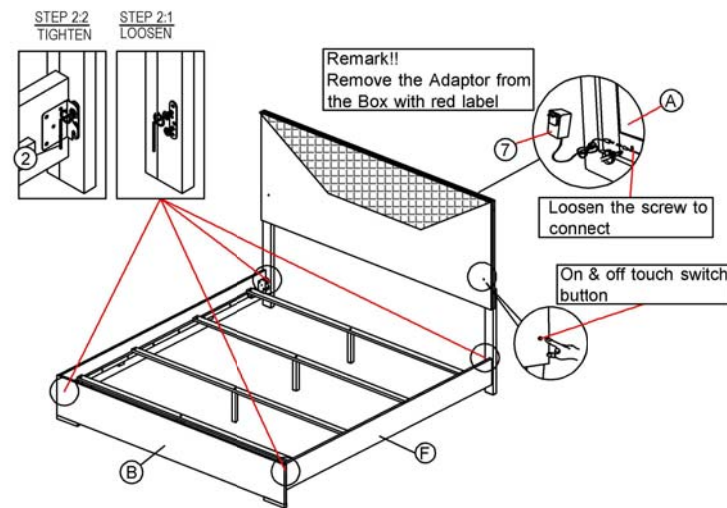


STEP 3

STEP 3:1 Fix the Bed Slats Support (E) to Bed Slats (D) as Shown.

STEP 3:2 Loosen or Tighten the Adjuster as necessary to level the Bed

STEP 3:3 Fix the Bed Slats (D) by push closely to Side Rail (F) by using Flat Head Chipboard Screw (6) as shown. Bed assembly should be done in final location to ensure stability.

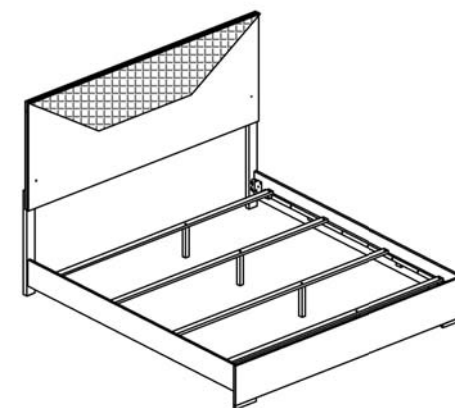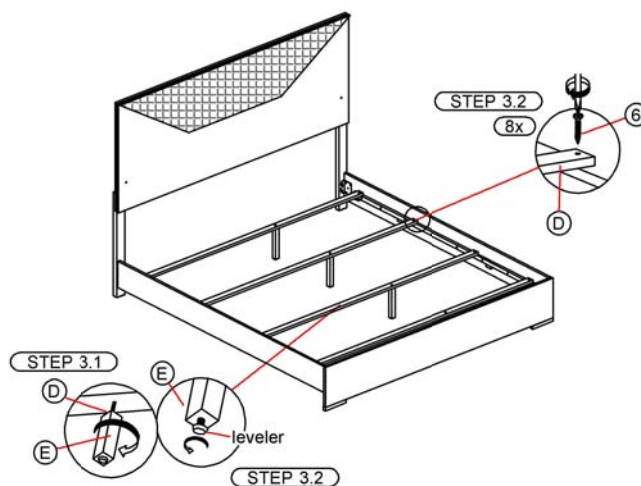

**COMPLETED
ASSEMBLY**

(BOX 1) BOX OF HEADBOARD

NO	ITEM	QTY
A	HEADBOARD	1
B	FOOTBOARD	1
C	HEADBOARD LEG L/R	2
D	BED SLATS	4
E	BED SLATS SUPPORT	4

(BOX 2) BOX OF SIDE RAIL

NO	ITEM	QTY
F	SIDE RAILS	2

(BOX 1) HARDWARE LIST

NO	ITEM	QTY
1	ALLEN WRENCH M4 X 65MM BLK	1
2	ALLEN WRENCH M5 X 65MM BLK	1
3	JCBC M6 X 30MM BLK	6
4	SPRING WASHER 1/14" BLK	6

NO	ITEM	QTY
5	FLAT WASHER 1/14"13MM MOD BLK	6
6	FLAT HEAD SCREW M4 X 32MM RBW	8
7	ADAPTOR 12V+12W+1A ADAPTOR WITH III CERTIFICATE	1

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.
DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.