




# ASSEMBLY INSTRUCTIONS

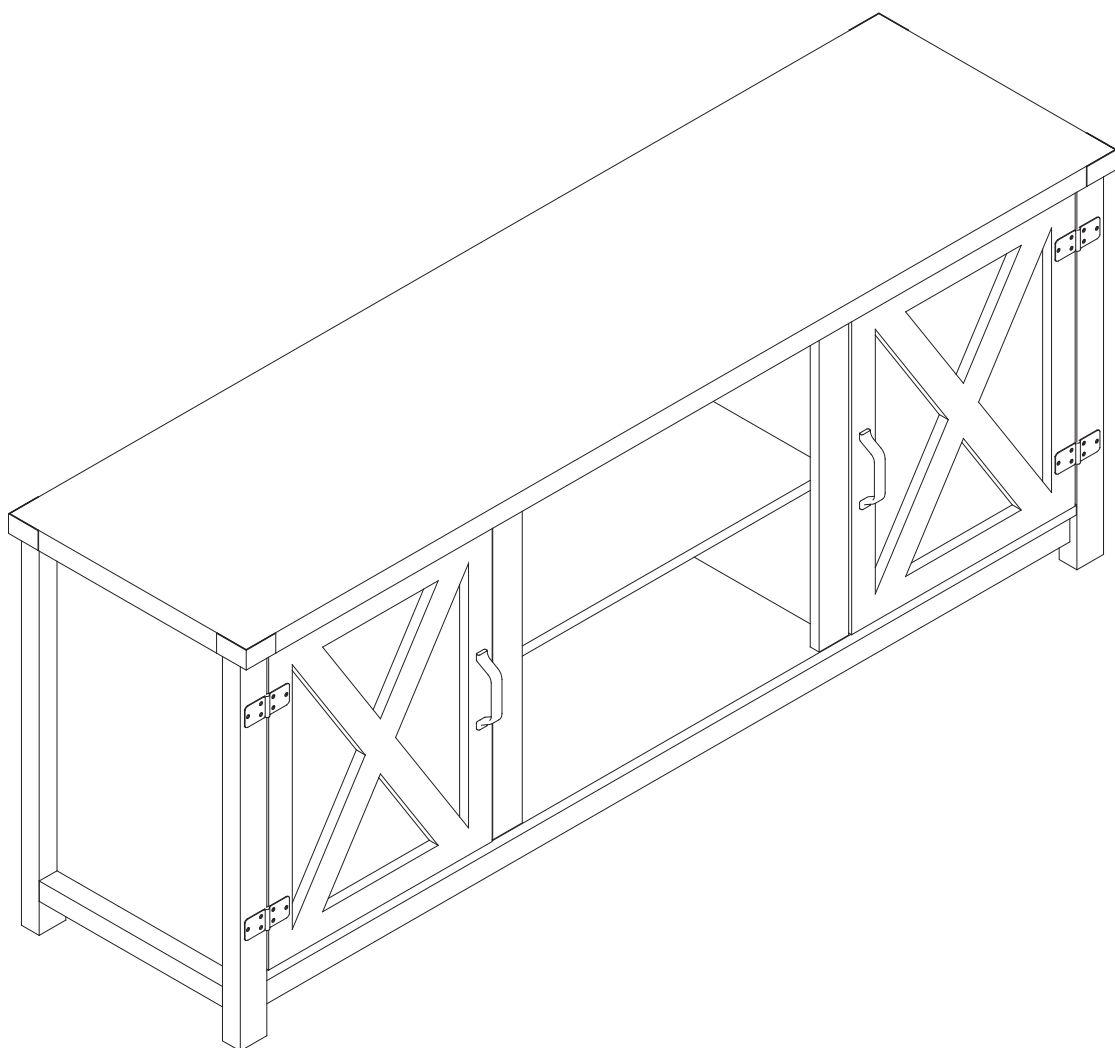

# WARNING!



**MAXIMUM LOAD**  
**220lb/100kg**

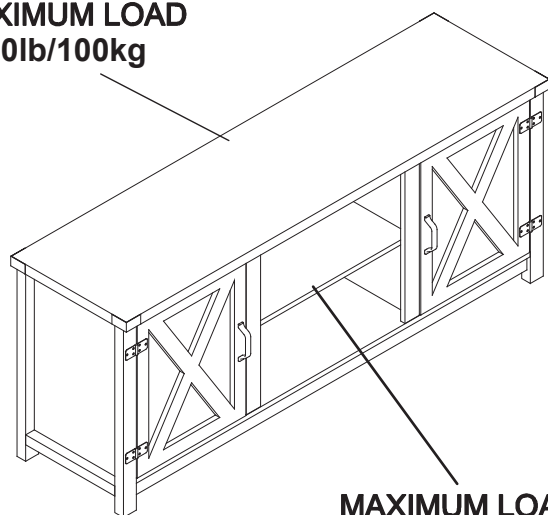


**MAXIMUM LOAD**  
**20 lb / 9.1kg**




Estimated Time for Assembly

**120 mins**

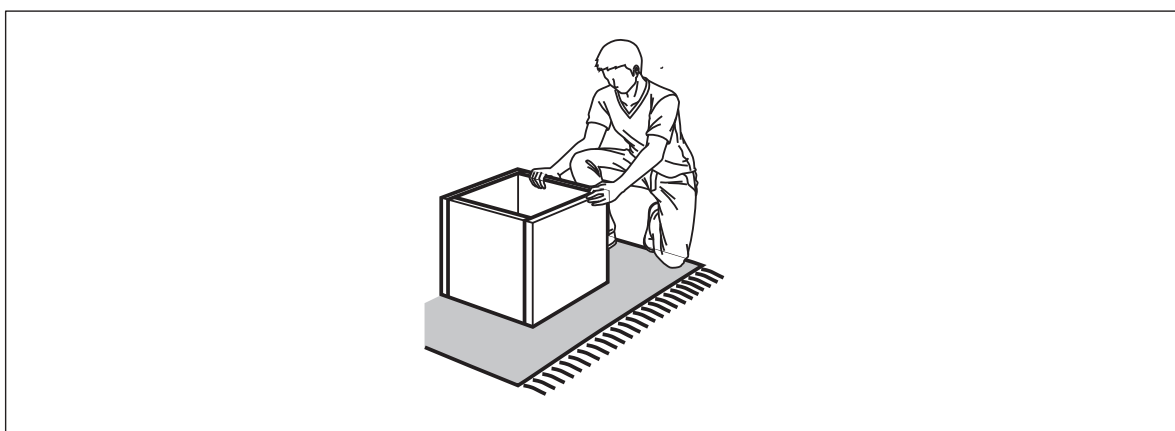

Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

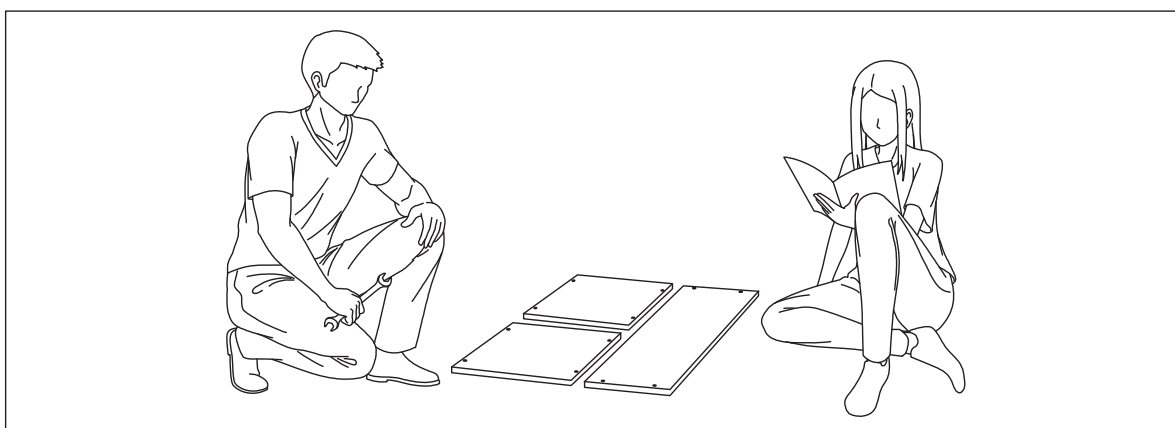


This furniture requires 2 people to assemble.

Make sure no parts are missing or damaged before assemble.

## Board Identification


Not actual size

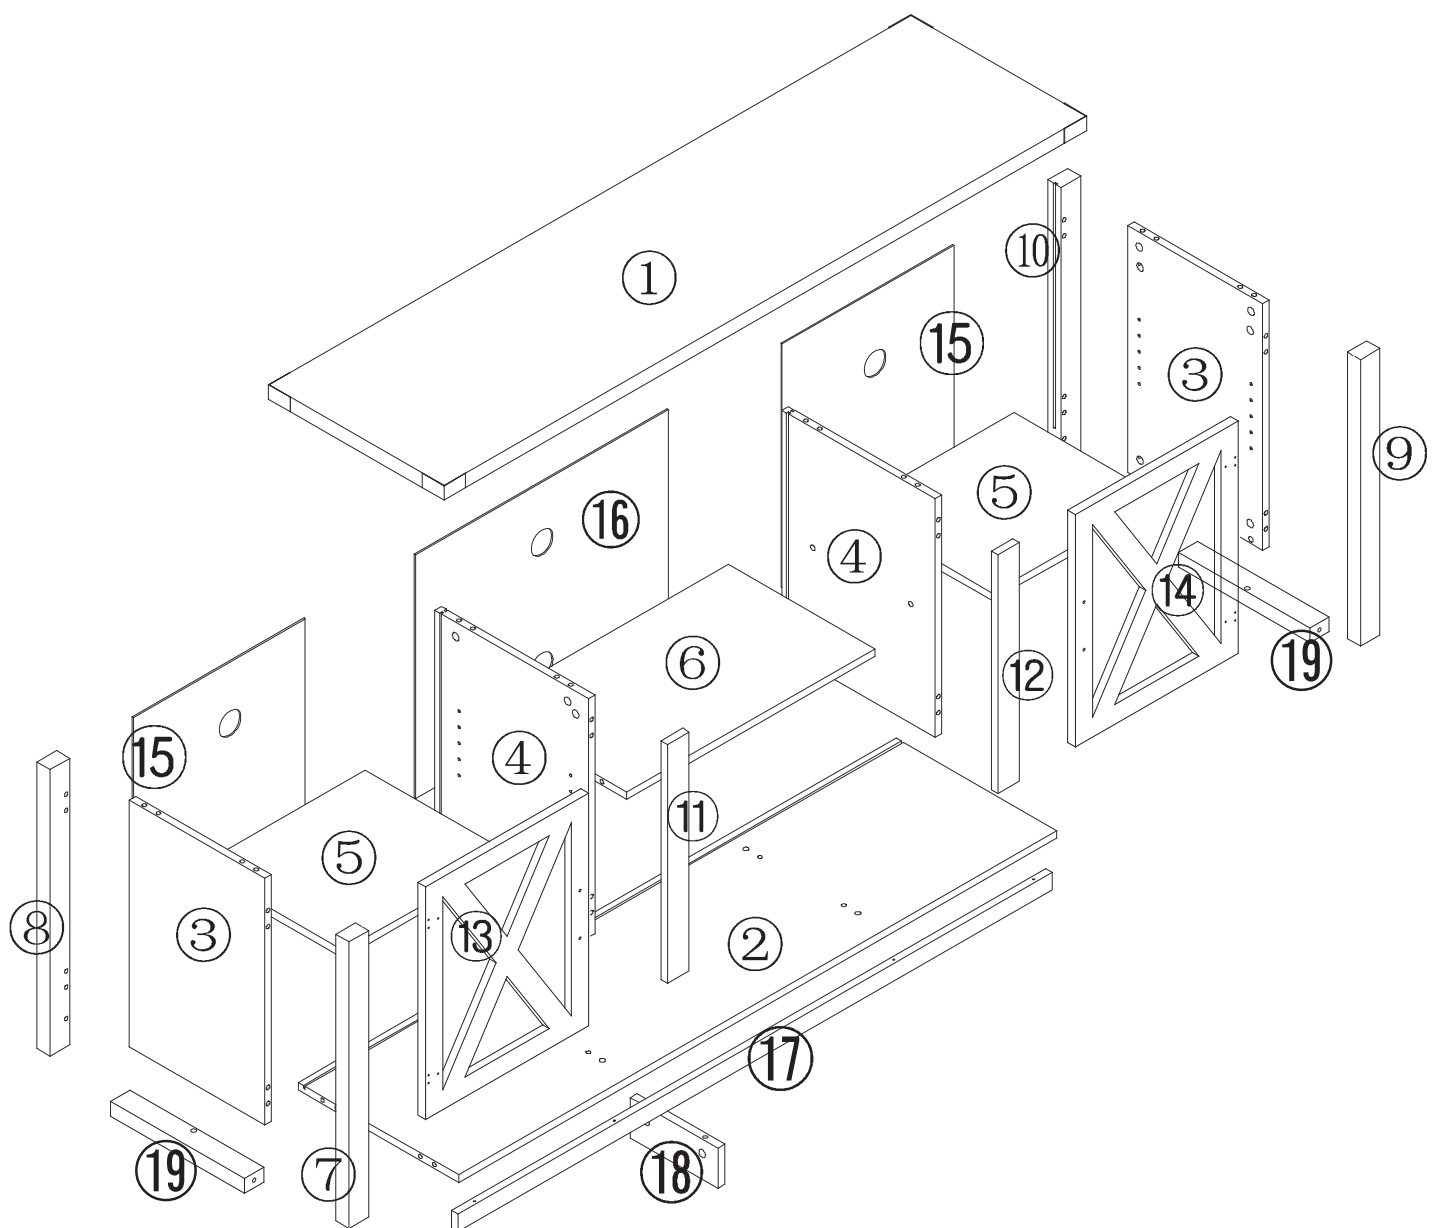


---

# Board Identification


Not actual size

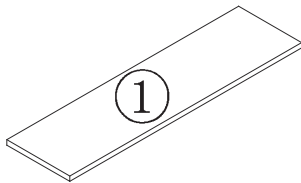


Top panel X1

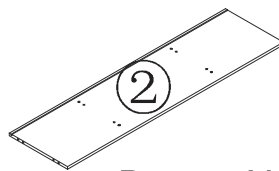


Bottom X1

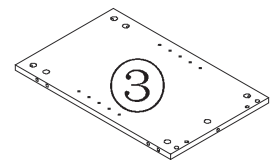


Side panel X2

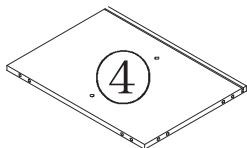


Vertical panel X2

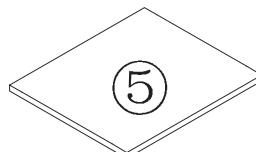


Adjustable shelf X2

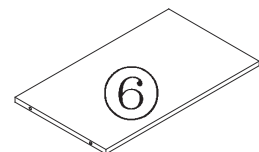


Shelf X1

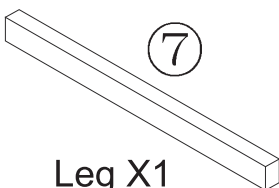


Leg X1

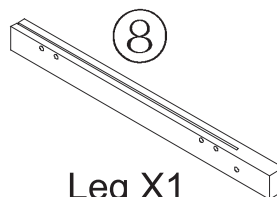

Leg X1

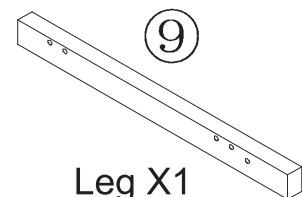

Leg X1

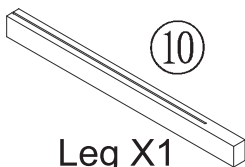


Leg X1




Mullion X1




Mullion X1

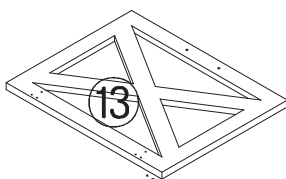


Left Door X1

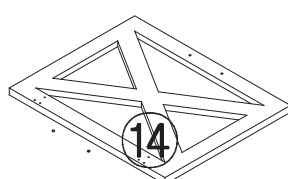


Right Door X1

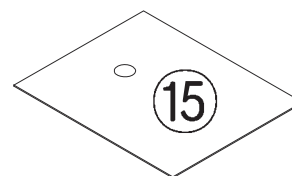


Back panel X2

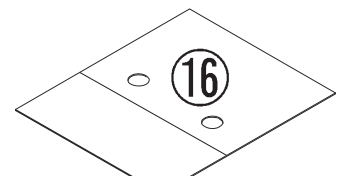


Back panel X1

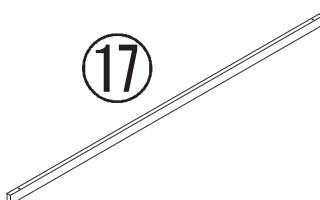

Bottom rail X1

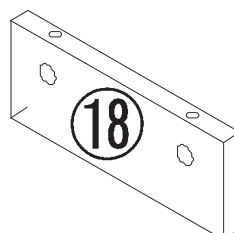

Support bracket X1




Bottom rail x2


---

# Hardware List


Actual size

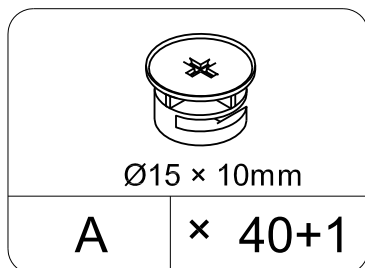


CAM LOCK

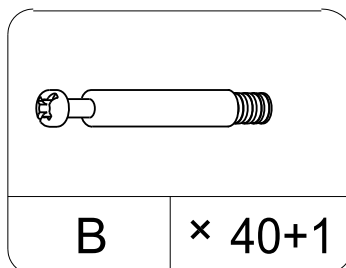


CAM BOLT

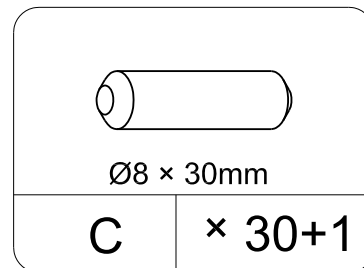


WOOD DOWEL

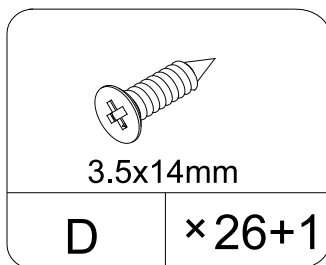


SCREW

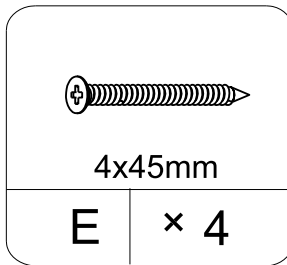


SCREW

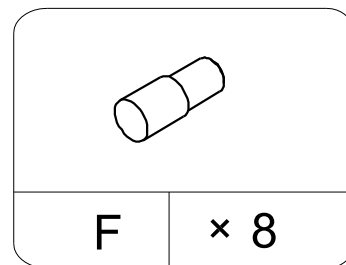


SUPPORT PIN

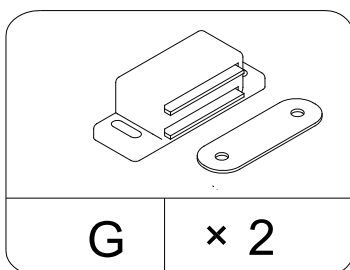


Rollfix

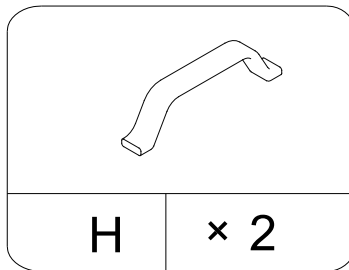


Handle

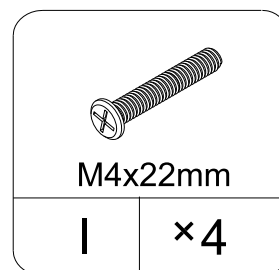


SCREW

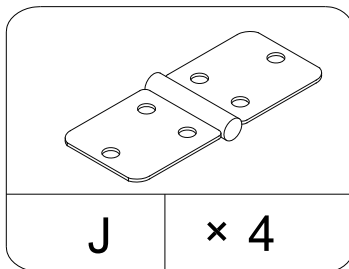


Furniture hinge

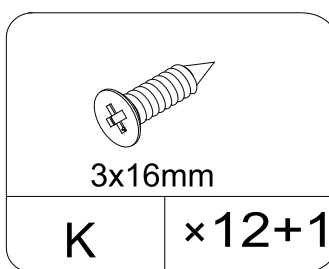

SCREW



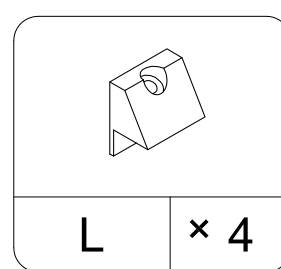


CAM BOLT

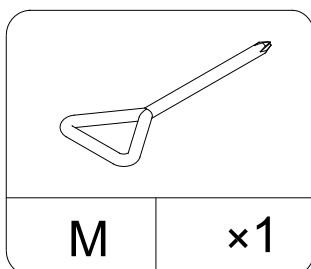


screwdriver



## STEP 1

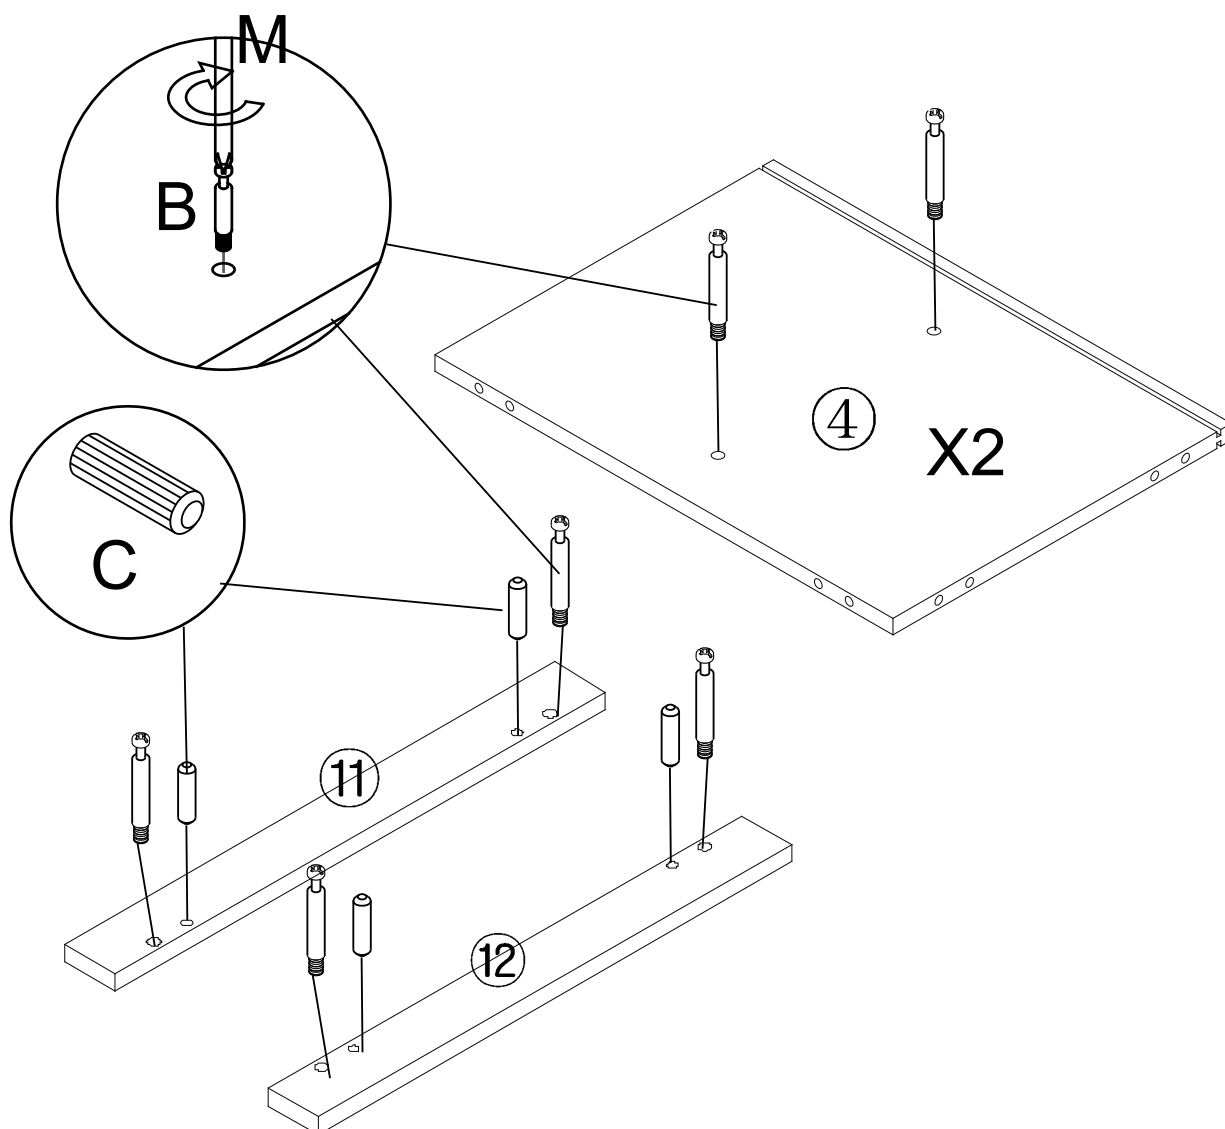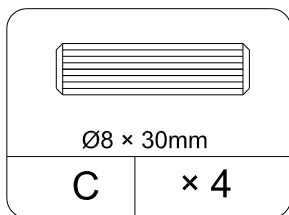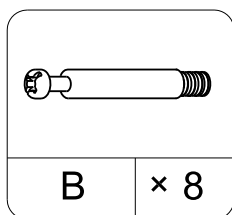




## STEP 2

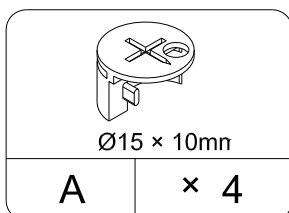


Push a CAM LOCK into the part  
The arrow in the CAM LOCK  
must point toward the hole on the  
edge of the board

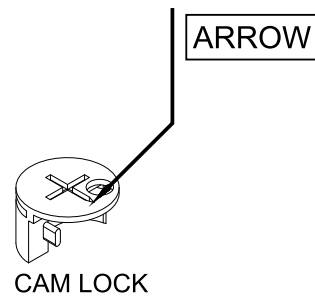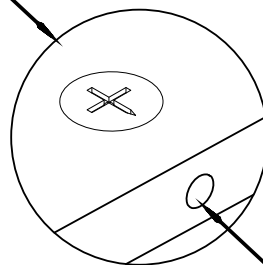



HOLE

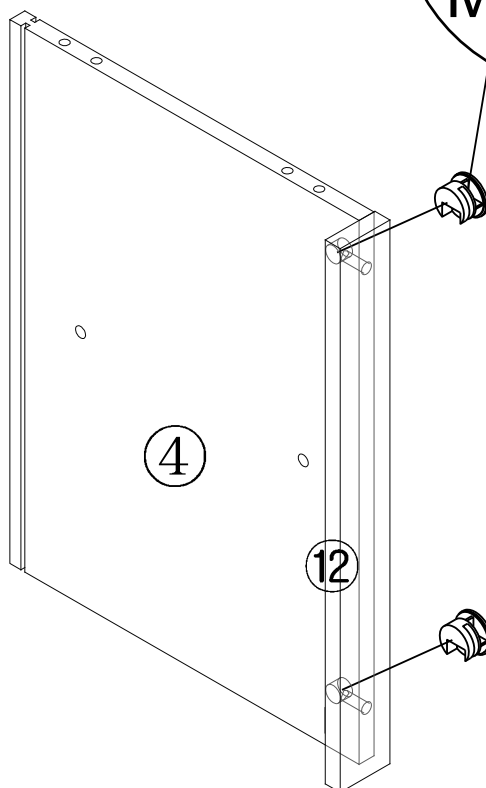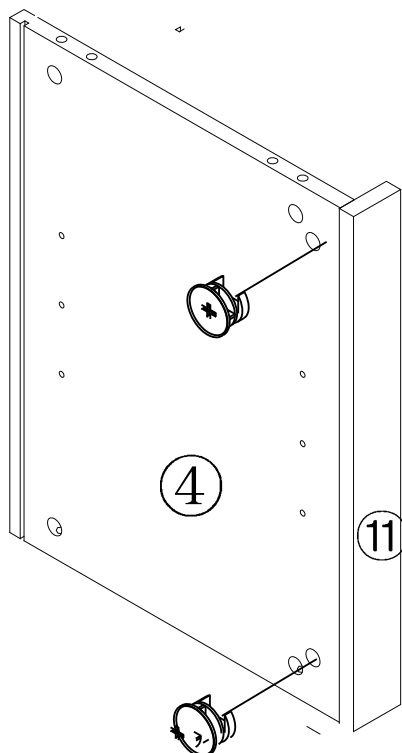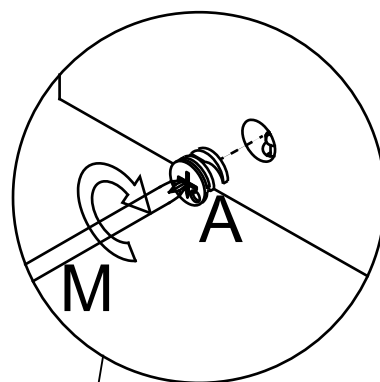



## STEP 3

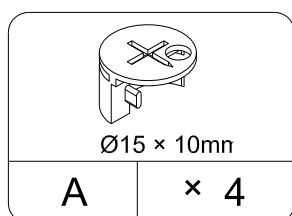

Push a CAM LOCK into the part  
The arrow in the CAM LOCK  
must point toward the hole on the  
edge of the board


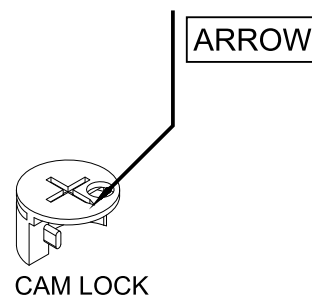
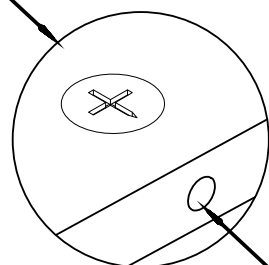


HOLE

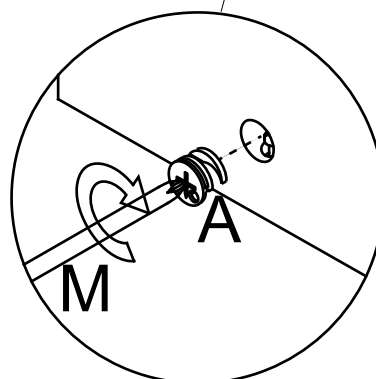
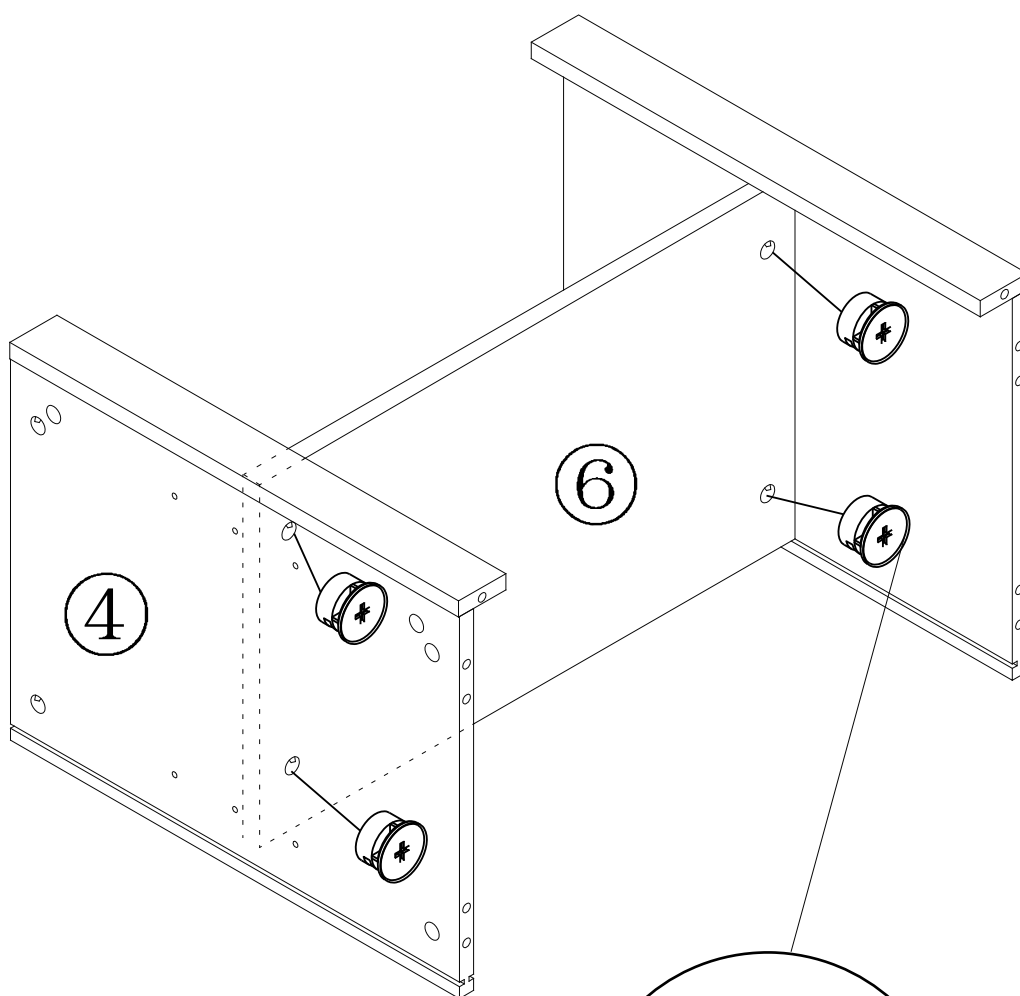





# STEP 4

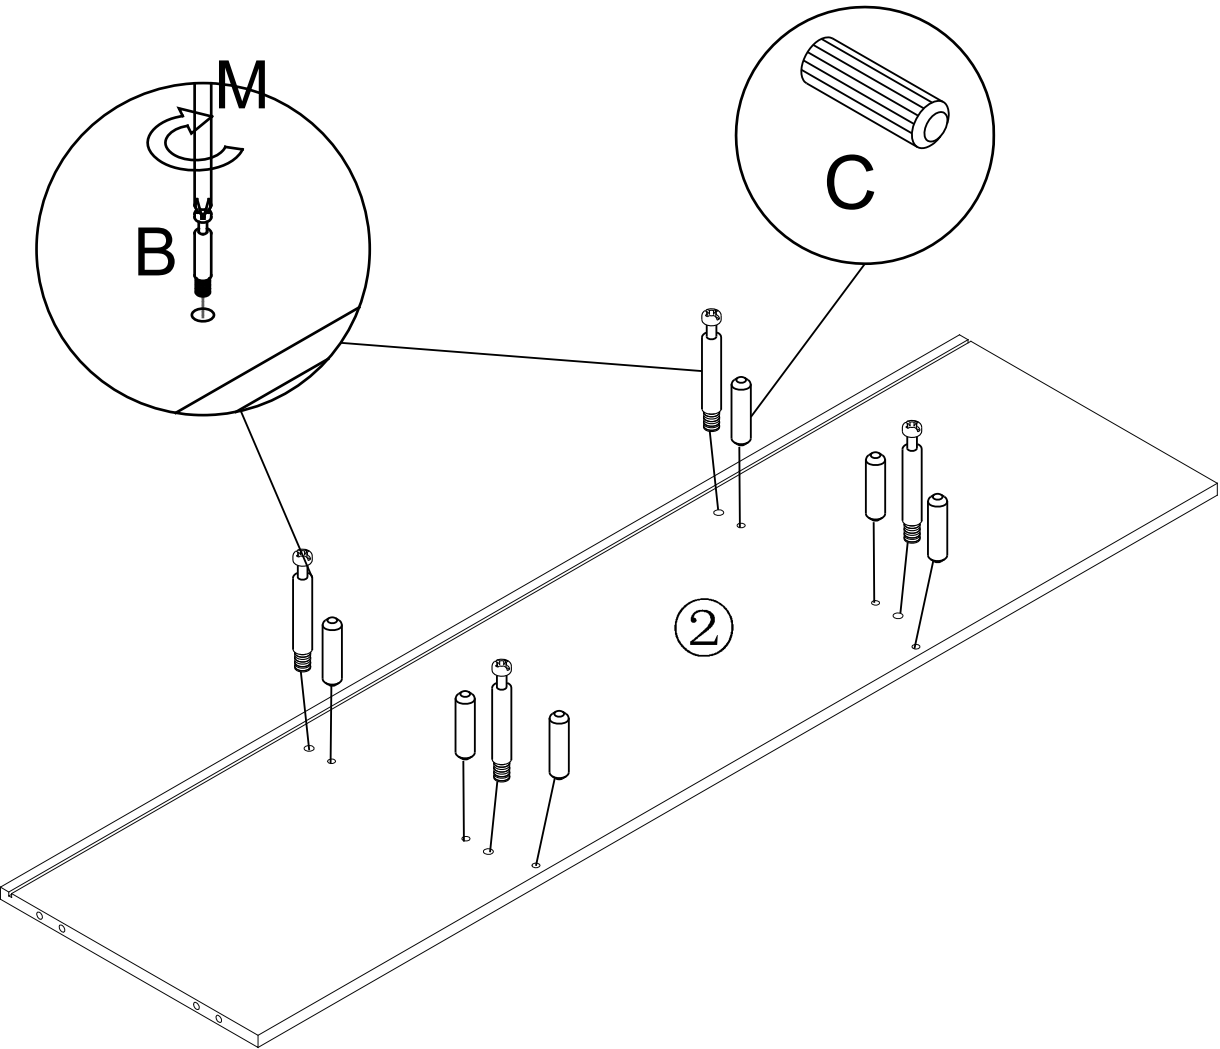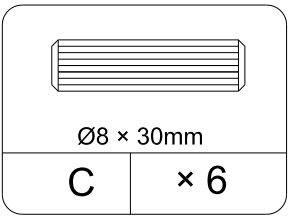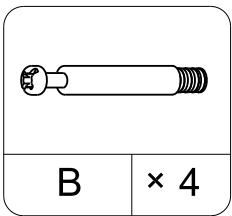



# STEP 5

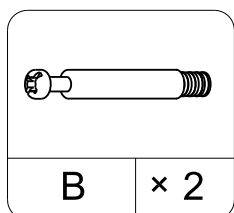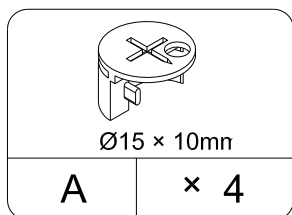




Push a CAM LOCK into the part  
The arrow in the CAM LOCK  
must point toward the hole on the  
edge of the board

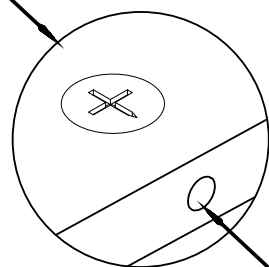

ARROW

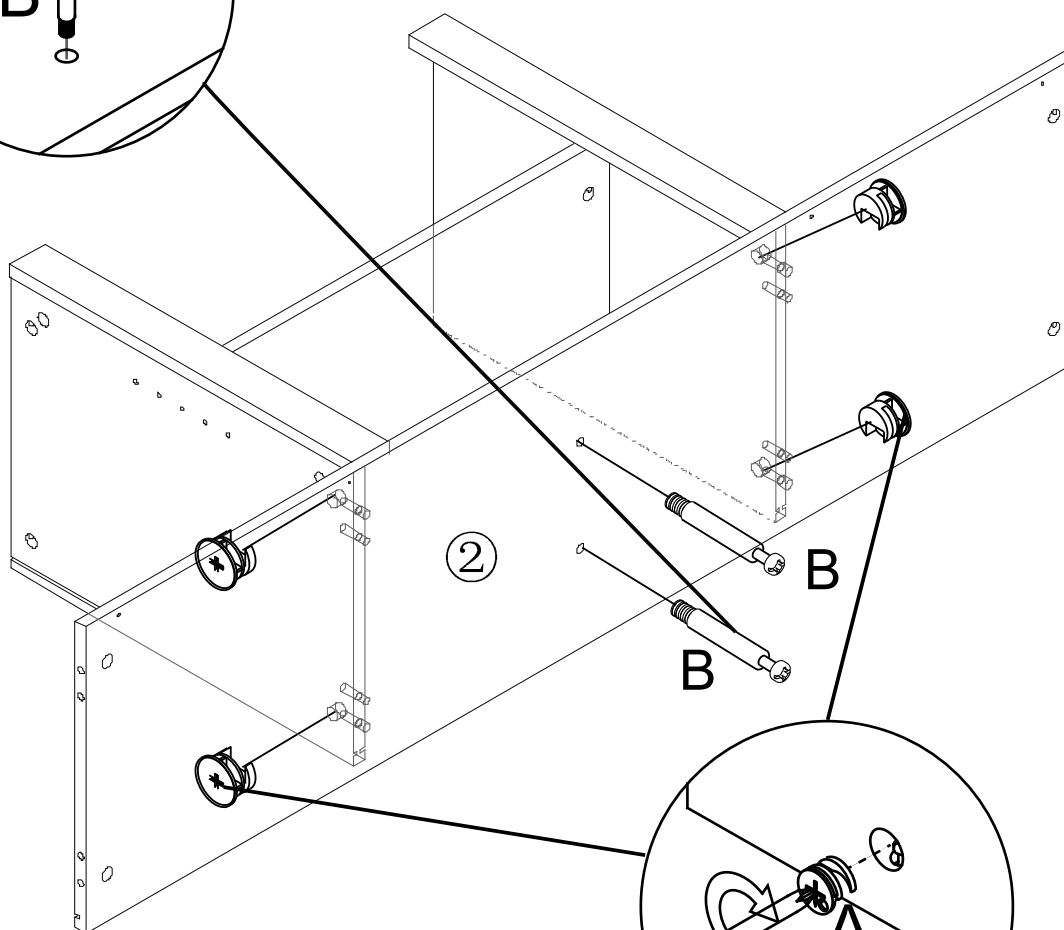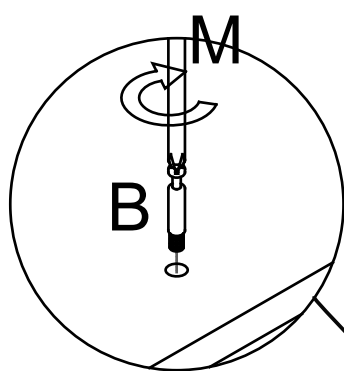






# STEP 6

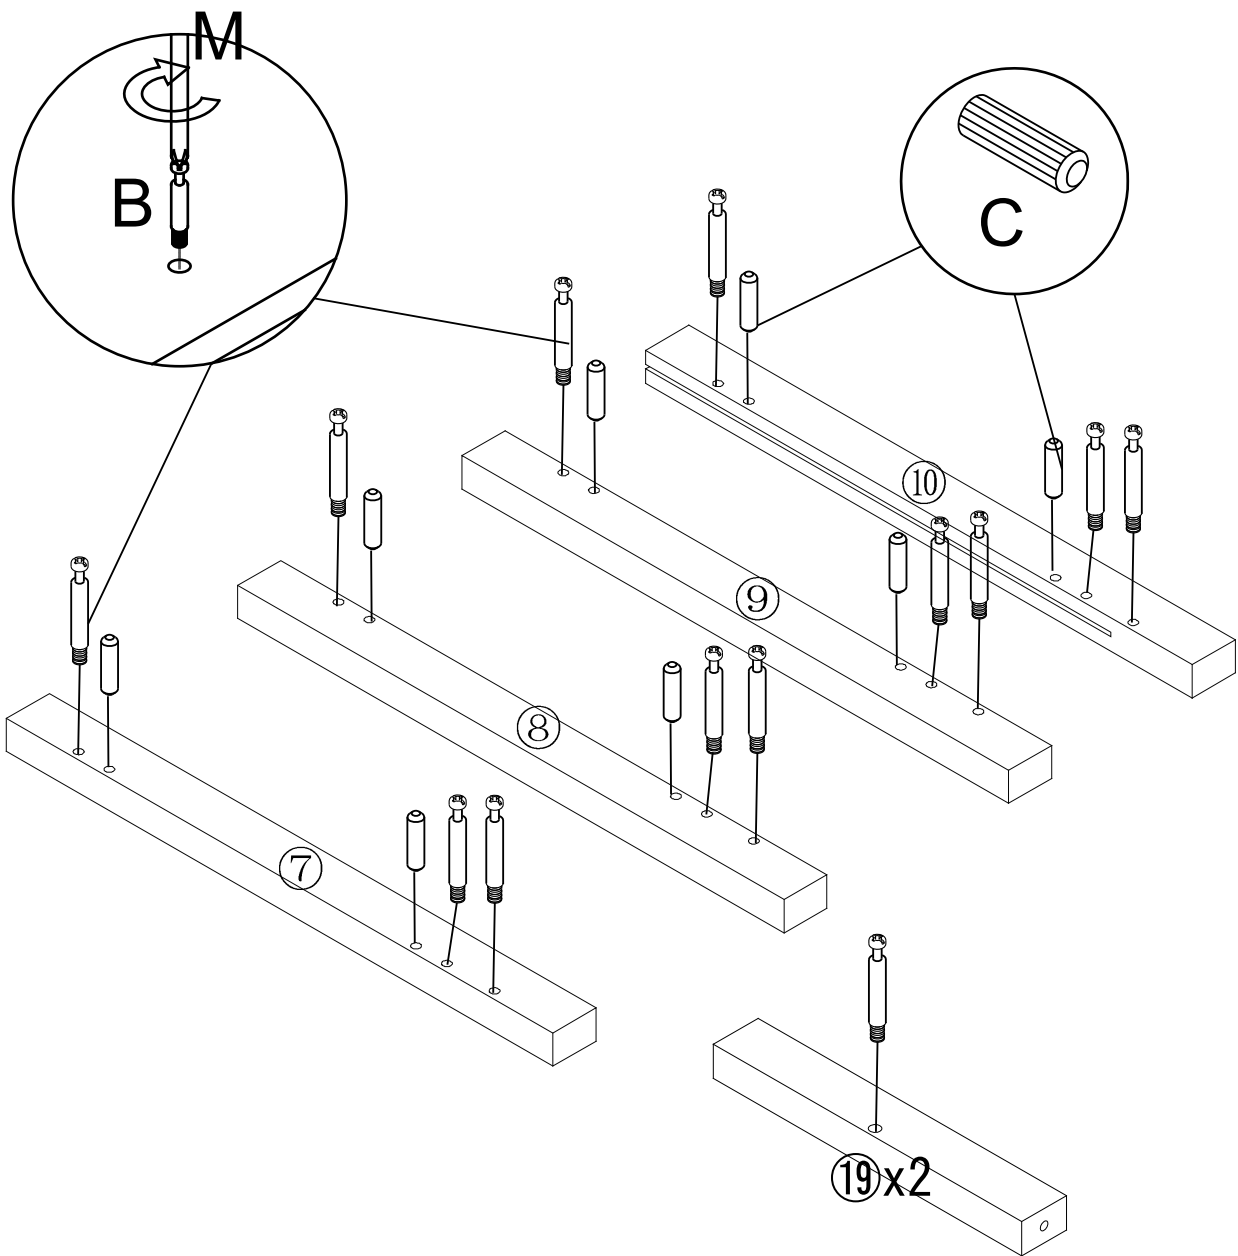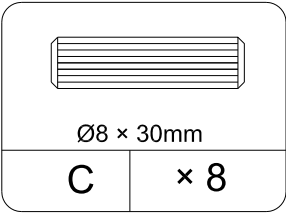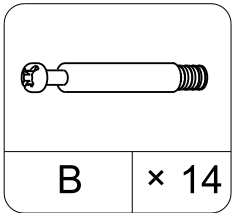

## STEP 7

Push a CAM LOCK into the part  
The arrow in the CAM LOCK  
must point toward the hole on the  
edge of the board




ARROW

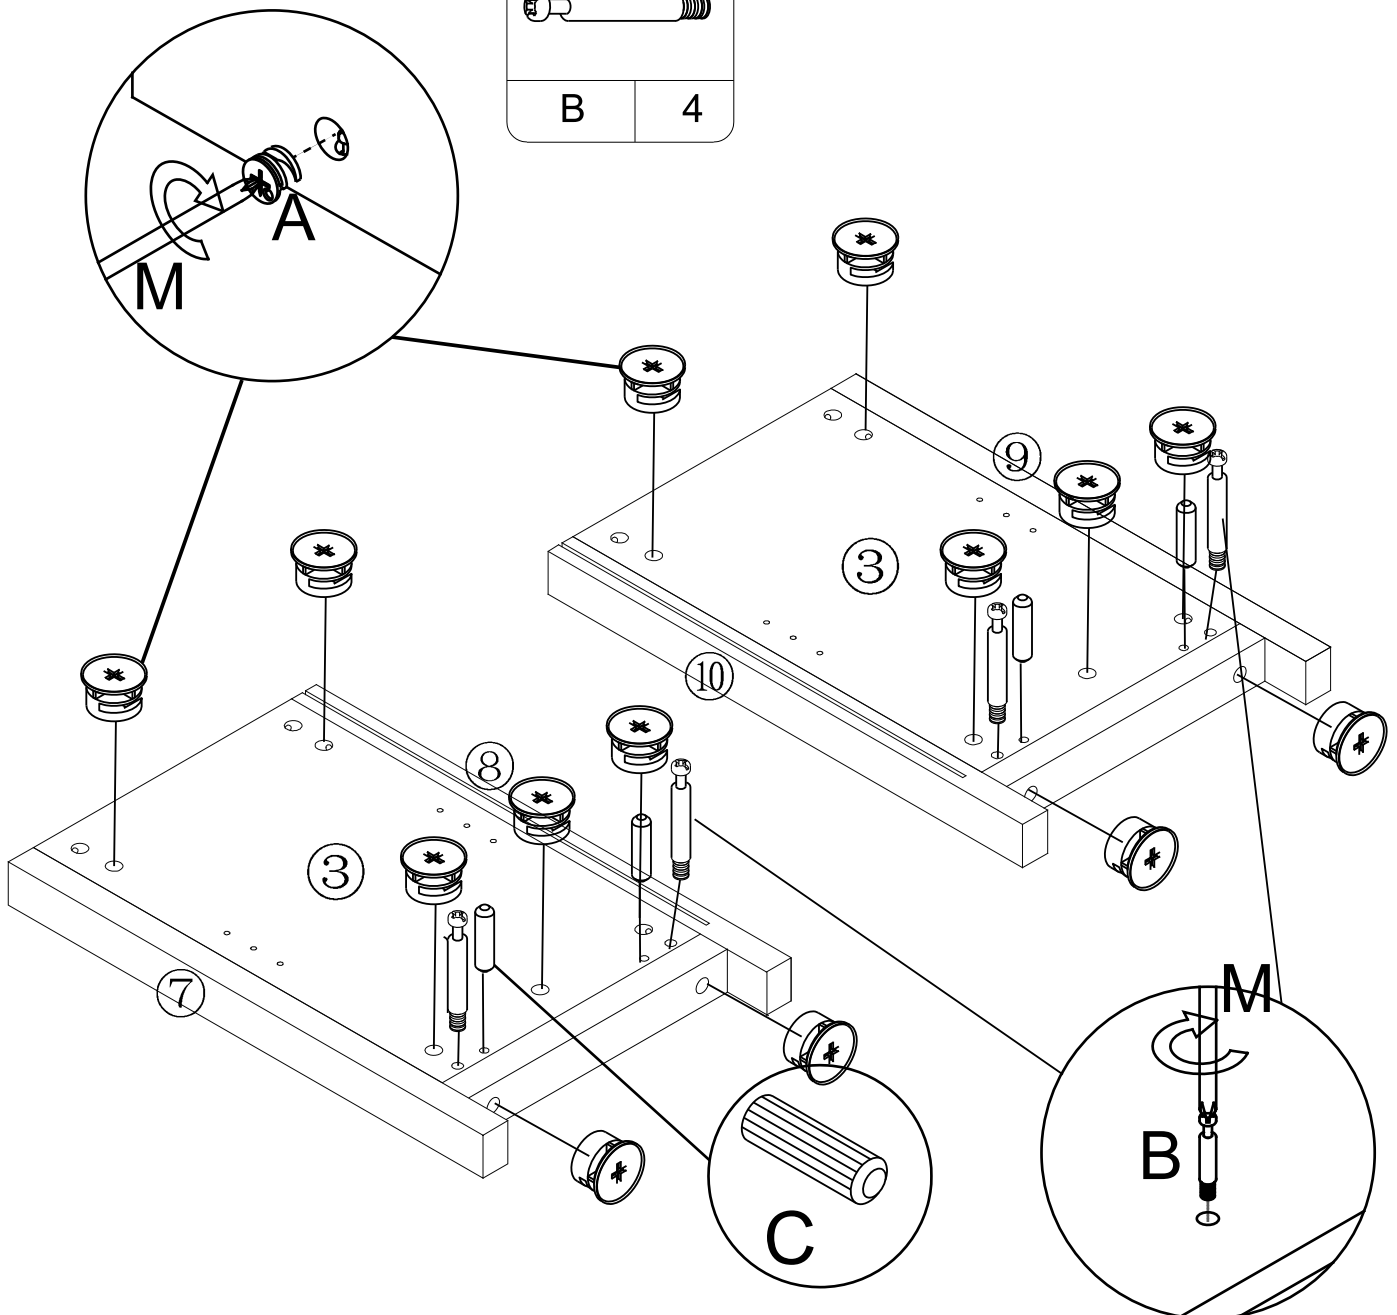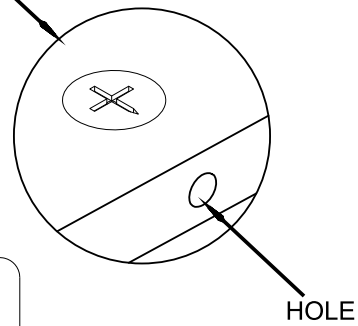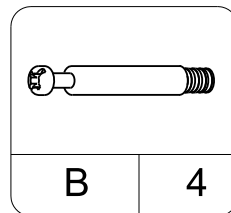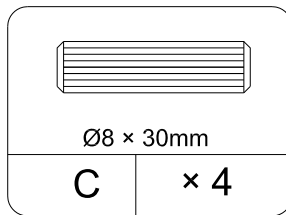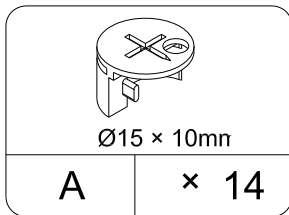



## STEP 8

Push a CAM LOCK into the part  
The arrow in the CAM LOCK  
must point toward the hole on the  
edge of the board

ARROW

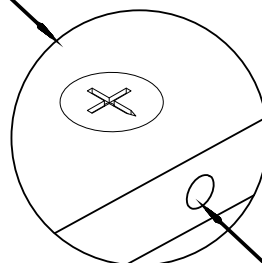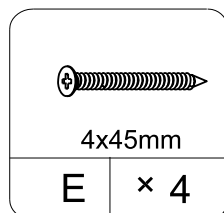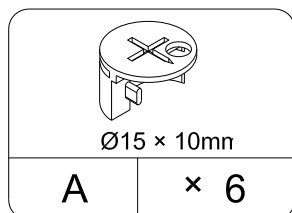


HOLE




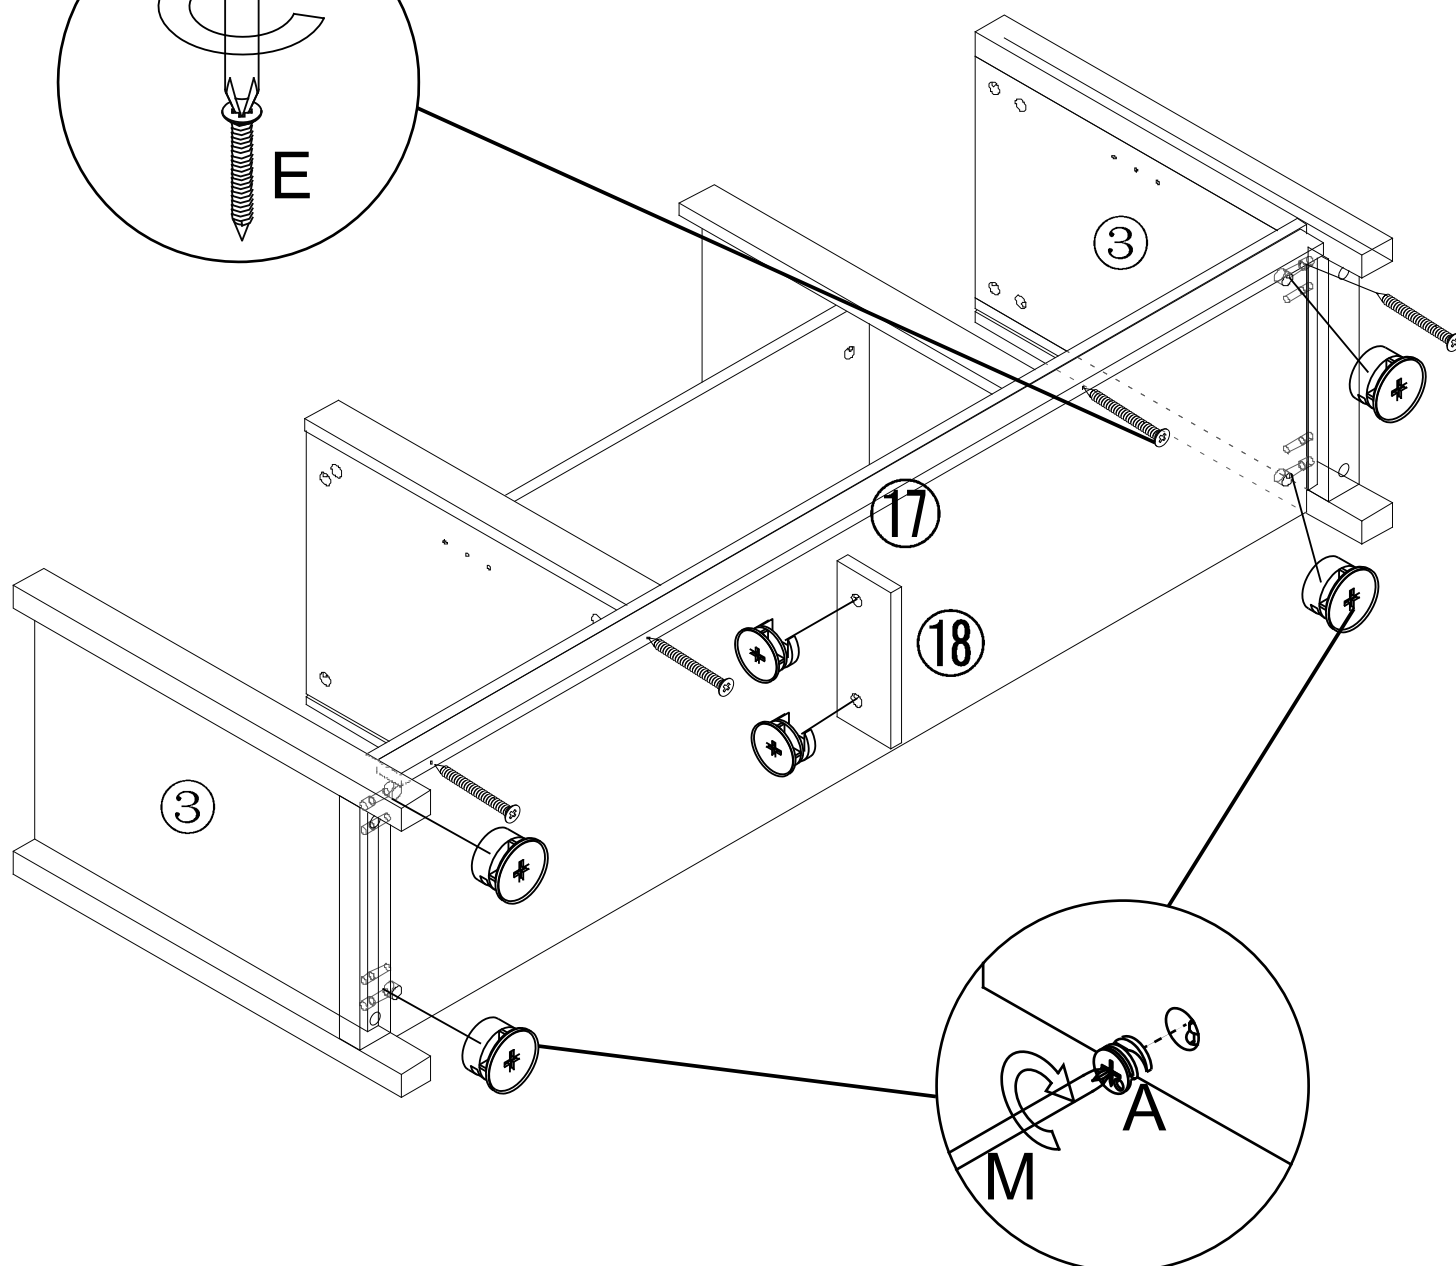
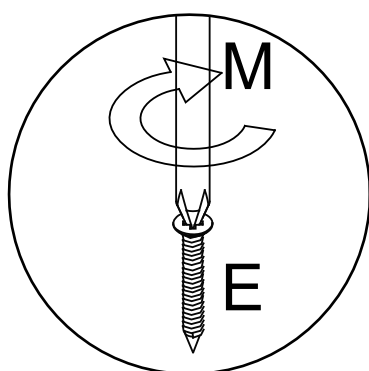


---


## STEP 9

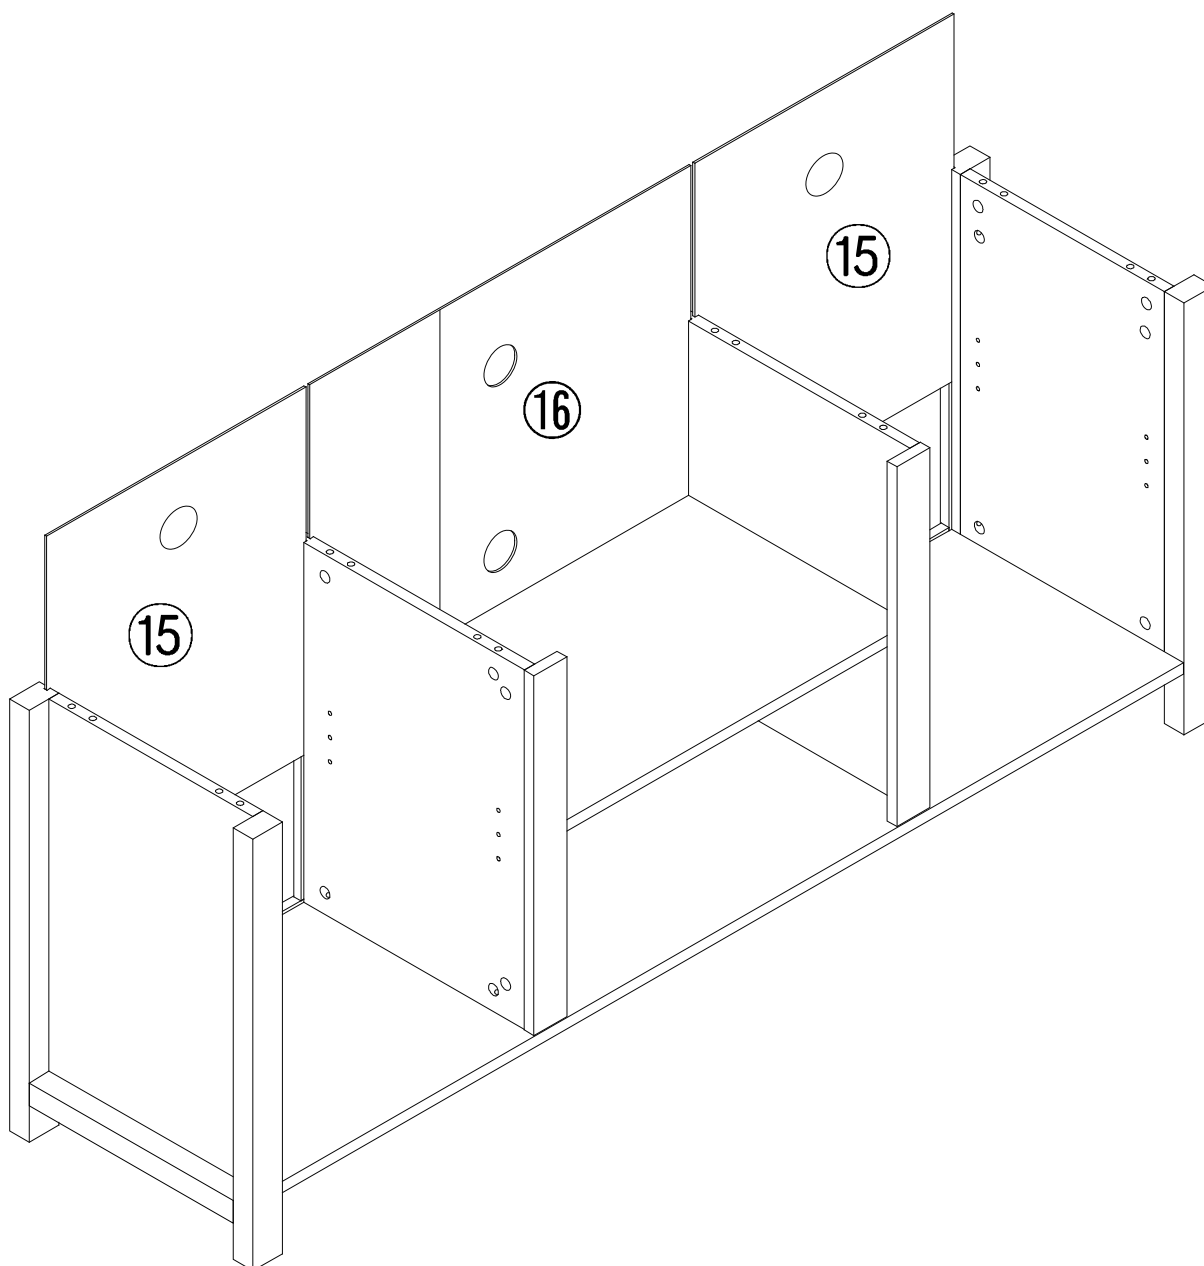


## STEP 10

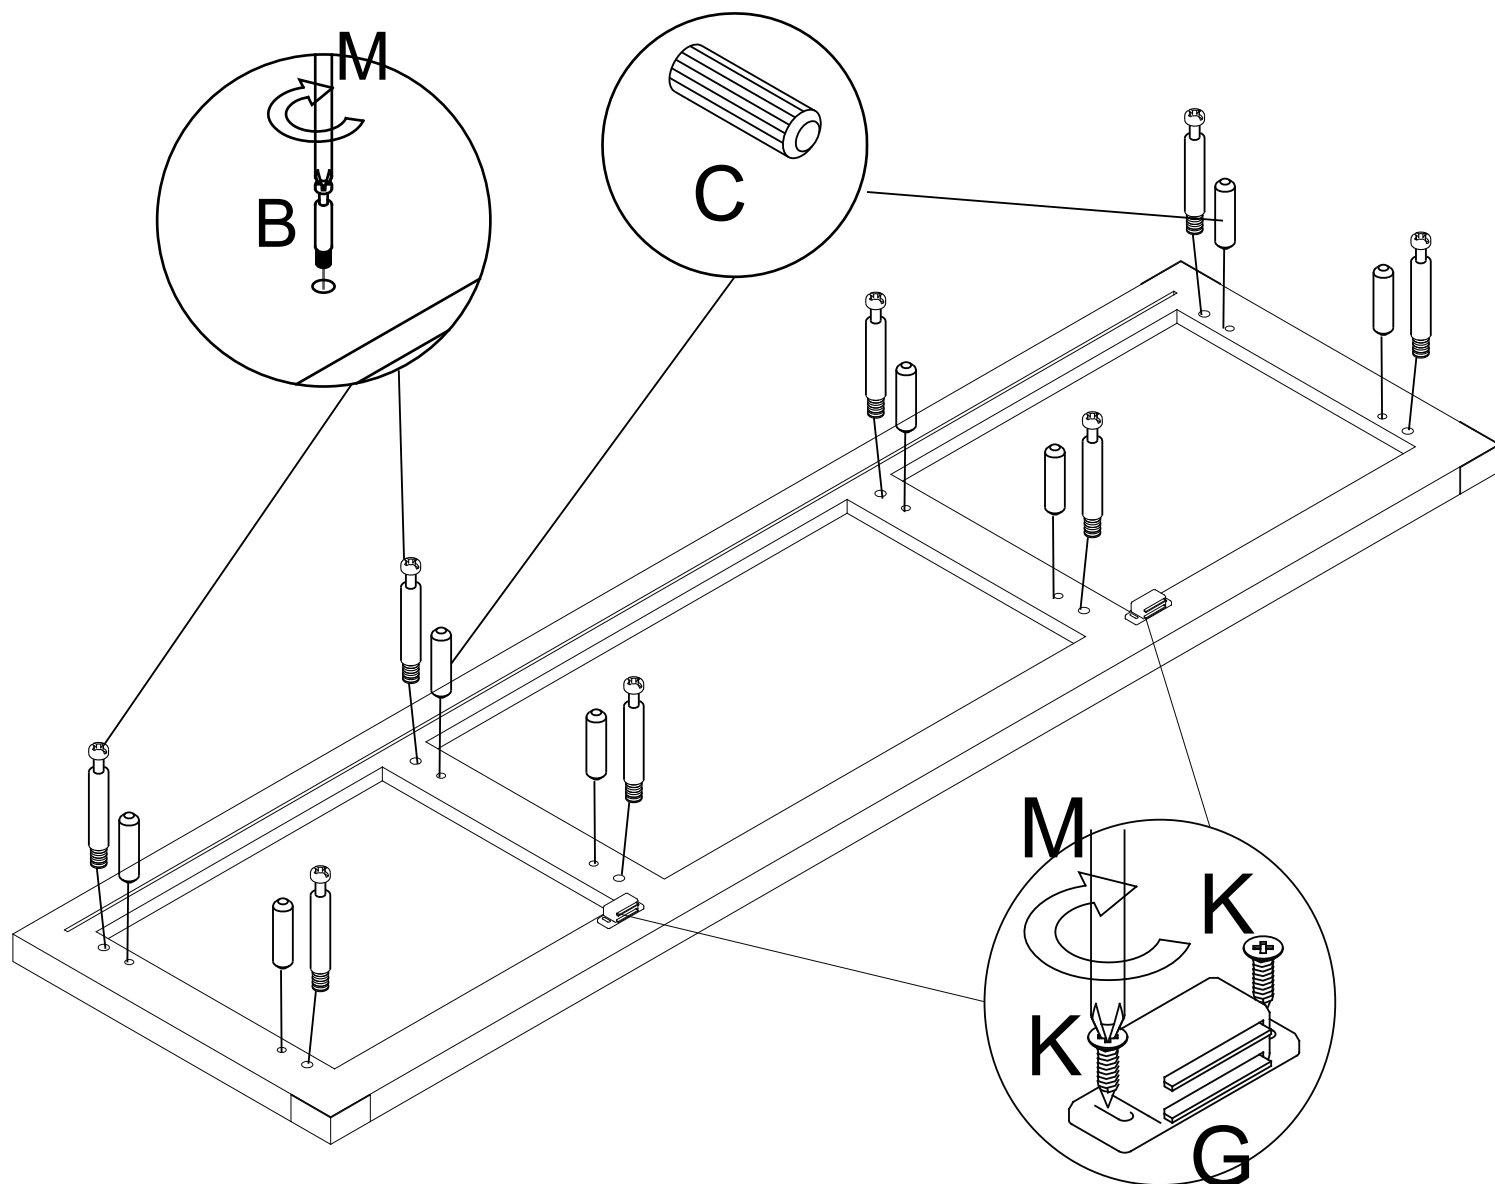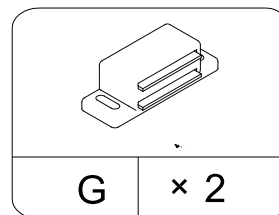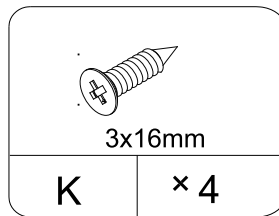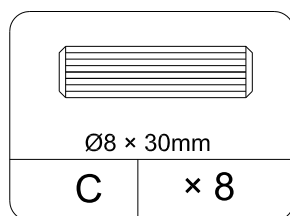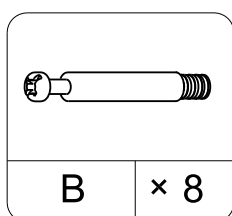



## STEP 11

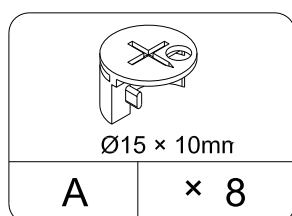

Push a CAM LOCK into the part  
The arrow in the CAM LOCK  
must point toward the hole on the  
edge of the board

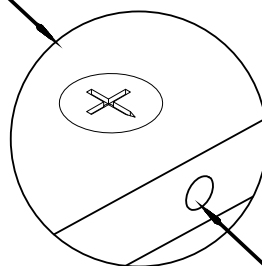



HOLE

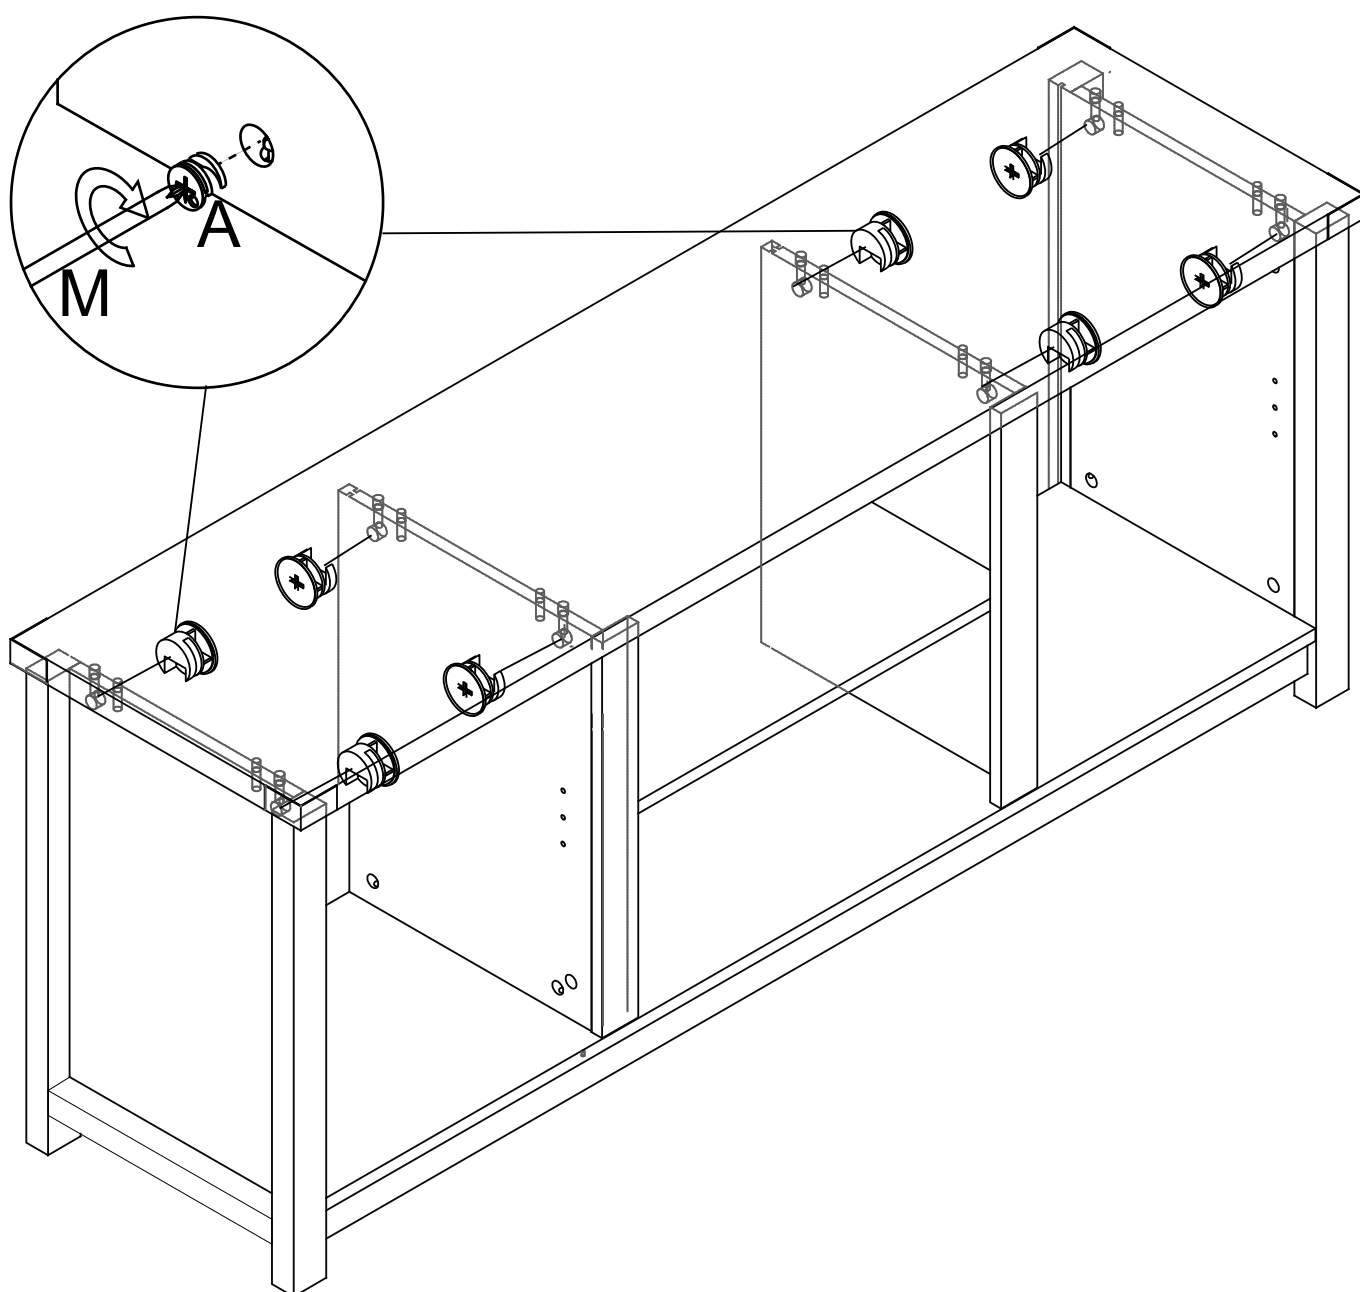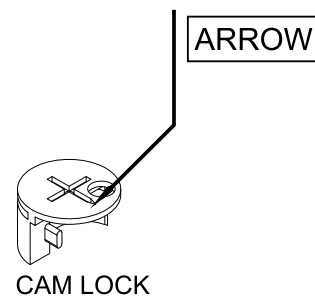




---

## STEP 12






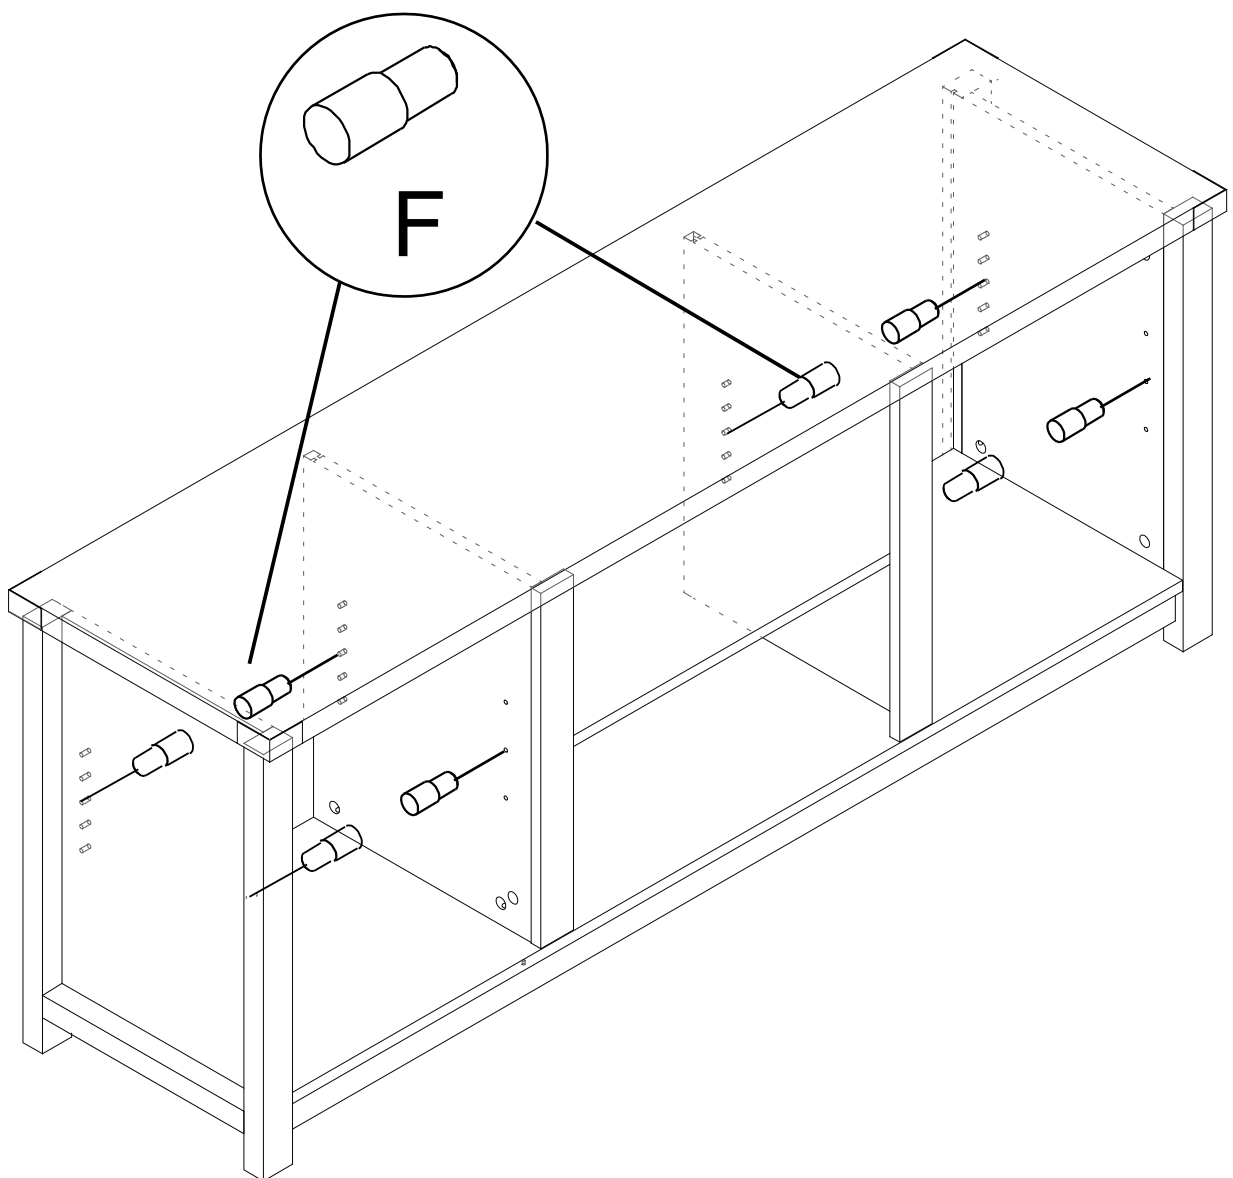
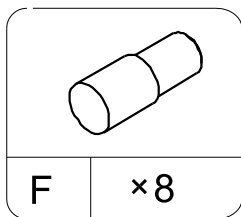


---



## STEP 13

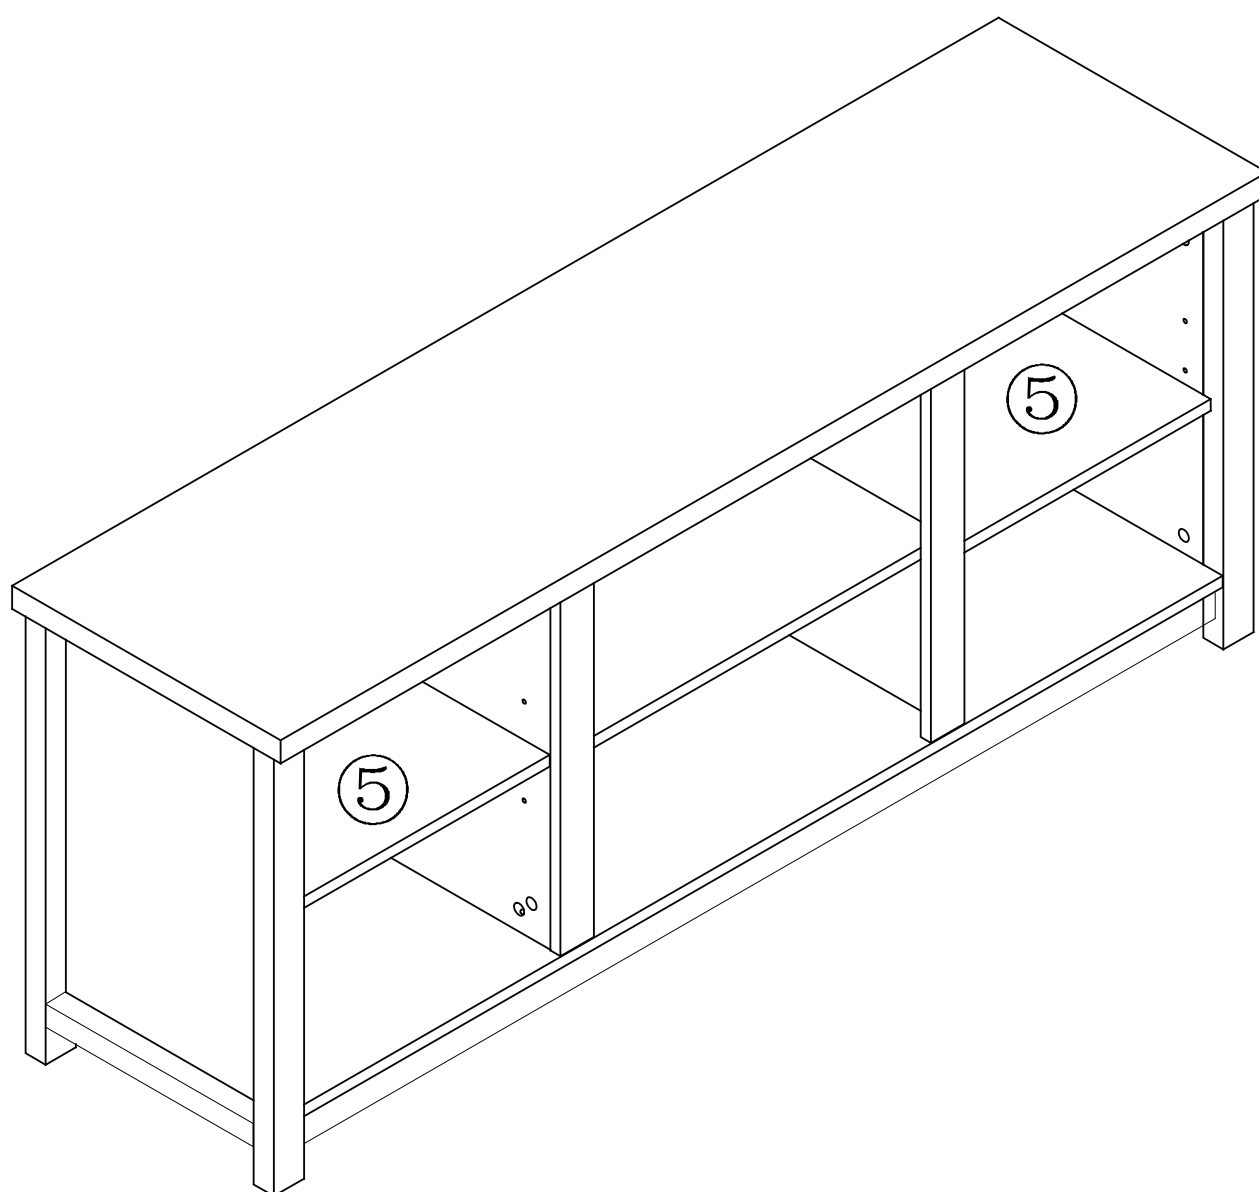







# STEP 14

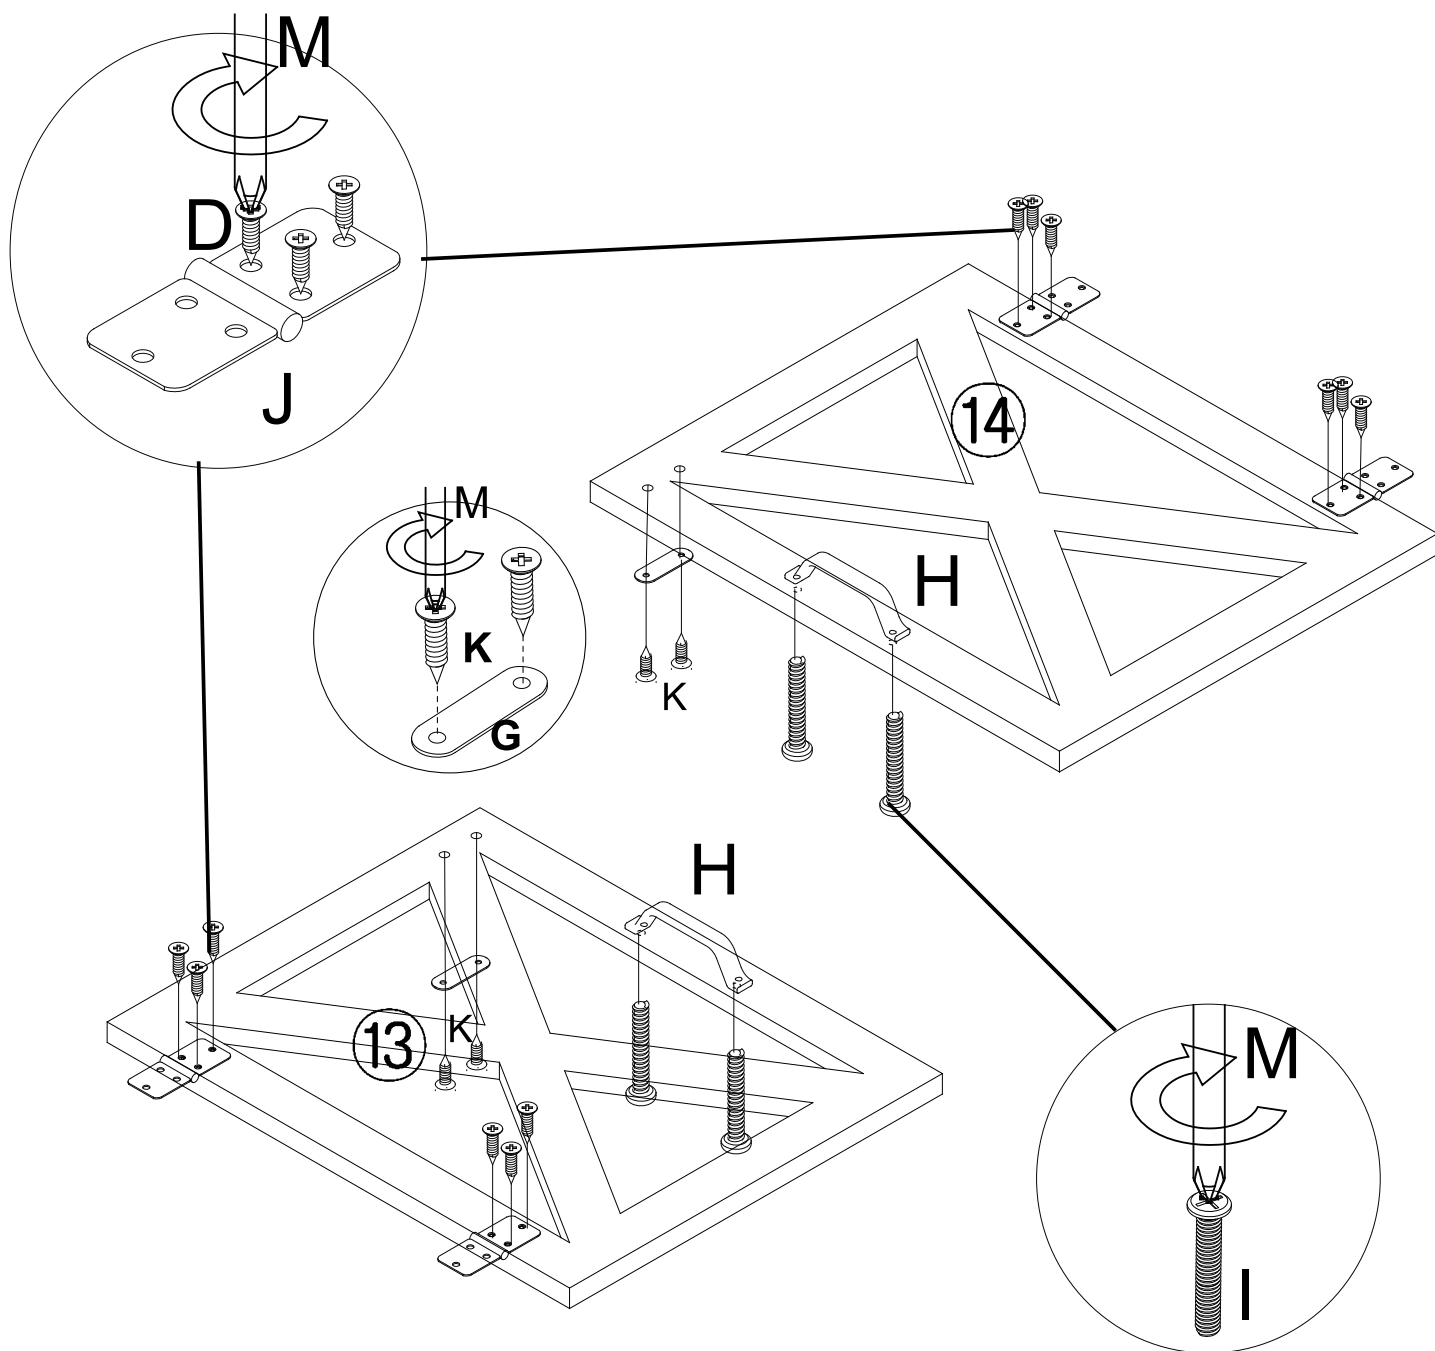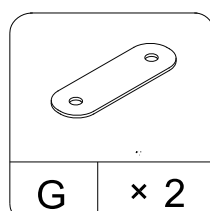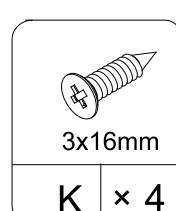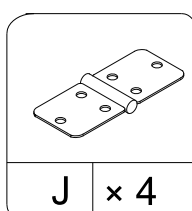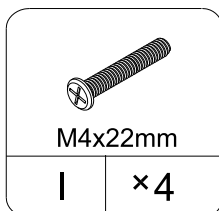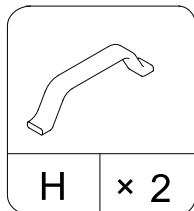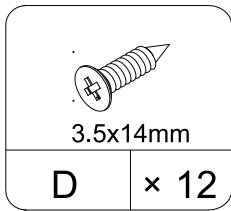

## STEP 15

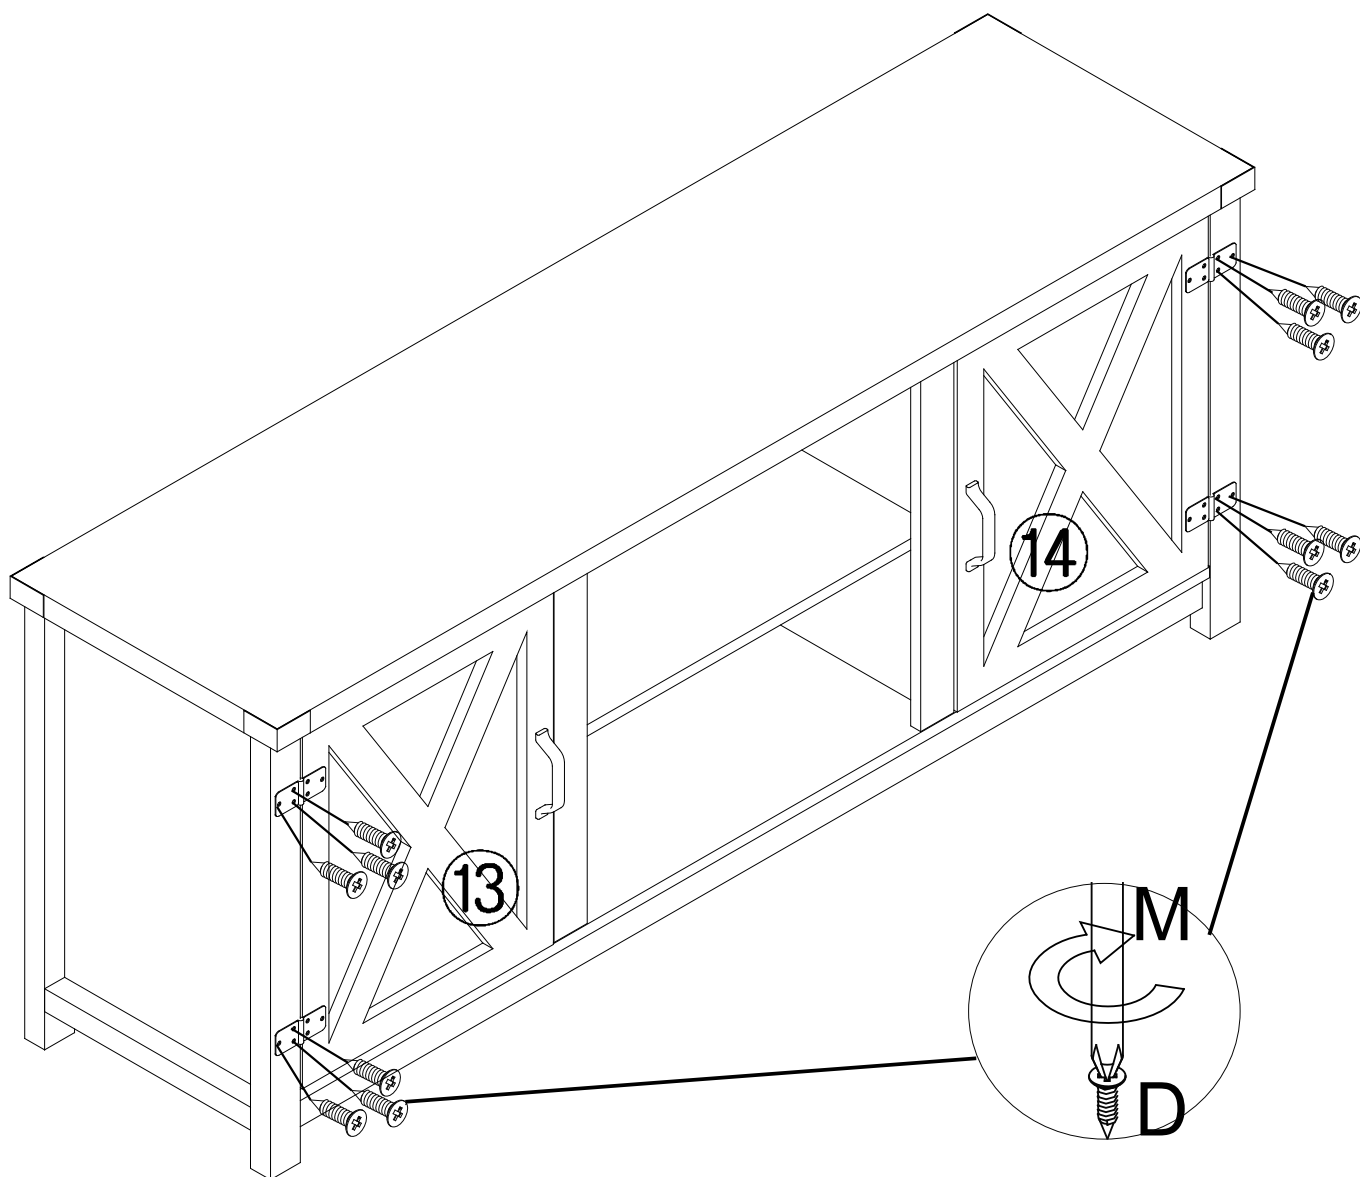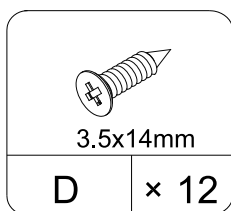

## STEP 16

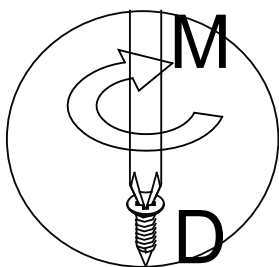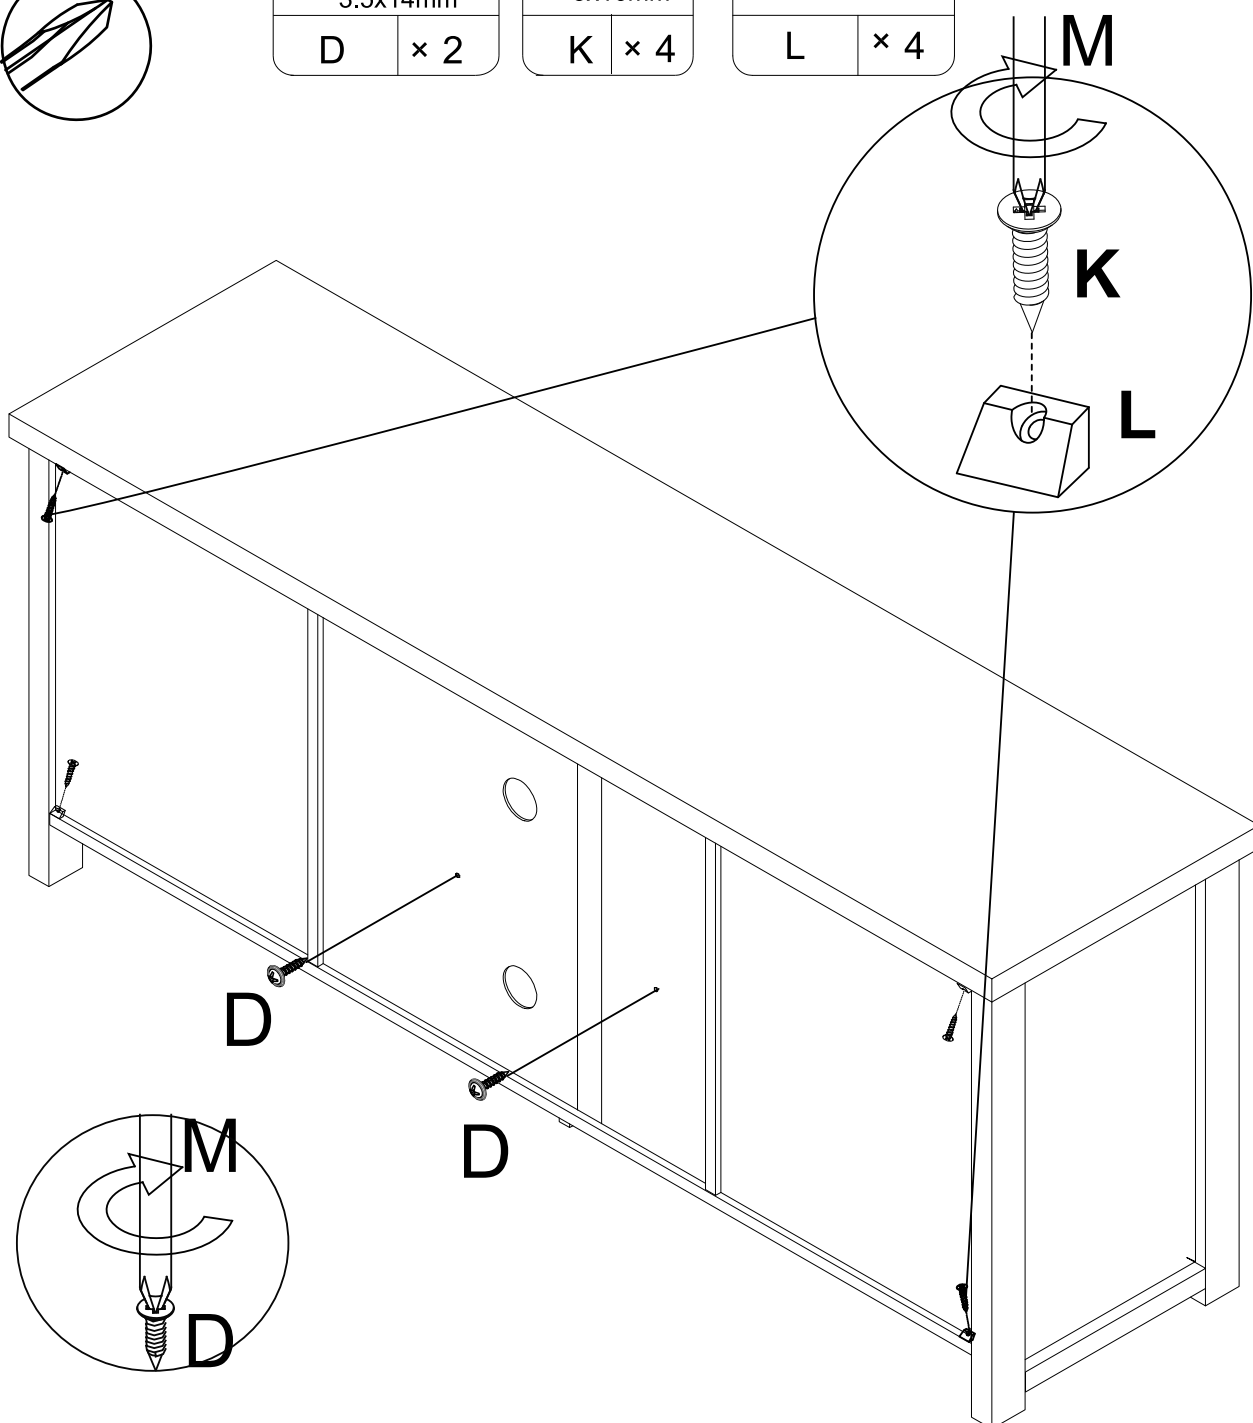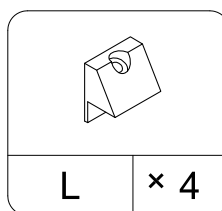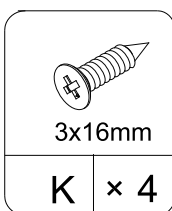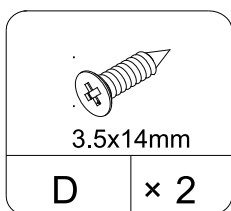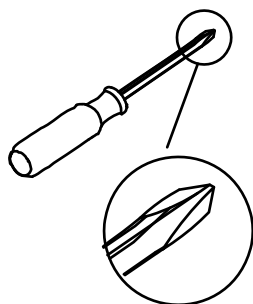

---

# FURNITURE CARE AND MAINTENANCE


## Particleboard

**Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.**



### MAINTENANCE

- **Tighten all bolts and screws again within the first 2 weeks of assembly**
- **Check the tightness of all bolts every 2 months, tighten them if necessary**

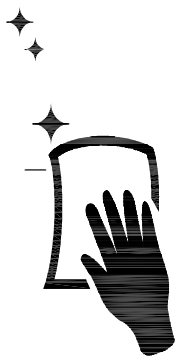

### CLEANING

- **Clean the surface of the PB(Particleboard) with a lightly dampened cloth.**
- **Small amount of mild soap can be used if necessary**
- **Dry the surface immediately after cleaning.**

- ⚠ **DO NOT use bleach or alcohol detergent to clean the surface.**
- ⚠ **DO NOT apply wood treatment on parts made with PB.**

**Particleboard will swell and distort when suffer .  
Make sure to dry the furniture immediately after cleaning**