626-679-3588
service@getprohome.com
www.getprohome.com
162 Atlantic St, Pomona, CA 91768

# ASSEMBLY INSTRUCTIONS

## BATH VANITY TOP

SCAN ME
PRODUCT INSTRUCTION VIDEO

# PRODUCT SIZE: 36"

NOTE: Any size of the vanity top's intallation steps are the same.

# INSTALLATION STEPS

**1.Prepare the Vanity:** Make sure the vanity is in place and securely attached to the wall.

**2.Seal the Edges:** To prevent water damage and ensure a clean finish, apply a bead of silicone caulk along the edges where the countertop meets the vanity.

**(For Example)**

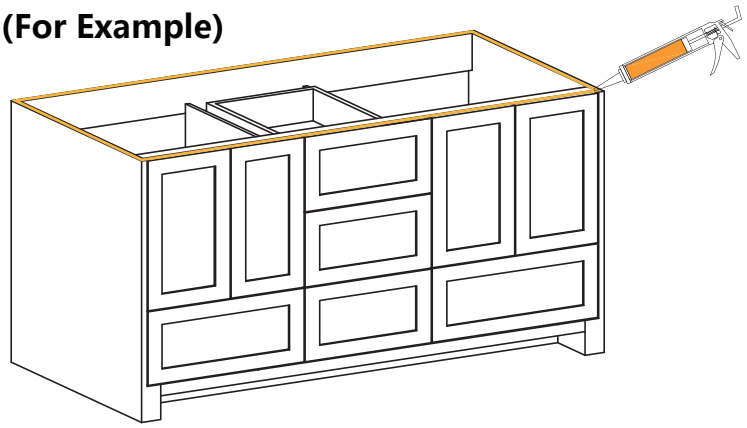

**3.Attach the Countertop:** Secure the solid surface countertop on the vanity.

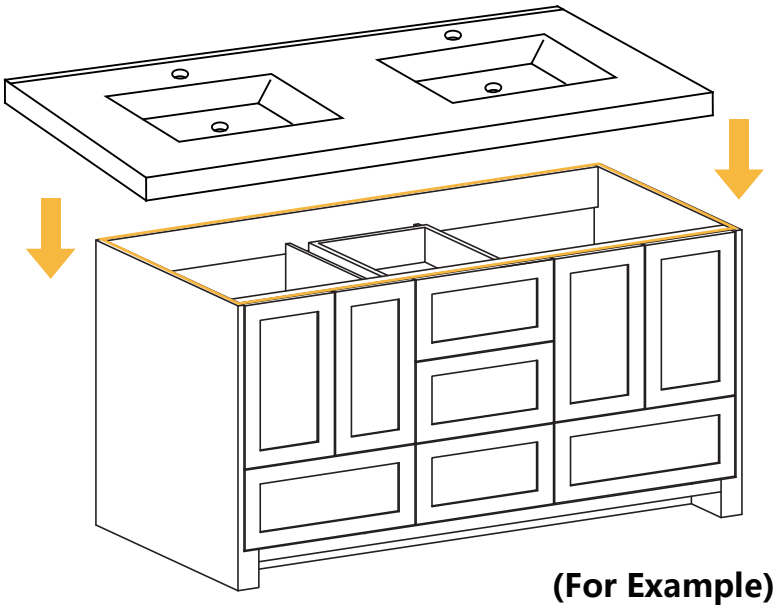

**(For Example)**

# HOME SERVICES

SCAN ME

INSTALLATION VIDEO

## Missing Part or Defective?

Please Contact the Customer Service Team

service@getprohome.com

626 679 3588