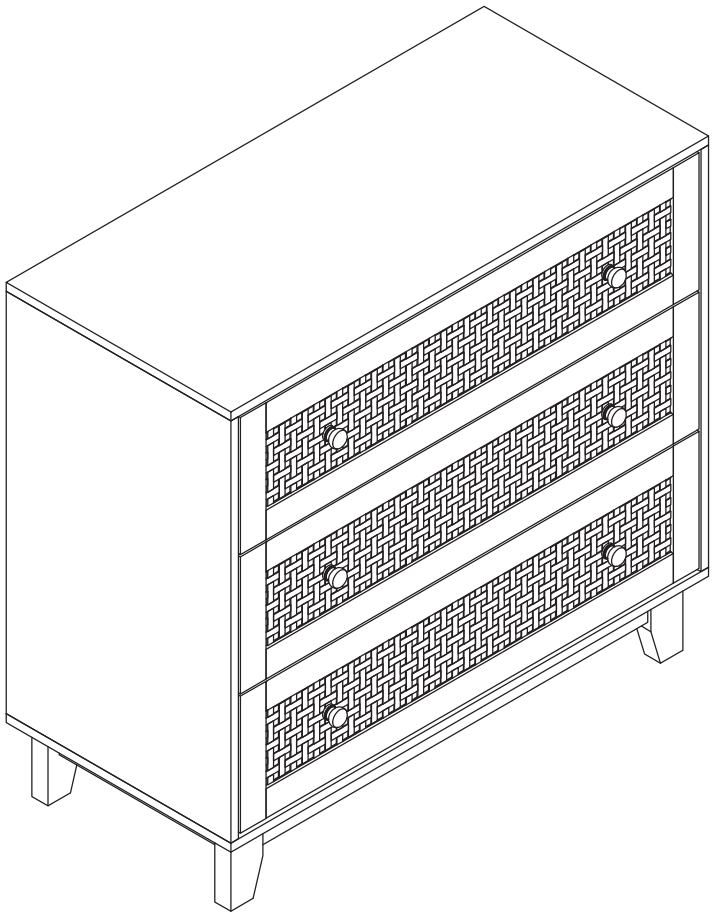
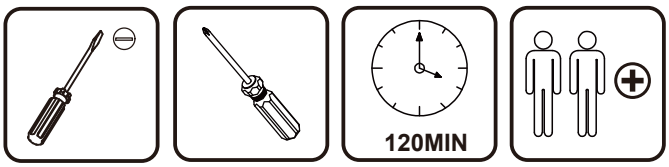
Installation & Assembly





***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!

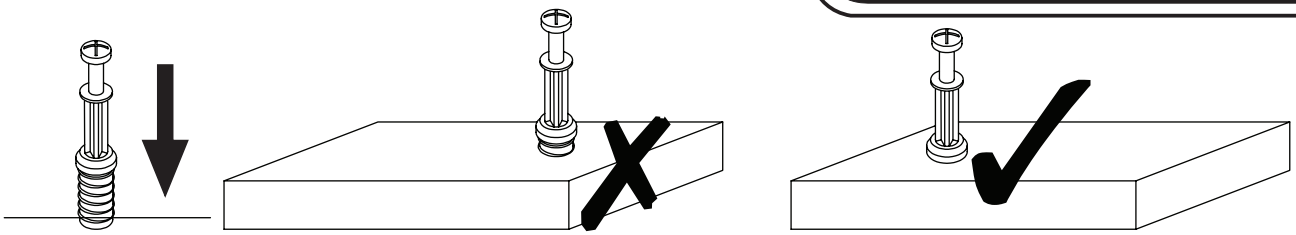
---NEED HELP WITH YOUR FURNITURE?---

If you're experiencing any issues—whether due to shipping, assembly, or any other reason —we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.

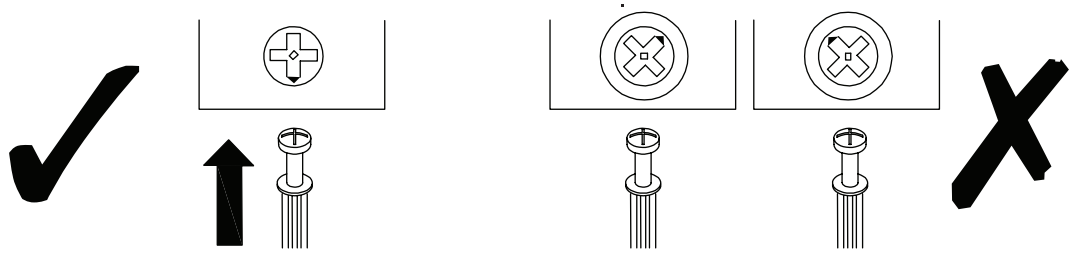
WANT TO CONTACT US ?

- Log in to your account.
- Go to “Your Orders" and locate your furniture order.
- Click on“Get Help with Order” to send us a message directly.

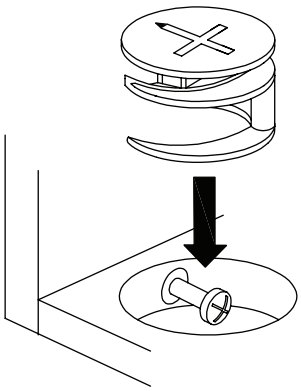
Our customer support team is ready to assist you and we will respond within 12-24 HOURS to resolve your concerns quickly!



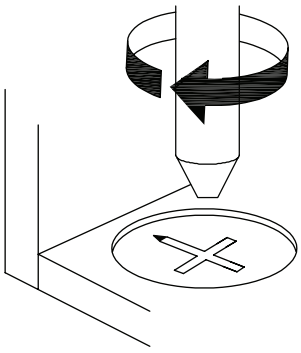
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.



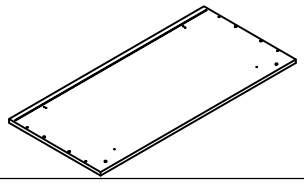
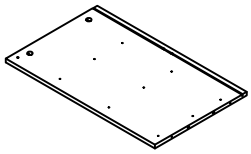
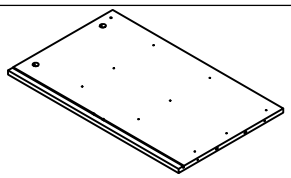
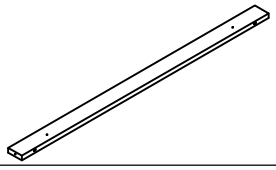
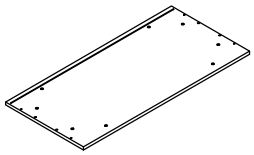

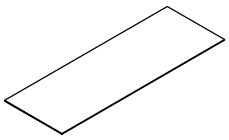

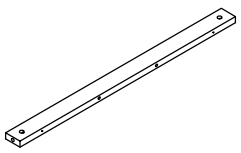
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.


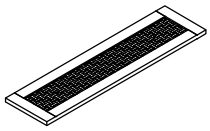




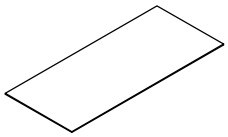
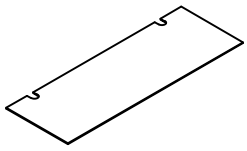



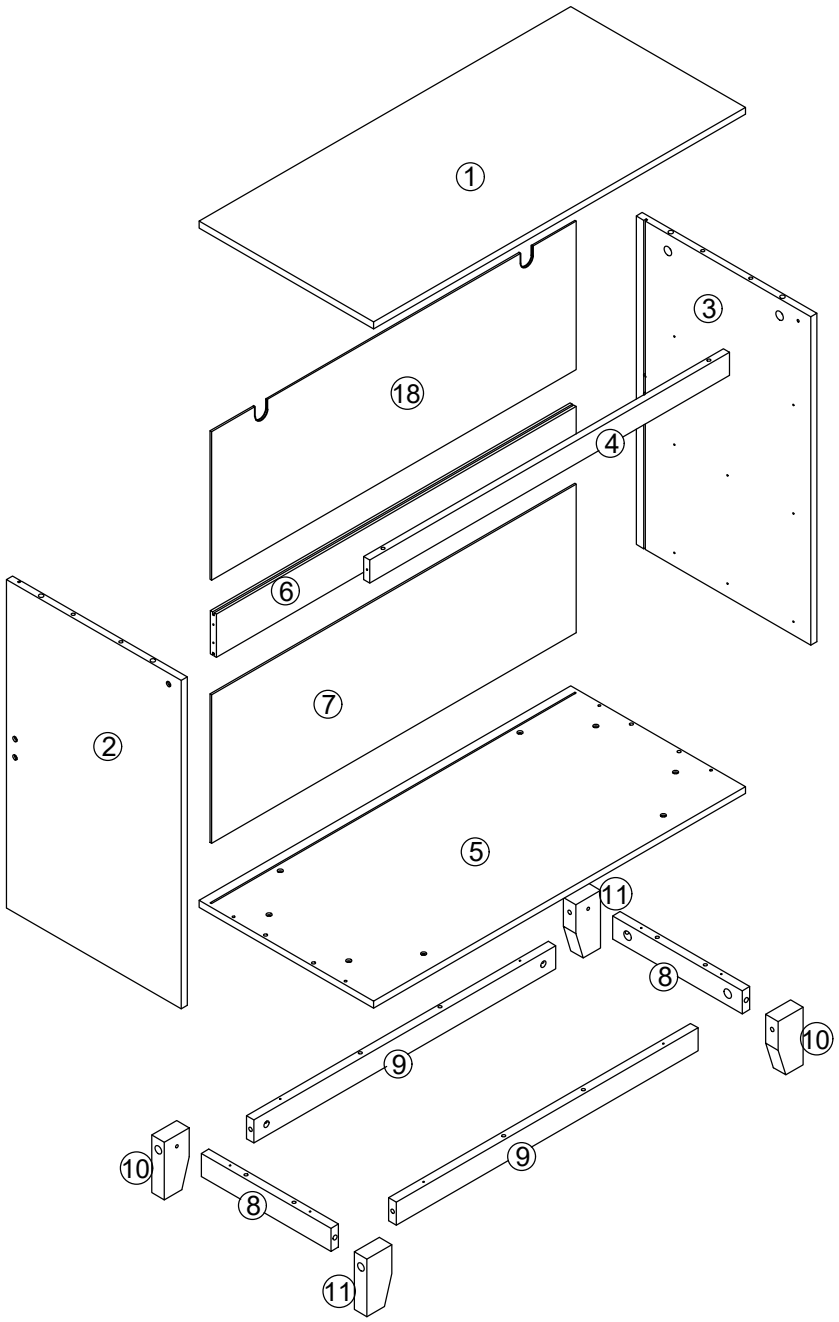
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

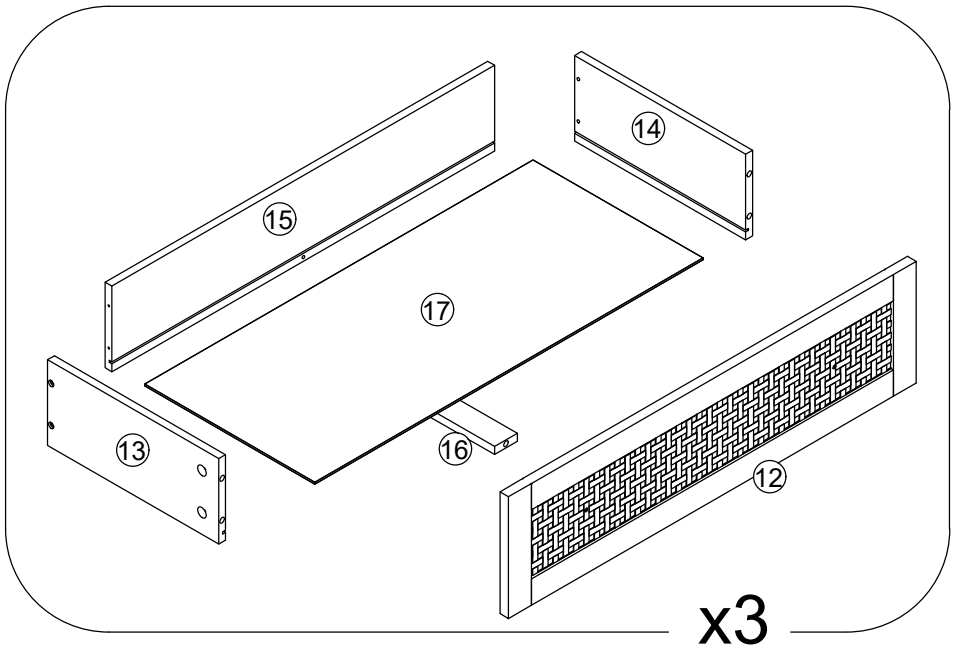


EN_ Turn cam lock clockwise to tighten.

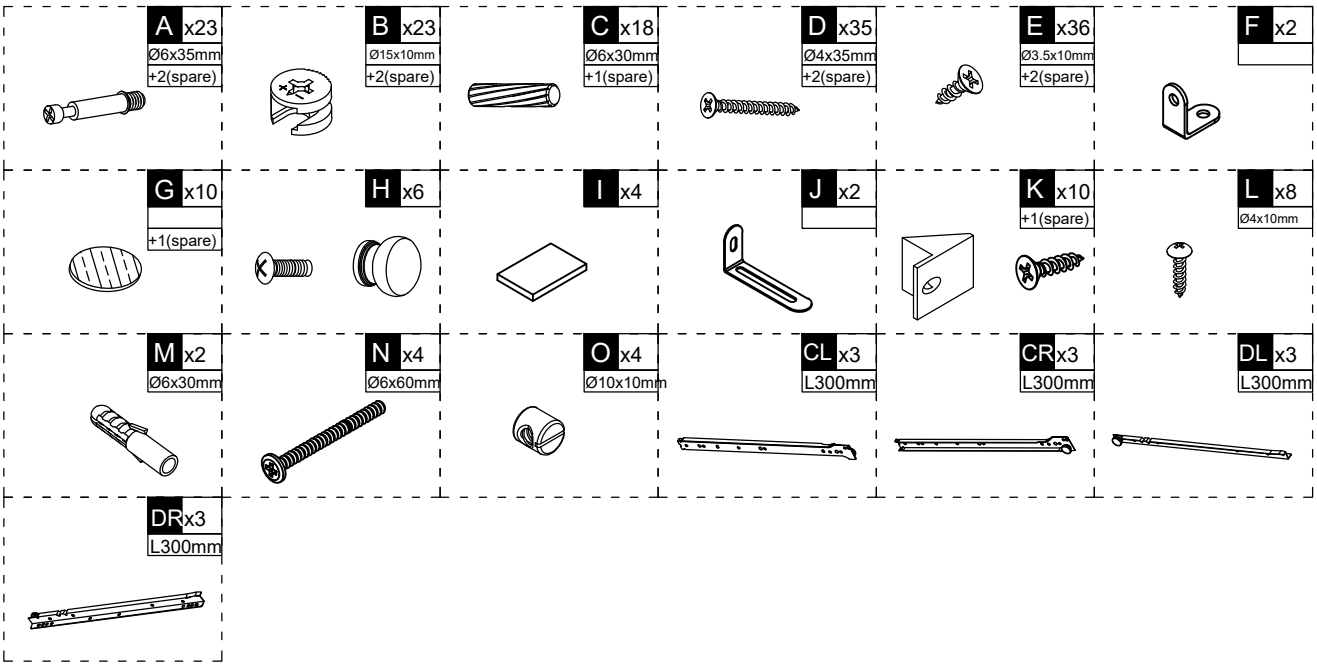
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x2	
⑨		x2	
⑩		x2	

NO.	PARTS	QTY	SPARE
⑪		x2	
⑫		x3	
⑬		x3	
⑭		x3	
⑮		x3	
⑯		x3	
⑰		x3	
⑱		x1	
	 Hardware Kit		

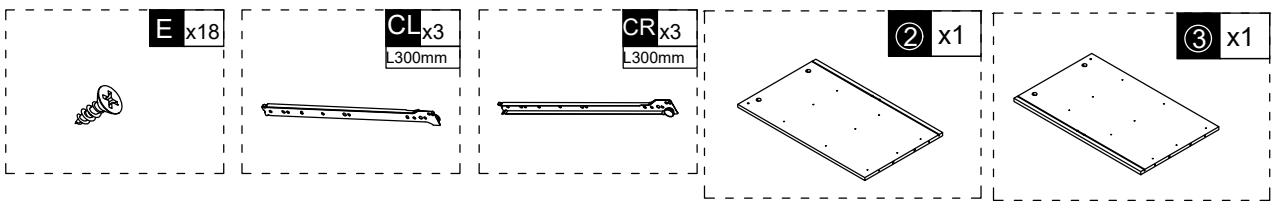

①
③
⑱
④
⑥
⑦
②
⑤
⑪
⑧
⑩
⑨
⑨
⑩
⑧
⑪

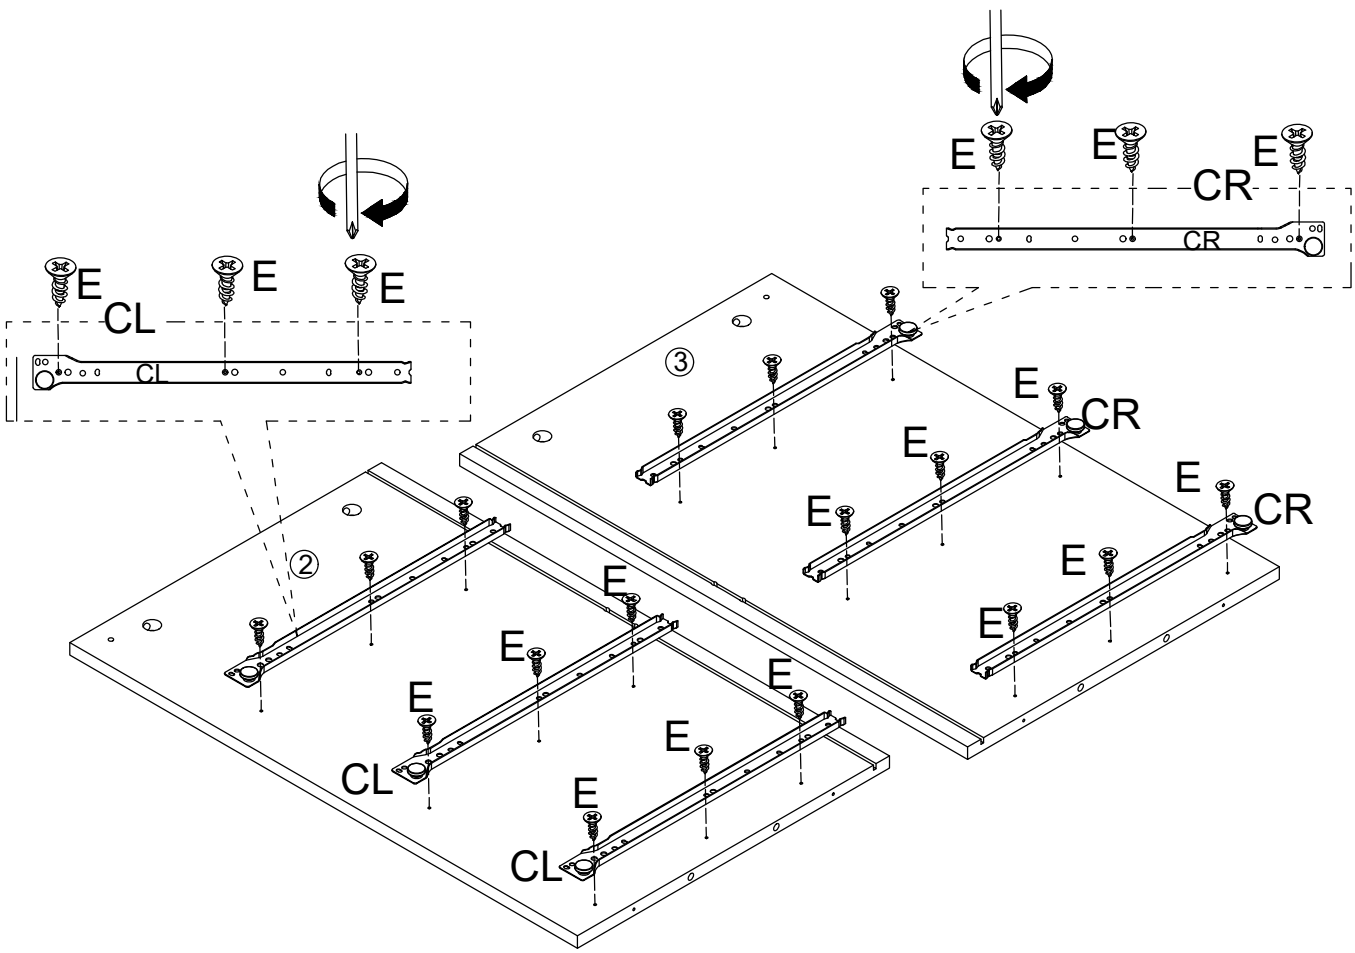

⑭
⑮
⑰
⑬
⑯
⑫
x3

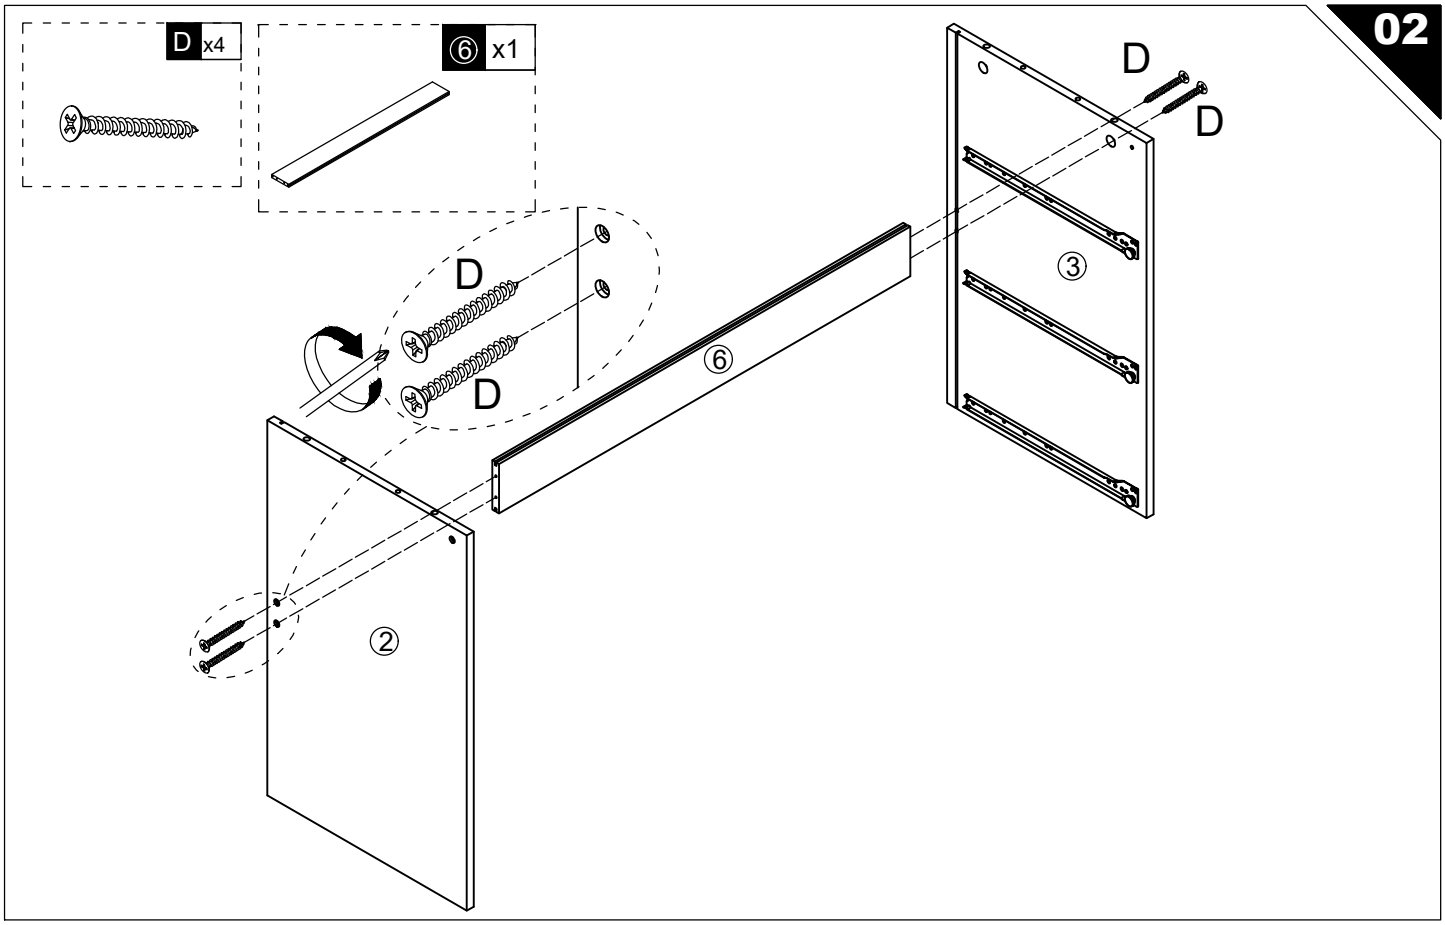
HARDWARE

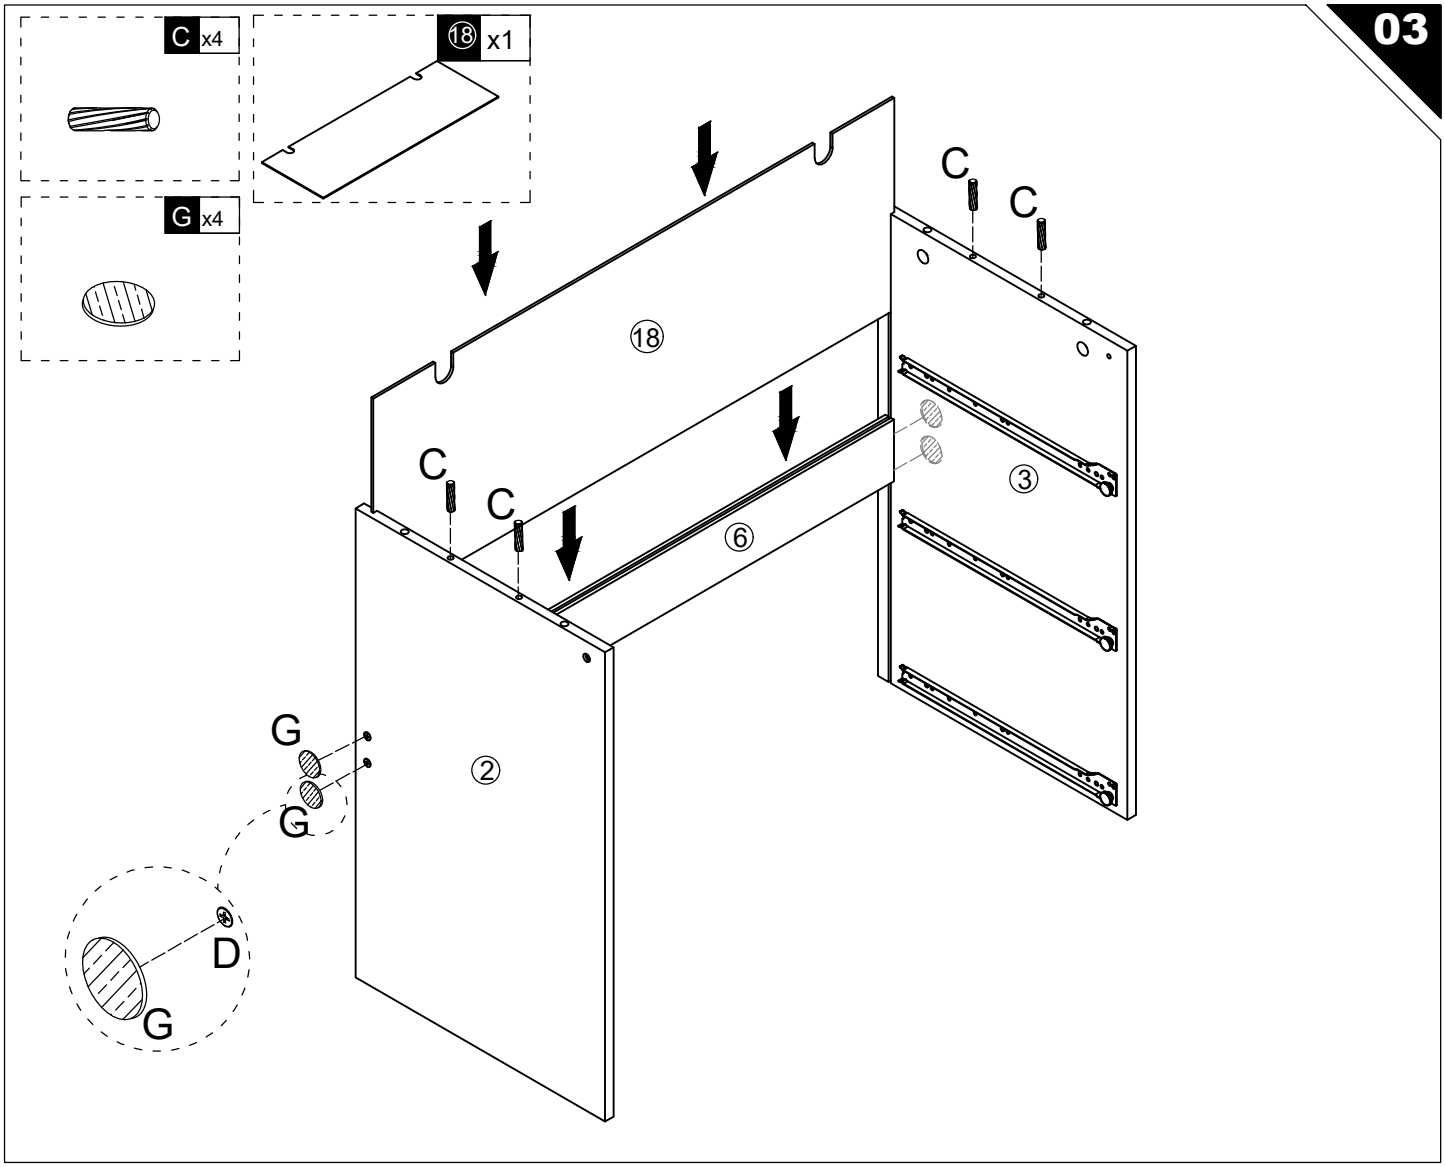

A x23
Ø6x35mm
+2(spare)
B x23
Ø15x10mm
+2(spare)
C x18
Ø6x30mm
+1(spare)
D x35
Ø4x35mm
+2(spare)
E x36
Ø3.5x10mm
+2(spare)
F x2
G x10
+1(spare)
H x6
I x4
J x2
K x10
+1(spare)
L x8
Ø4x10mm
M x2
Ø6x30mm
N x4
Ø6x60mm
O x4
Ø10x10mm
CL x3
L300mm
CR x3
L300mm
DL x3
L300mm
DR x3
L300mm

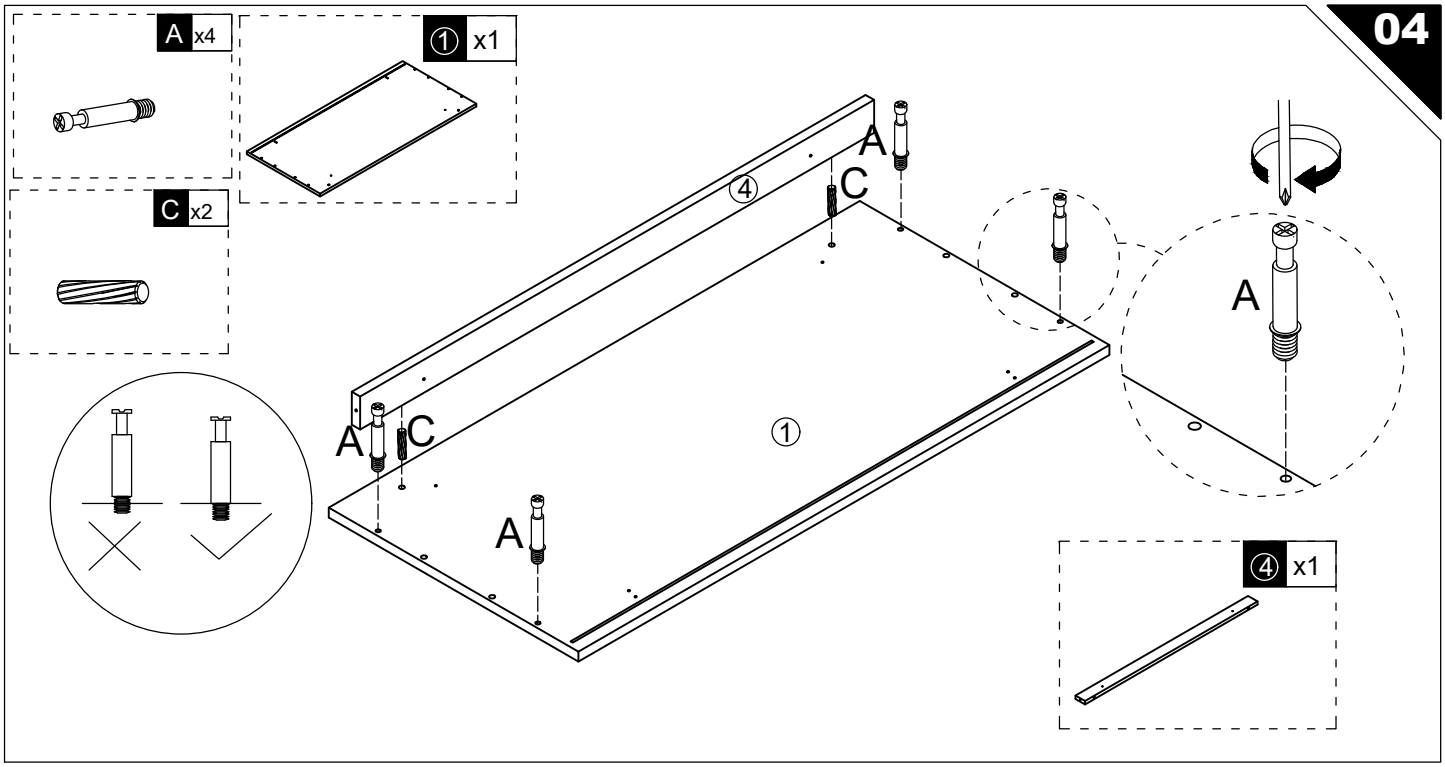
01

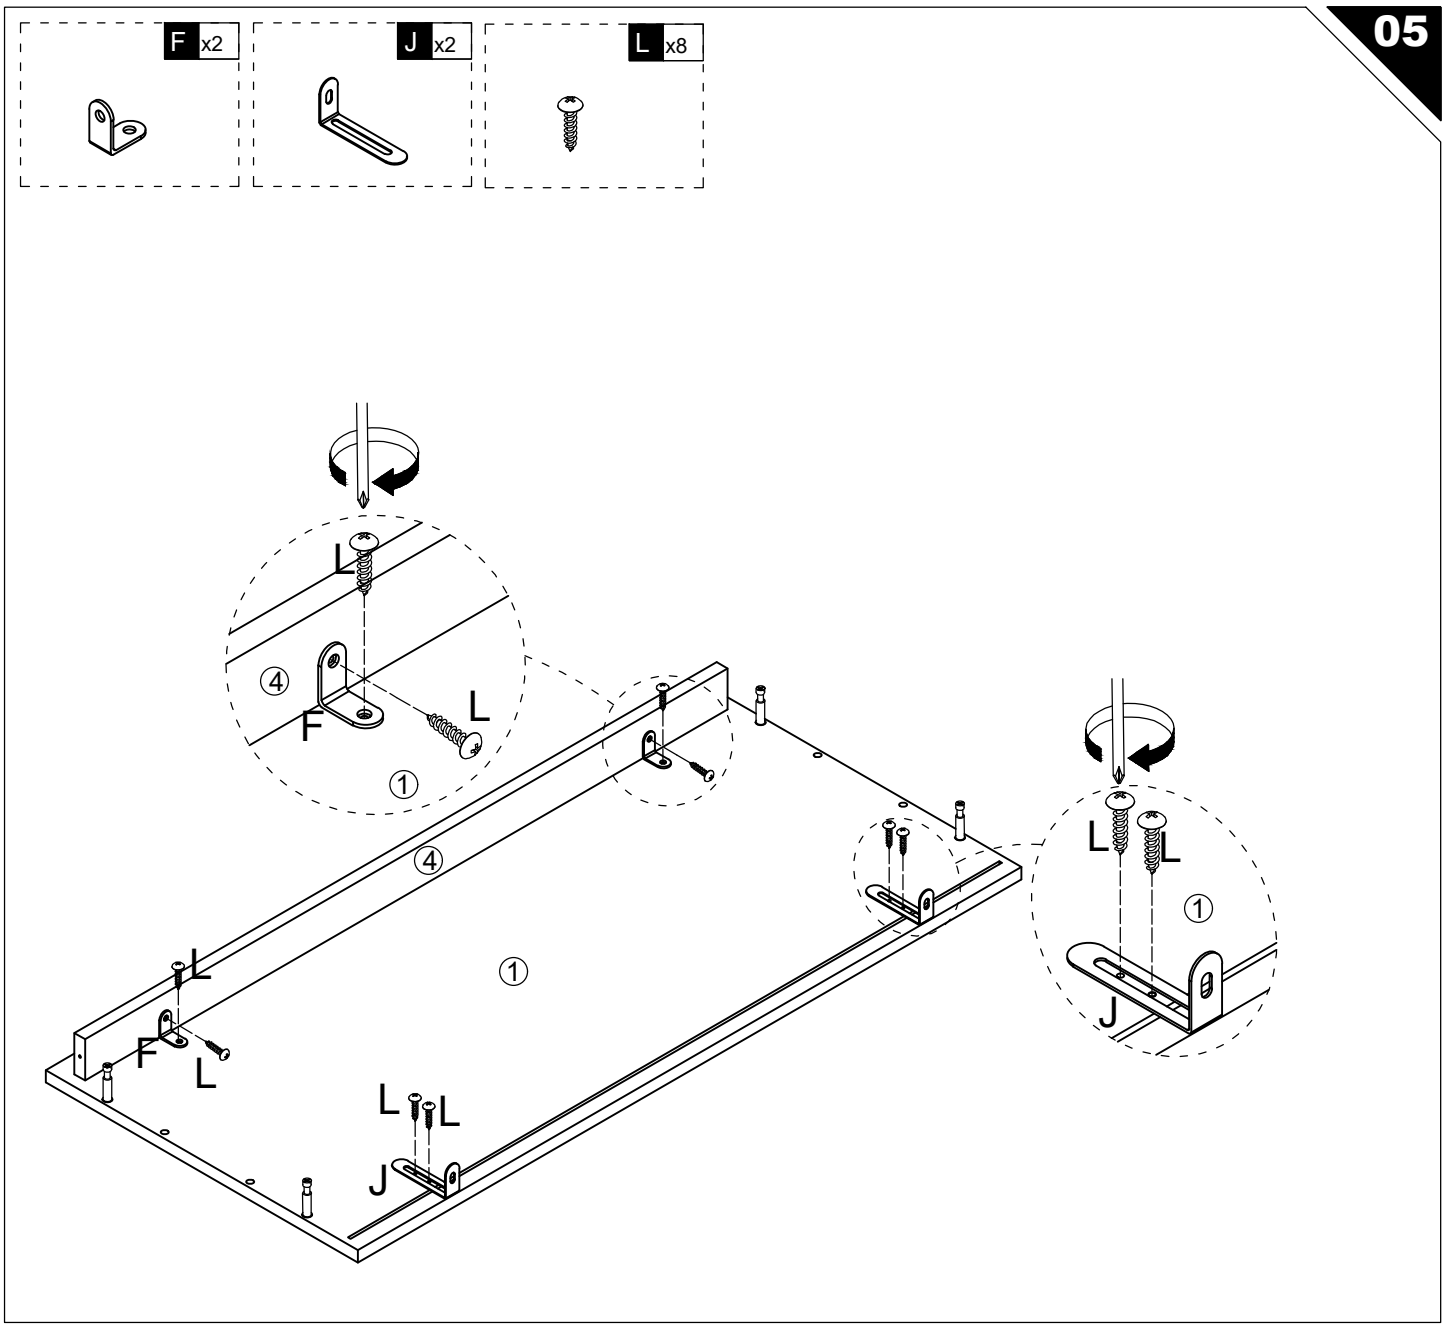

E x18
CL x3
L300mm
CR x3
L300mm
② x1
③ x1

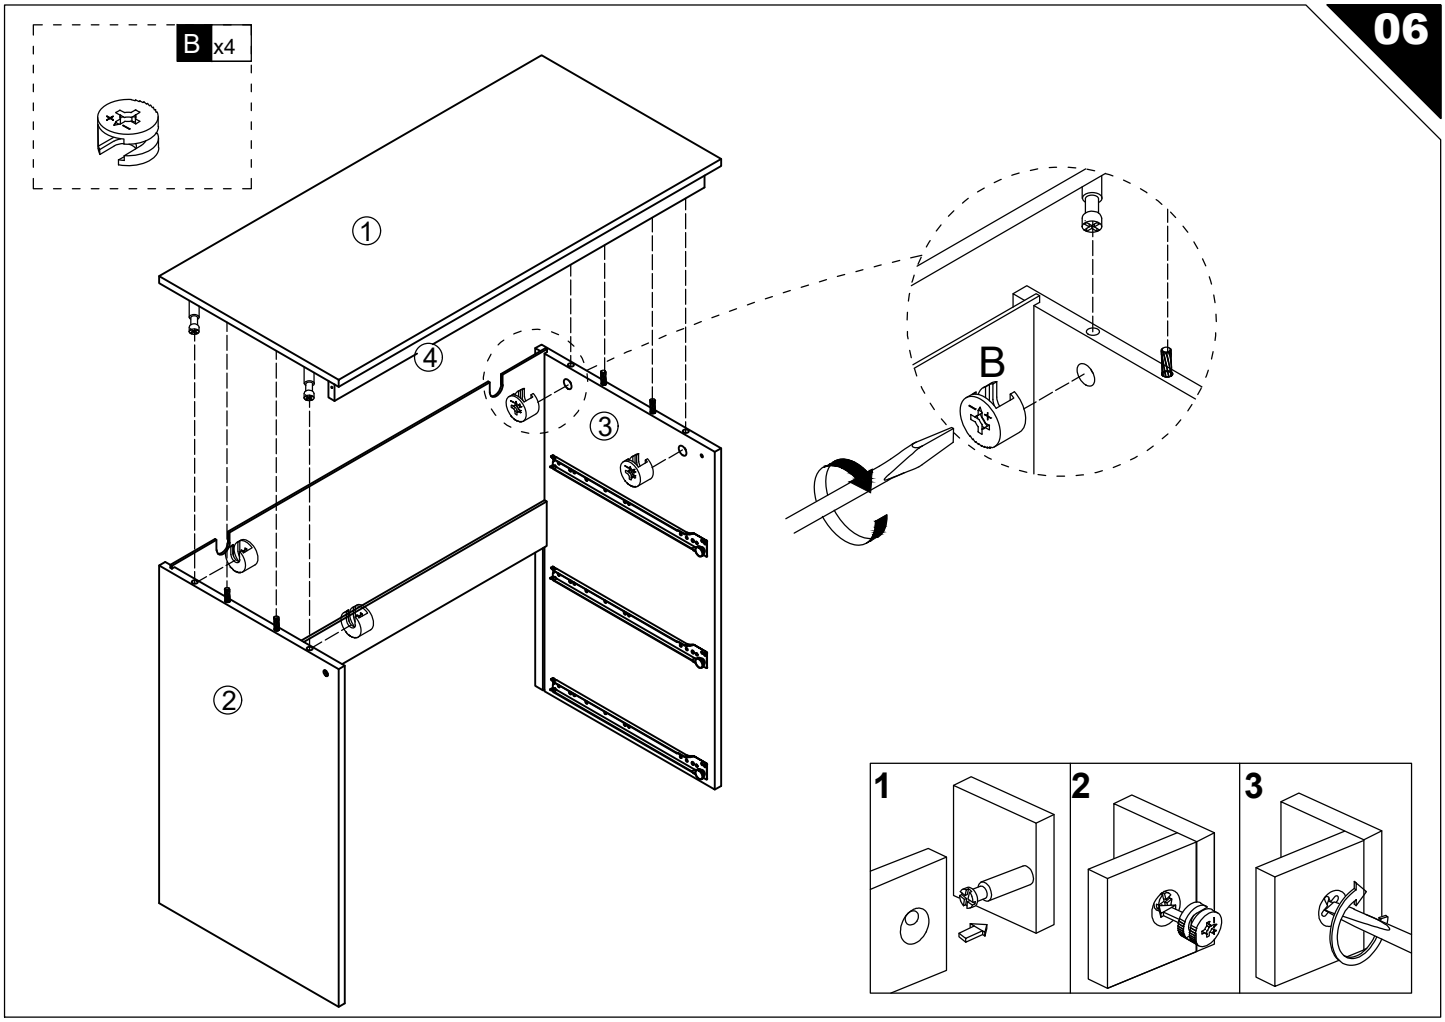

E
CL
E
E
CL
E
E
CR
E
CR
③
E
CR
E
E
CR
E
E
②
E
E
E
CL
E
E
CL

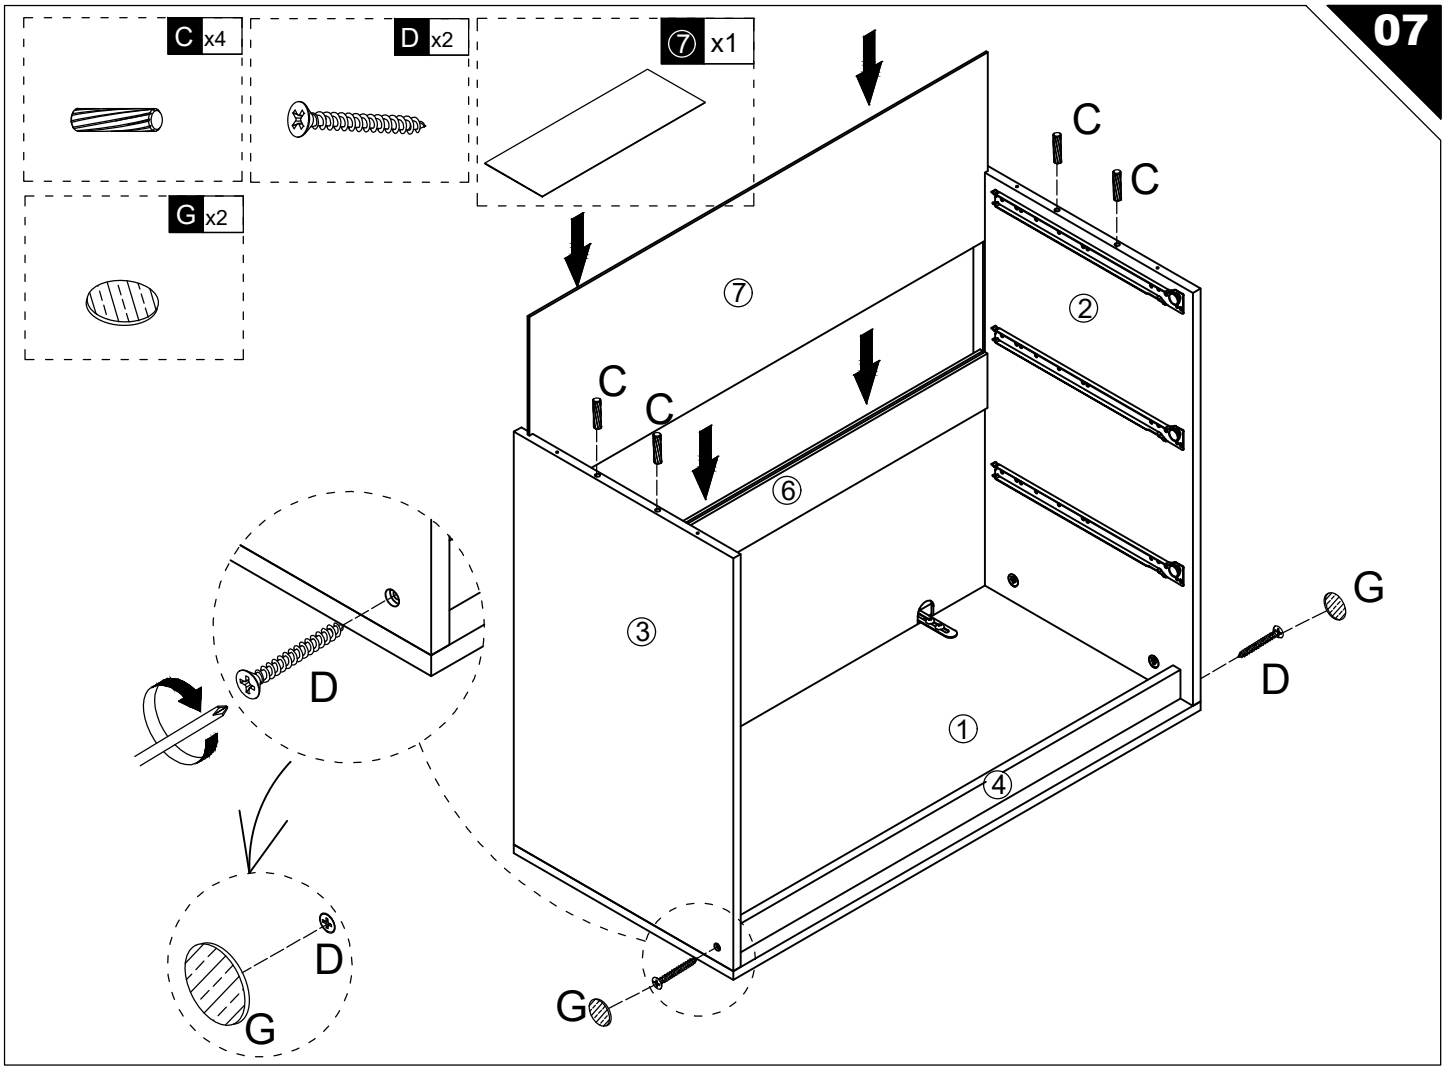

02
D x4
⑥ x1
D
D
D
D
③
⑥
②

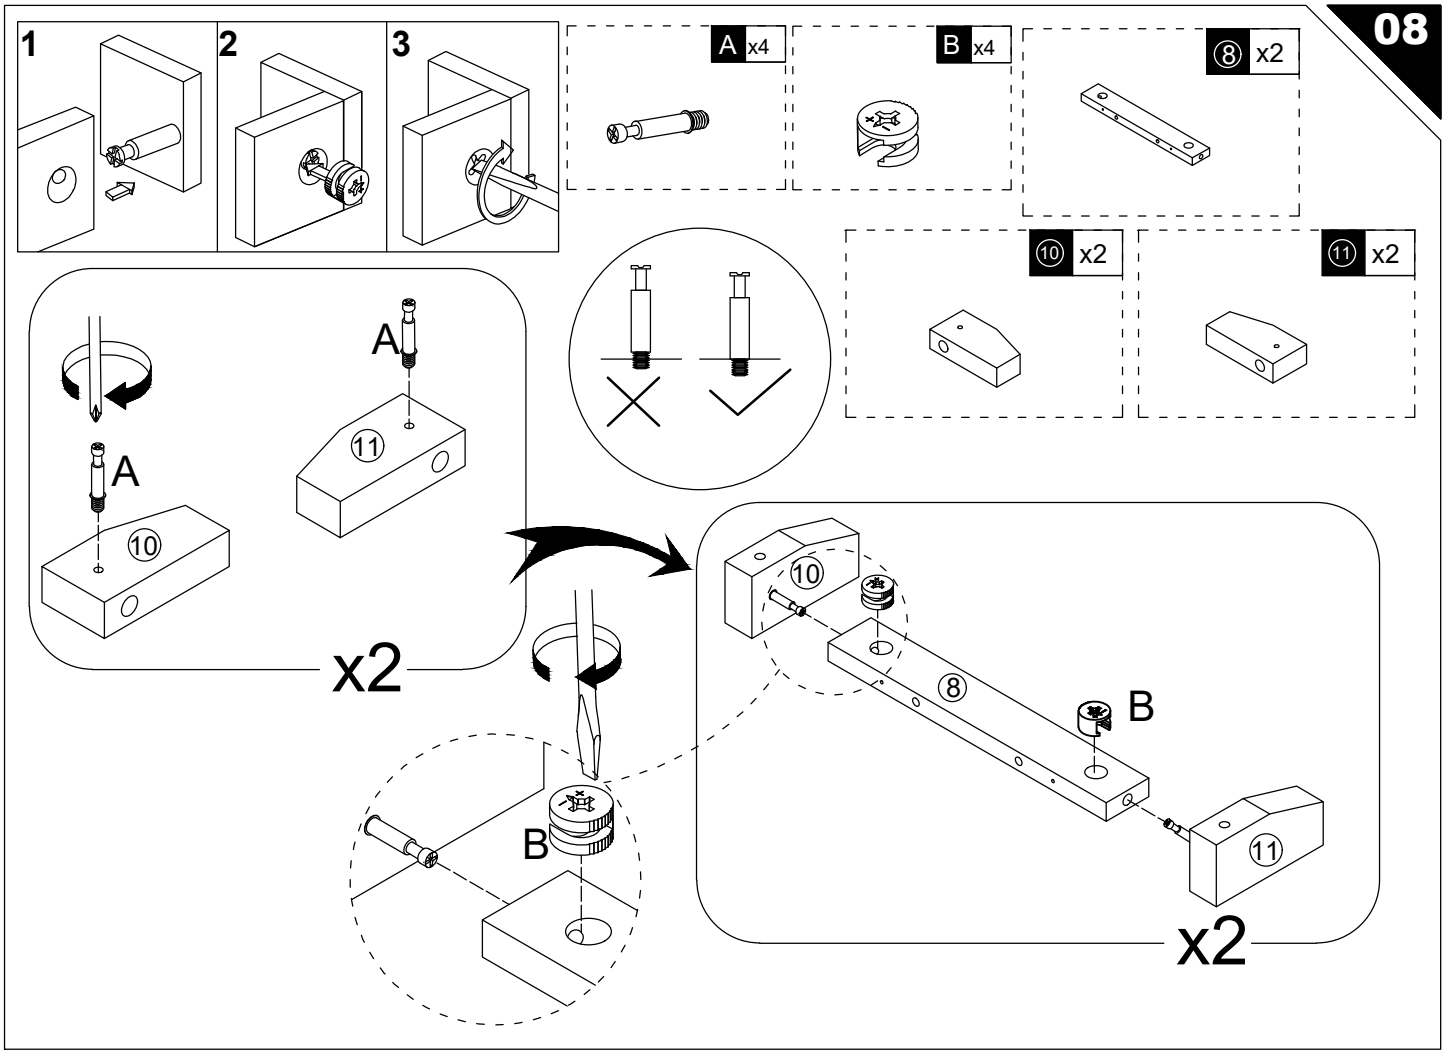

03
C x4
⑱ x1
G x4
C
C
⑱
C
C
③
⑥
G
G
②
D
G

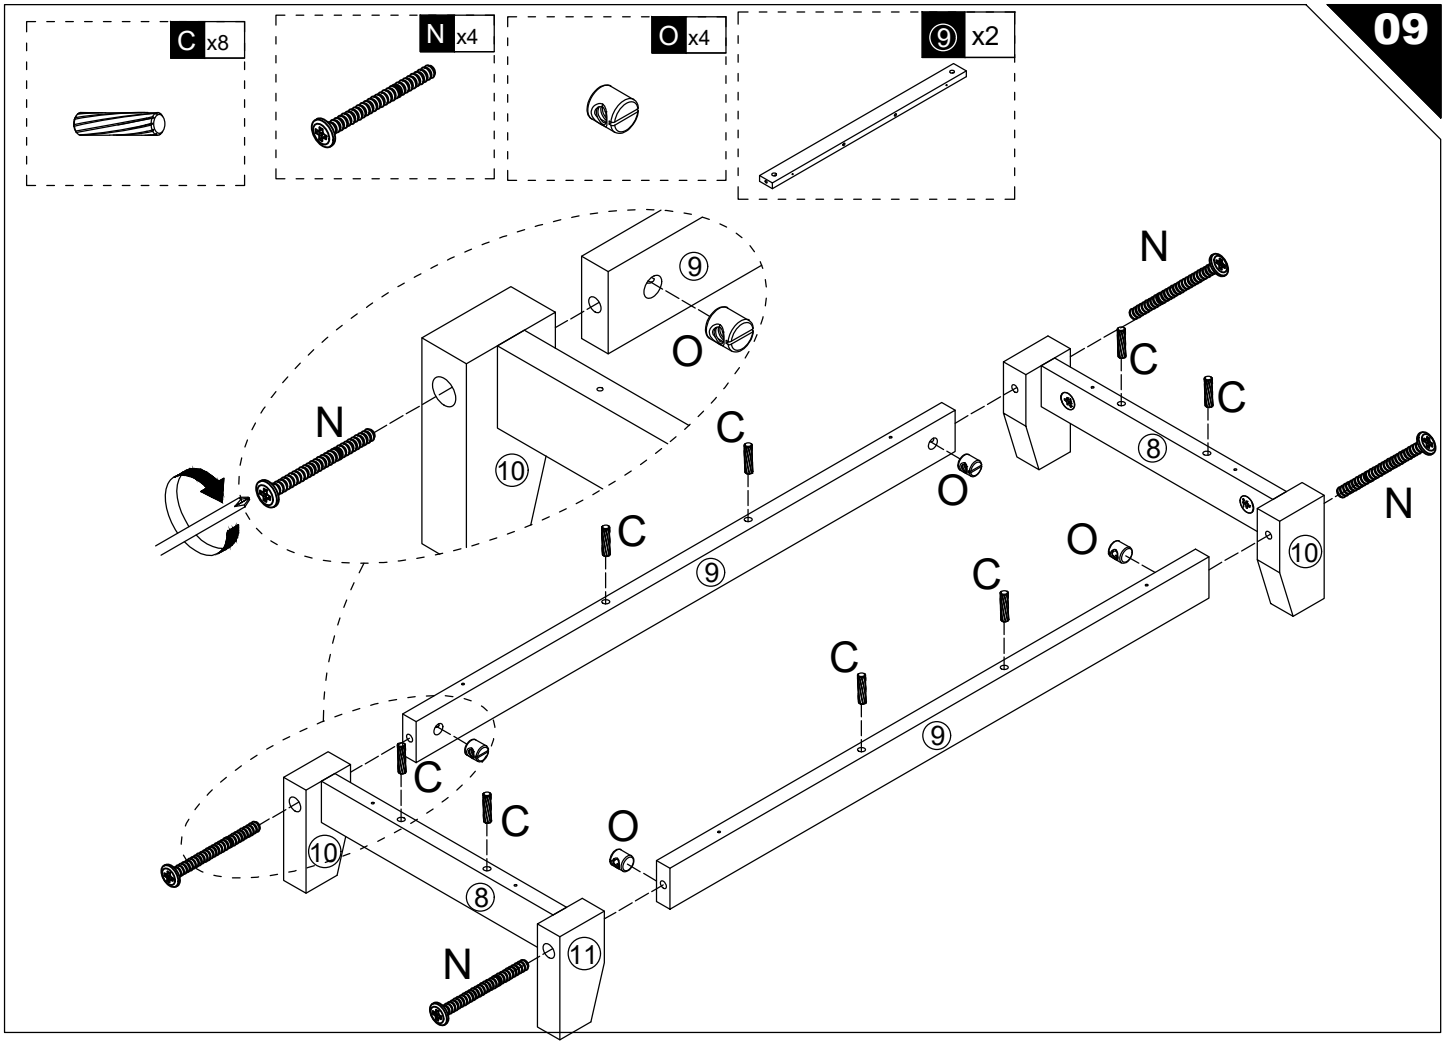

04
A x4
① x1
C x2
④ x1
A
C
①
④

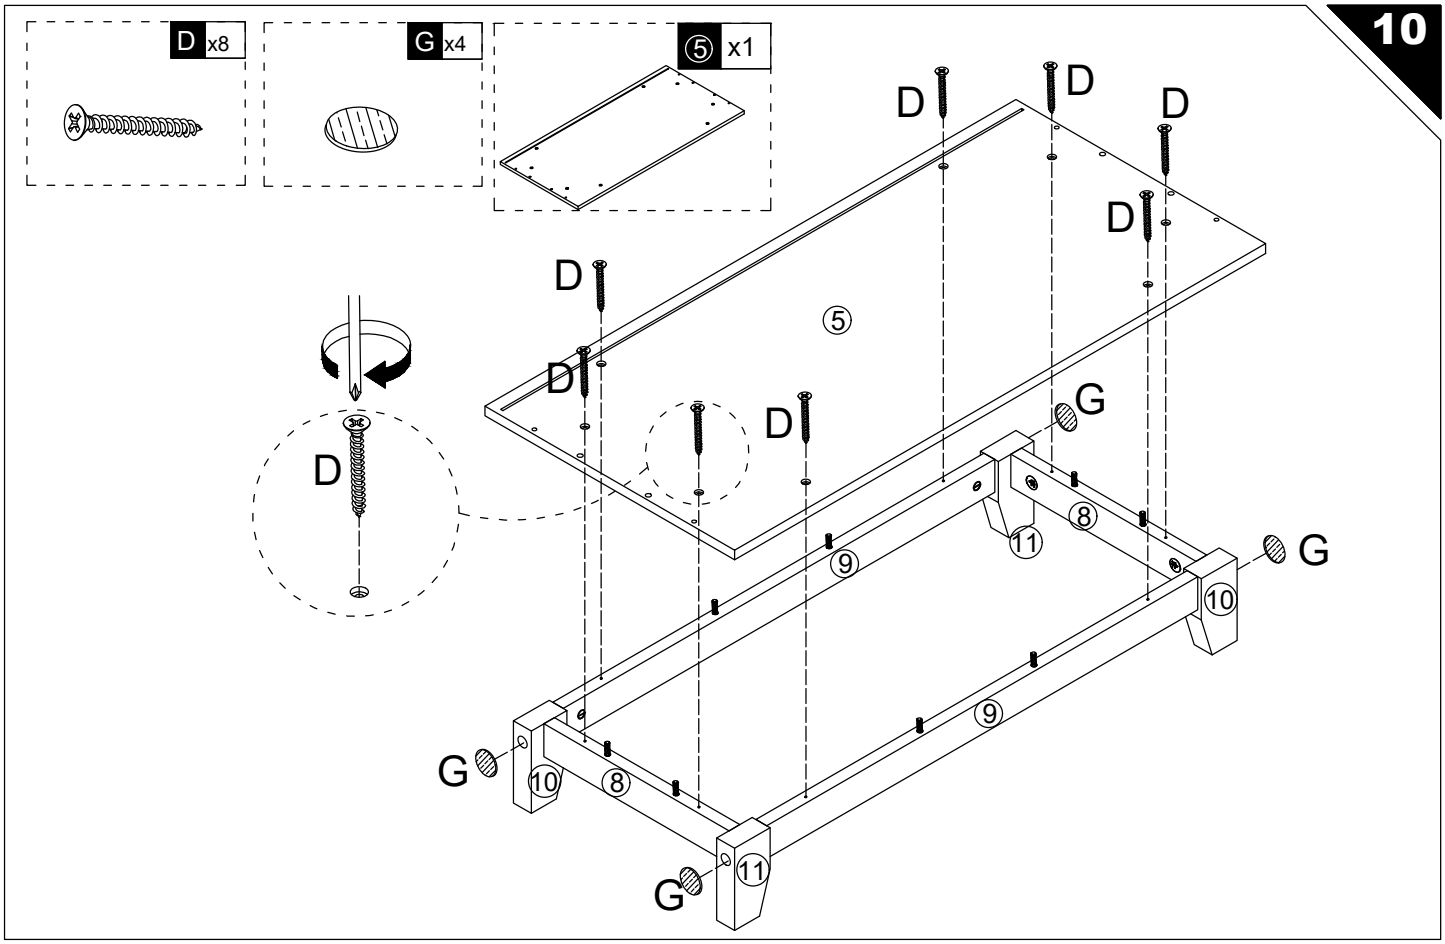

05
F x2
J x2
L x8
L
F
J
①
④

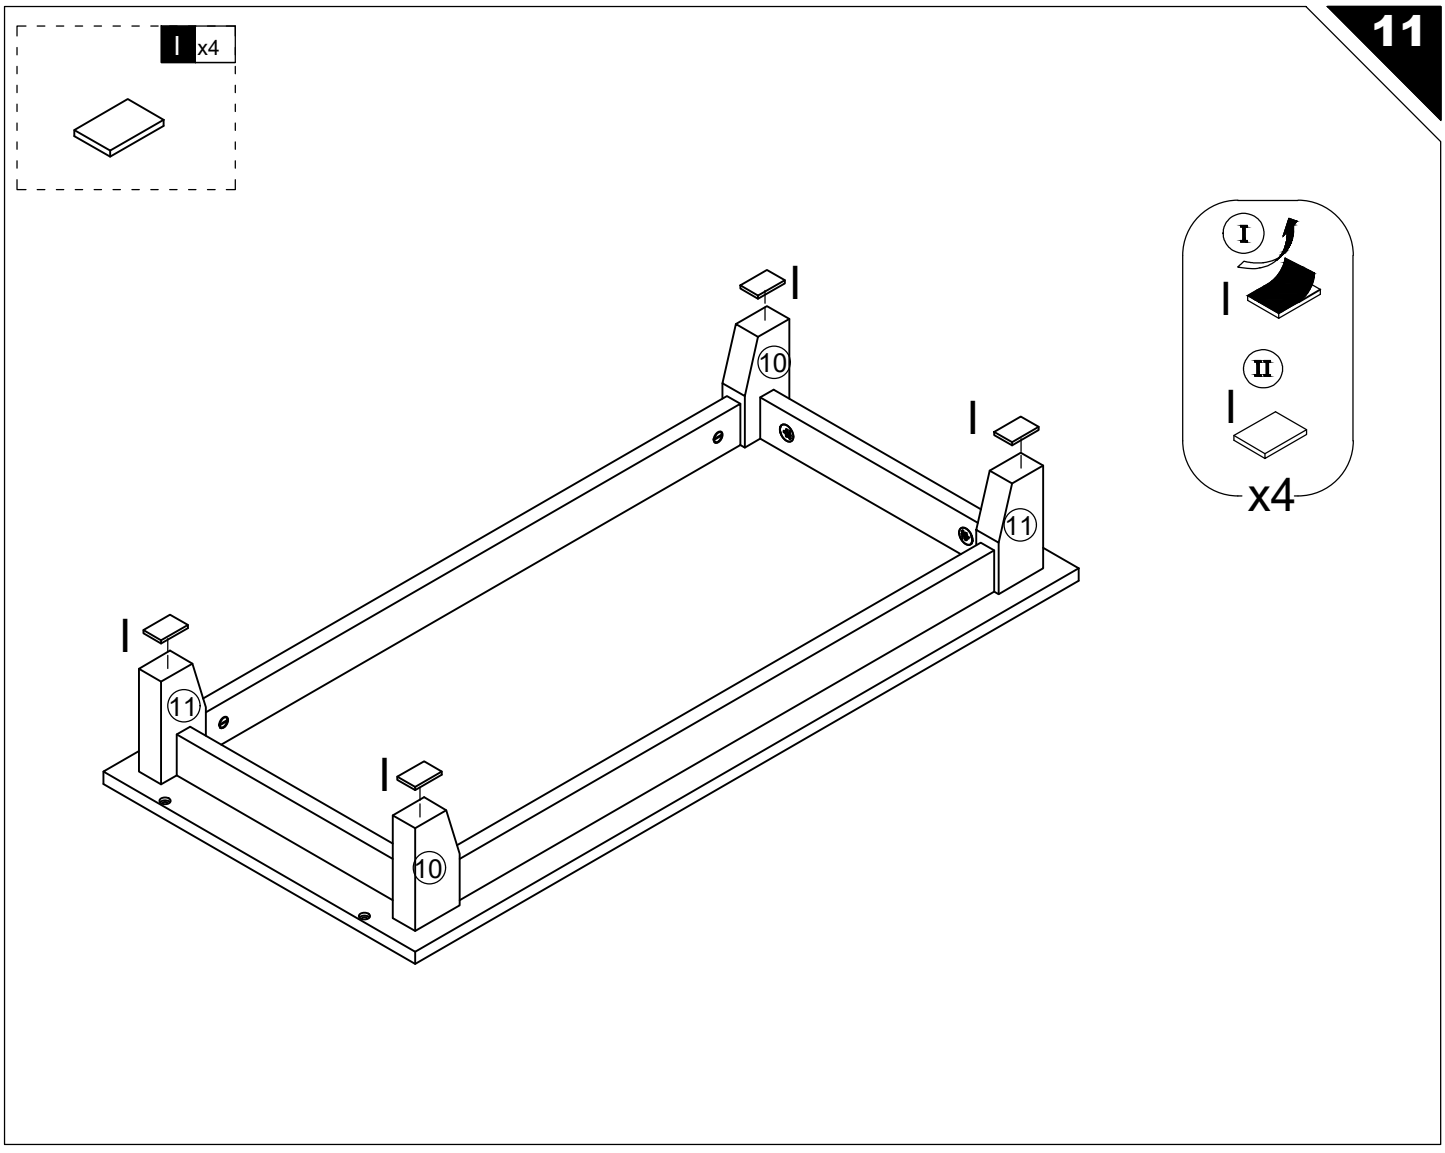

06
B x4
①
④
③
②
B
1
2
3


07
C x4
D x2
⑦ x1
G x2
C
C
⑦
②
C
C
⑥
③
①
④
D
G
D
G
D
G

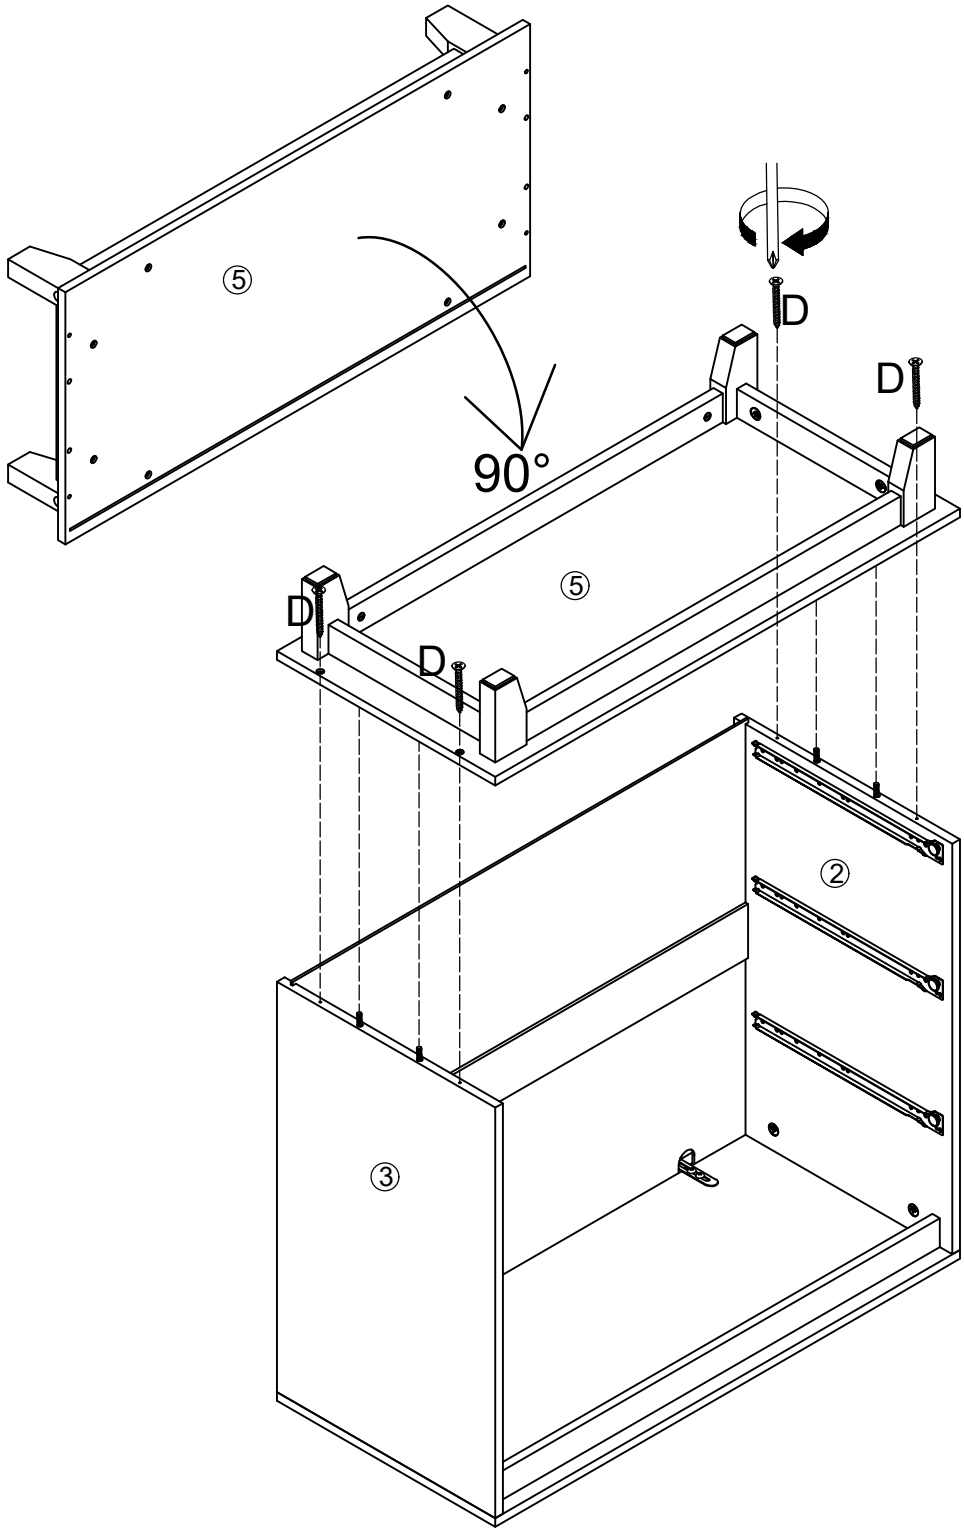

08
1
2
3
A x4
B x4
⑧ x2
⑩ x2
⑪ x2
A
⑪
A
⑩
x2
⑩
⑧
B
⑪
x2
B

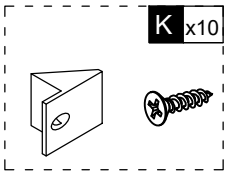

09
C x8
N x4
O x4
⑨ x2
⑨
O
N
⑩
C
C
O
N
C
⑧
C
N
⑩
C
O
C
⑨
C
C
O
⑩
⑧
⑪
N

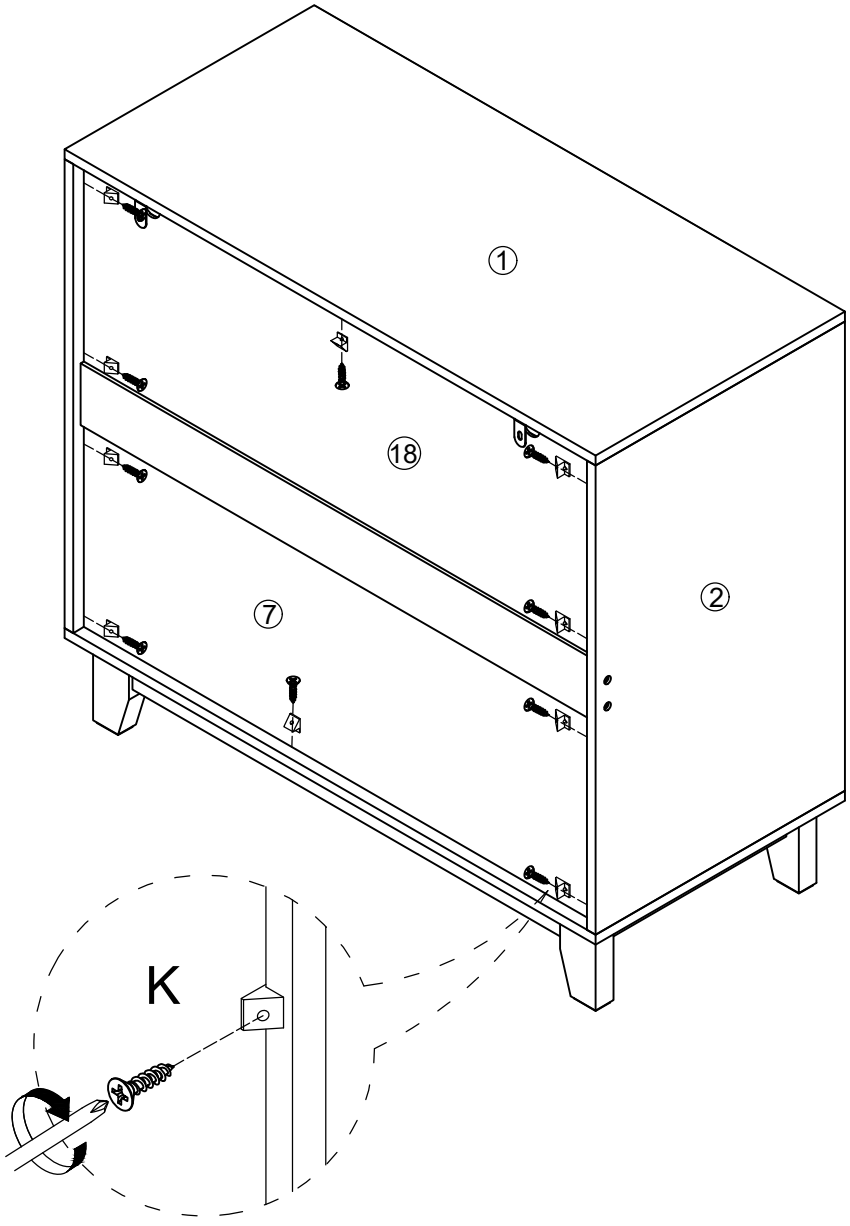

10
D x8
G x4
⑤ x1
D
D
D
D
D
D
D
⑤
G
8
11
9
G
10
G
10
8
9
11
G


11
I x4
I
10
I
11
I
11
I
10
I
II
I
x4

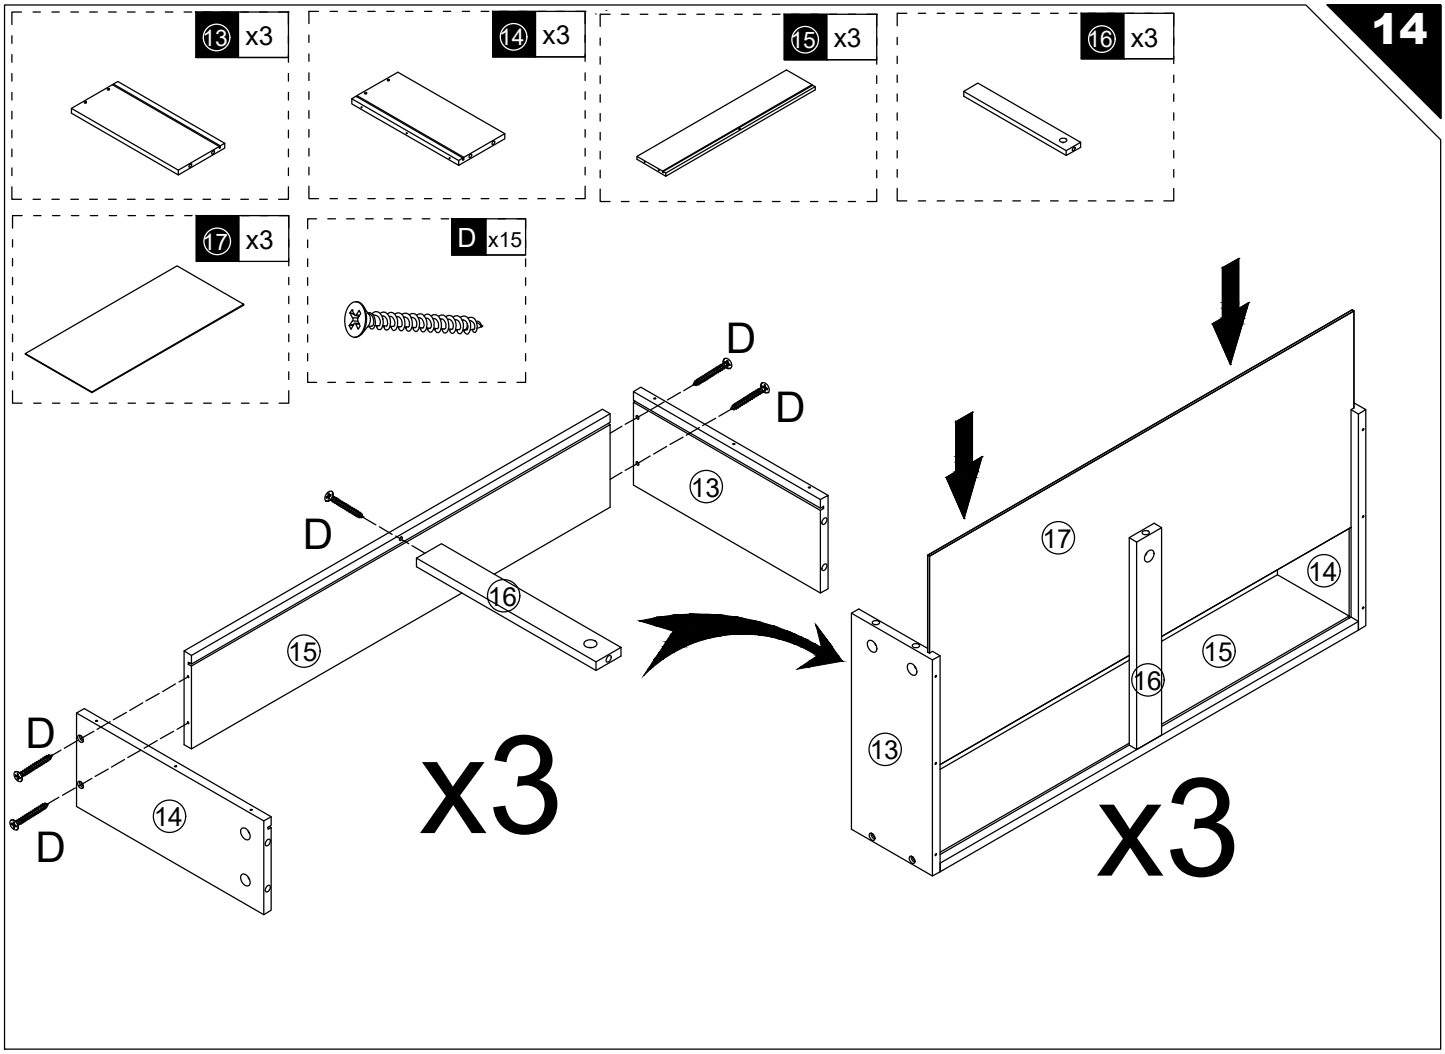
D x4

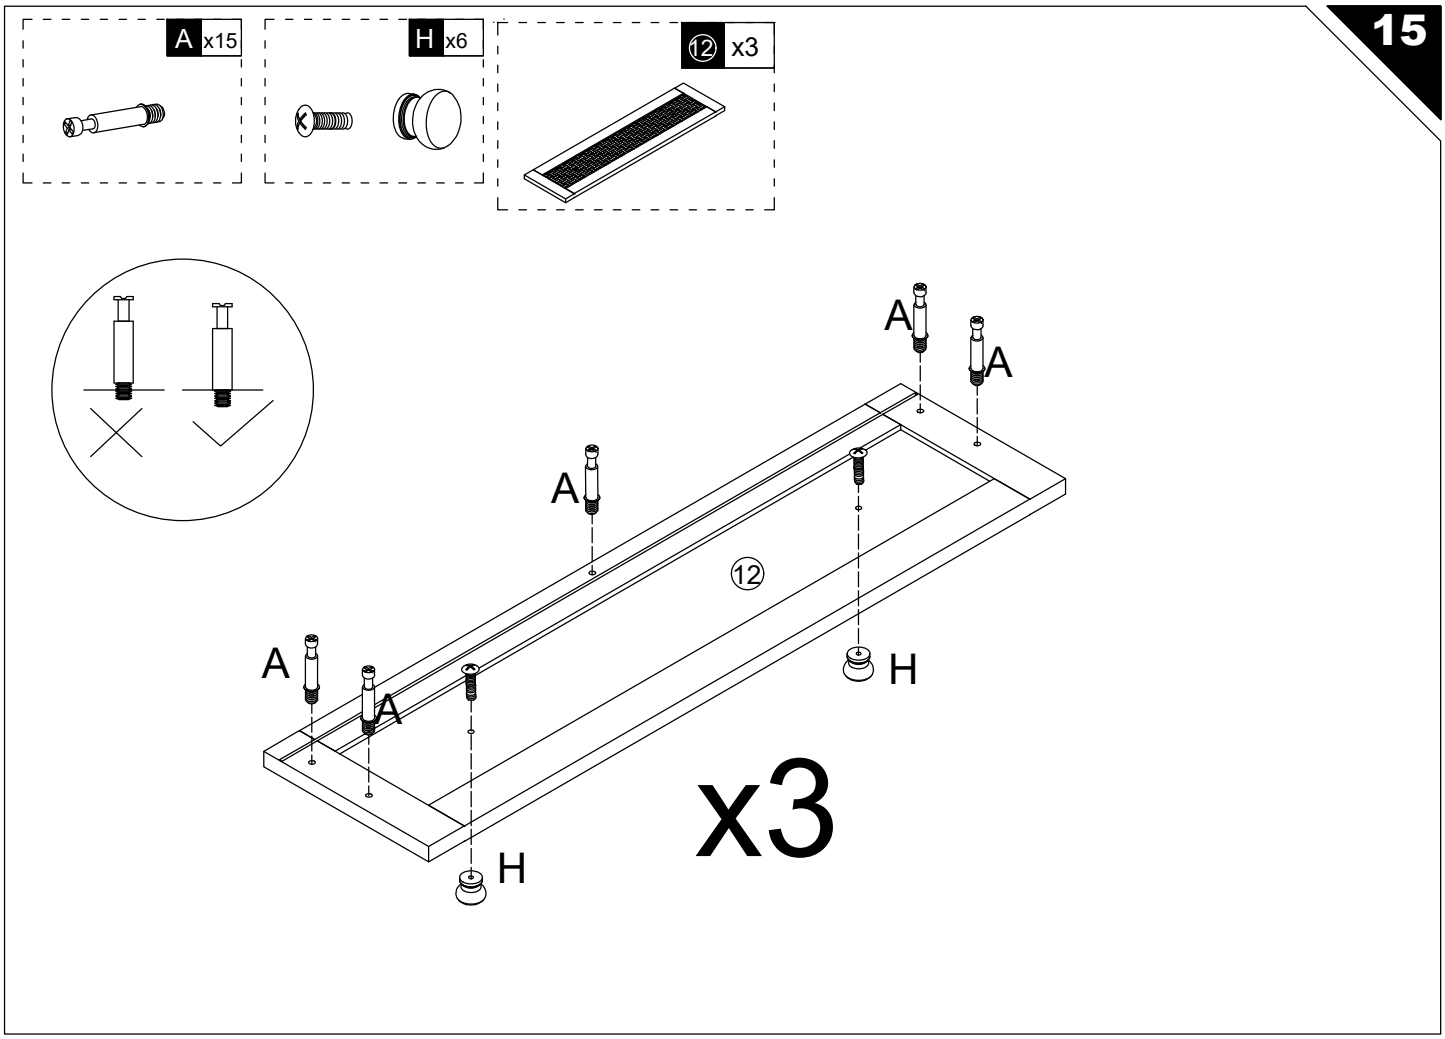


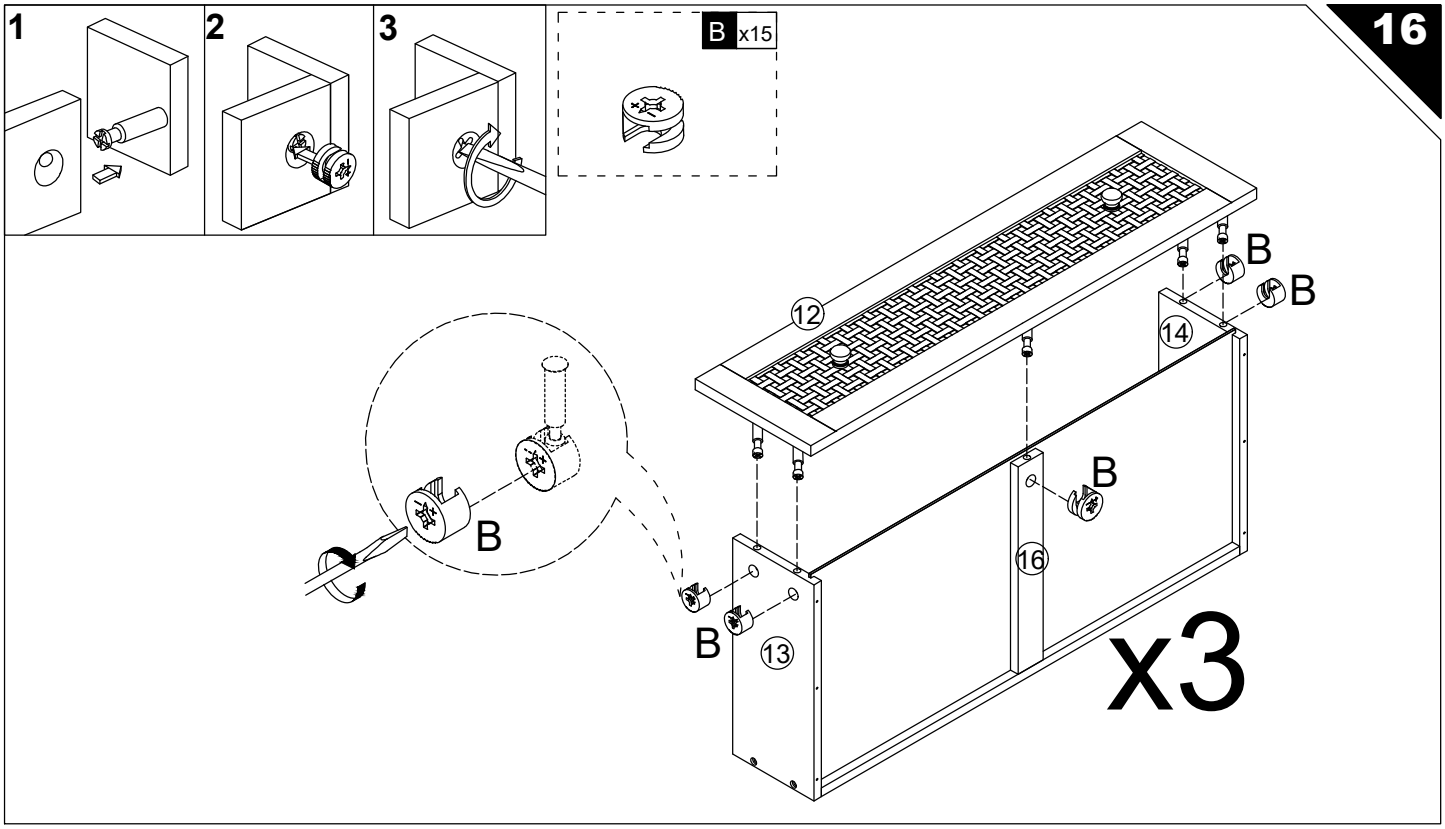

K x10

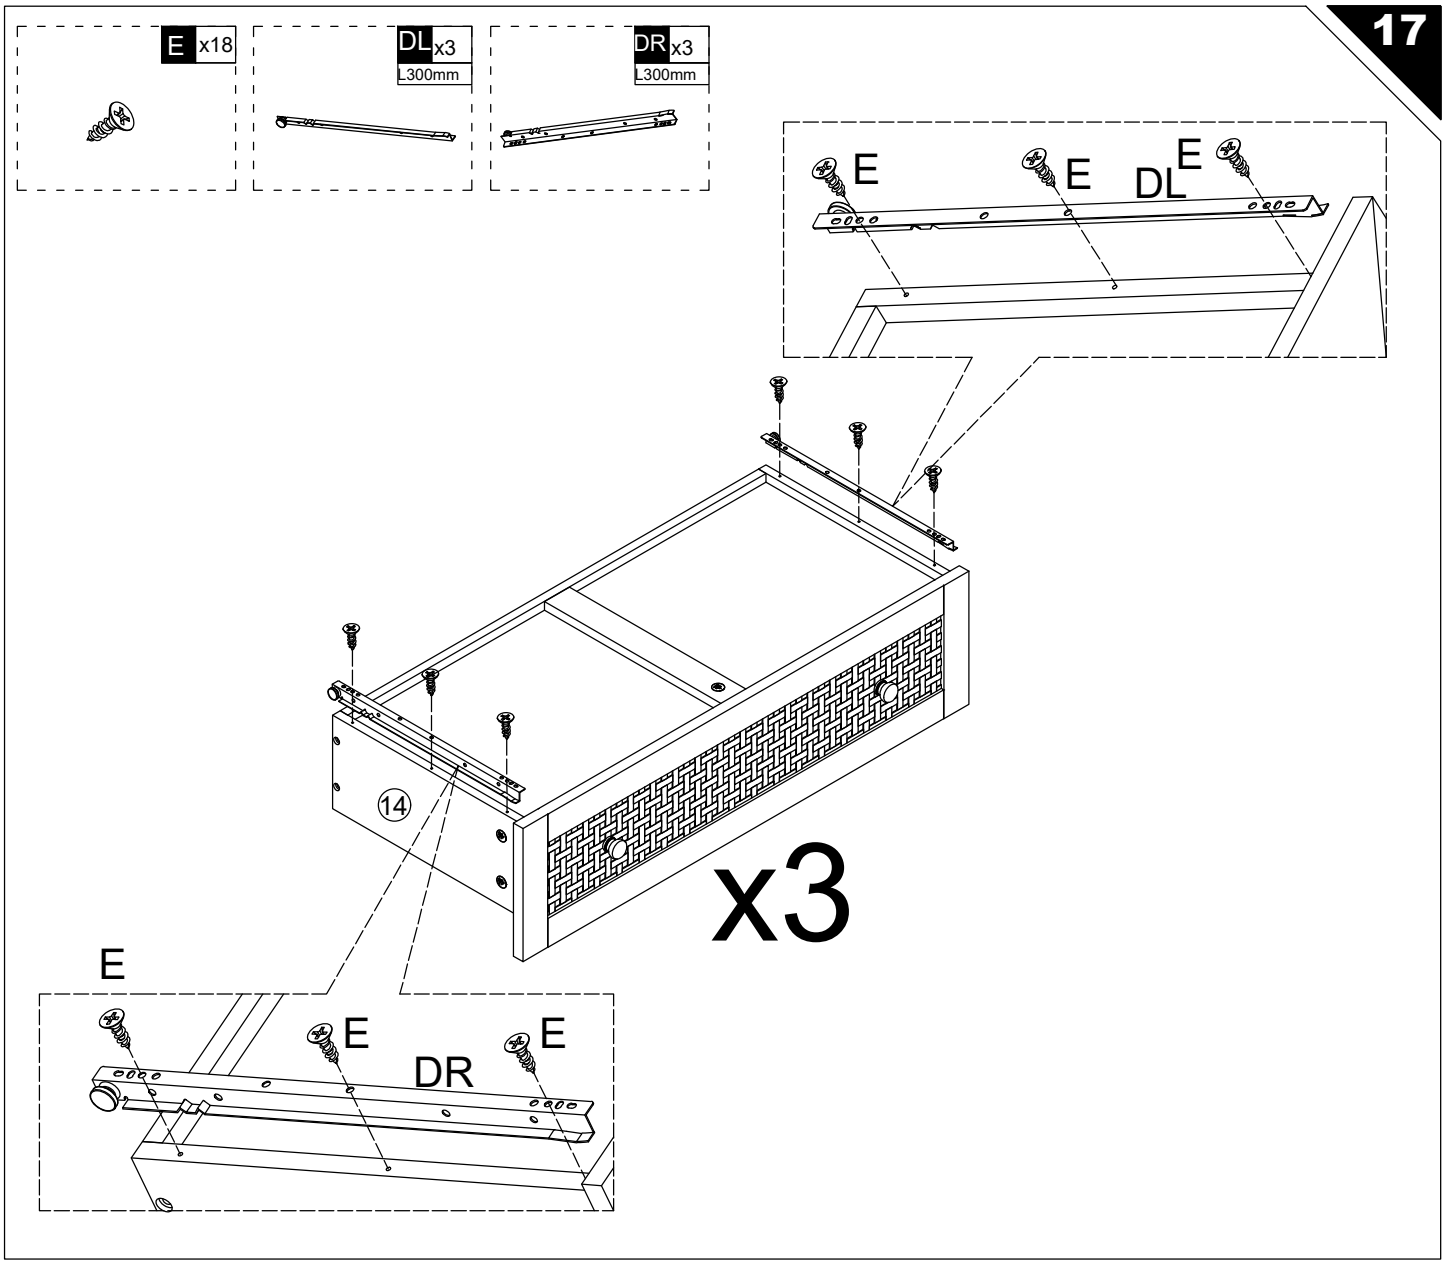

①
⑱
⑦
②

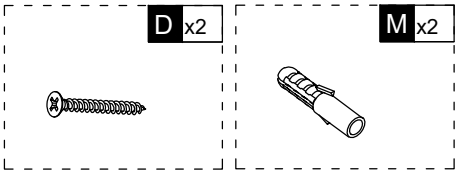
K

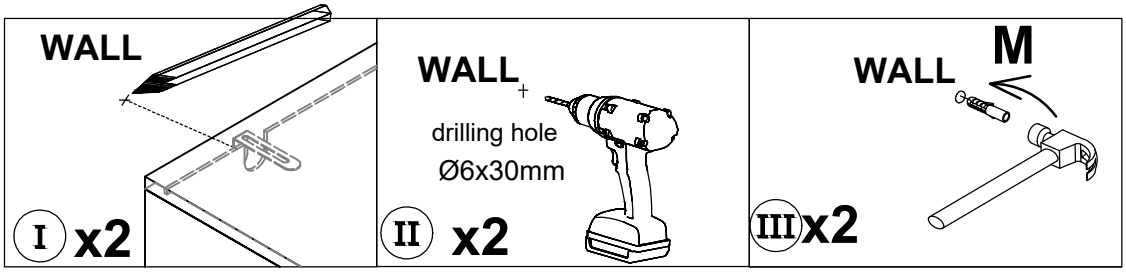

14
⑬ x3
⑭ x3
⑮ x3
⑯ x3
⑰ x3
D x15
D
D
D
D
D
⑬
⑯
⑮
⑰
⑭
⑮
⑯
⑬
x3
x3

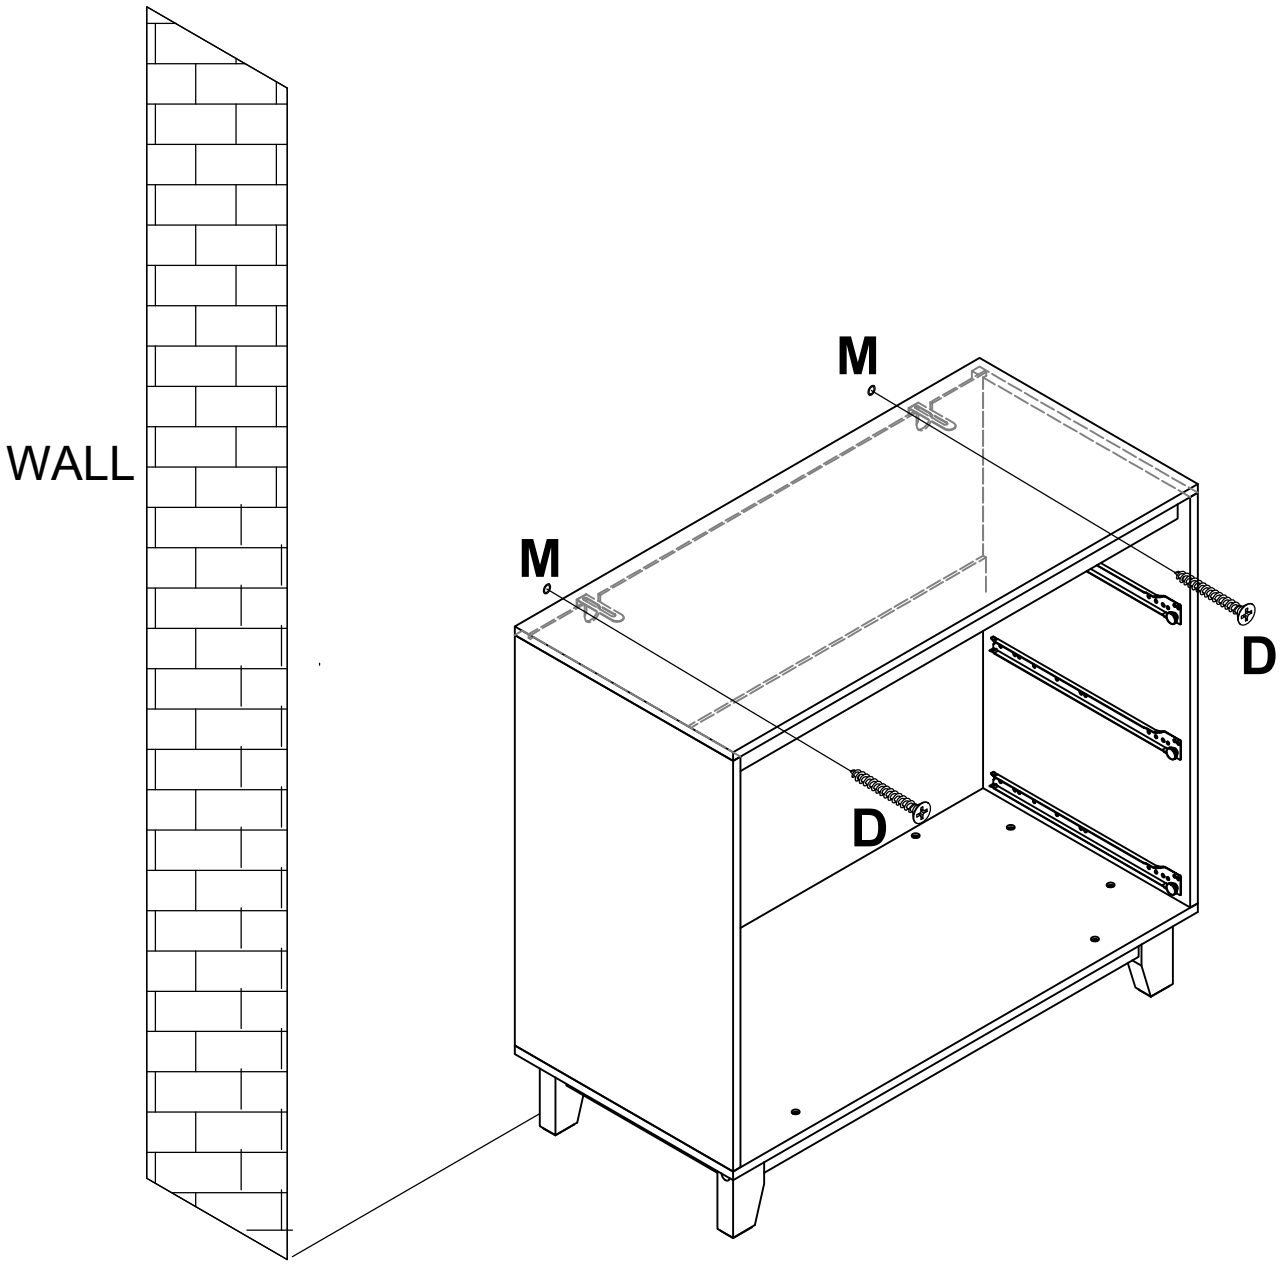

15
A x15
H x6
⑫ x3
A
A
A
A
A
⑫
H
H
x3


16
1
2
3
B x15
B
B
B
B
12
14
16
13
x3

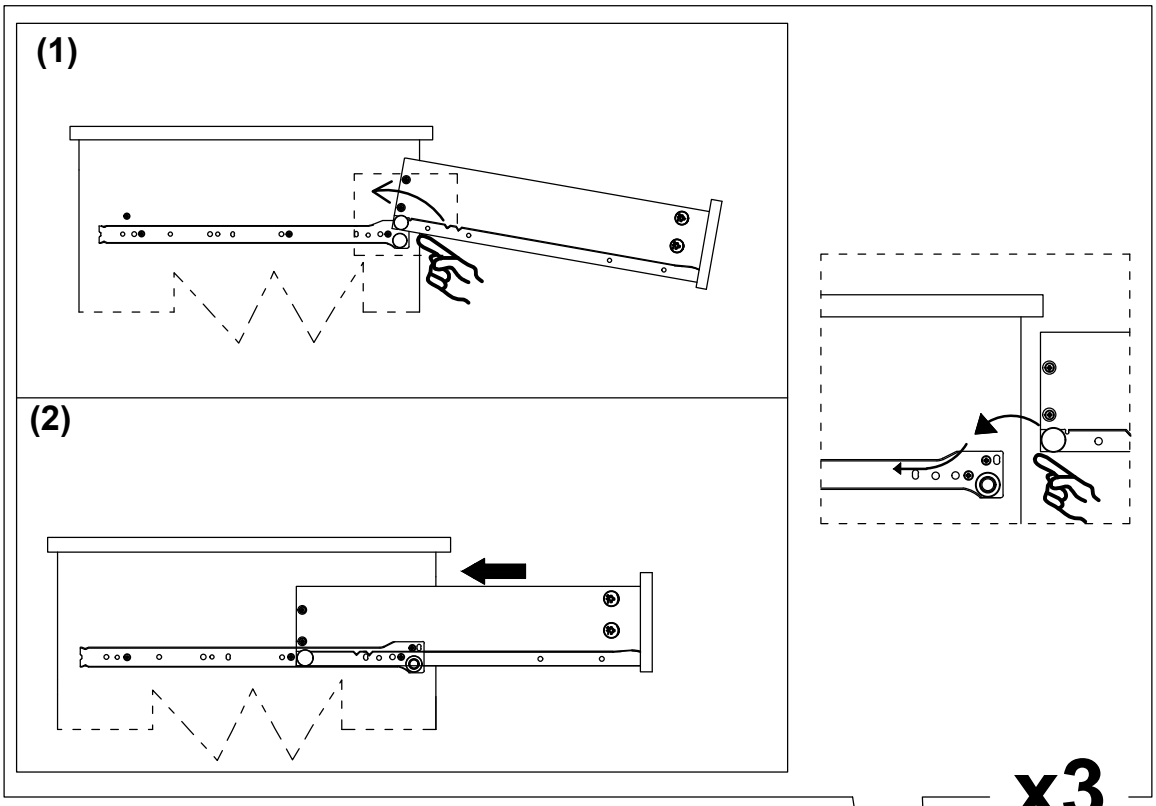

17
E x18
DL x3
L300mm
DR x3
L300mm
E
E
DL
E
14
x3
E
E
DR
E


D x2
M x2


WALL
I x2
WALL
drilling hole
Ø6x30mm
II x2
WALL
M
III x2


WALL
M
M
D
D

Done



x3

