
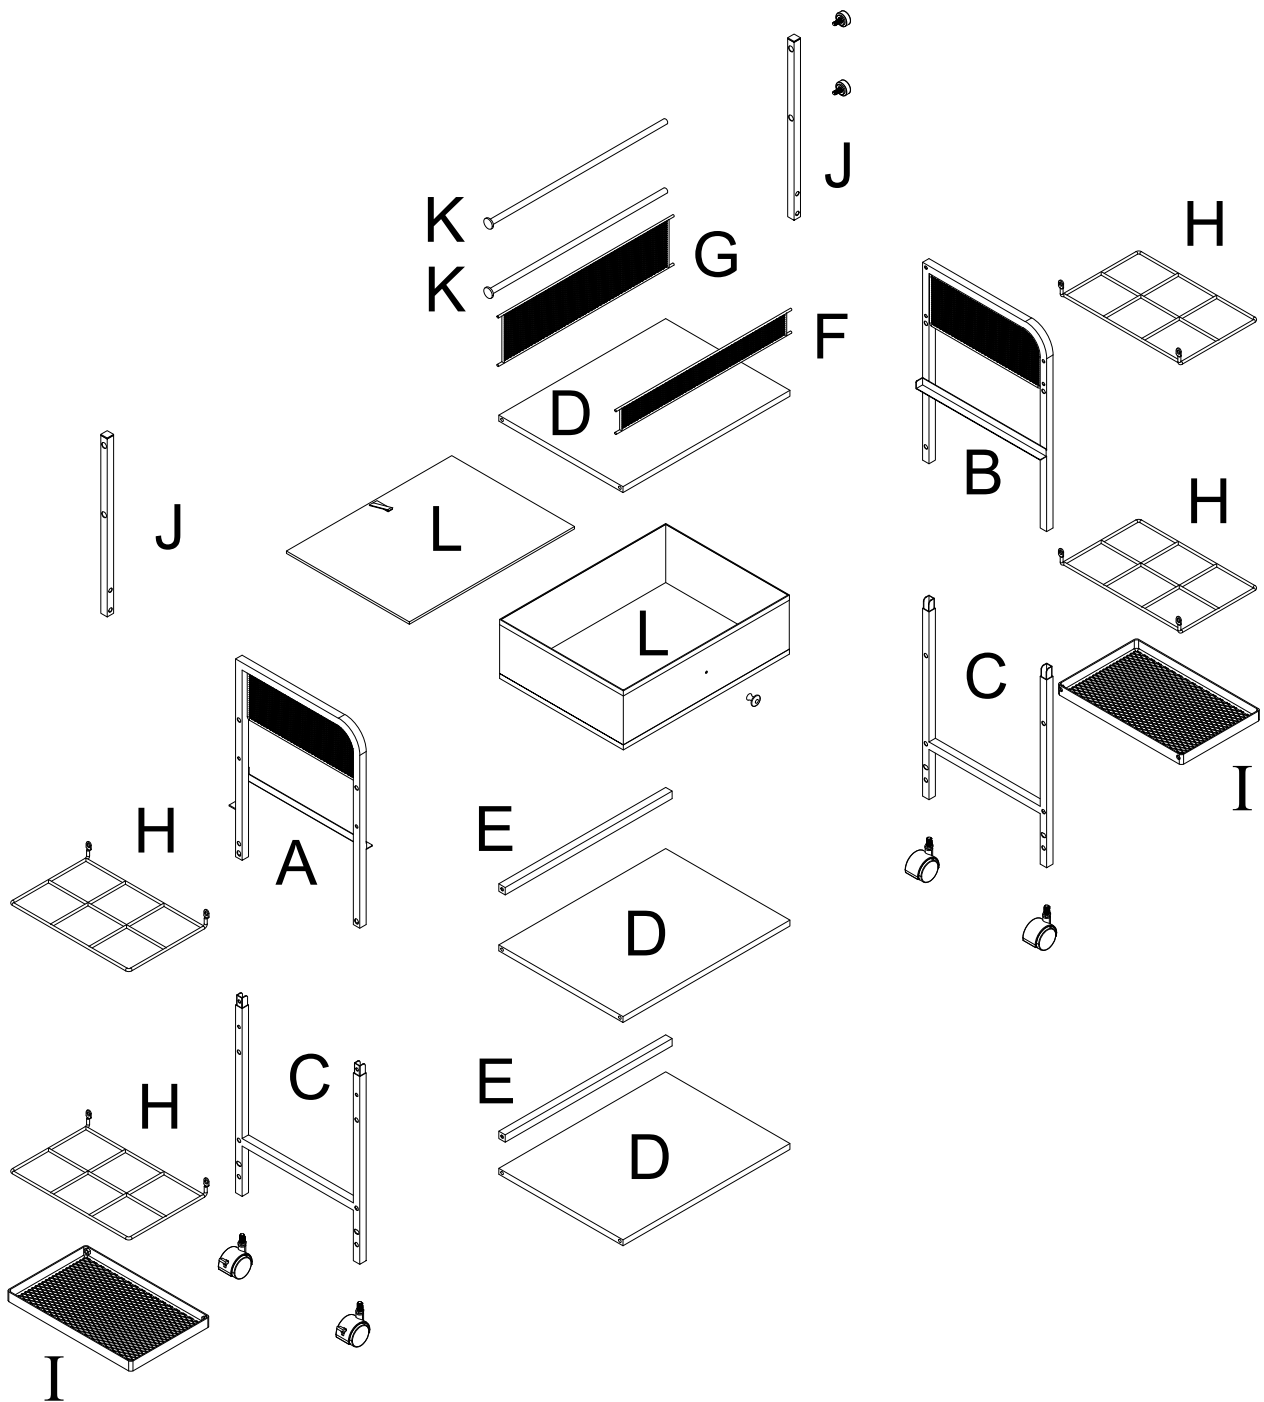
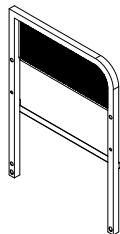


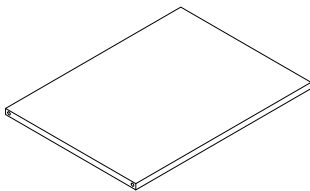
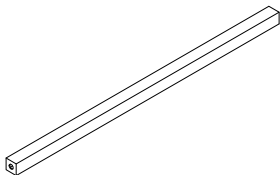
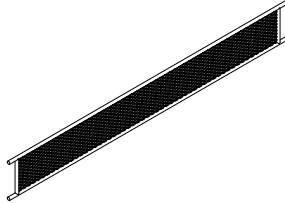
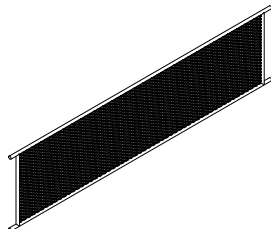
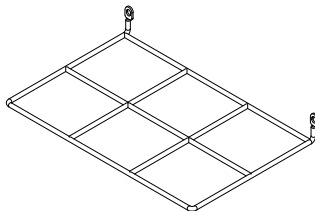
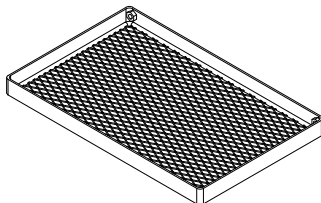
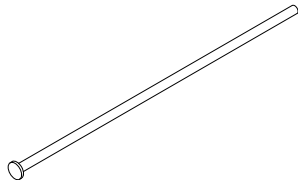
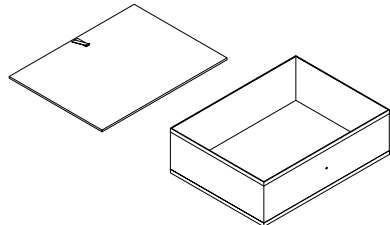
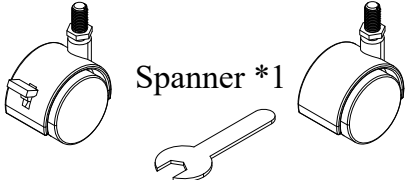
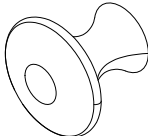

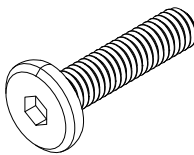
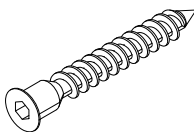
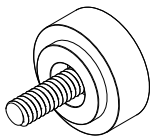


Assembly instructions




Parts included


 A * 1pc	 B * 1pc	 C * 2pcs	
 D * 3pcs	 E * 2pcs	 F * 1pc	
 G * 1pc	 H * 4pcs	 I * 2pcs	
 J * 2pcs	 K * 2pcs	 L * 1pc	
Brake Caster *2 Caster *2  Spanner *1 ①	 ②	 ③ 12+2pcs	
 ④ 12+2pcs	 ⑤ 12+2pcs	 ⑥ 2pcs	 ⑦ 1pc

Installation steps

1.Connect iron frames A, C & B, C with screws ③.

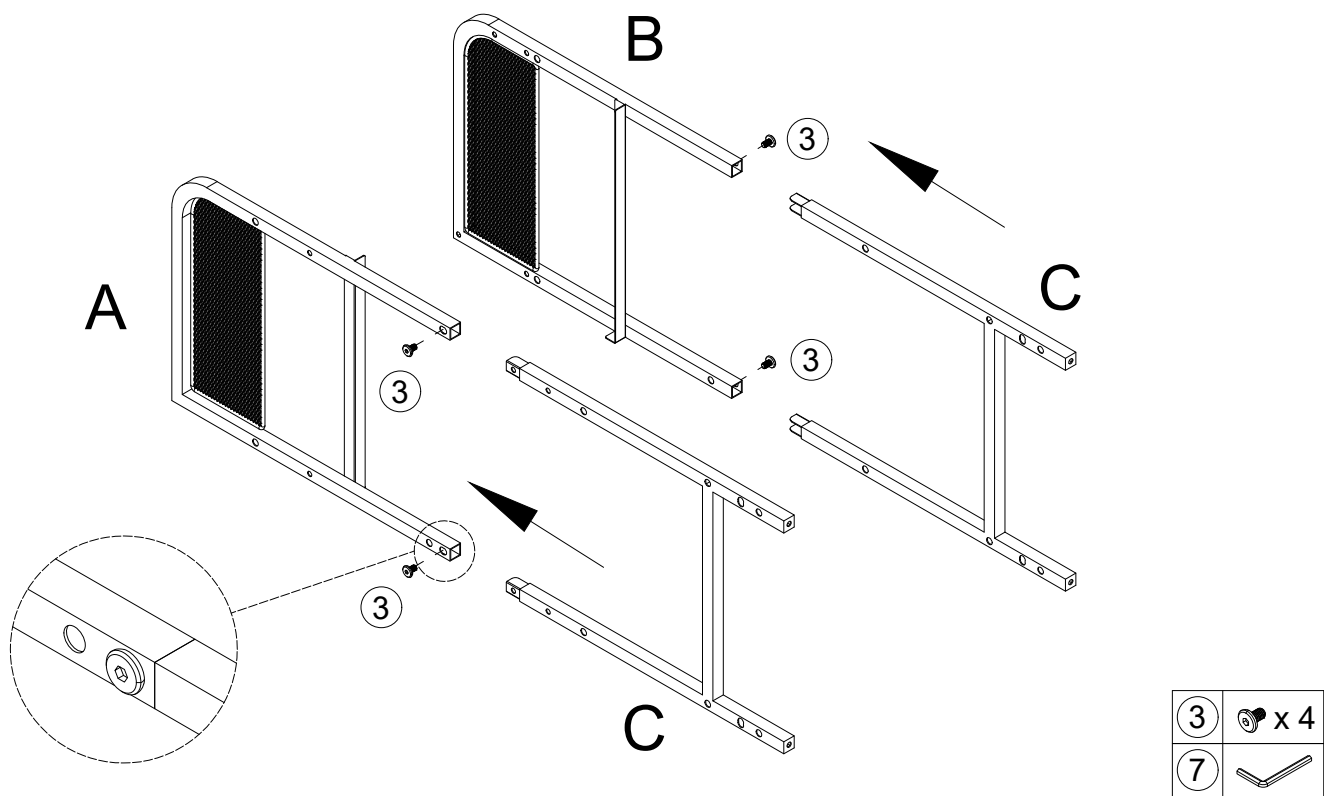


2.Connect iron pipe E and iron frame AC with screws ④, and connect wooden board D and iron frame AC with screws ⑤. Please pay attention to the corresponding holes when installing.

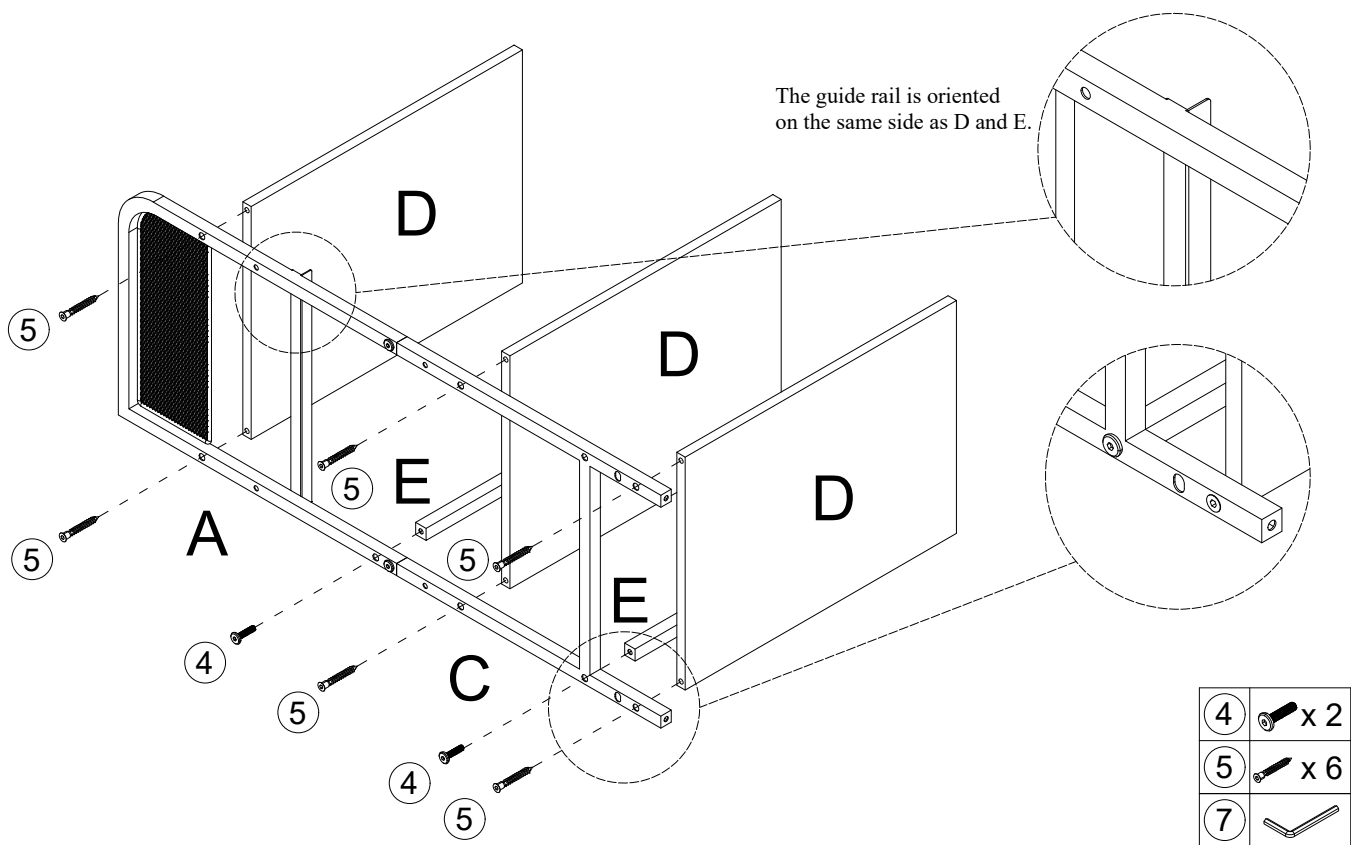


Installation steps

3.Insert iron mesh F, G into the reserved holes of the iron frame A.

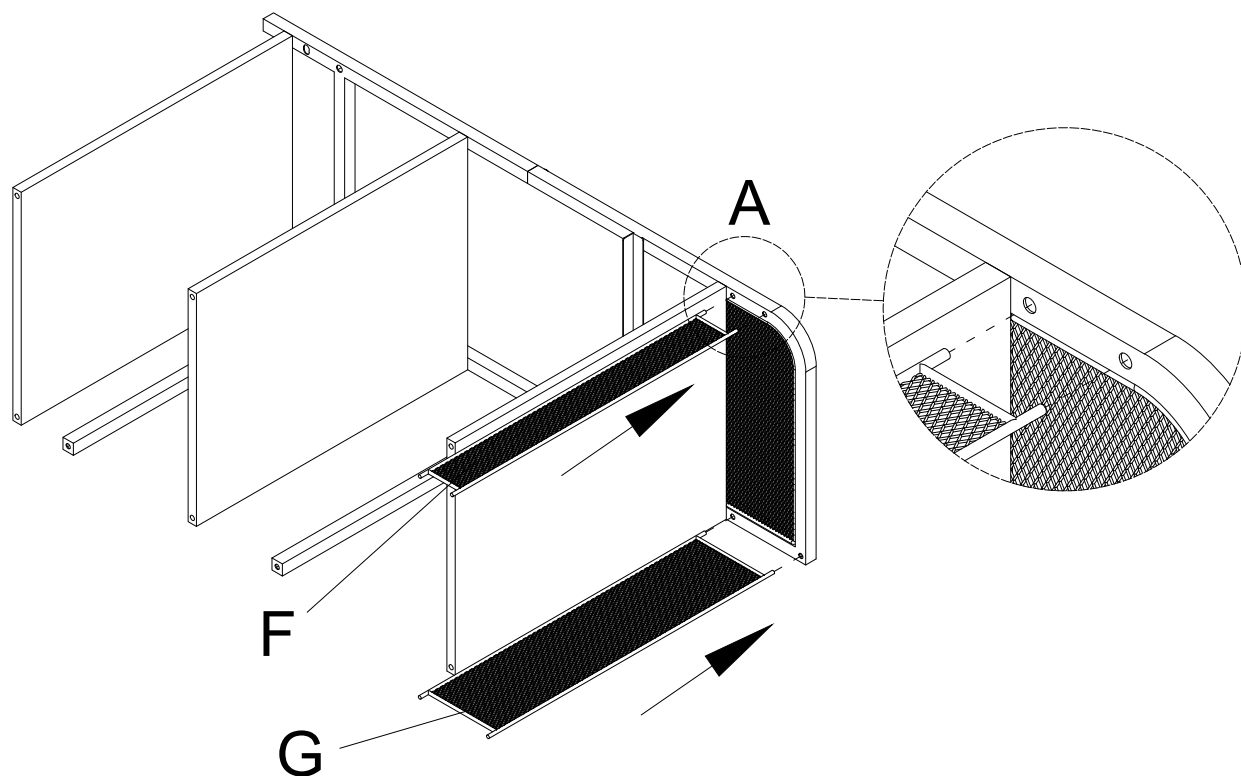


4.Use screw ④ and ⑤ to secure frame BC to the wood board and metal tubes. (Note: Before tightening the screws, please align iron mesh F and G with the reserved holes on iron frame B.)

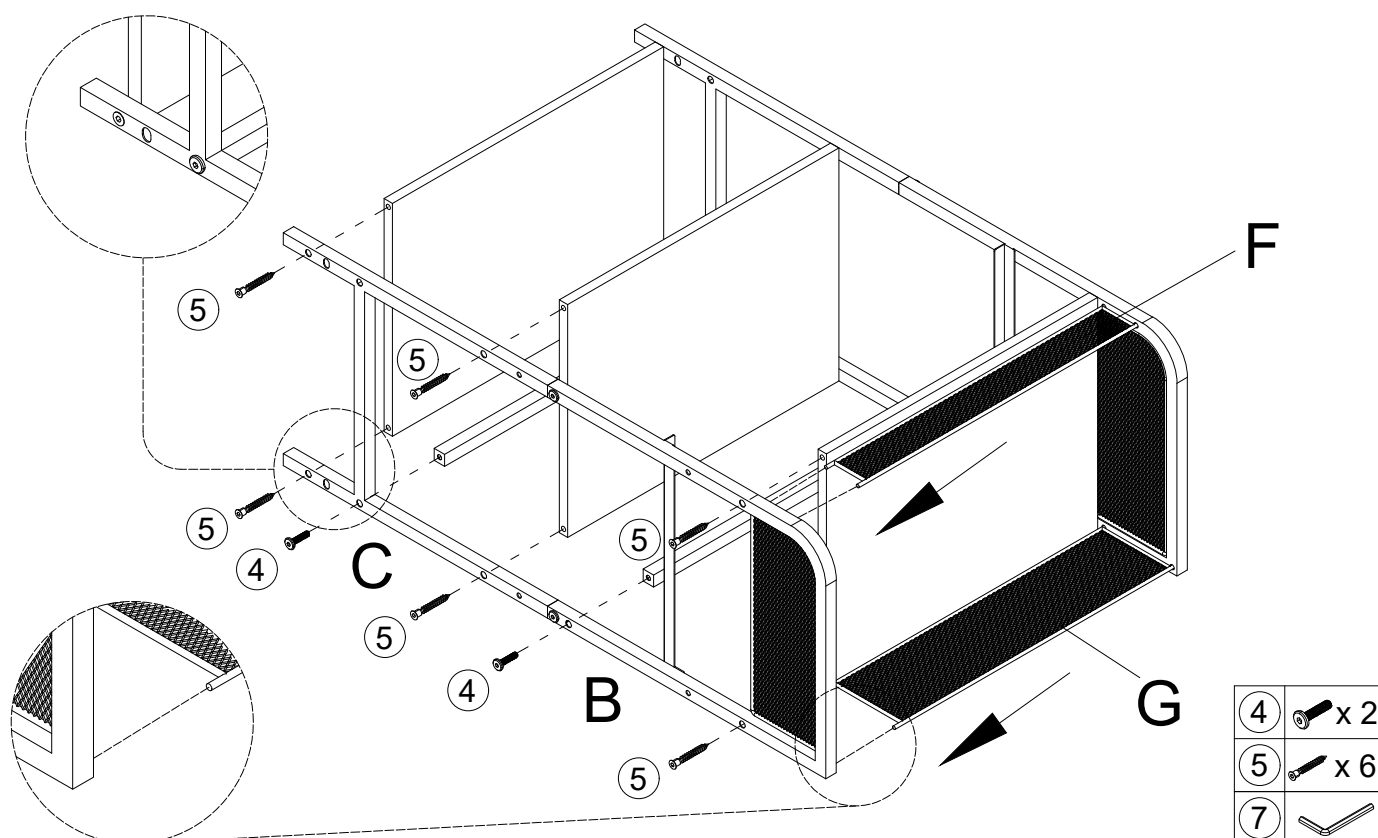


Installation steps

5.Install the wheels ① at the bottom of the iron frame C. A wrench (included) is required.

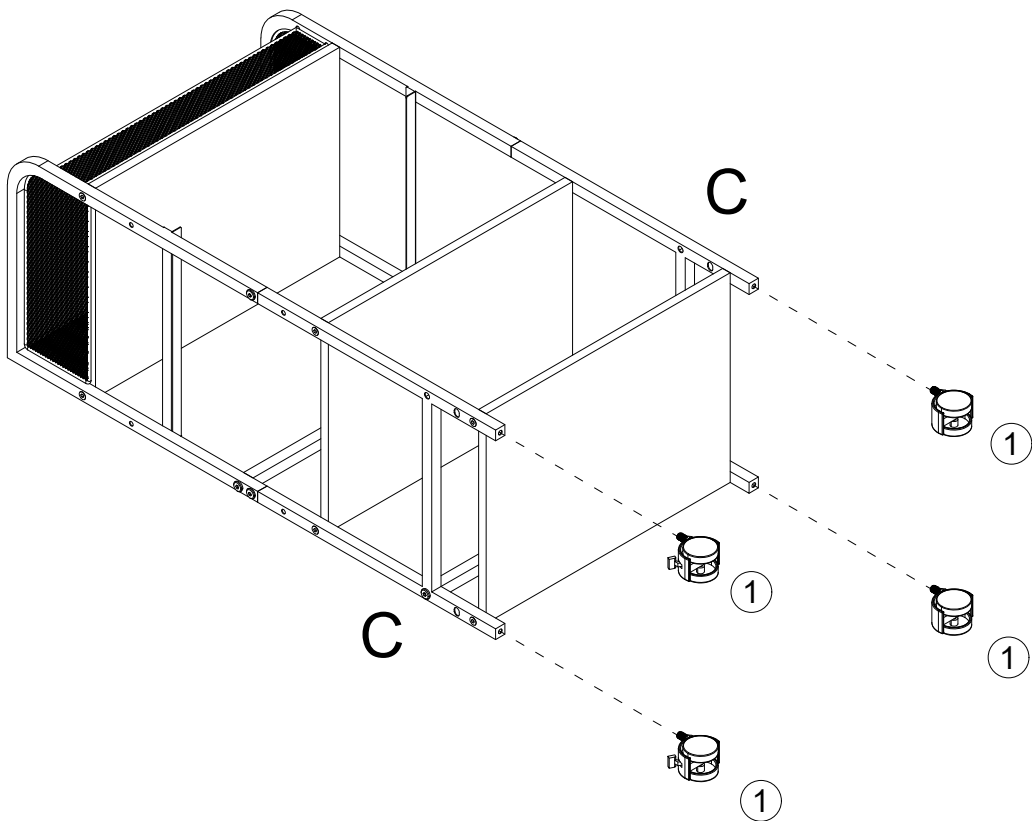


6.Use screws ③ to install iron frame H to the corresponding positions on iron frames AC, BC.

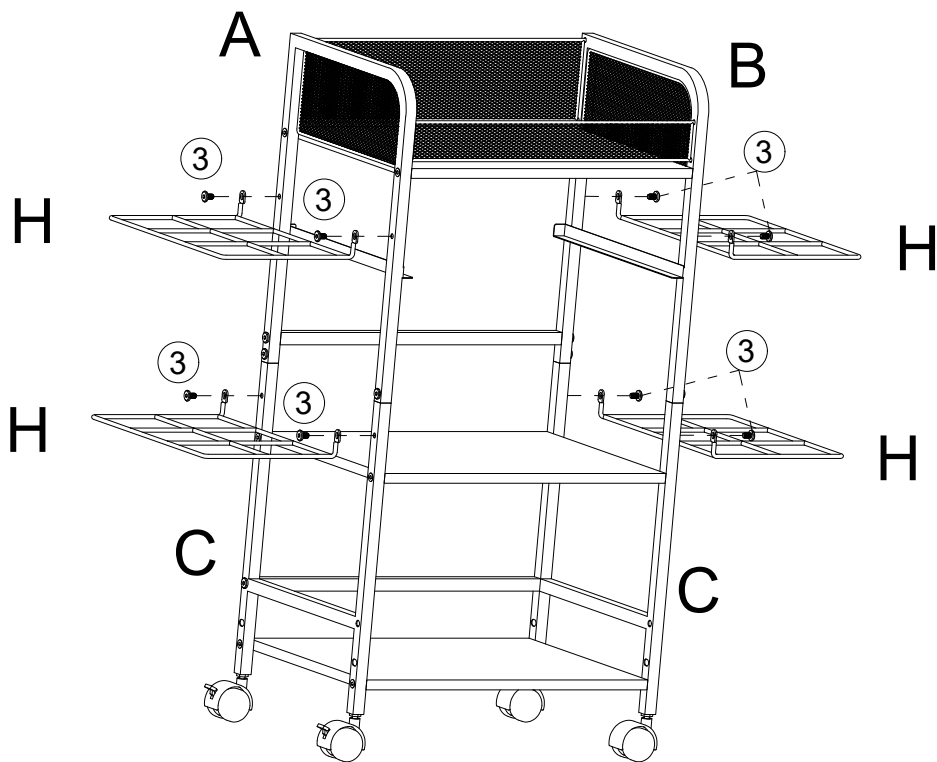


Installation steps

7. Use screws ④ to fix iron frame I to iron frame C.

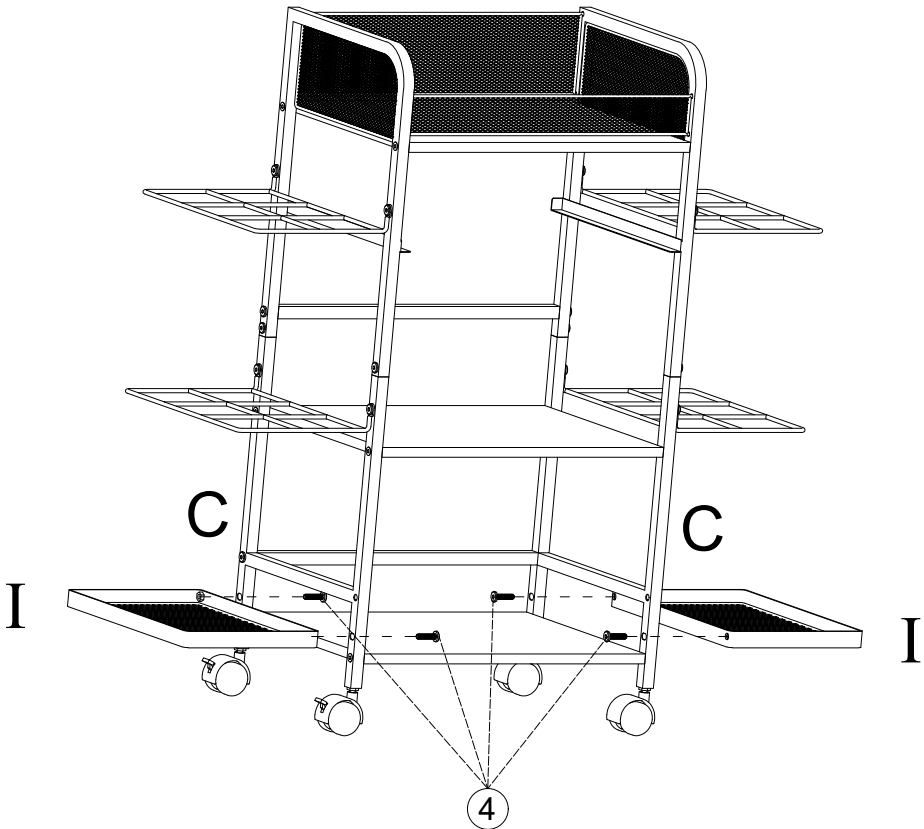


8. Use screws ④ to fix iron pipe J to the back of the iron frame.

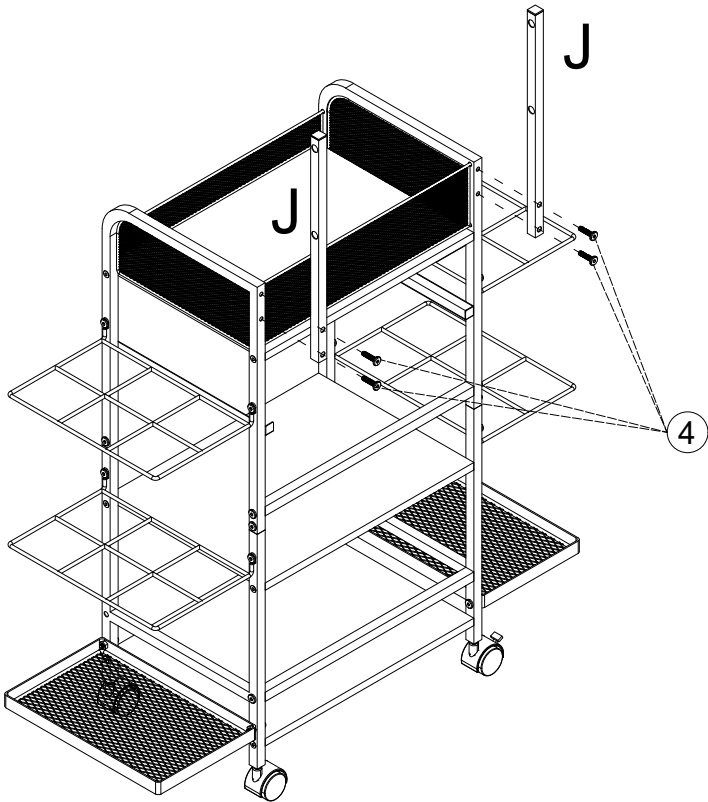


Installation steps

9. Insert one end of iron pipe K through the reserved hole of iron pipe J, and then lock the other end of K pipe with screw ⑥.

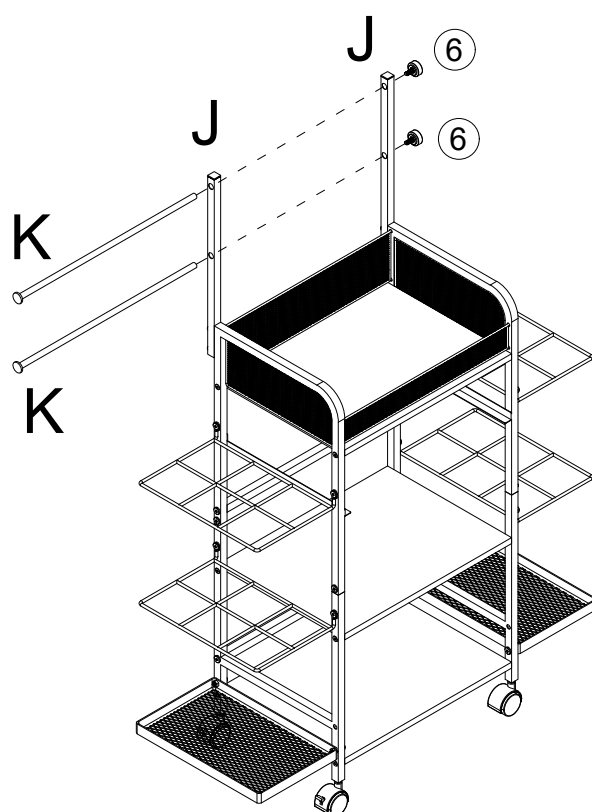

⑥  x 2

10. Place the bottom plate L into the drawer, and then use screws ② to install the handle in front of the drawer L. Finally, place the assembled drawer into the slide rail.

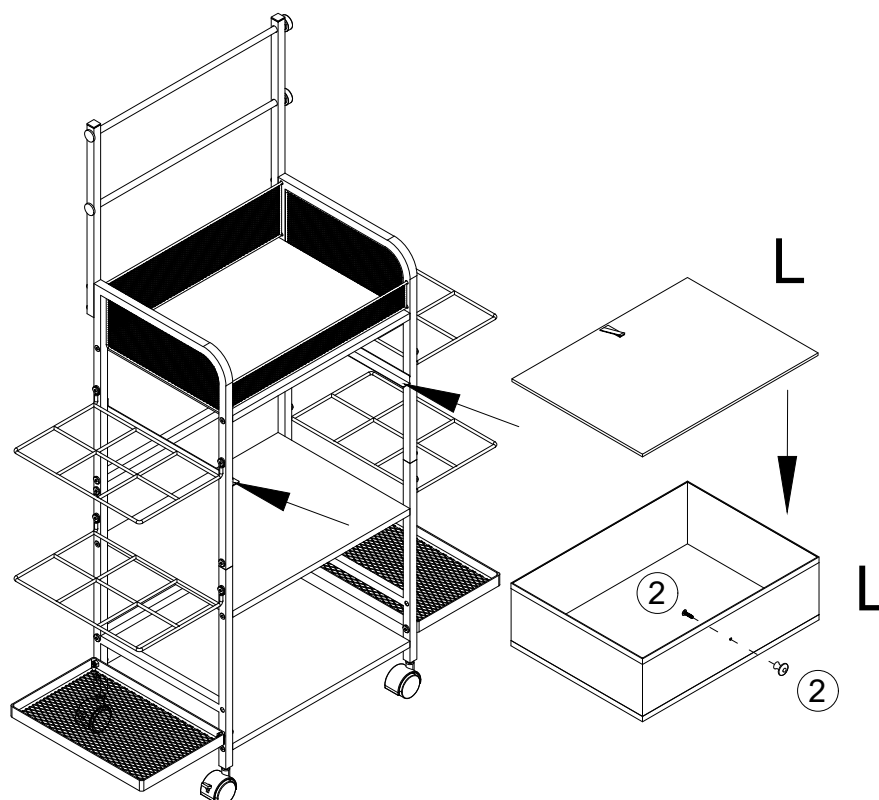

②  

Installation steps

11. Installation is complete.

