

DA0290GR01A
DA0290HB01A
DA0290BS01A

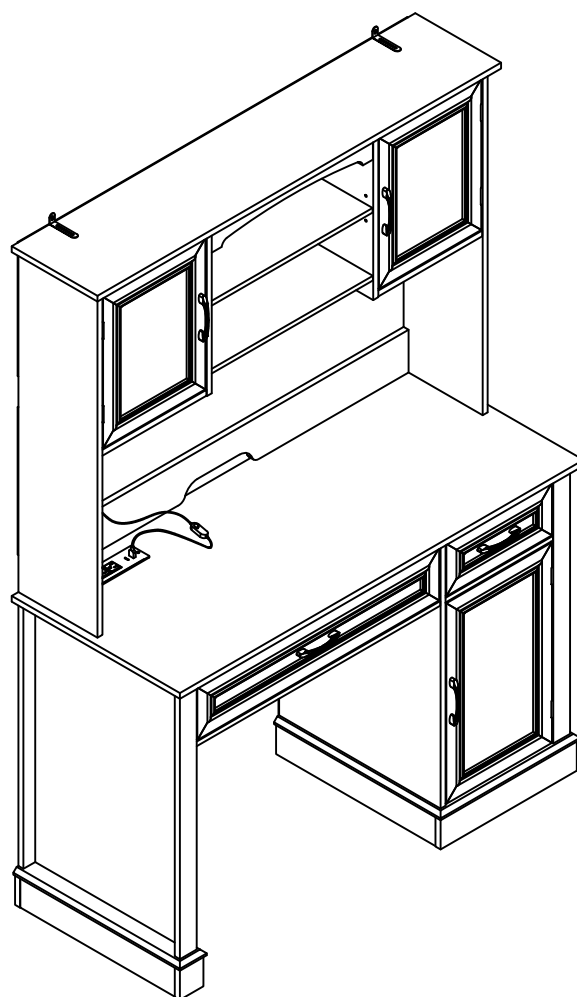


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

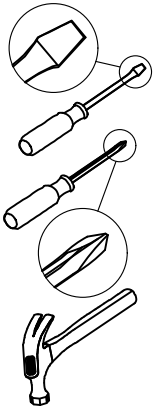

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please pay attention to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY:1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

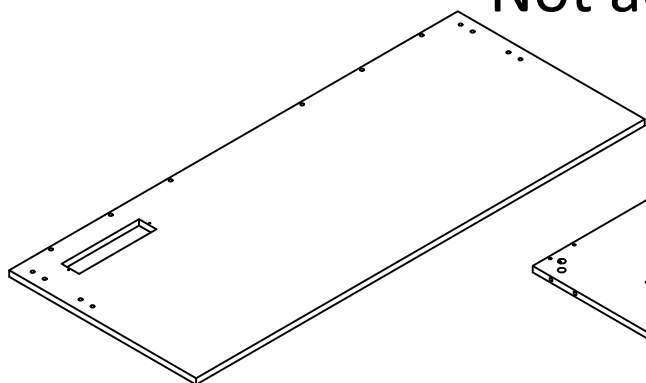


①

TOP
Qty:1

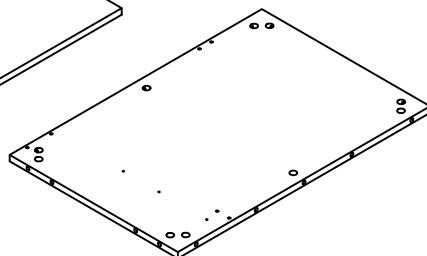


②

LEFT SIDE PANEL
Qty:1

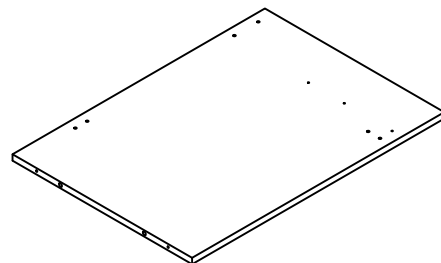


③

MIDDLE SIDE PANEL
Qty:1

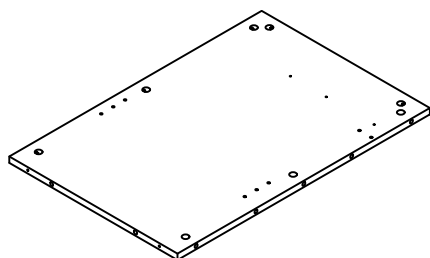


④

RIGHT SIDE PANEL
Qty:1

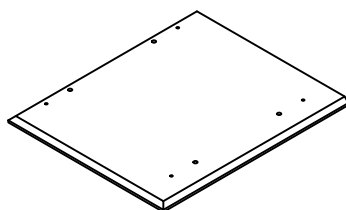


⑤

RIGHT BOTTOM
Qty:1

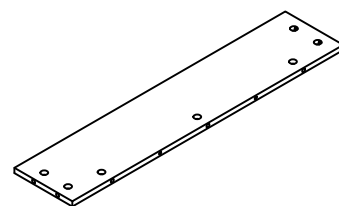


⑥

DESK BACK PANEL
Qty:1

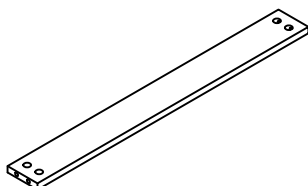


⑦

FIXED SHELF
Qty:1

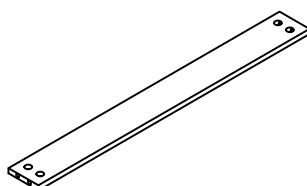

⑧

FIXED SHELF
Qty:1




⑨

FIXED SHELF
Qty:1


Board Identification

Not actual size

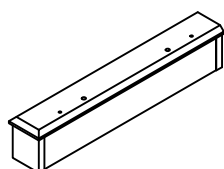


⑩

LEFT BOTTOM
Qty:1

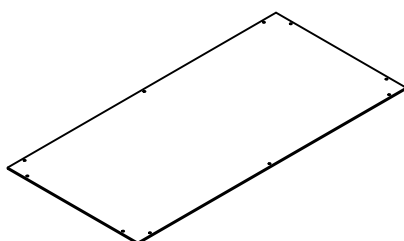


⑪

LOWER BACK PANEL
Qty:1

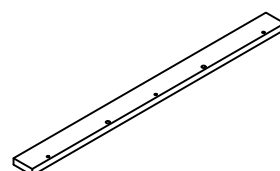


⑫

SLAT
Qty:2

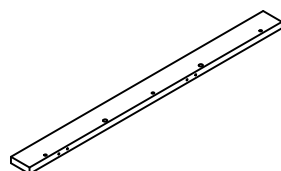


⑬

SLAT
Qty:1

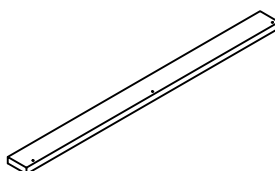


⑭

SLAT
Qty:1




⑮

BOTTOM BACK RAIL
Qty:1

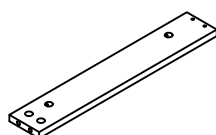


⑯

BOTTOM LEFT RAIL
Qty:1

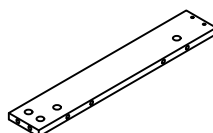

⑰

BOTTOM RIGHT RAIL
Qty:1

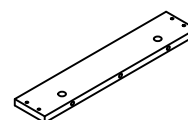


⑱

BOTTOM FRONT RAIL
Qty:1


Board Identification

Not actual size

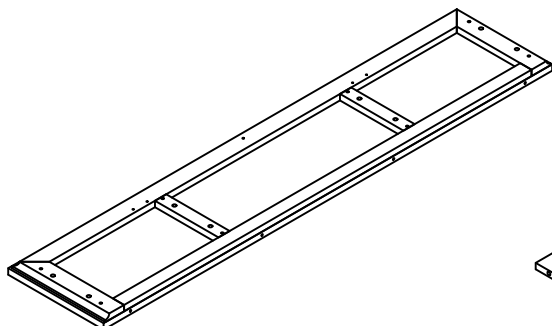


19

FIXED SHELF
Qty:1

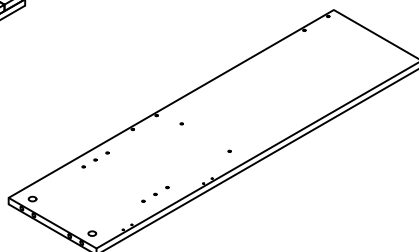


20

UPPER LEFT SIDE PANEL
Qty:1

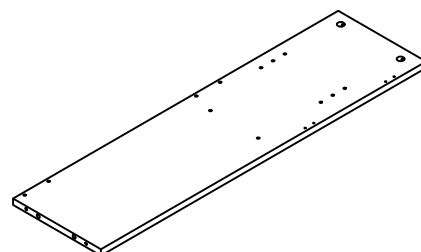


21

UPPER RIGHT SIDE PANEL
Qty:1

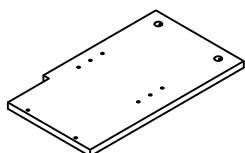


22

UPPER LEFT PARTITION
Qty:1

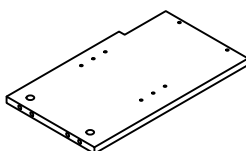


23

UPPER RIGHT PARTITION
Qty:1

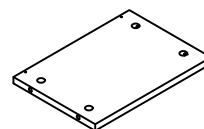


24

FIXED SHELF
Qty:2

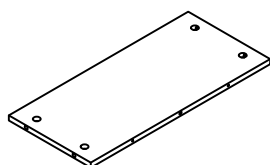


25

FIXED SHELF
Qty:1

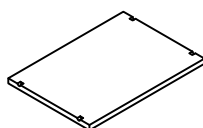

26

FIXED SHELF
Qty:2

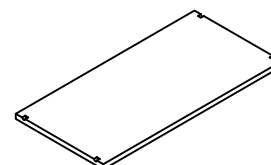


27

FIXED SHELF
Qty:1


Board Identification

Not actual size

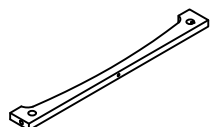


28

CENTRAL TRIM PANEL
Qty:1

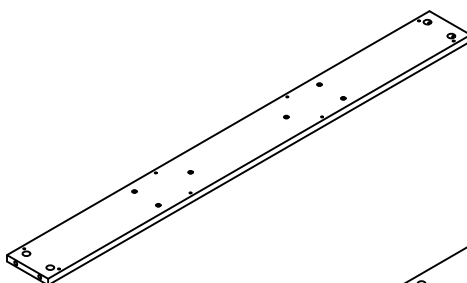


29

UPPER BACK SLAT
Qty:1

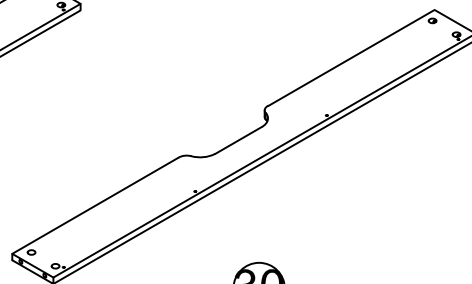


30

MIDDLE BACK SLAT
Qty:1

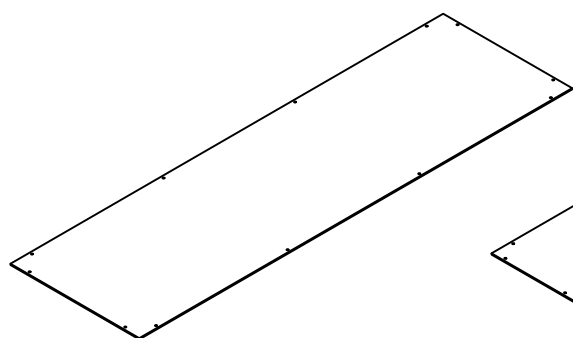


31

UPPER BACK PANEL
Qty:1

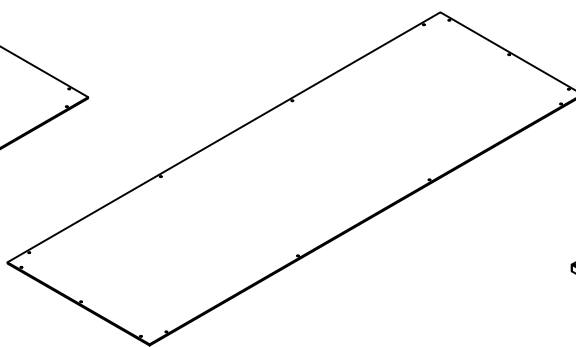


32

MIDDLE BACK PANEL
Qty:1

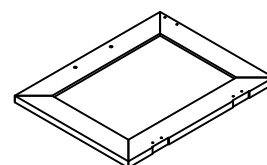


33

UPPER LEFT DOOR
Qty:1

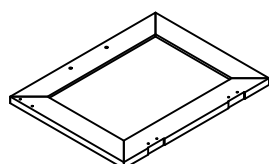


34

UPPER RIGHT DOOR
Qty:1

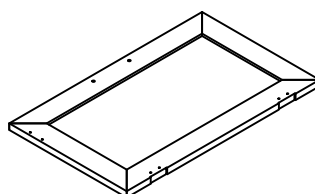

35

LOWER DOOR
Qty:1




36

DRAWER LEFT SIDE PANEL
Qty:2


Board Identification

Not actual size




37

DRAWER RIGHT SIDE PANEL
Qty:2




38

DRAWER BACK PANEL
Qty:1

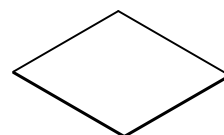


39

DRAWER BOTTOM
Qty:1




40

DRAWER FRONT PANEL
Qty:1

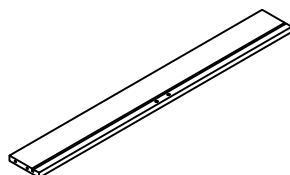


41

DRAWER BACK PANEL
Qty:1




42

DRAWER SLAT
Qty:1

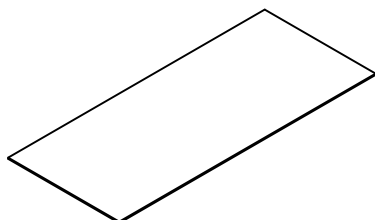


43

DRAWER BOTTOM
Qty:1

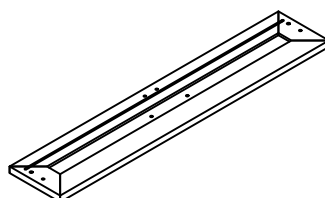

44


DRAWER FRONT PANEL
Qty:1

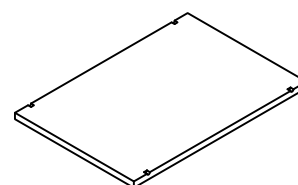


45

FIXED SHELF
Qty:1


Part List

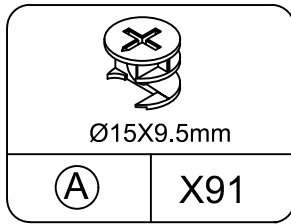


CAM LOCK
spare:3

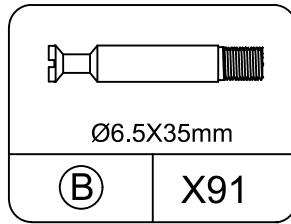


CAM BOLT
spare:3

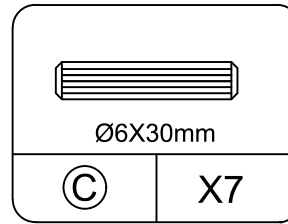


WOOD DOWEL
spare:1

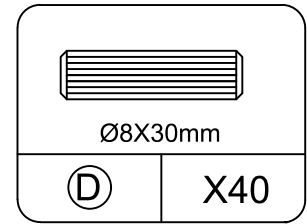


WOOD DOWEL
spare:2

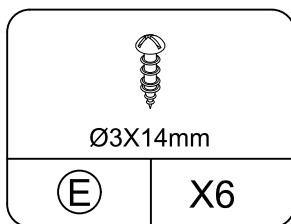


SCREW
spare:1

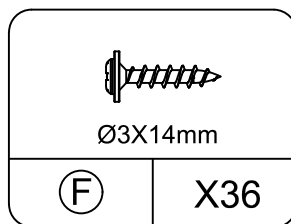


SCREW
spare:2

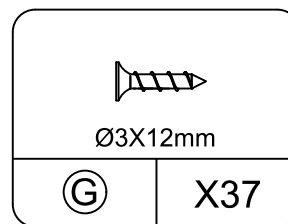


SCREW
spare:2

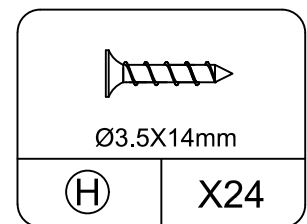


SCREW
spare:2

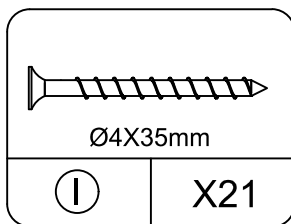


SCREW
spare:2

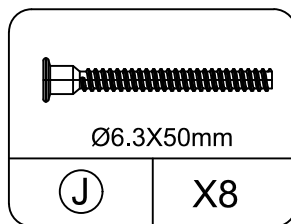


SCREW
spare:1

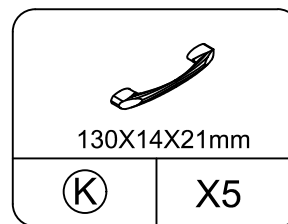


THE POWER PLUG

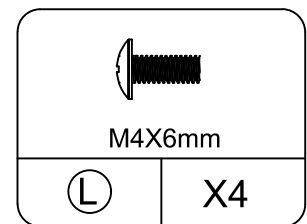


SCREW
spare:1

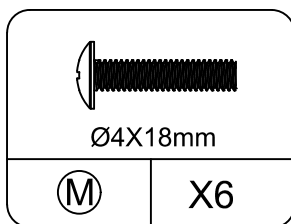


SCREW
spare:1

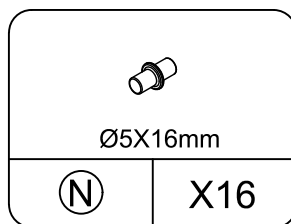


SHELF SUPPORT
spare:1

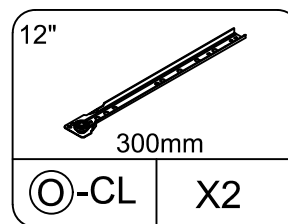


LEFT CABINET MEMBER

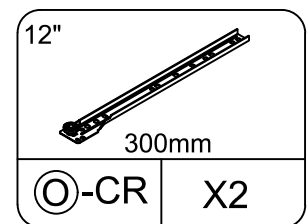


RIGHT CABINET MEMBER

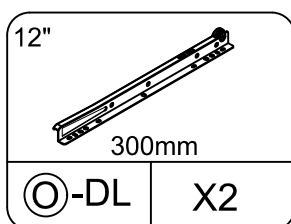


LEFT DRAWER RUNNER

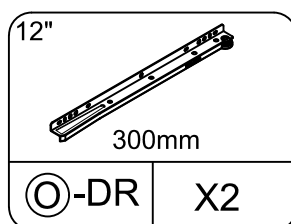

RIGHT DRAWER RUNNER

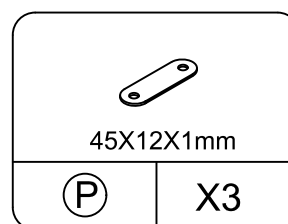

IRON SHEETS

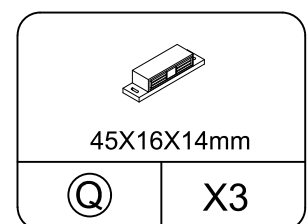

MAGNETS

Part List



41X18X15mm

(R)

X6

HINGE




232X55X41mm

(S)

X1

POWER STRIP



(T)

X1

LIGHT BULB




24X7X4.5mm

(U)

X3

BUCKLES
spare:1



M4X100 (60) mm

(V)

X1

HEX KEY



40X14X2mm

(W)

X14

NON-SLIP MAT
spare:1



Ø4X14mm



Ø4X35mm



Ø6X30mm



73X15X25mm

(X)

X2set

HIPPING RESTRAINT
HARDWARE KIT



Ø21mm

(Y)

X12

PERFECT STICKER
spare:1



21X7X5.5mm

(Z)

X1


BUCKLES
spare:1

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

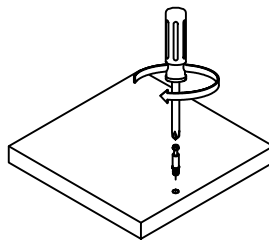

2

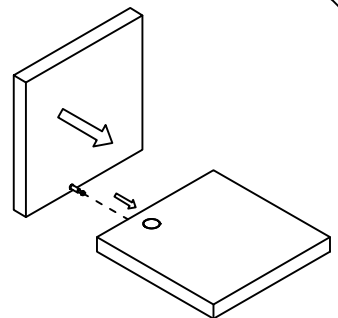


3

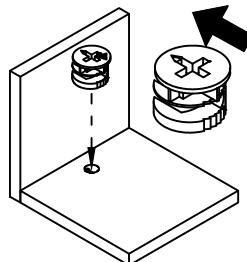


The opening must point toward the edge of the board

4




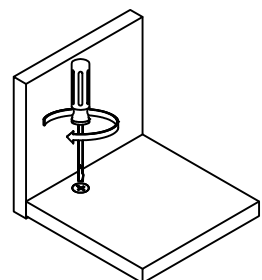


Board Identification



Not actual size

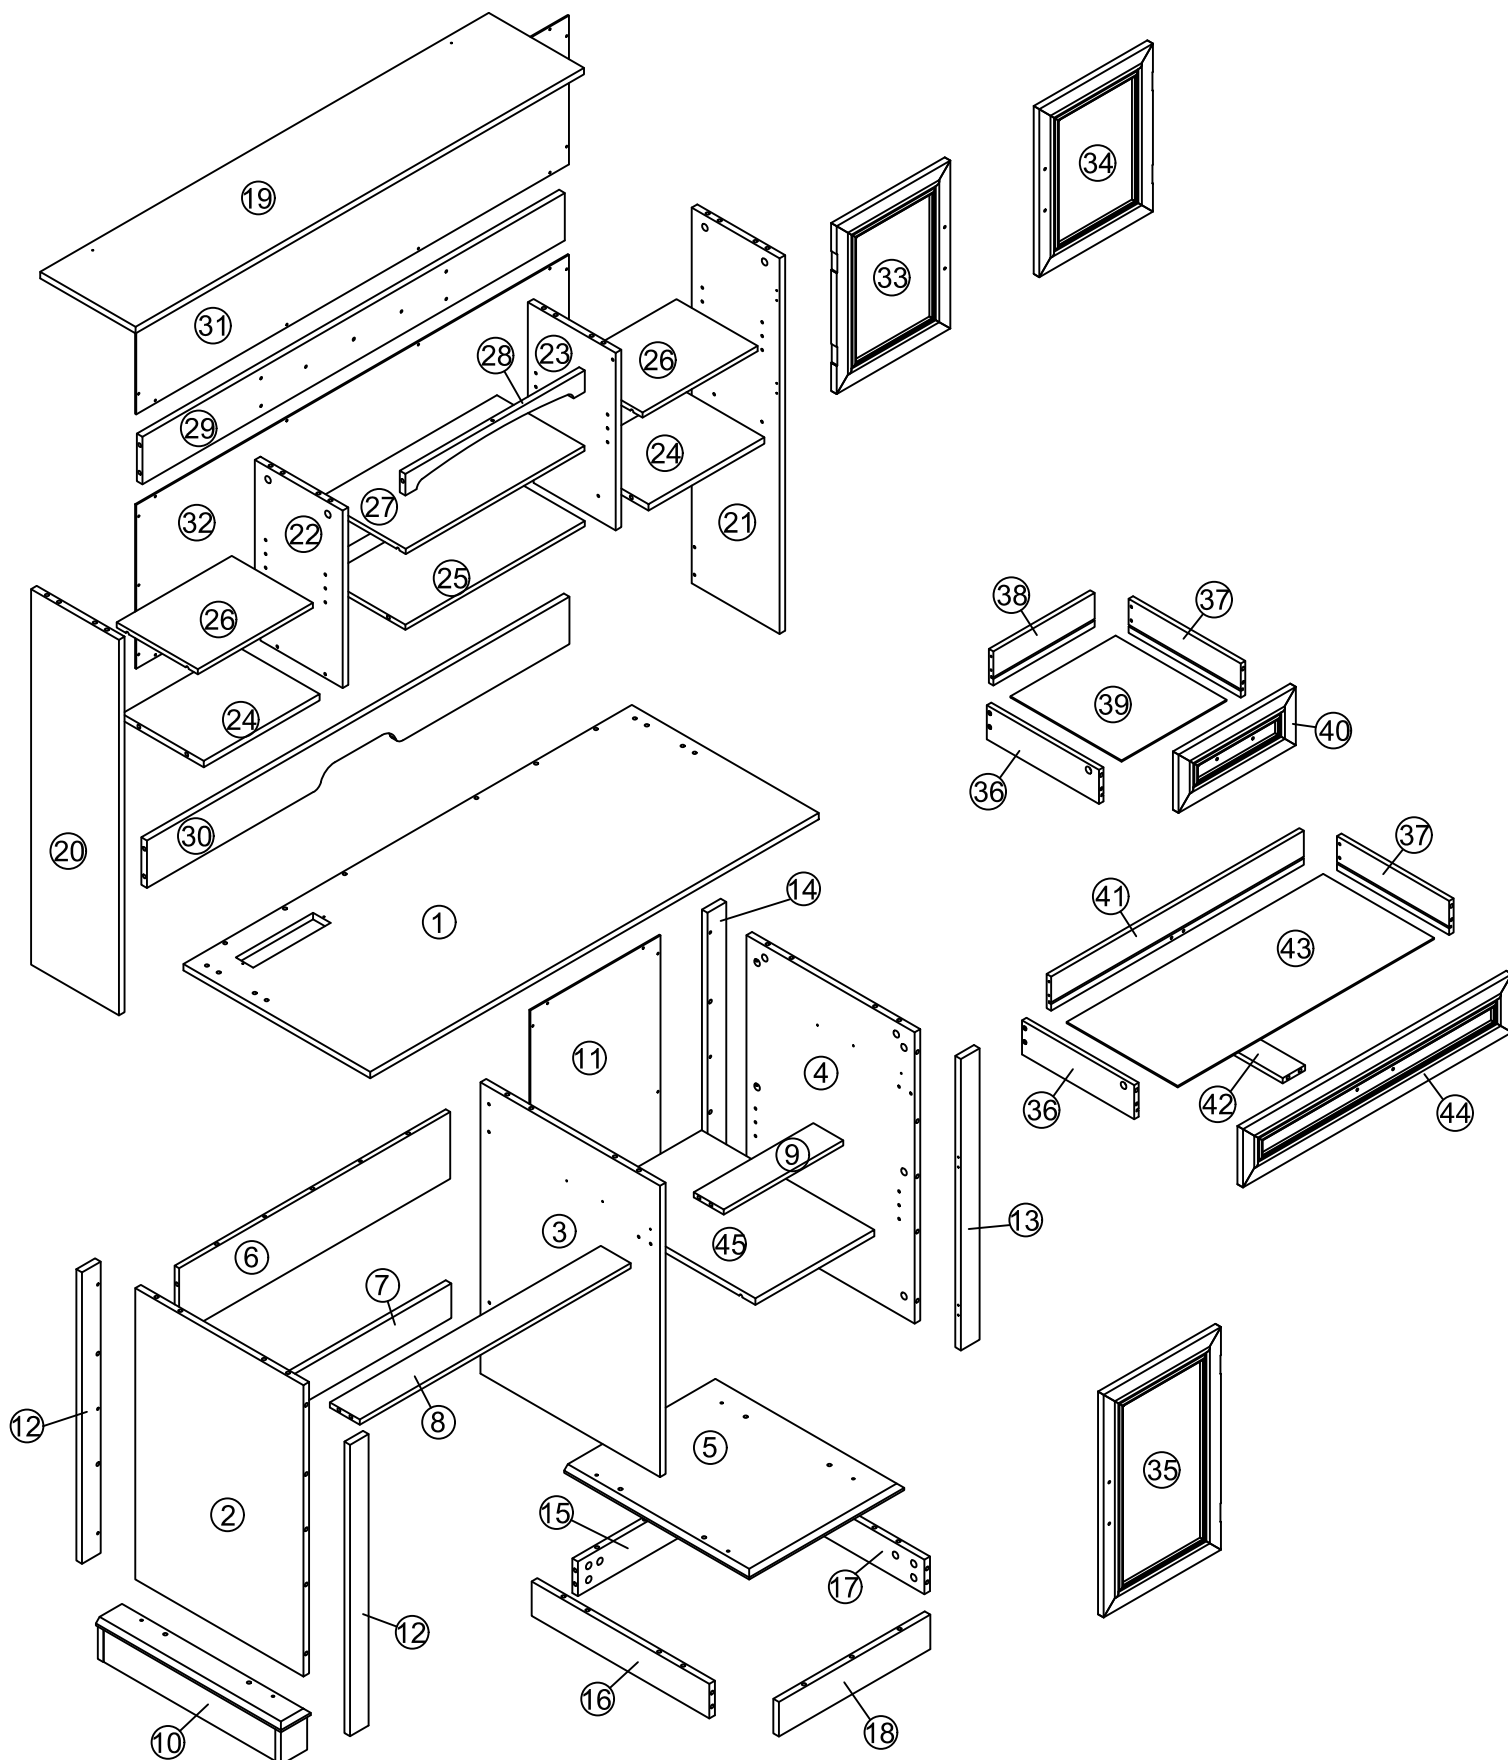





STEP1

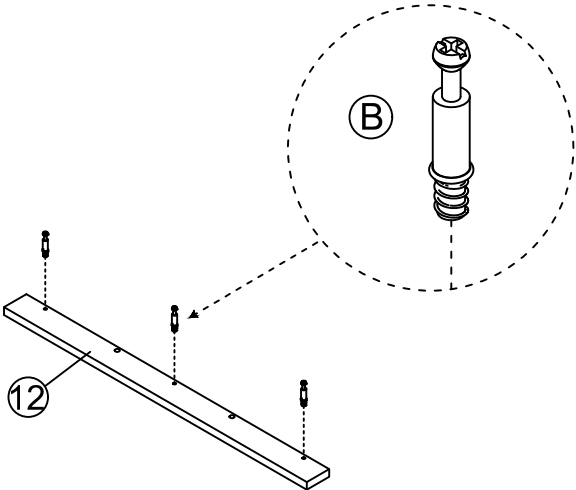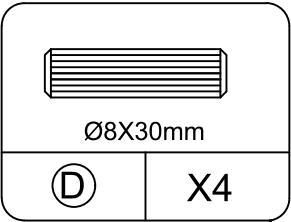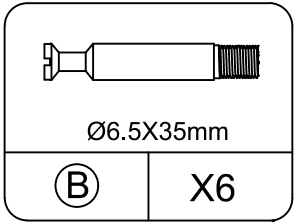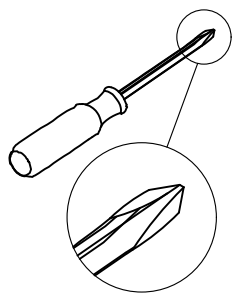


X2

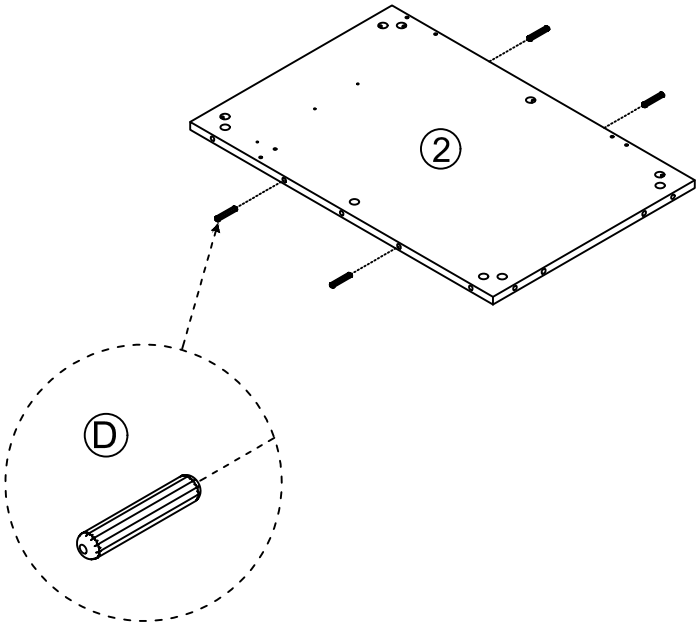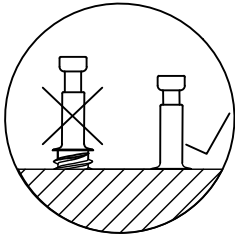

STEP2

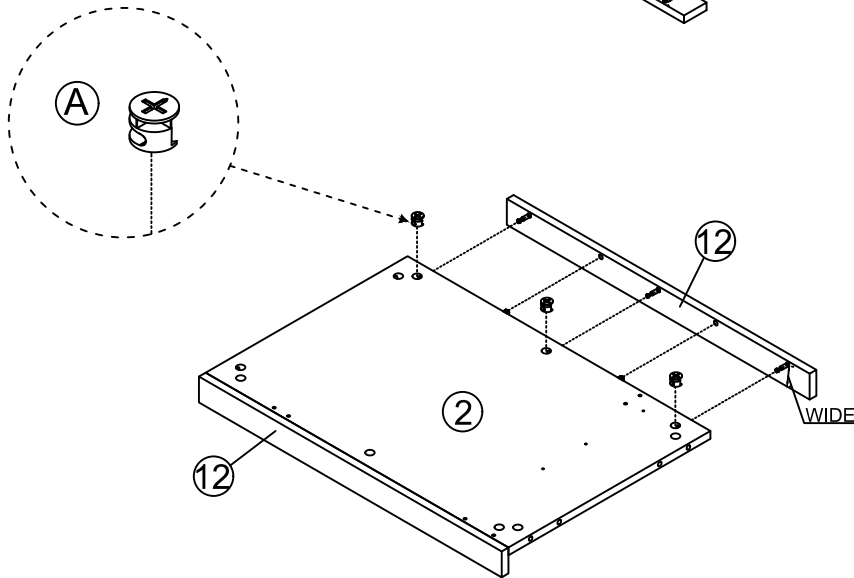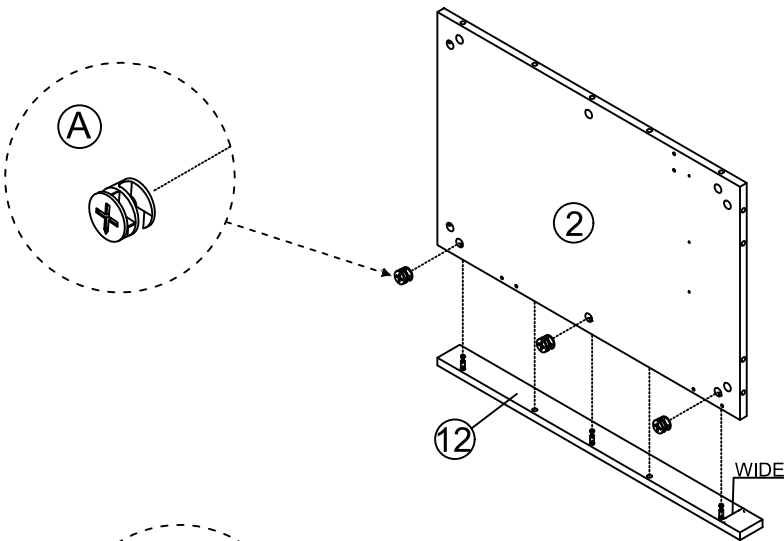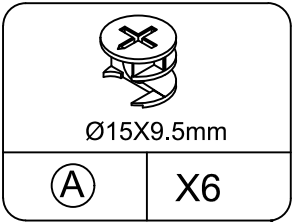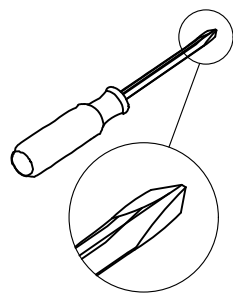



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

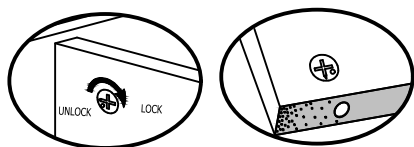


Proper orientation of CAM LOCK





STEP3

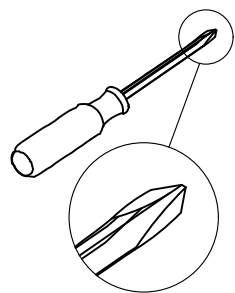




 Ø3.5X14mm		 12" 300mm		 12" 300mm	
(H)	X6	(O)-CL	X1	(O)-CR	X1

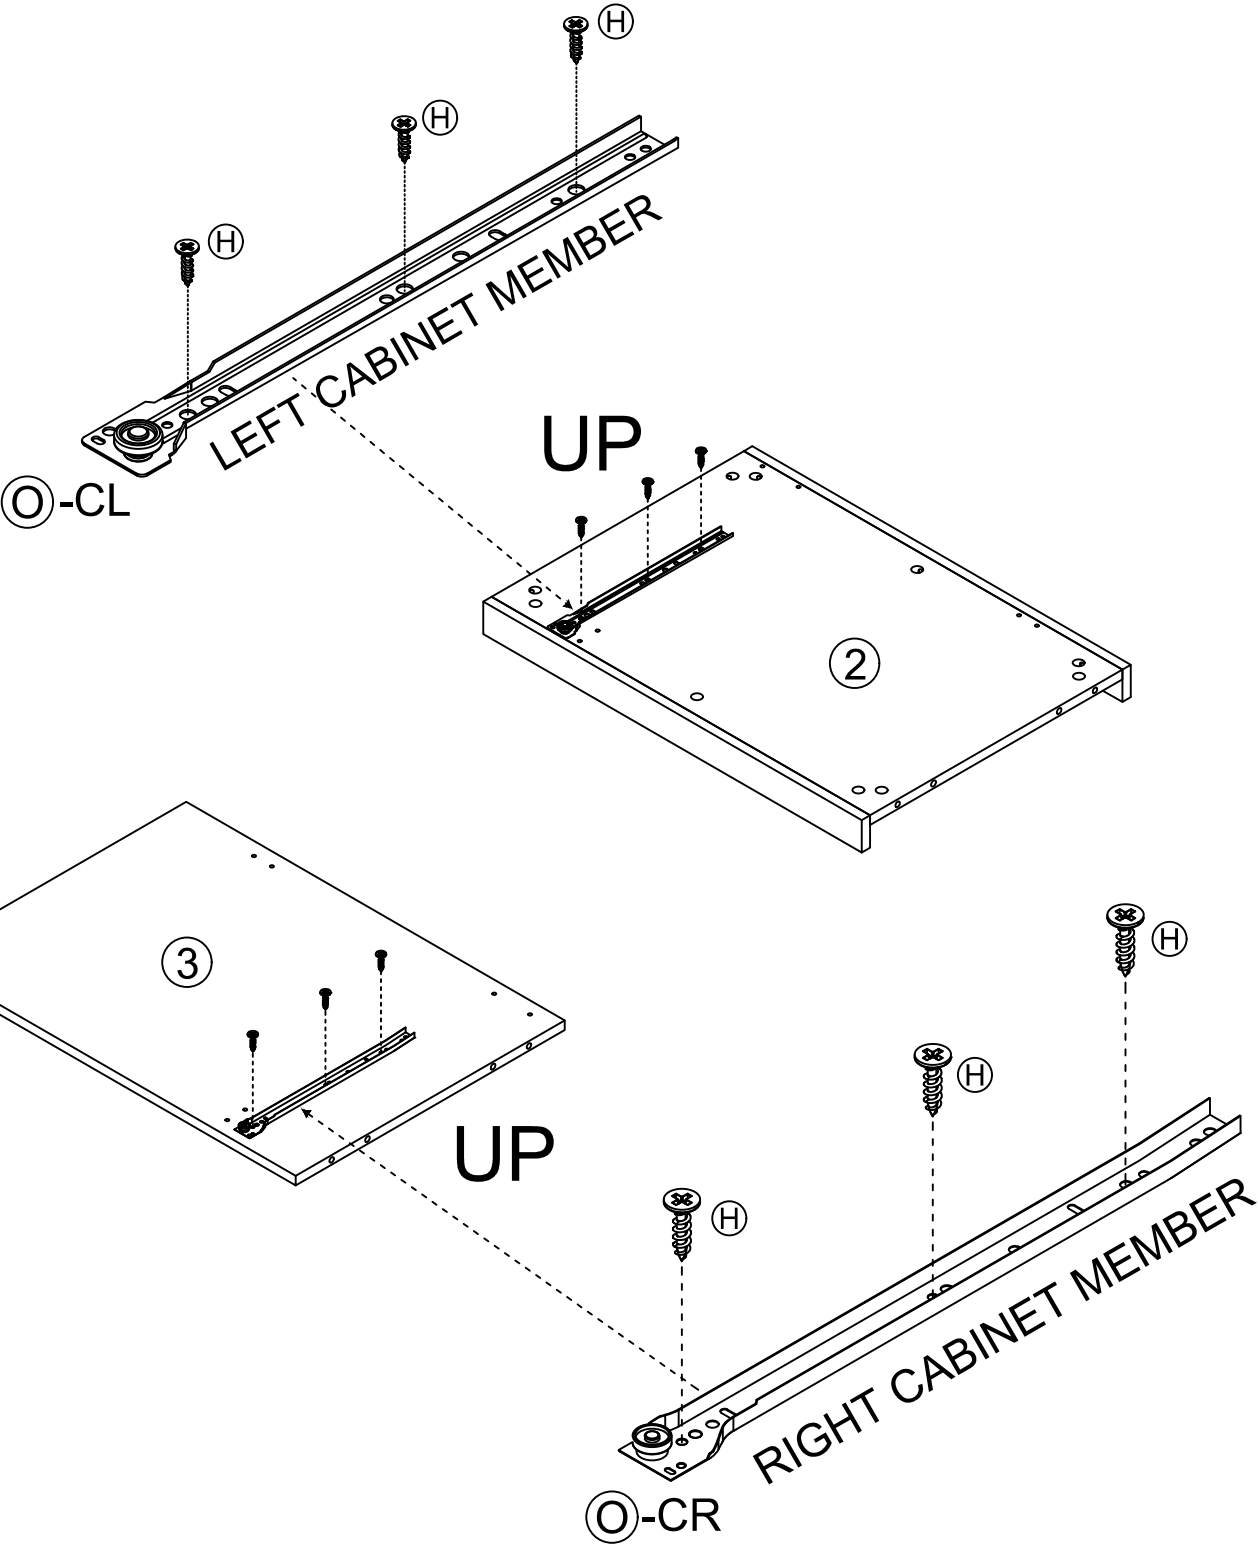


STEP4

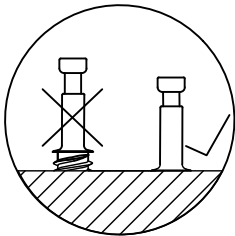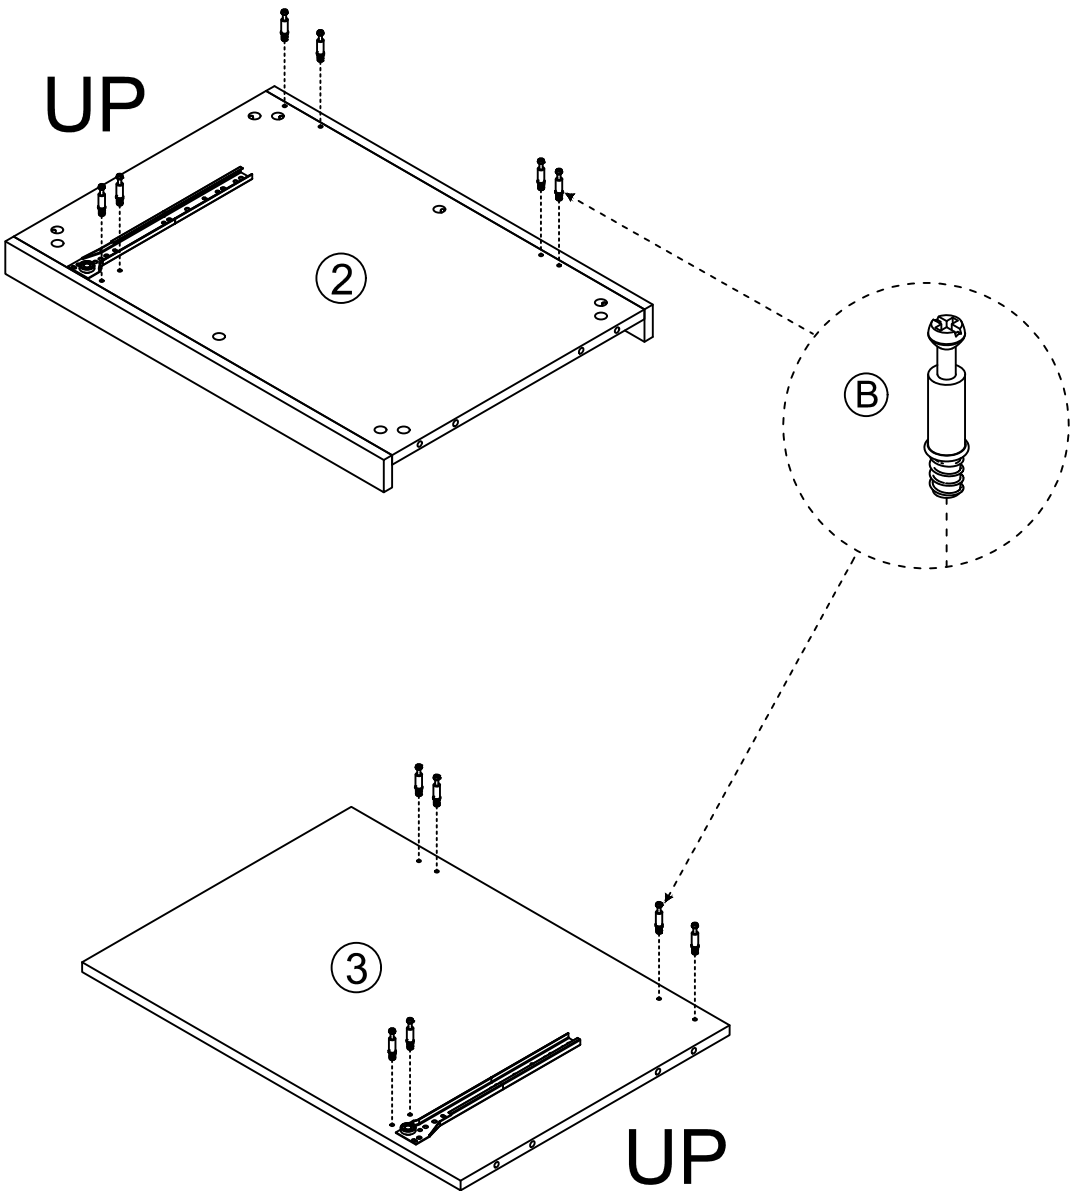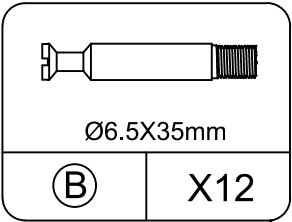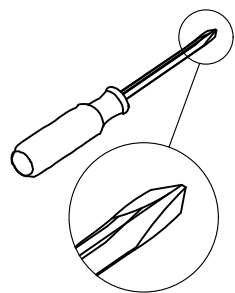

STEP5

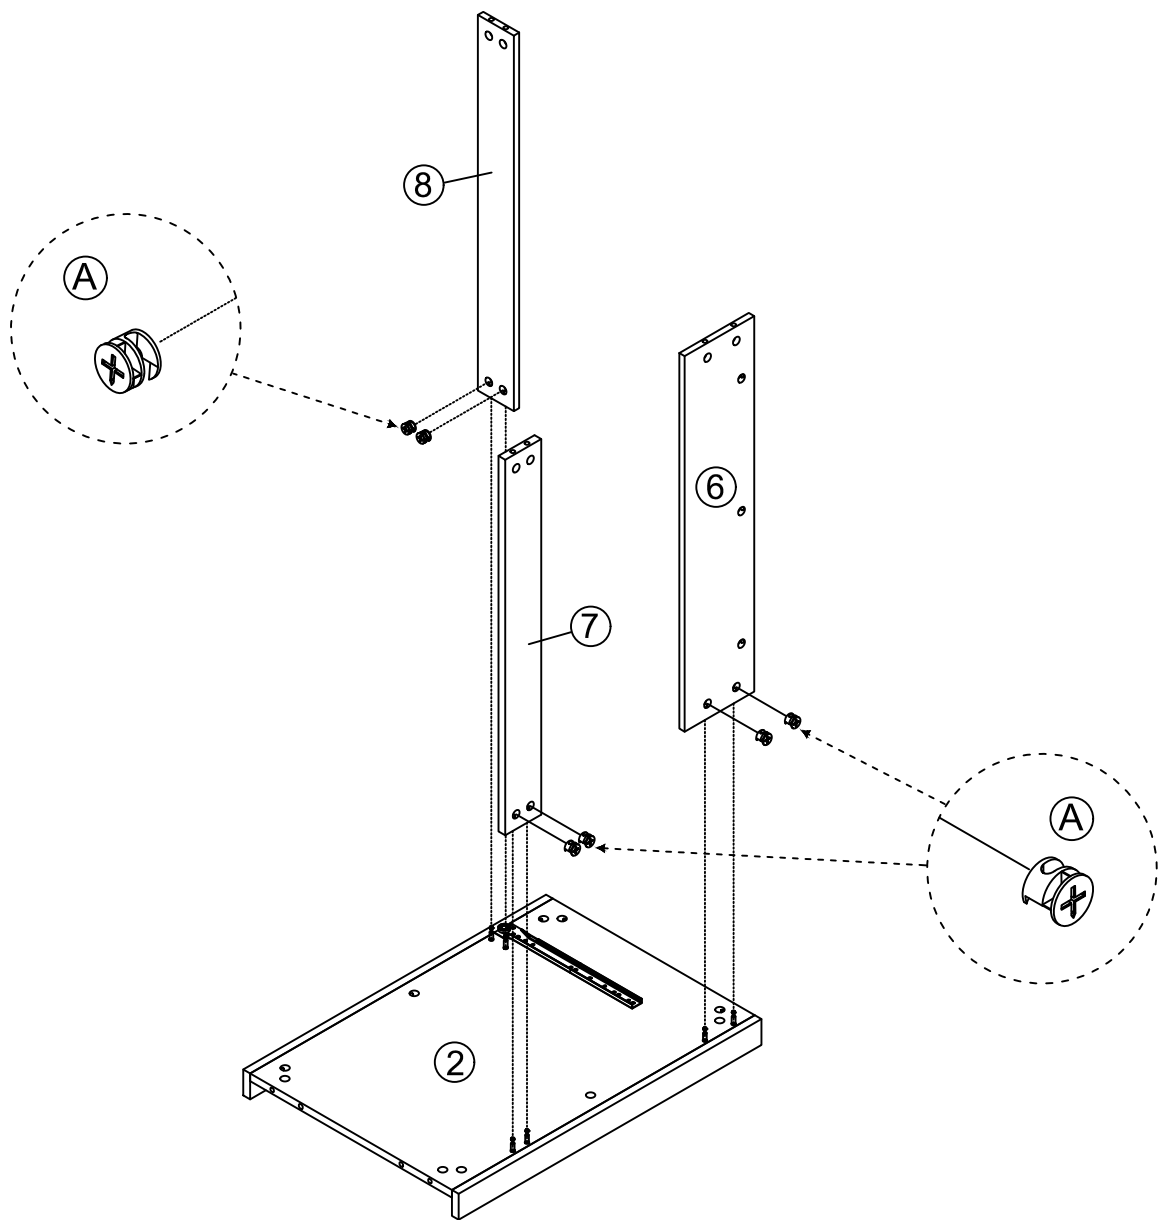
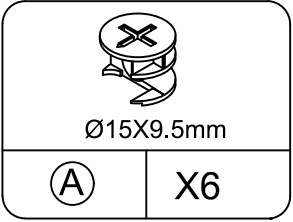
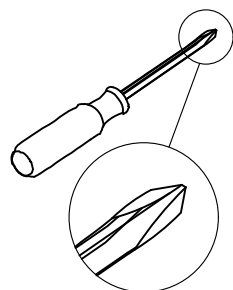


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

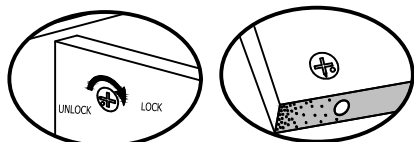


Proper orientation of CAM LOCK

STEP6

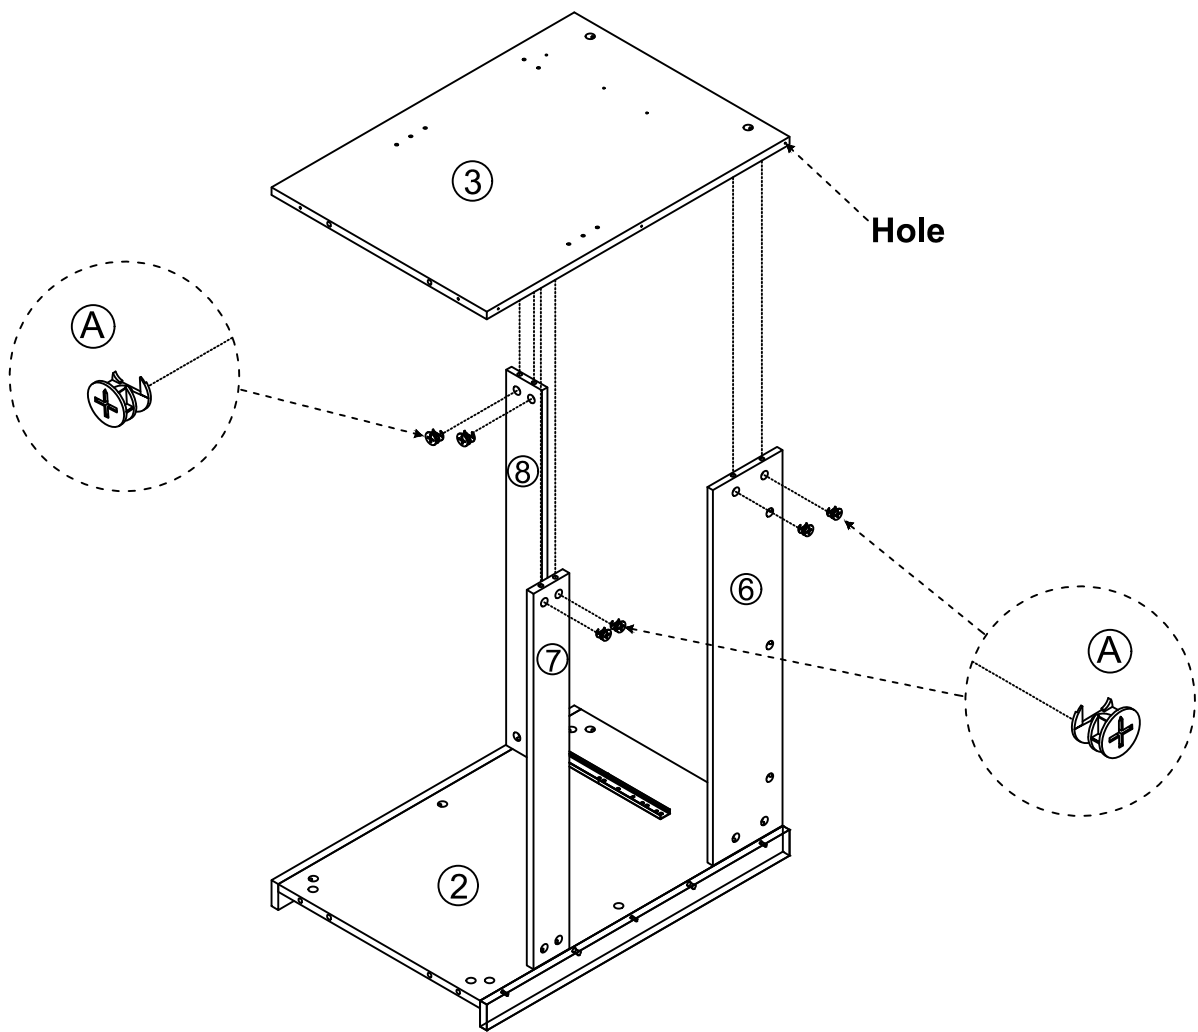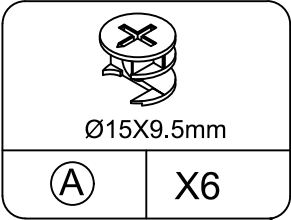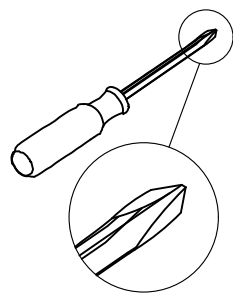




Insert the cam bolt into the hole first, then insert the cam lock and lock it.


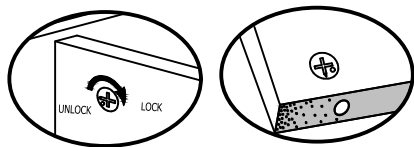


Proper orientation of CAM LOCK






STEP7

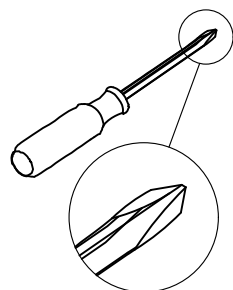


 Ø6.5X35mm		 Ø3.5X14mm		 12" 300mm	
Ⓑ		Ⓗ		Ⓞ-CL	
X2		X3		X1	

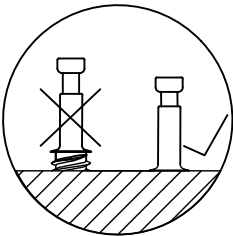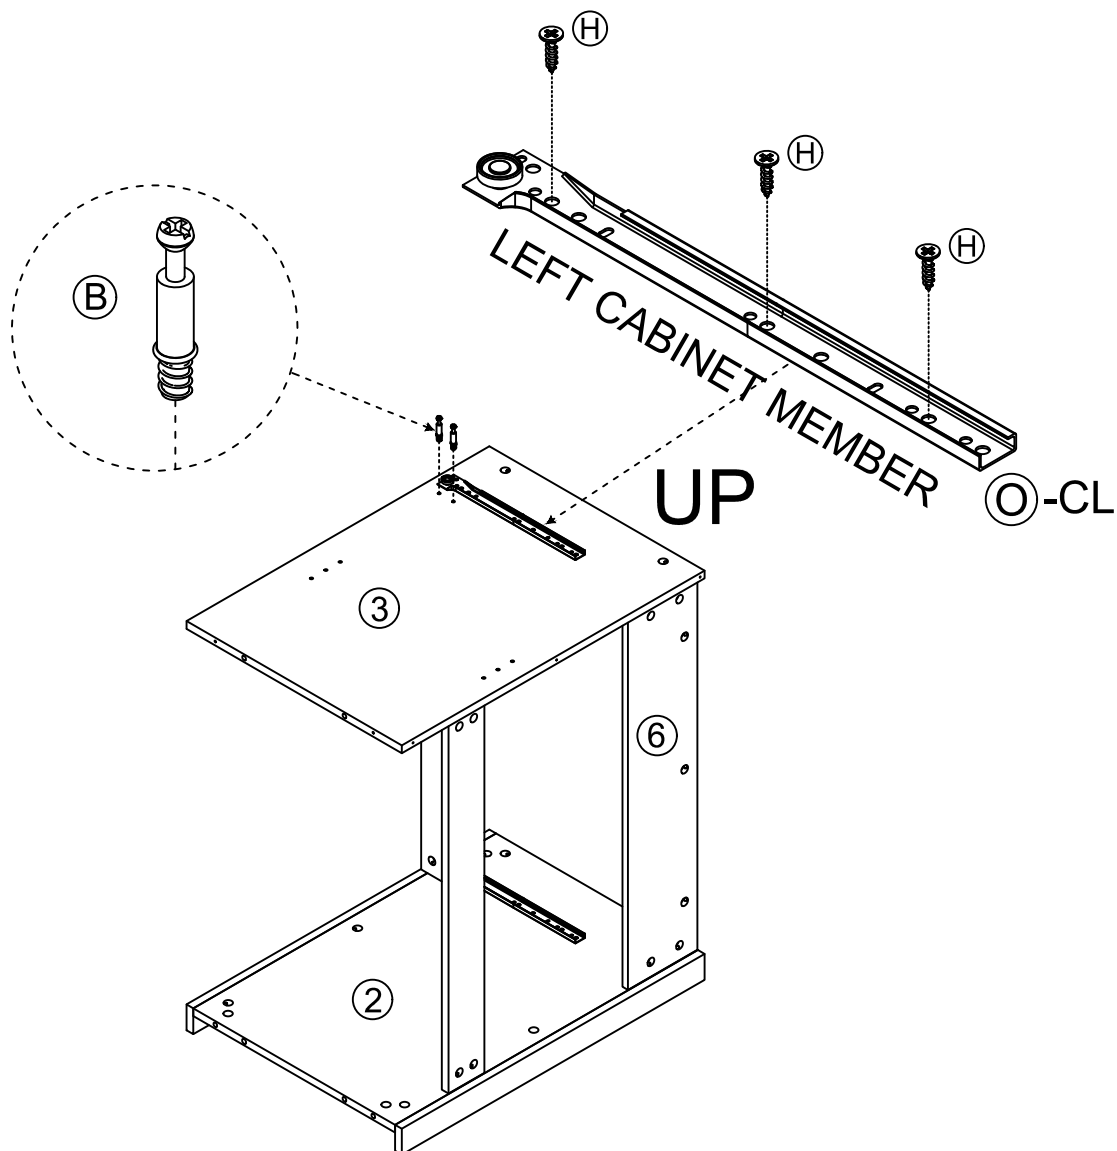







STEP8

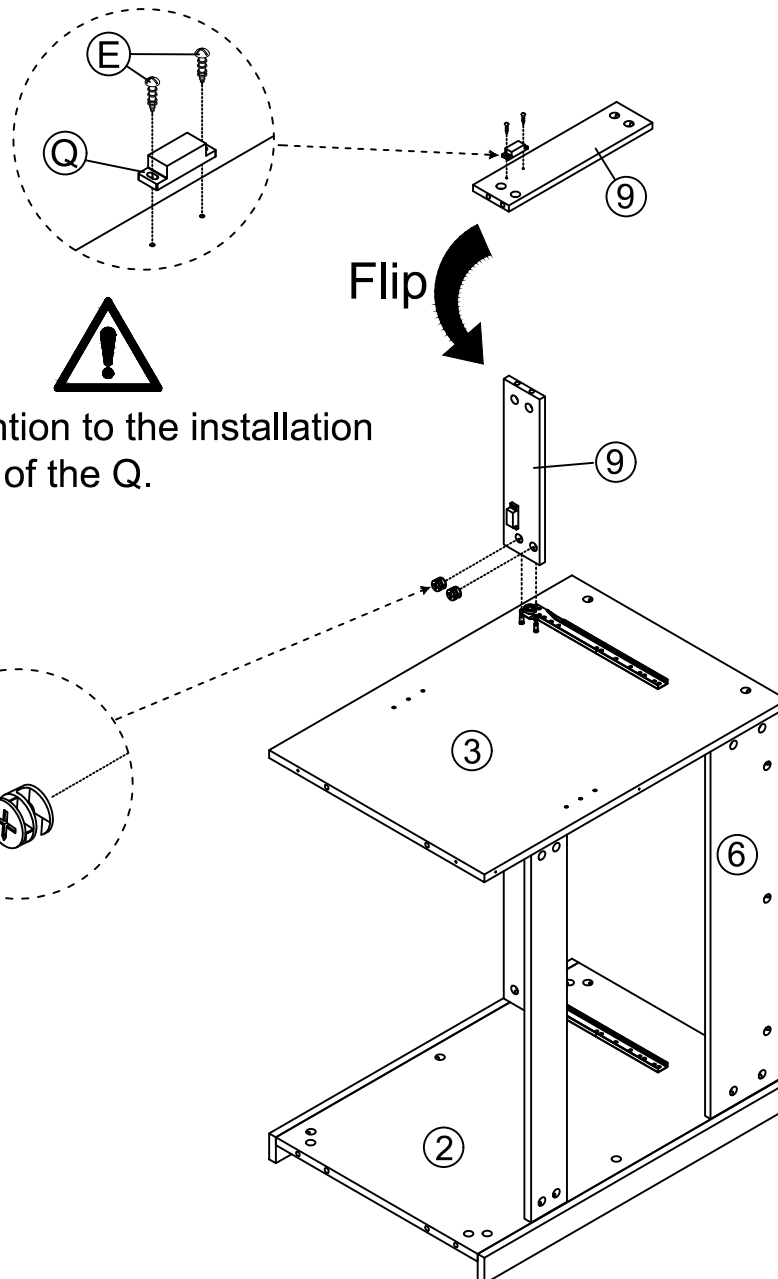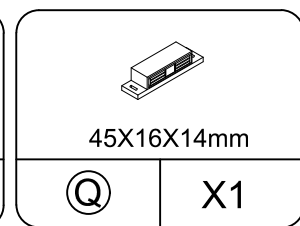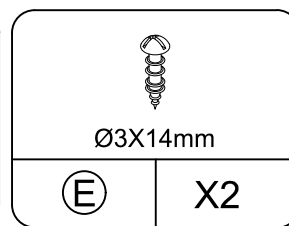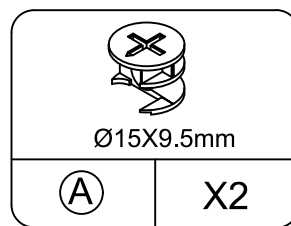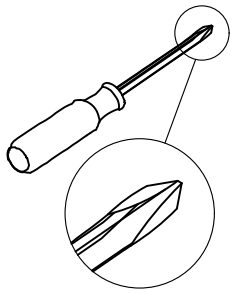





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

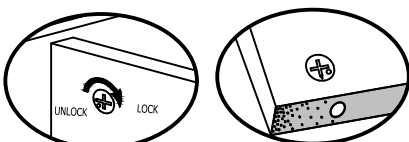


STEP9

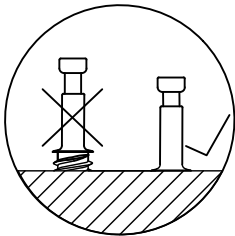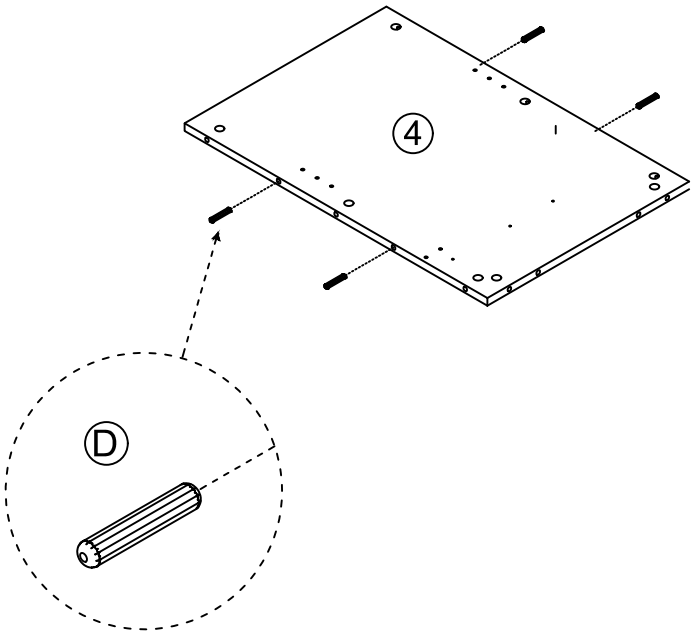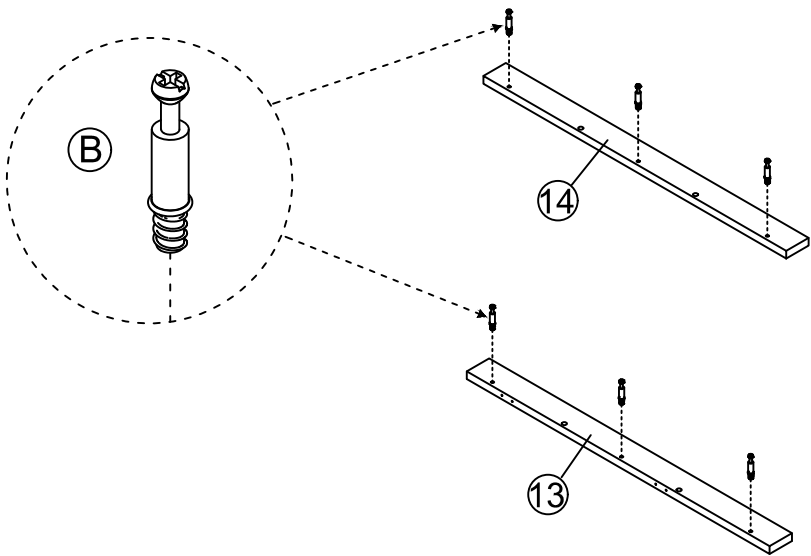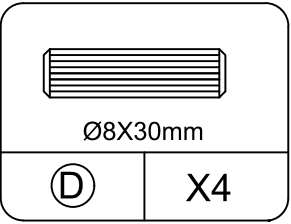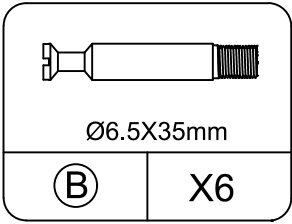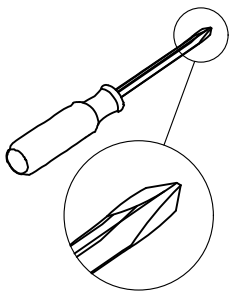







STEP10

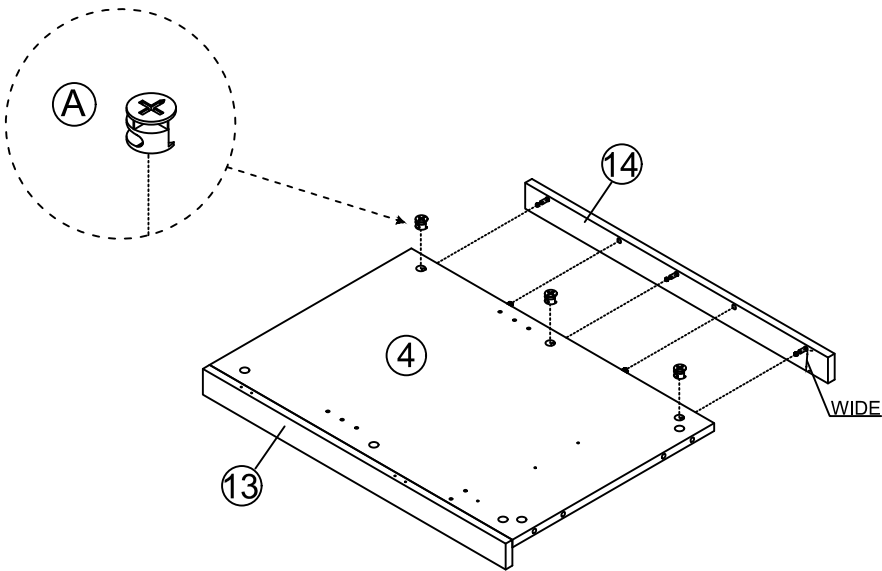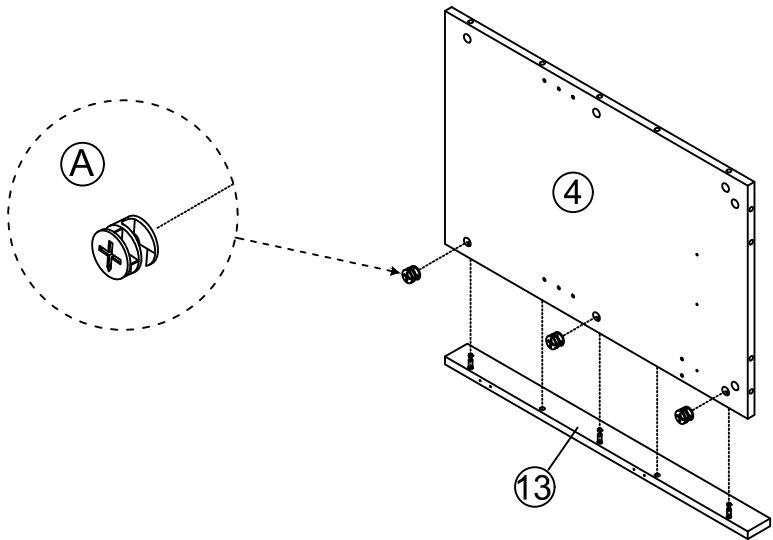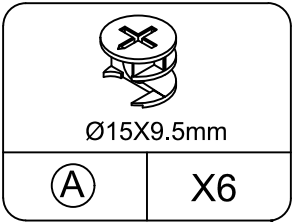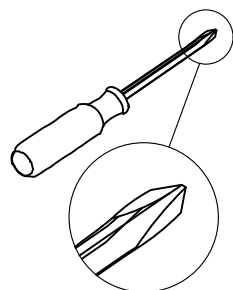




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

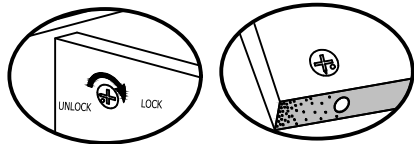


STEP11

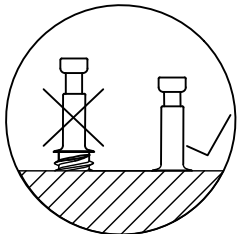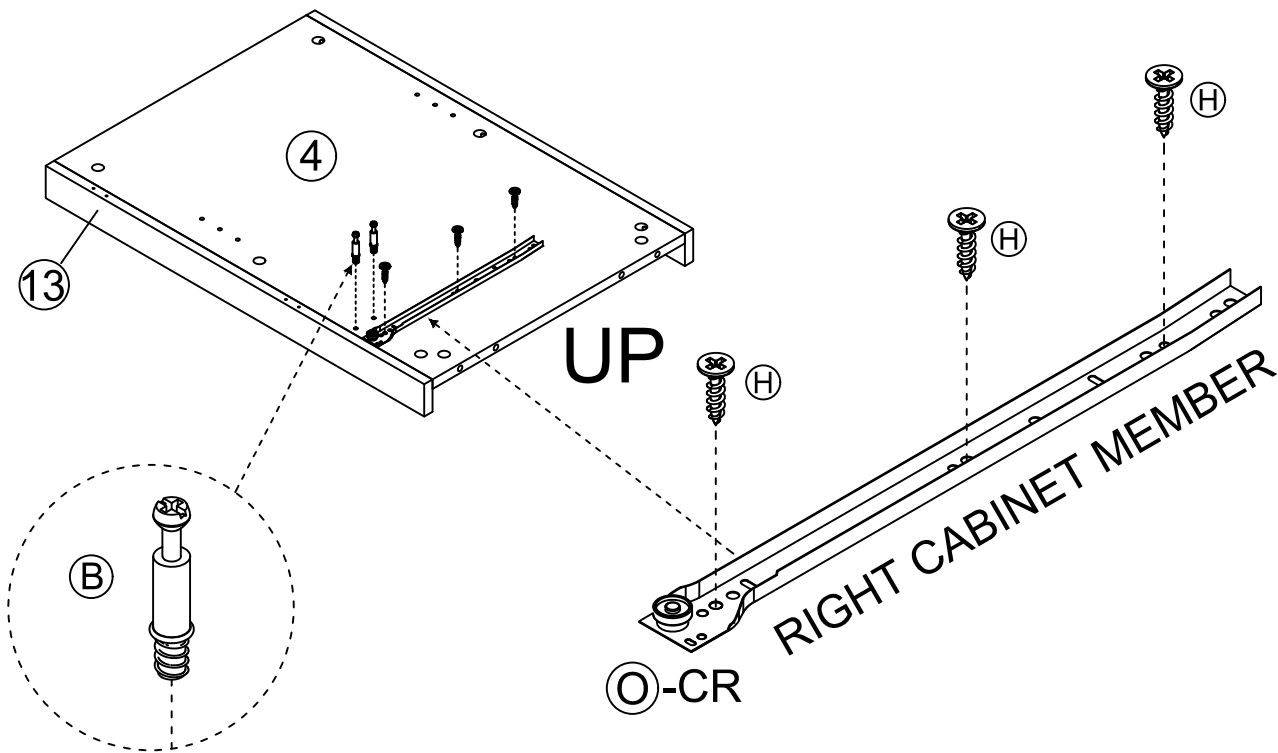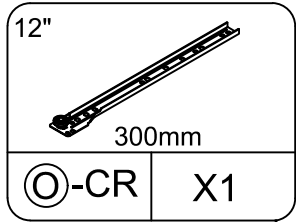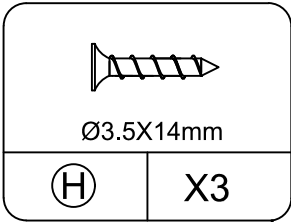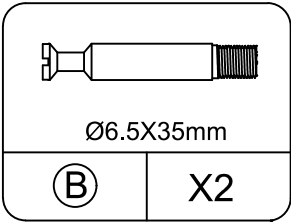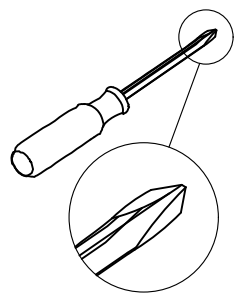

STEP12

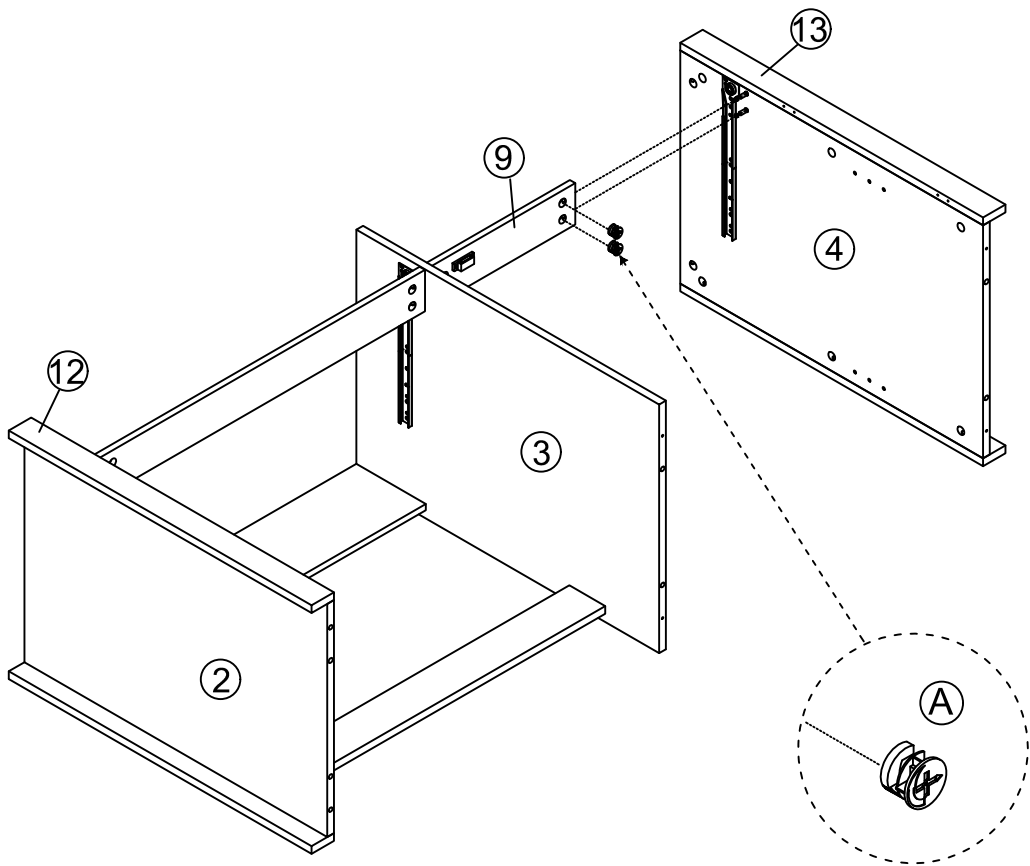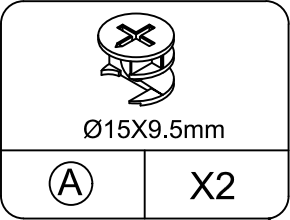
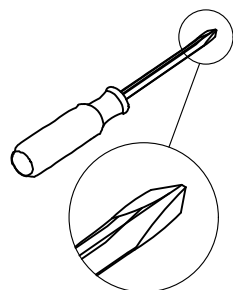


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


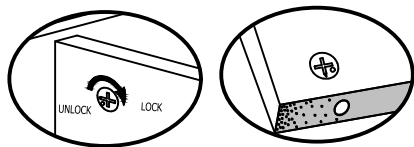


Proper orientation of CAM LOCK





STEP13

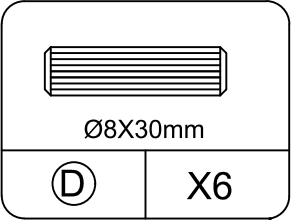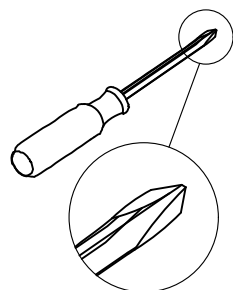


For this step,you need one helper.

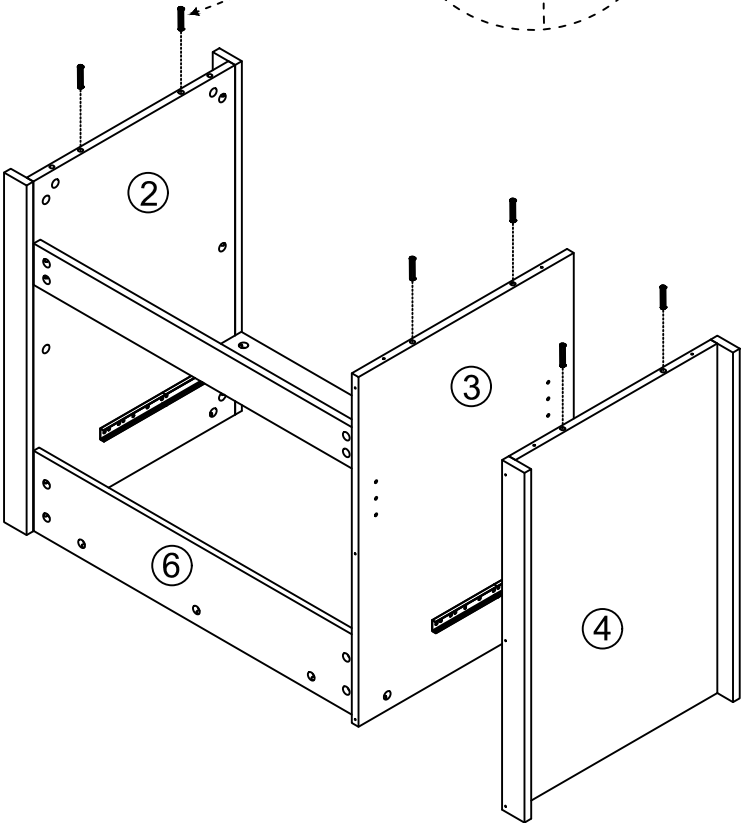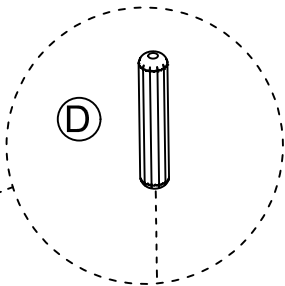


STEP14

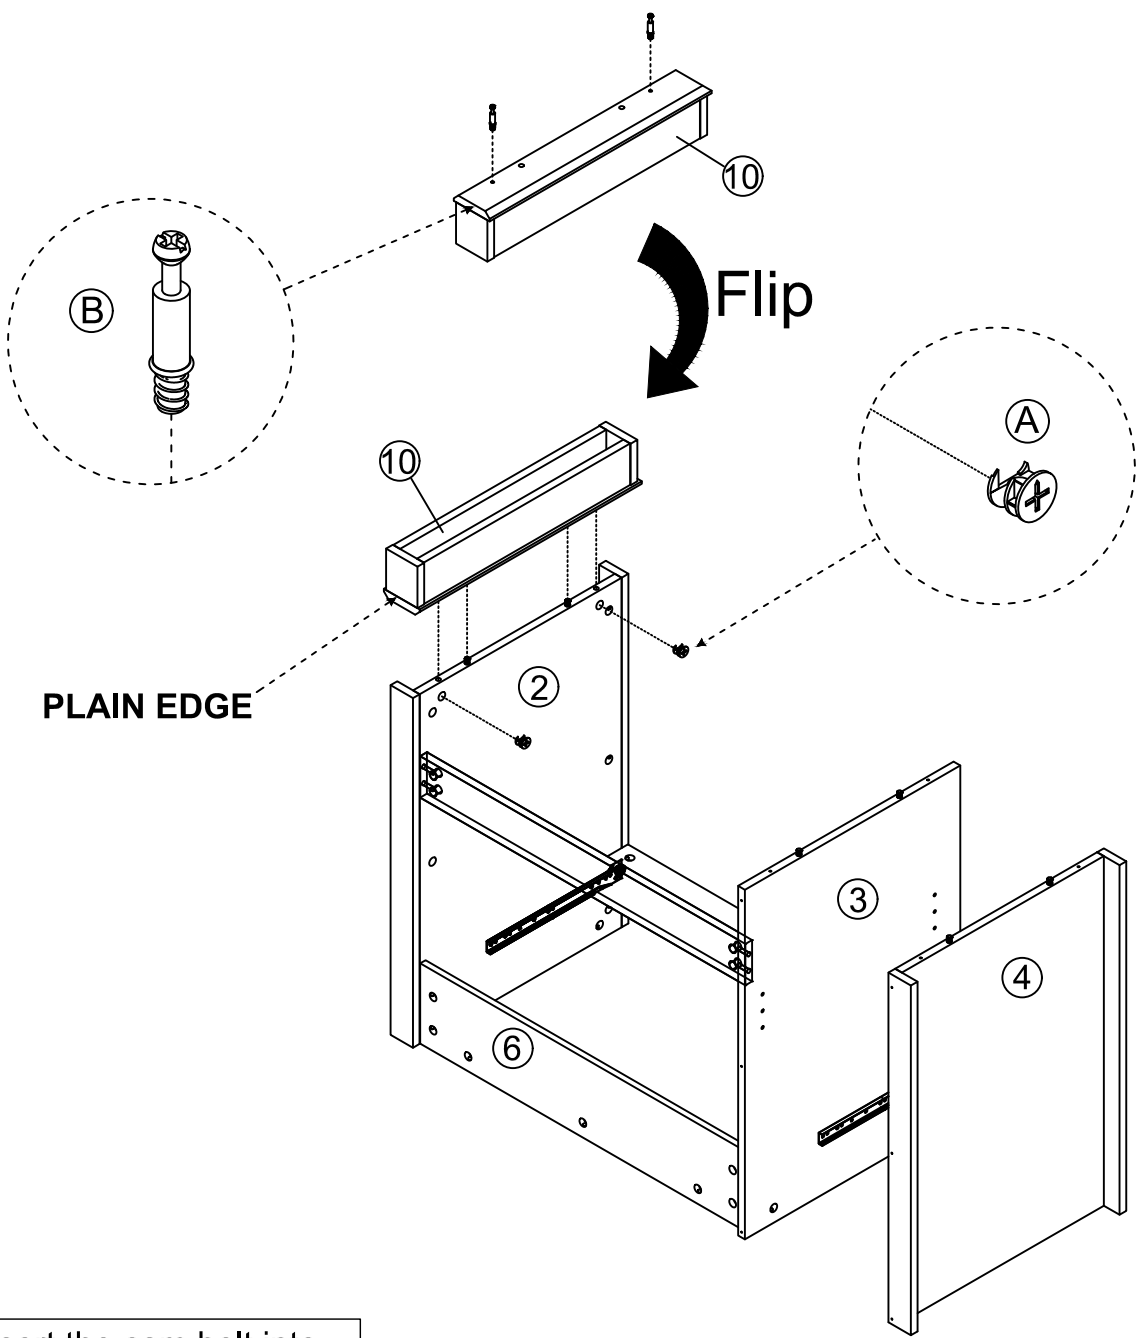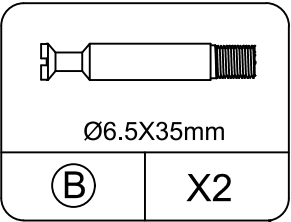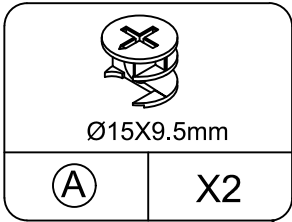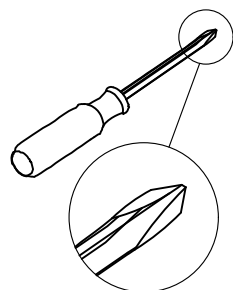




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

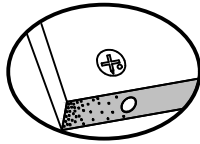






Proper orientation of CAM LOCK

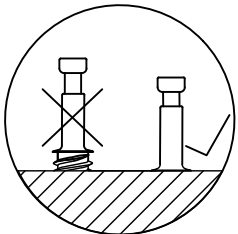


STEP15

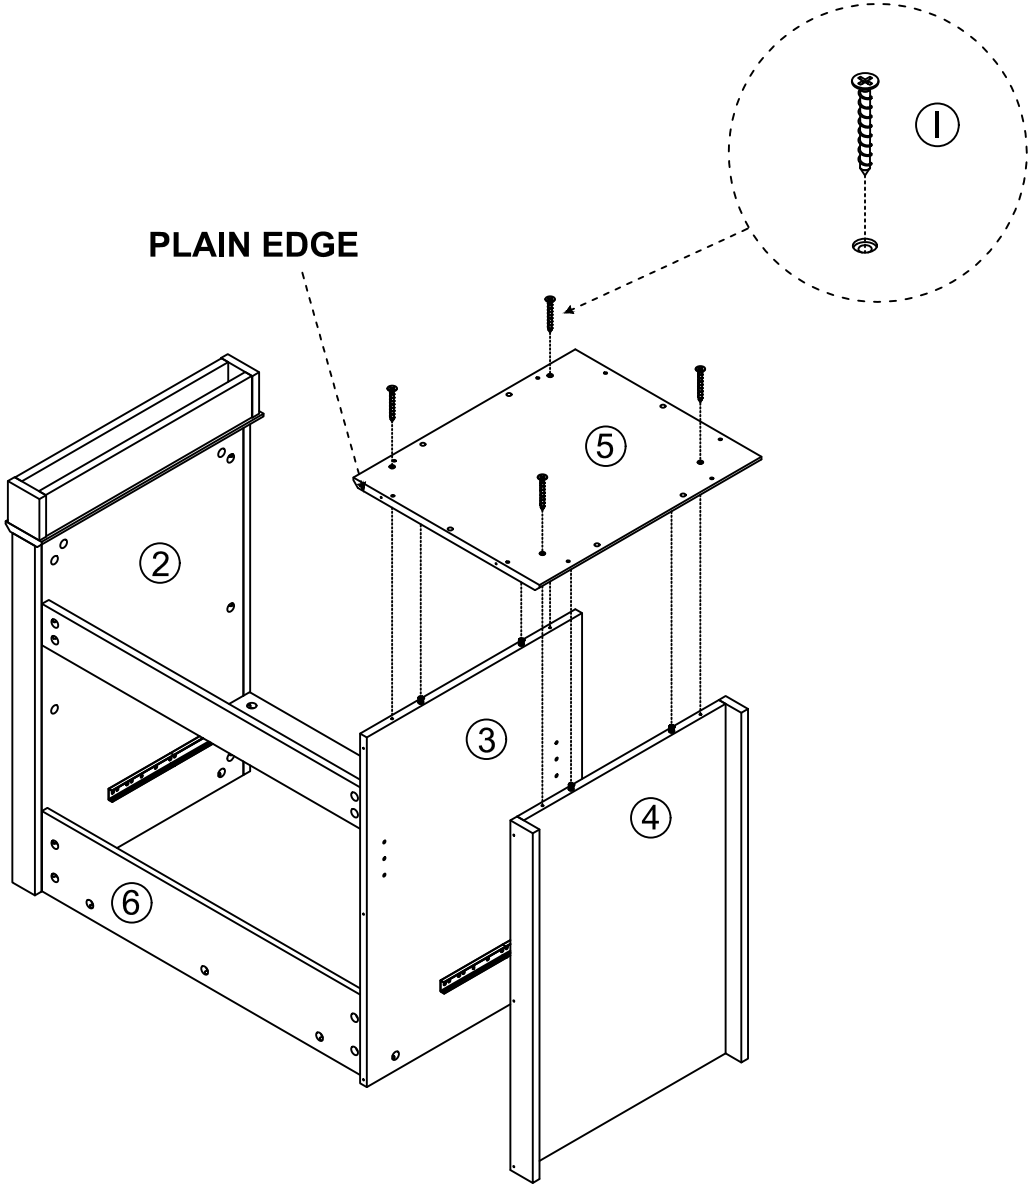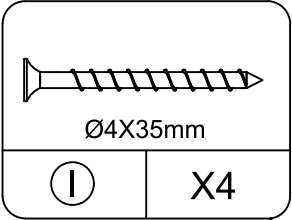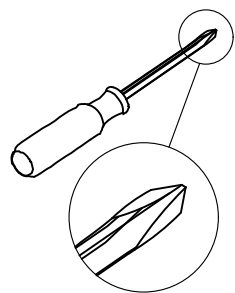


STEP16

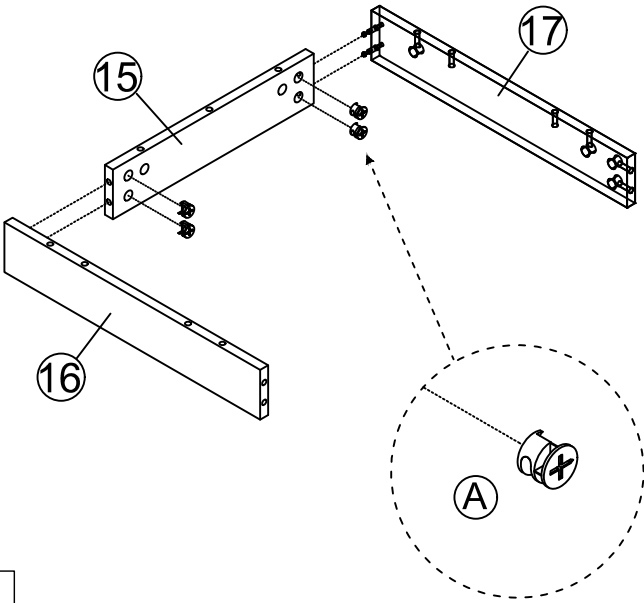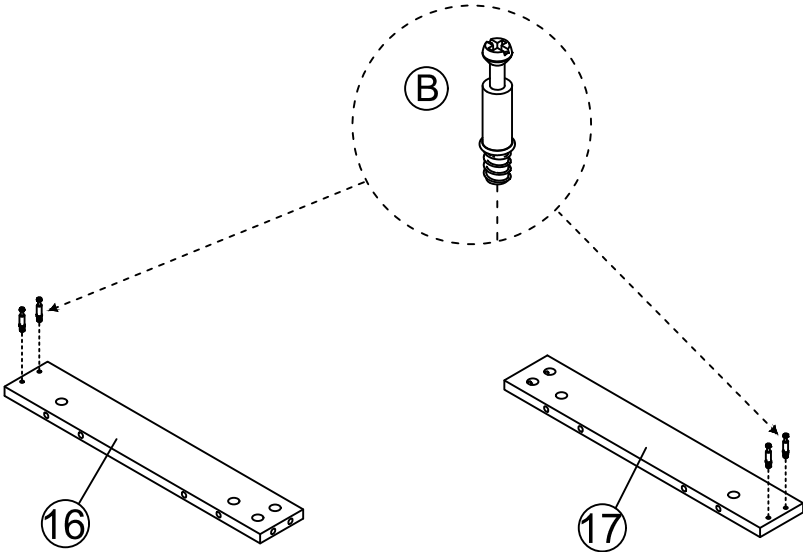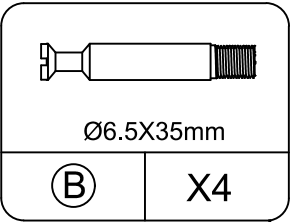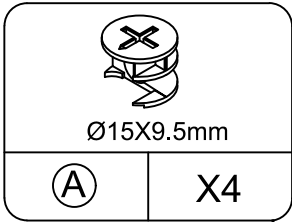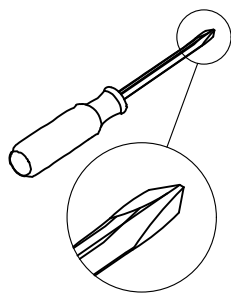


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

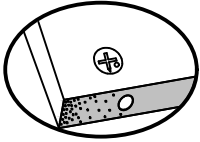





Proper orientation of CAM LOCK

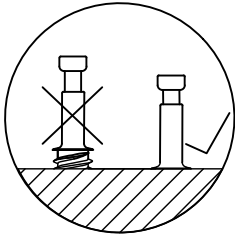


STEP17

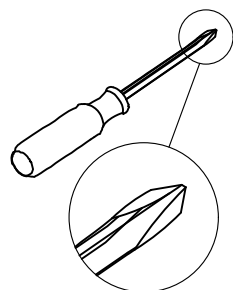


 Ø15X9.5mm	
(A)	X4
 Ø6.5X35mm	
(B)	X4
 Ø8X30mm	
(D)	X6

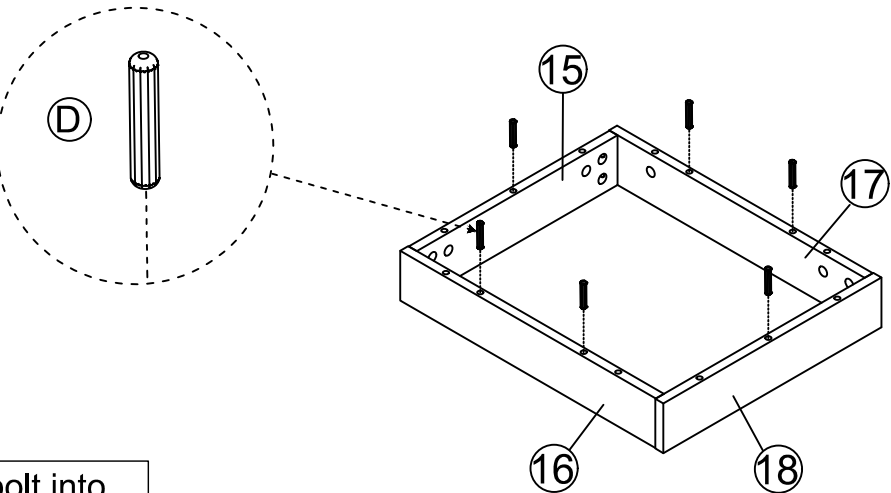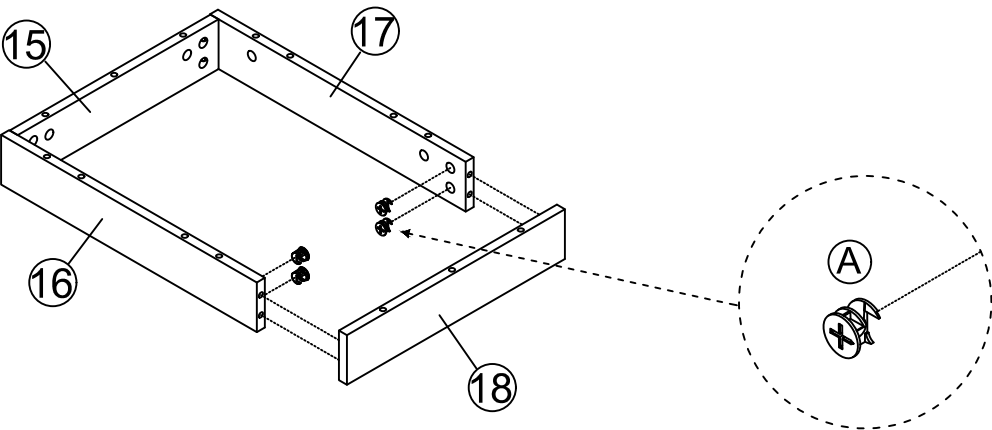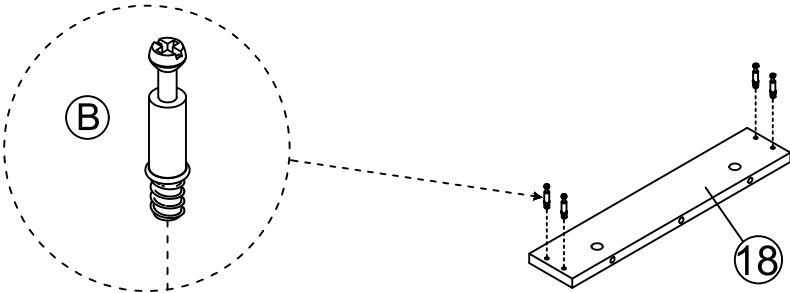





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

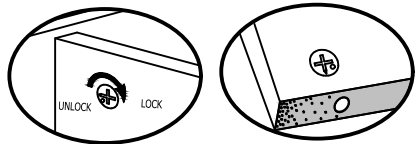


Proper orientation of CAM LOCK

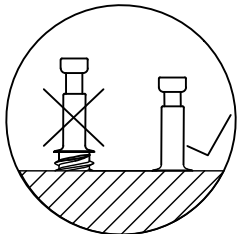



STEP18

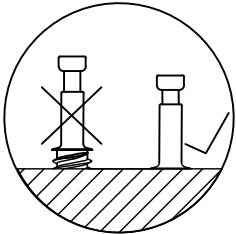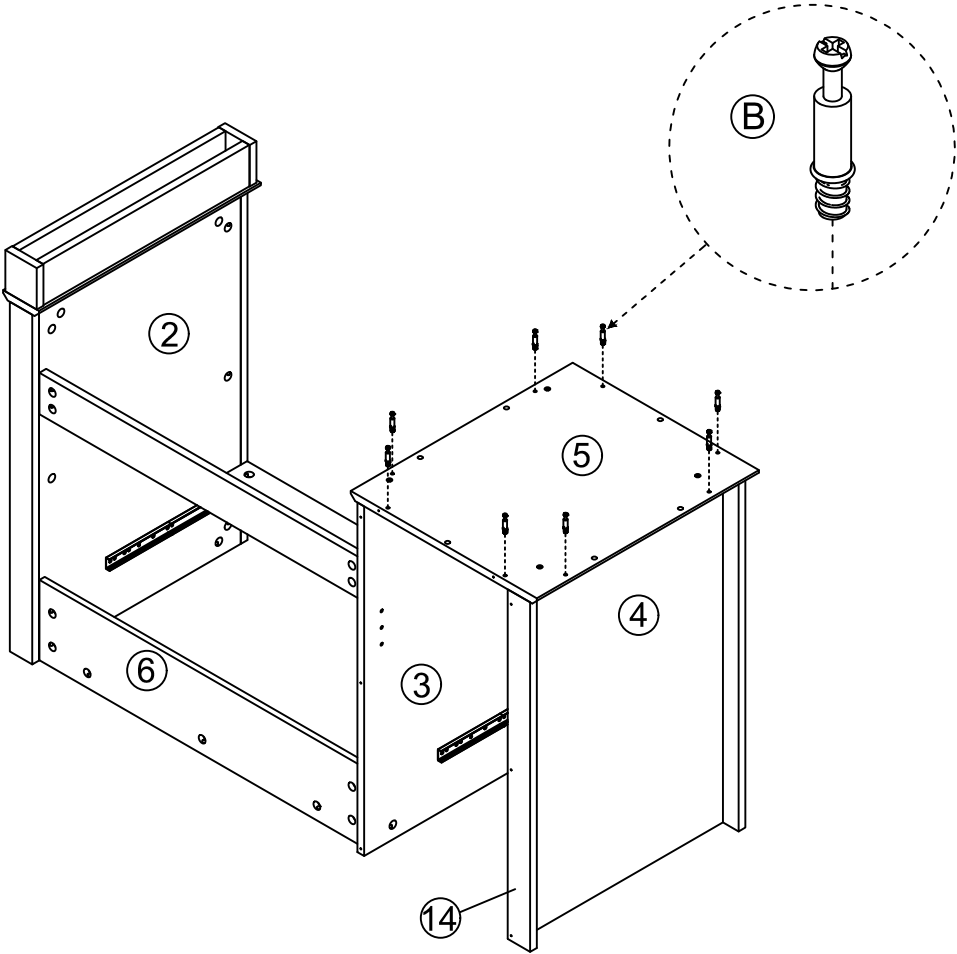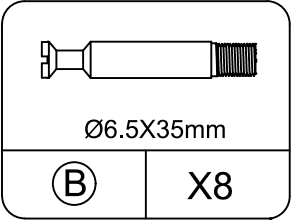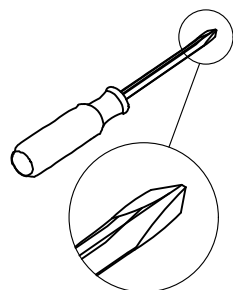


STEP19

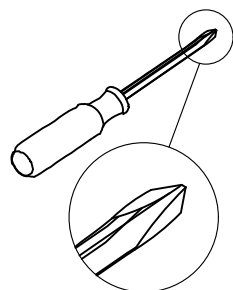

					
Ø15X9.5mm		M4X100 (60) mm		40X14X2mm	
(A)	X8	(V)	X1	(W)	X14

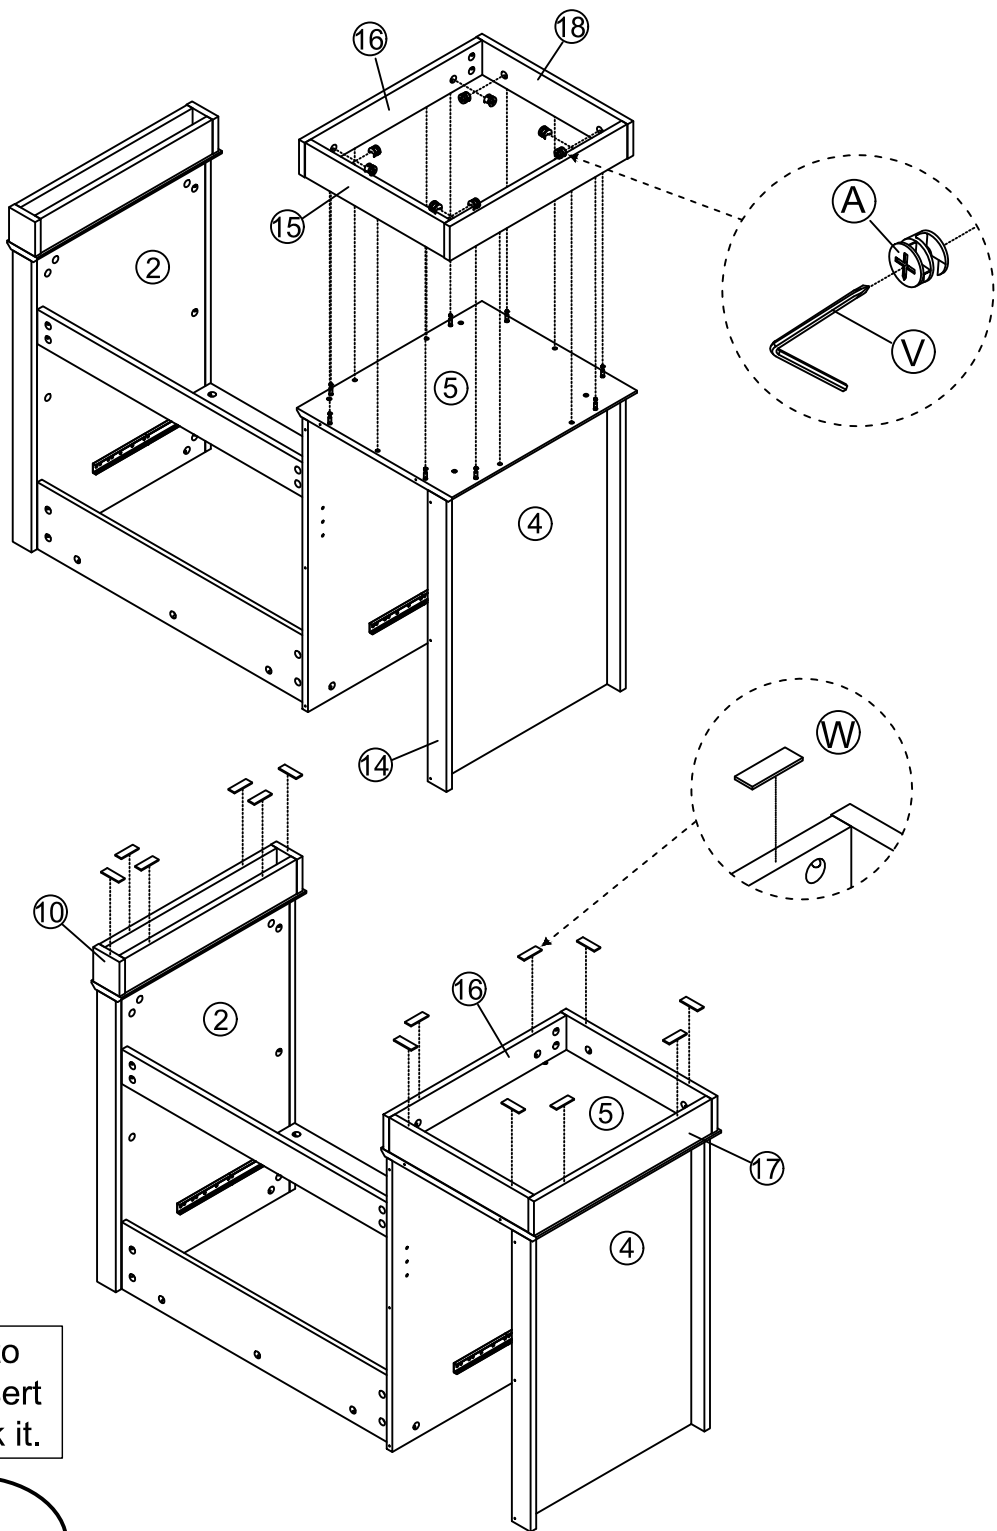



Insert the cam bolt into the hole first, then insert the cam lock and lock it.


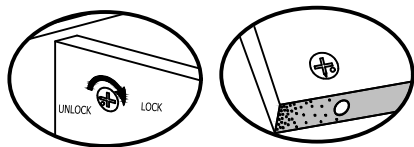


Proper orientation of CAM LOCK


STEP20

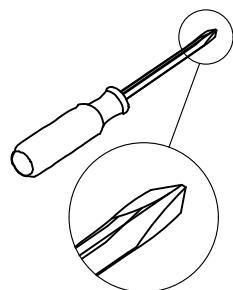


					
A		B		Y	
X3		X3		X2	

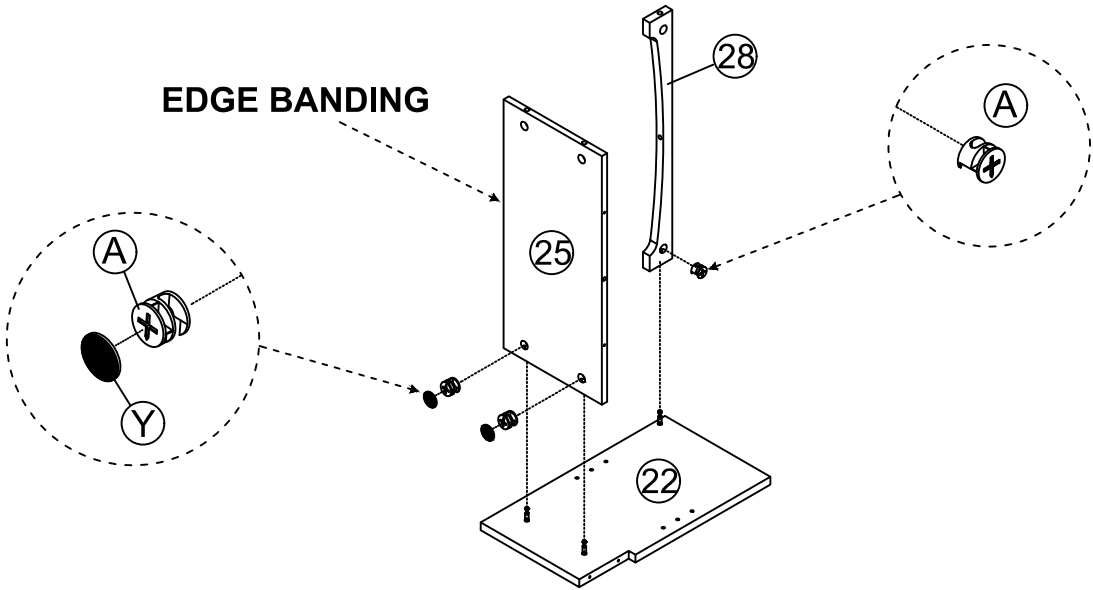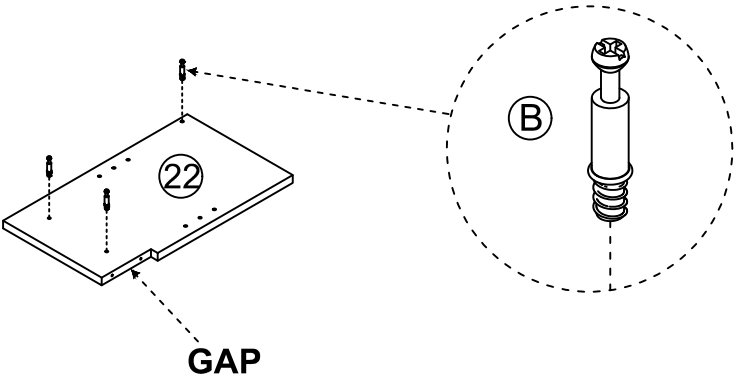






Insert the cam bolt into the hole first, then insert the cam lock and lock it.

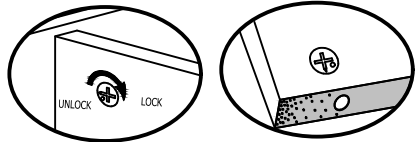



Proper orientation of CAM LOCK

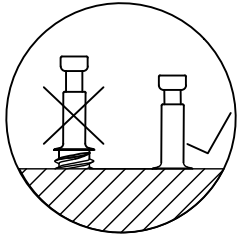












STEP21

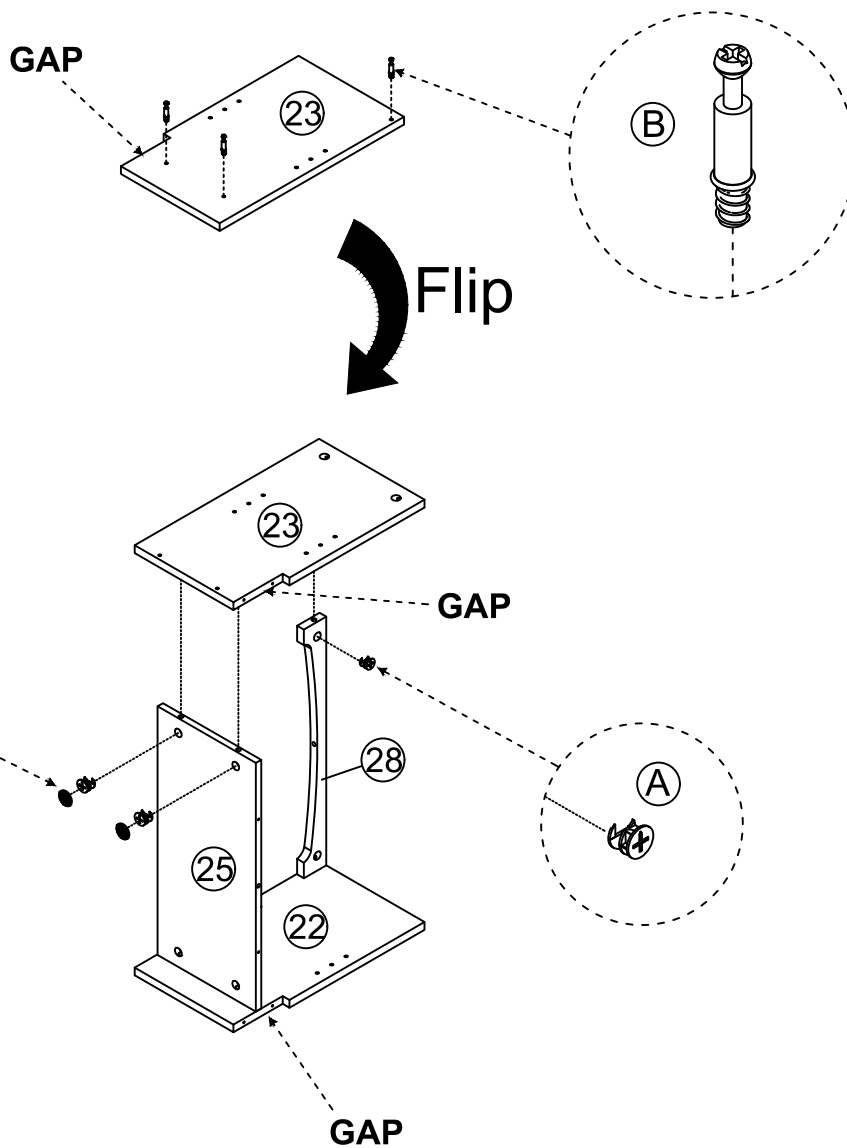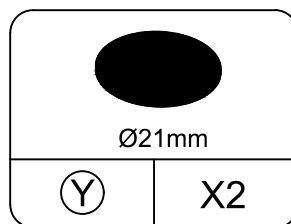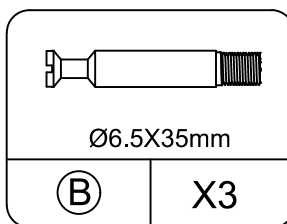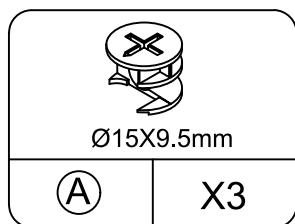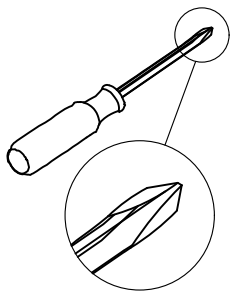


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

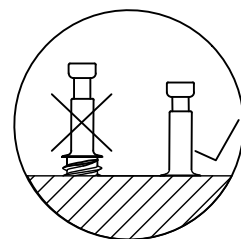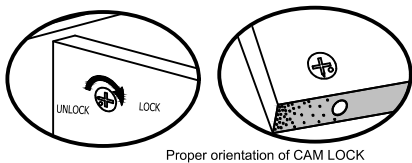


STEP22

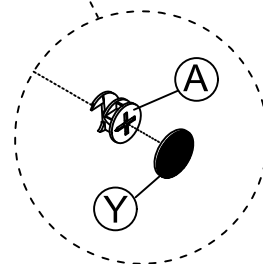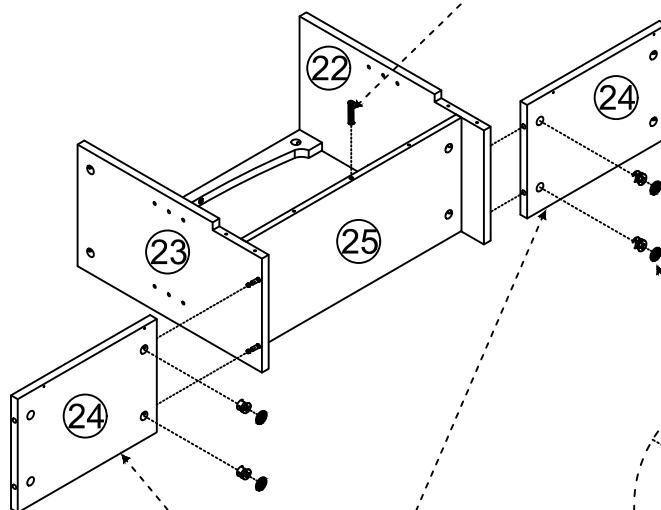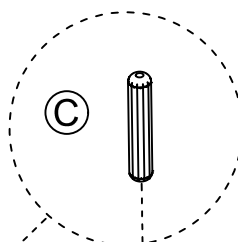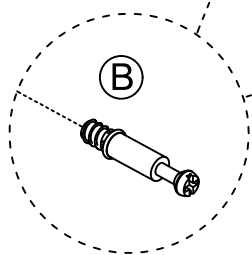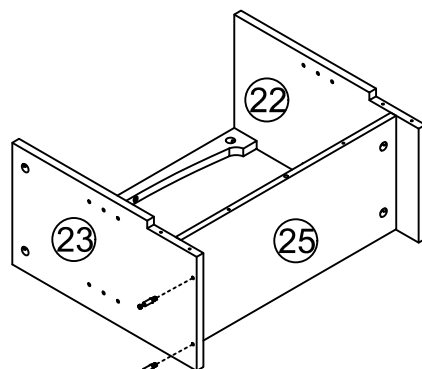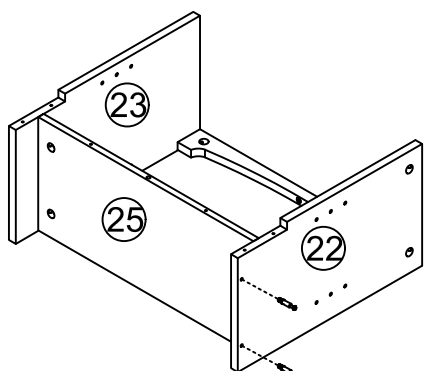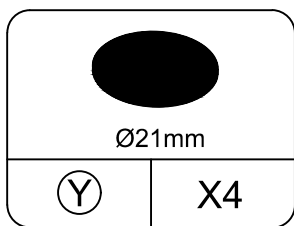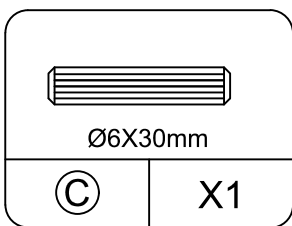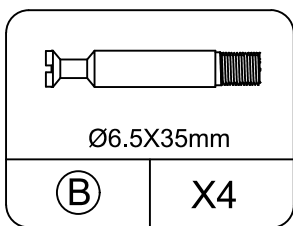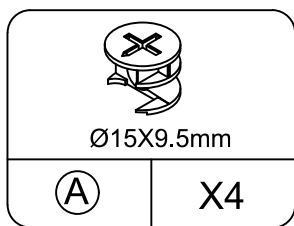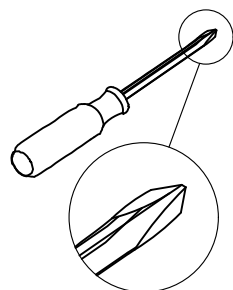





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

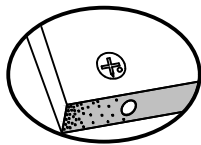





Proper orientation of CAM LOCK

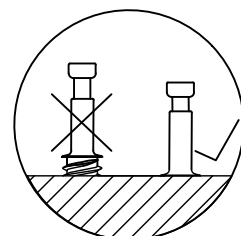


STEP23

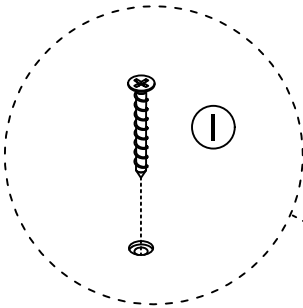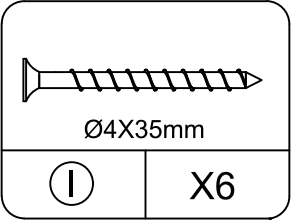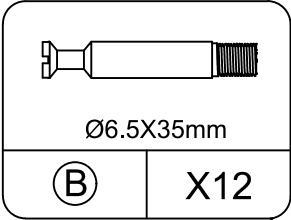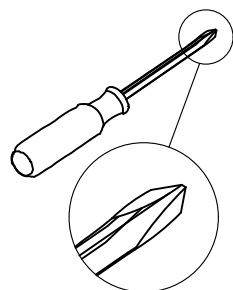


Make sure the screw into the right holes.

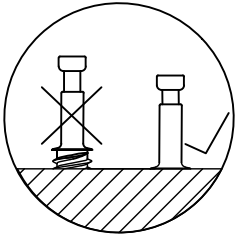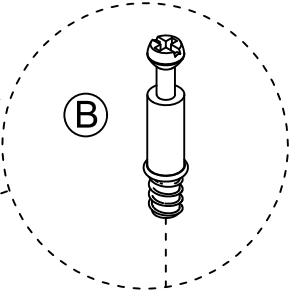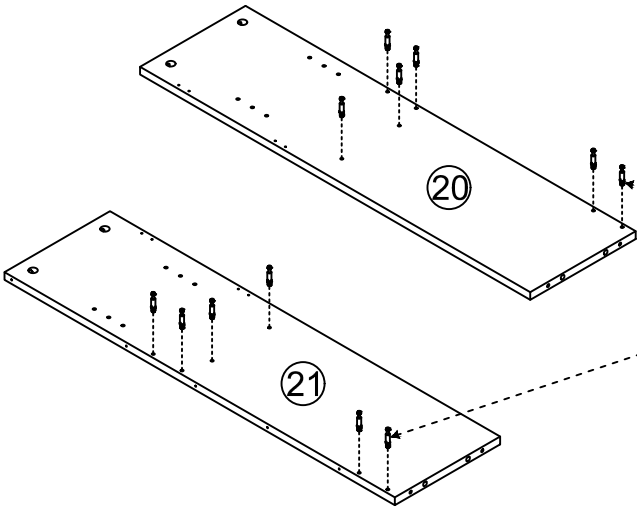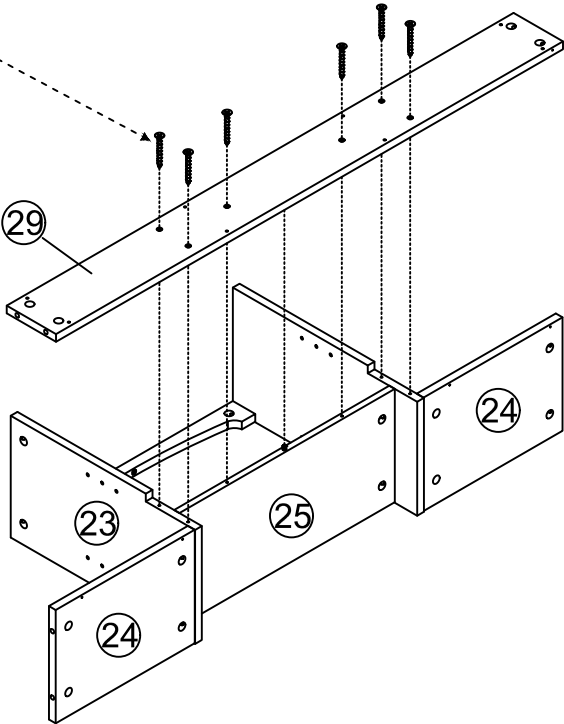


STEP24

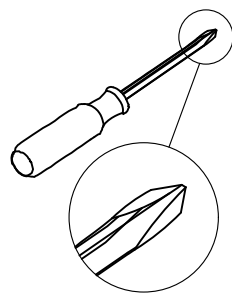


 Ø15X9.5mm		 Ø8X30mm		 Ø21mm	
(A)	X12	(D)	X8	(Y)	X4

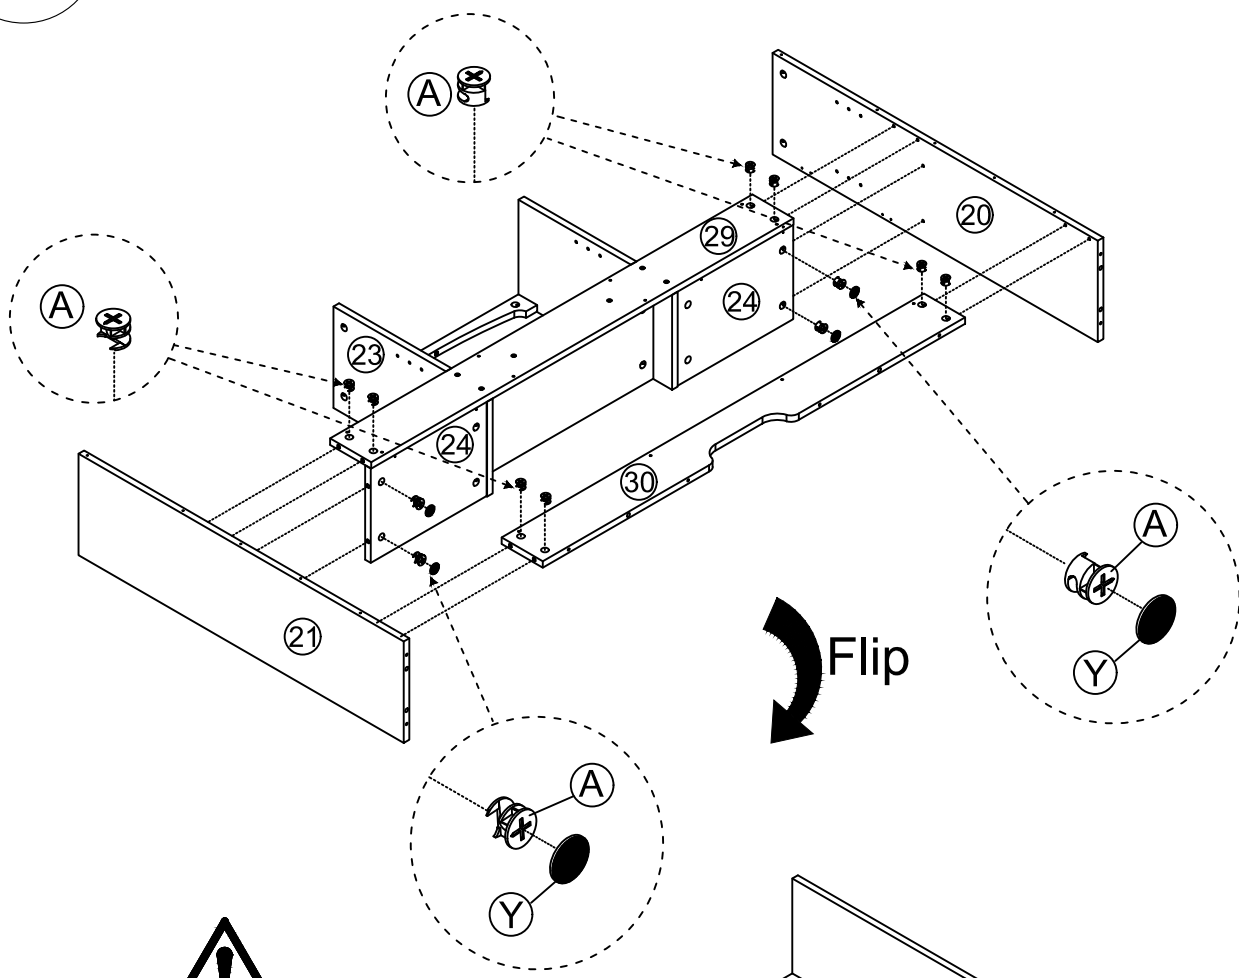

For this step,you need one helper.







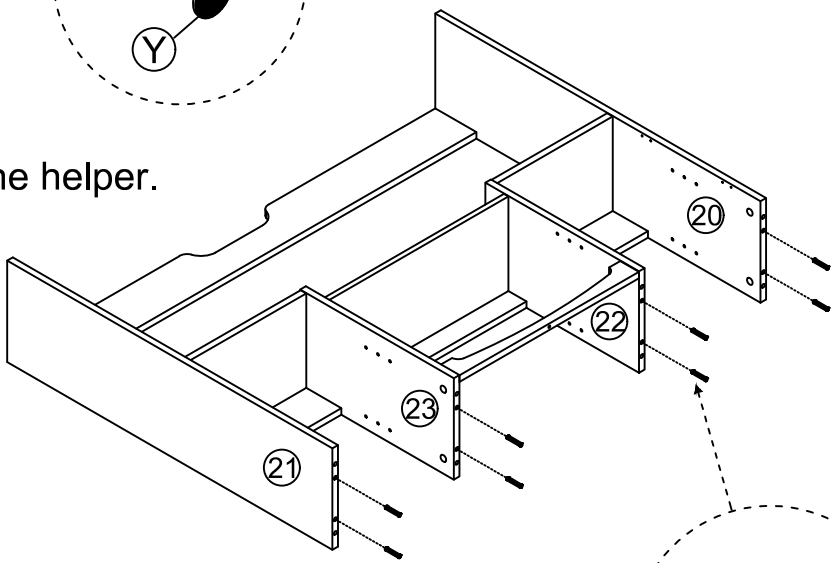


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

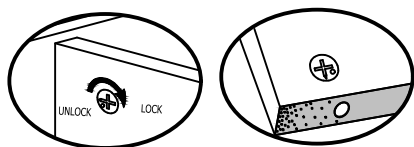


Proper orientation of CAM LOCK







STEP25

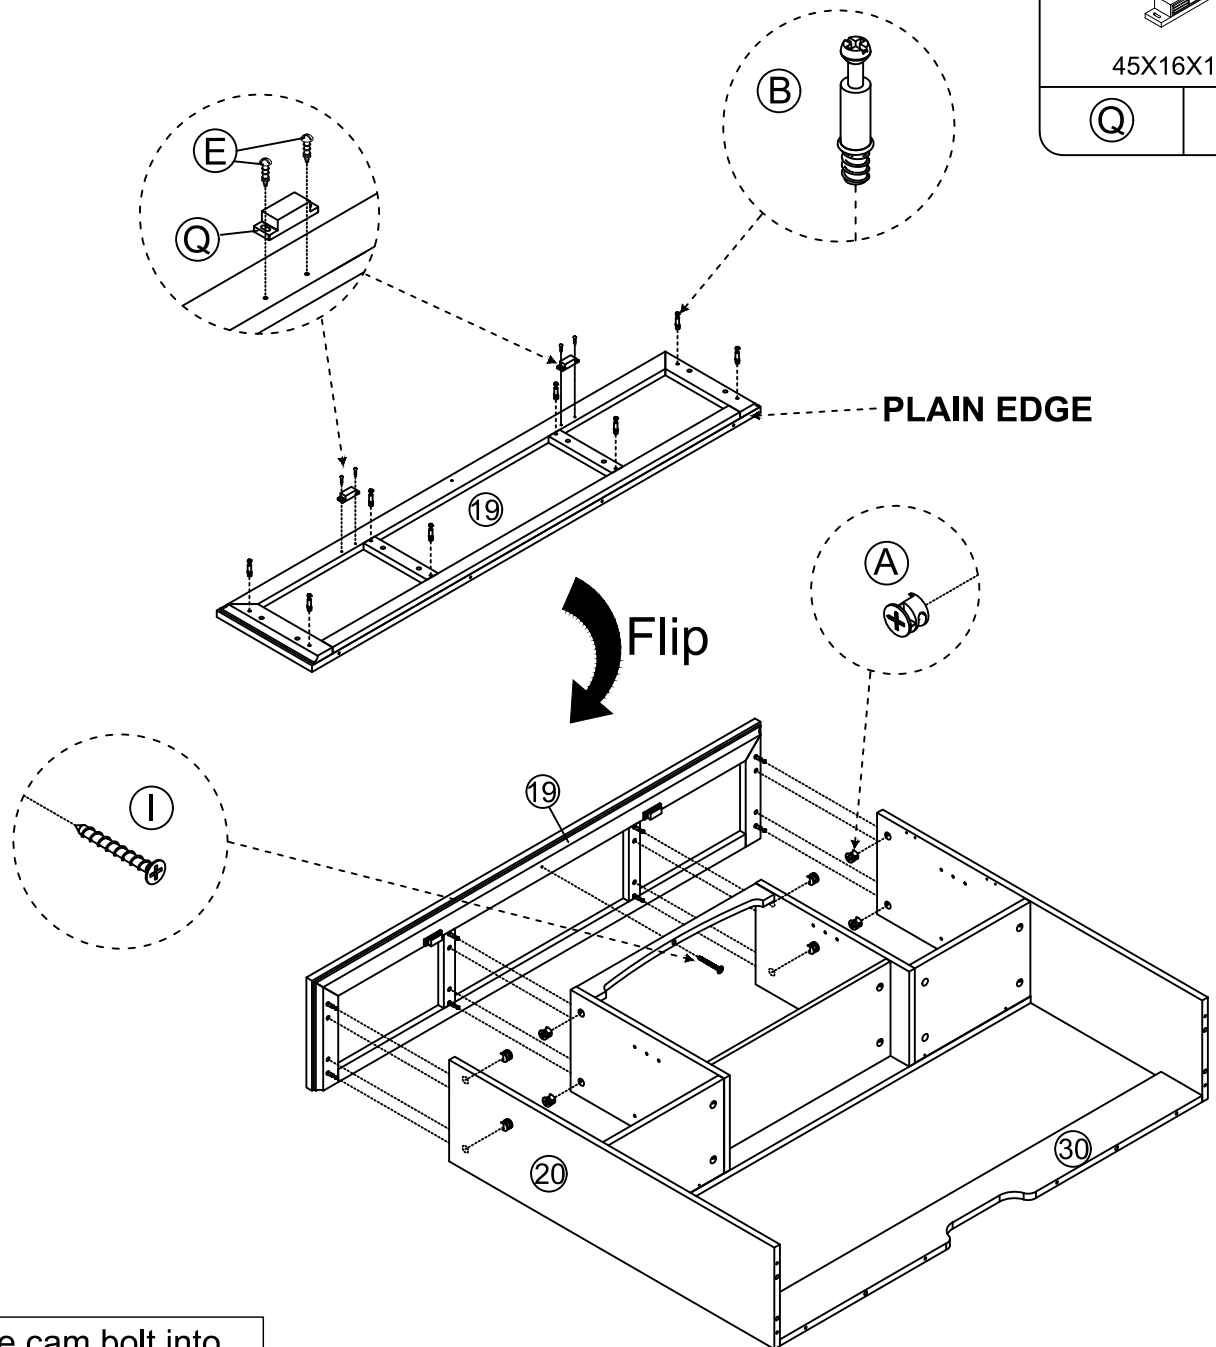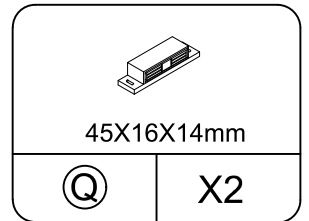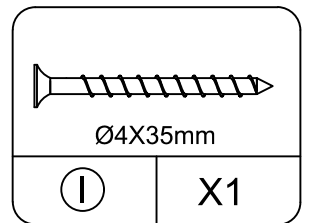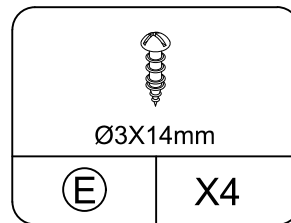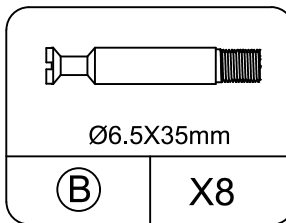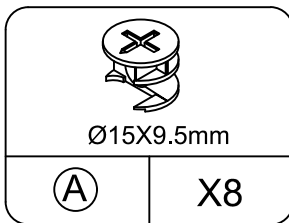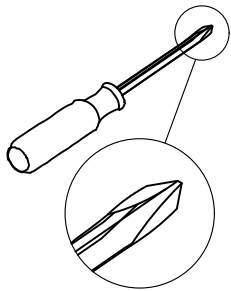

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

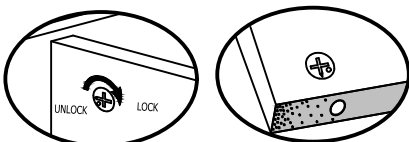


STEP26

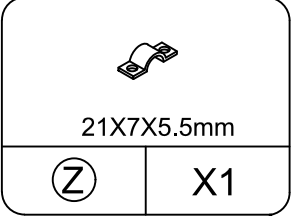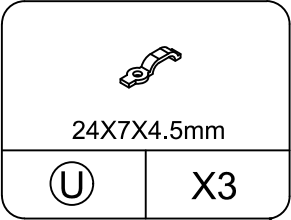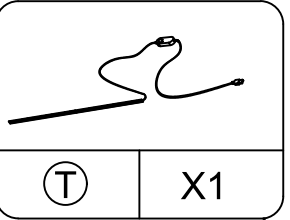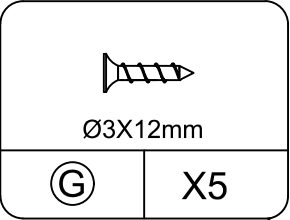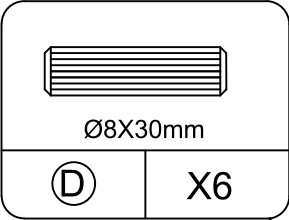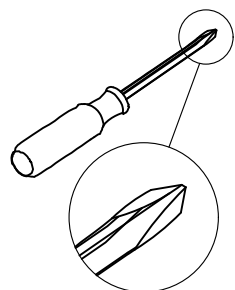


First , Tear off the back glue of the light strip and along the outer edge of panel 29, paste it in the middle; and then Use the U to secure the light strip, then fix the U on the 24-board with screw G.


Second ,Clamp the wire with the Z ,and then secure it with screw G.

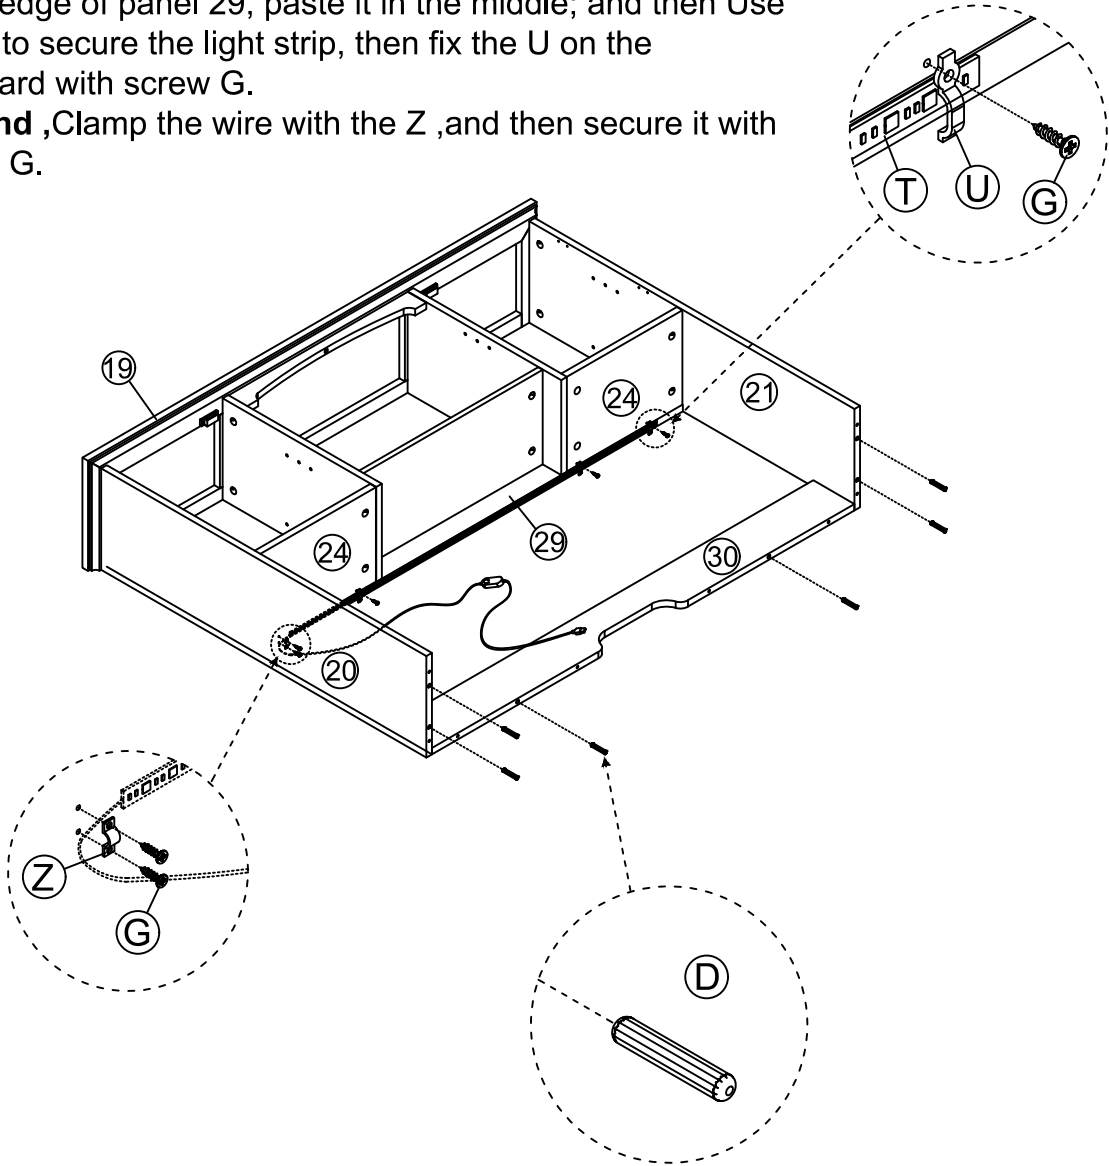


STEP27


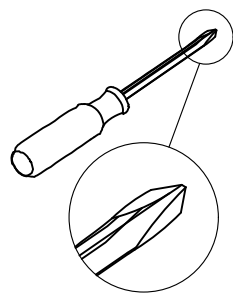





 Ø4X14mm	 73X15X25mm
	X2set

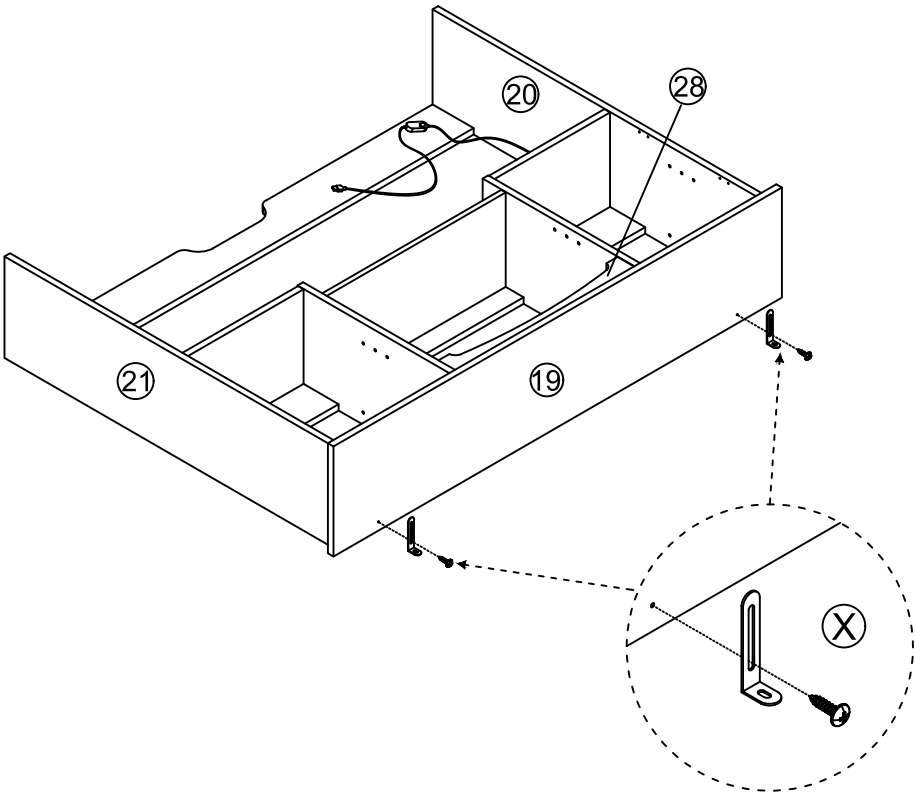


STEP28

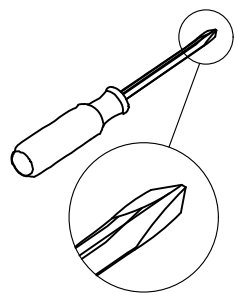



 Ø6.5X35mm		 Ø6.3X50mm		 M4X100 (60) mm	
(B)	X9	(J)	X8	(V)	X1

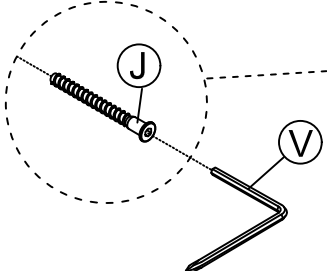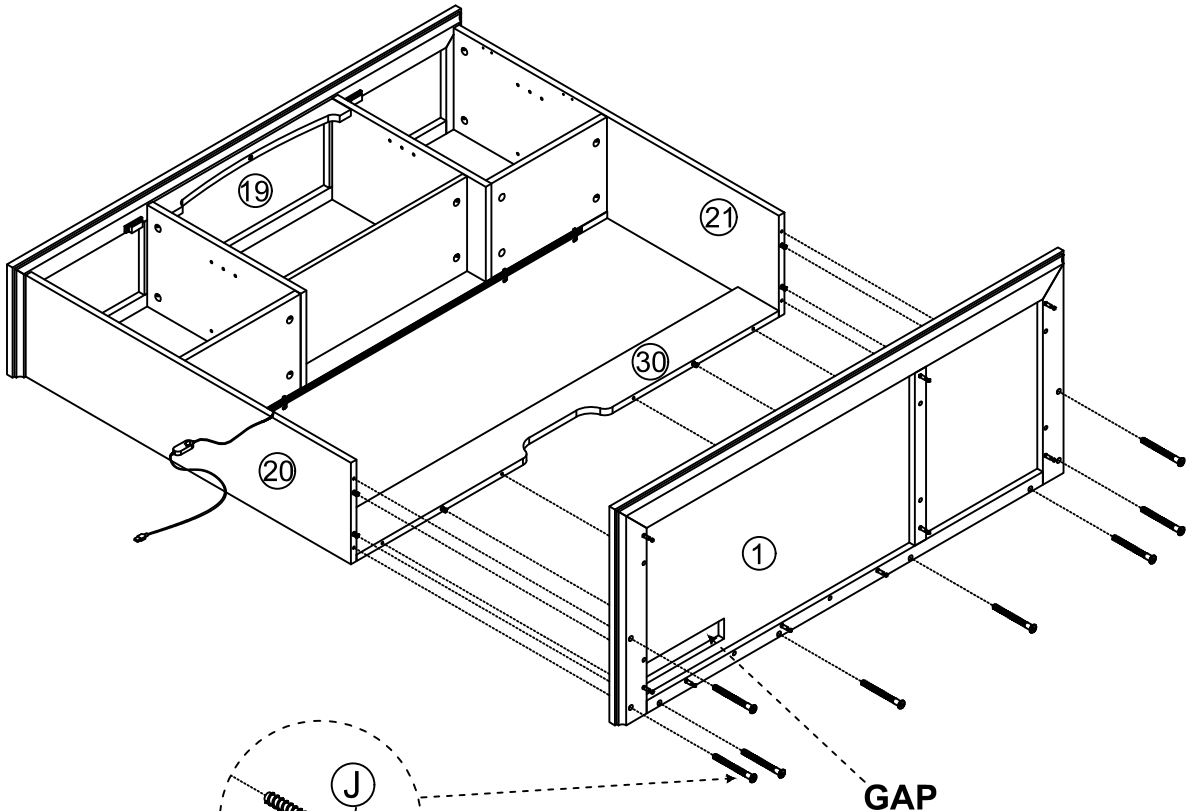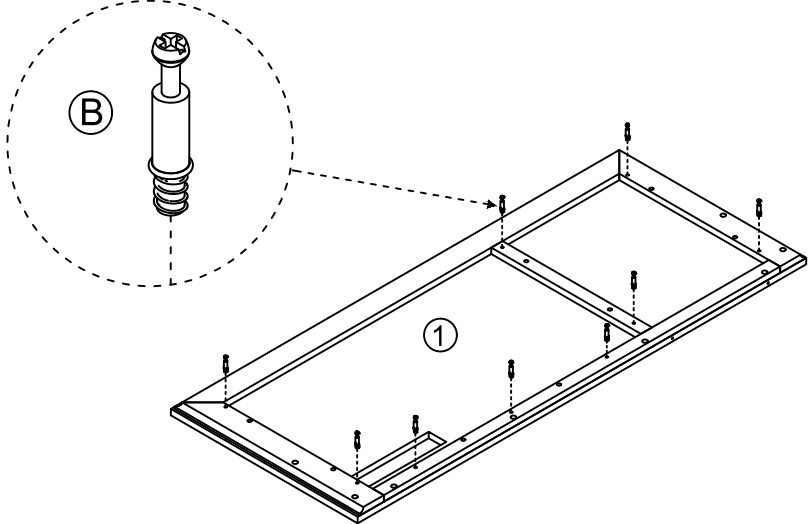


Make sure the screw into the right holes.

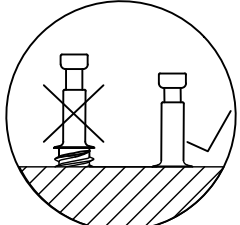



STEP29

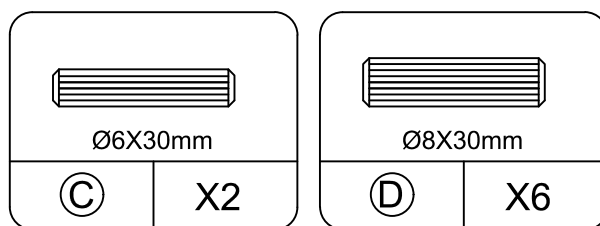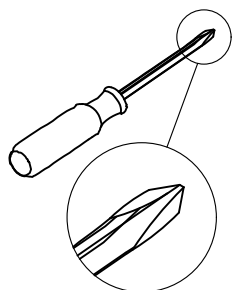


First install part C on panel number 6.

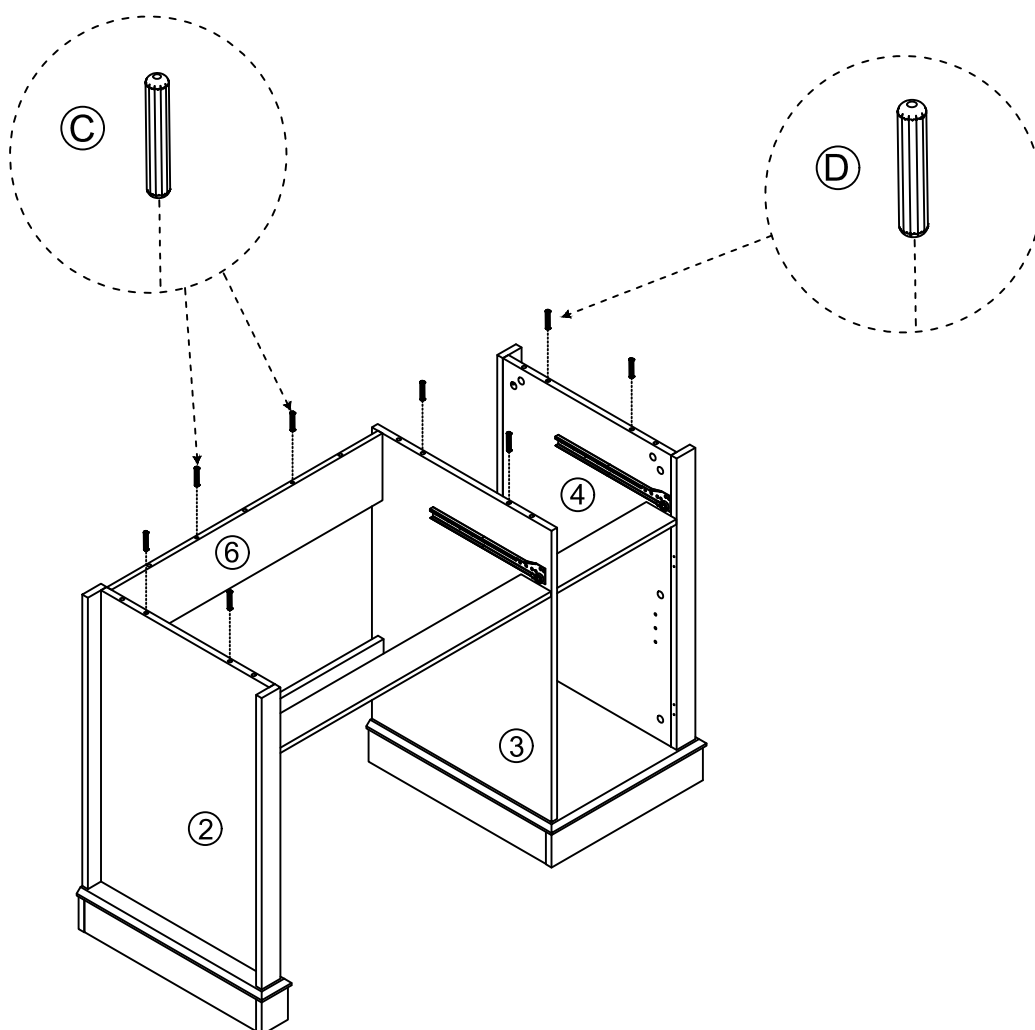


STEP30

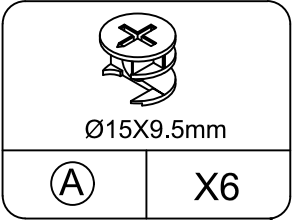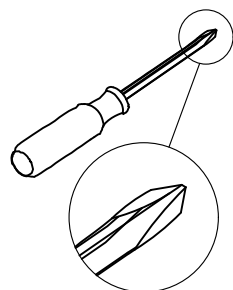

For this step,you need one helper.



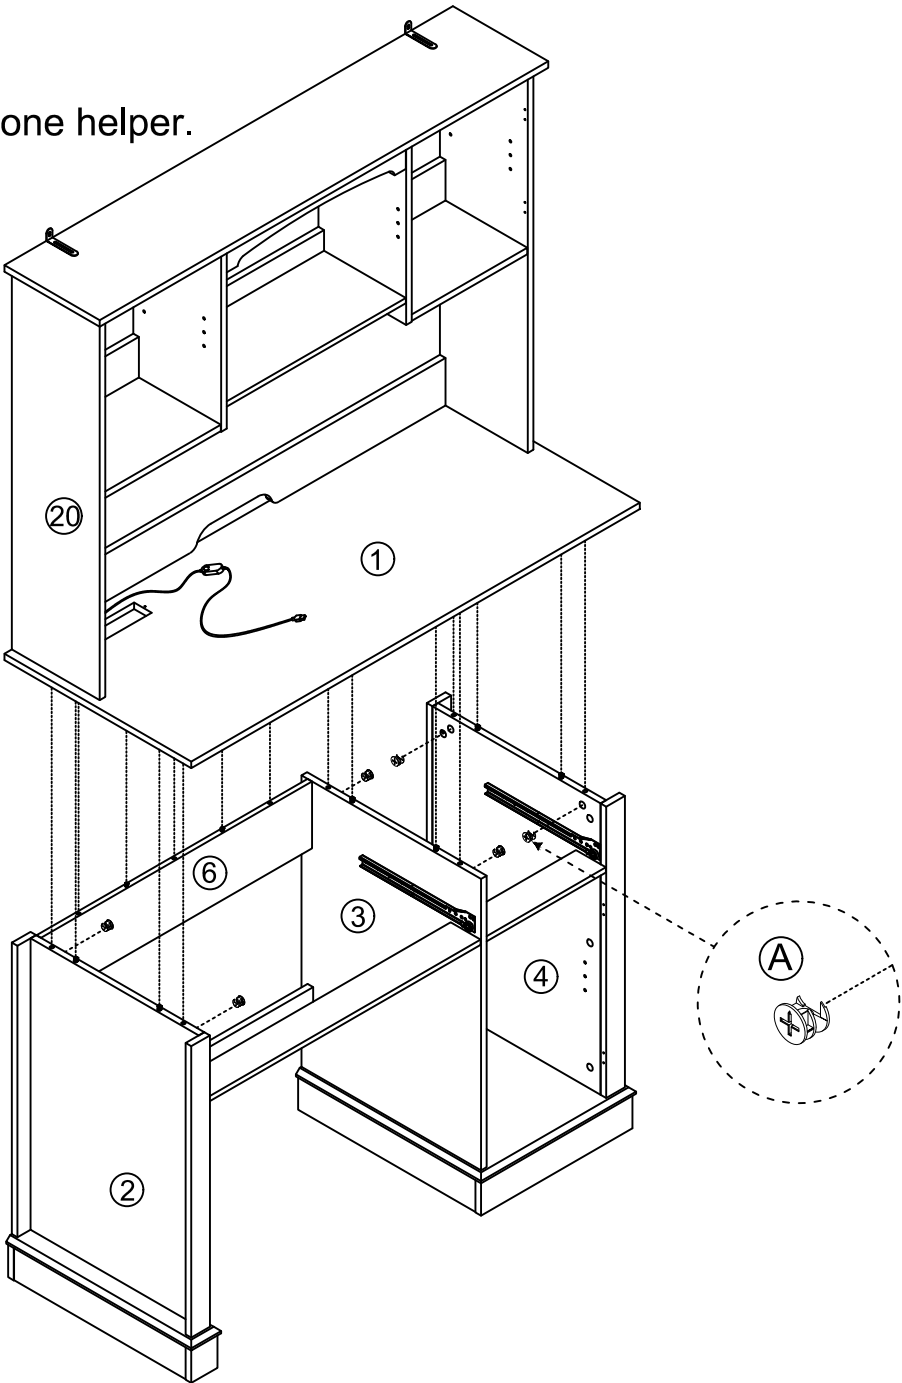


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

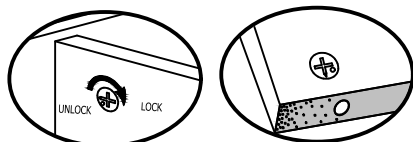


Proper orientation of CAM LOCK

STEP31

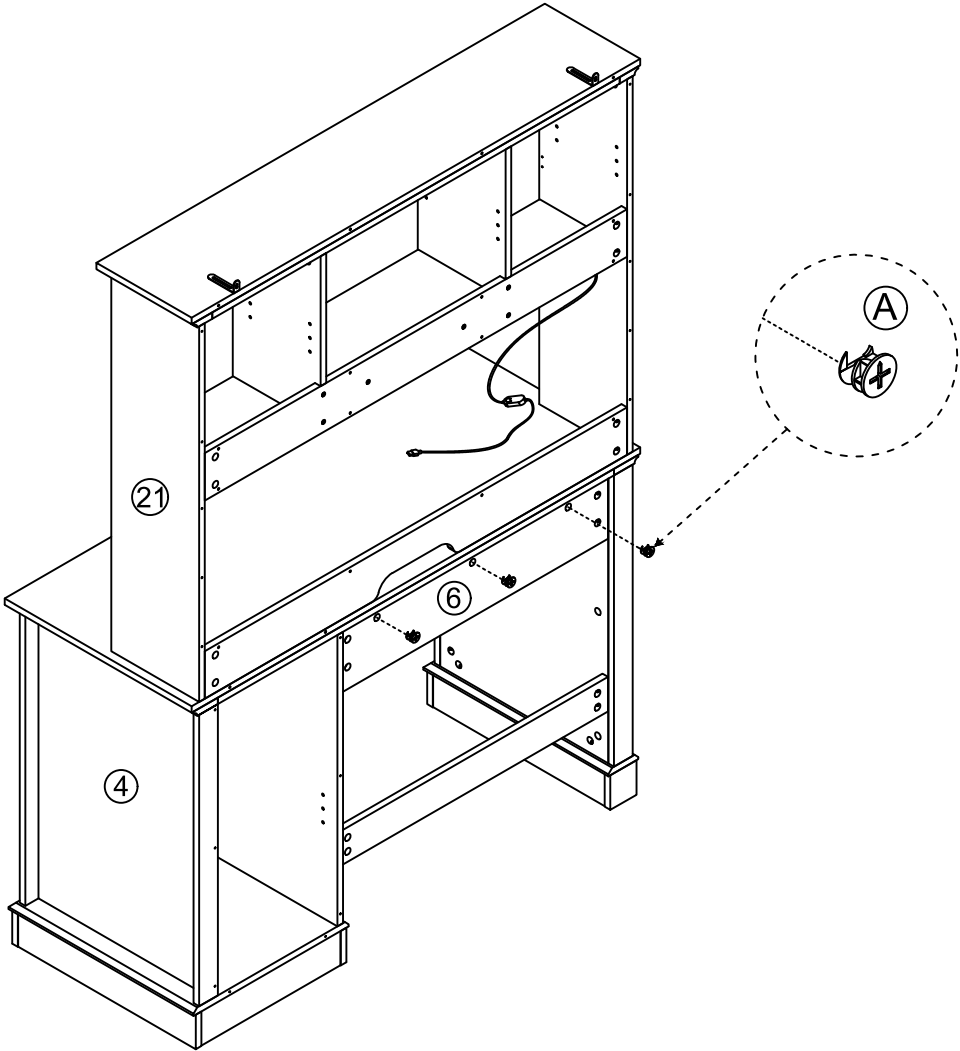
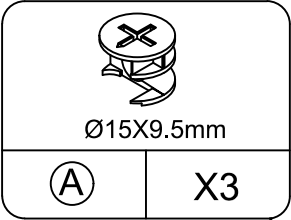
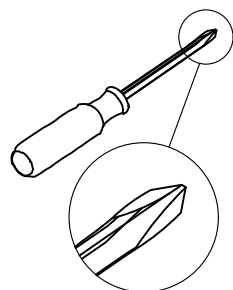


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



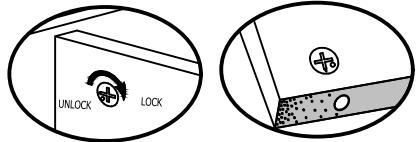


Proper orientation of CAM LOCK

STEP32

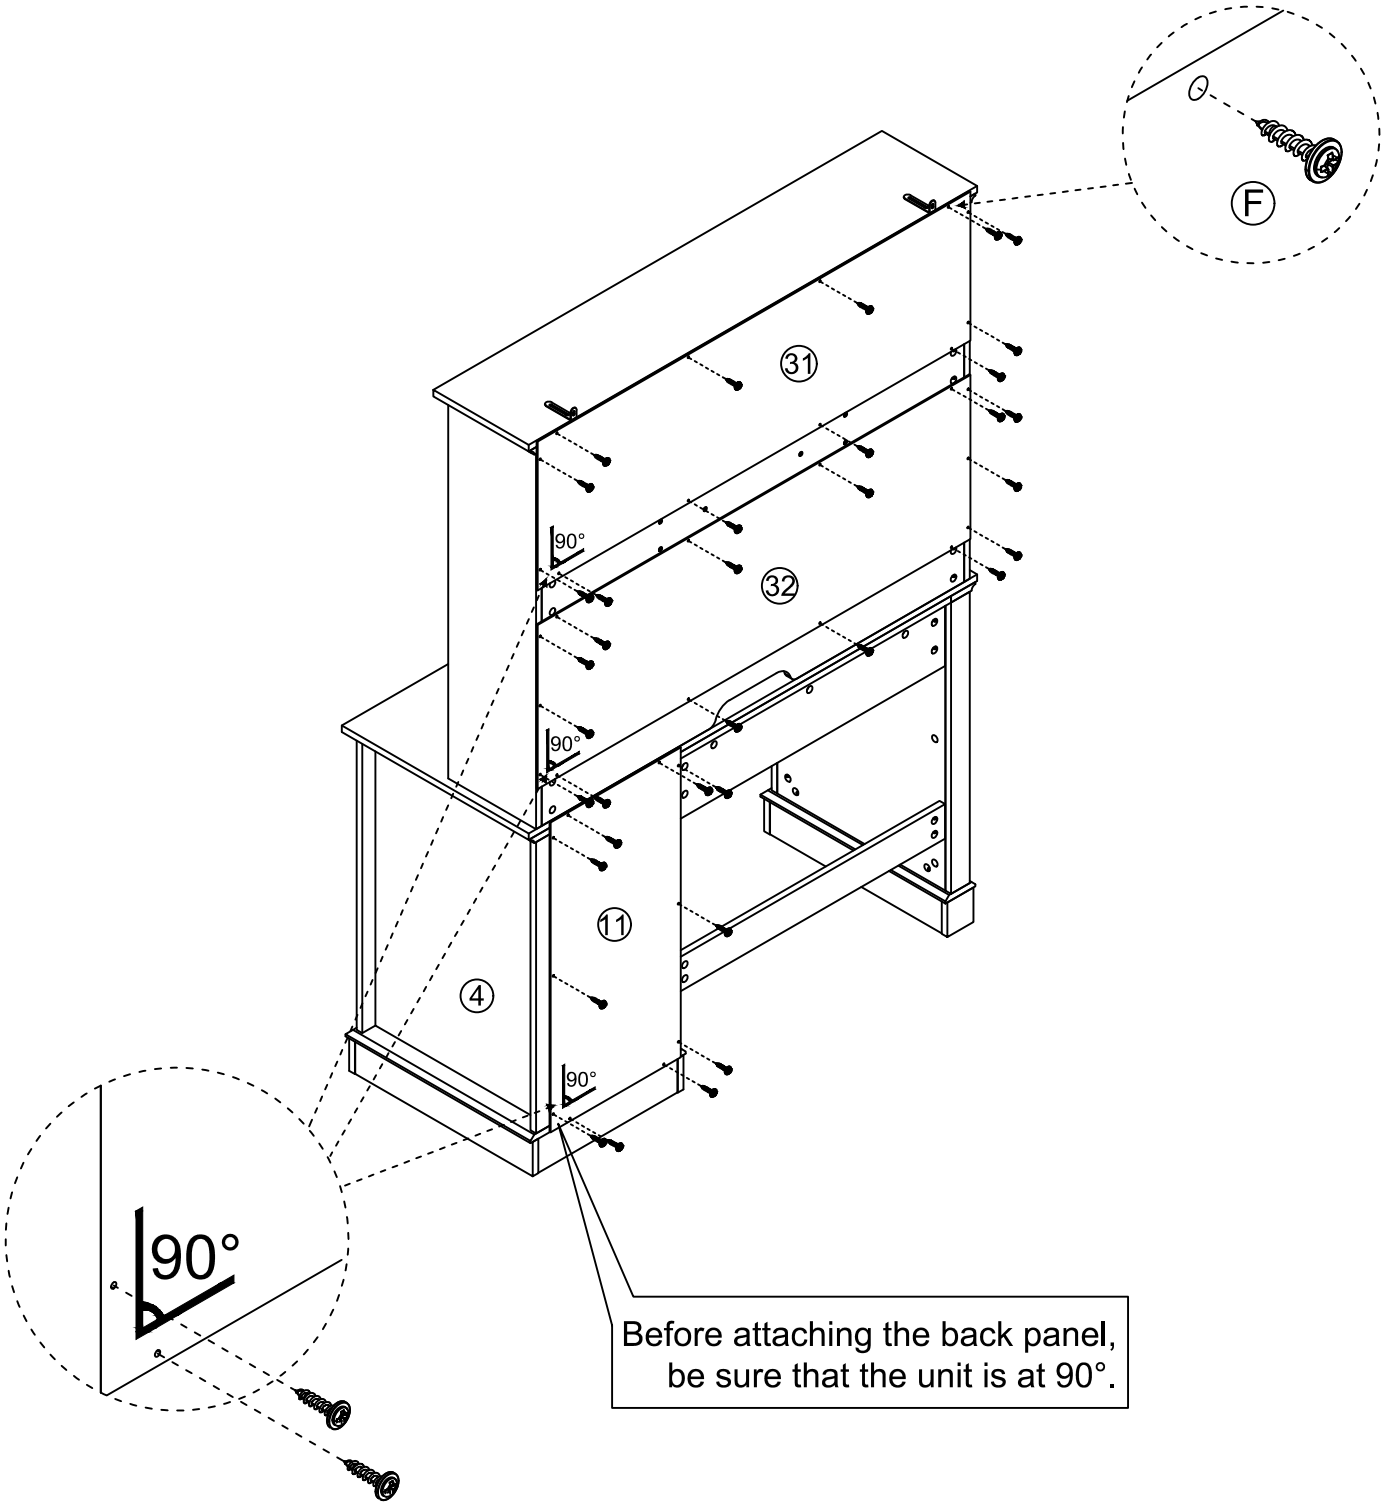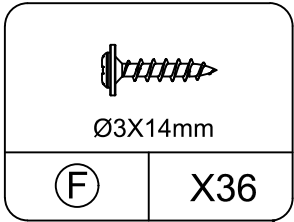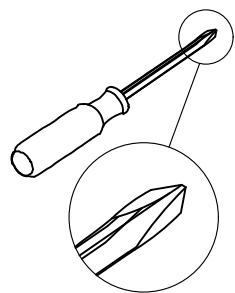


STEP33

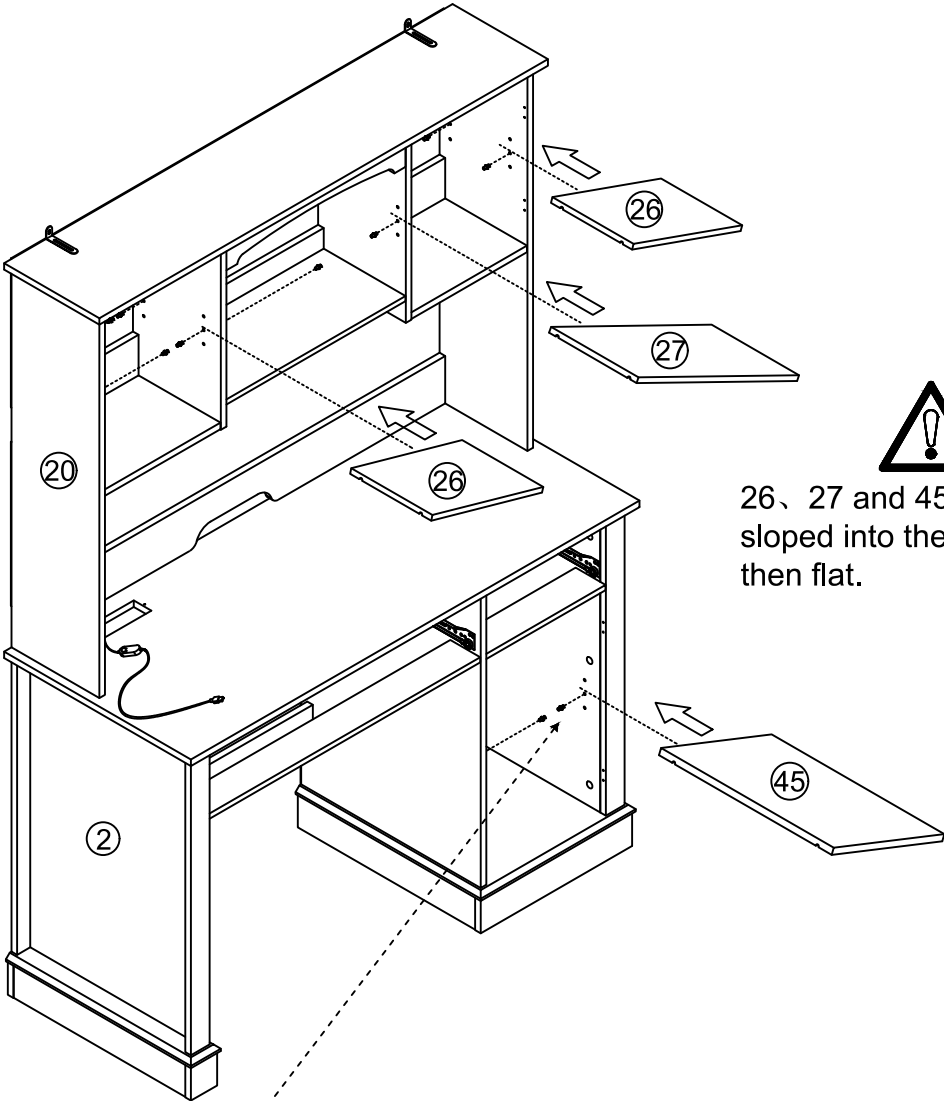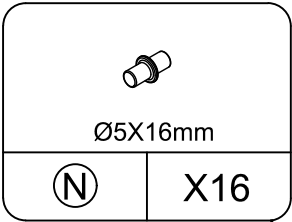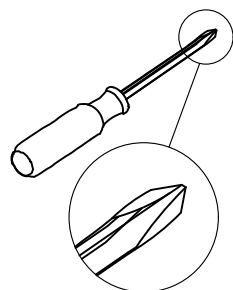

26、27 and 45 board must be sloped into the interior of and then flat.


Step 1

Select the desired height and put it in




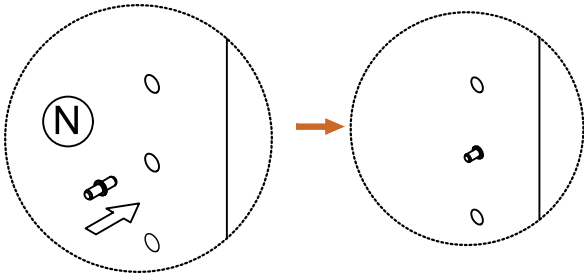


Step 2


Aim the board gaps down

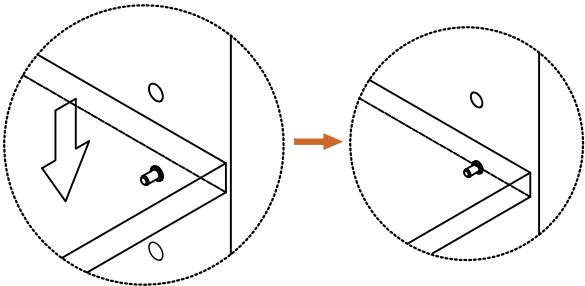















STEP34

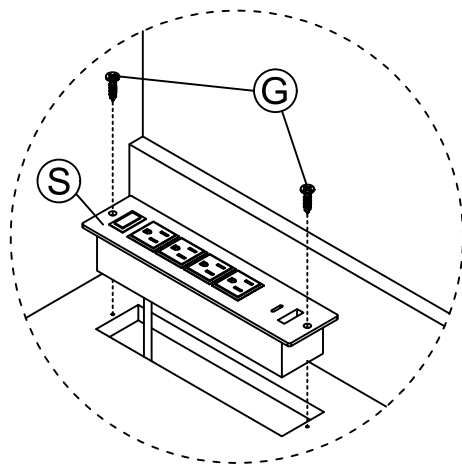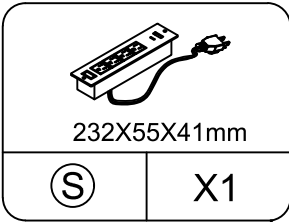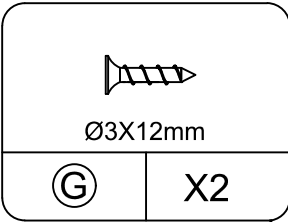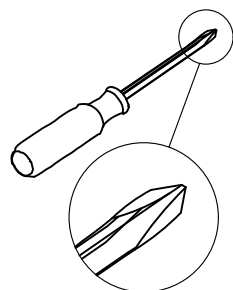




The power of using electrical appliances cannot exceed 1500W.

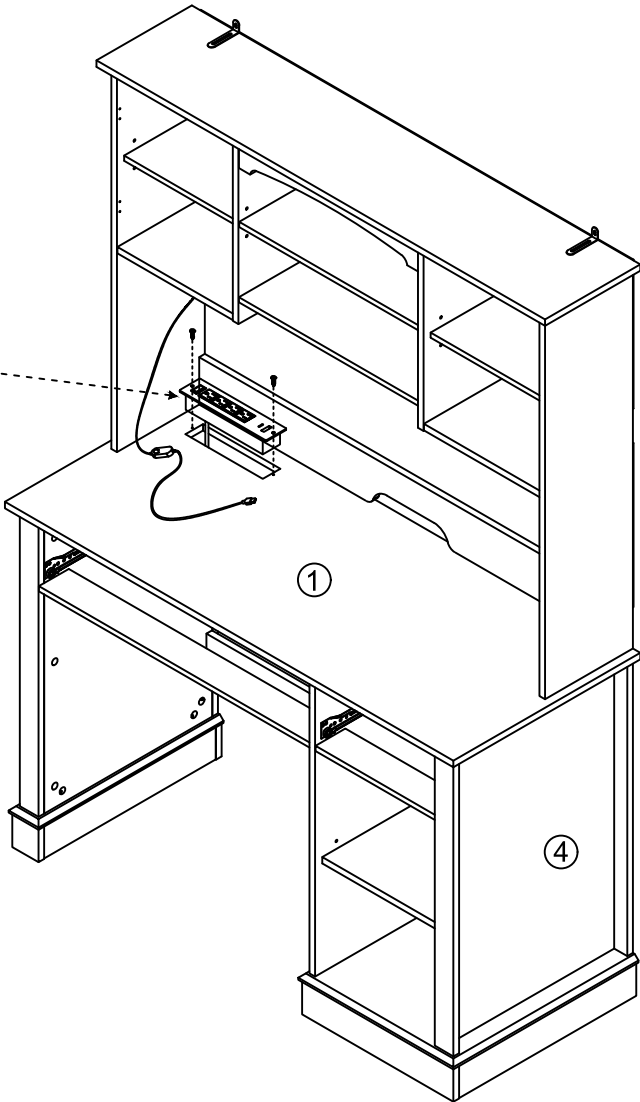




STEP35

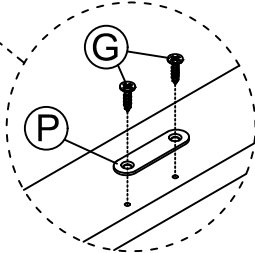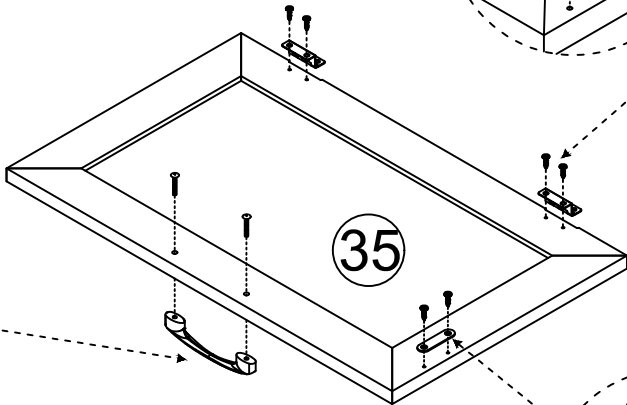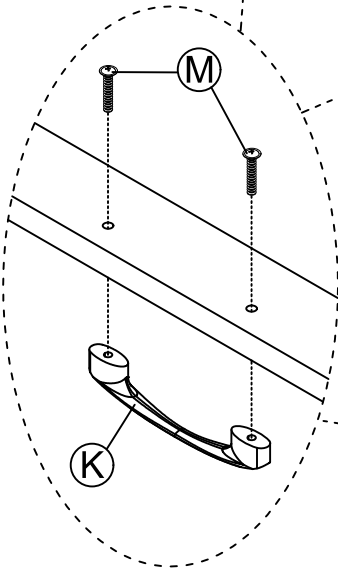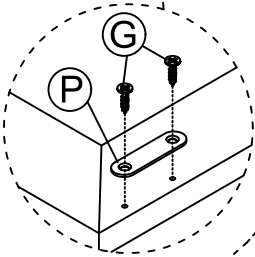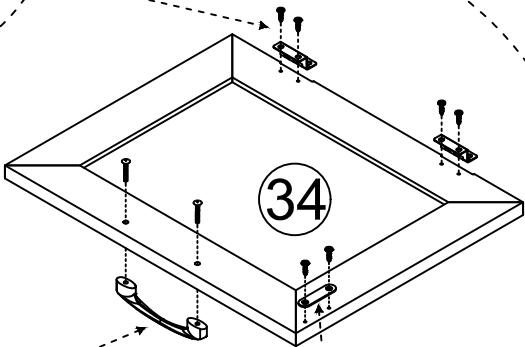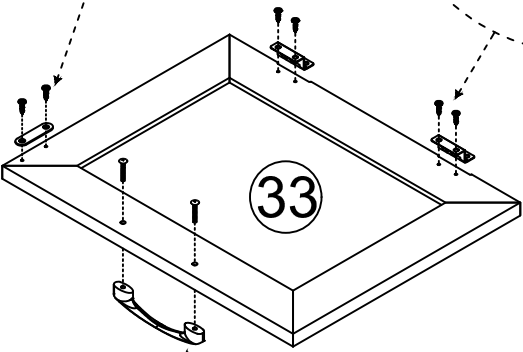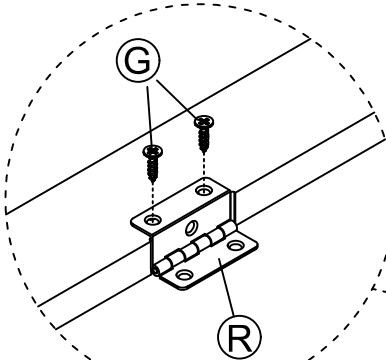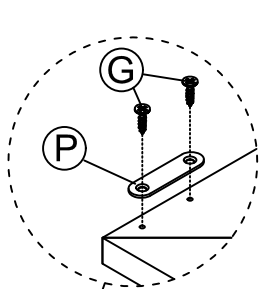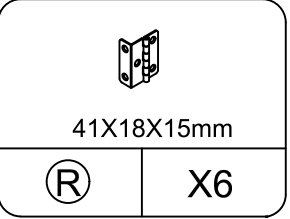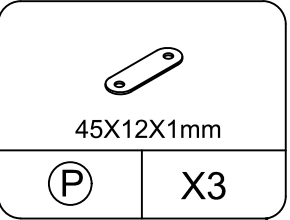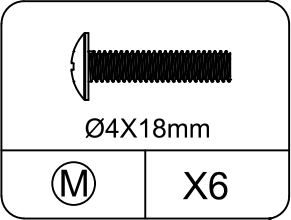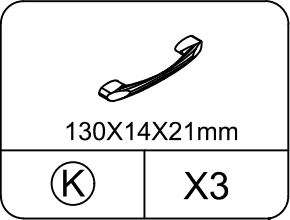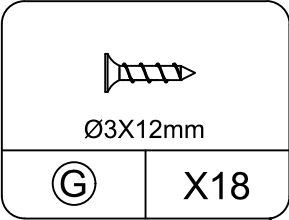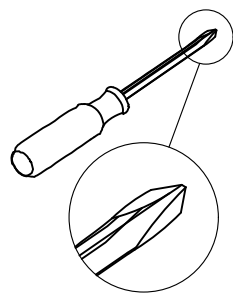









STEP36

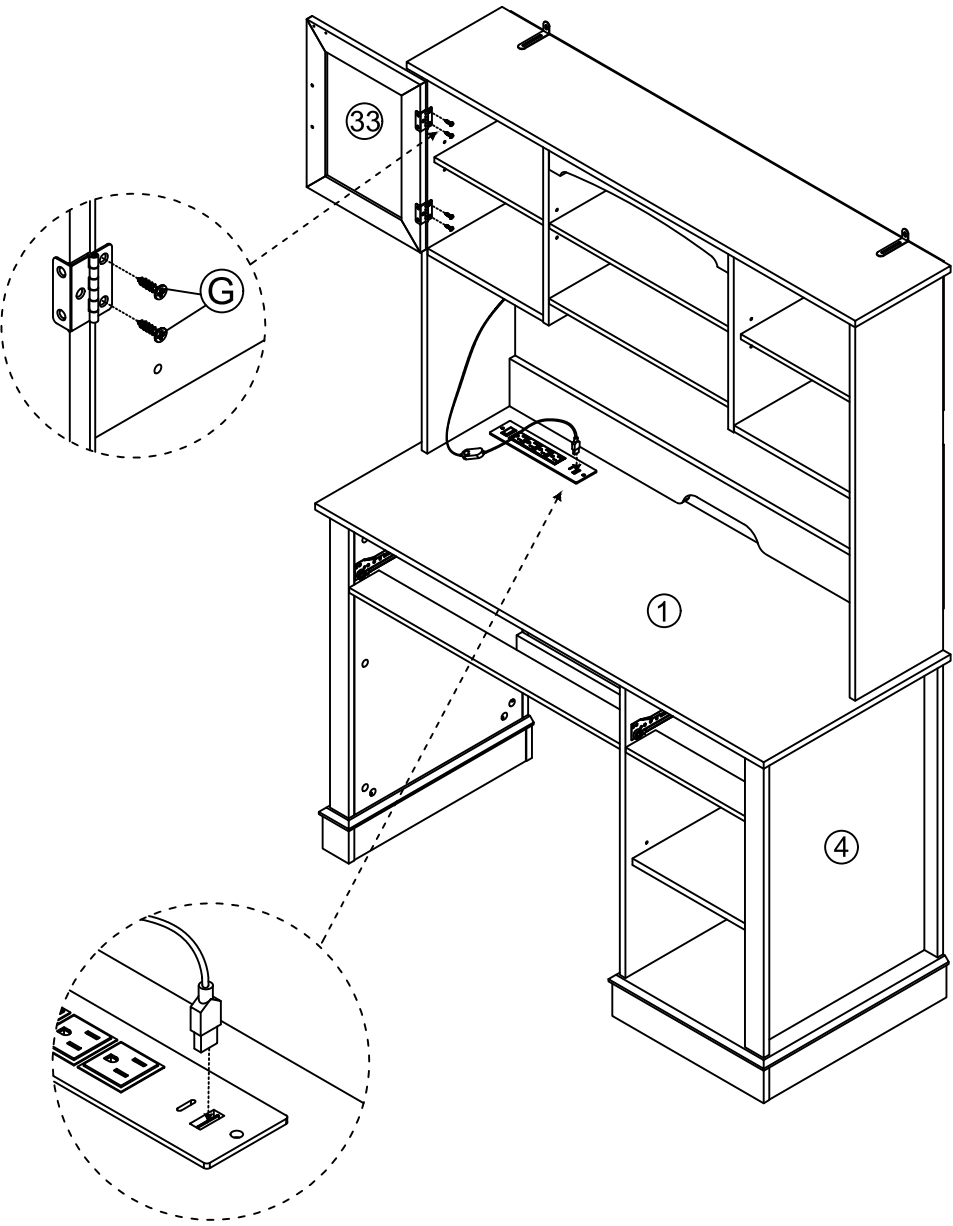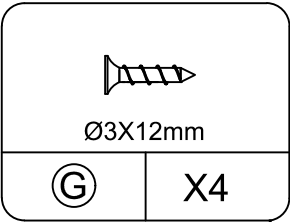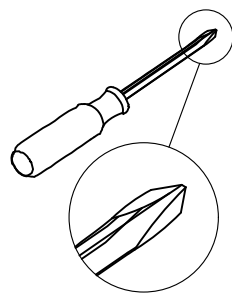


STEP37

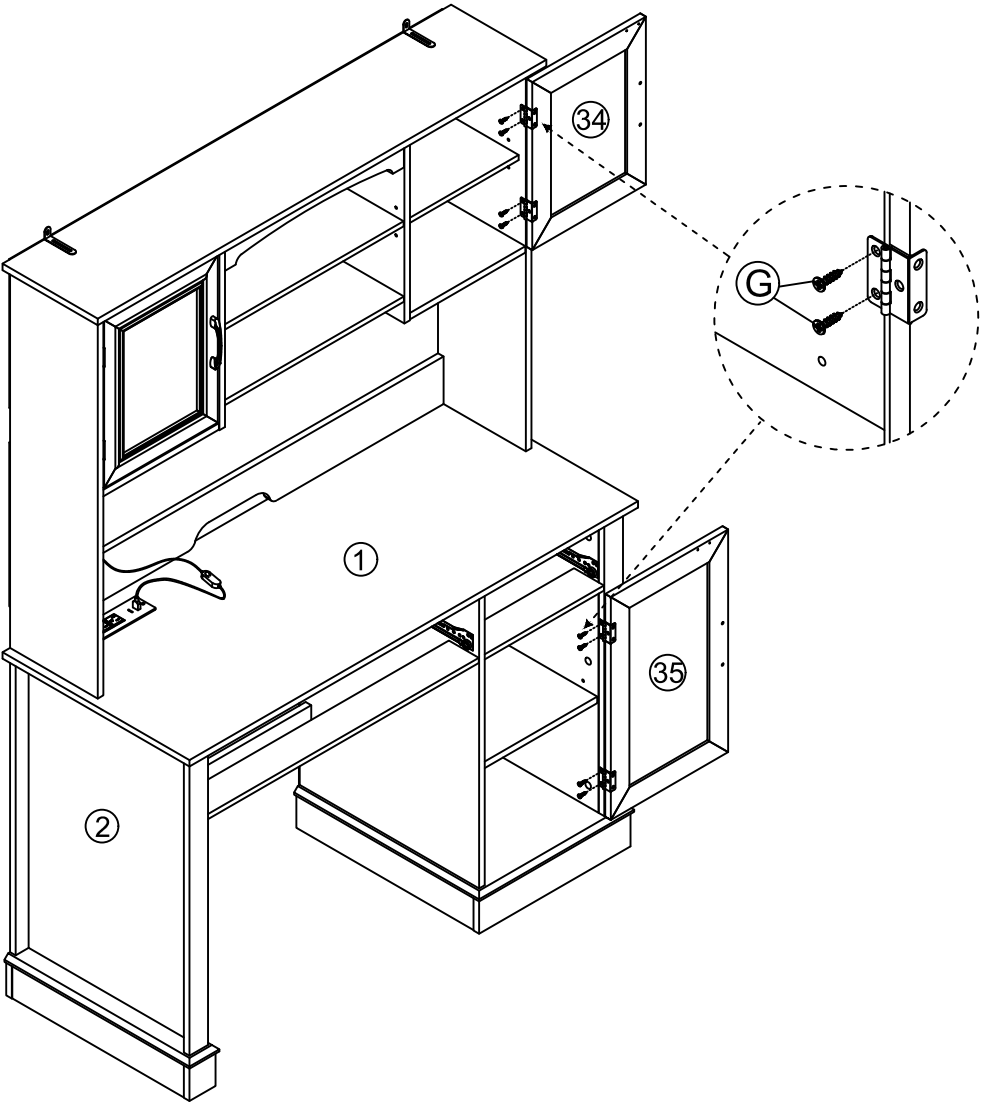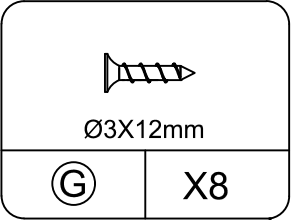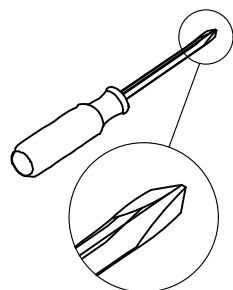


STEP38

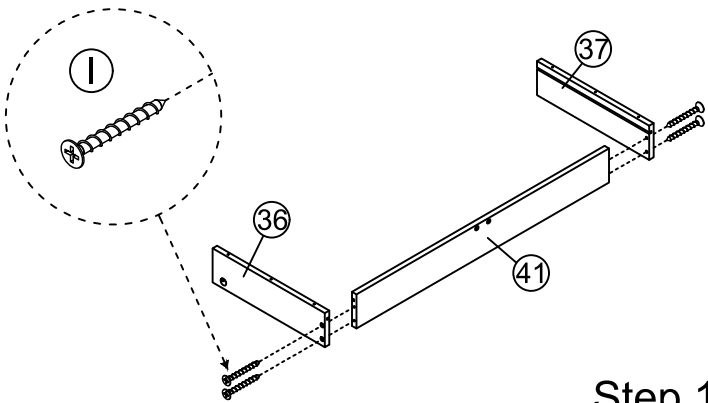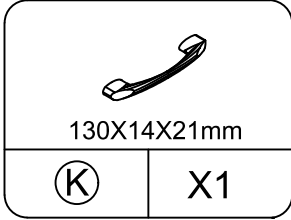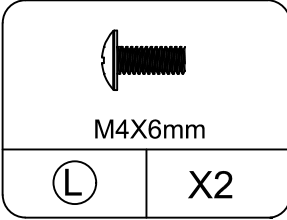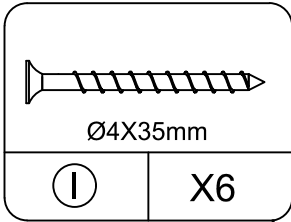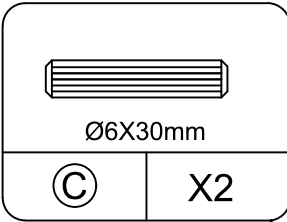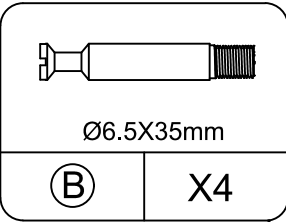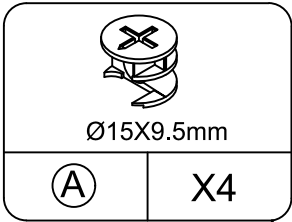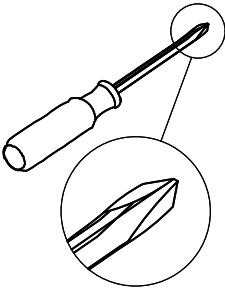


Step 1

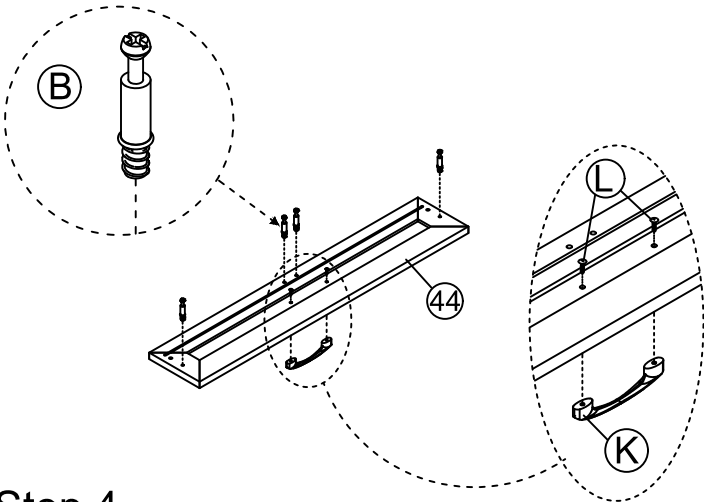

Step 2

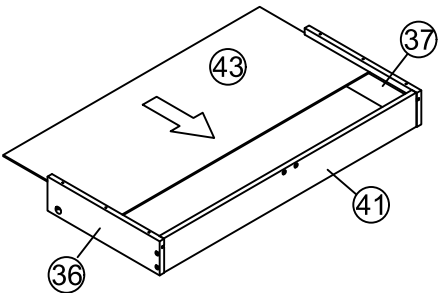


Step 3

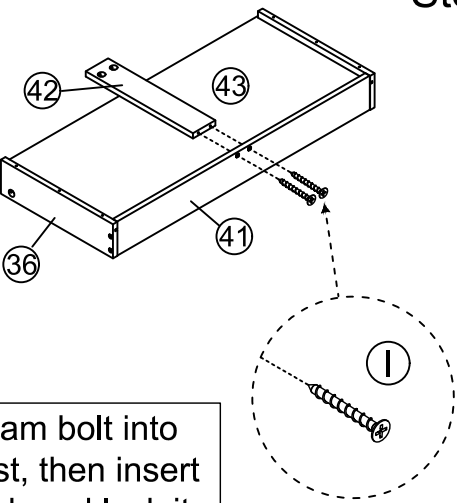


Step 4


Step 5

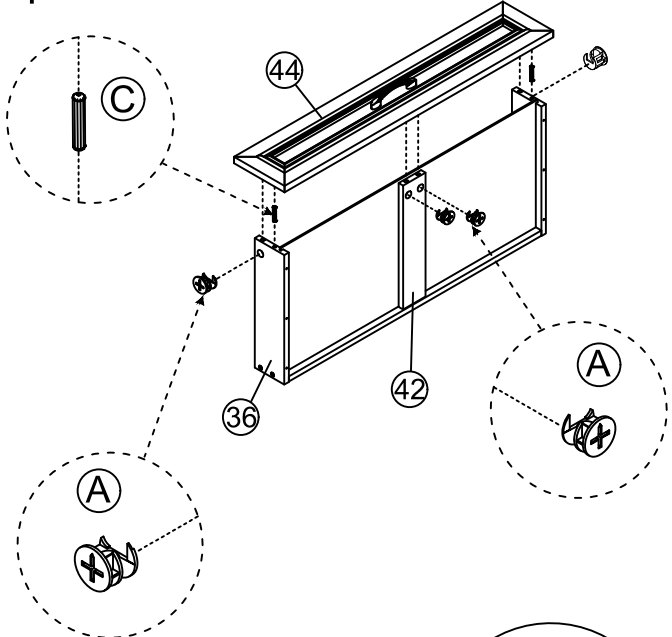


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



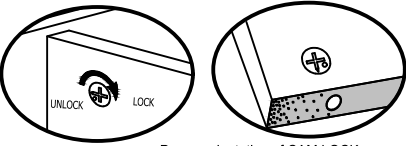



Proper orientation of CAM LOCK

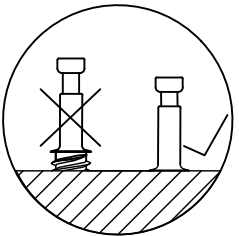


STEP39

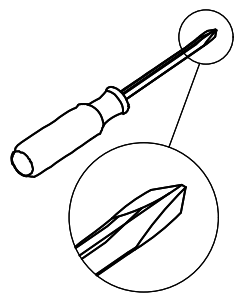

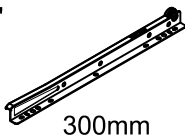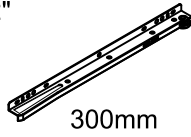
 Ø3.5X14mm		 12" 300mm		 12" 300mm	
Ⓜ X6		Ⓞ-DL X1		Ⓞ-DR X1	

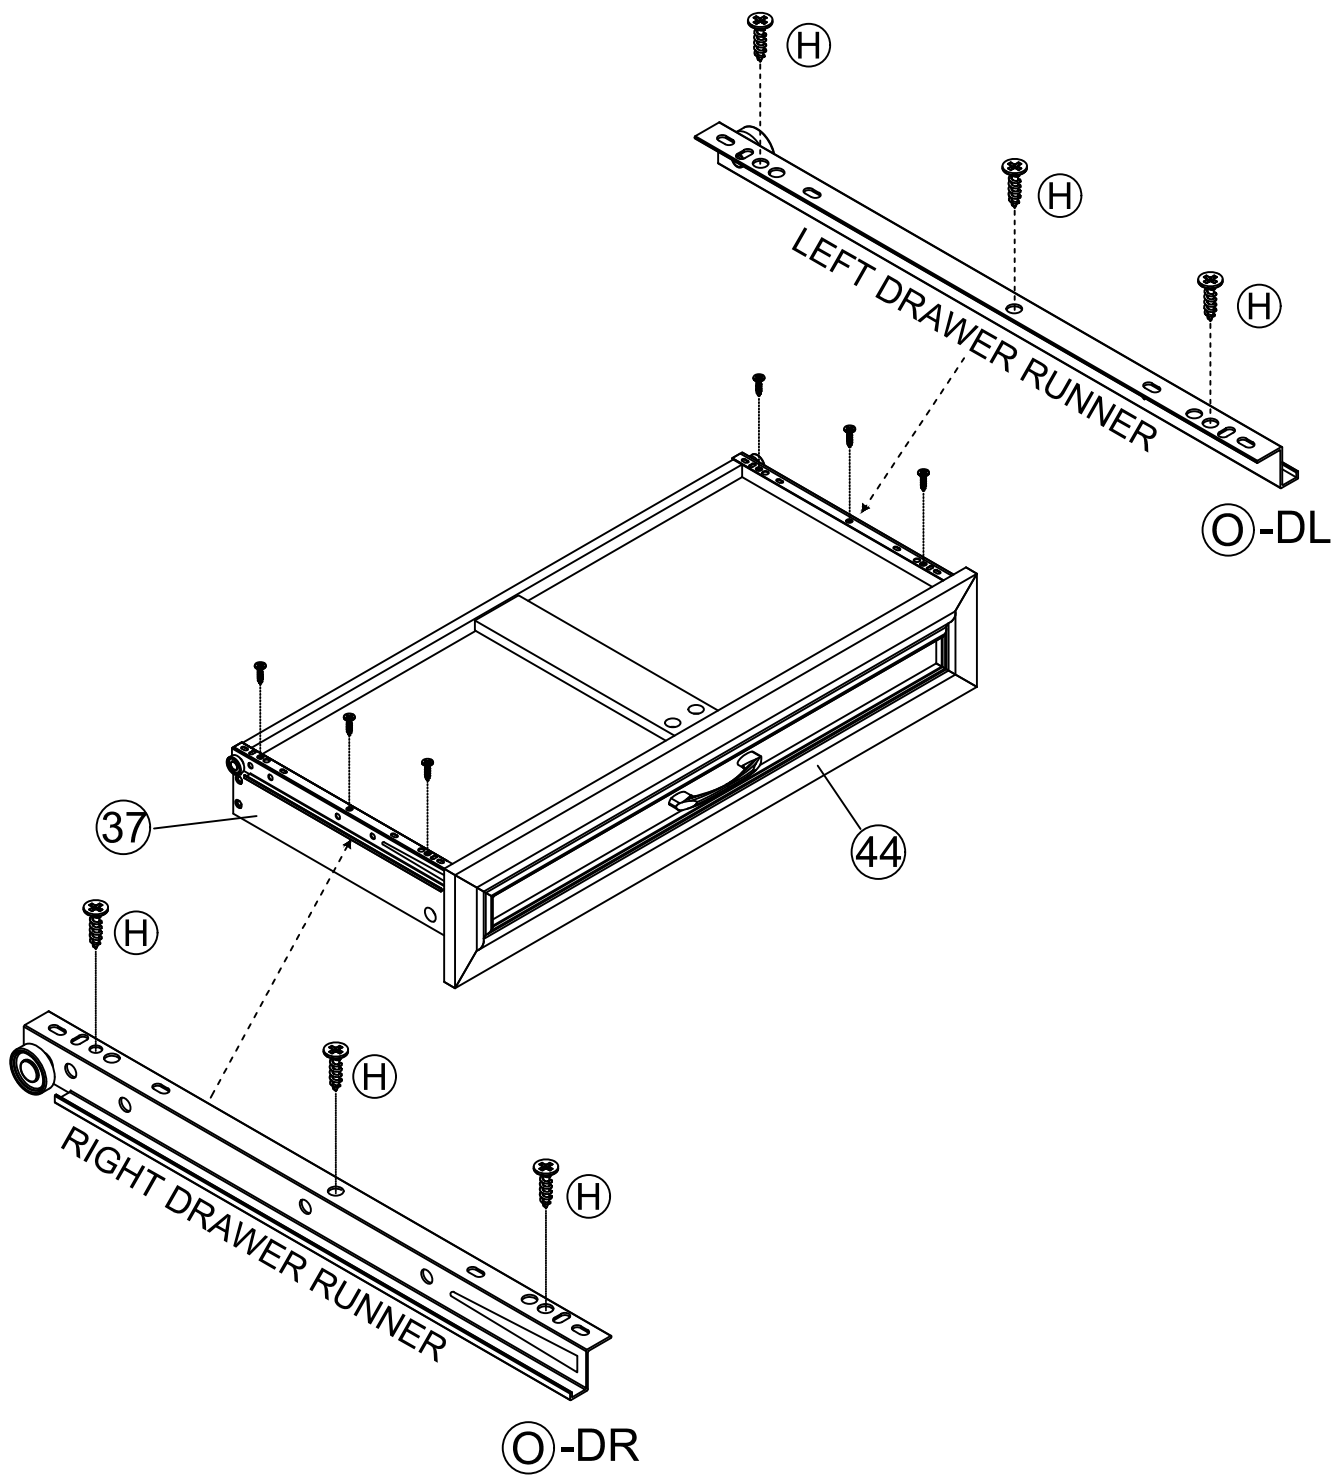


STEP40

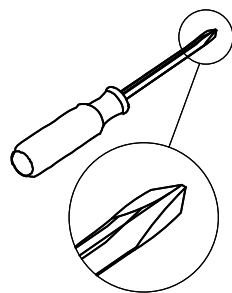

	
Ø15X9.5mm	
(A)	X2





	
Ø6.5X35mm	
(B)	X2

	
Ø6X30mm	
(C)	X2


	
Ø4X35mm	
(I)	X4

	
M4X6mm	
(L)	X2


	
130X14X21mm	
(K)	X1

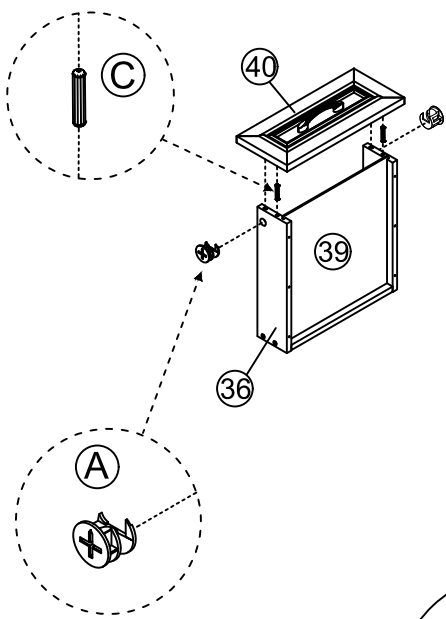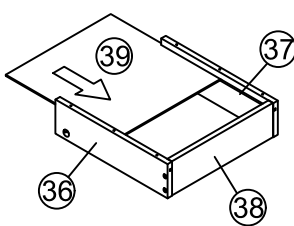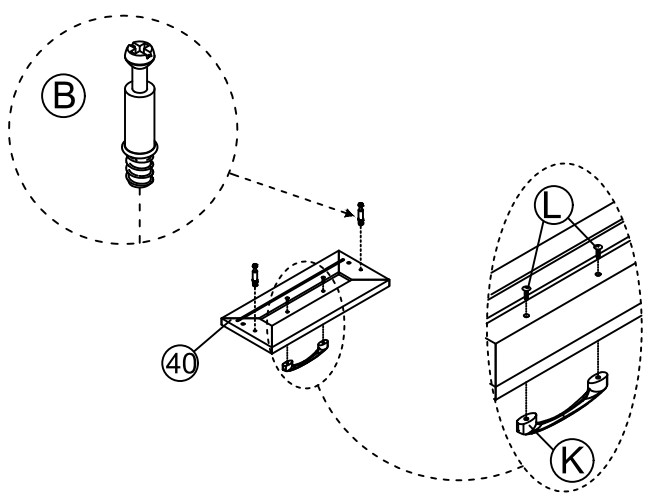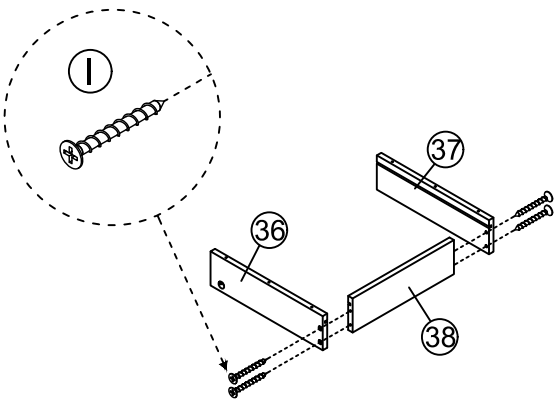


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



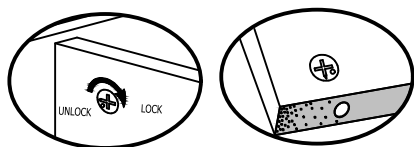



Proper orientation of CAM LOCK

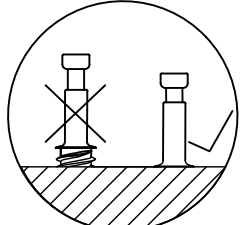



STEP41

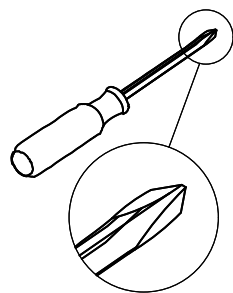

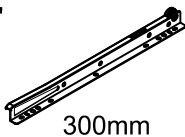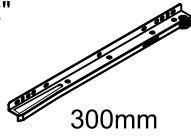
 Ø3.5X14mm		 300mm		 300mm	
(H)	X6	(O-DL)	X1	(O-DR)	X1

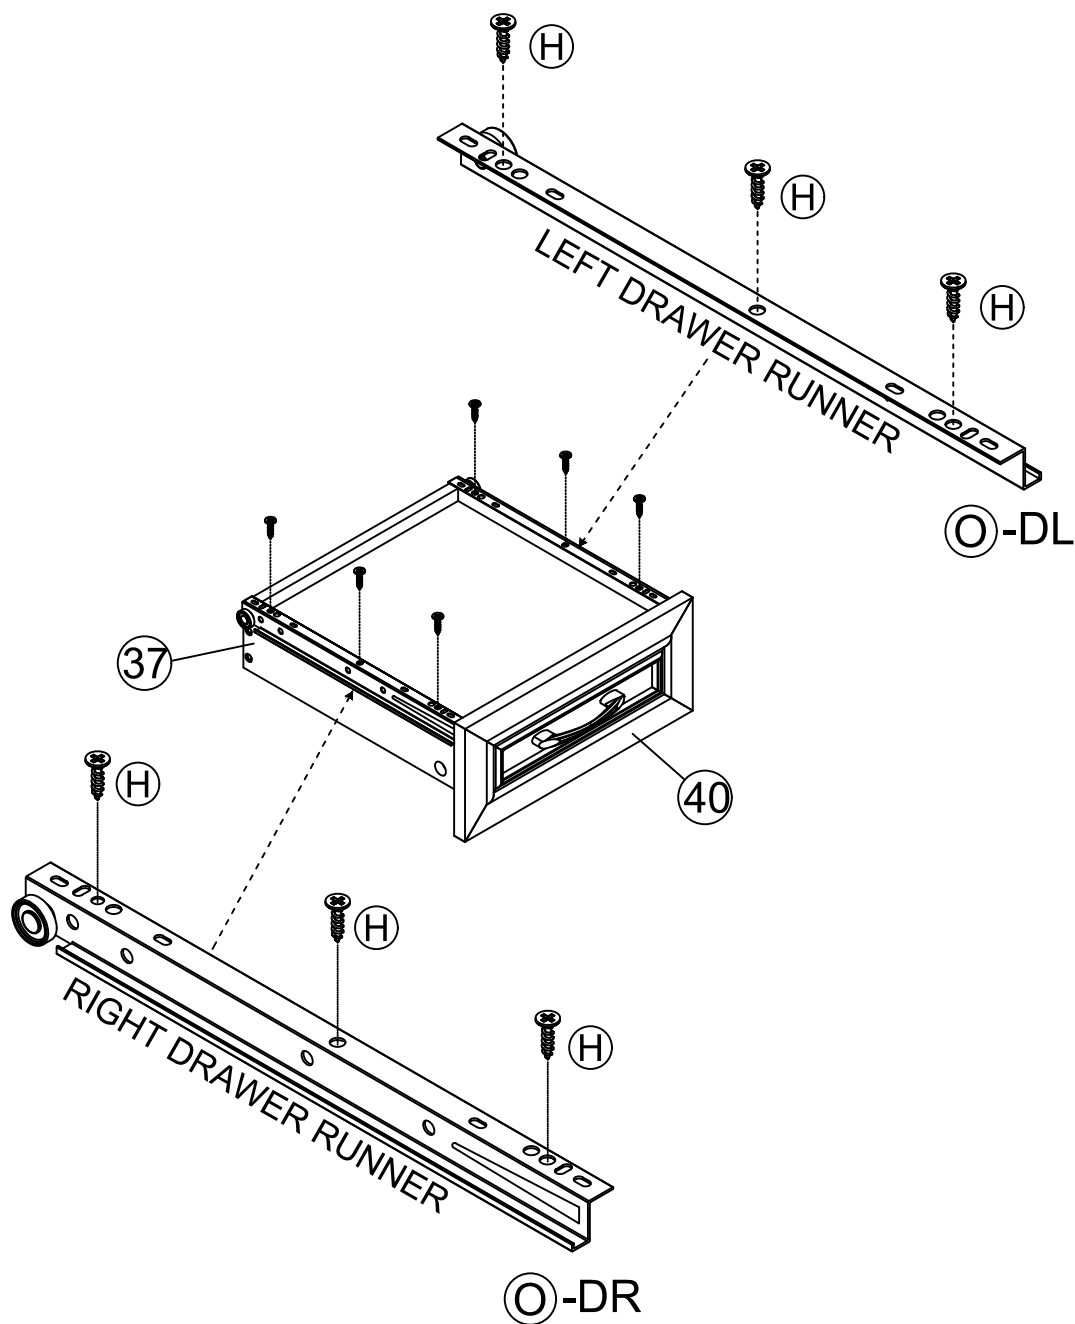

STEP42

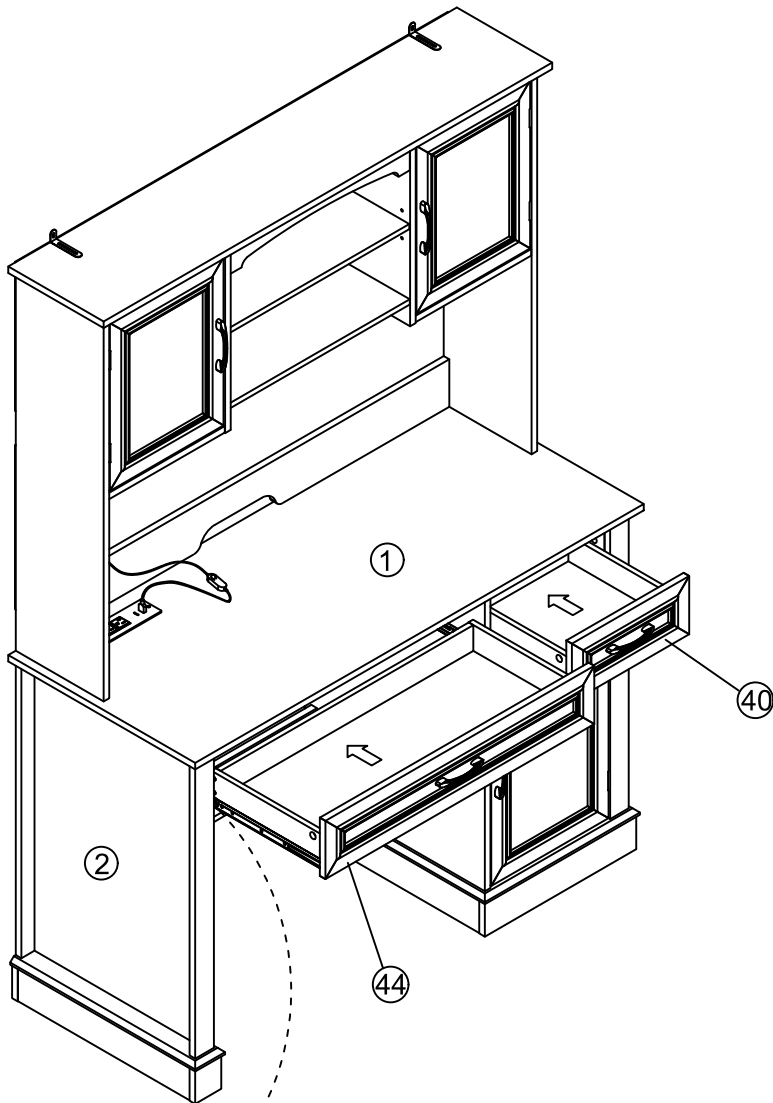
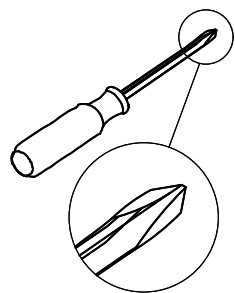


Cabinet Slide

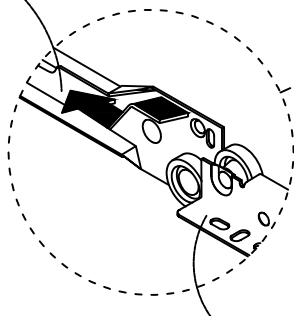

Drawer Slide

STEP43

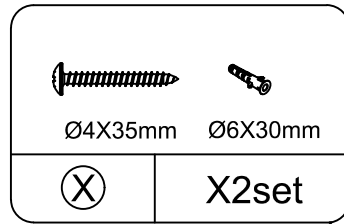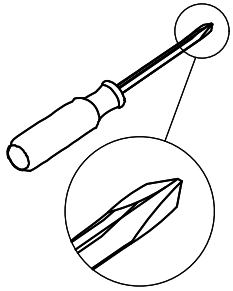


NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.




Install the tipping restraint hardware

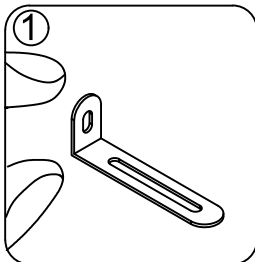


1. make mark on the wall

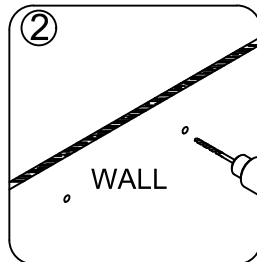


2. drill two Ø6 holes on the wall

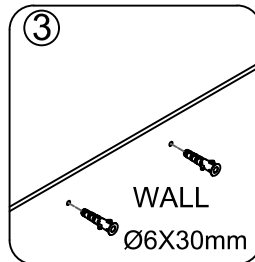

3. put one anchors in the holes

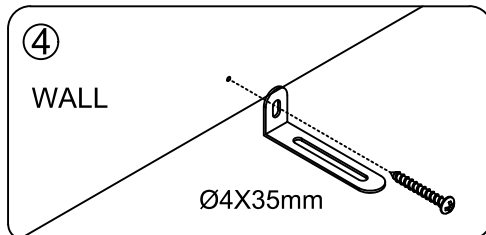

5. Push the cabinet close to the wall and then put on nylon tie to tighten it.

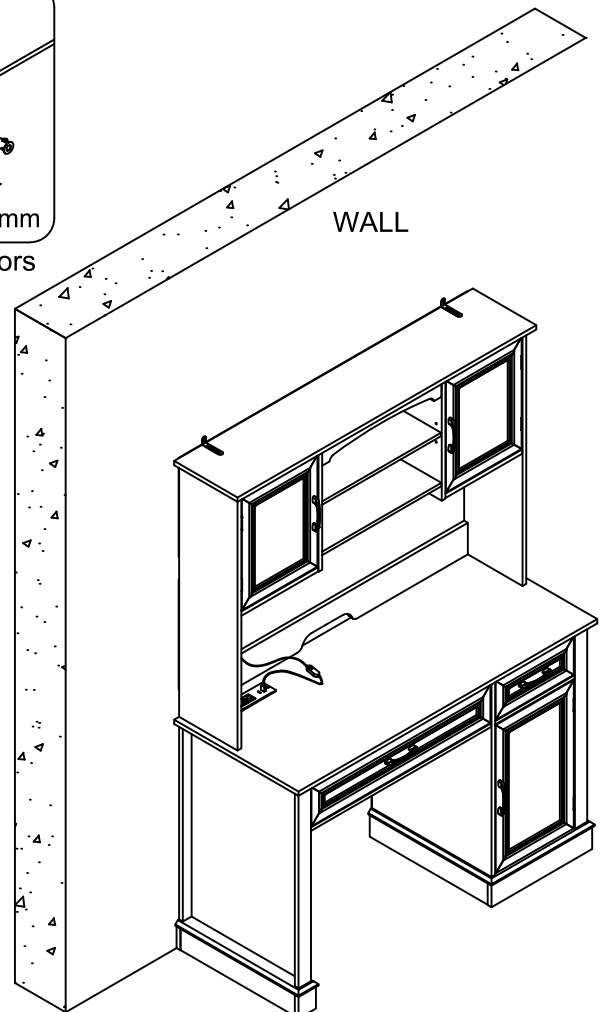

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

WARNING



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!