


Ottoman


STEP 1

Rotate legs to down position

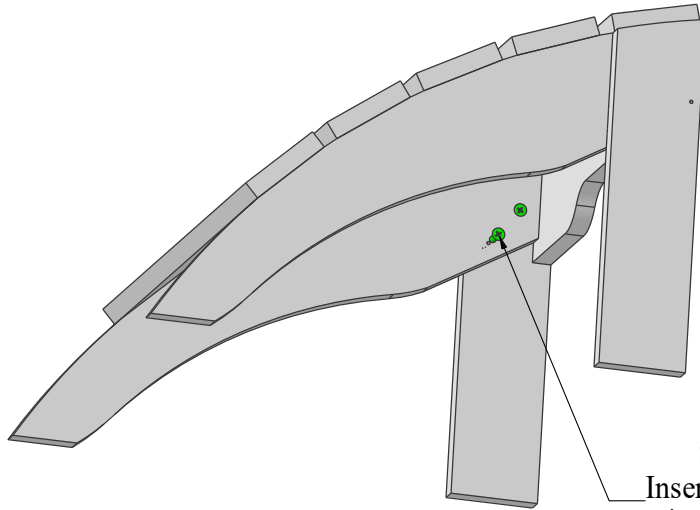

STEP 2

Insert (1) 1-1/4" screw to the inside of both front legs

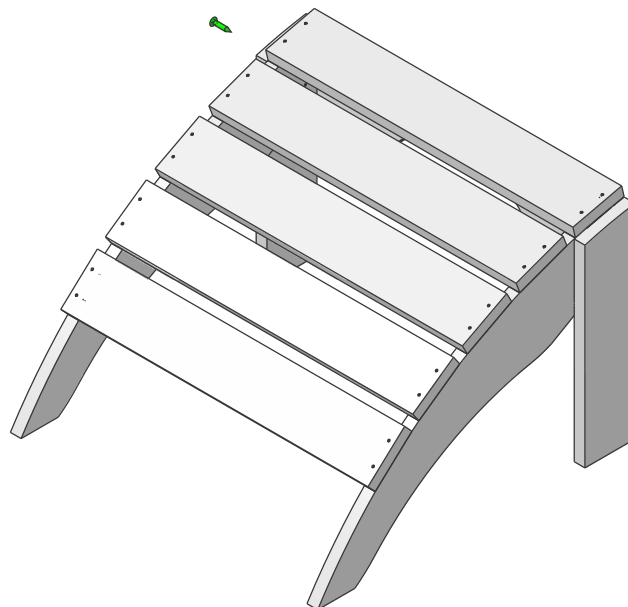

STEP 3

Insert (1) 1-1/4" screw to the outside of both front legs

Tools needed:
Phillips screwdriver
(4) - 1-1/4" Phillips wood screws (included)