

















Linen Bathroom Hamper

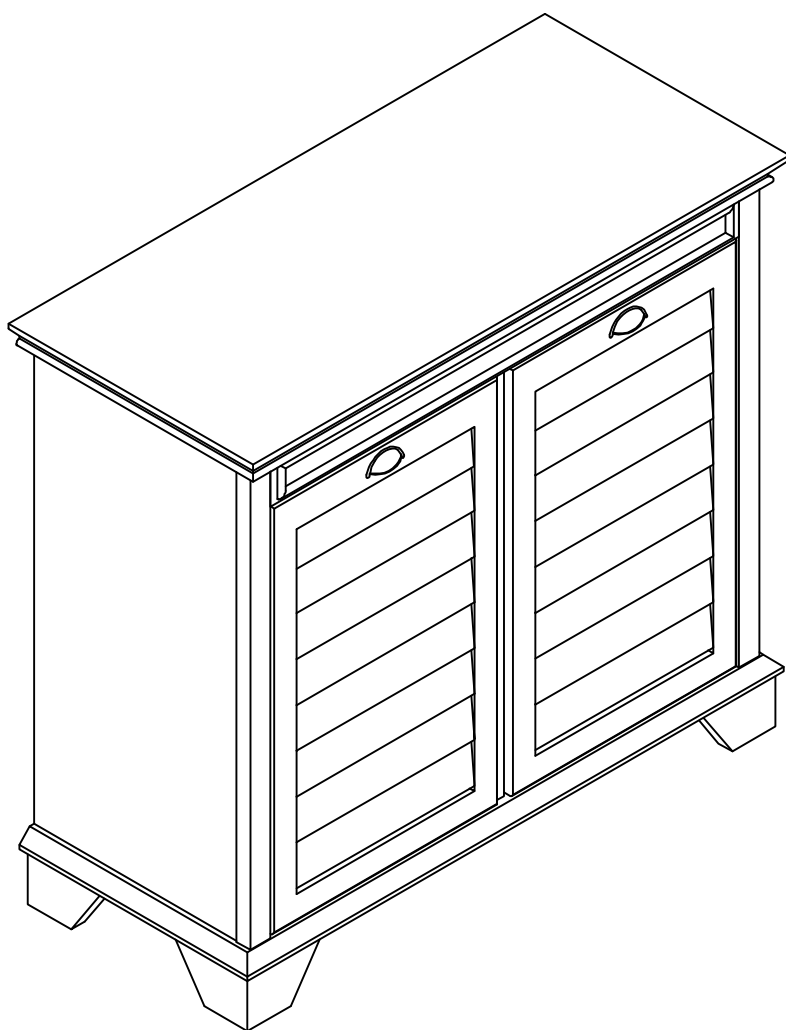







We strived to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.


PART LIST

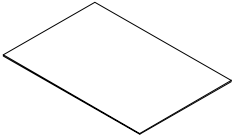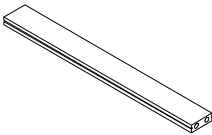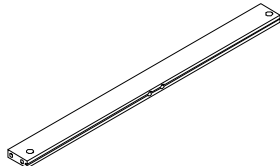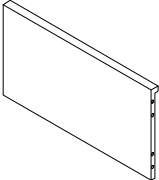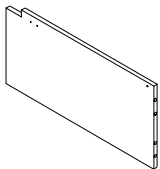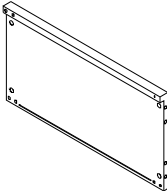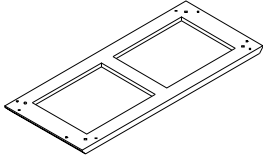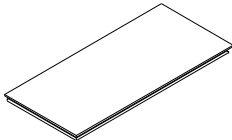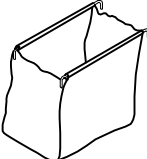 Back Panel	 Back Center Rail	 Back Rail
1 2pcs	2 1pc	3 2pcs
 Left Side Panel	 Center Panel	 Front Rail
4 1pc	5 1pc	6 1pc
 Right Side Panel	 Bottom Panel	 Leg
7 1pc	8 1pc	9 4pcs
 Top Panel	 Box Front Panel	 Right Side Panel of Left Box
10 1pc	11 2pcs	12 1pc
 Left Side Panel of Left Box	 Right Side Panel of Right Box	 Left Side Panel of Right Box
13 1pc	14 1pc	15 1pc
 Box Back Panel	 Bag	
16 2pcs	17 2pcs	

HARDWARE LIST

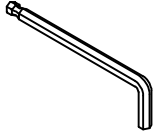
 Cam Lock Ø15*12mm A 12pcs	 Cam Bolt Ø6*42mm B 12pcs	 Short Wood Dowel Ø8*30mm C 30pcs
 Long Bolt Ø6*50mm D 6pcs	 Barrel Nut Ø6*12mm E 6pcs	 Short Bolt Ø6*28mm F 4pcs
 Handle L85*W30*H27 G 2pcs	 Round head bolt Ø5/32"*12mm H 4pcs	 Long Screw Ø3.5*25mm I 16pcs
 Long Wood Dowel Ø8*40mm J 2pcs	 Allen Key 4mm K 1pc	 Safety strap kit L 1Set

EXTRA HARDWARE LIST

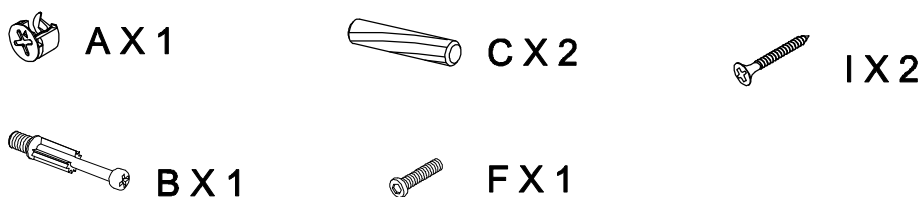



ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly. You may use power tools to assist in mounting the safety strap kit to the wall.






Phillips Head Screw Driver


Step 1. Attach Cam Bolt (B) to Side Panels (4 & 7) and Top Panel (10) as shown.

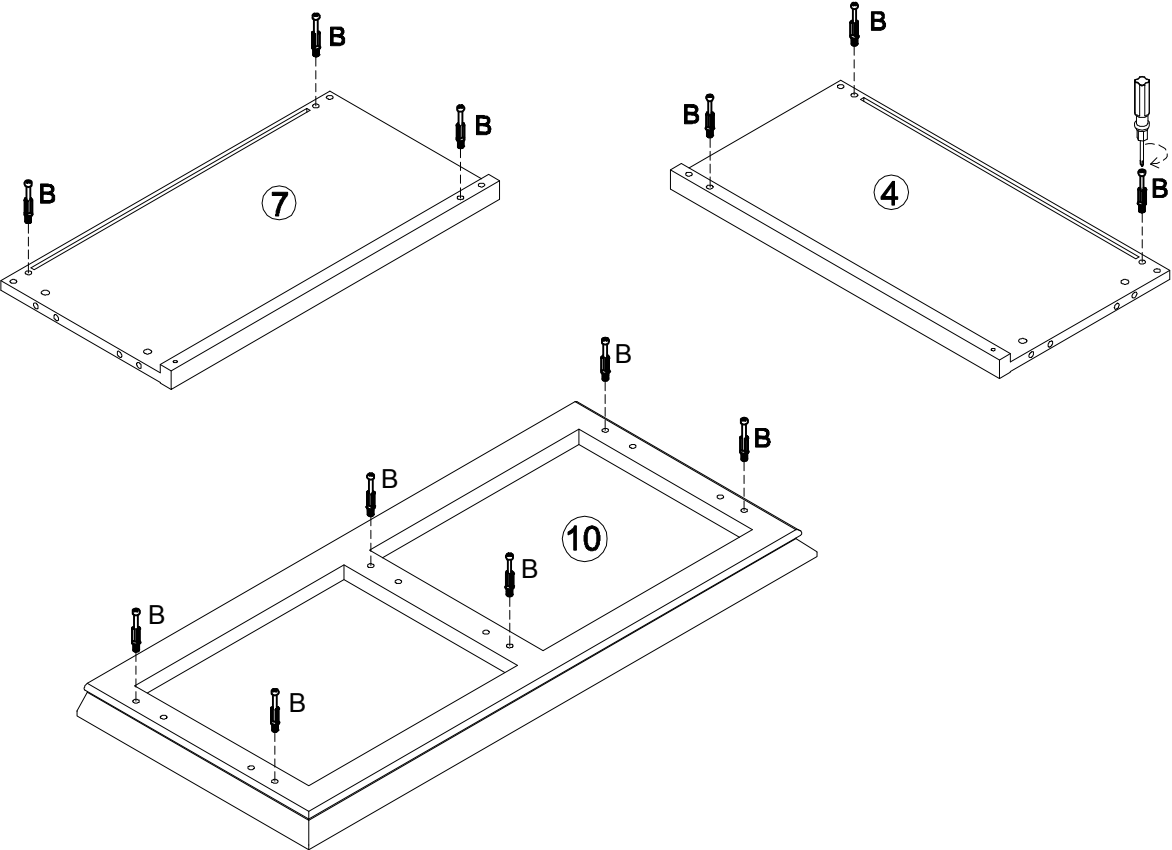

Step 2. Attach Back Rail (3) to Right Side Panels (7) using Wood Dowel (C) and Cam lock (A) .
See image inserts to the right for proper cam lock installation .

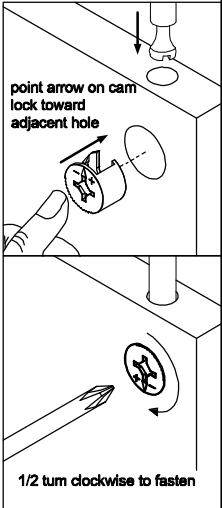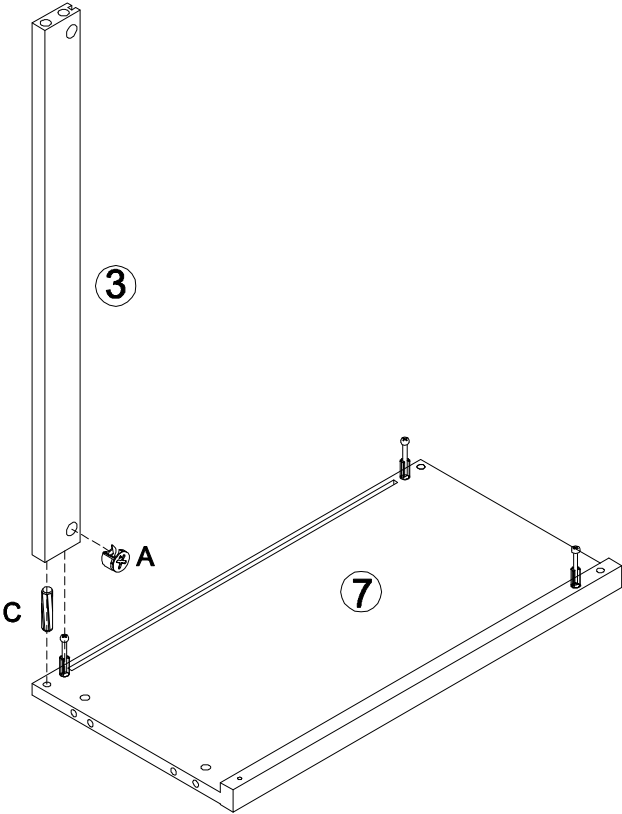


Step 3. Attach Back Center Rail (2) to Back Rail (3) using Wood Dowel (C) and attach Back Panel (1) to place .
 Attach Back Rail (3) to place using Wood Dowel (C) and Cam lock (A) .

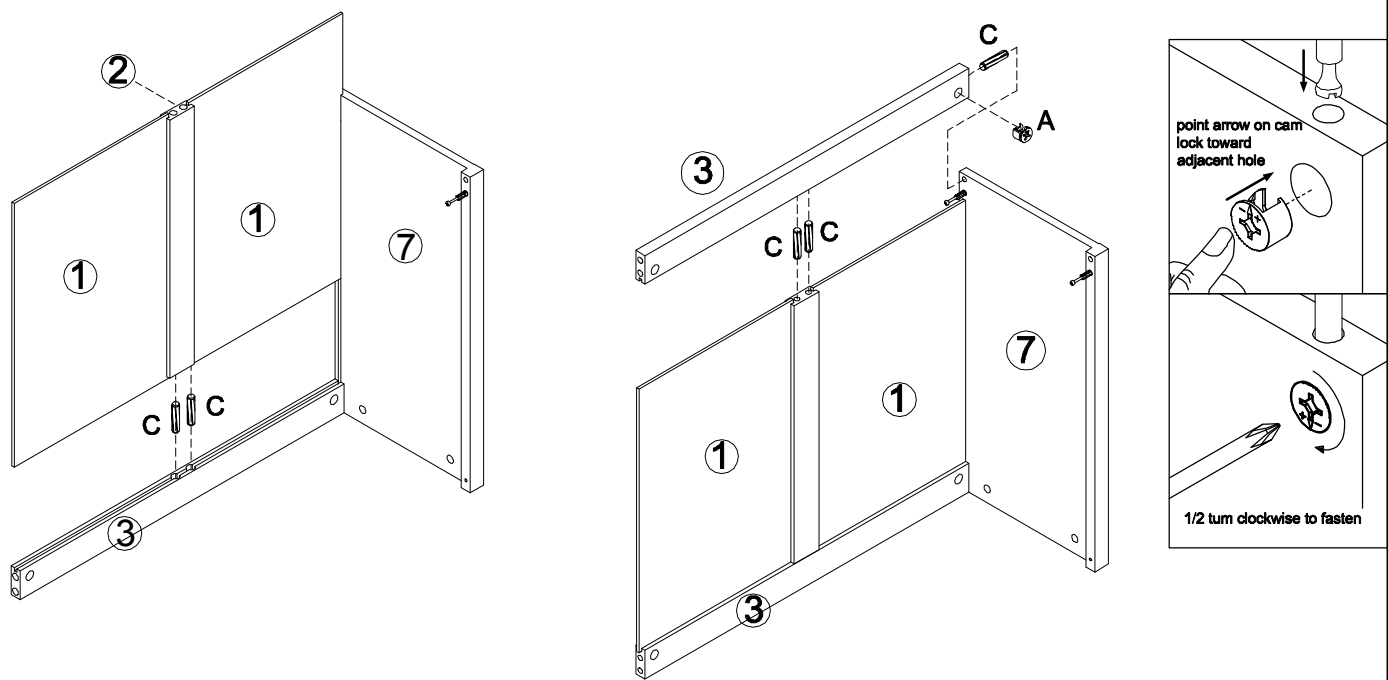



	
A x 1	C x 5

Step 4. Attach Front Rail (6) to place using Wood Dowel (C) and Cam lock (A) .
 Attach Left Side Panel (4) to place using Wood Dowel (C) and Cam lock (A) .

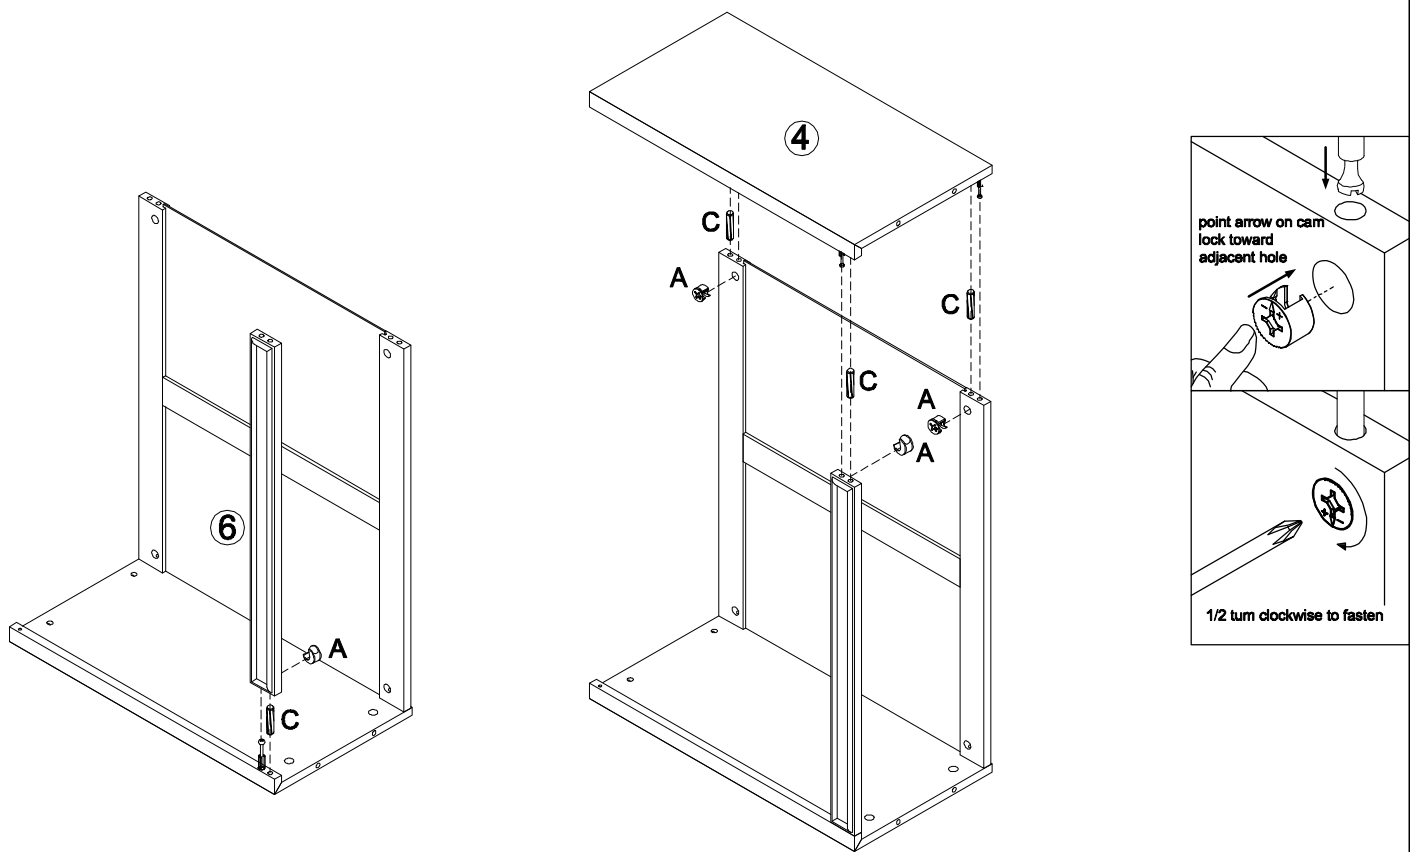



	
A x 4	C x 4

Step 5. Attach Center Panel (5) to Bottom Panel (8) using Wood Dowel (C) ,Long Bolt (D) and Barrel Nut (E) and Allen Key (K) .

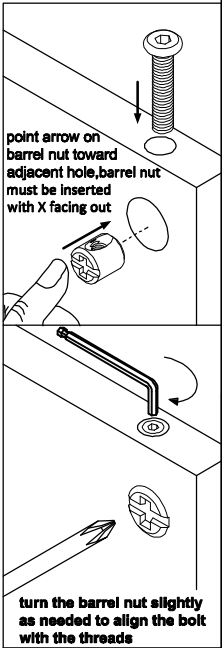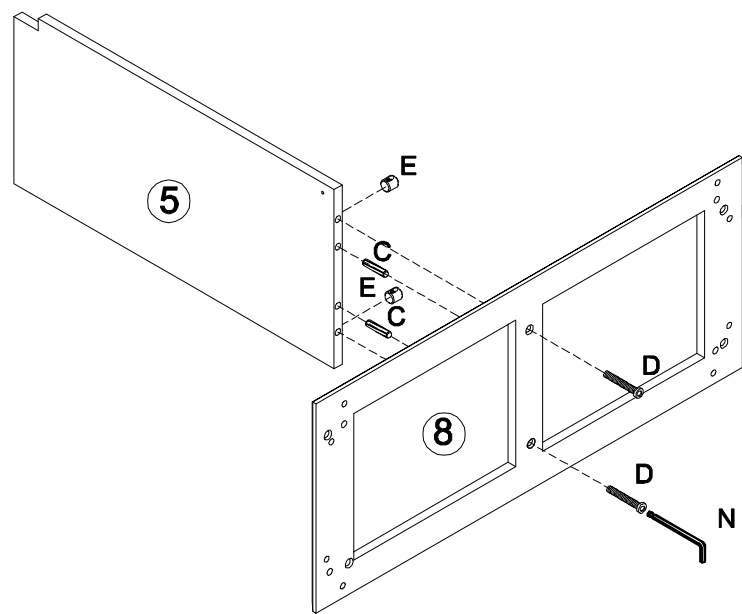


K x 1	E x 2	D x 2	C x 2

Step 6. Attach Center Panel (5) and Bottom Panel (8) to place using Wood Dowel (C) ,Long Bolt (D) and Barrel Nut (E) and Allen Key (K) .

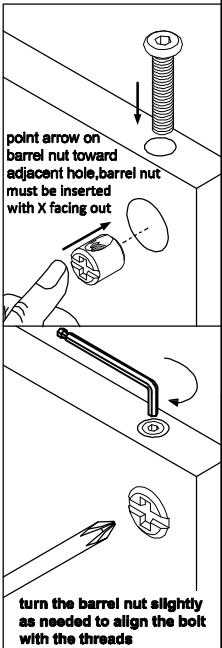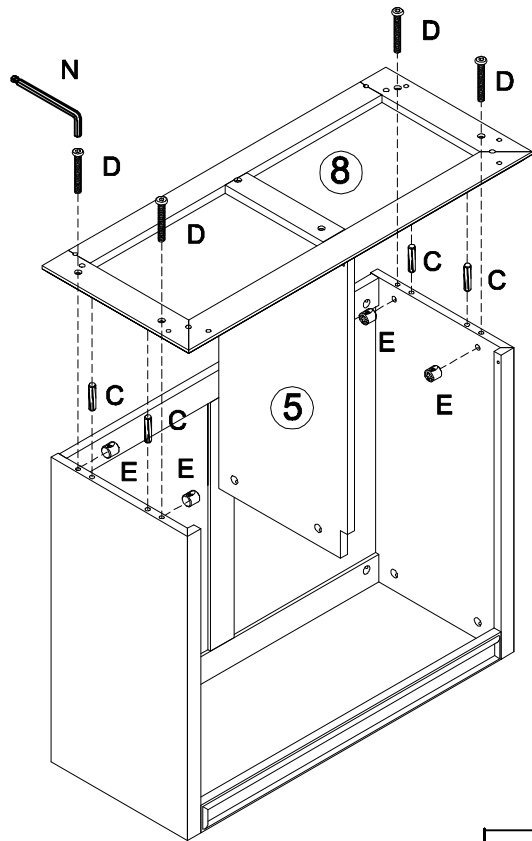



E x 4	D x 4	C x 4

Step 7. Attach Legs (9) into place using Wood Dowel (C) ,Short Bolt (F) and Allen Key (K) .

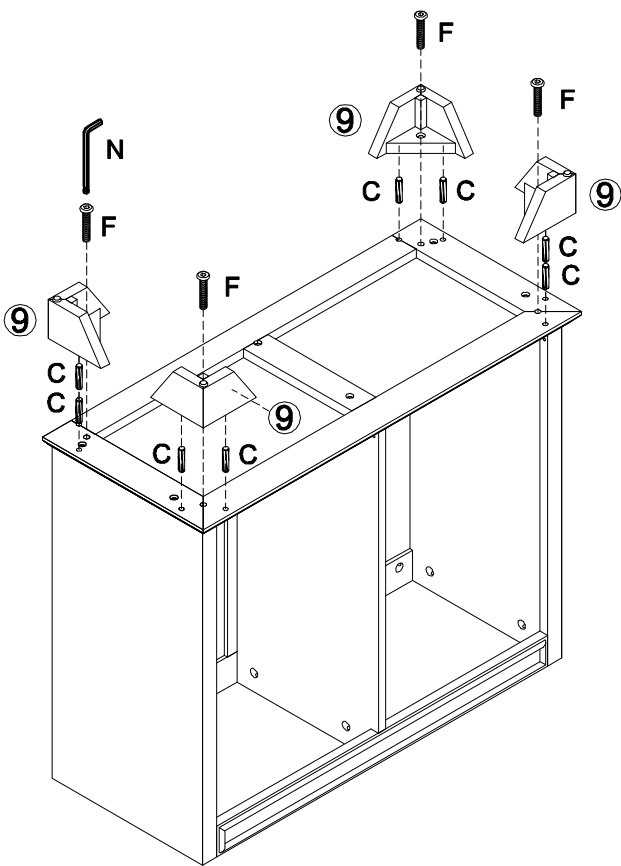


	
F x 4	C x 8

Step 8. Attach Top Panel (10) into place using Wood Dowel (C) and Cam lock (A) .

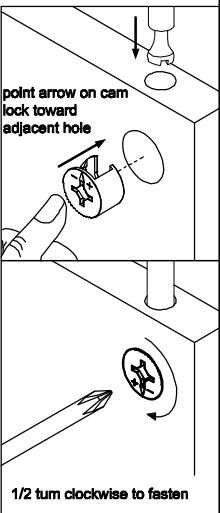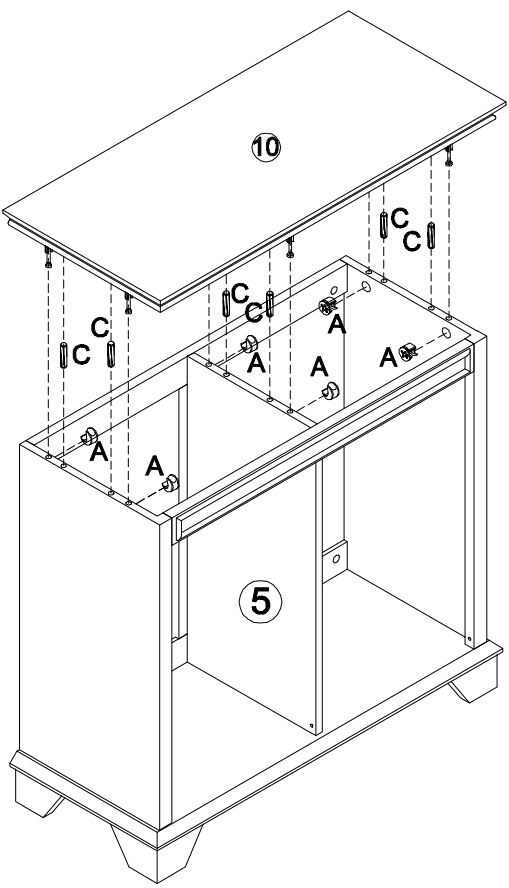


	
A x 6	C x 6

Step 9. Set Box Front Panel (11), Right Side Panel of Left Box (12) and Box Back Panel (16) into place using Long Screw (I) . Attach Left Side Panel of Left Box(13) into place using Long Screw (I) . Attach Handle (G) to Box Front Panel (11) using Round Head Bolt (H) . Place Bag (17) into box and secure by inserting rods into predrilled holes.

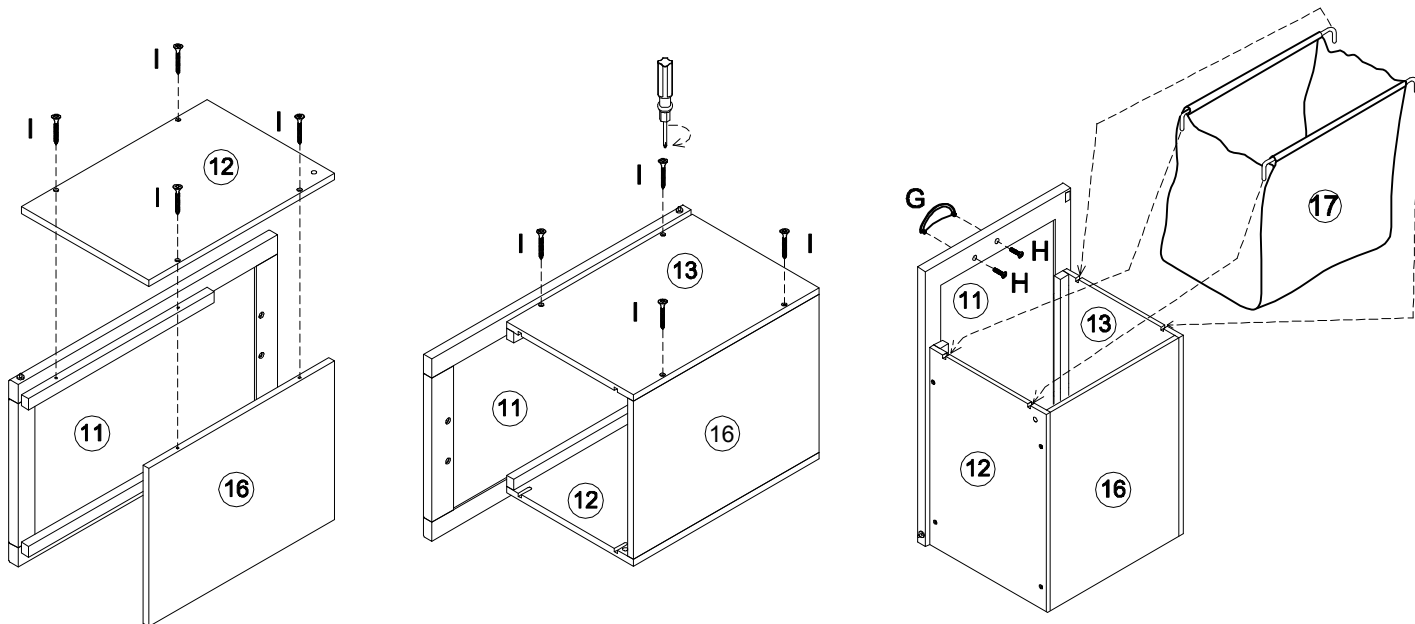


 G x 1	 H x 2	 I x 8
--	--	--

Step 10. Set Box Front Panel (11),Right Side Panel of Right Box (14) and Box Back Panel (16) into place using Long Screw (I) .Attach Left Side Panel of Right Box (15) into place using Long Screw (I). Attach Handle (G) to Box Front Panel (11) using Round Head Bolt (H) . Place Bag (17) into box and secure by inserting rods into predrilled holes.

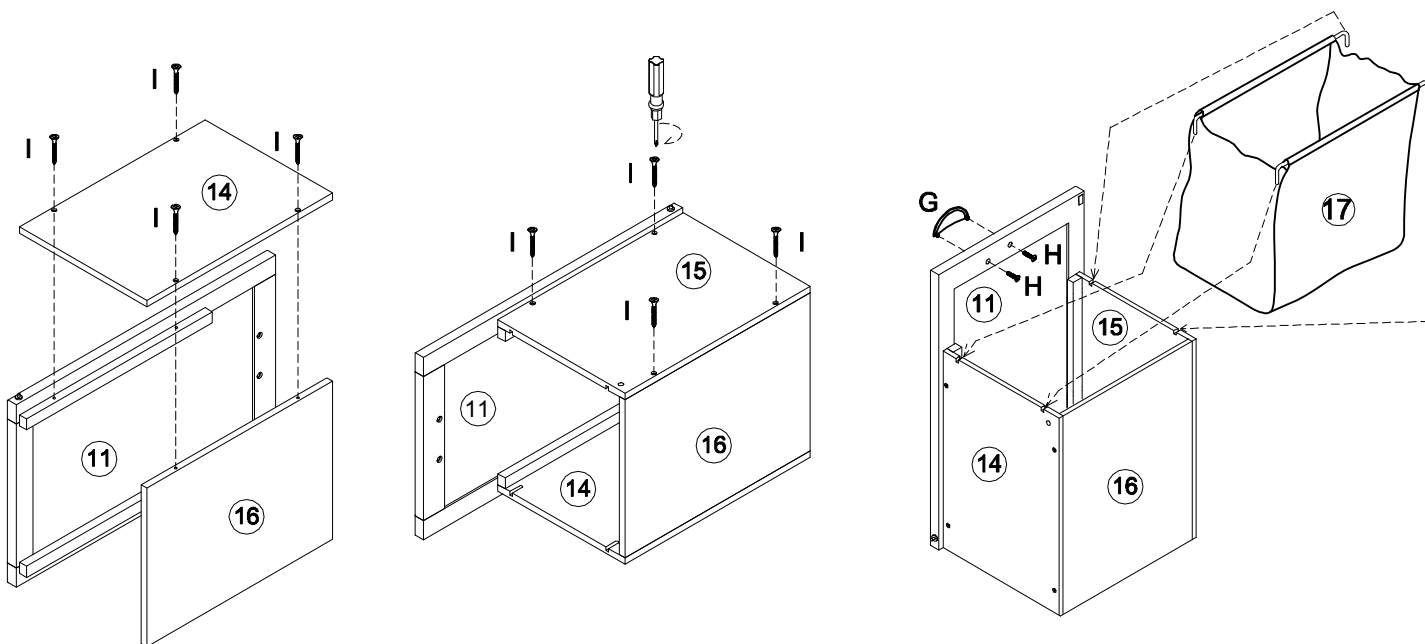


 G x 1	 H x 2	 I x 8
--	--	--

Step 11. Attach box Left Box and Right Box into place as shown .

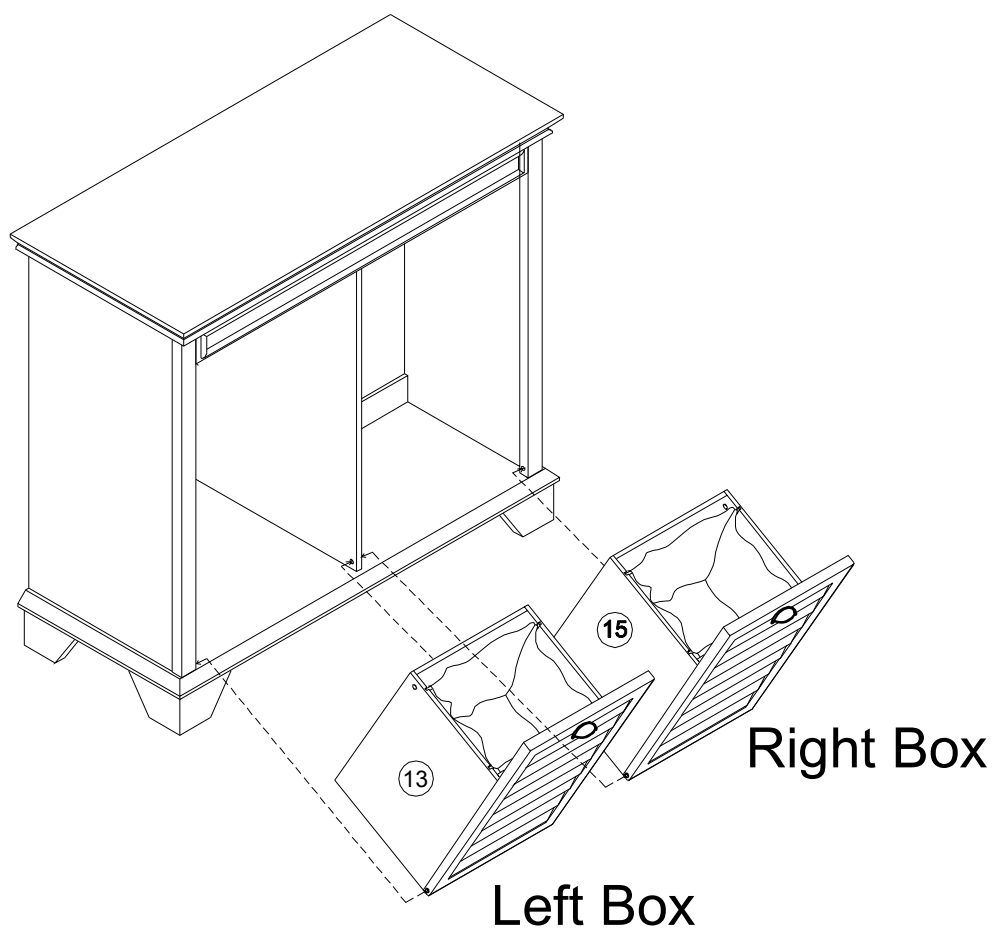


Step 12. Attach Long Wood Dowel (J) through the box hole into the cabinet to help hold the box in place.

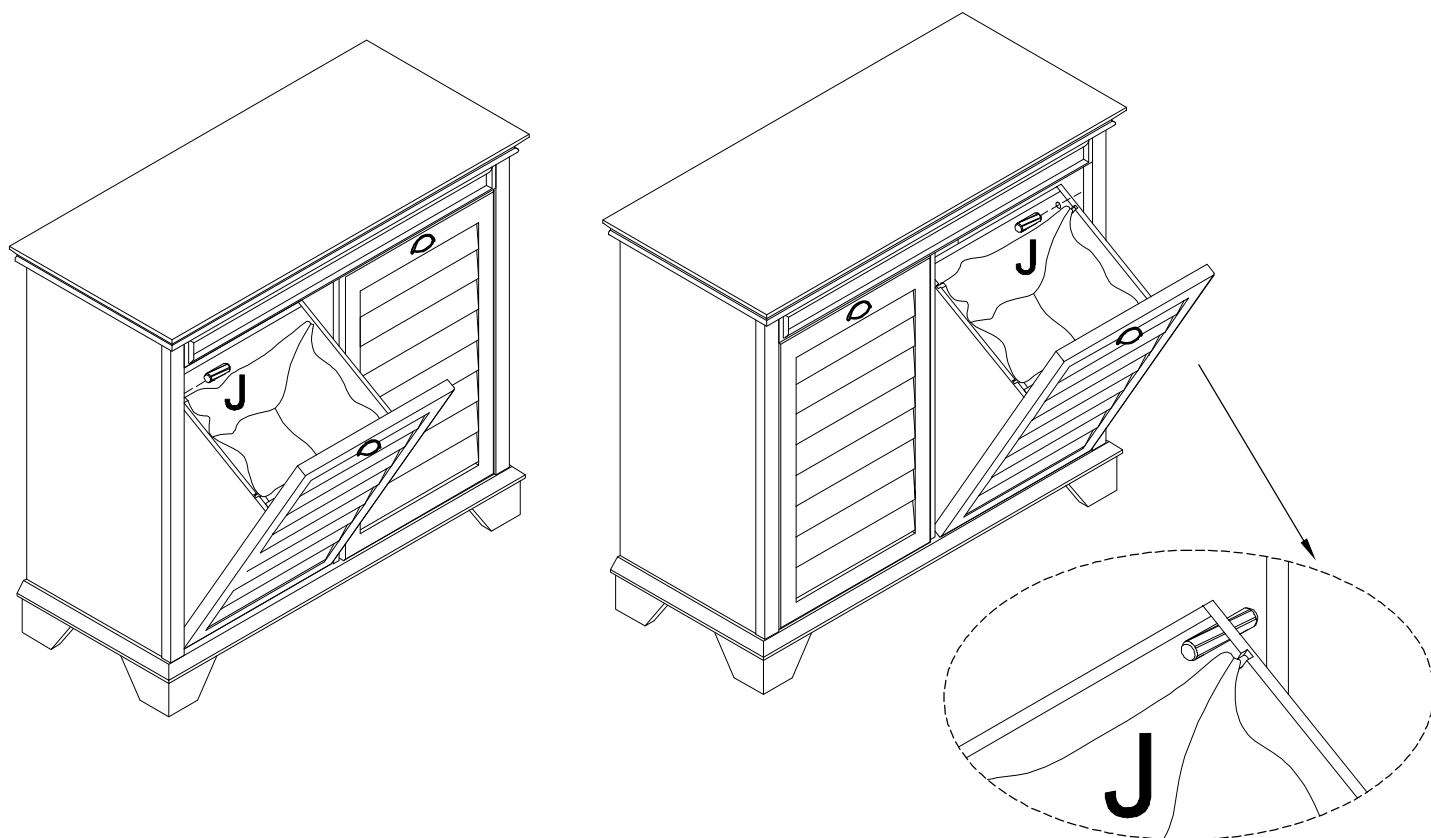

J x 2

Step 13. Insert Short Screw (Part # c) through Washer (Part # b) and Safety Wall Strap (Part # e) and screw it into pre-drilled hole of Top Panel (Part # 10).
 Drill a 1 1/32" hole where you want to secure your pantry .The hole should be at the same height as the hole in the Top Panel (Part # 10). Tap Wall Anchor (Part # a) into the hole .
 Insert Long Screw (Part # d) through a Washer (Part # b) and Wall Safety Strap (Part # e) into Wall Anchor (Part # a).

Wall

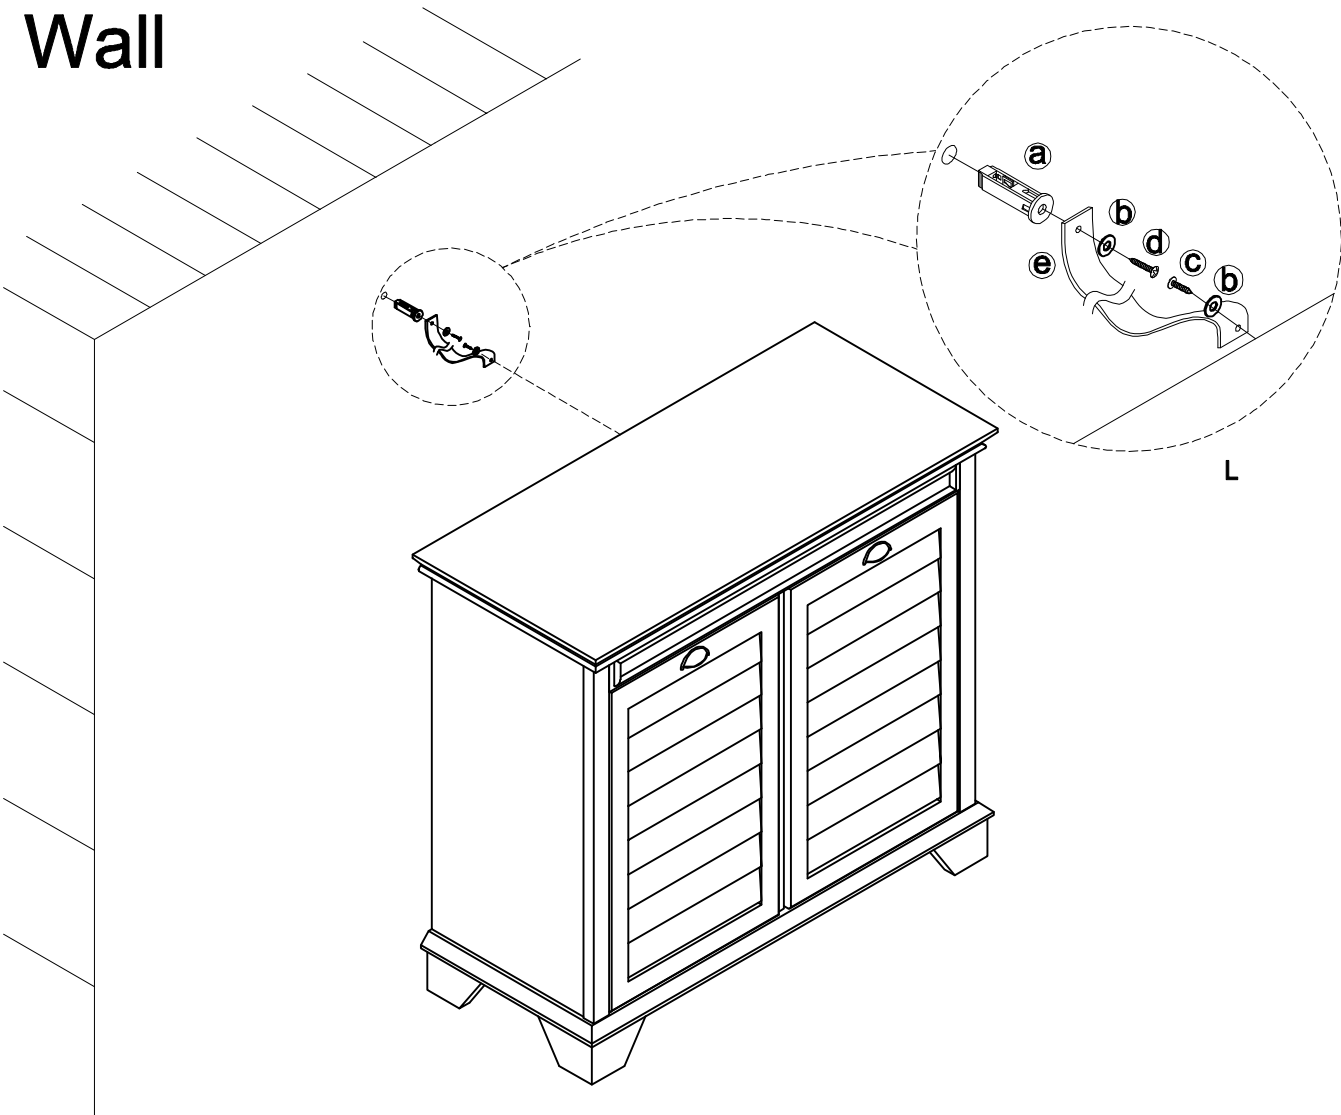

											
Safety strap kit		Wall Anchor		Washer		Short Screw		Long Screw		Safety Wall Strap	
L	1 SET	a	1 PC	b	1 PC	c	1 PC	d	1 PC	e	1 PC