


# **HW-AM557836**


## **CUSTOMER MANUAL**

-V0.1

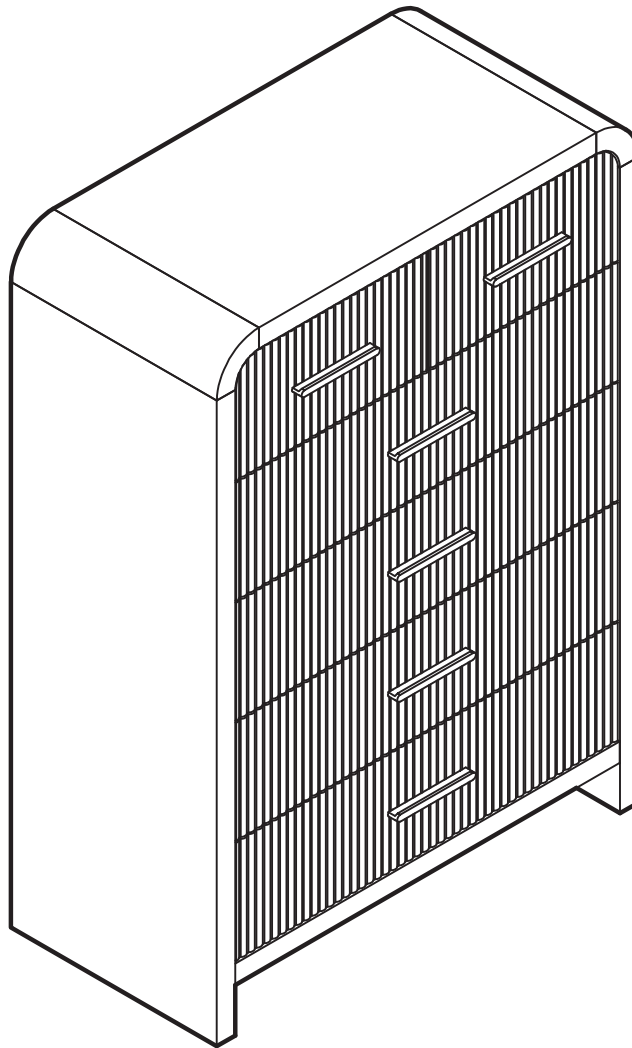

If you have any questions,  
please contact us.

# ASSEMBLY STRUCTURE REFERENCE DIAGRAM

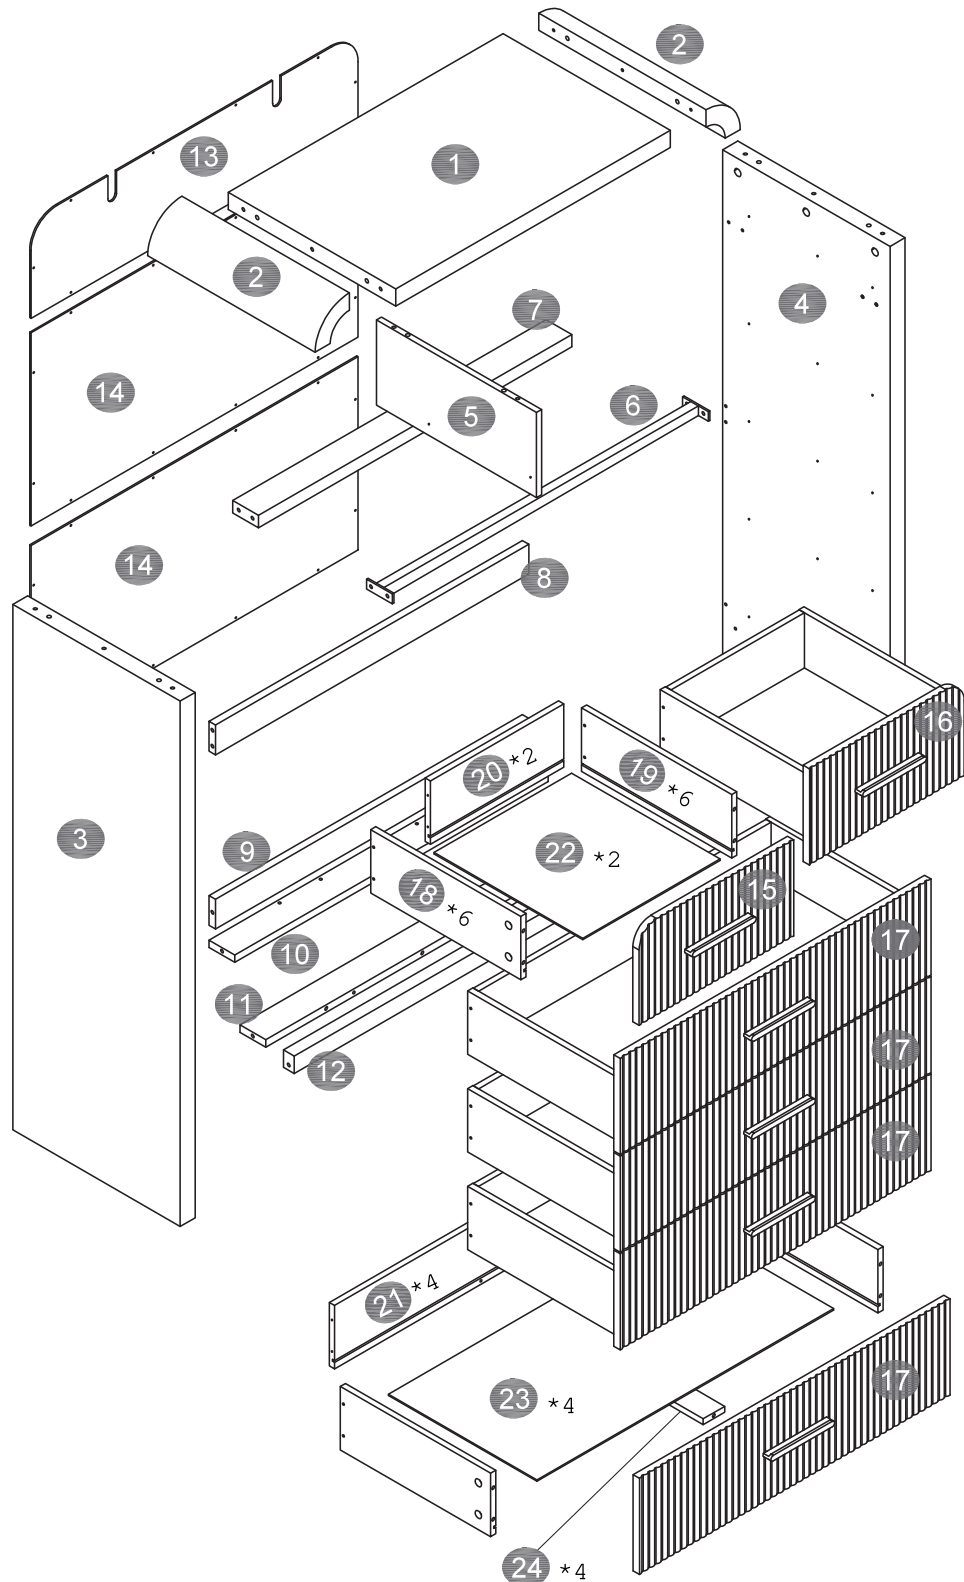


# PARTS

A




φ 6x36mm  
X **61+2**

B

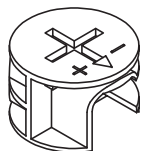

φ 15x10mm  
X **61+2**

C



φ 5x45mm  
X **4+2**

D



φ 6x30mm  
X **6+2**

E




φ 8x30mm  
X **8+2**

F



150x18x11mm  
X **6**

G



M4x19mm  
X **12+2**

H



φ 3x12mm  
X **73+5**

I




φ 3x16mm  
X **34+2**

J



φ 4x35mm  
X **30+2**

K



X **2**

L




M8x37mm  
X **2**


M



M6x10mm  
X **4+1**

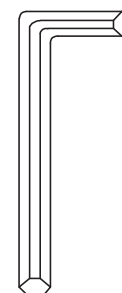


M4  
X **1**

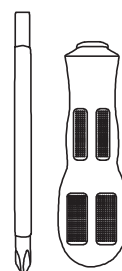


X **1**


# PARTS




**CL X 6**



**CR X 6**







**DL X 6**




**DR X 6**

**Attention: there are 4 kinds of slides in our product, in which 2 are Boards slides which marked as CL & CR and contains 6 pieces respectively, and the other 2 are the Drawer slides, which marked as DL & DR and contains 6 pieces respectively.**

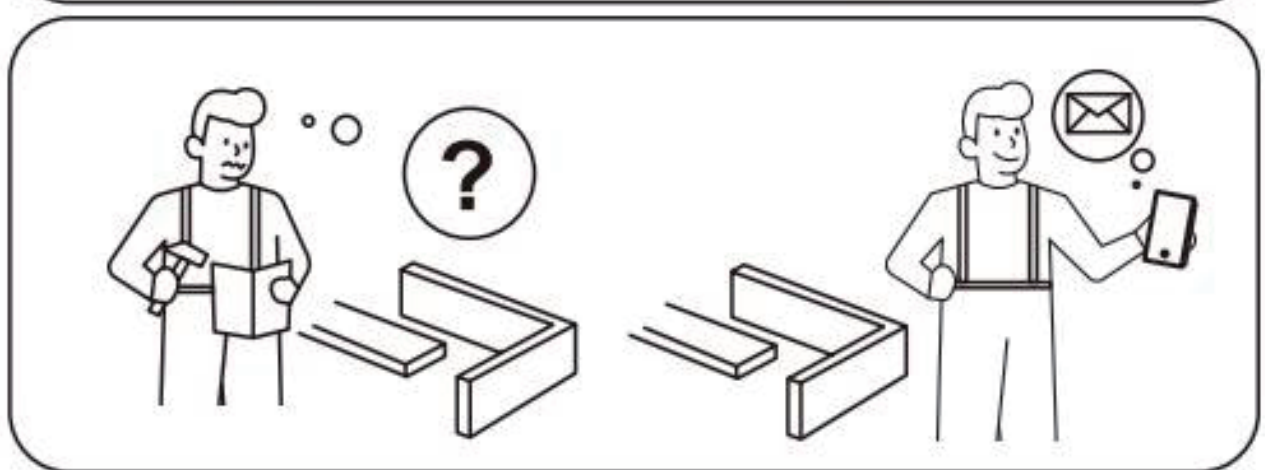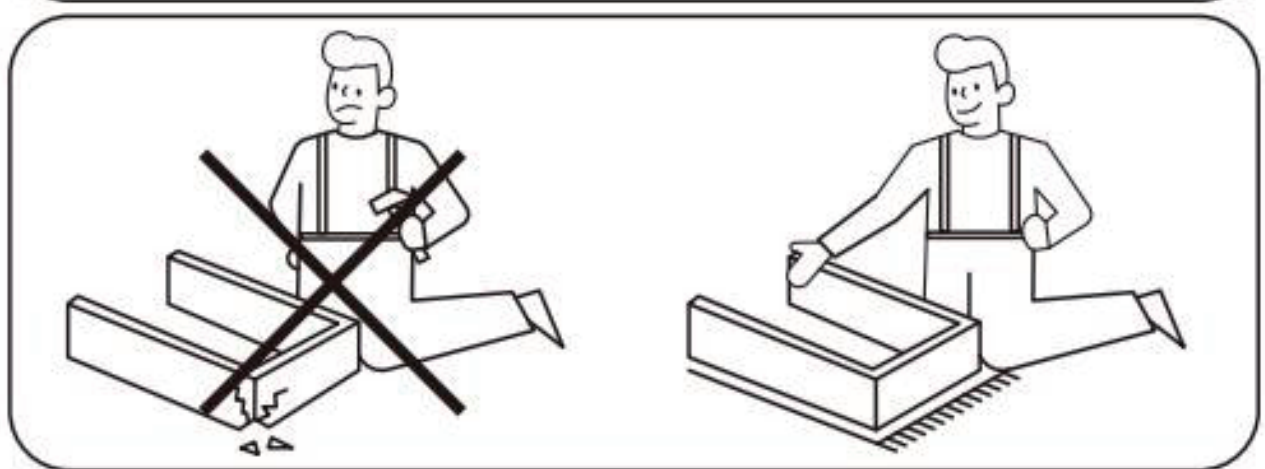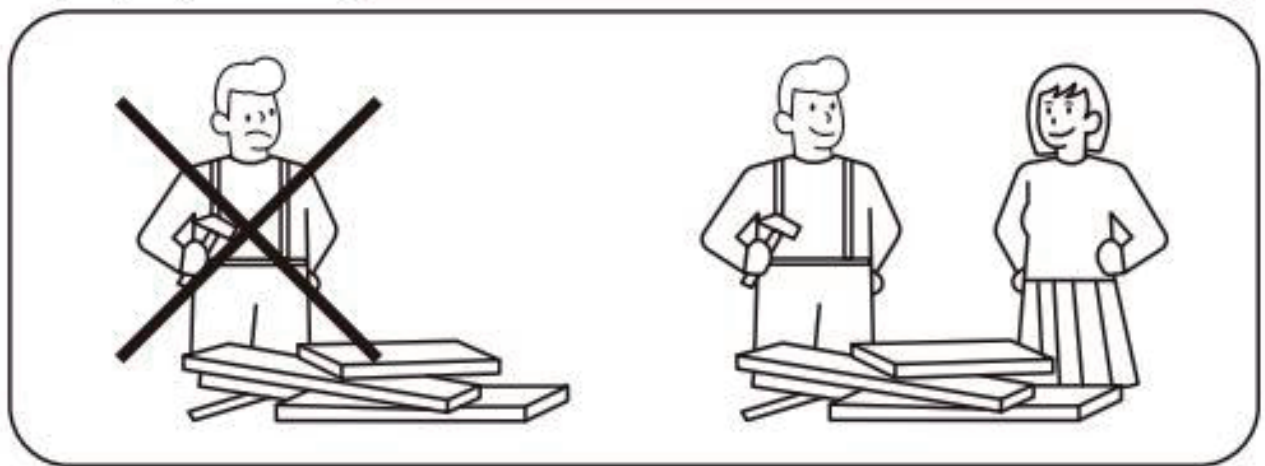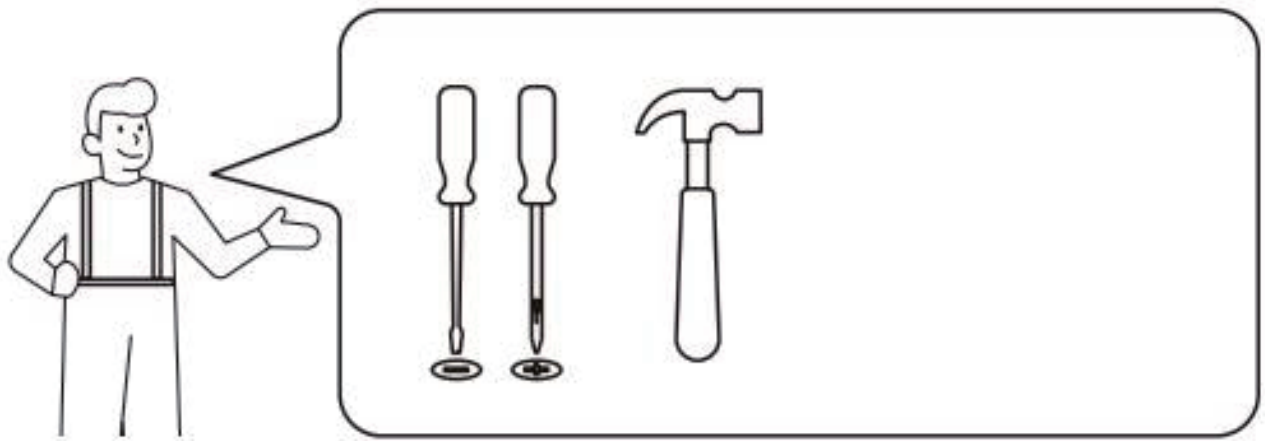


## How to work the Knock Down (kd) assembly system

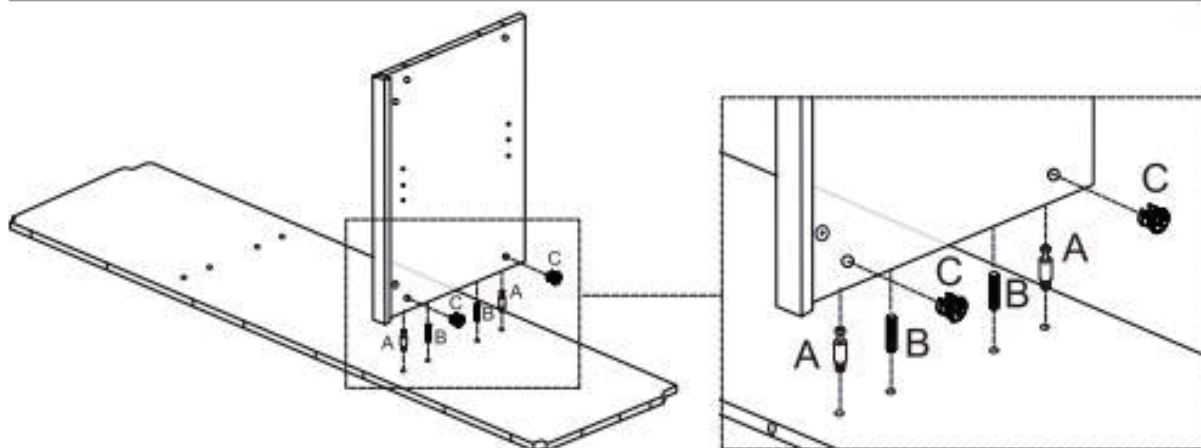


## How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

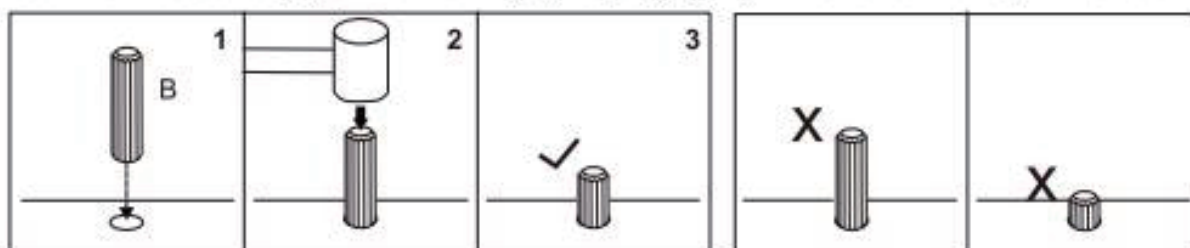









## How to use the Cam Lock system

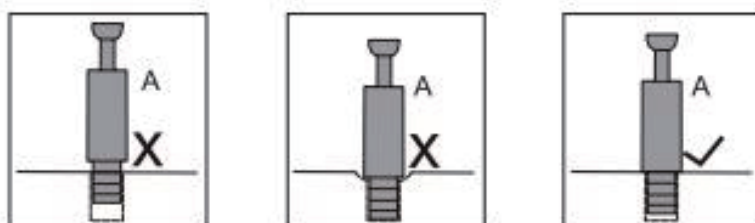









1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-drilled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

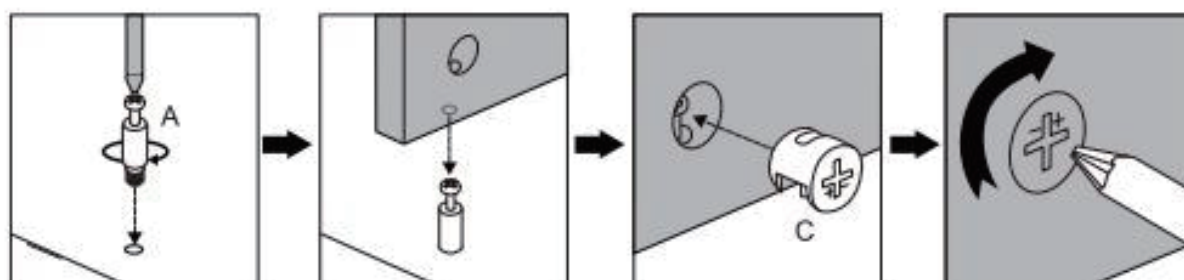

# Parts Ldentification

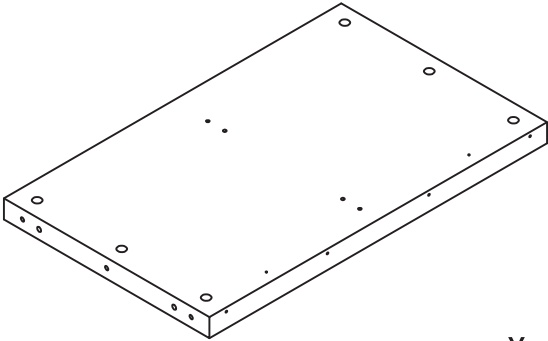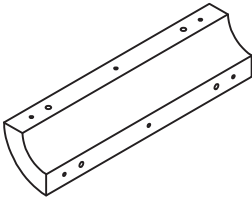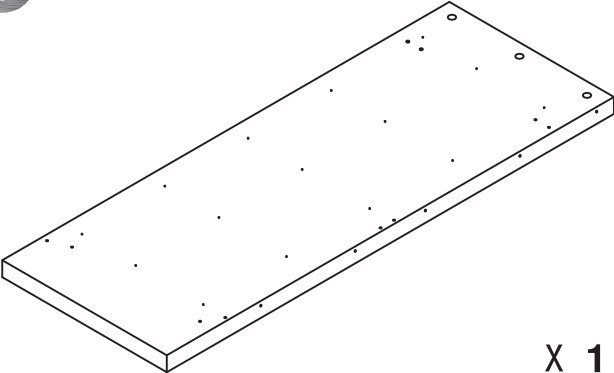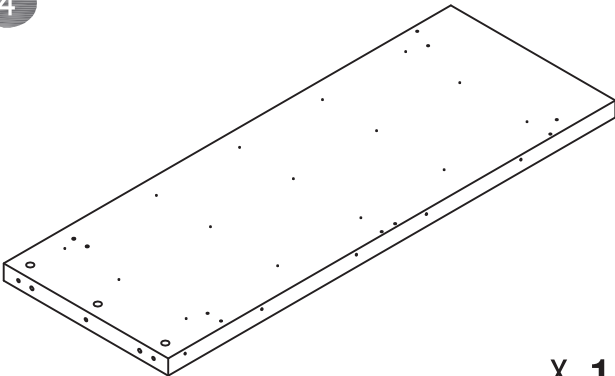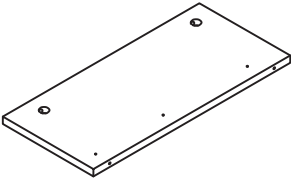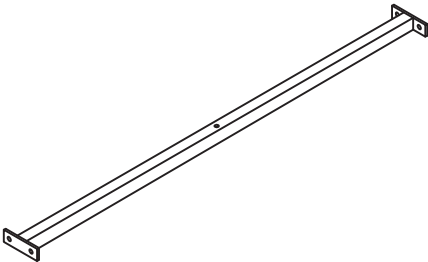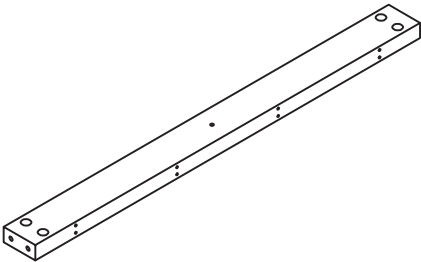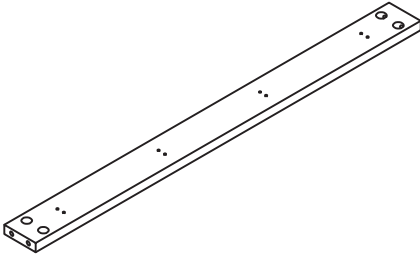
|                                                                                                                            |                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <div>1</div> <div></div> <div>X 1</div>   | <div>2</div> <div></div> <div>X 2</div>  |
| <div>3</div> <div></div> <div>X 1</div>  | <div>4</div> <div></div> <div>X 1</div>  |
| <div>5</div> <div></div> <div>X 1</div> | <div>6</div> <div></div> <div>X 1</div> |
| <div>7</div> <div></div> <div>X 1</div> | <div>8</div> <div></div> <div>X 1</div> |

# Parts Ldentification
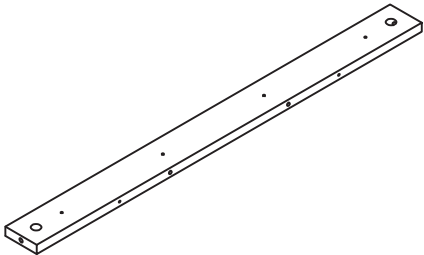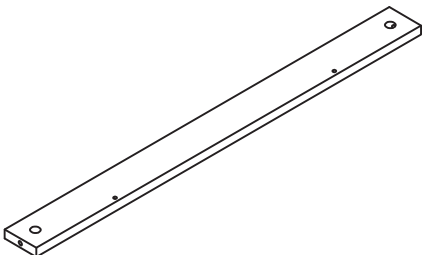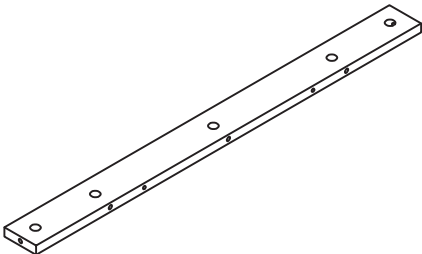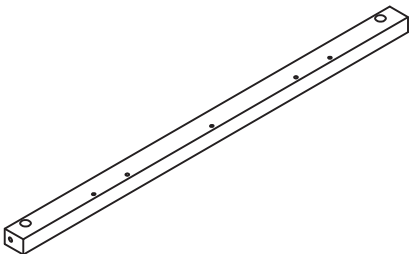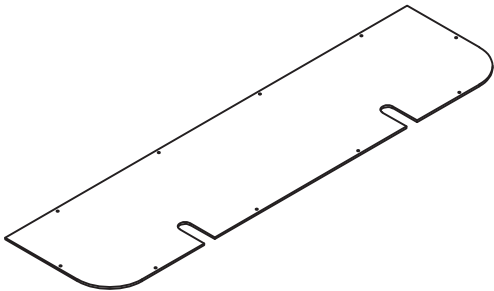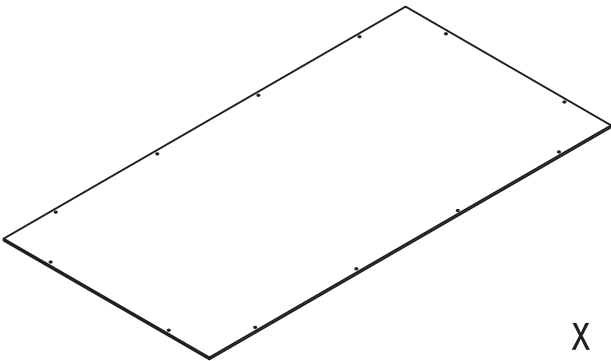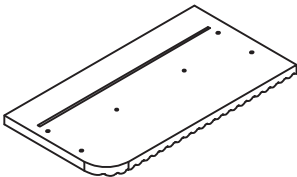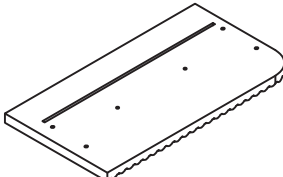
|                                                                                                                             |                                                                                                                              |
|-----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <div>9</div> <div></div> <div>X 1</div>    | <div>10</div> <div></div> <div>X 1</div>   |
| <div>11</div> <div></div> <div>X 1</div>  | <div>12</div> <div></div> <div>X 1</div>  |
| <div>13</div> <div></div> <div>X 1</div> | <div>14</div> <div></div> <div>X 2</div> |
| <div>15</div> <div></div> <div>X 1</div> | <div>16</div> <div></div> <div>X 1</div> |


# Parts Ldentification

17

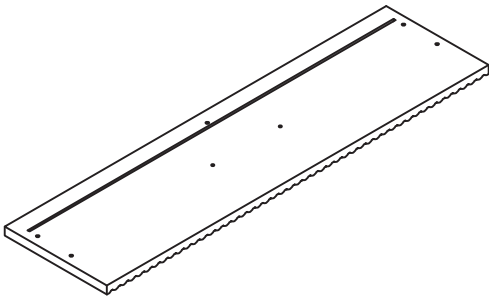


X 4

18

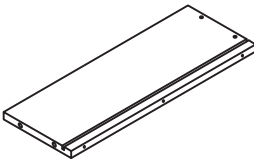


X 6

19

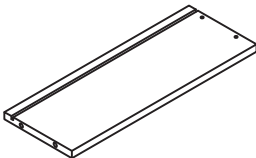


X 6

20

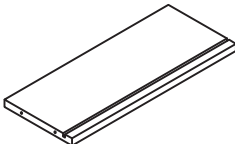


X 2

21

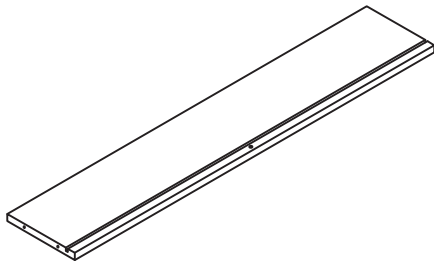


X 4

22

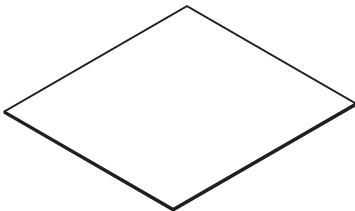


X 2

23

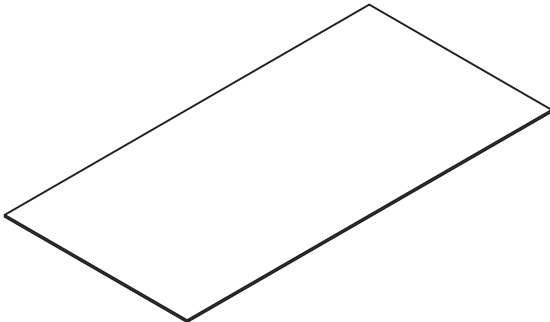

X 4

24

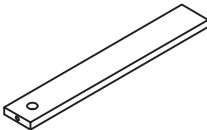


X 4

# Step 1

Using Screws (H ) to assemble Slide (CL) to Board (③).

TIP: The screws for the slide must be tightened very tightly and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

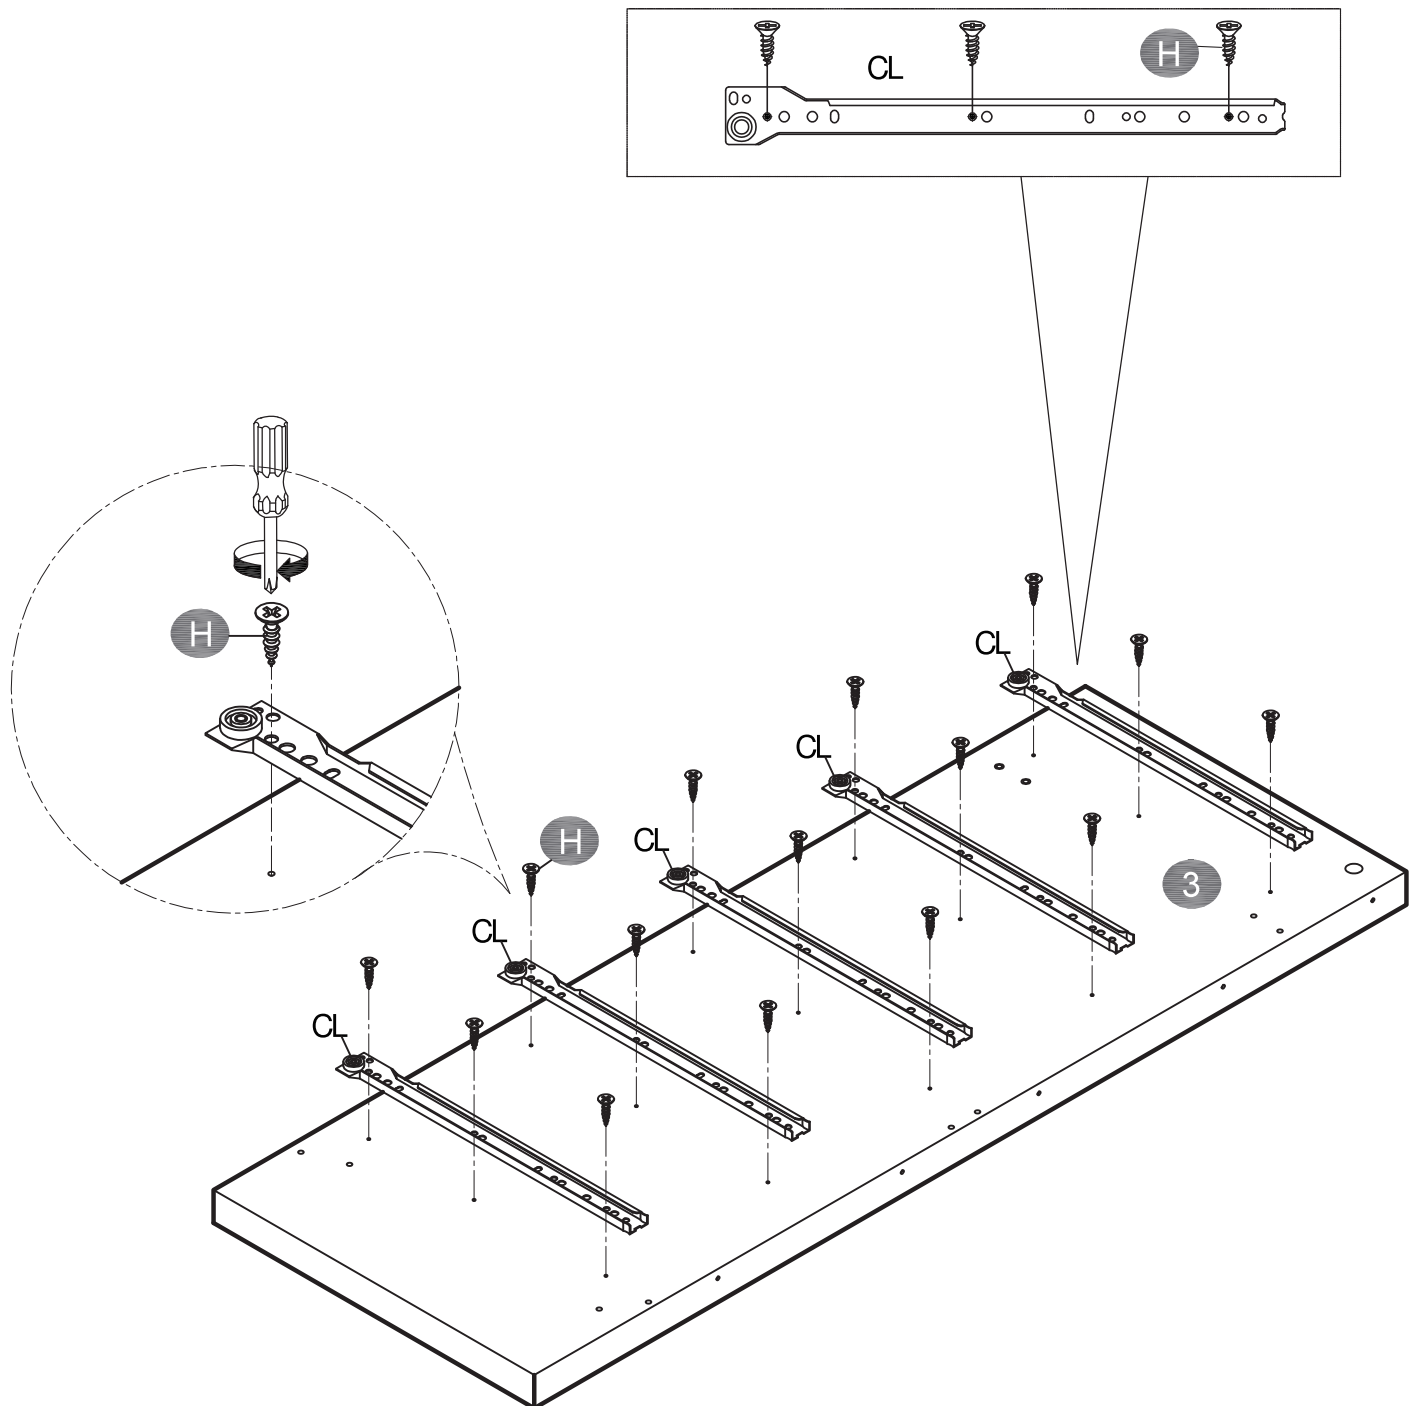


|    |                                                                                       |      |
|----|---------------------------------------------------------------------------------------|------|
| H  |  | X 15 |
| CL |  | X 5  |

## Step 2

Using Screws (H) to assemble Slide (CR) to Board (④).


TIP: The screws for the slide must be tightened very tightly and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

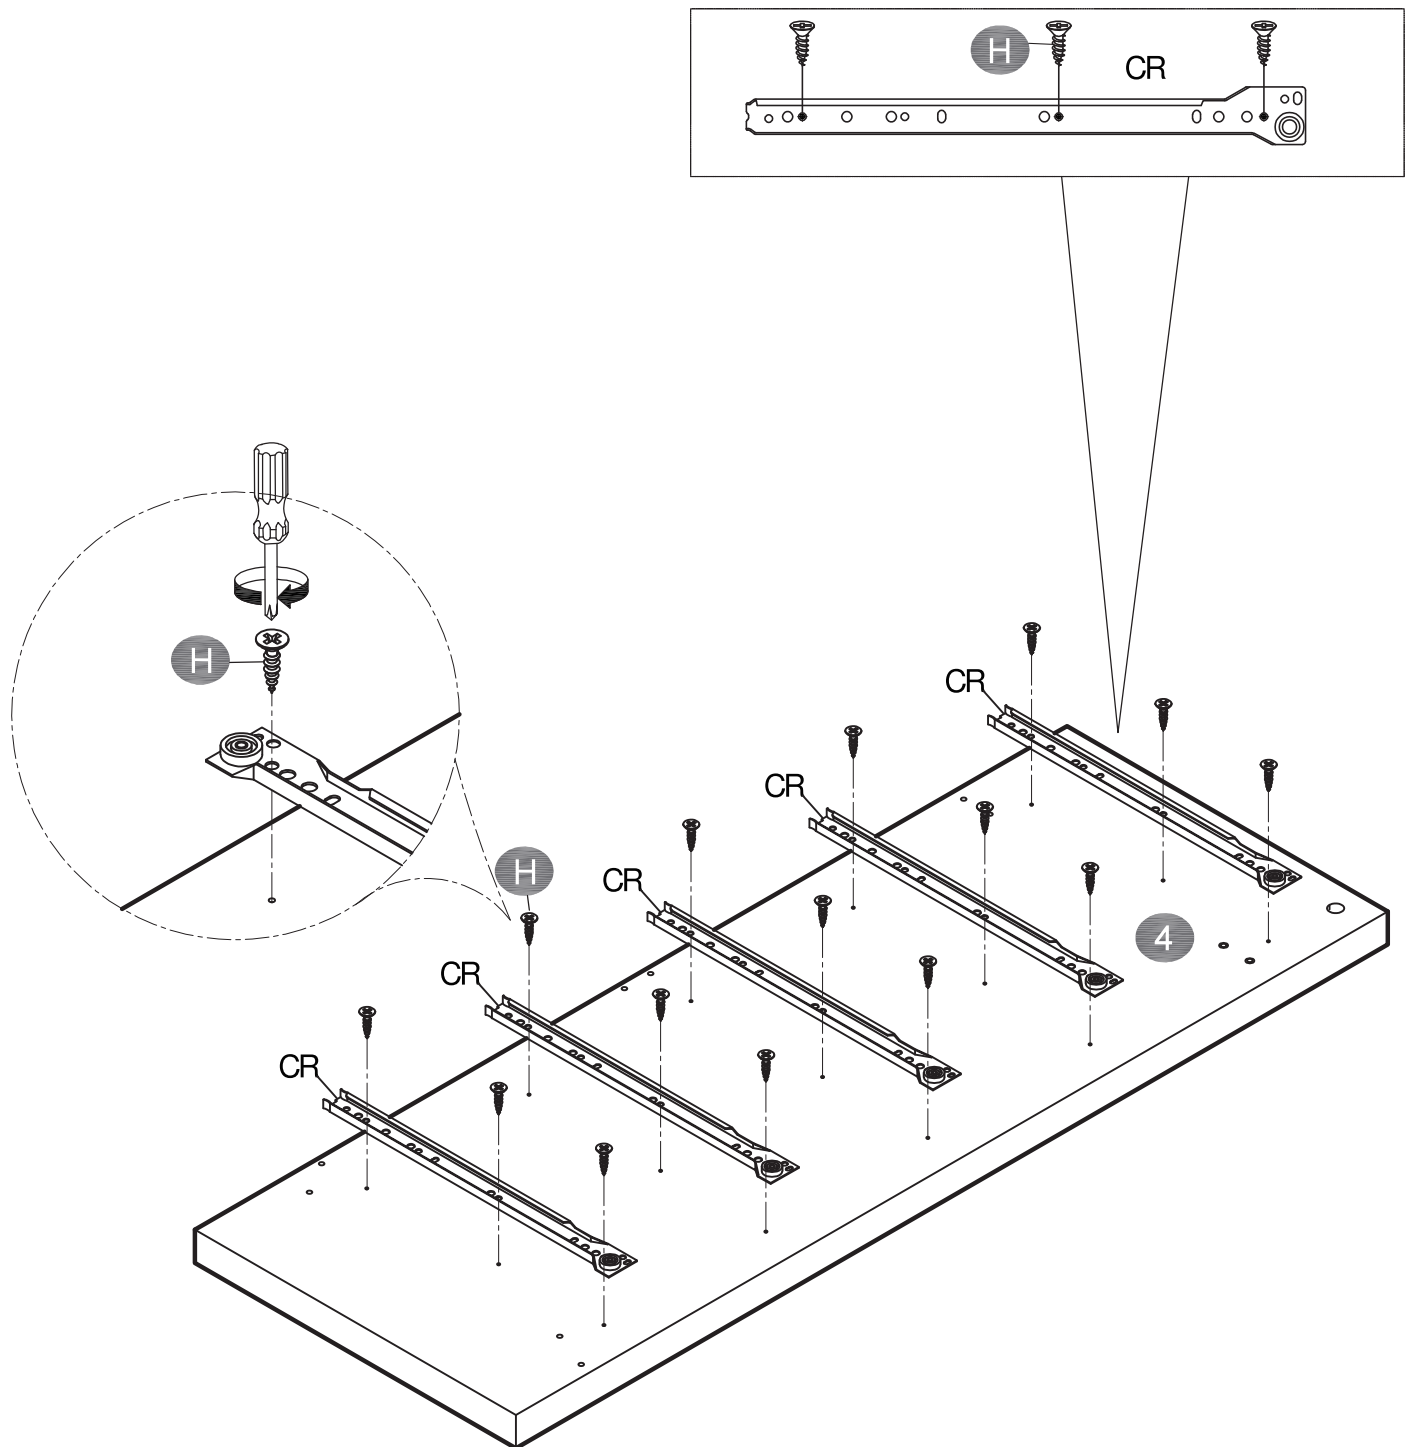

|    |  |      |
|----|--|------|
| H  |  | X 15 |
| CR |  | X 5  |


## Step 3

U Securing Cam Bolt (A) into Board (③).

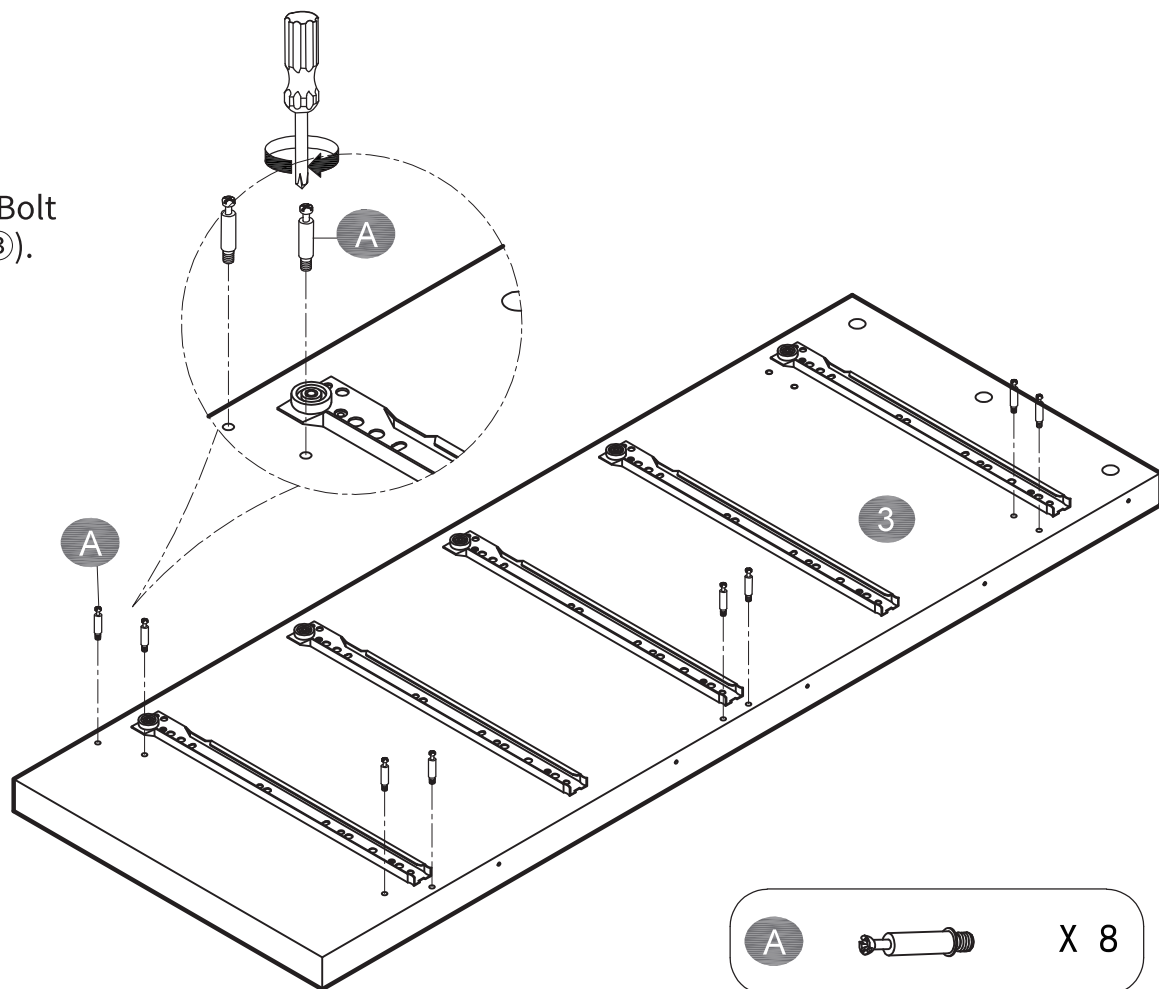

## Step 4

Securing Cam Bolt (A) into Board (④).

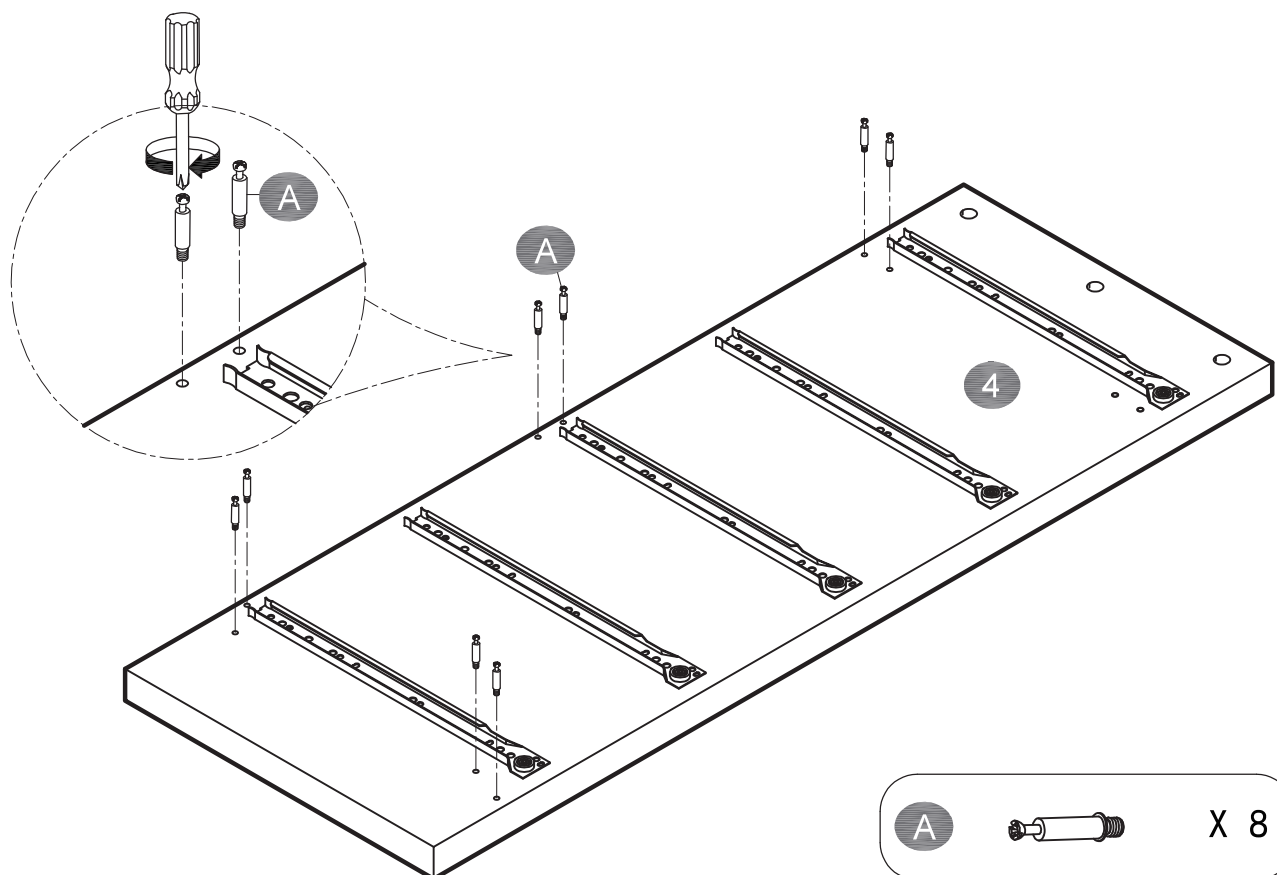


# Step 5

Using Screws (H) to assemble Slide (CL) to Board (⑤).


Then Flip the board 180°, Using Screws (H) to assemble Slide (CR) to Board (⑤).

TIP: The screws for the slide must be tightened very tightly and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

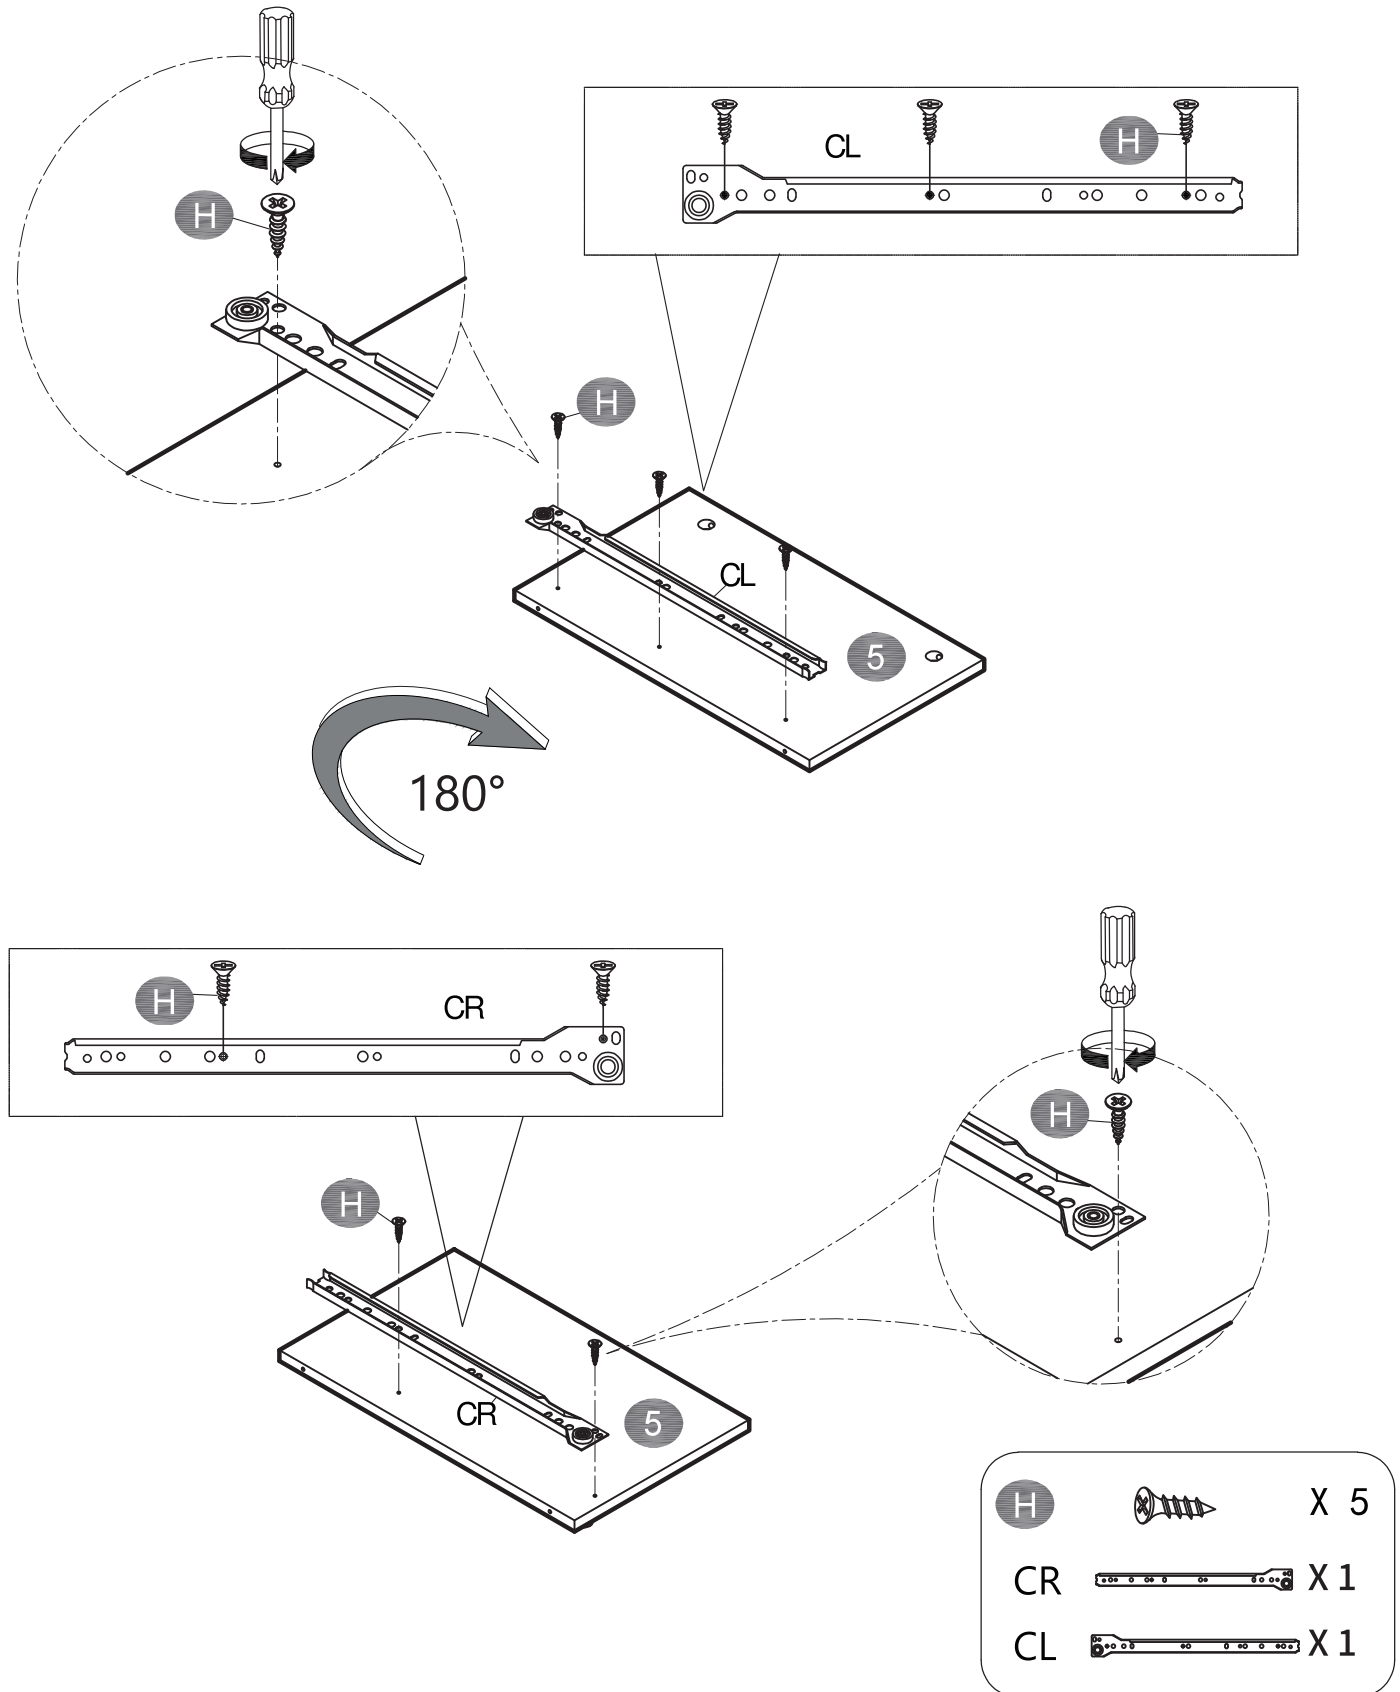



## Step 6

Securing Cam Bolt (A) into Board (12).  
Inserting Wooden Dowel (D) into Board (12).

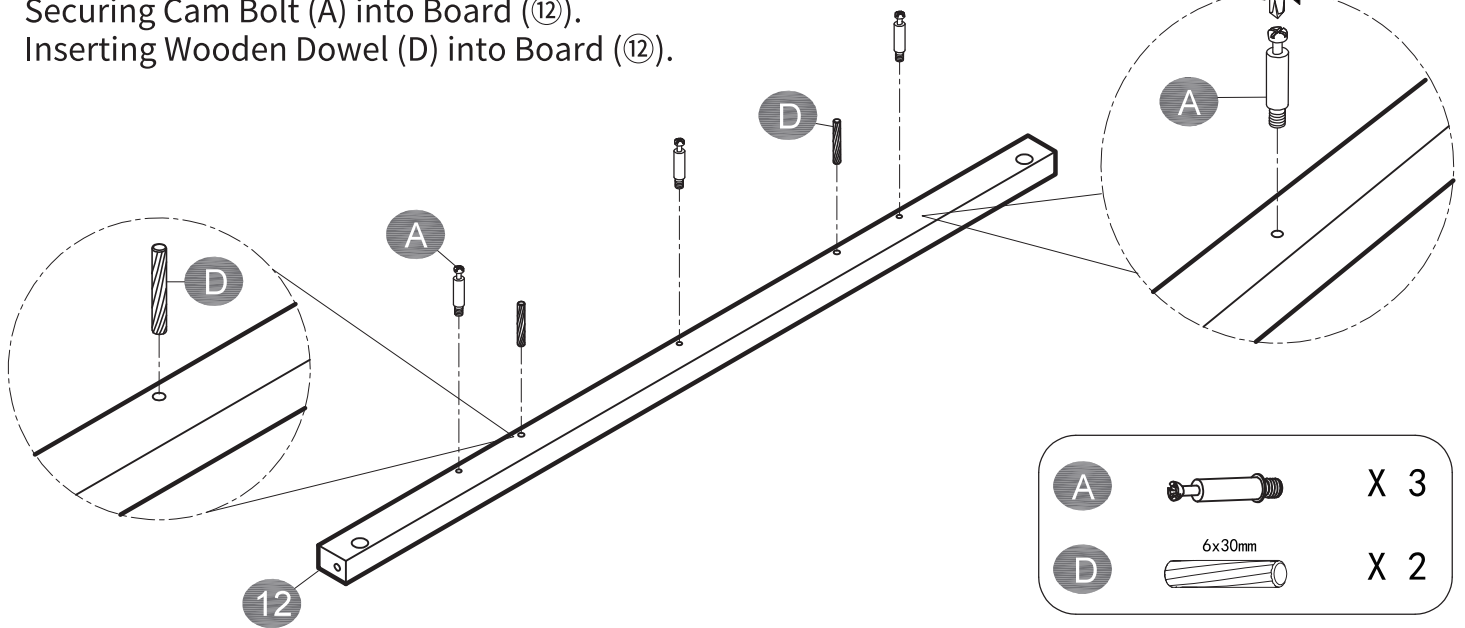

## Step 7

Attach Board (11) to Board (12).  
Using Cam Lock (B) secure Board (11) to Board (12).

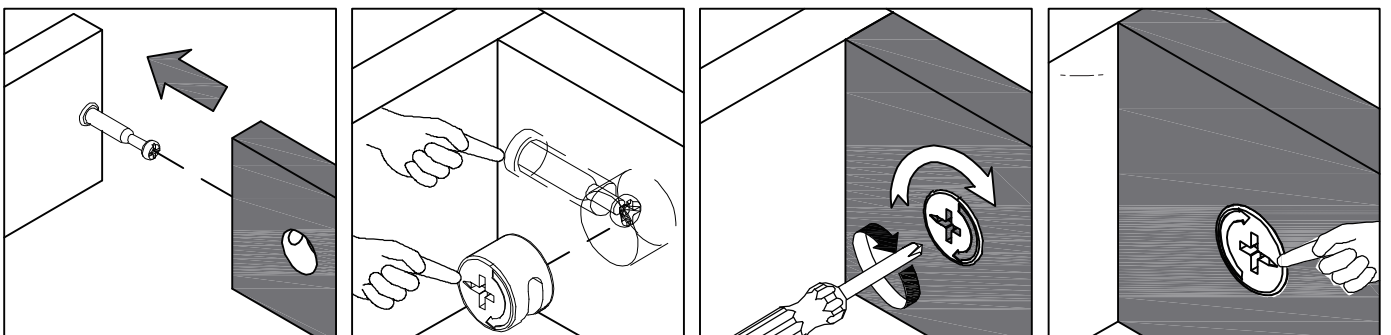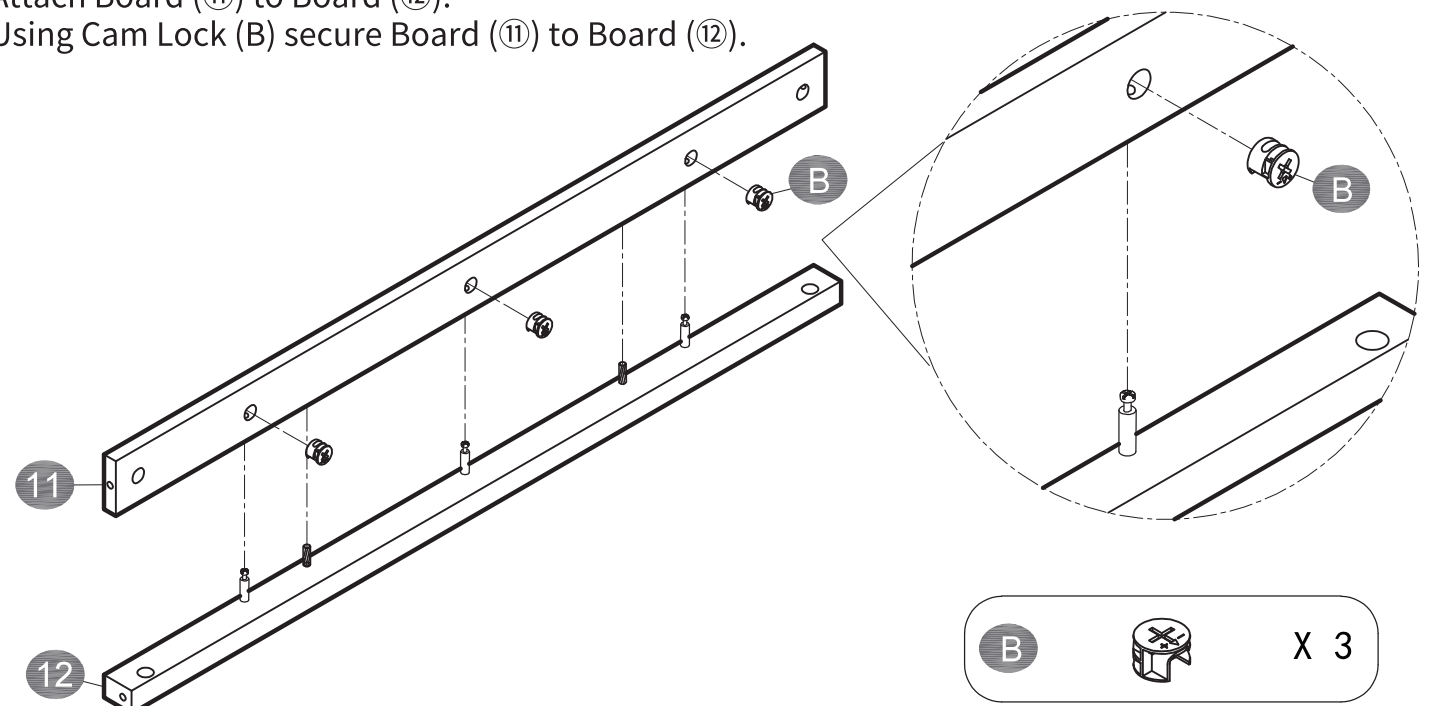



## Step 8

Inserting Wooden Dowel (D) into Board (9).

Attach Board (10) to Board (9).

Using Screws (C) and a 7-Shaped Wrench secure Board (10) to Board (9).

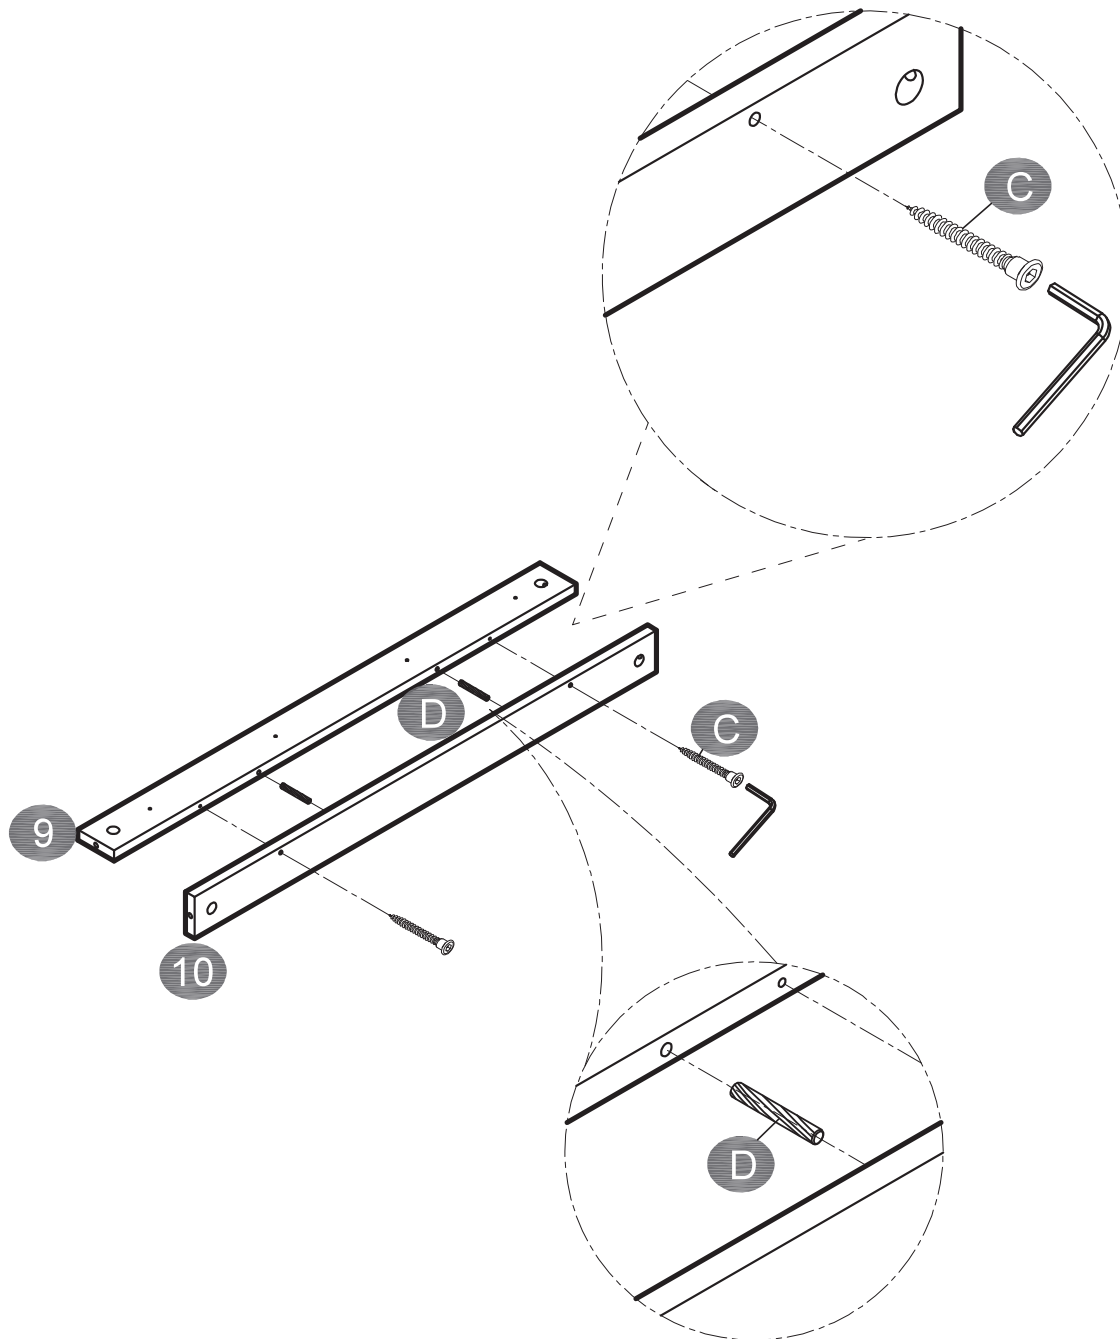



|   |                                                                                                 |     |
|---|-------------------------------------------------------------------------------------------------|-----|
| C |            | X 2 |
| D | <br>6x30mm | X 2 |
|   |            | X 1 |

# Step 9

Attach Board (⑦&⑧&⑨&⑩&⑪&⑫) to Board (③).

Using Cam Lock (B) secure Board (⑦&⑧&⑨&⑩&⑪&⑫) to Board (③).

Using Screws (M) and a 7-Shaped Wrench secure Support Strip (⑥) to Board (③).




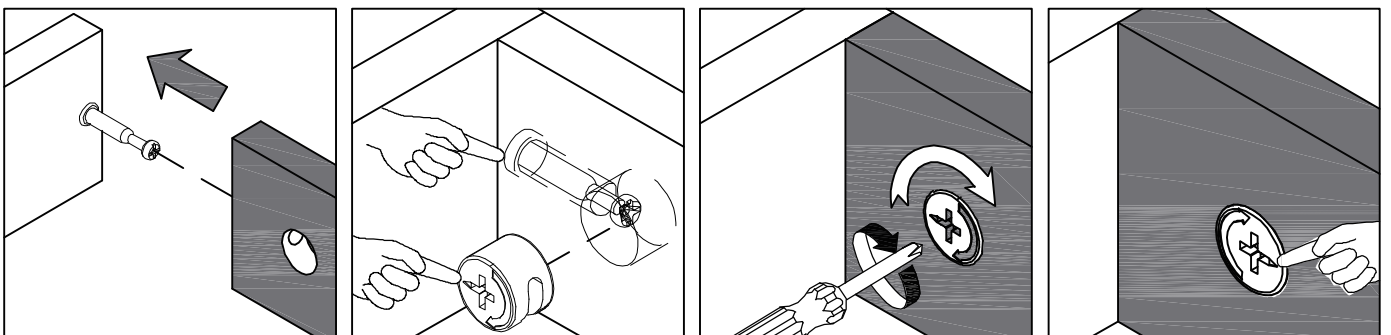
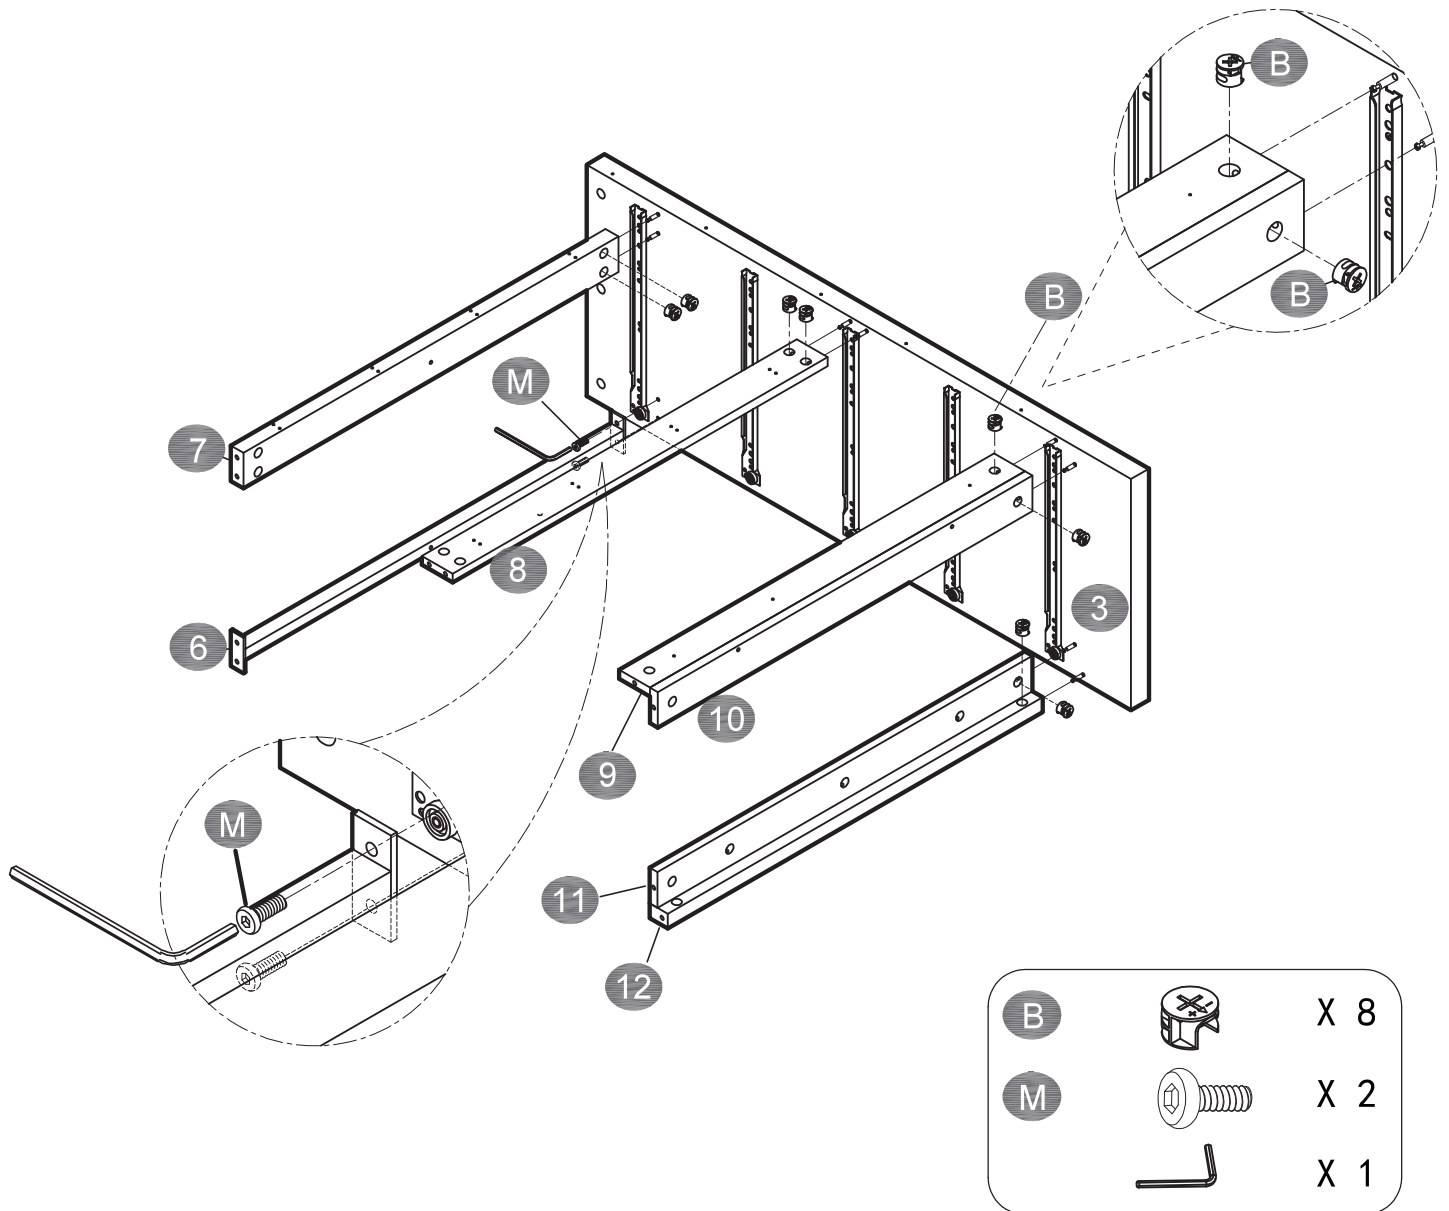


# Step 10

Attach Board (4) to Board (7&8&9&10&11&12).

Using Cam Lock (B) secure Board (4) to Board (7&8&9&10&11&12).


Using Screws (M) and a 7-Shaped Wrench secure Support Strip (6) to Board (4).

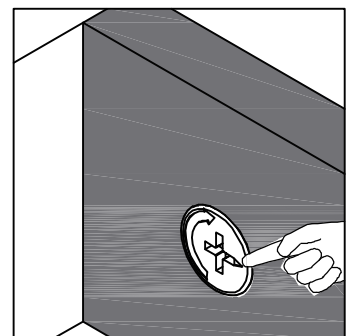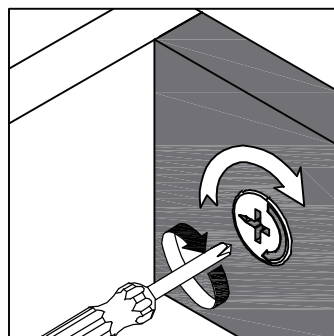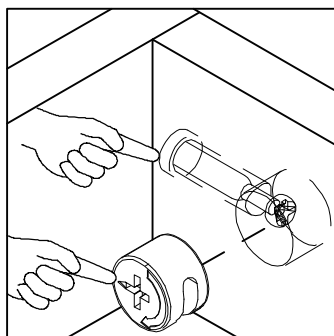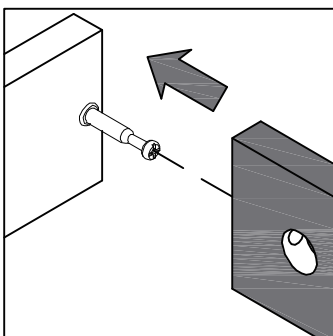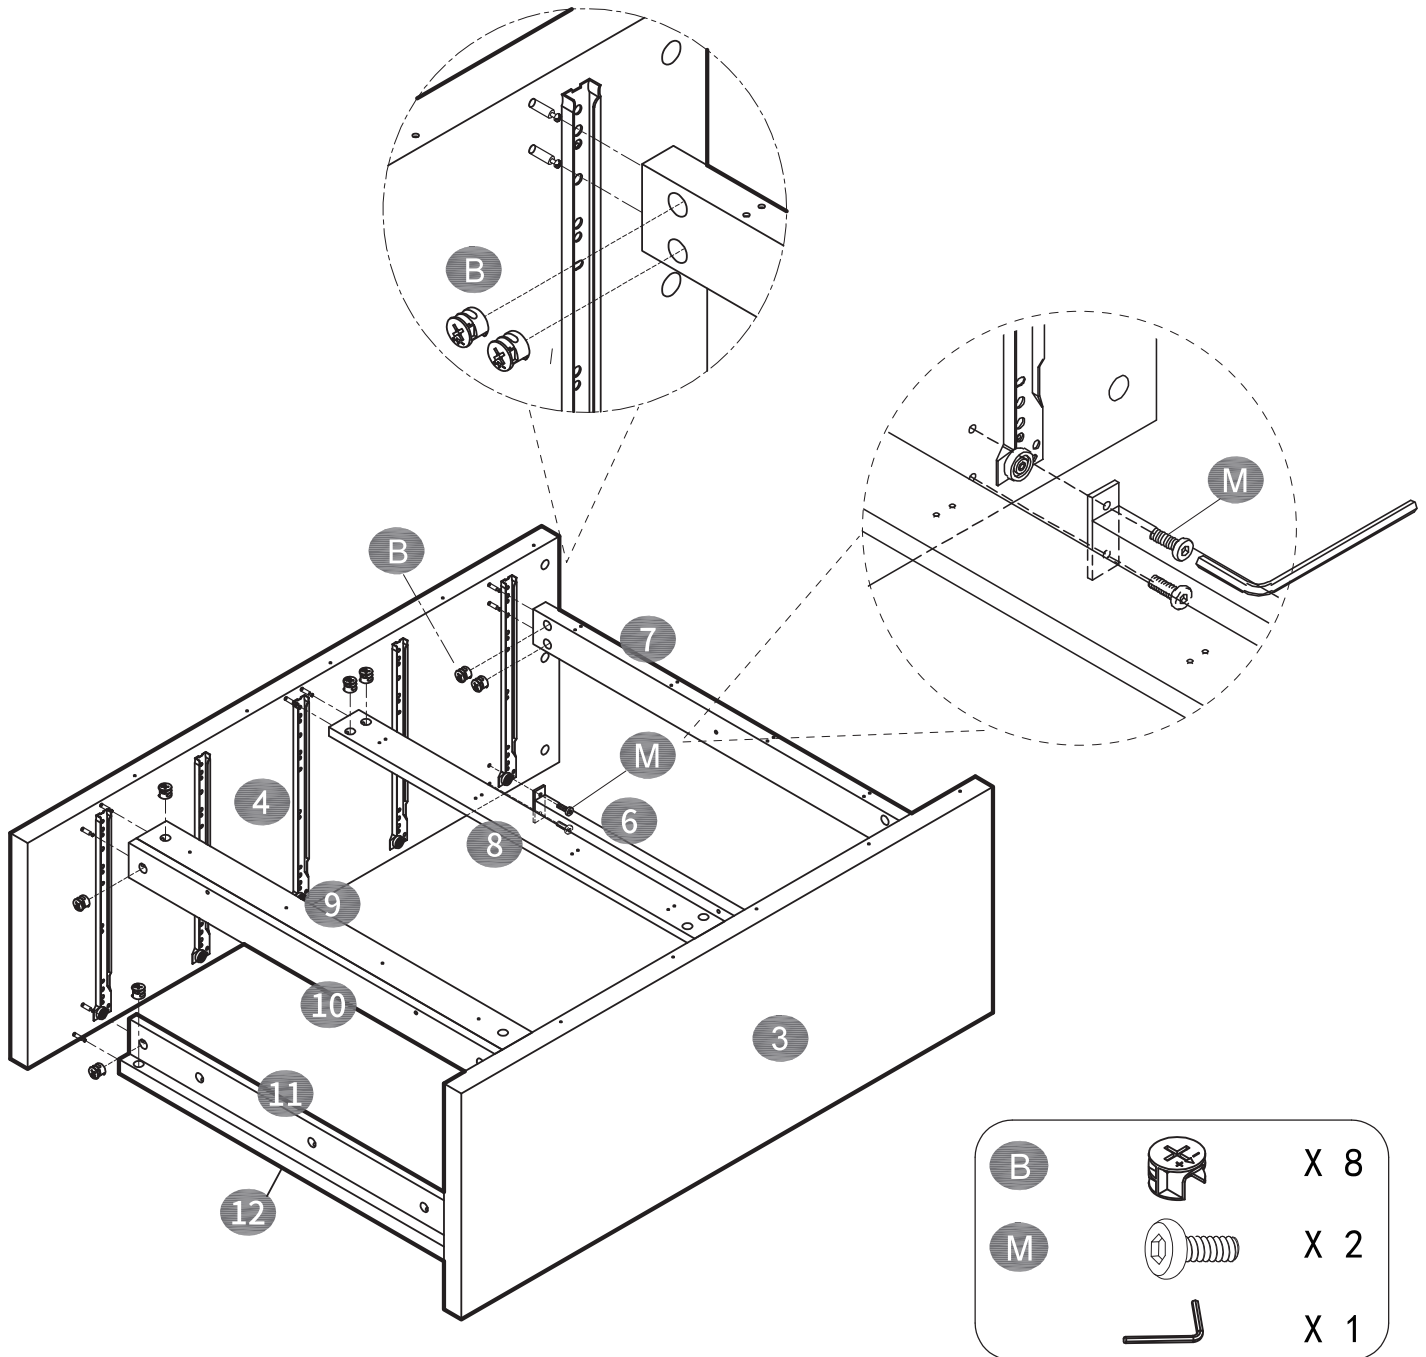

# Step 11

Attach Board (5) to Board (6&7).


Using Screws (C) and a 7-Shaped Wrench secure Board (5) to Board (6&7).

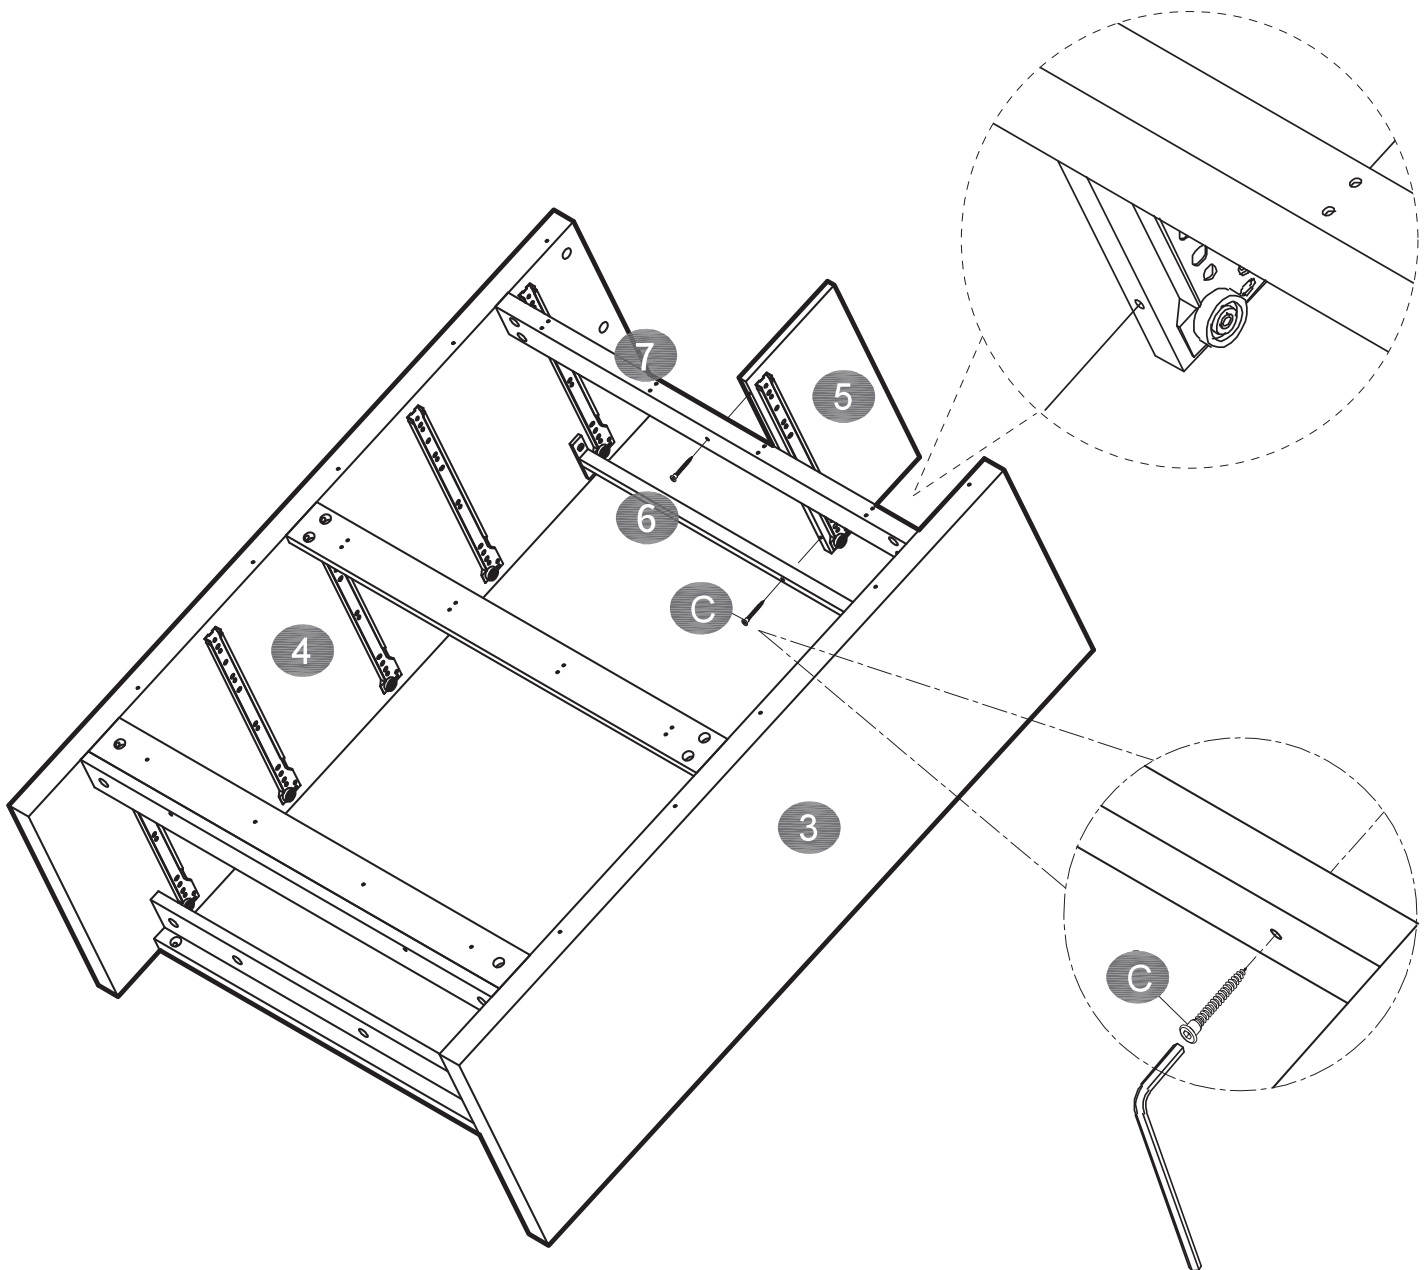


|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| C |  | X 2 |
|   |  | X 1 |

## Step 12


Securing Cam Bolt (A) into Board (①). Using Screws (H) secure Anti-tip Kit (K) to the Board (①).

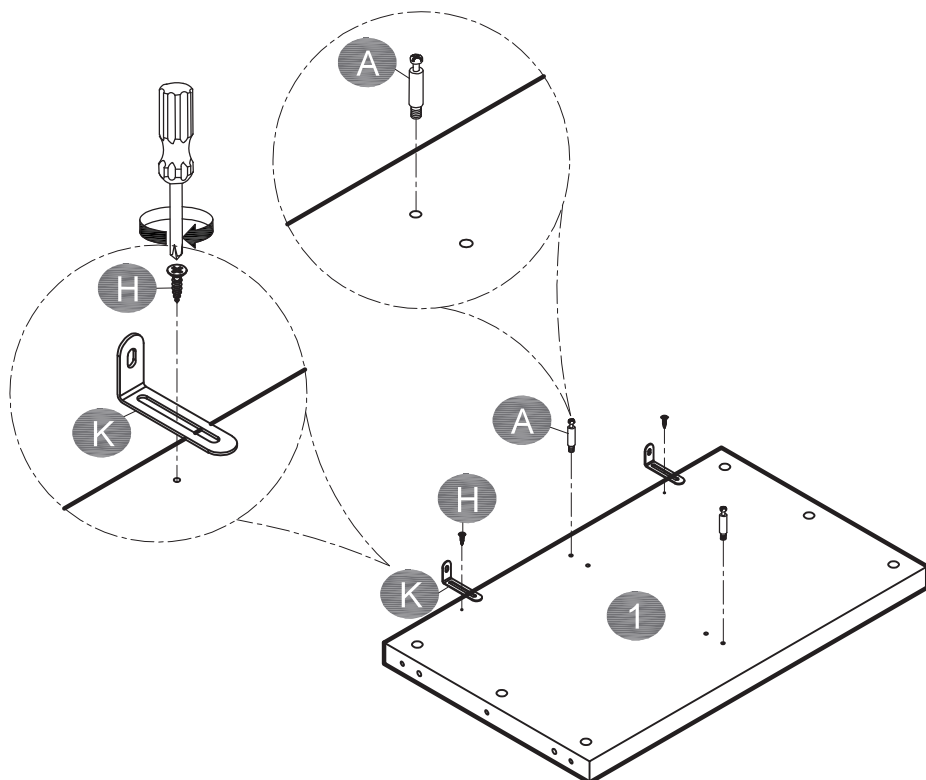

|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| A |    | X 2 |
| H |   | X 2 |
| K |  | X 2 |

## Step 13


Securing Cam Bolt (A) into Board (②).

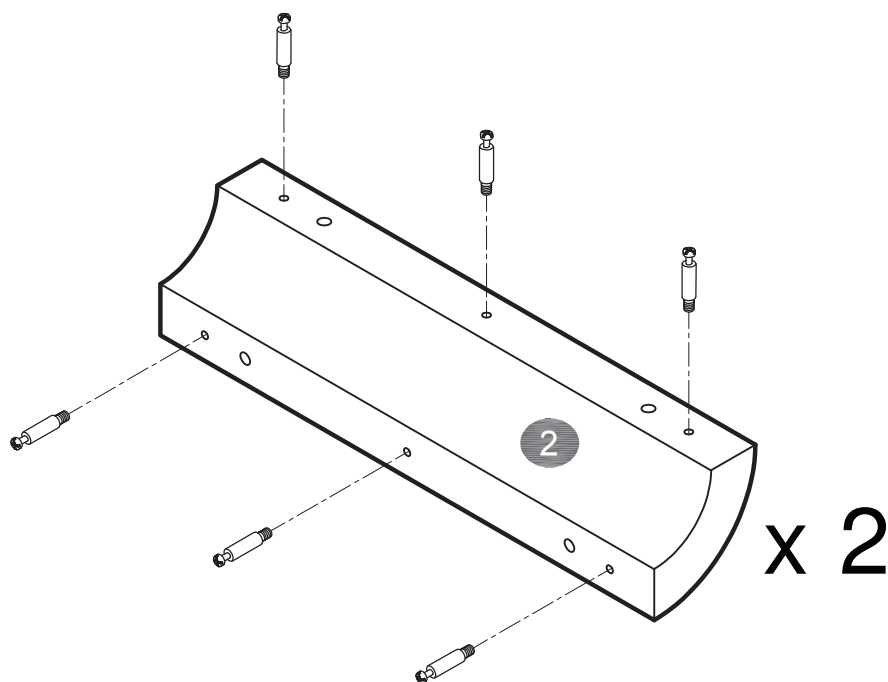



|   |                                                                                       |      |
|---|---------------------------------------------------------------------------------------|------|
| A |  | X 12 |
|---|---------------------------------------------------------------------------------------|------|

# Step 14

Inserting Wooden Dowel (E) into Board (①).  
Using Cam Lock (B) secure Board (②) to Board (①).





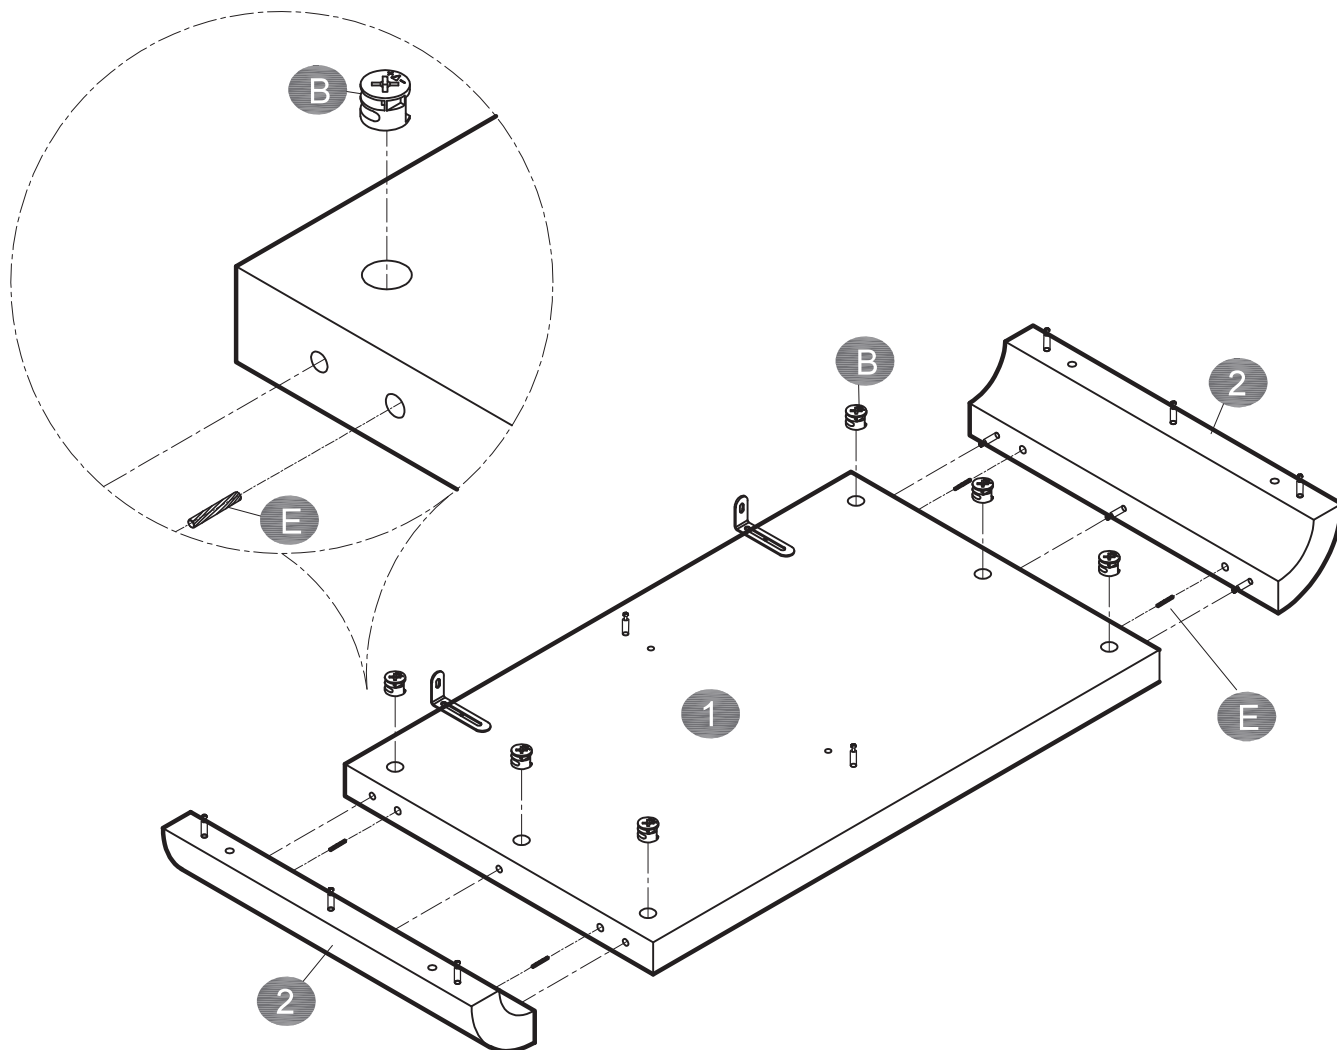


|   |                                                                                                 |     |
|---|-------------------------------------------------------------------------------------------------|-----|
| B |            | X 6 |
| E | <br>8x30mm | X 4 |

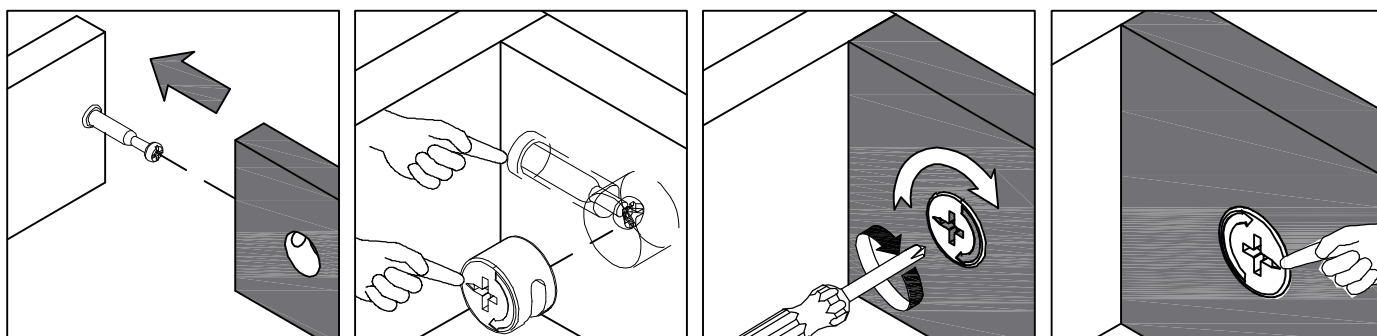



# Step 15

Inserting Wooden Dowel (E) into Board (③&④). Inserting Wooden Dowel (D) into Board (⑤). Using Cam Lock (B) secure Board (①&②) to Board (③&④&⑤).

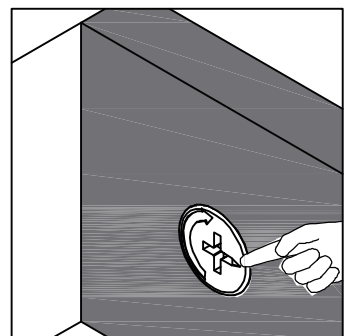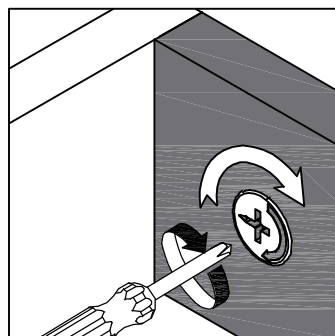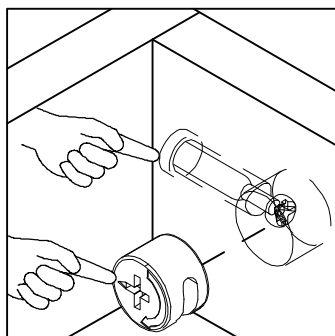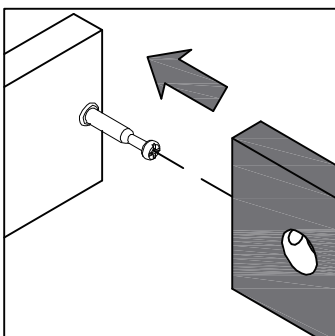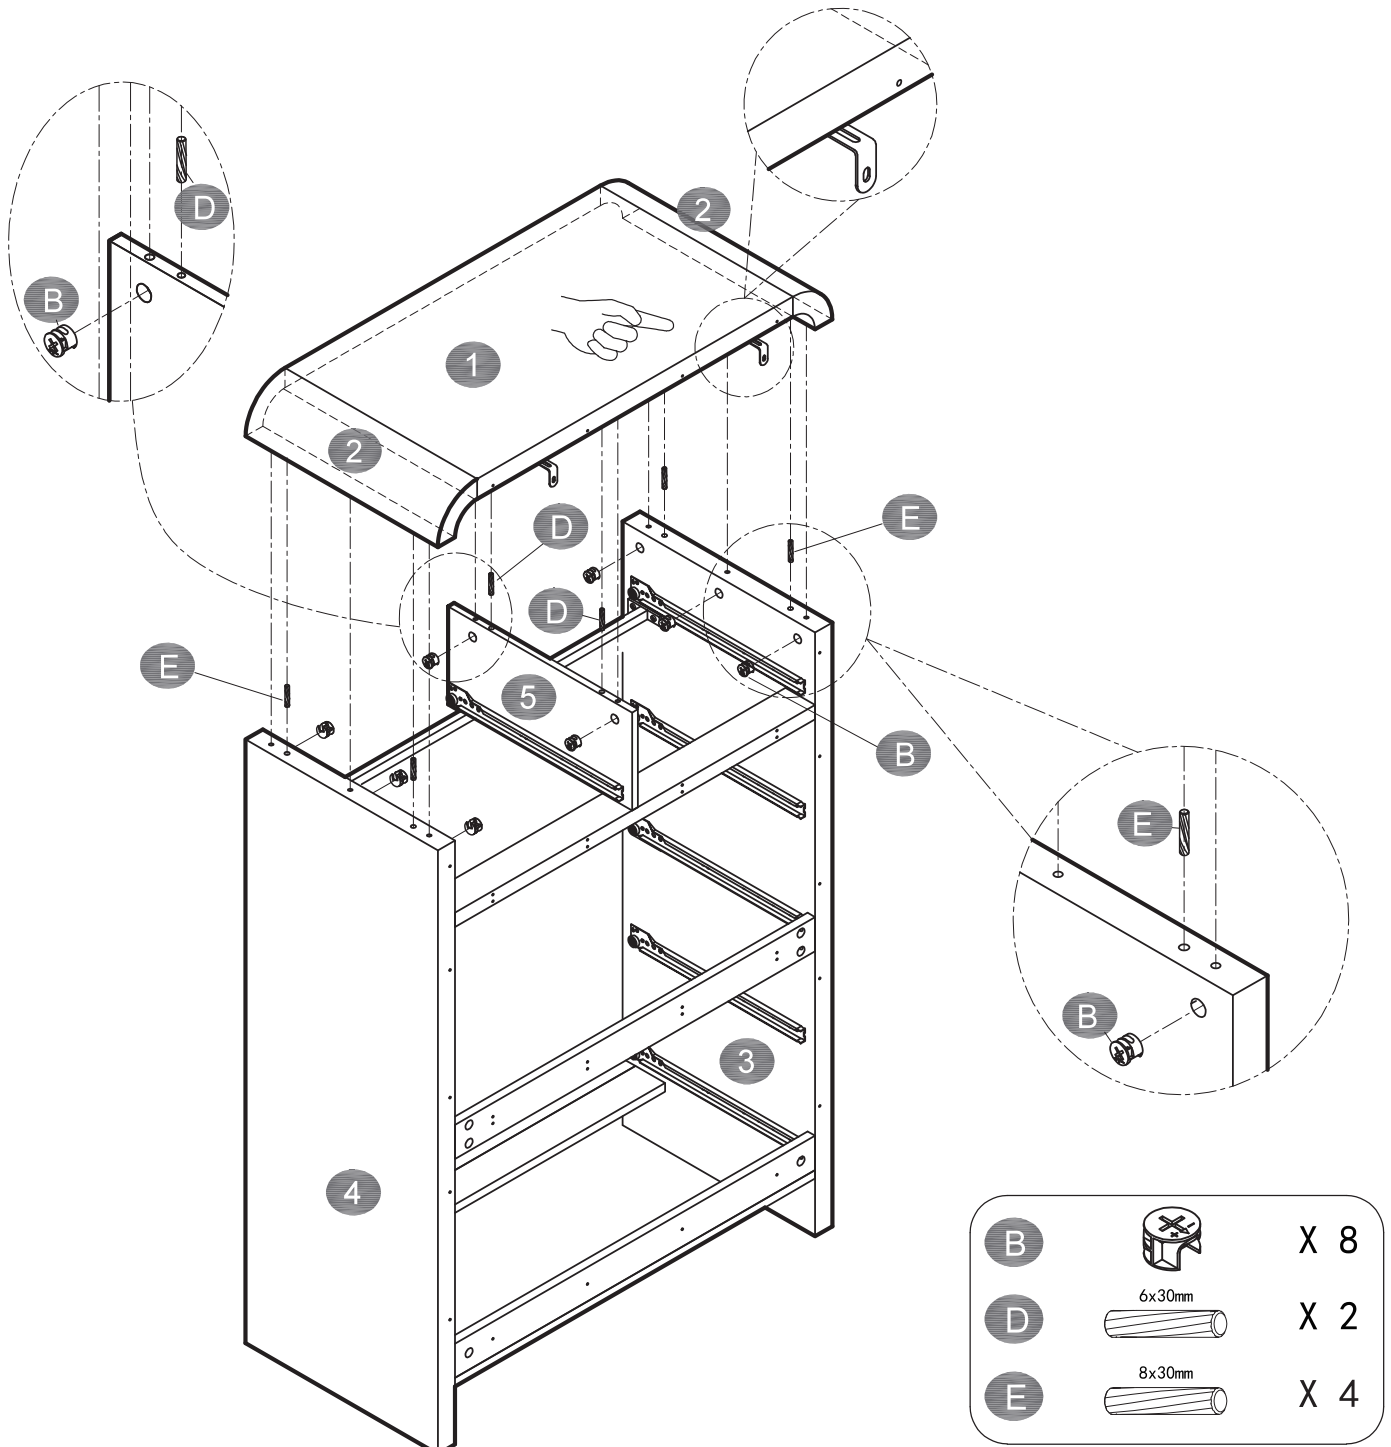



# Step 16

Using Screws (I) assemble Back Panels (14&15) to the main body.

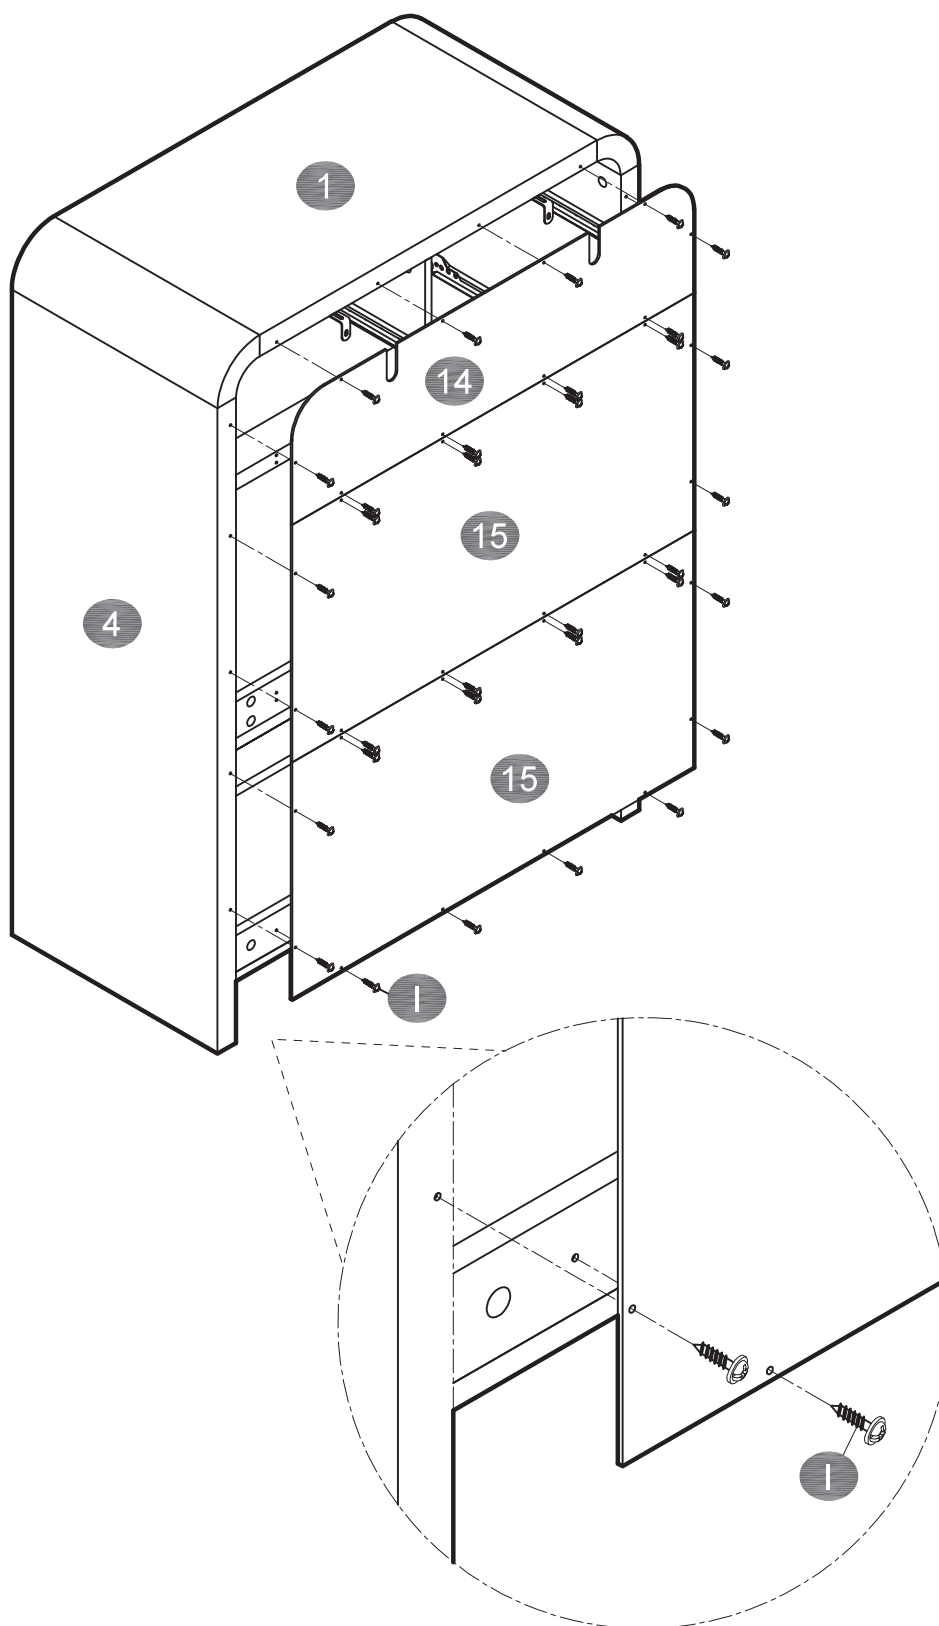


# Step 17

Securing Cam Bolt (A) into Board (15&16).

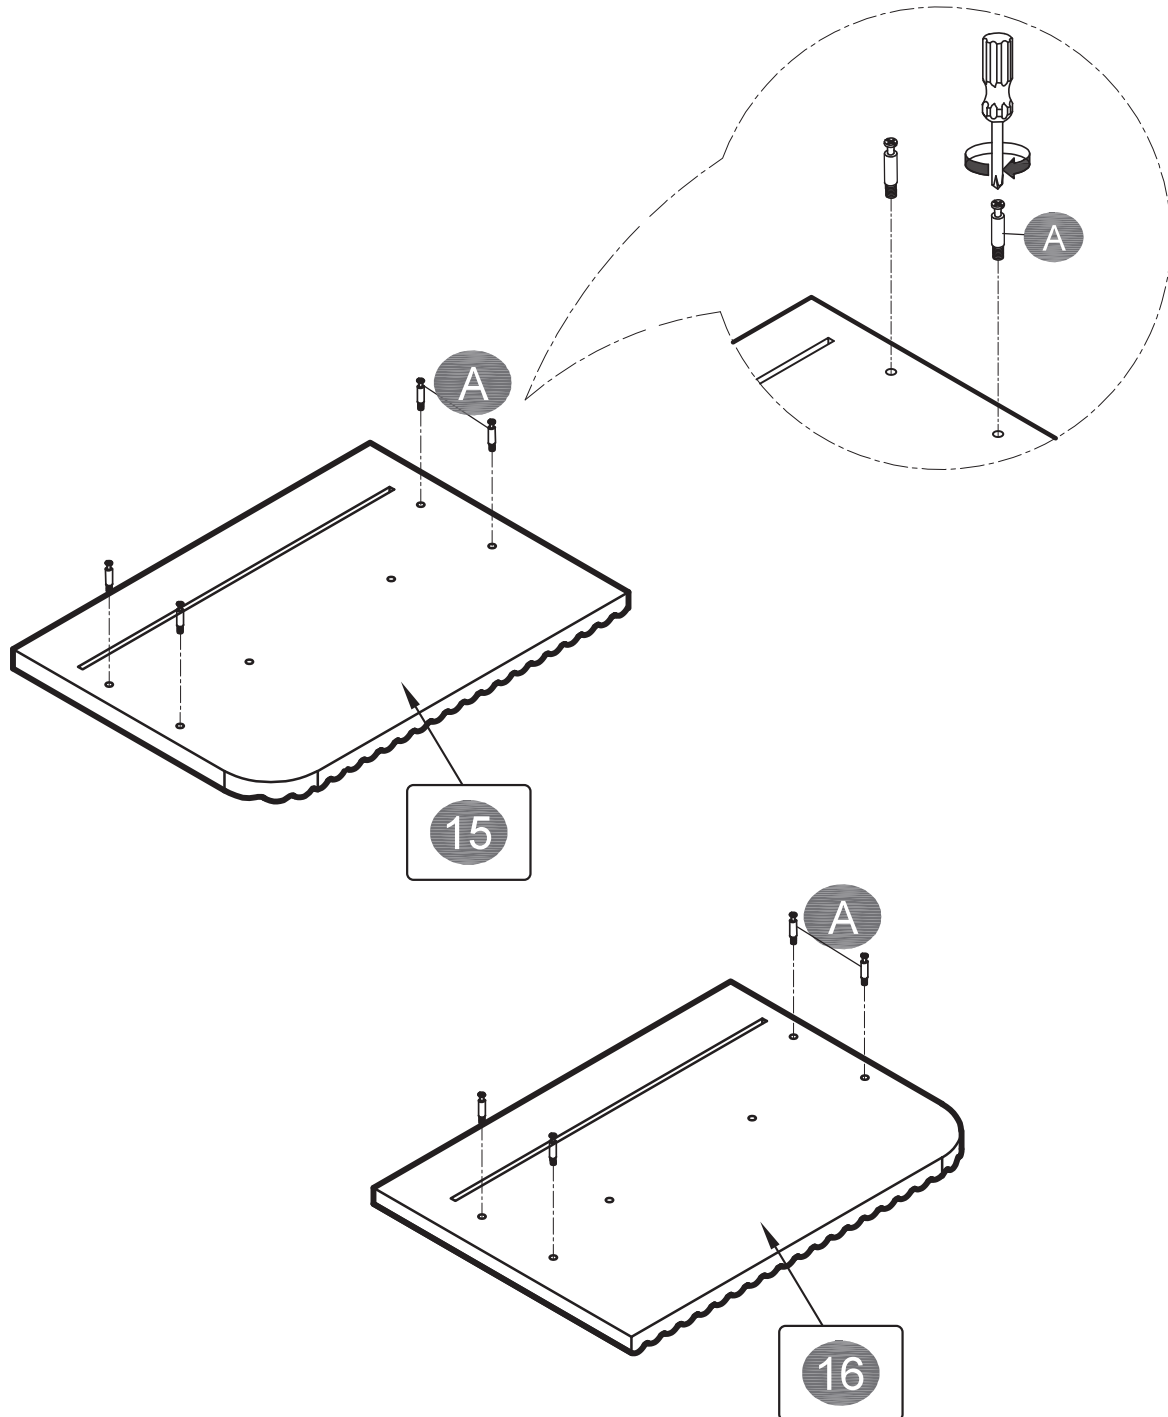

# Step 18


Attach Board (18&19) to Board (15&16). Using Cam Lock (B) secure Board (18&19) to Board (15&16).

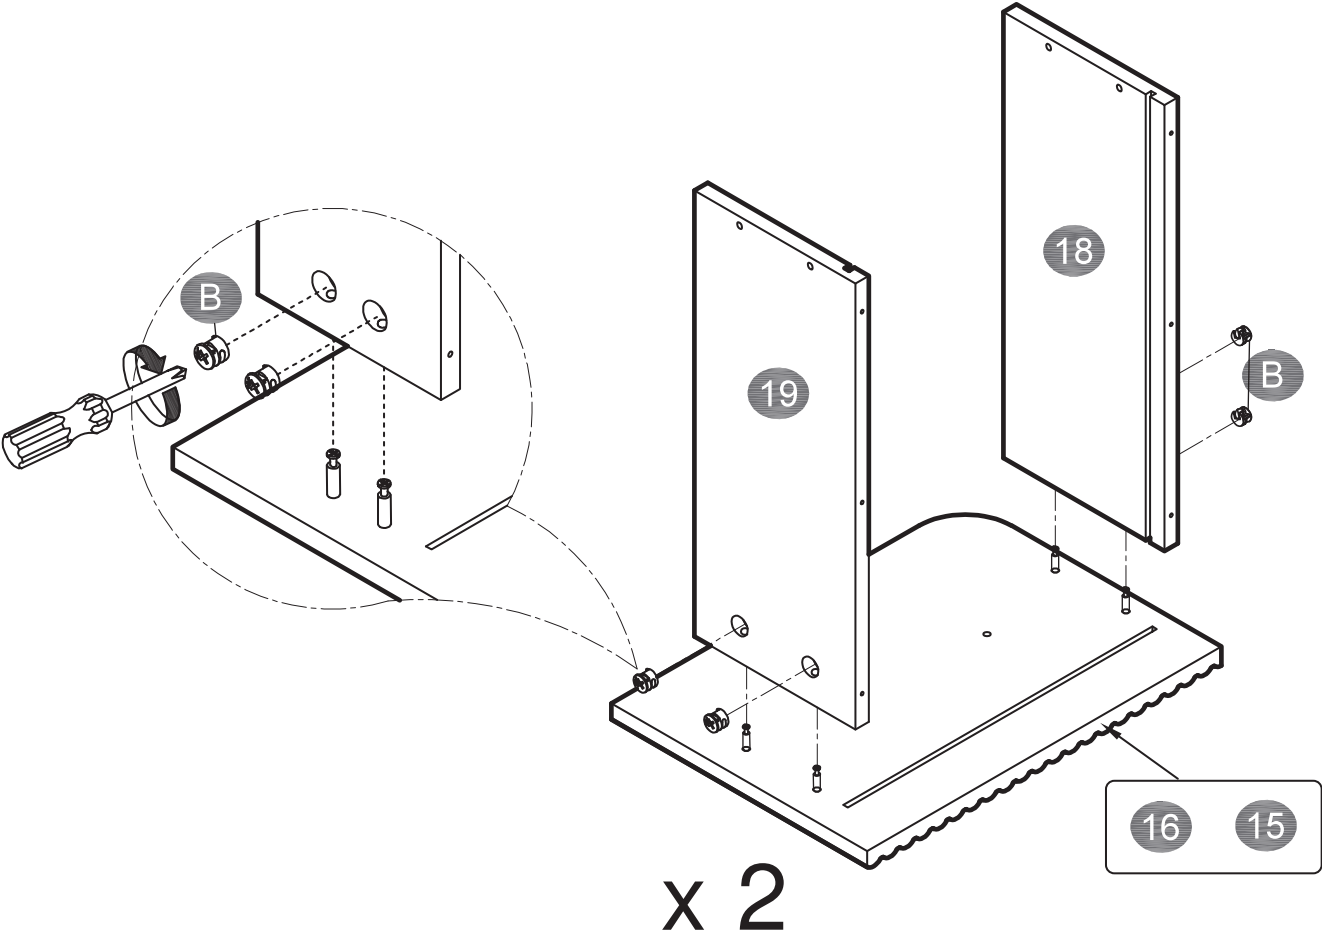

B




X 8

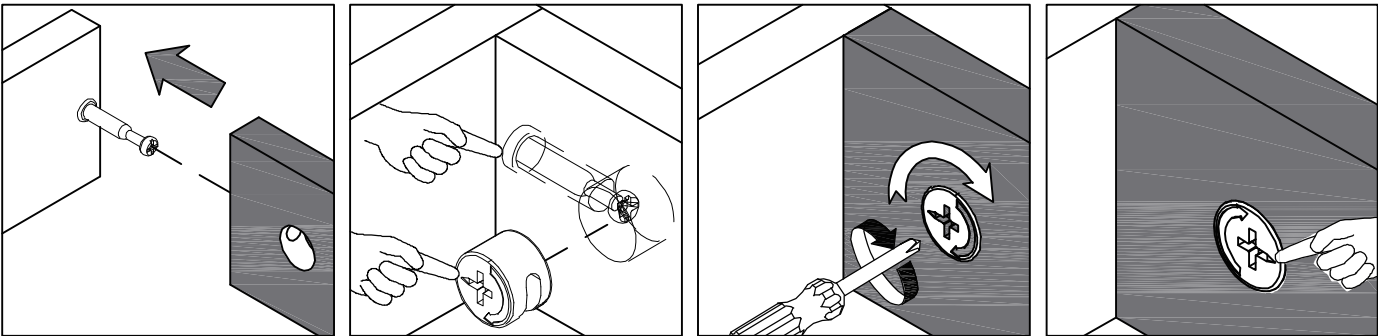


## Step 19

Sliding drawer bottom panels (22) into grooves.

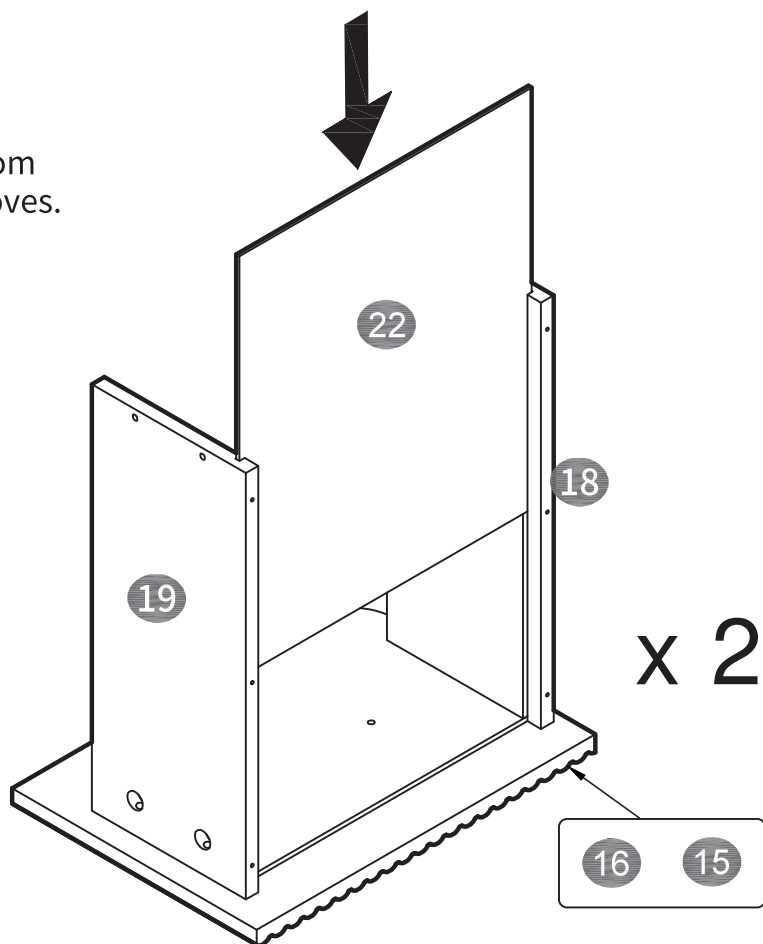

## Step 20


Using Screws (J) secure Board (20) to Board (18&19).

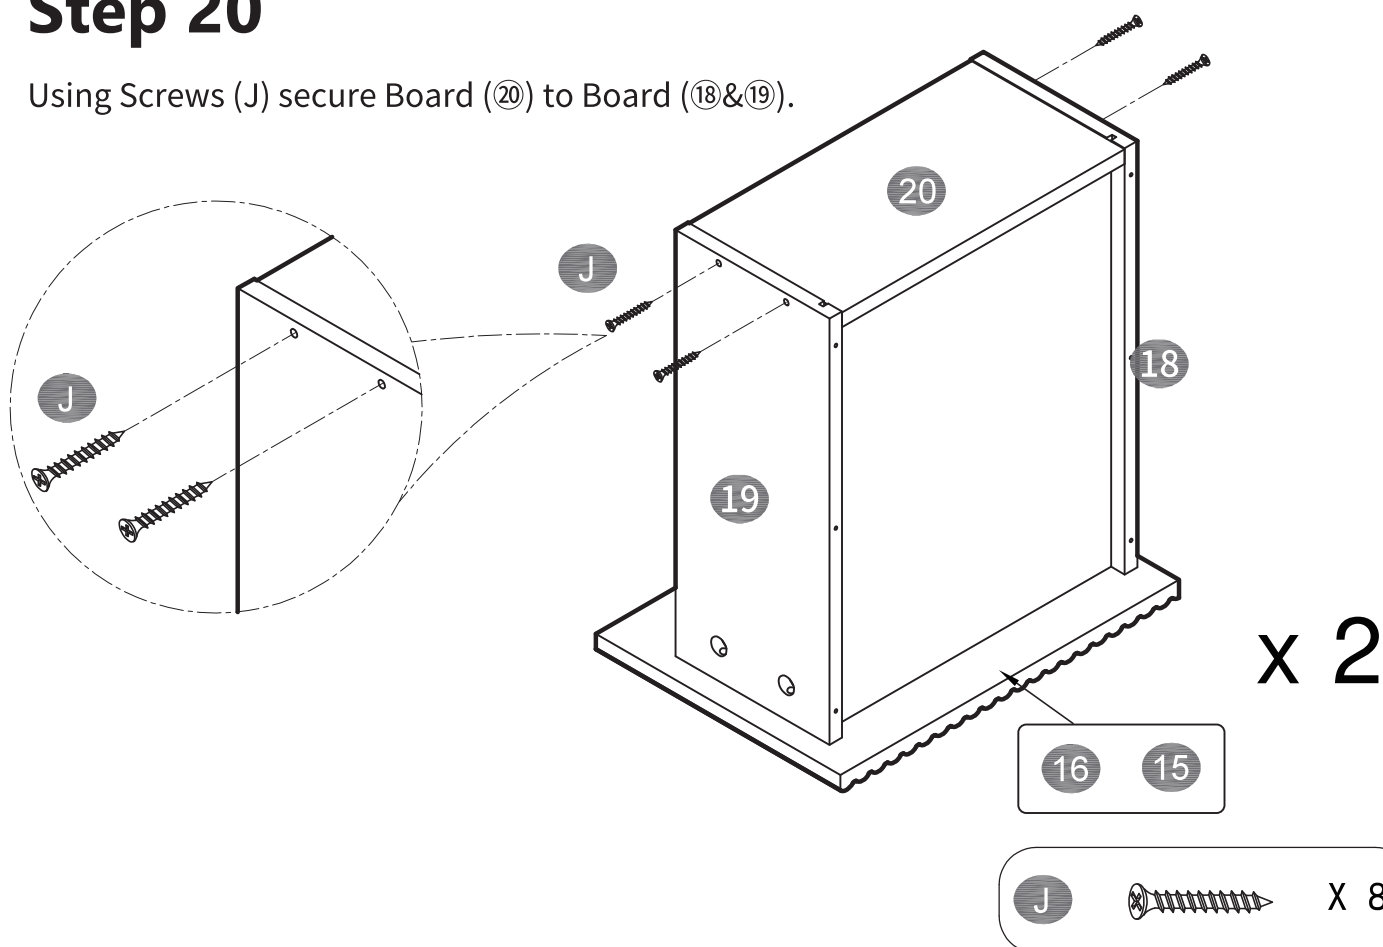

# Step 21


Using Screws (H) to assemble Slide (DL) to Board (18).  
Using Screws (H) to assemble Slide (DR) to Board (19).

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

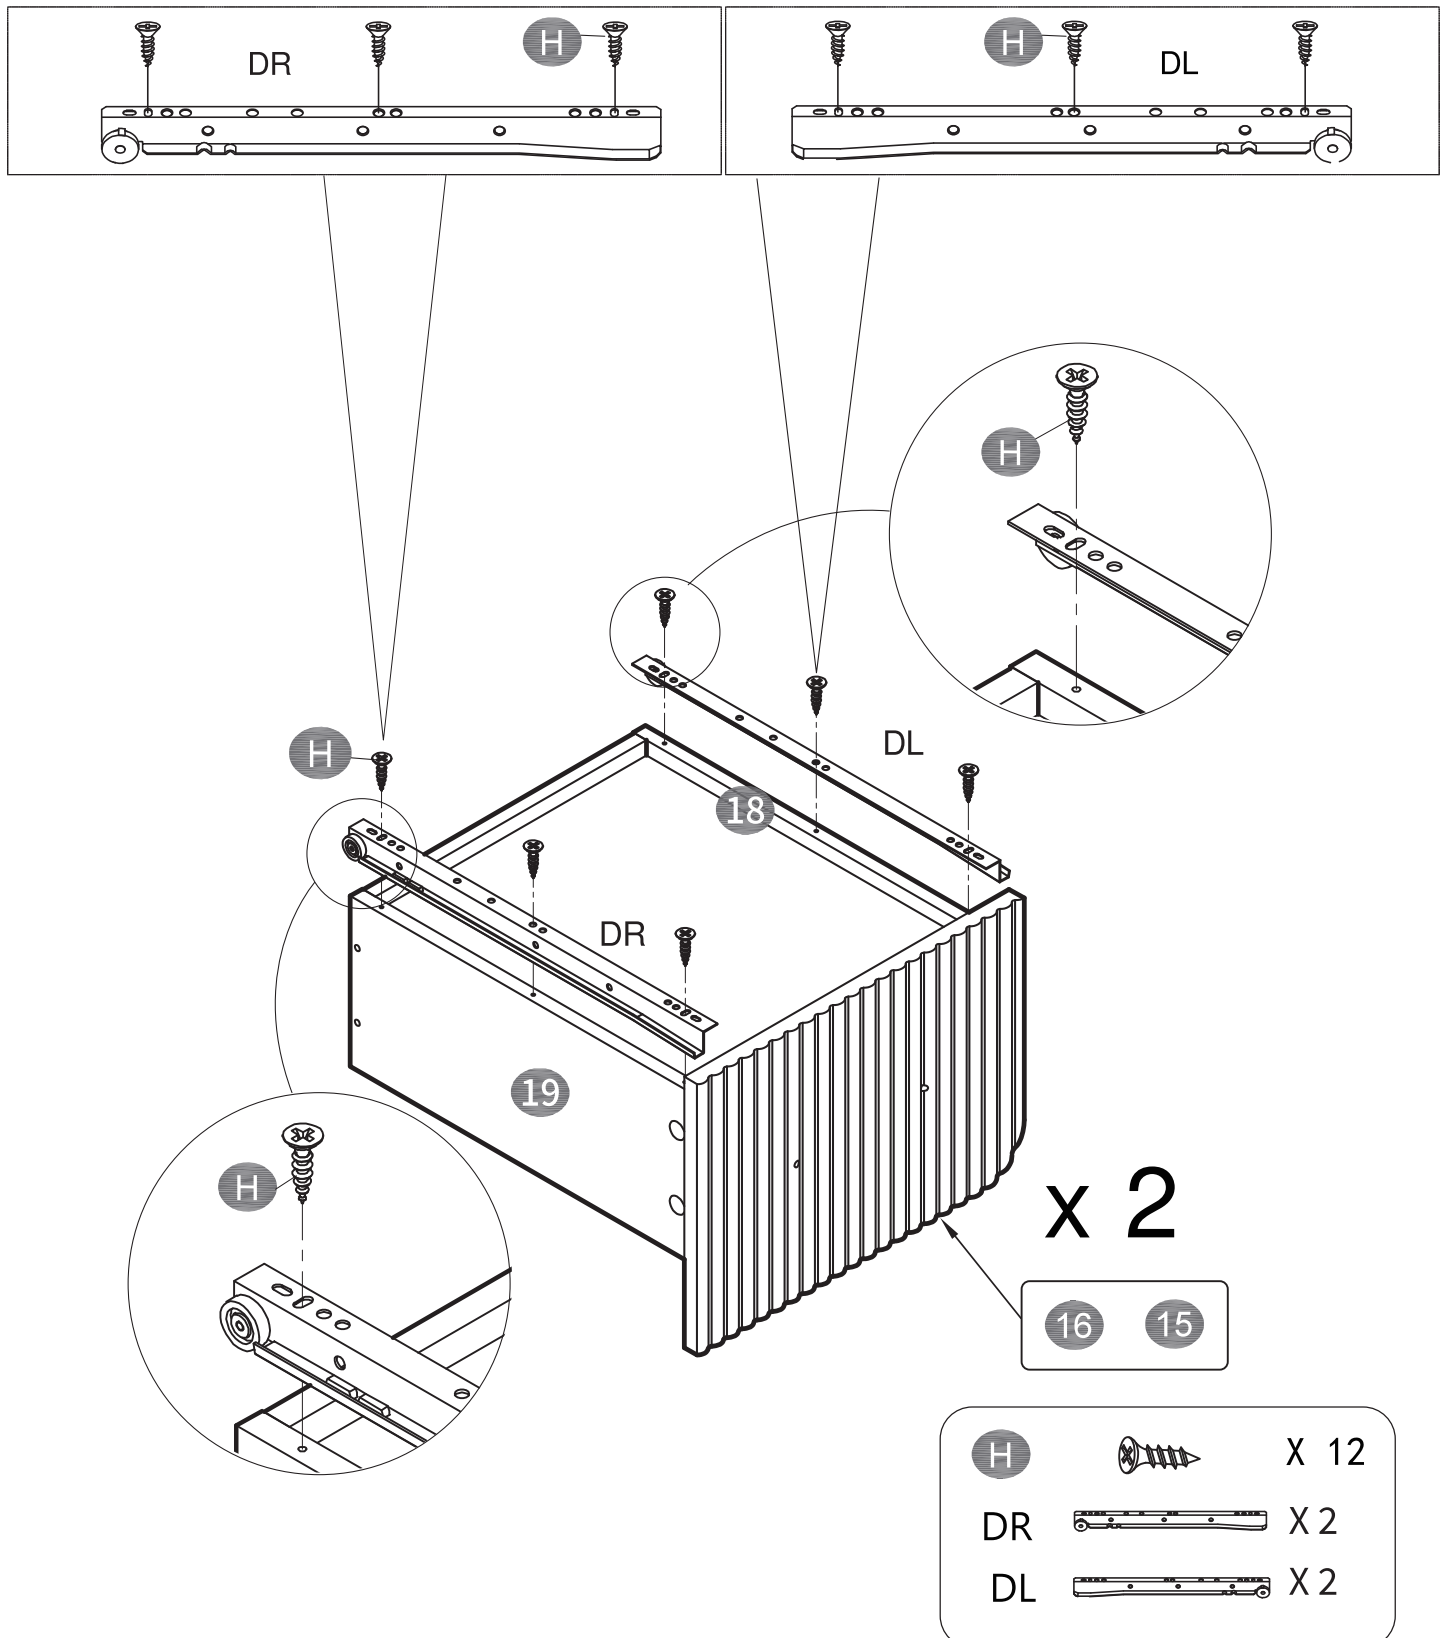

## Step 22


Using Screws (G) to assemble Handle (F) to the Board (15&16).

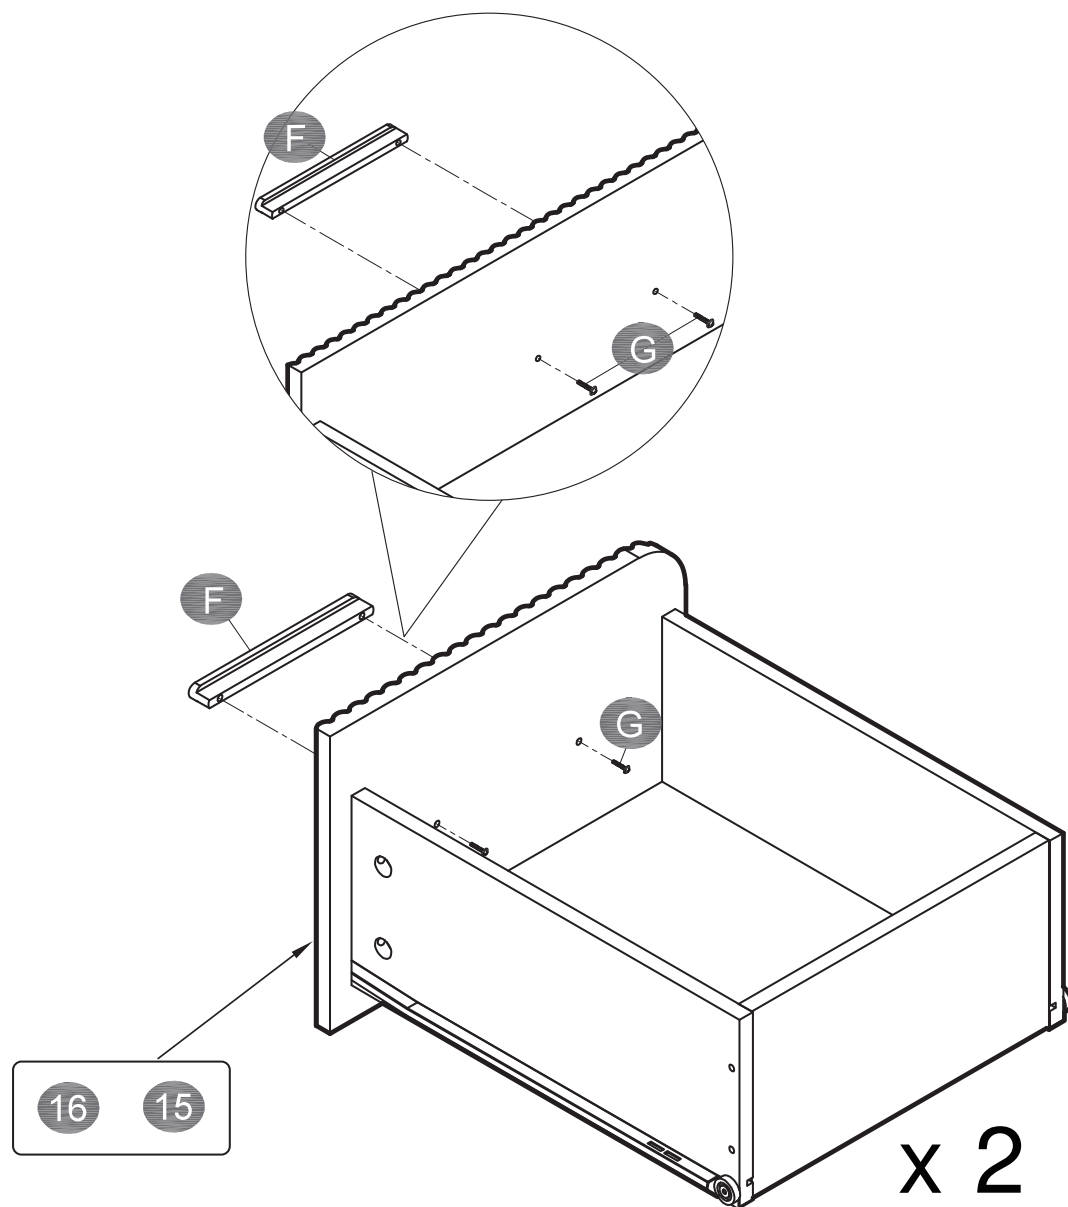

|   |  |     |
|---|--|-----|
| F |  | X 2 |
| G |  | X 4 |






## Step 23

Securing Cam Bolt (A)  
into Board (17).

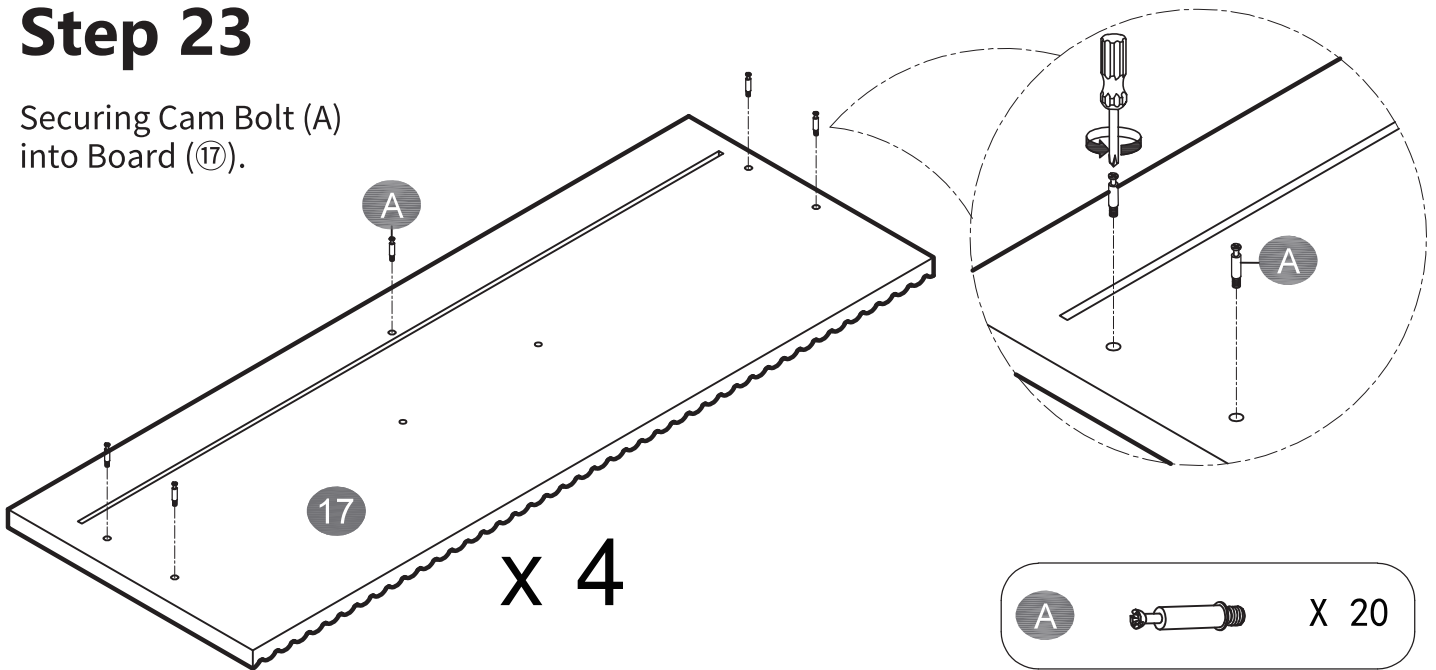


## Step 24

Attach Board (18&19&24) to Board (17).  
Using Cam Lock (B) secure Board (18&19&24) to Board (17).

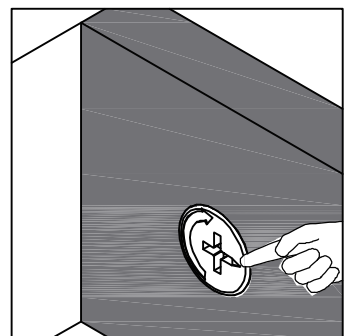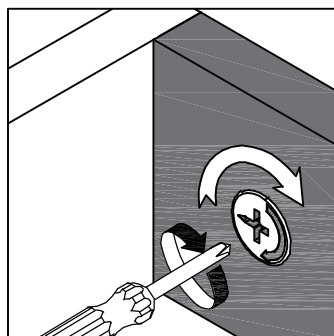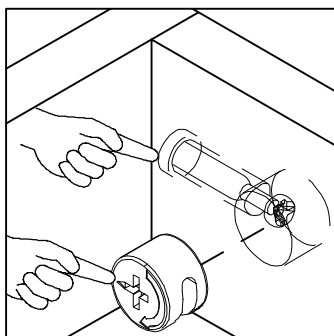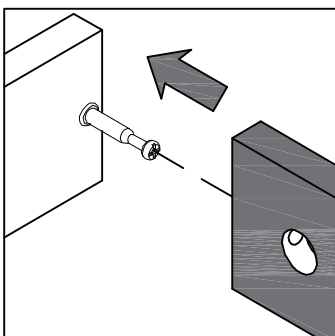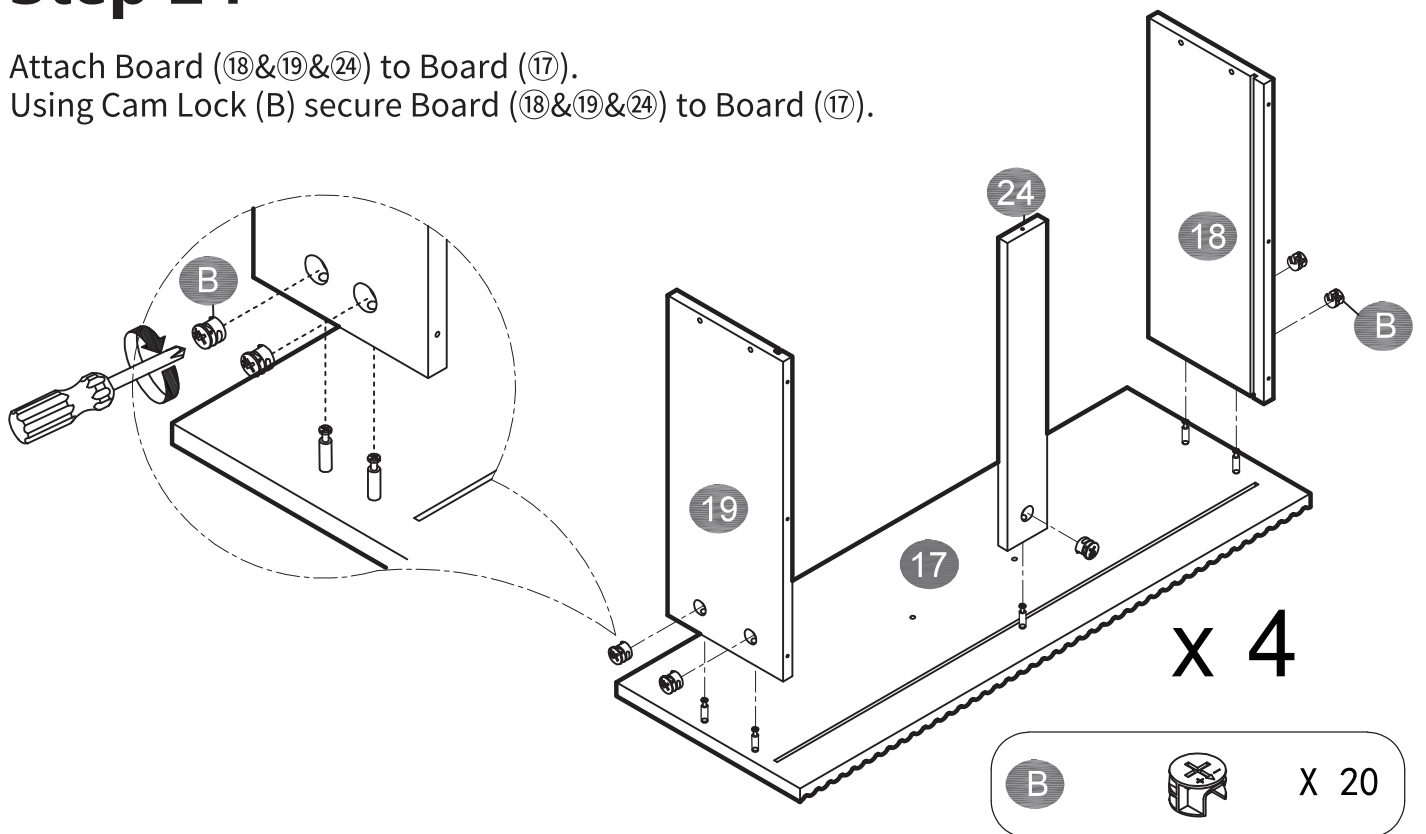



## Step 25

Sliding drawer bottom panels (23) into grooves.

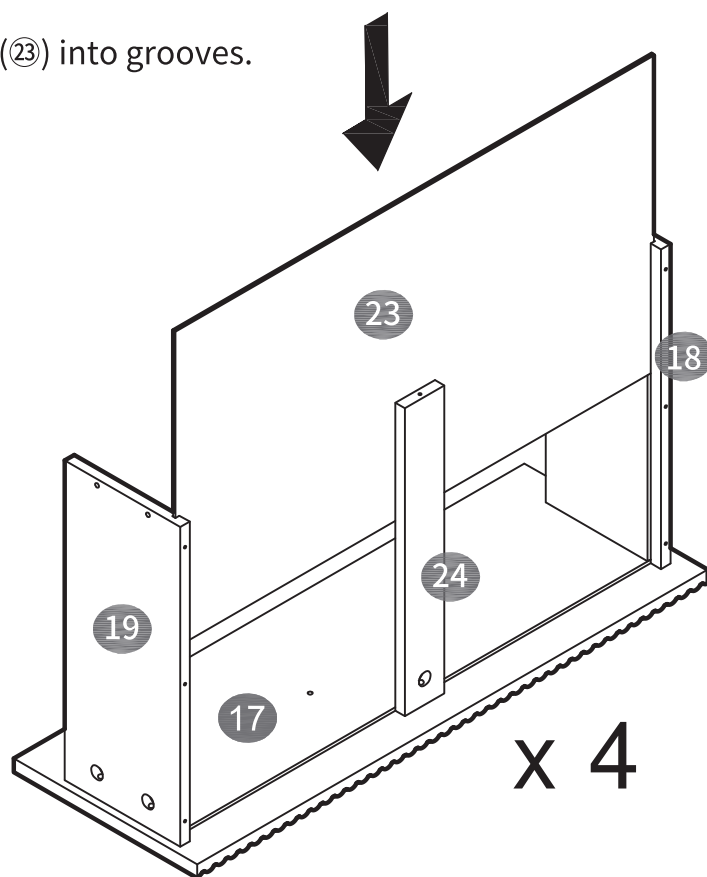

## Step 26


Using Screws (J) secure Board (21) to Board (18&19&24).

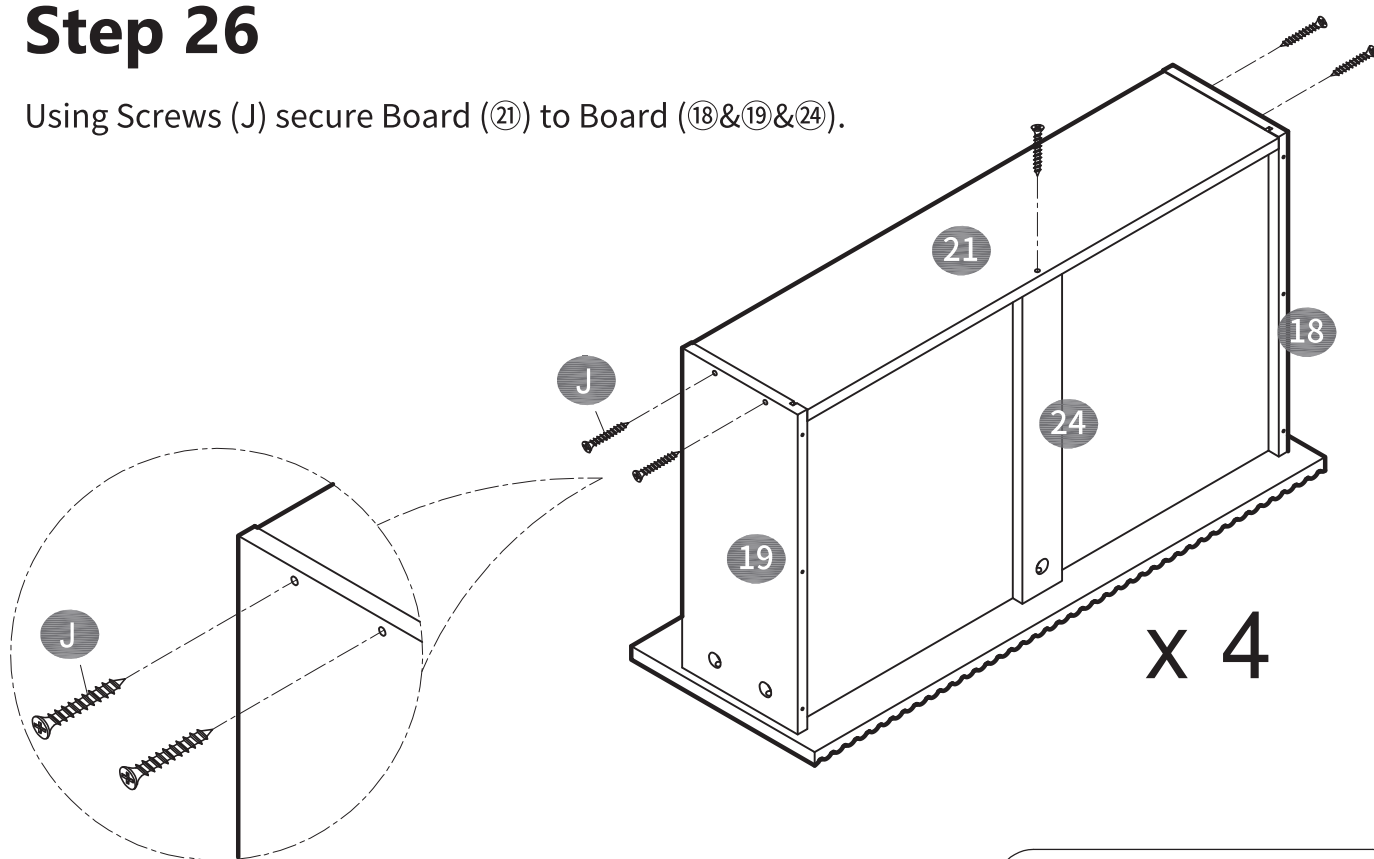

# Step 27


Using Screws (H) to assemble Slide (DL) to Board (18).  
Using Screws (H) to assemble Slide (DR) to Board (19).

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

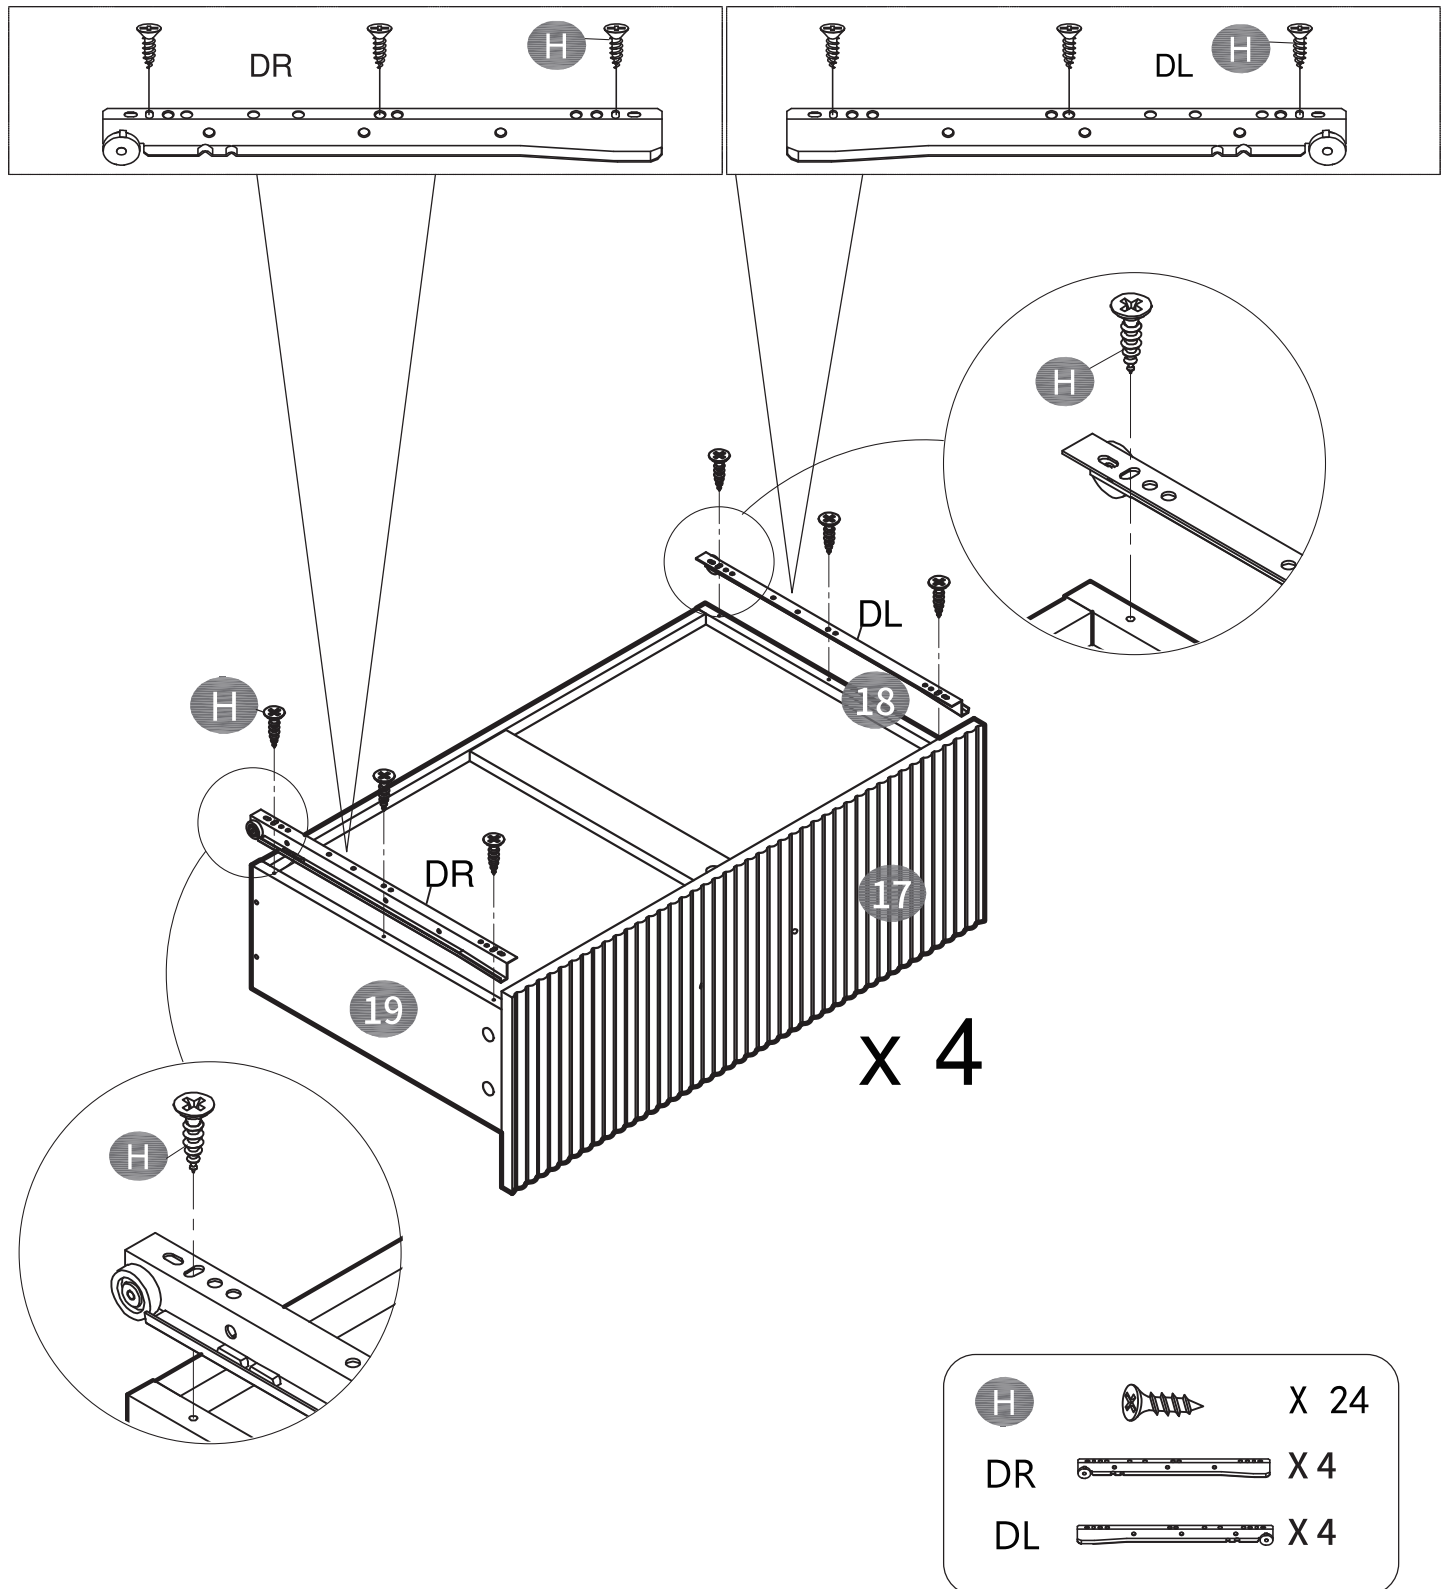

## Step 28

Using Screws (G) to assemble Handle (F) to the Board (17).

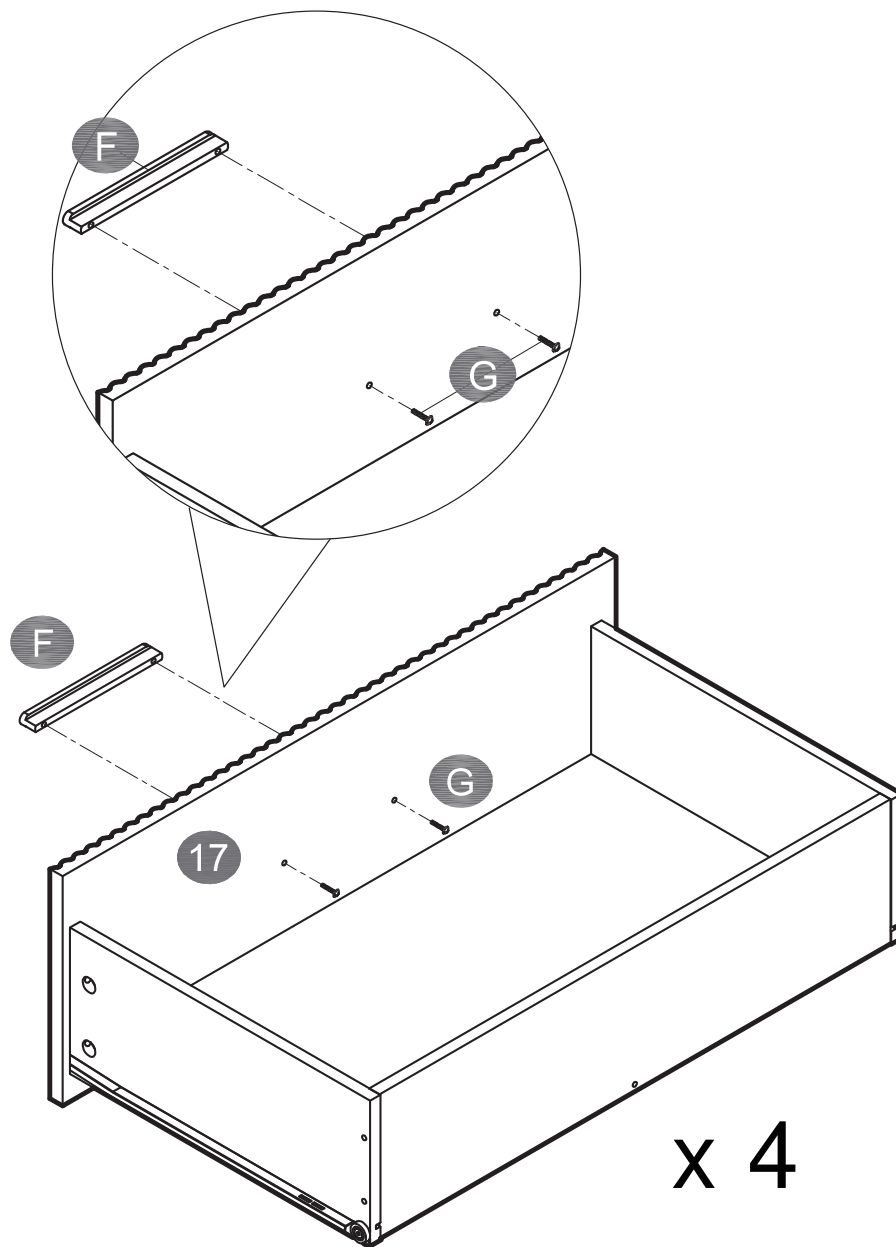


|   |                                                                                       |     |
|---|---------------------------------------------------------------------------------------|-----|
| F |  | X 4 |
| G |  | X 8 |

# Step 29

Method : For solid or concrete wall.


## Step 1

Measure and Mark: Ensure you measure the correct distance between the two anti-tip kit (K) and the appropriate height from the floor where the anti-tip kit (K) will be mounted on the wall. Use a pencil to mark where the anchors will go.

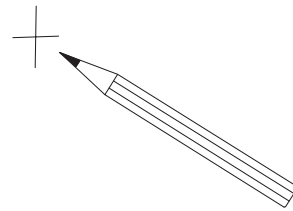


## Step 2

Pre-drill 2 holes: Using a drill bit that is slightly larger than the diameter of the wall anchors (L), pre-drill two holes at the marked positions on the wall.

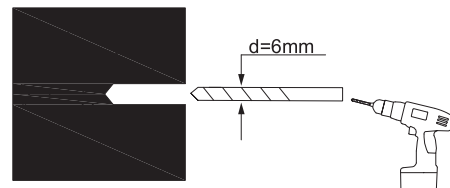

## Step 3


Use Hammer Gently insert the wall anchor (L) into the pre-drilled hole.

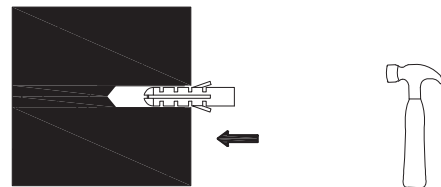

x 2

# Step 30

Using Screw (J) attach Anti-tip Kit (K) into Wall Anchor (L) to wall.

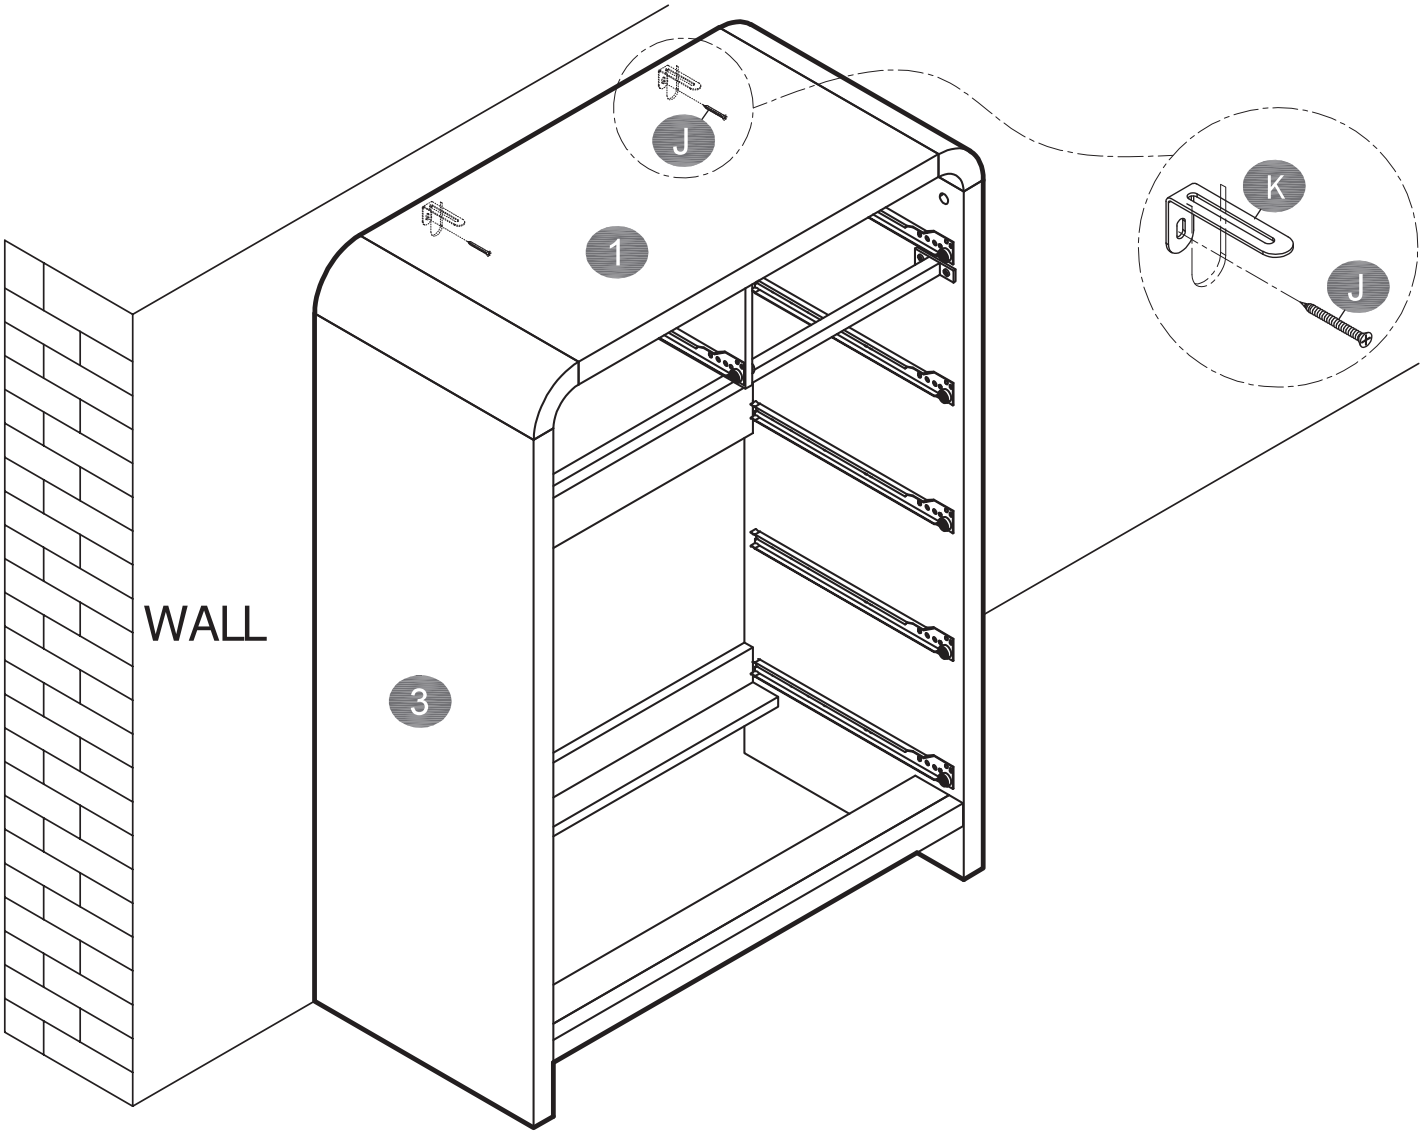


J



X 2


## Step 31

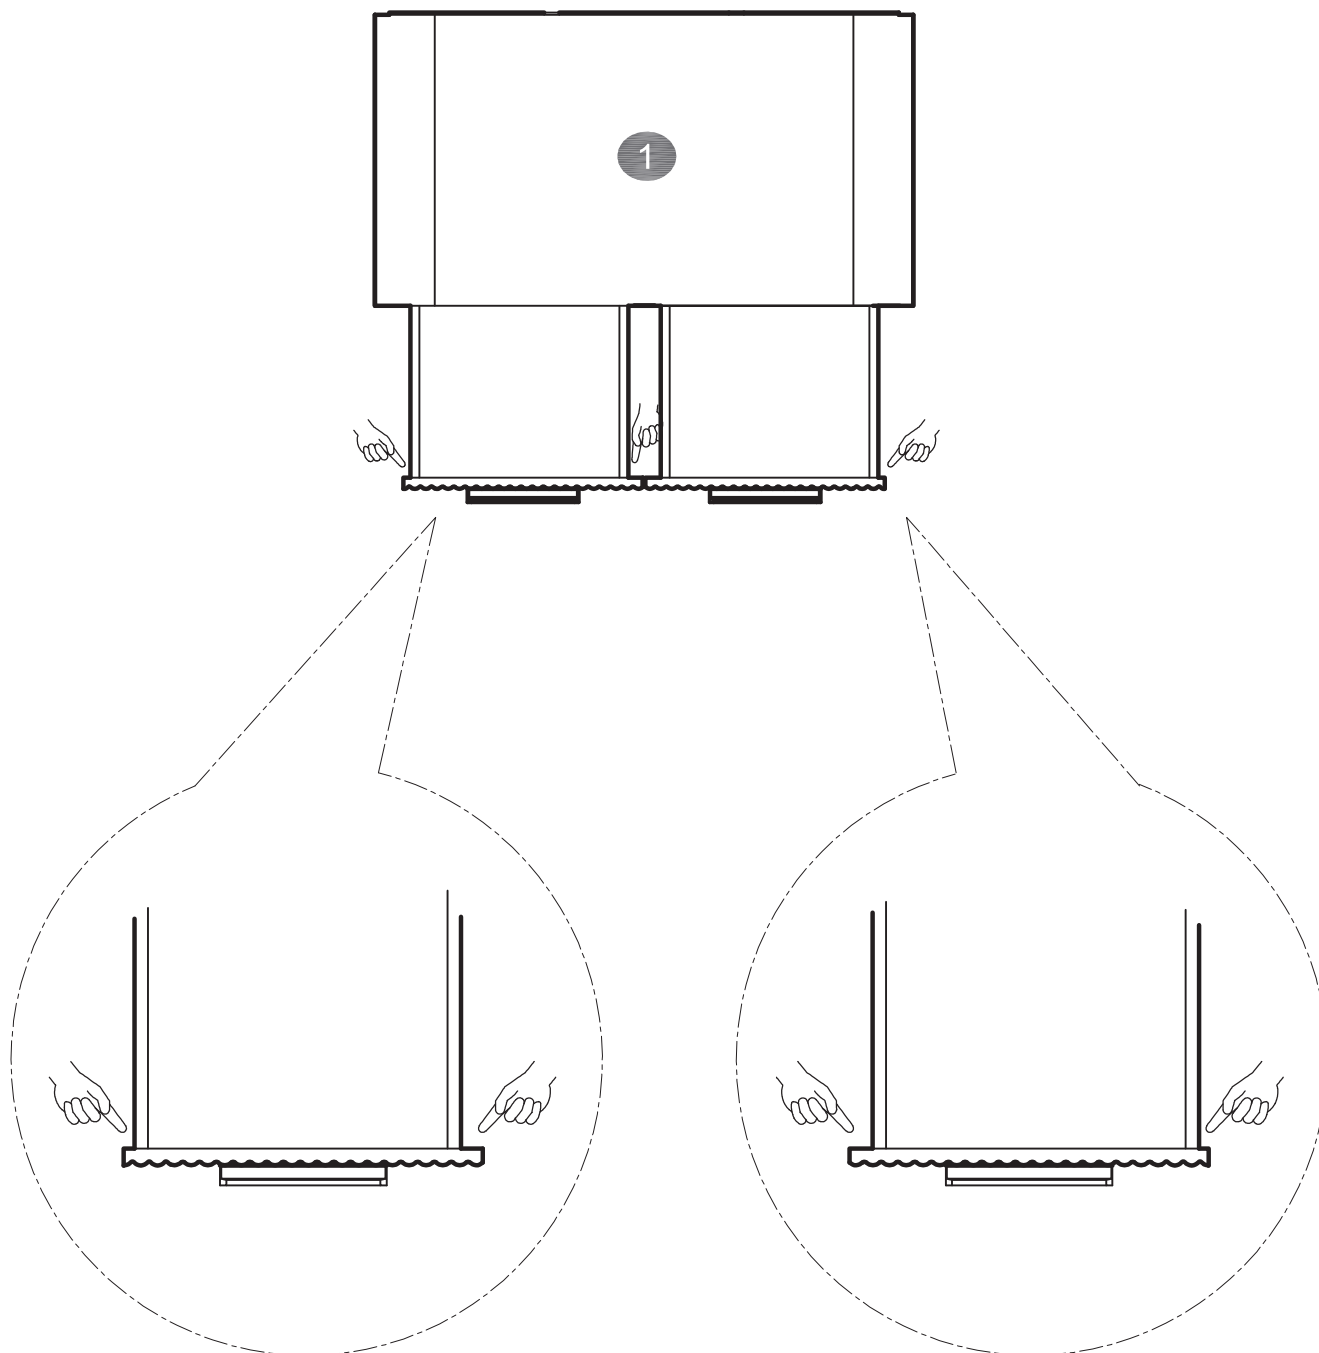

Attention: The different length of each side of the drawer helps to identify if the drawers should be installed on the right side or left side.

## Step 32

Assembled the drawers as per diagram.  
Pay attention to the ORDER of the drawers.

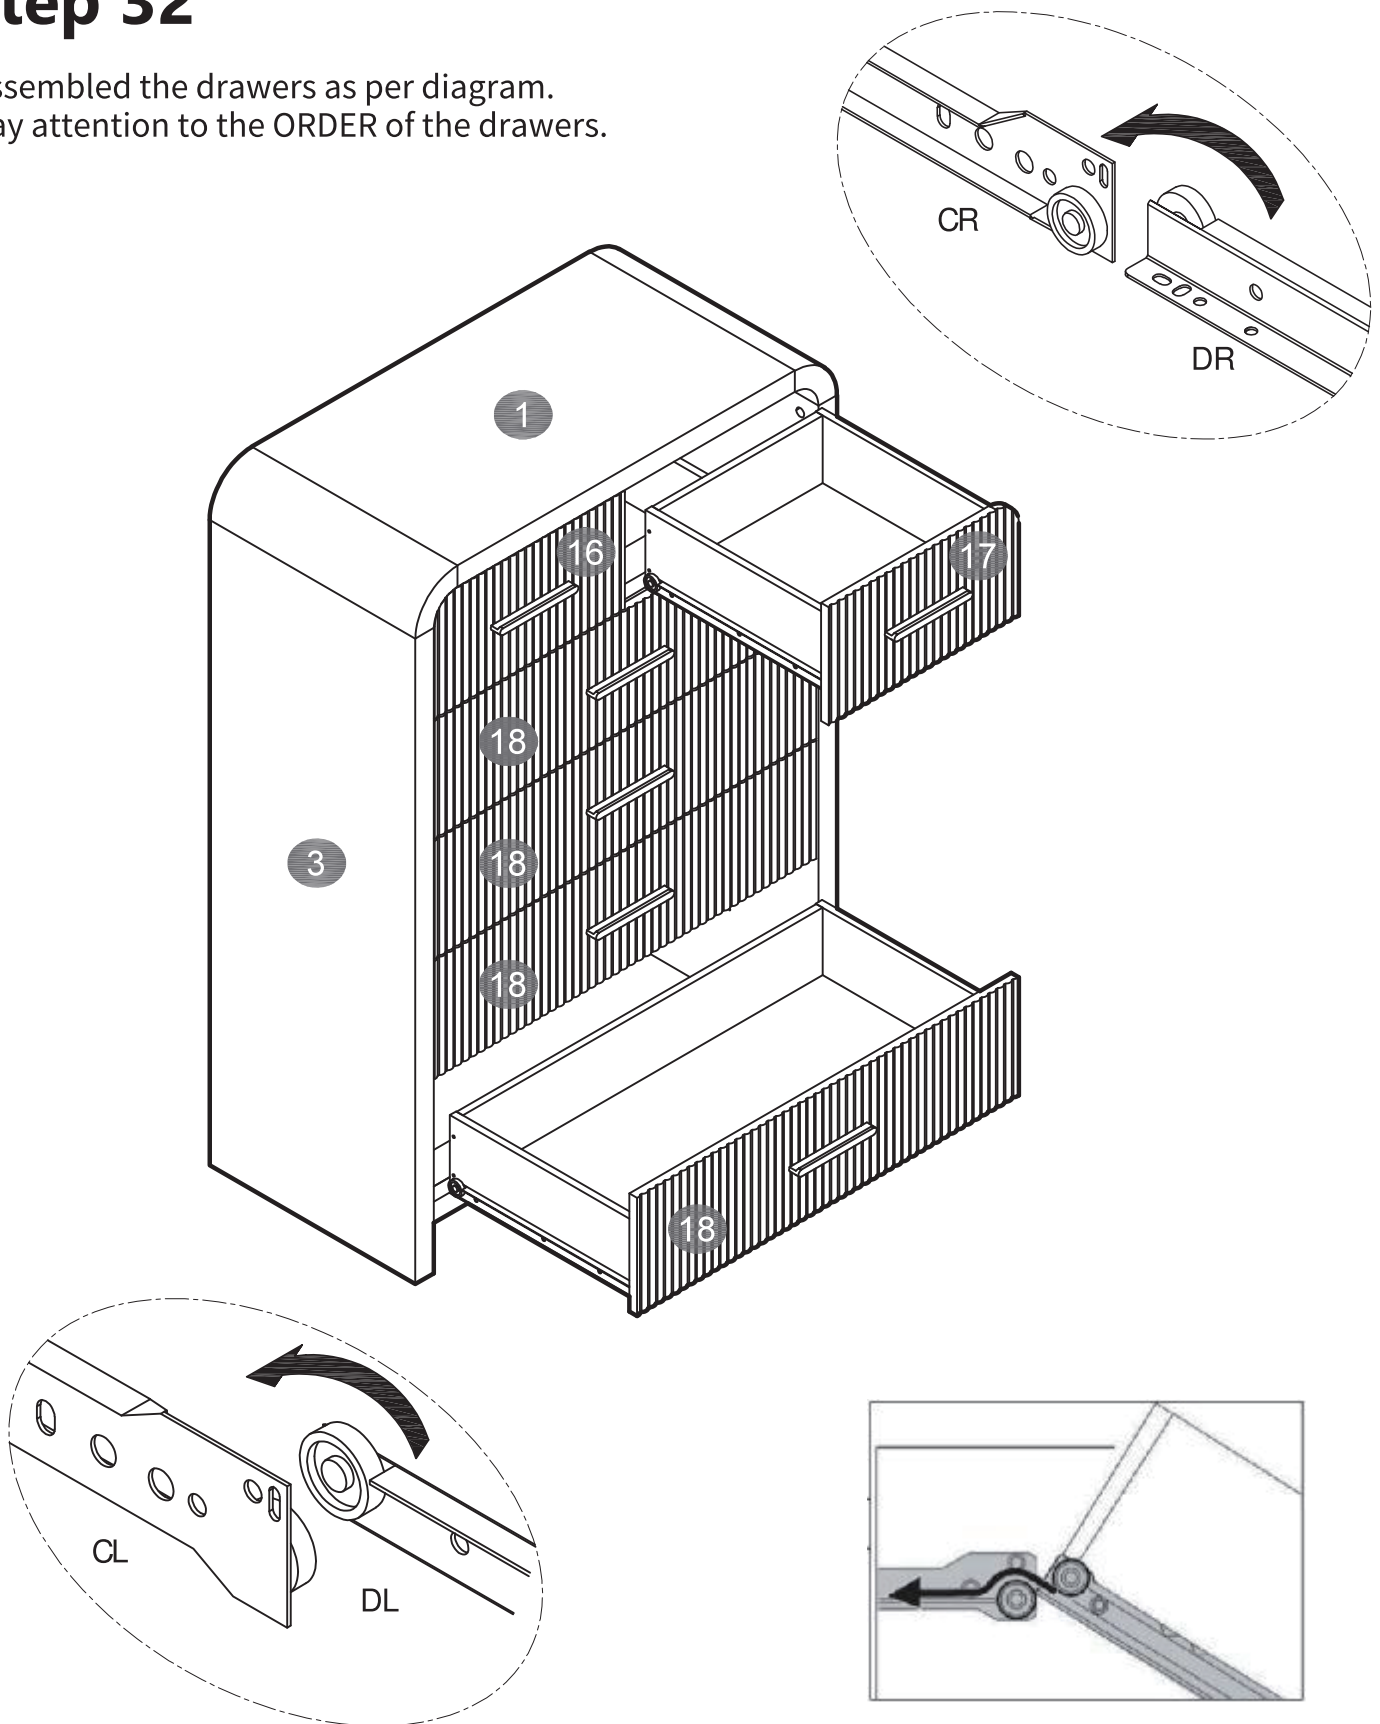

When you put the drawer, please note that the drawer wheels on top of the wheels of the slide, then check whether the drawer is smooth when pulled out. Otherwise, the drawer will not be aligned with other drawers.

**Congratulations, you've completed the installation  
and got a 6 Drawer Dresser!**

